

Seven-Drawer Dresser

SKU
BF1953-1F3A0
BF1953-1F3B0
BF1953-1F3C0

 
V1.0

EN

Seven-Drawer Dresser

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

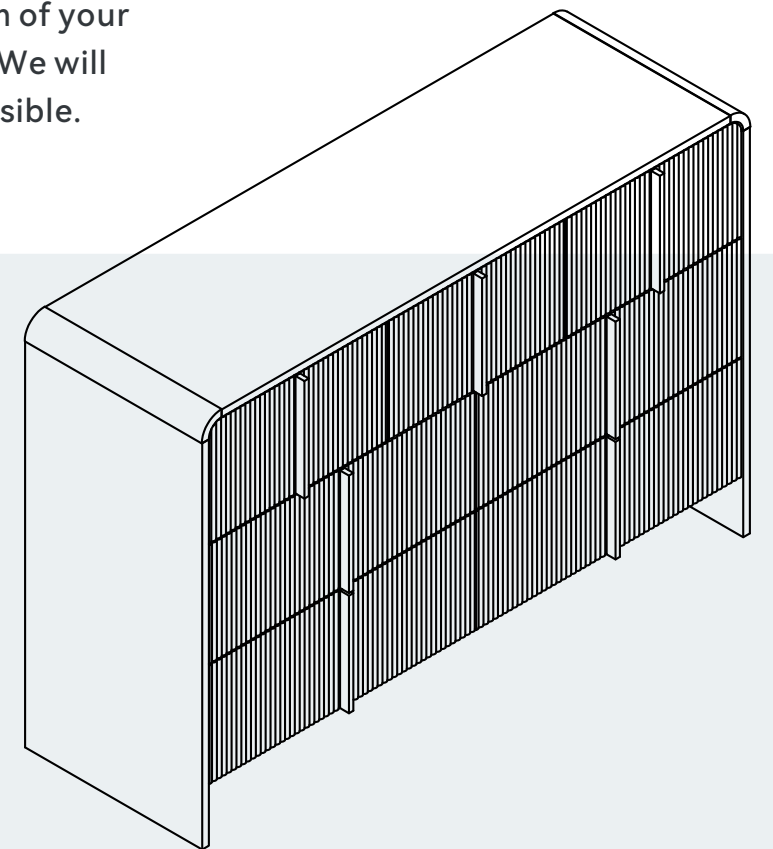

CONTACT US

- **Email:** service@grandtunnel.com
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

Before Assembly



Thank you for choosing our product!

To ensure a smooth installation process, please read this guide carefully to familiarize yourself with the required tools, materials, and installation steps.

Follow the relevant sections to avoid any damage caused by improper installation, and make sure to review all operation and safety guidelines for correct installation procedures.

Packaging Notice:

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

Safety and Care Advice



Important :

Please read these instructions fully before starting assembly.

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and Maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal center.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightened properly.

Warning

In order to help prevent overturning, please follow these instructions.

- Use the anti tip strap or wall fixing method provided (if applicable).
- Do not allow children to climb or hang on the furniture.
- Do not open more than one drawer at a time.
- Do not place heavy items in the top drawers.
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose.
- Please note that only the anti tip strap is provided. You will need to provide wall plugs and screws applicable for your wall type.

Customer Service Guide



Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6×30mm screws.”

Contact Us:

By Email:

Send an email to **service@grandtunnel.com**, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with order details to **service@grandtunnel.com**, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: **service@grandtunnel.com**).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

Customer Service Email: **service@grandtunnel.com**

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
 
 
 
 
 
 
 
 
 
 
 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.
















Thank you for your trust and support!
We hope you enjoy using our product!







Parts List - Panels



Please check you have all the panels listed below.

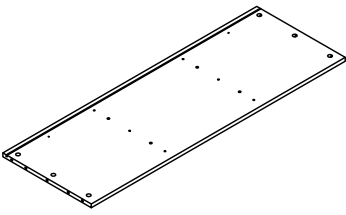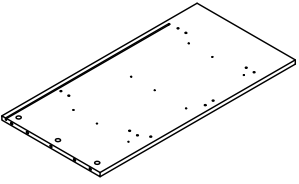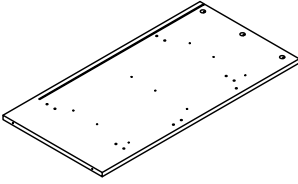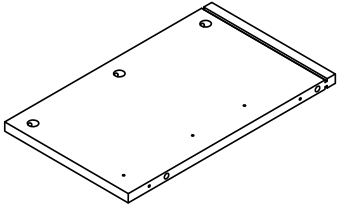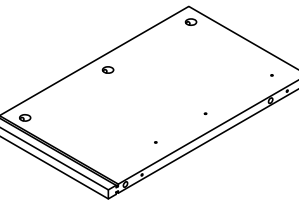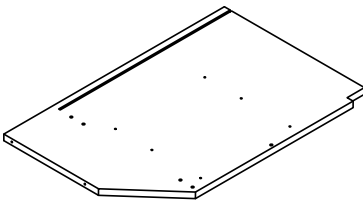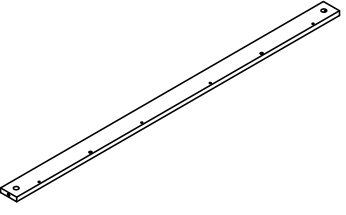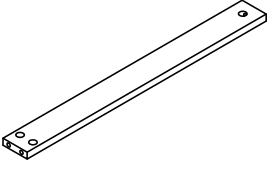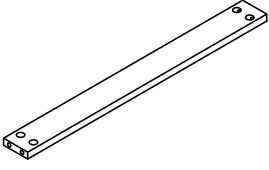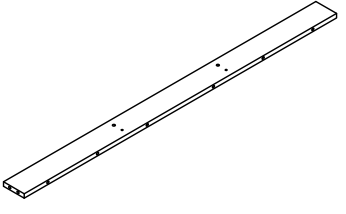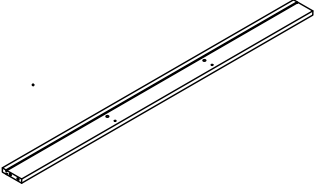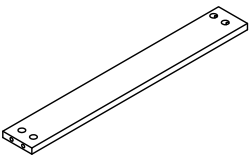		
1 1510x400x15mm x1	2 795x400x15mm x1	3 795x400x15mm x1
		
4 229x384x15mm x1	5 229x384x15mm x1	6 580x384x15mm x1
		
7 1568x60x15mm x1	8 776.5x60x15mm x1	9 776.5x60x15mm x1
		
10 1568x80x15mm x1	11 1568x80x15mm x1	12 776.5x80x15mm x1

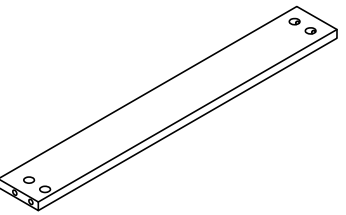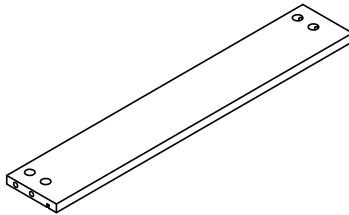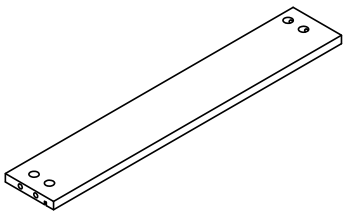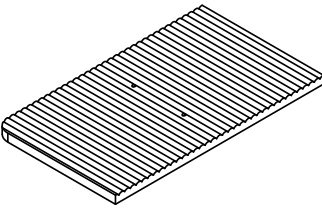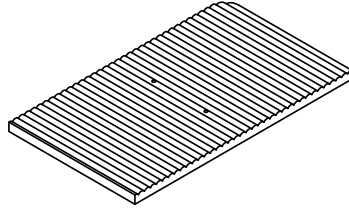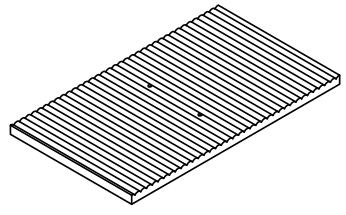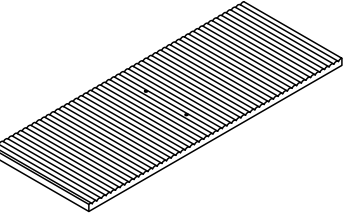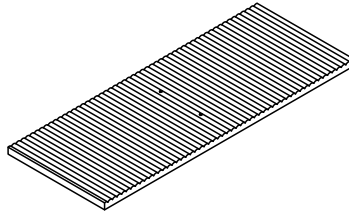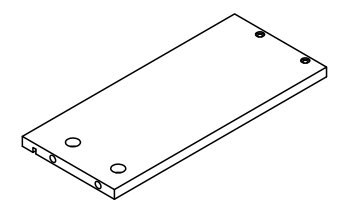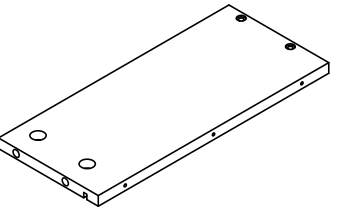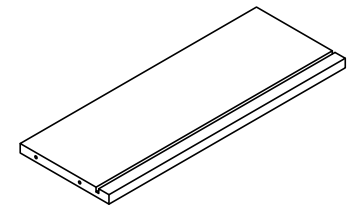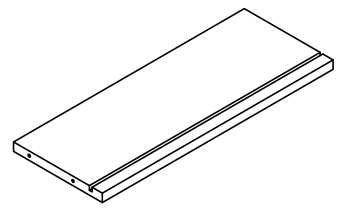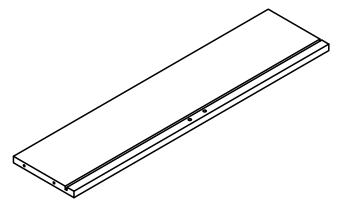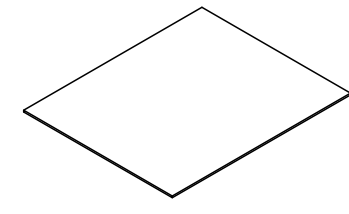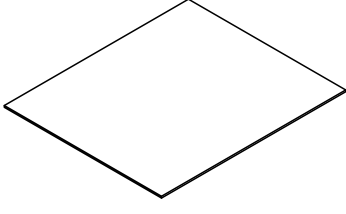               		
13 776.5x80x15mm x1	14 776.5x100x15mm x1	15 776.5x100x15mm x1
		
16 519x231x15mm x1	17 519x231x15mm x1	18 519x231x15mm x1
		
19 779.5x231x15mm x2	20 779.5x231x15mm x2	21 300x130x12mm x7
		
22 300x130x12mm x7	23 467x130x12mm x2	24 457x130x12mm x1
		
25 727.5x130x12mm x4	26 477x297x3mm x2	27 467x297x3mm x1




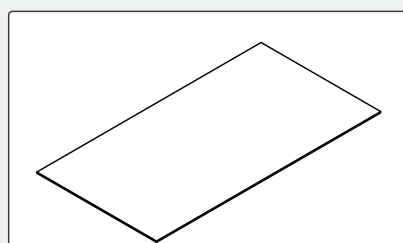 
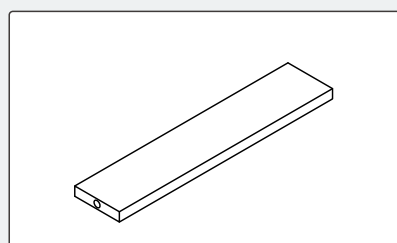 
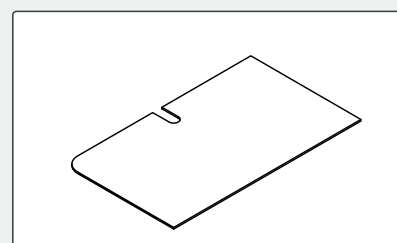 
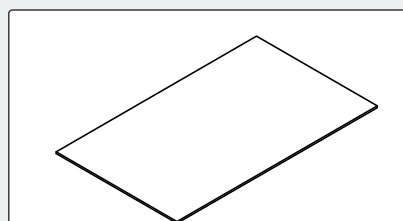 
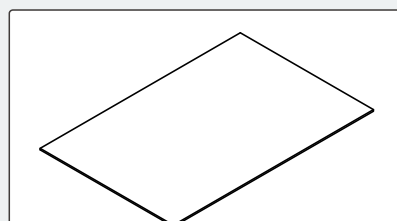 
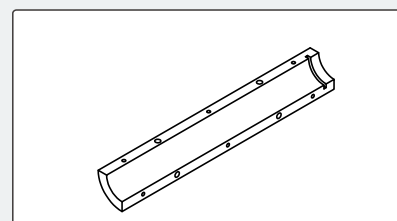 

28 737.5x297x3mm **x4**

29 287x60x12mm **x4**

30 237x524x3mm **x2**

31 237x512x3mm **x1**

         32 453x391.5x3mm **x4**

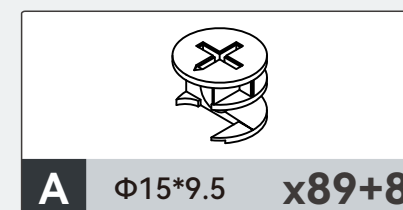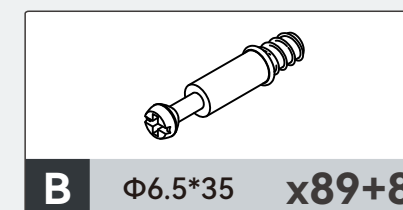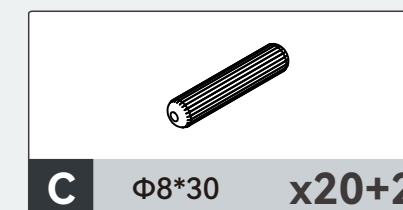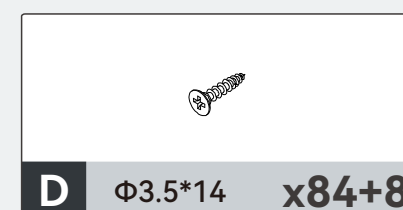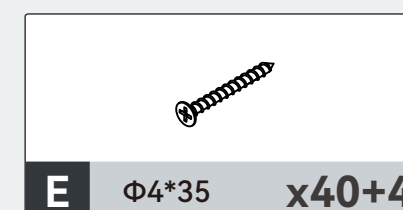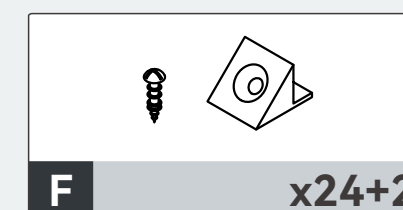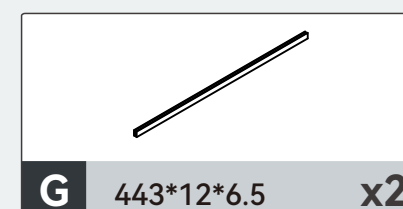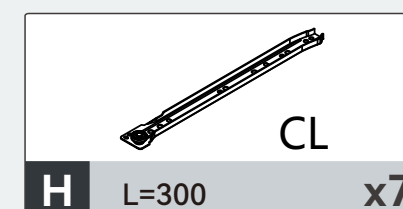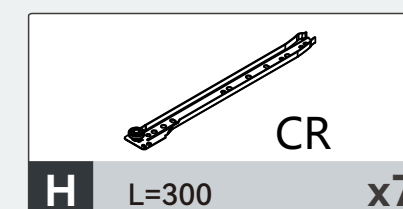33 400x64x27mm **x2**

Parts List - Fittings

 
 



Please check you have all the fittings listed below.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.


A Φ15*9.5 **x89+8**

B Φ6.5*35 **x89+8**

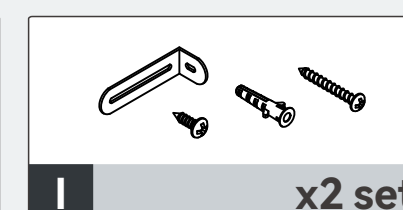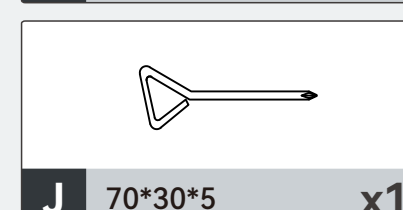C Φ8*30 **x20+2**

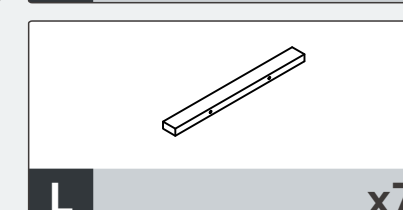 D Φ3.5*14 **x84+8**

E Φ4*35 **x40+4**

F **x24+2**

G 443*12*6.5 **x2**

H L=300 **x7**

H L=300 **x7**

 
 
 
H L=300 **x7**

H L=300 **x7**

I **x2 set**

J 70*30*5 **x1**


K Φ4*25 **x14+2**

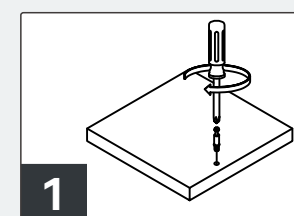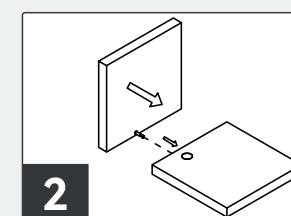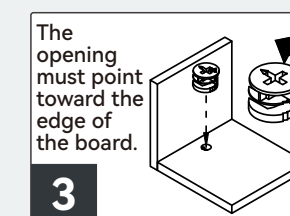L **x7**

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

 
1

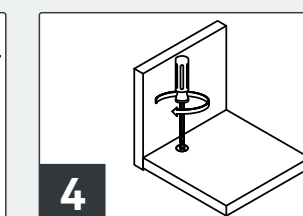2

3

 
The opening must point toward the edge of the board.

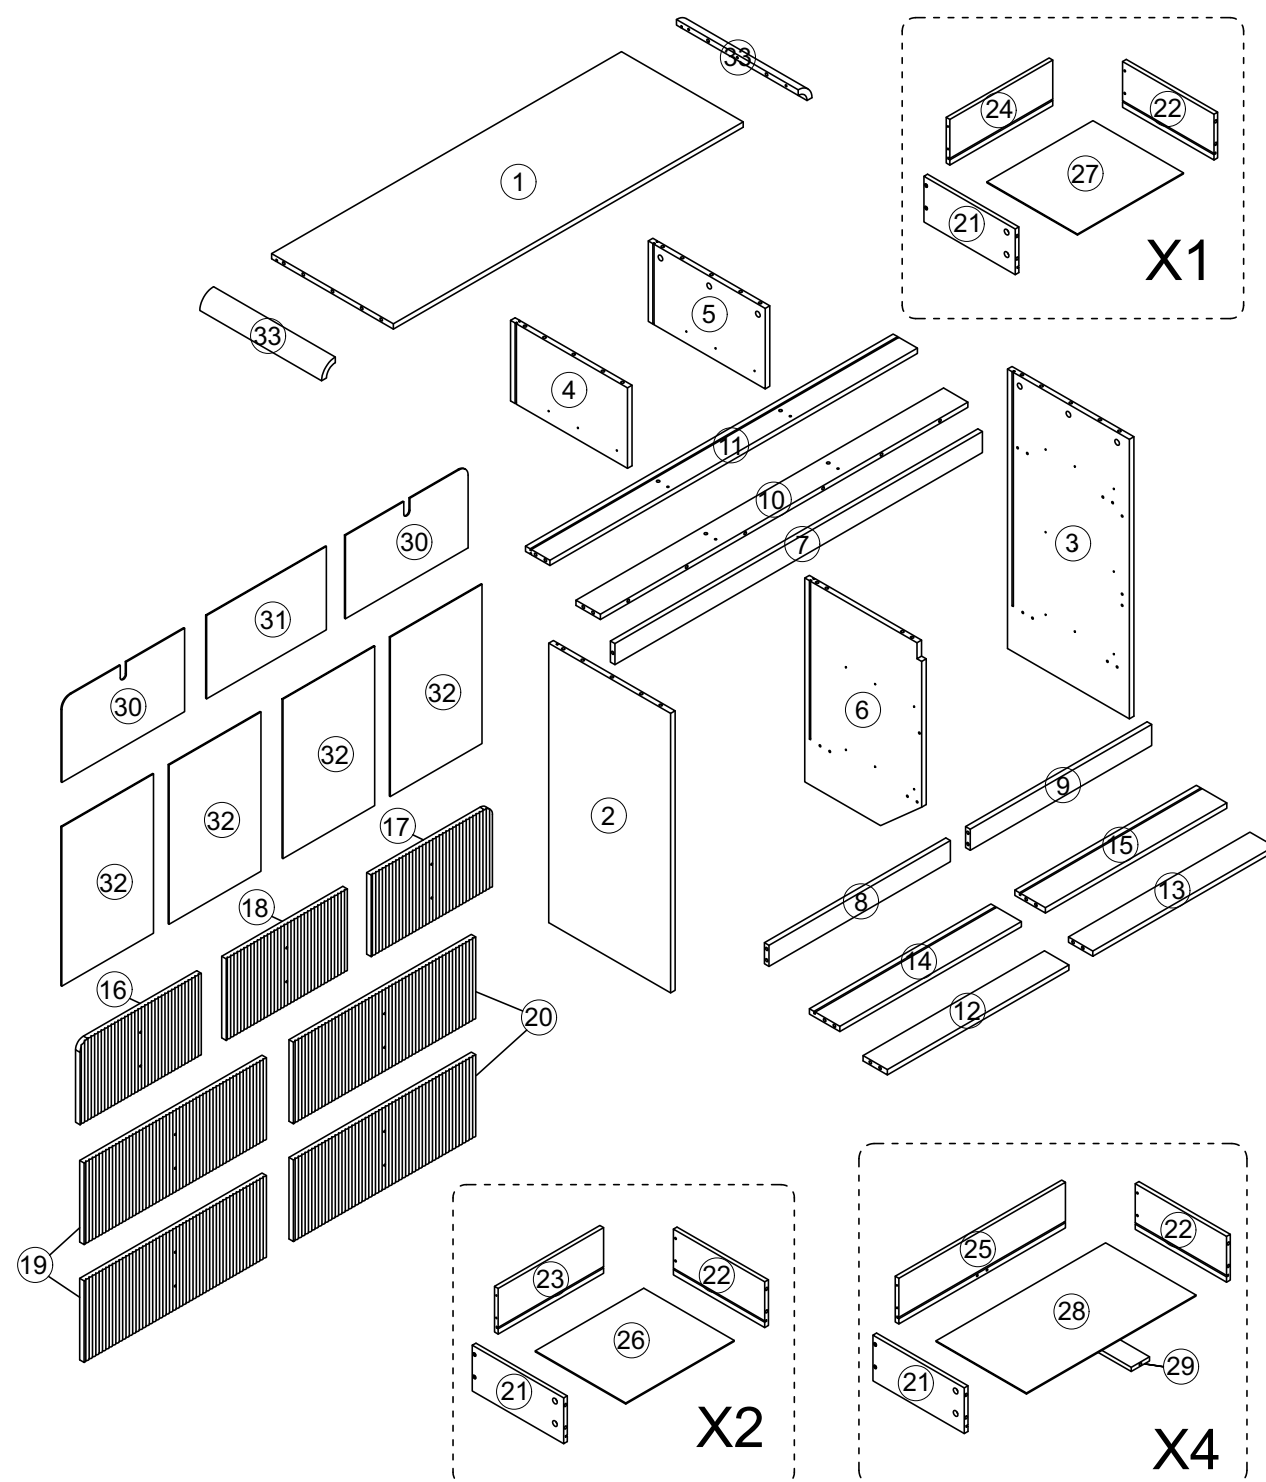
4


Assembly Instructions



 
Step 1

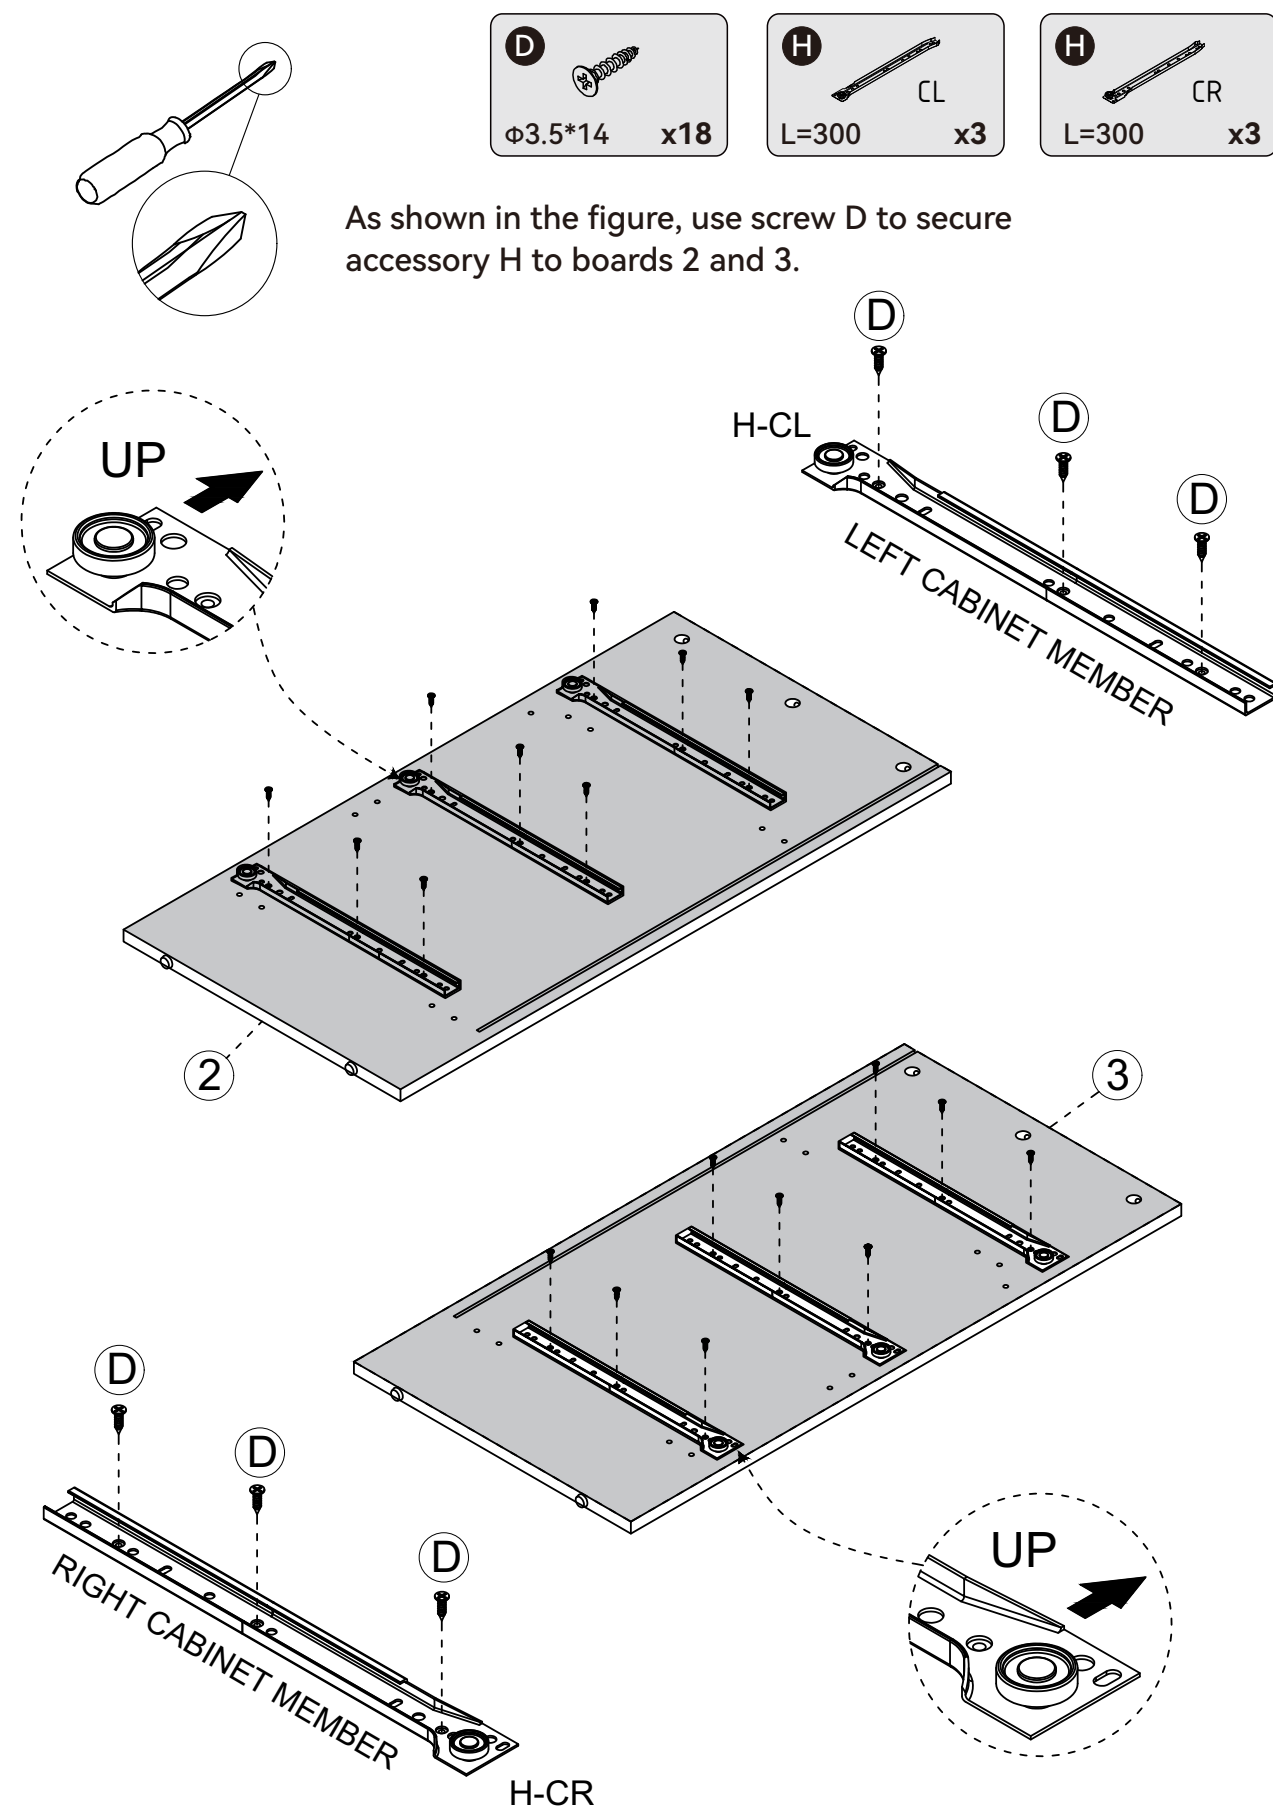

 
Step 2

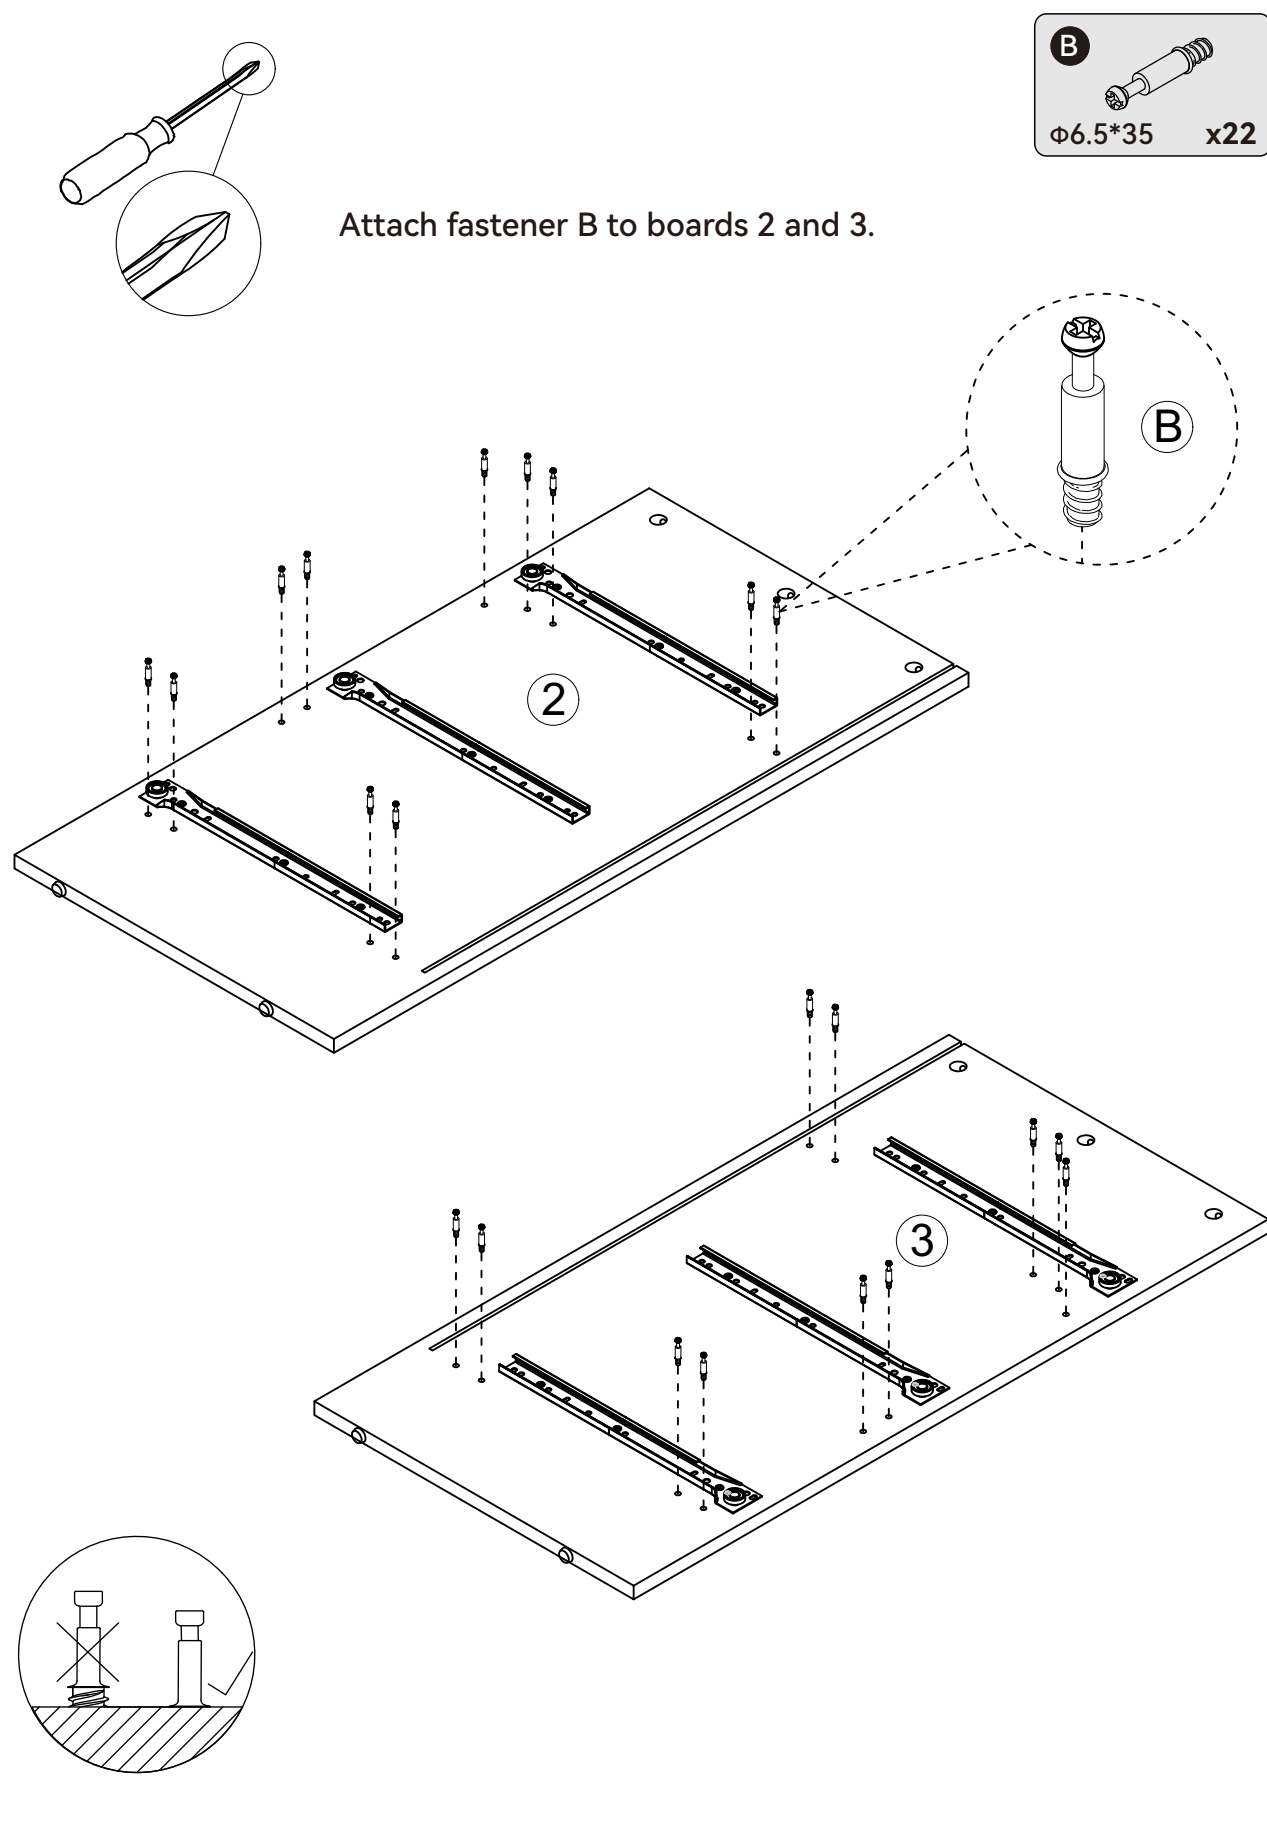

 
Step 3

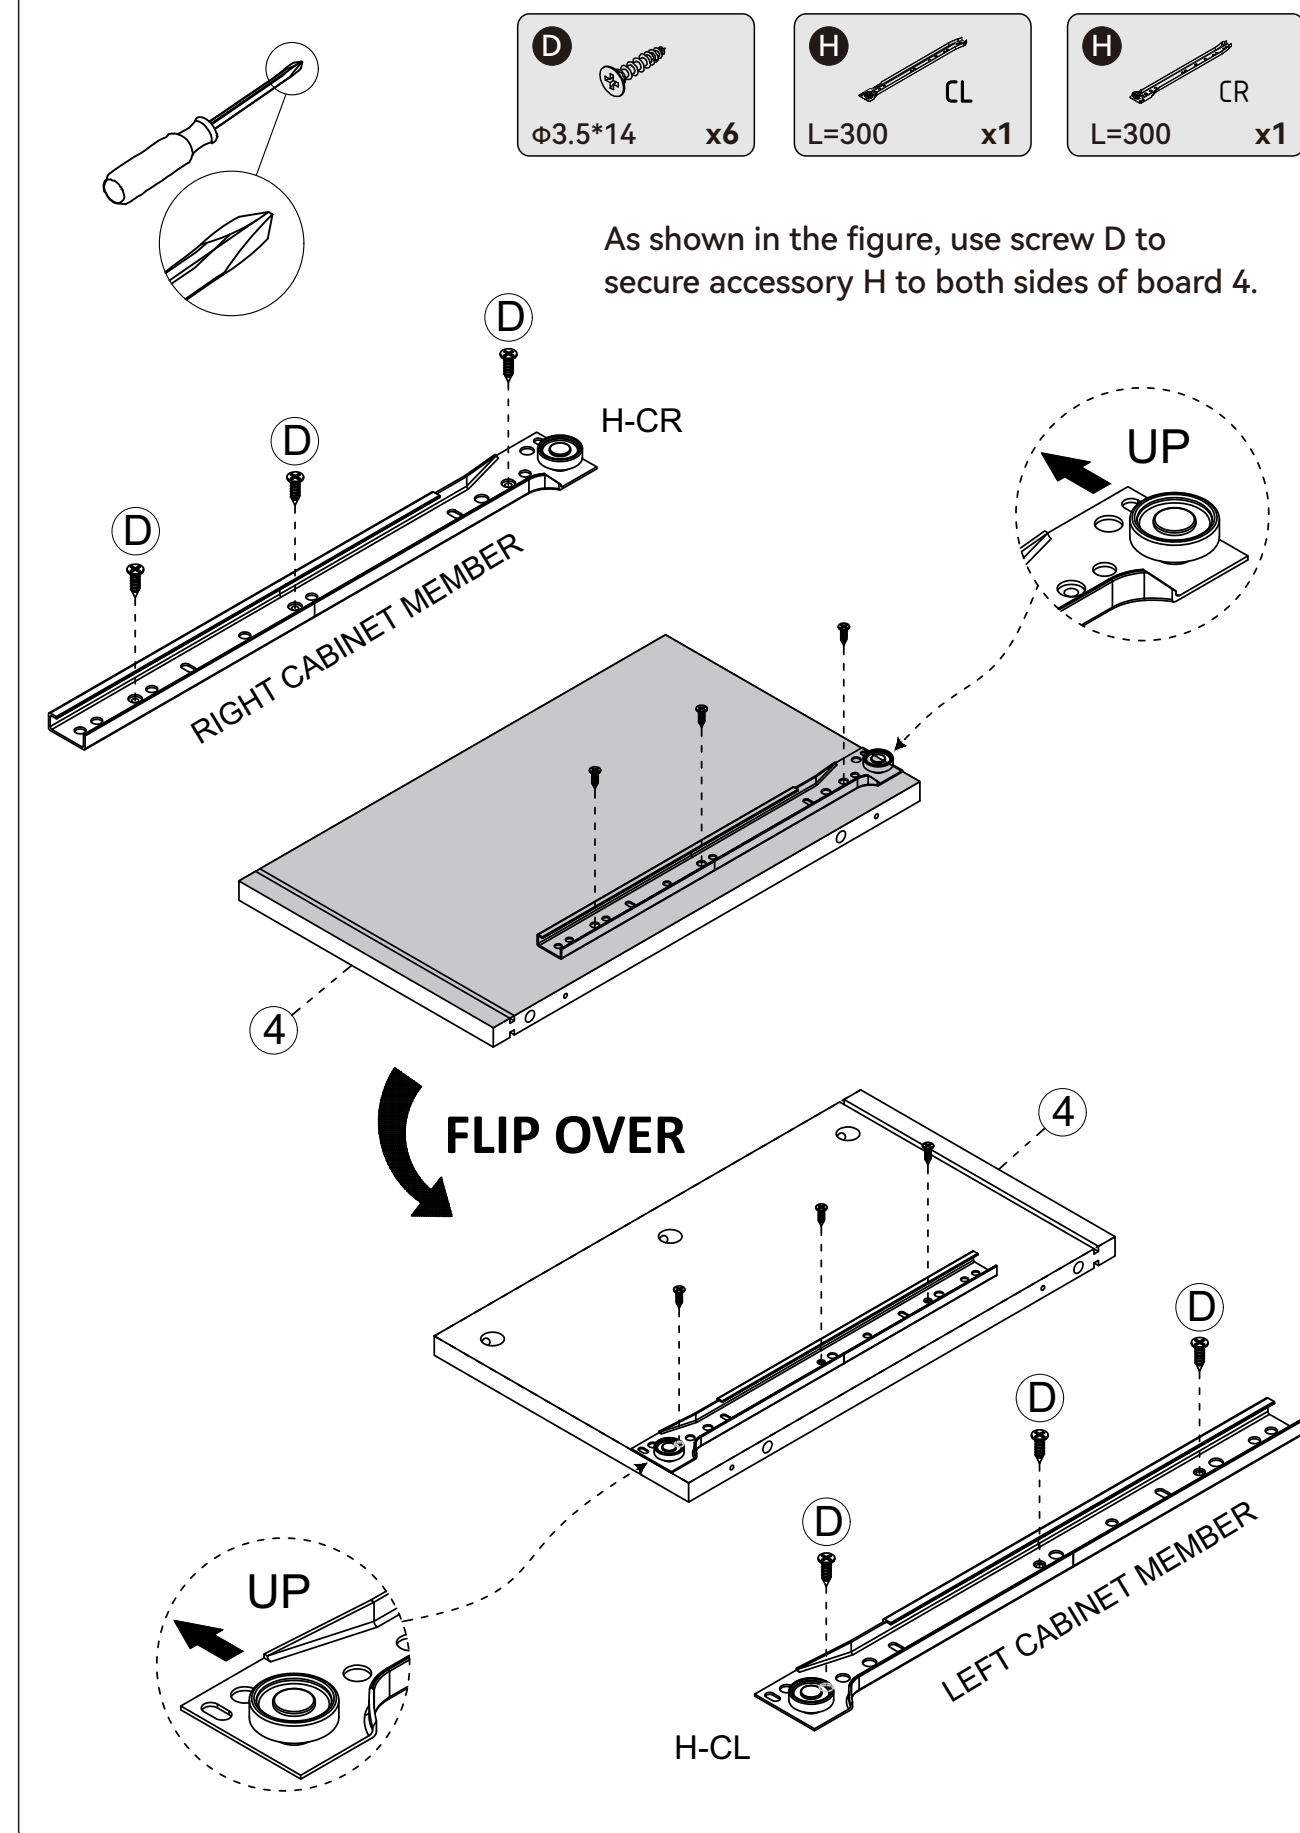


 
Step 4

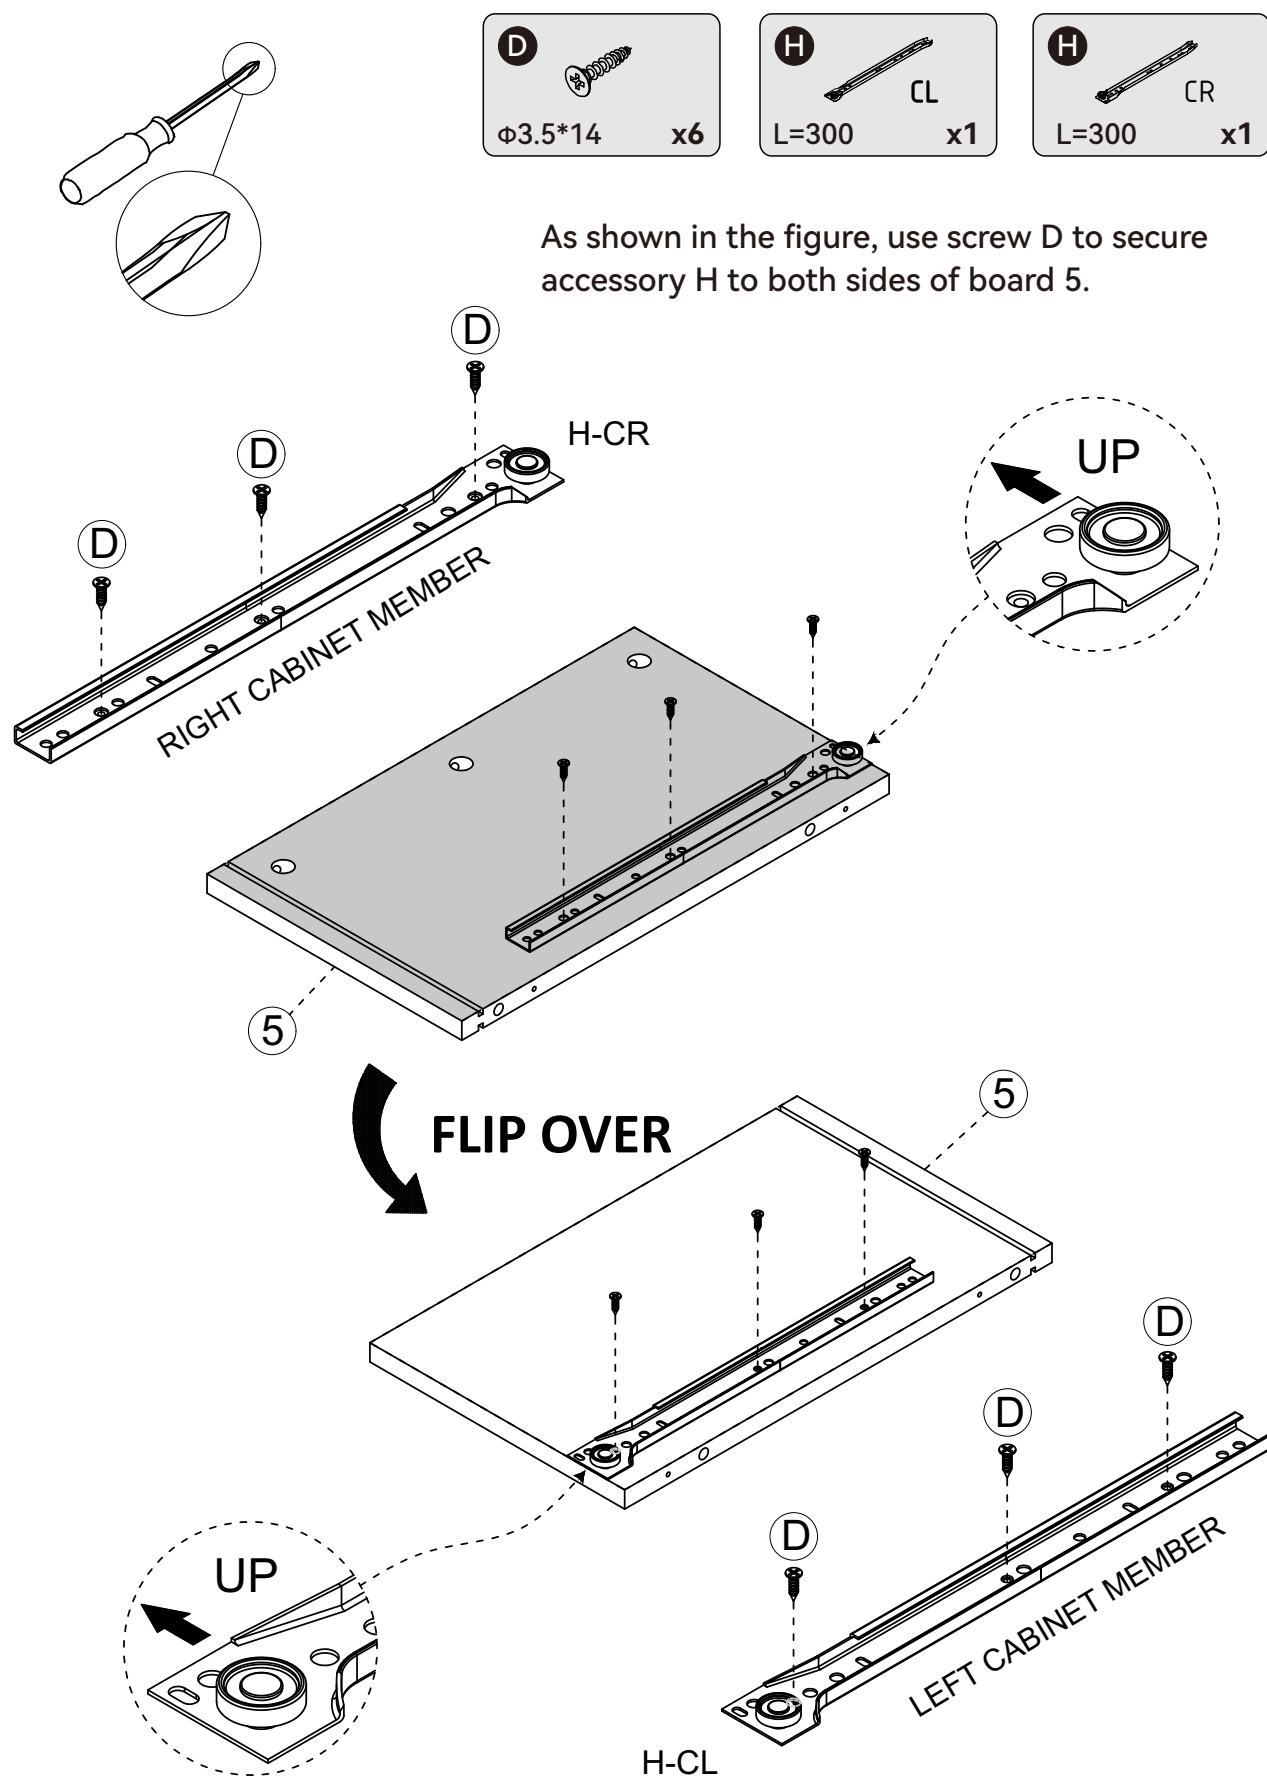

 
Step 5

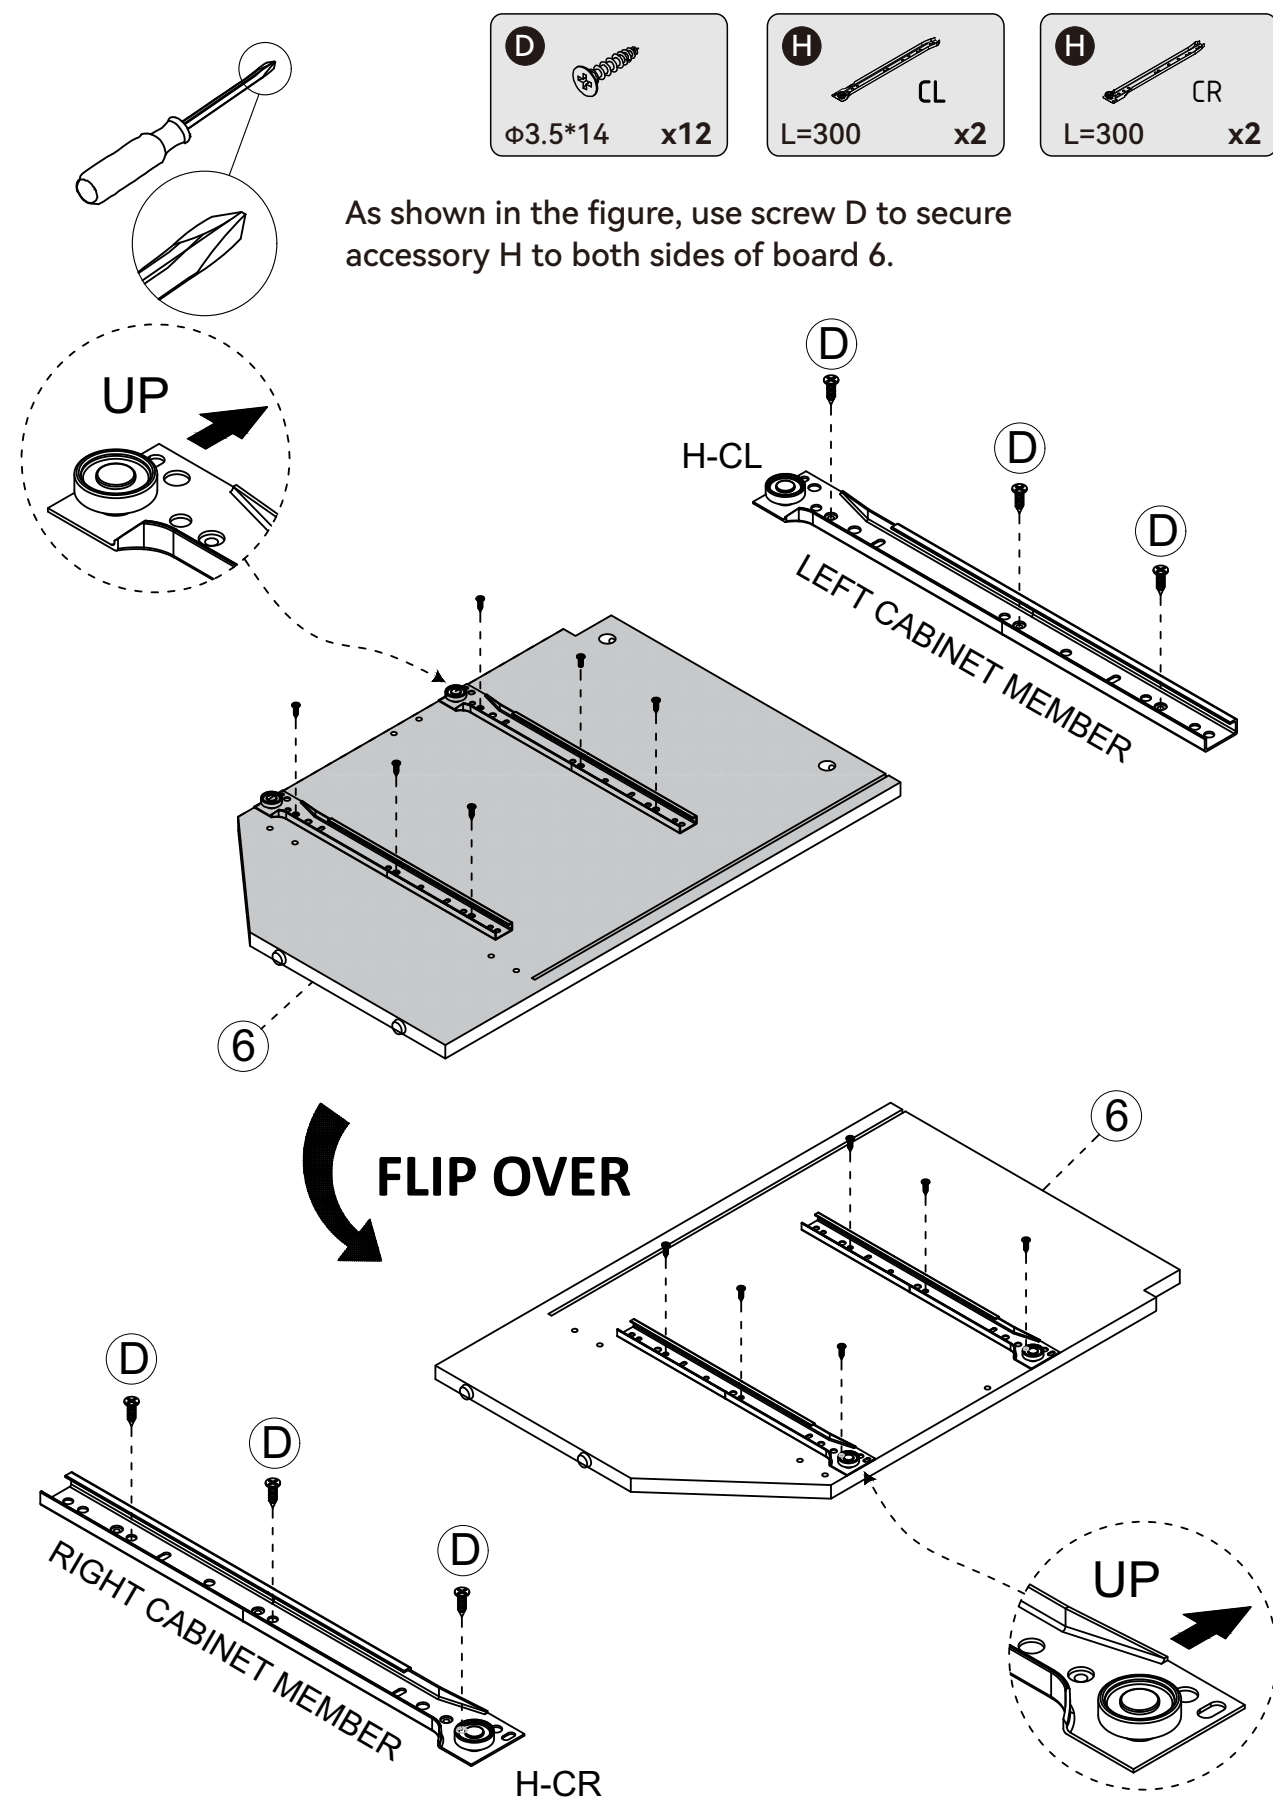


 
 
Step 6

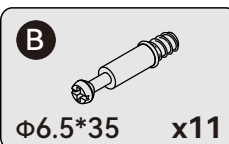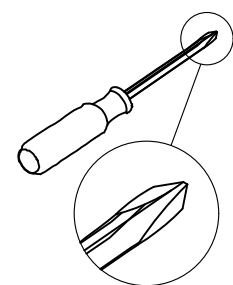


 
Attach fastener B to both sides of board 6.

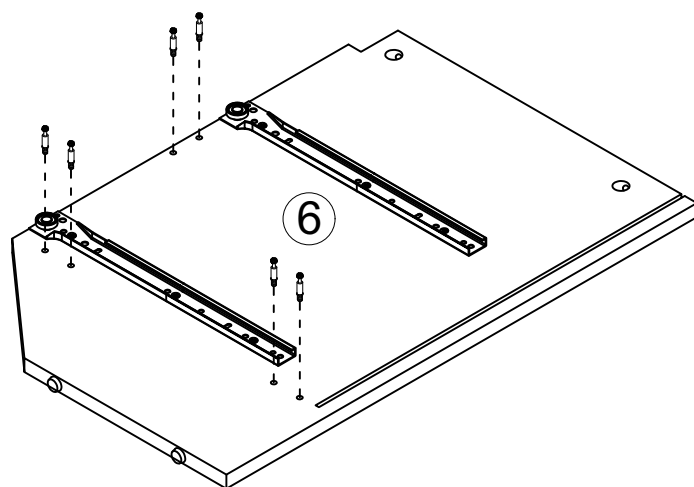



FLIP OVER

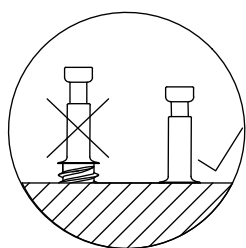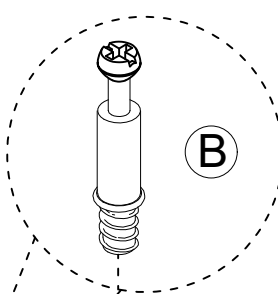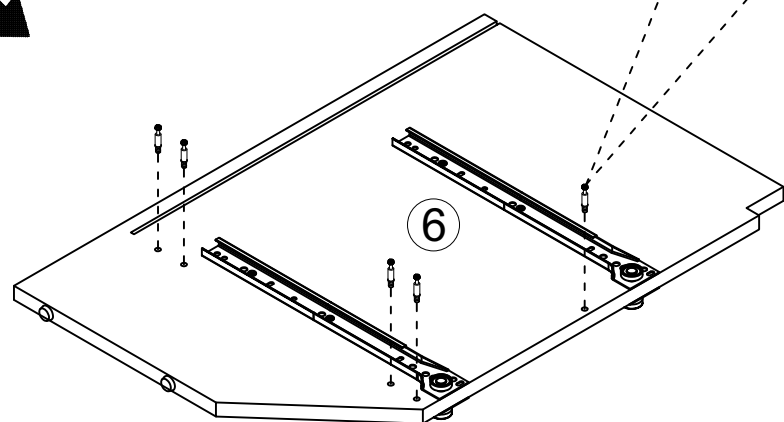   


 
 
Step 7

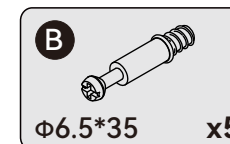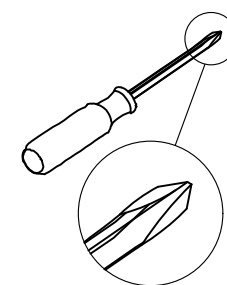


Attach fastener B to boards 7 and 10.

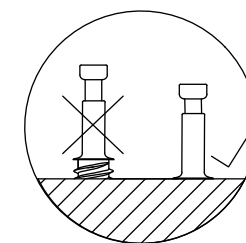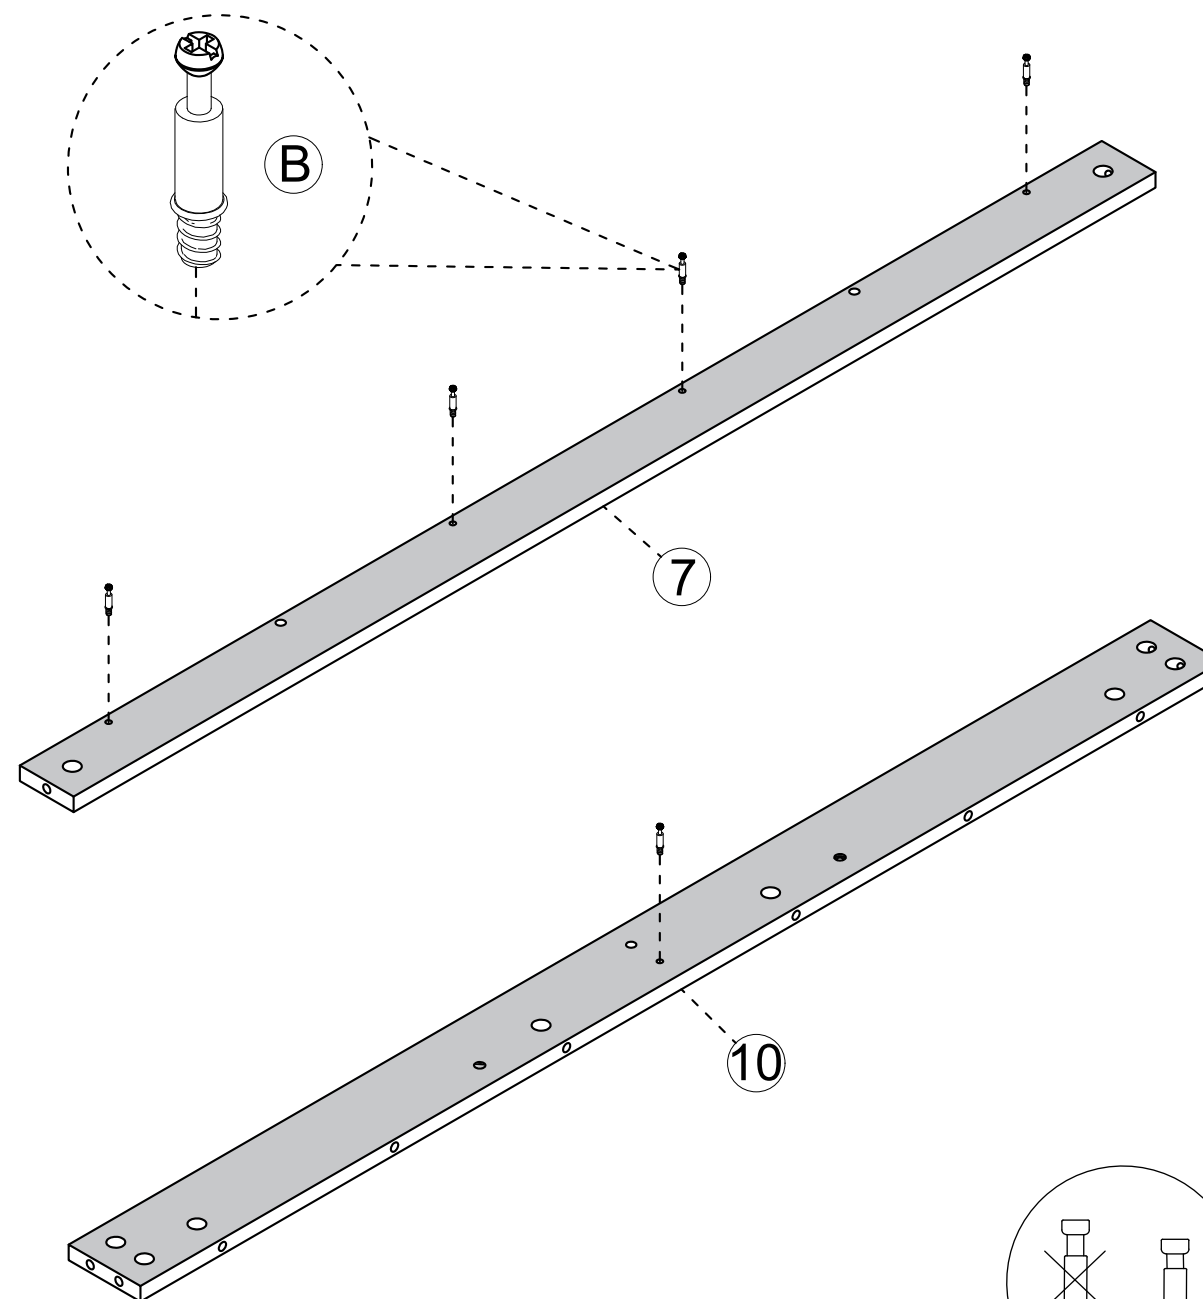  

   
Step 8

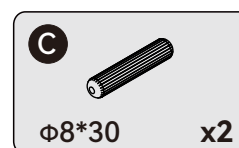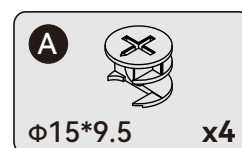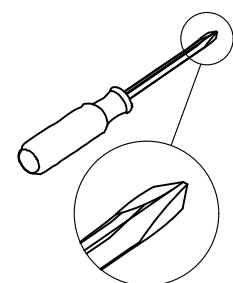

 Use accessory C to align boards 7 and 10 with the corresponding holes, then, as shown in the figure, rotate accessory A clockwise to secure it to board 10.



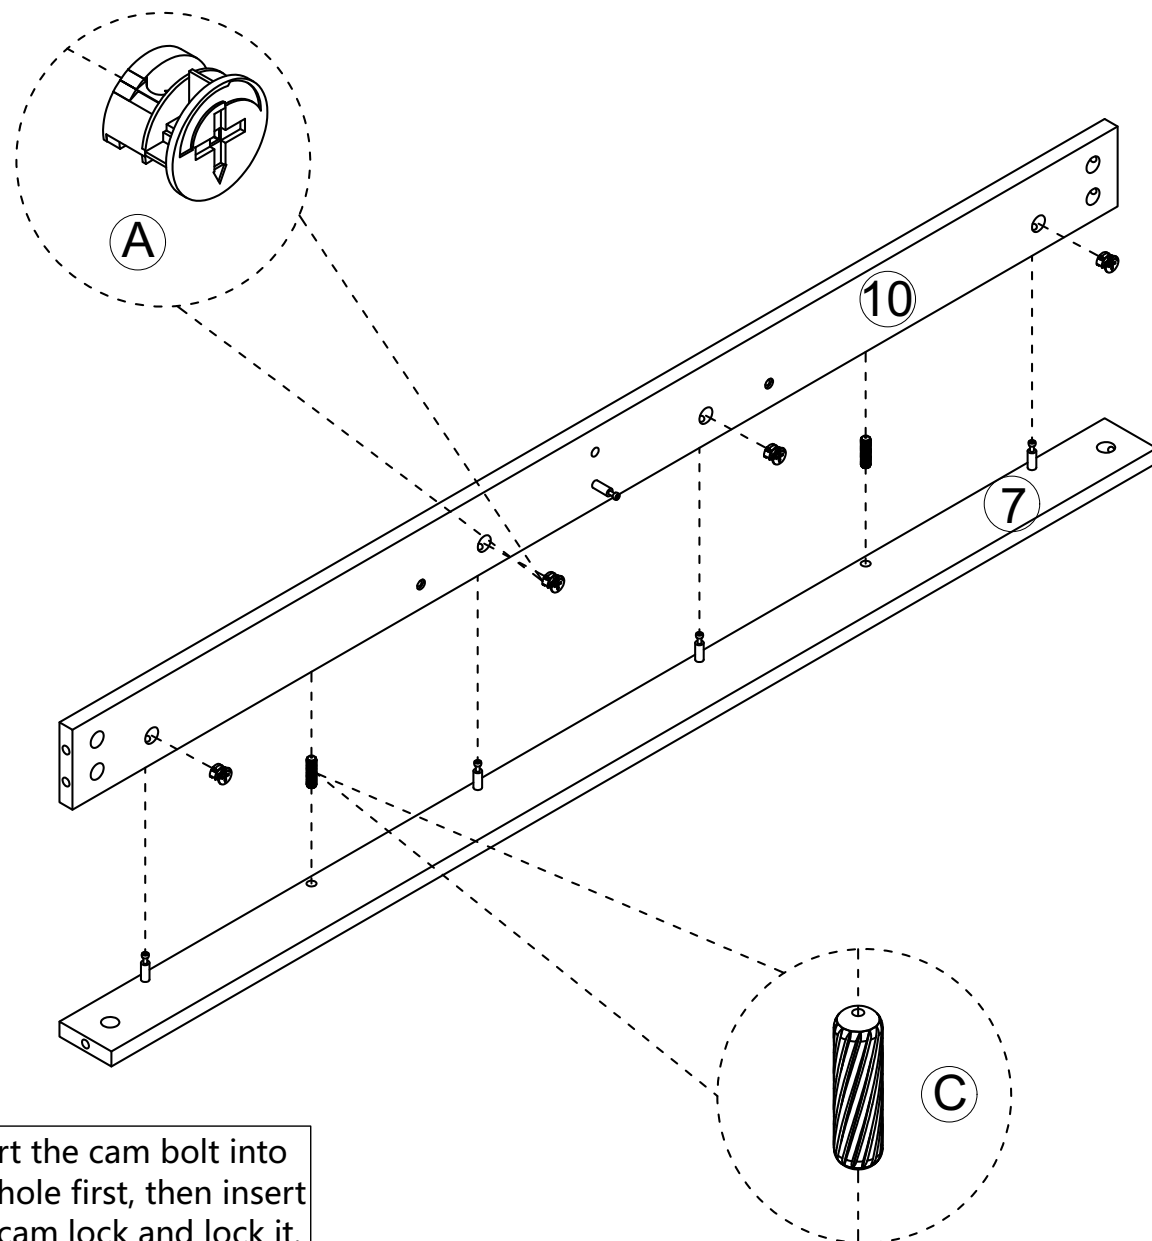


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

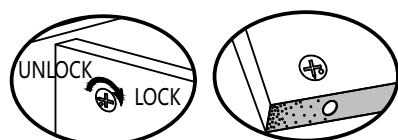


Proper orientation of CAM LOCK

   
Step 9

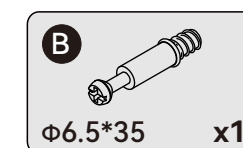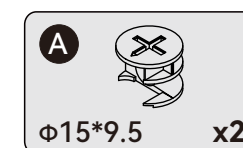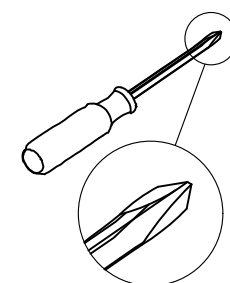

 First, attach fastener B to board 11. Then use accessory C to align board 6 with the corresponding holes on boards 10 and 11, and, as shown in the figure, rotate accessory A clockwise to secure it to board 6.

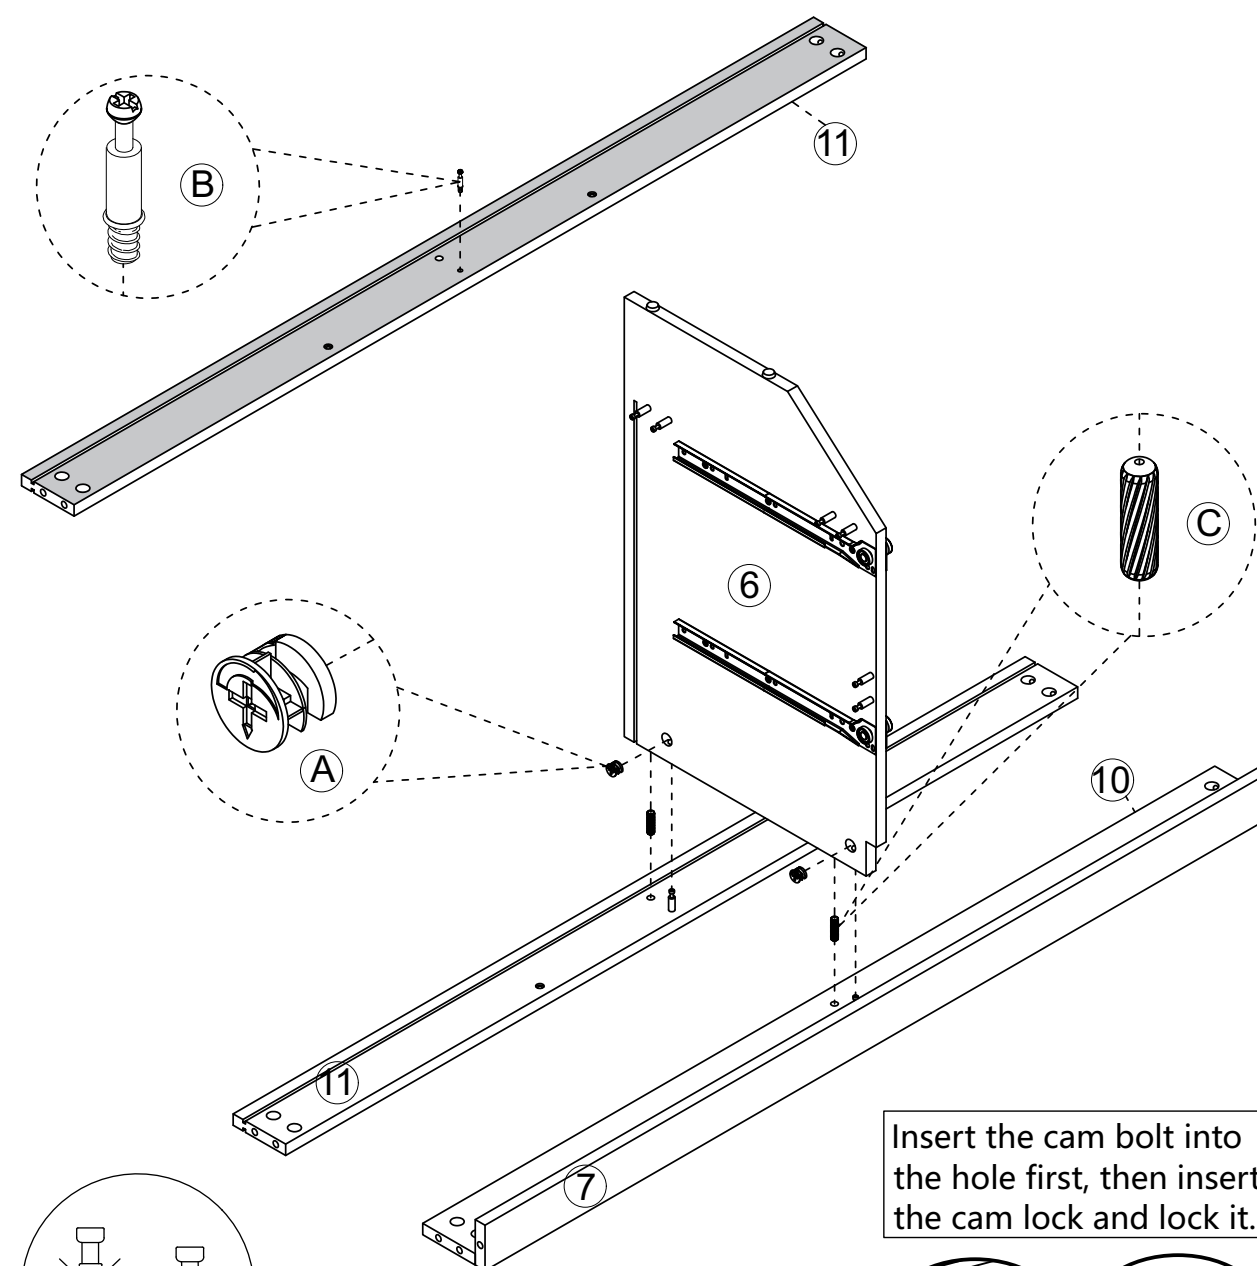


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

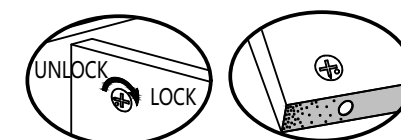


Proper orientation of CAM LOCK


 
Step 10

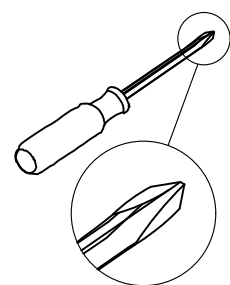

 As shown in the figure, first insert the corresponding holes of boards 8, 12, and 14 into board 6, then rotate accessory A clockwise to secure it to boards 8, 12, and 14.

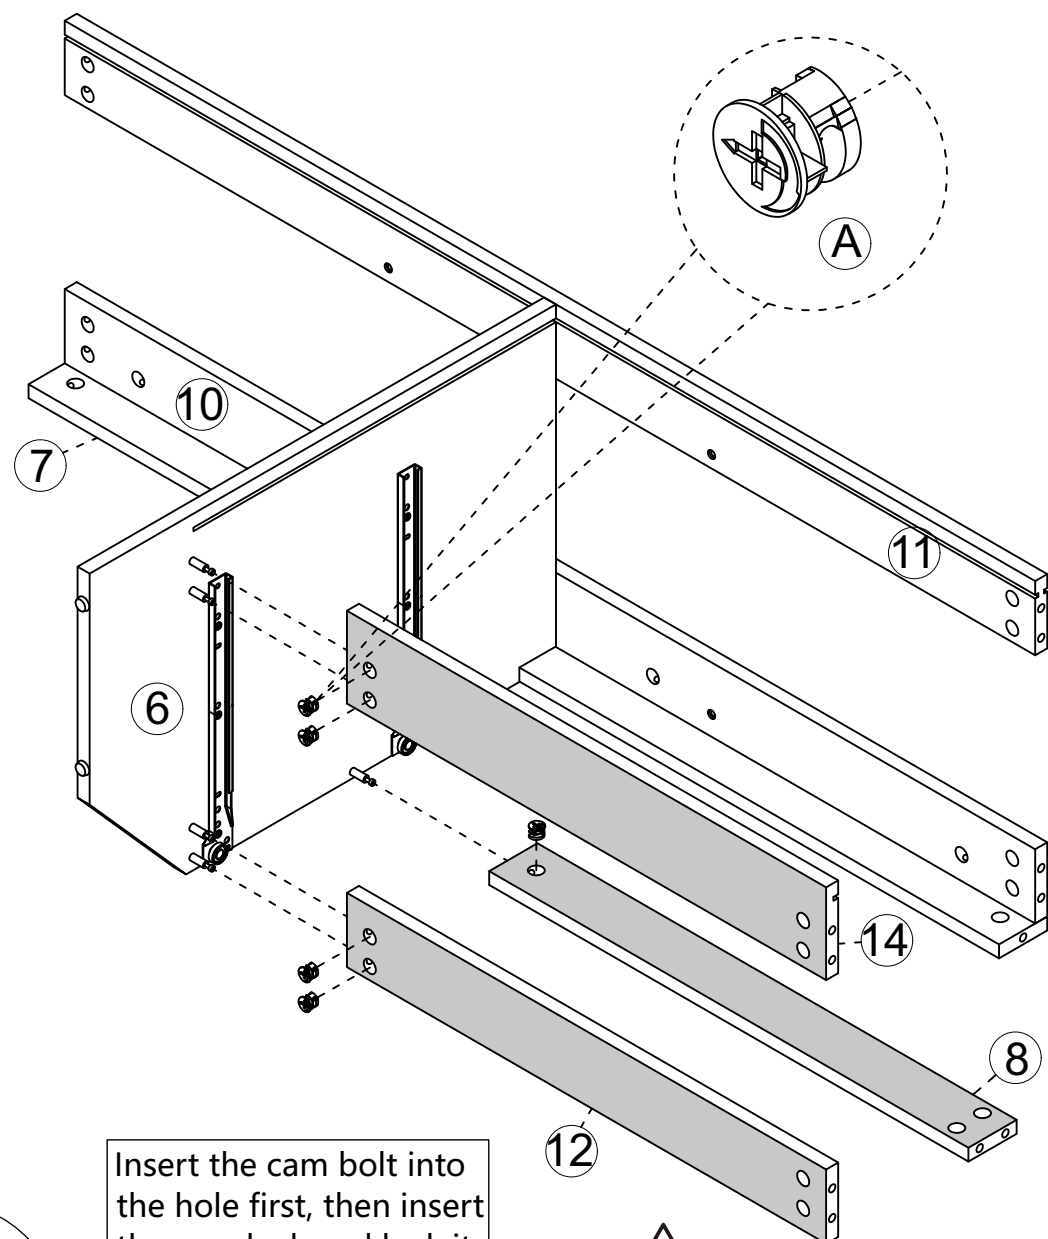

  Insert the cam bolt into the hole first, then insert the cam lock and lock it.

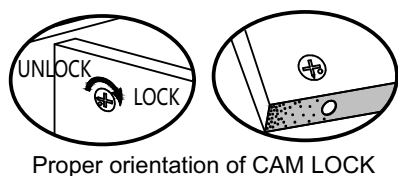
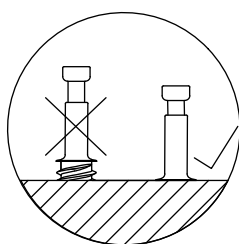


Proper orientation of CAM LOCK




12 Number plate left front end distance from the center of the circle of part A is 15mm.

  Step 11

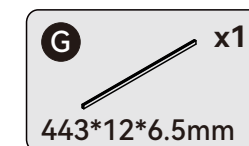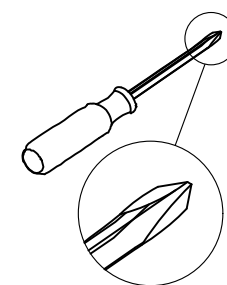


 Connect board 32 to accessory G, and insert it into the grooves of boards 11 and 14.


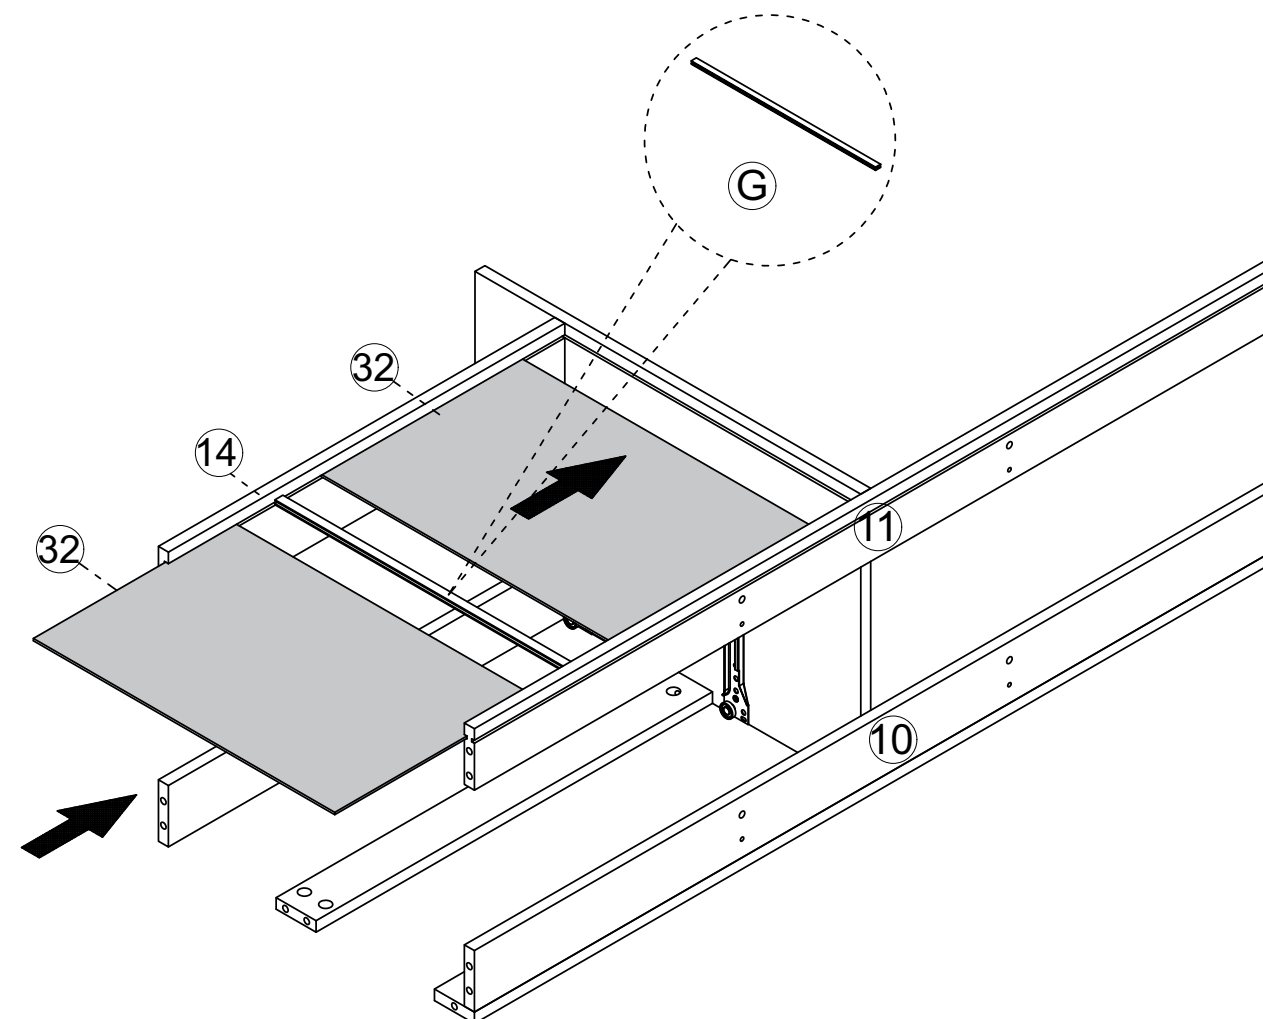


Need someone to assist with the installation.

 
Step 12

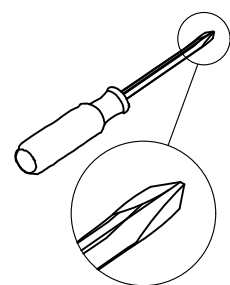

  Align board 2 with the corresponding holes on boards 7, 8, 10, 11, 12, and 14, then, as shown in the figure, rotate accessory A clockwise to secure it to boards 7, 8, 10, 11, 12, and 14.

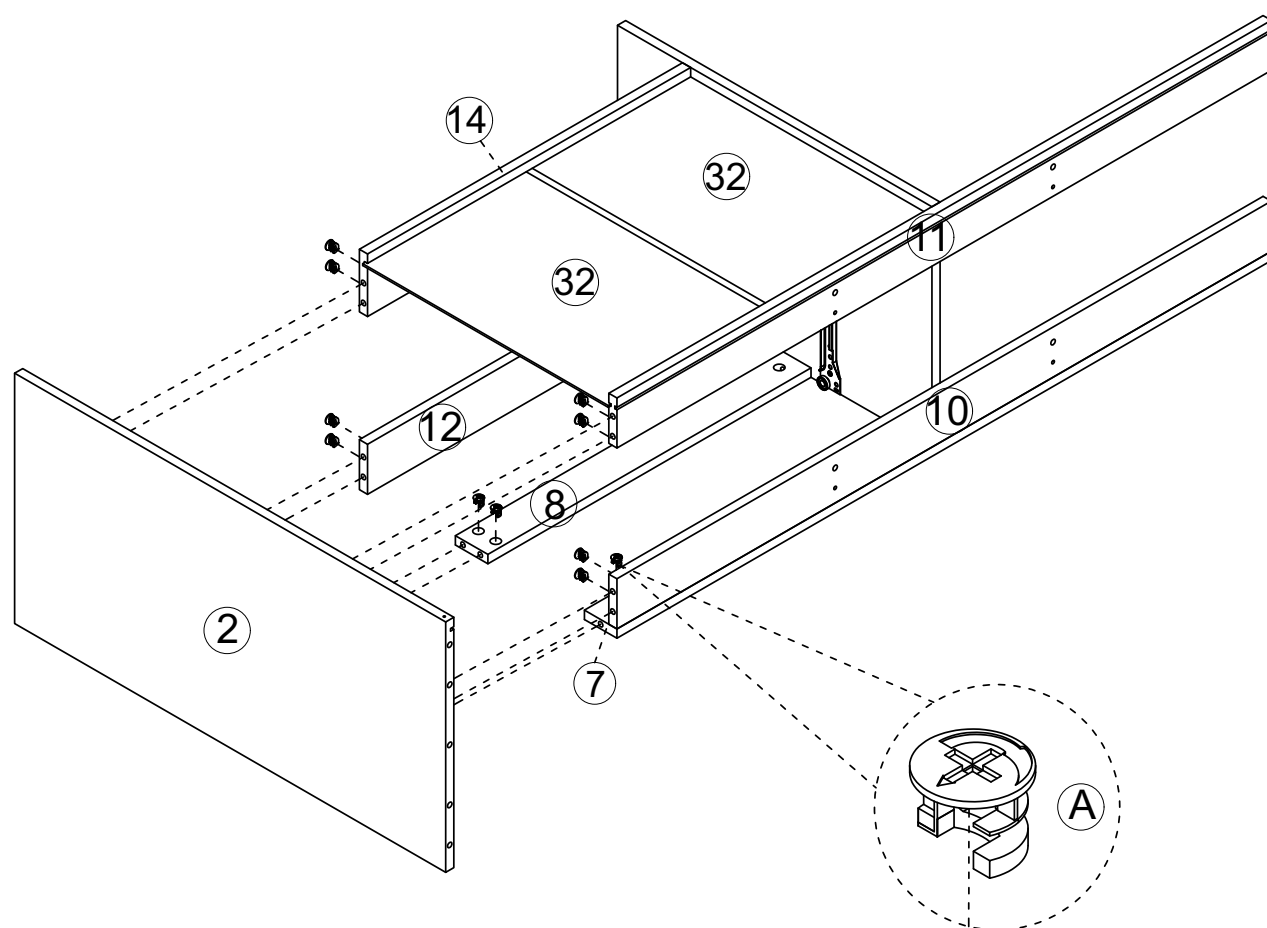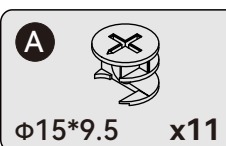

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

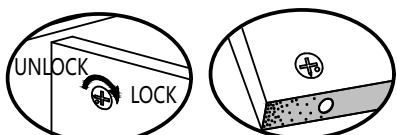


Proper orientation of CAM LOCK





Need someone to assist with the installation.

 
Step 13

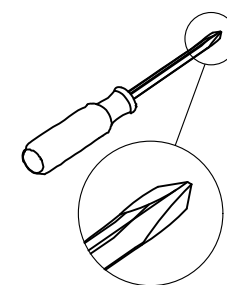

  Align board 6 with the corresponding holes on boards 9, 13, and 15, then, as shown in the figure, rotate accessory A clockwise to secure it to boards 9, 13, and 15.

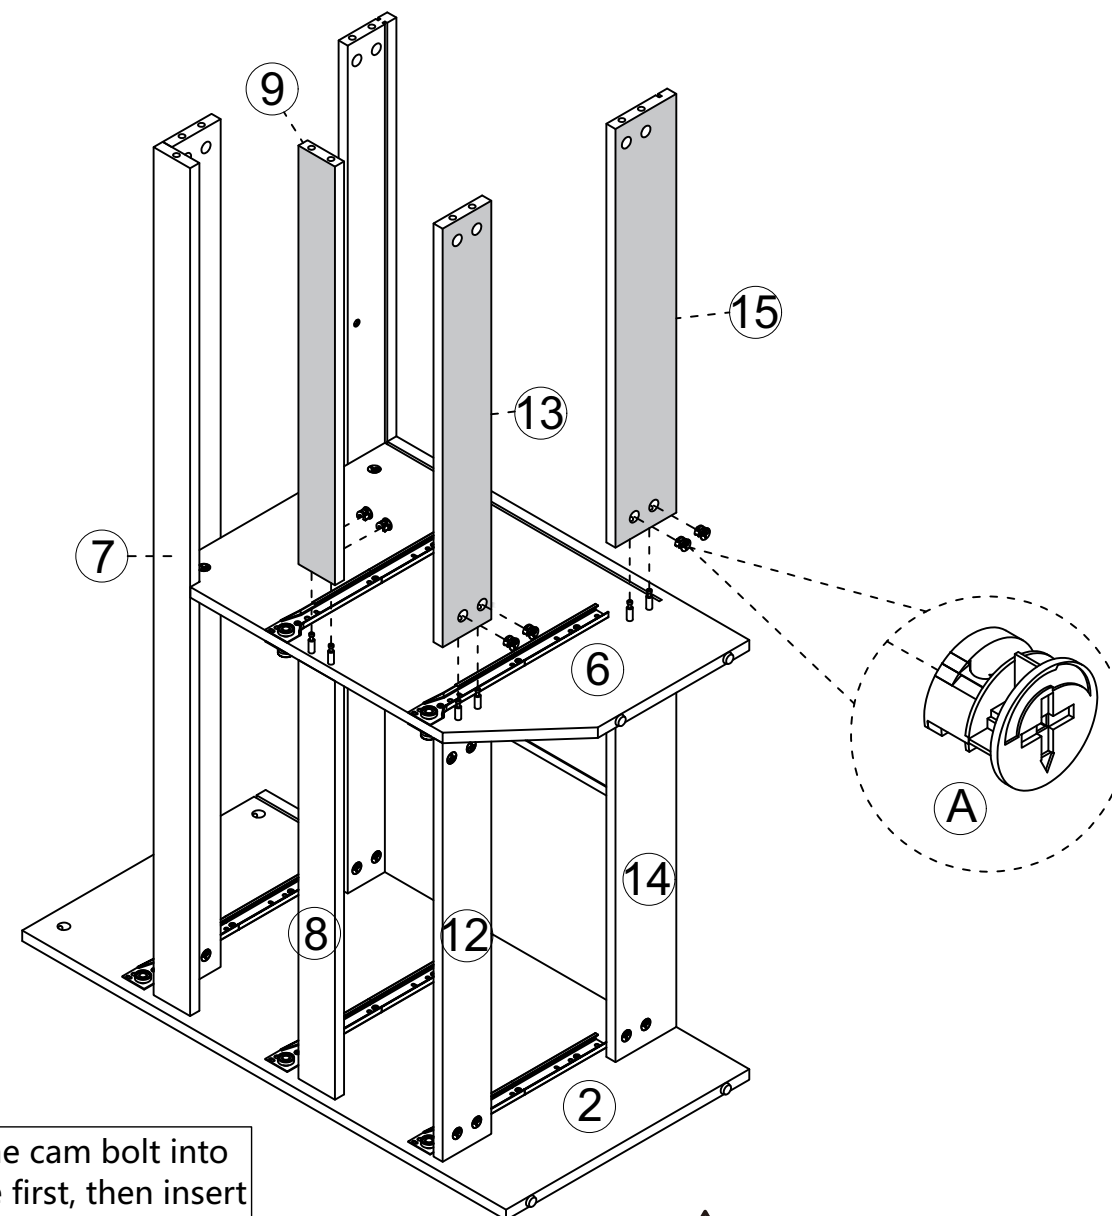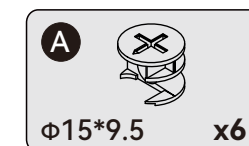

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

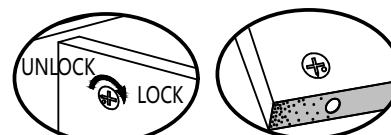


Proper orientation of CAM LOCK




13 Number plate left front end distance from the center of the circle of part A is 33mm.

 
Step 14

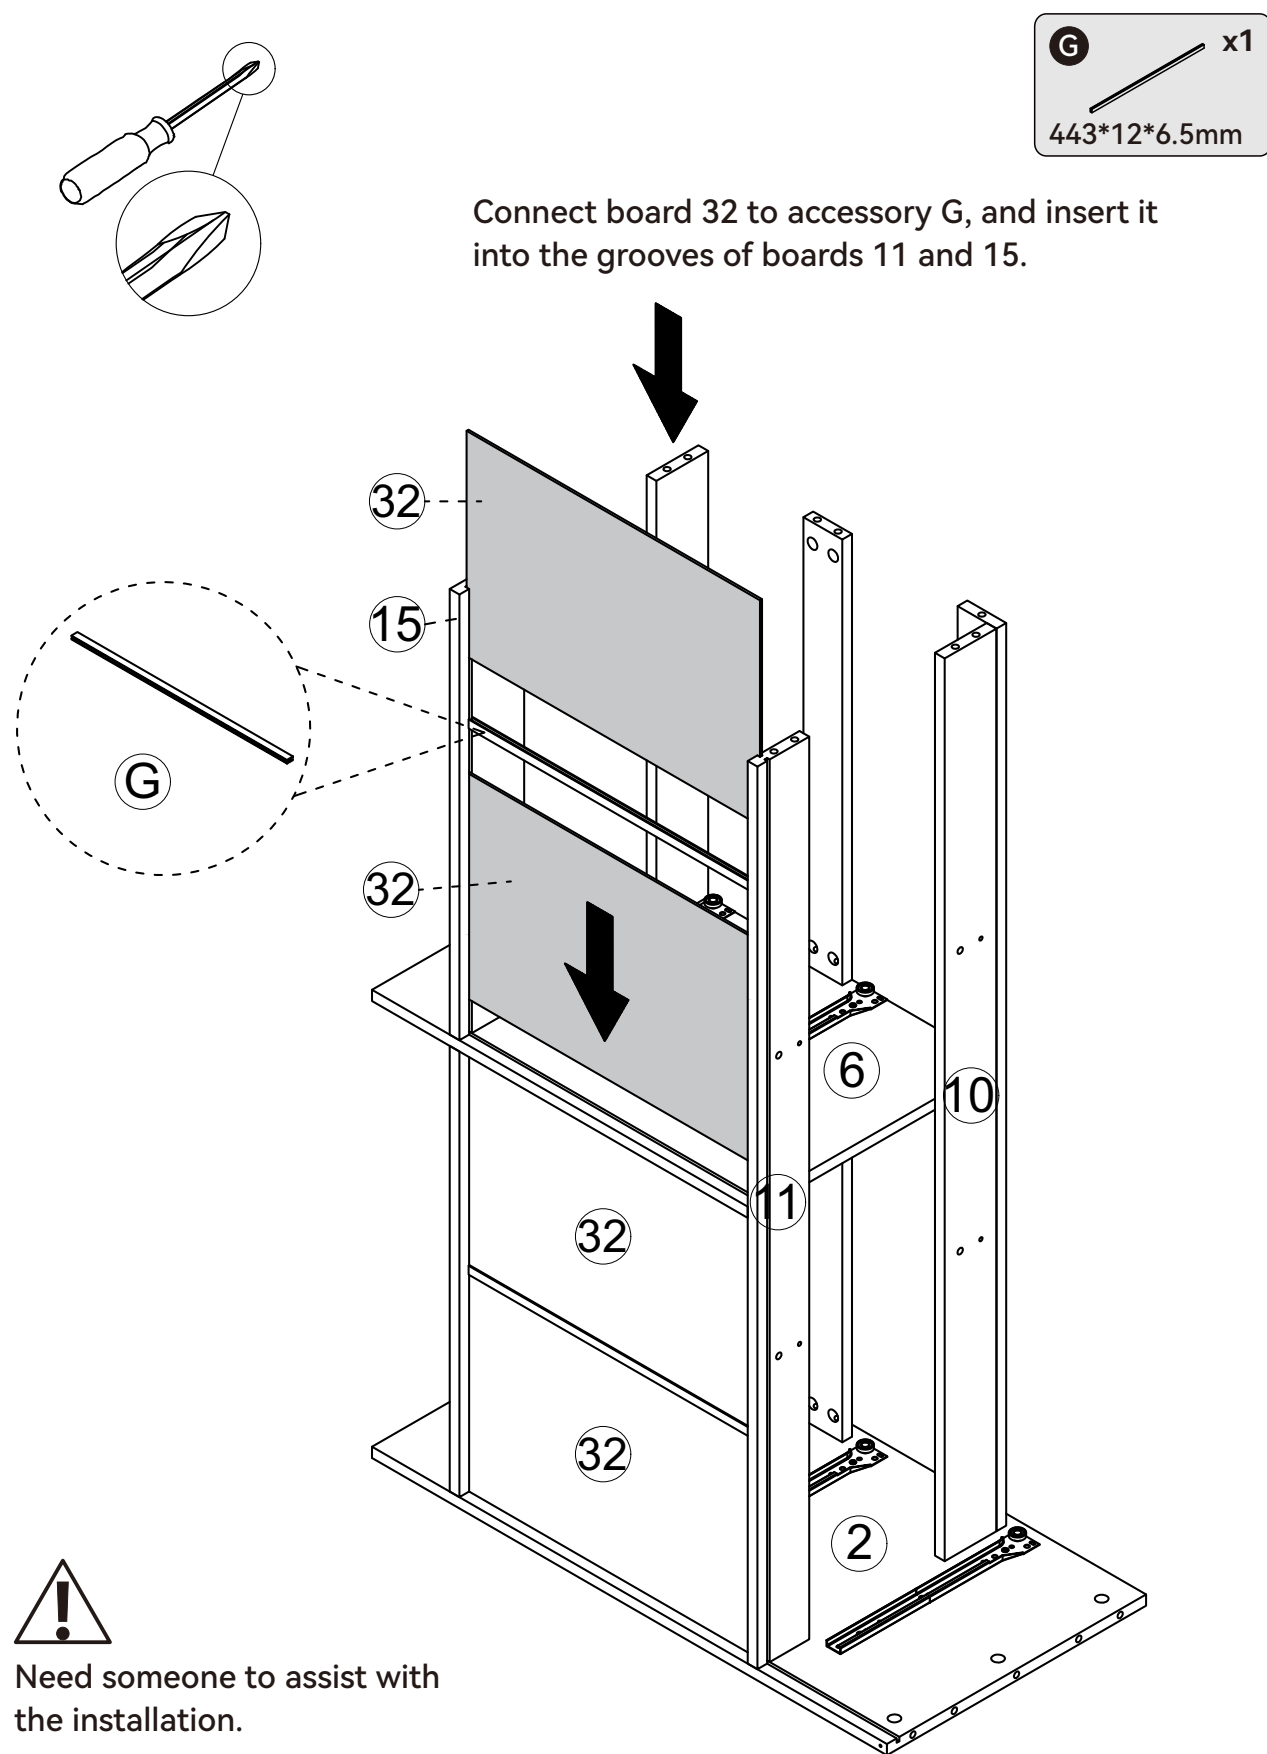

 
Step 15

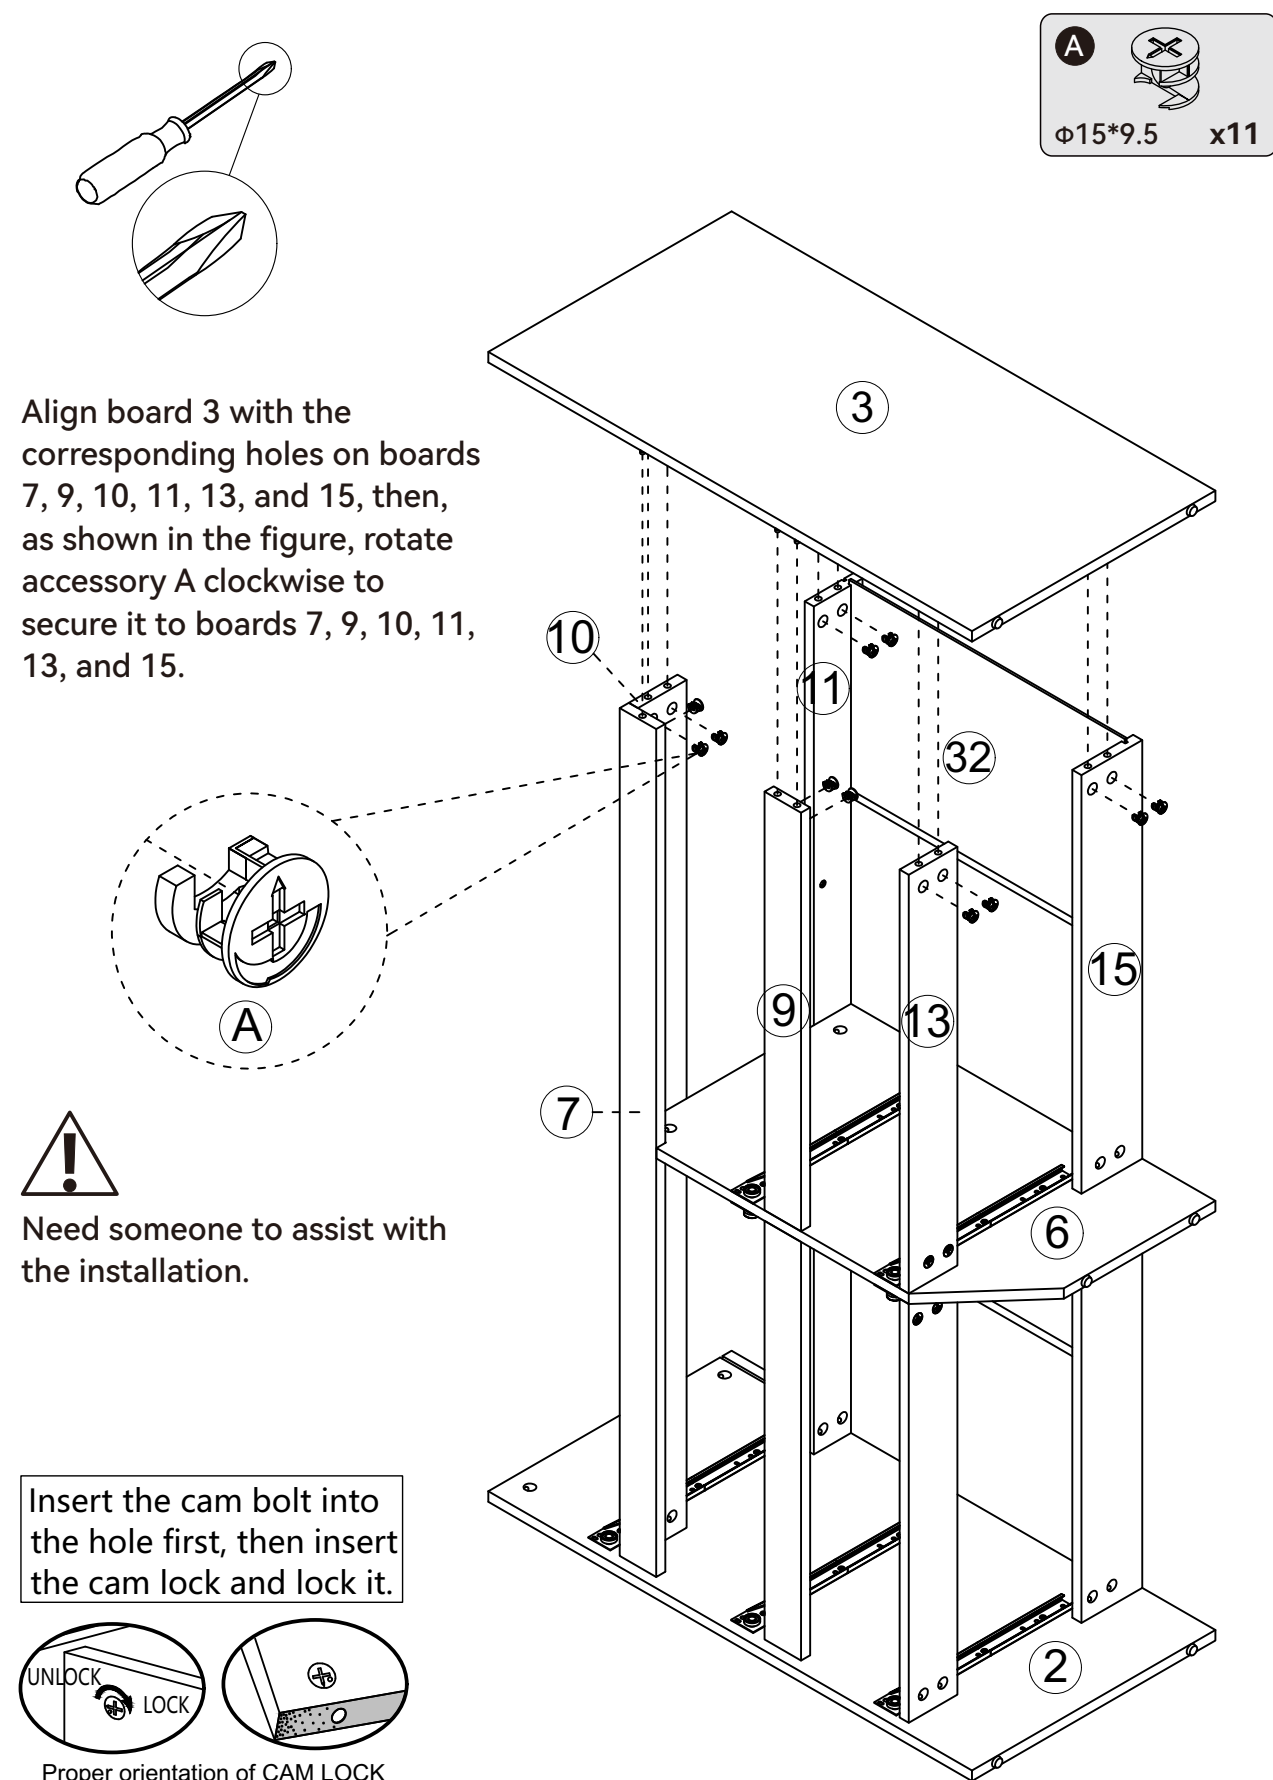

 
Step 16

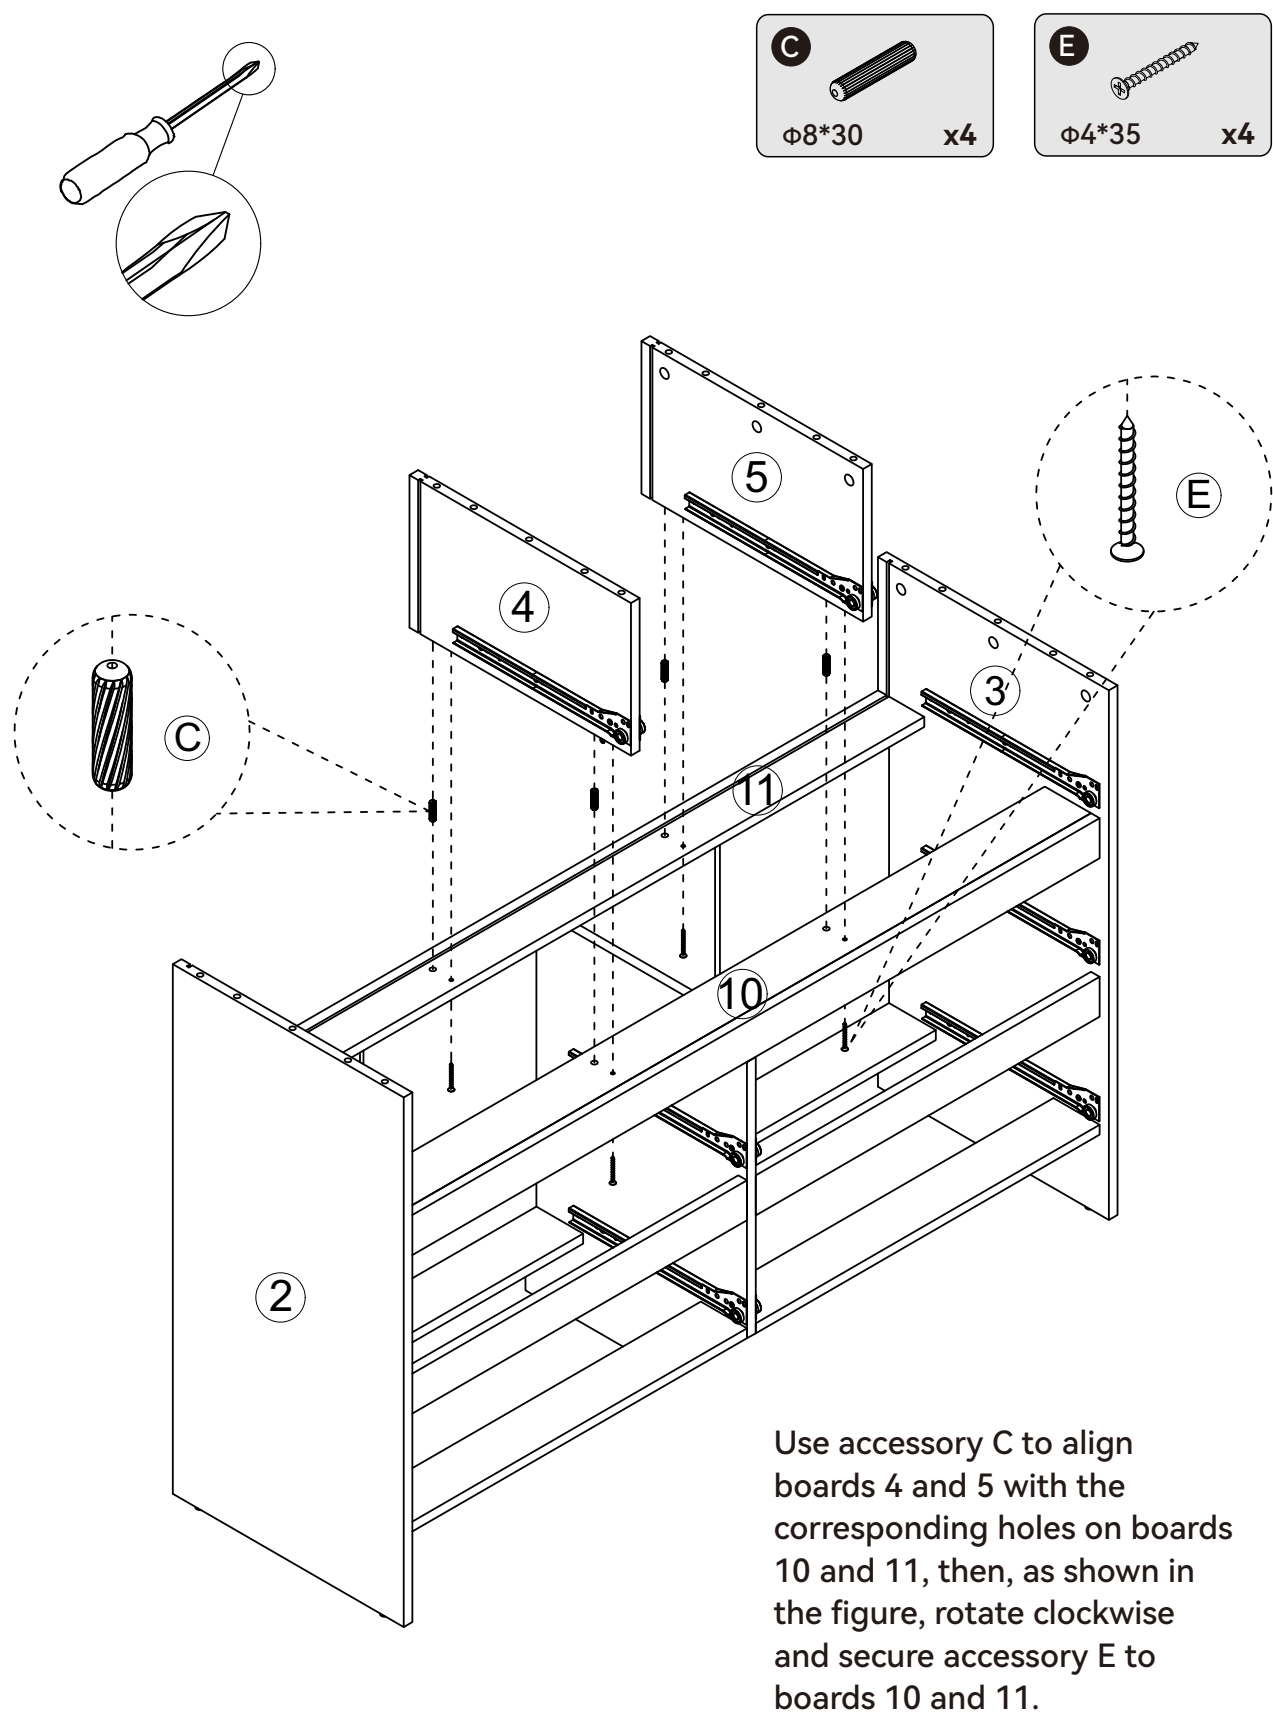

 Step 17

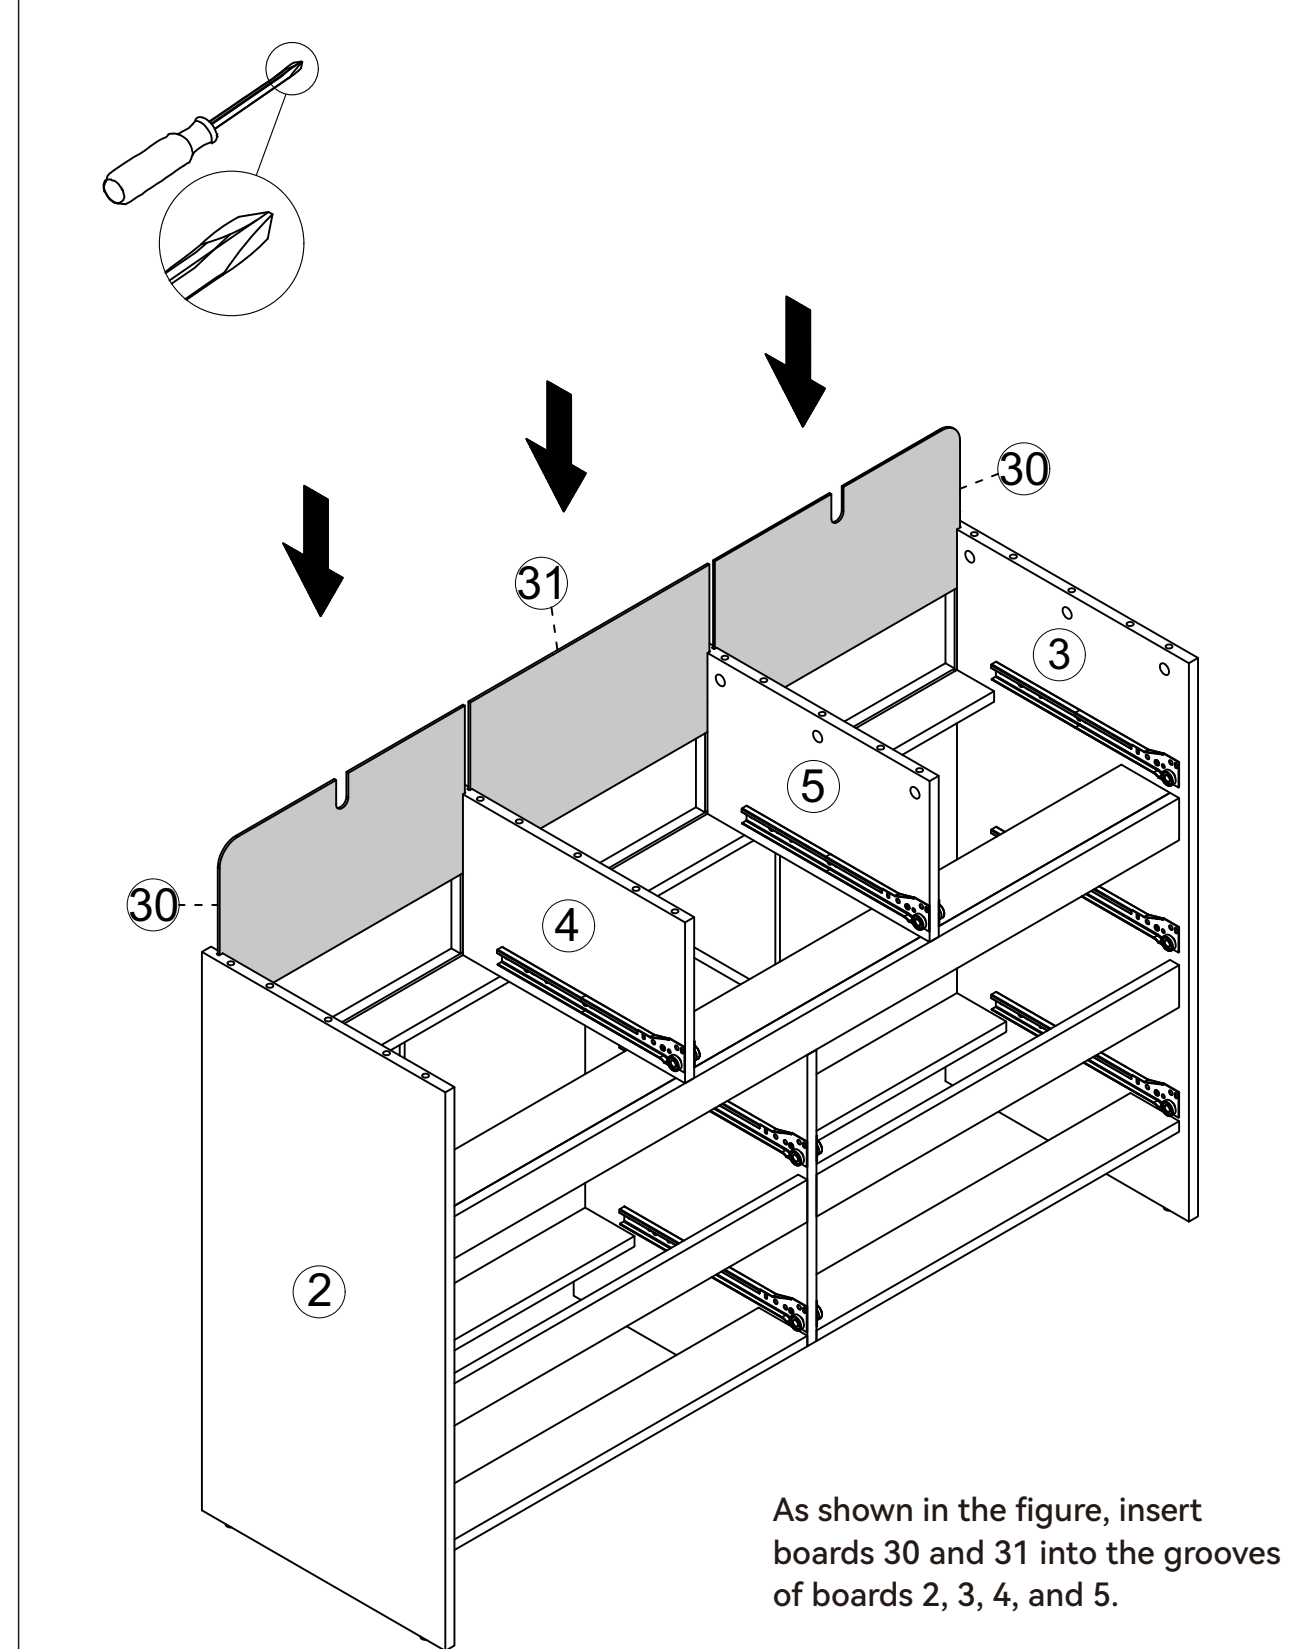


 Step 18

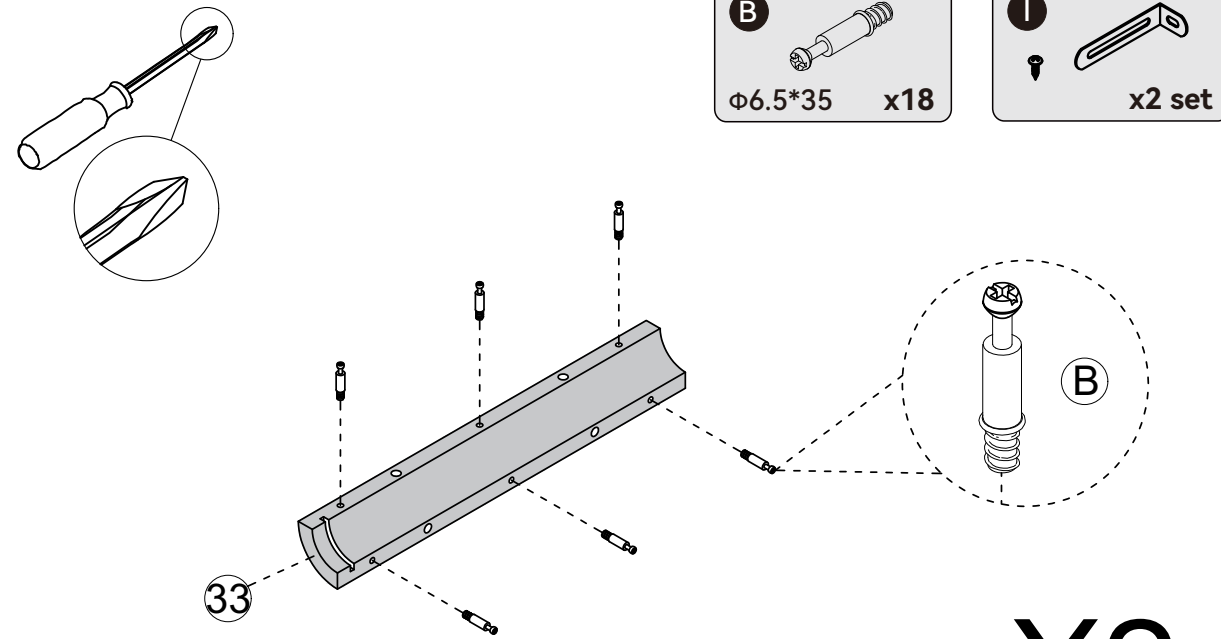


Fixing of fitting B to plate 33.

 Fasten fitting B and I as shown in the figure to plate 1.

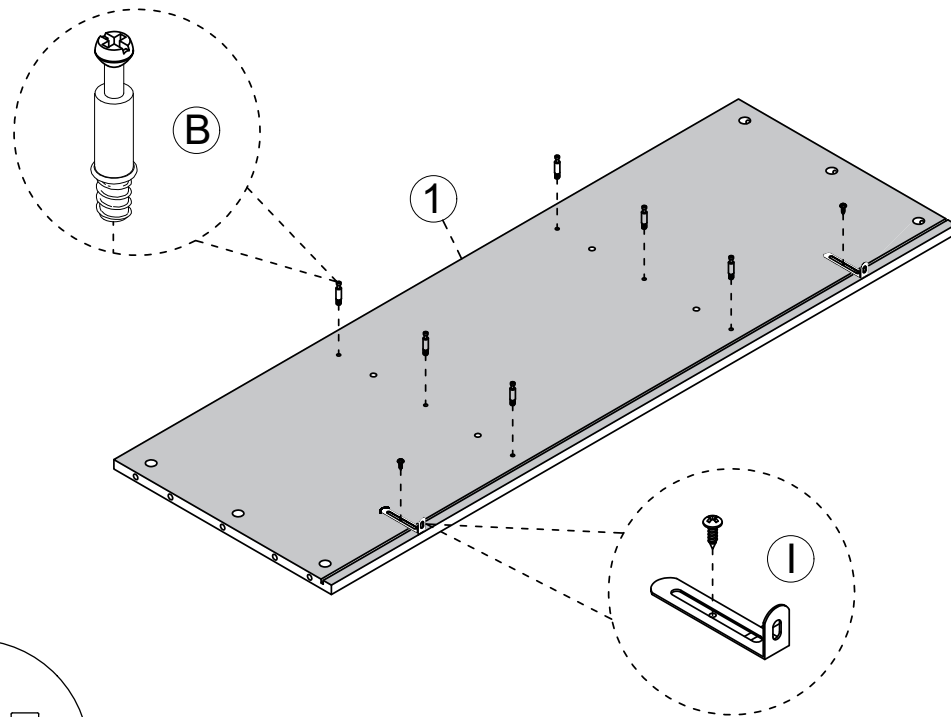


 Step 19

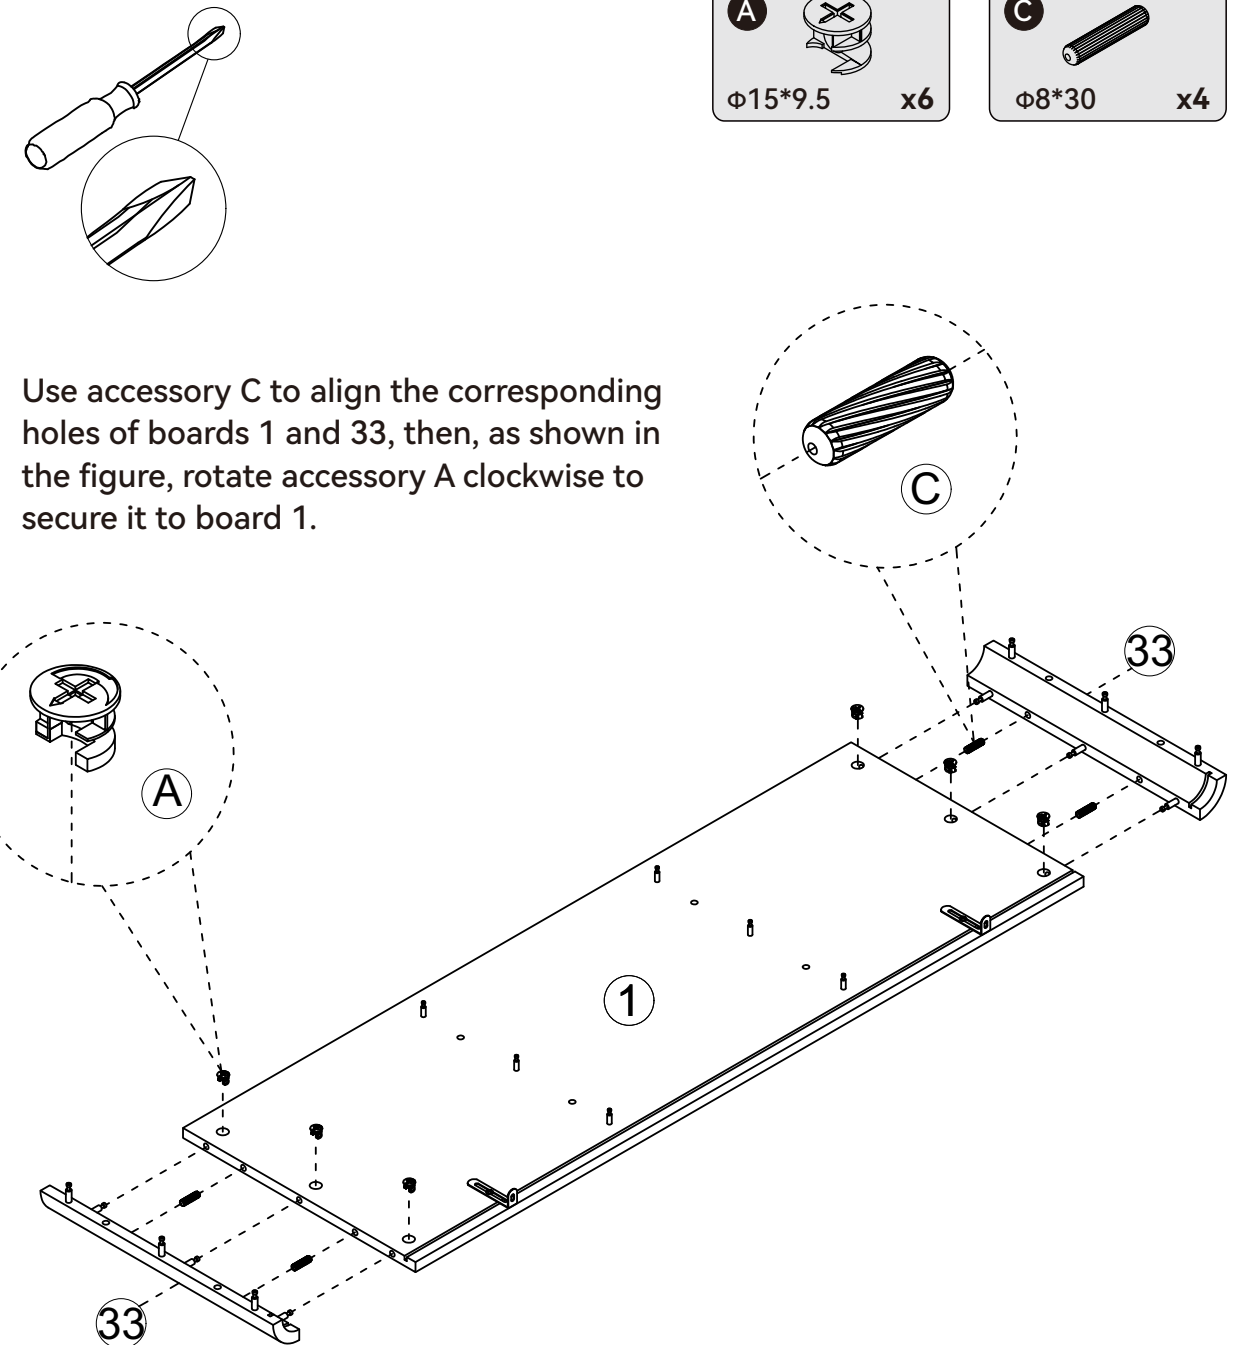




Use accessory C to align the corresponding holes of boards 1 and 33, then, as shown in the figure, rotate accessory A clockwise to secure it to board 1.

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

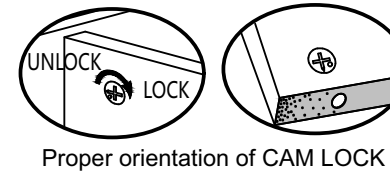


The side of groove No.1 and No.33 shall be aligned.

   
Step 20

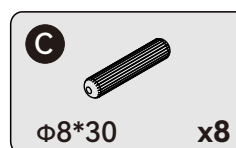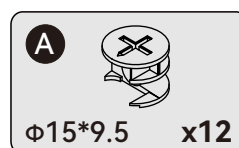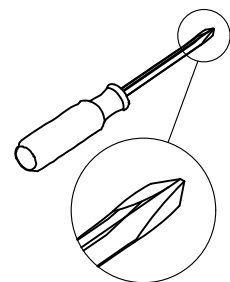

 Use accessory C to align the holes of boards 1 and 33 with the corresponding holes on boards 2, 3, 4, and 5, then, as shown in the figure, rotate accessory A clockwise to secure it to boards 2, 3, 4, and 5.

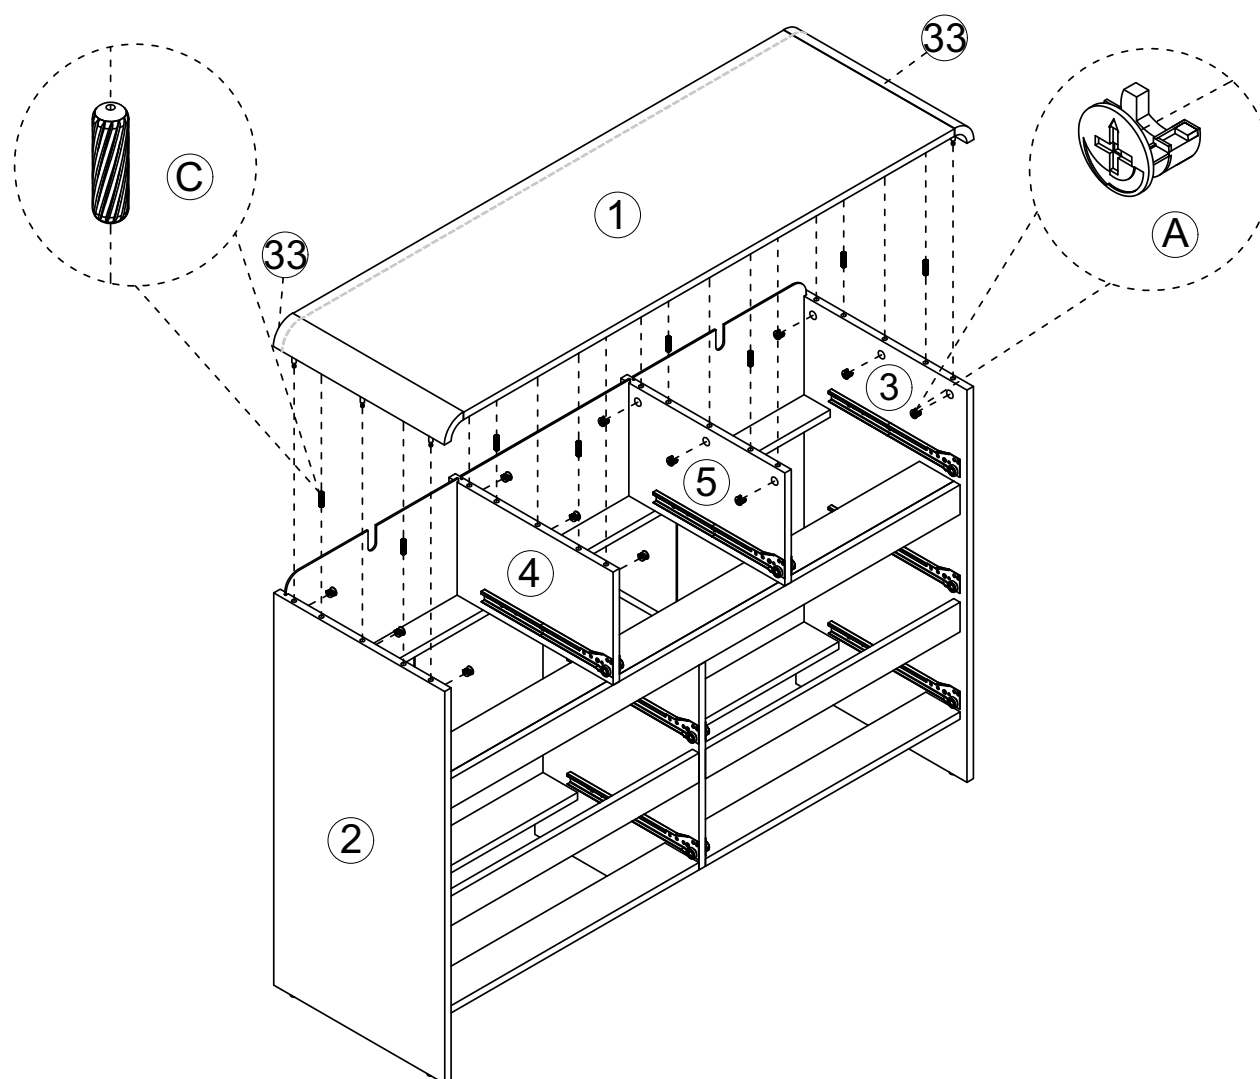

 Insert the cam bolt into the hole first, then insert the cam lock and lock it.



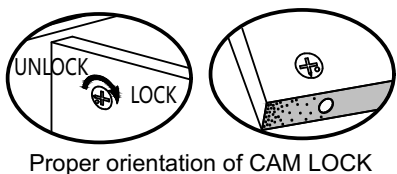


Proper orientation of CAM LOCK




Need someone to assist with the installation.

   
Step 21

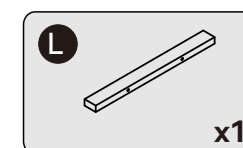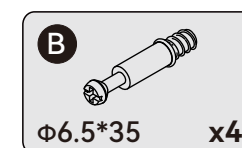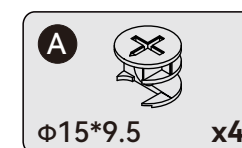

 
Use screw E to secure boards 21, 22, and 23, then insert board 26 as shown. Attach accessory B to board 16, flip it over, and connect it to boards 21 and 22, securing it with accessory A.

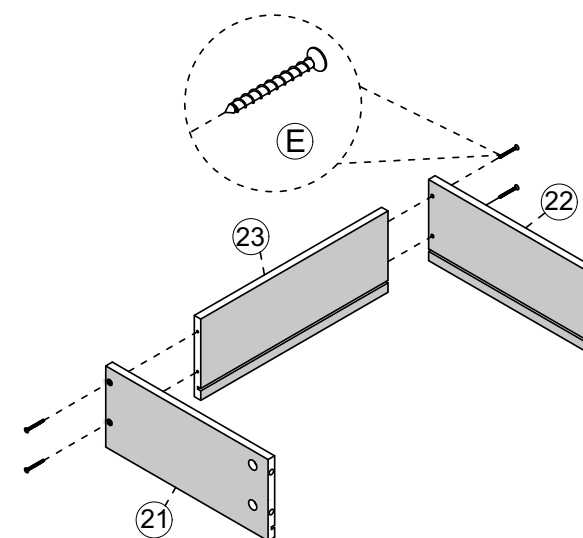

 
Step 1

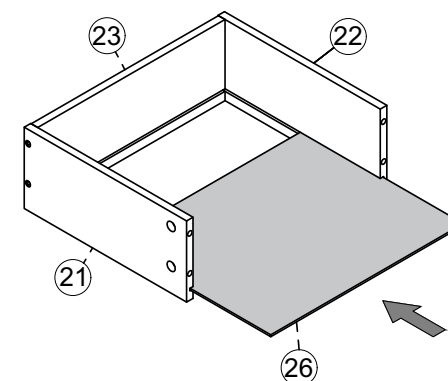

 
Step 2

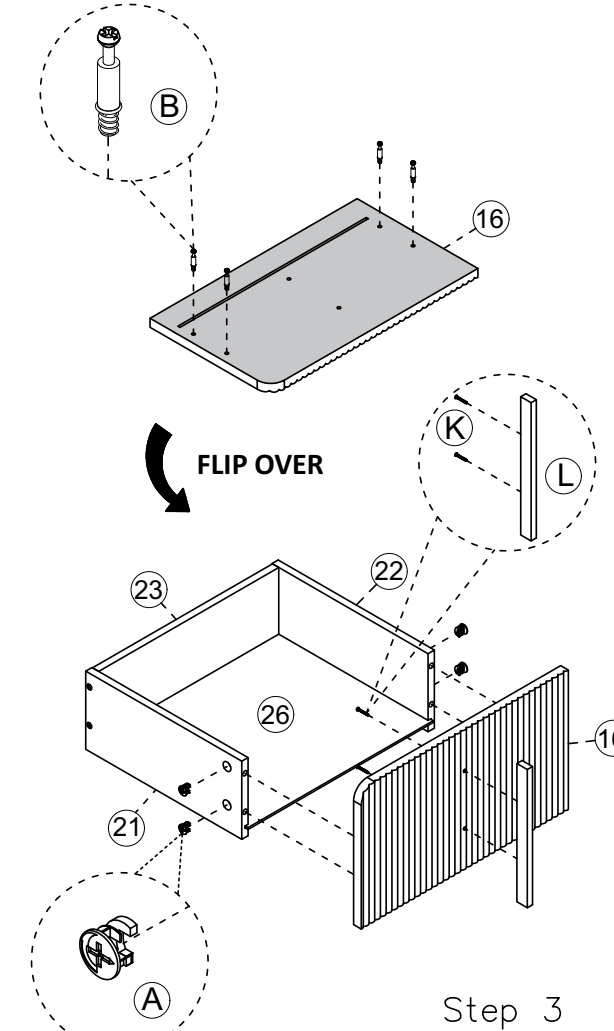

 Step 3



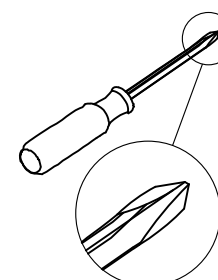


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.



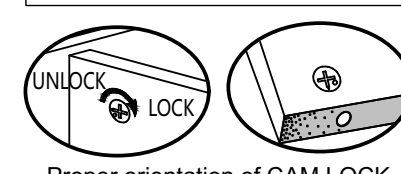


Proper orientation of CAM LOCK

   
Step 22

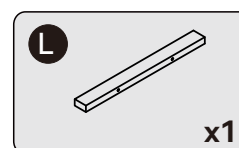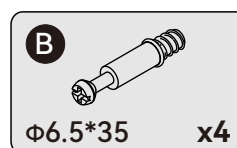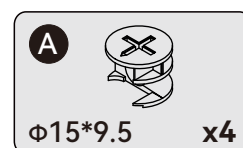

   Use screw E to secure boards 21, 22, and 24, then insert board 27 as shown. Attach accessory B to board 18, flip it over, and connect it to boards 21 and 22, securing it with accessory A.


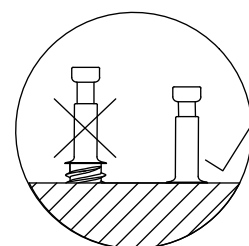
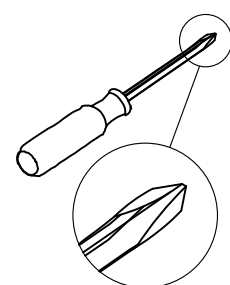
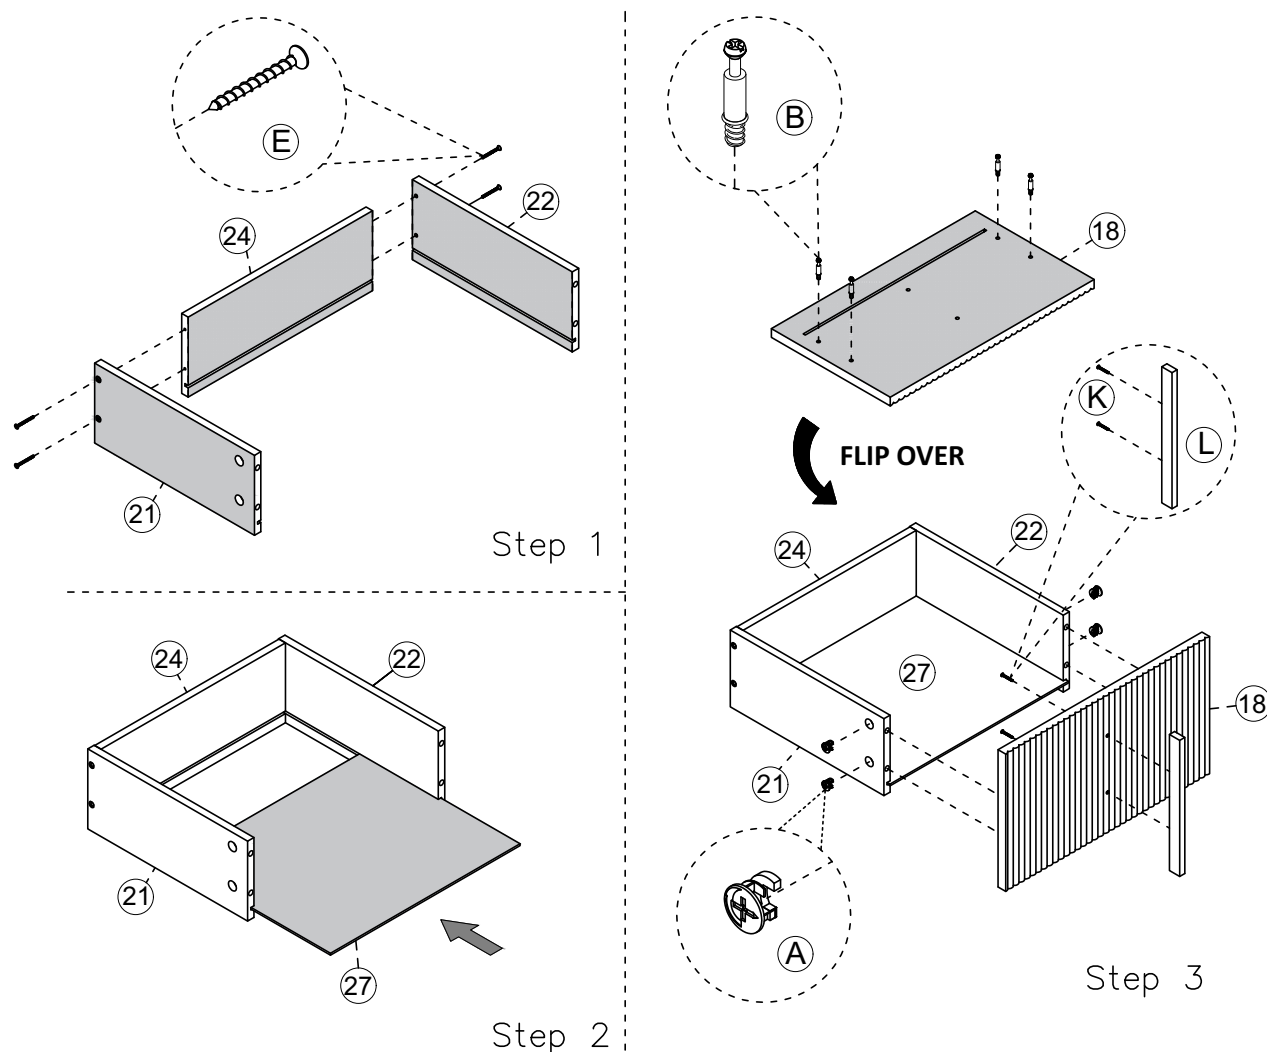


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.



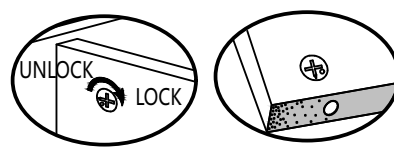


Proper orientation of CAM LOCK

    
Step 23

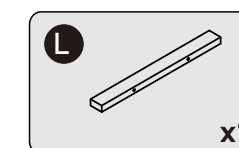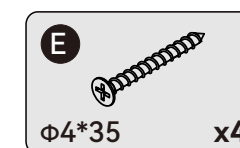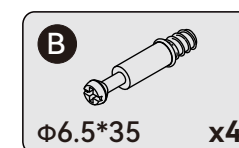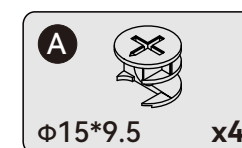

   Use screw E to secure boards 21, 22, and 23, then insert board 26 as shown. Attach accessory B to board 17, flip it over, and connect it to boards 21 and 22, securing it with accessory A.

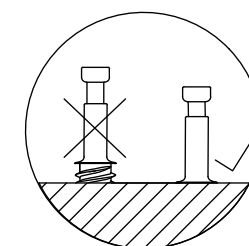
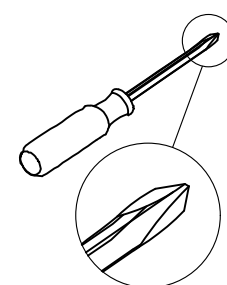
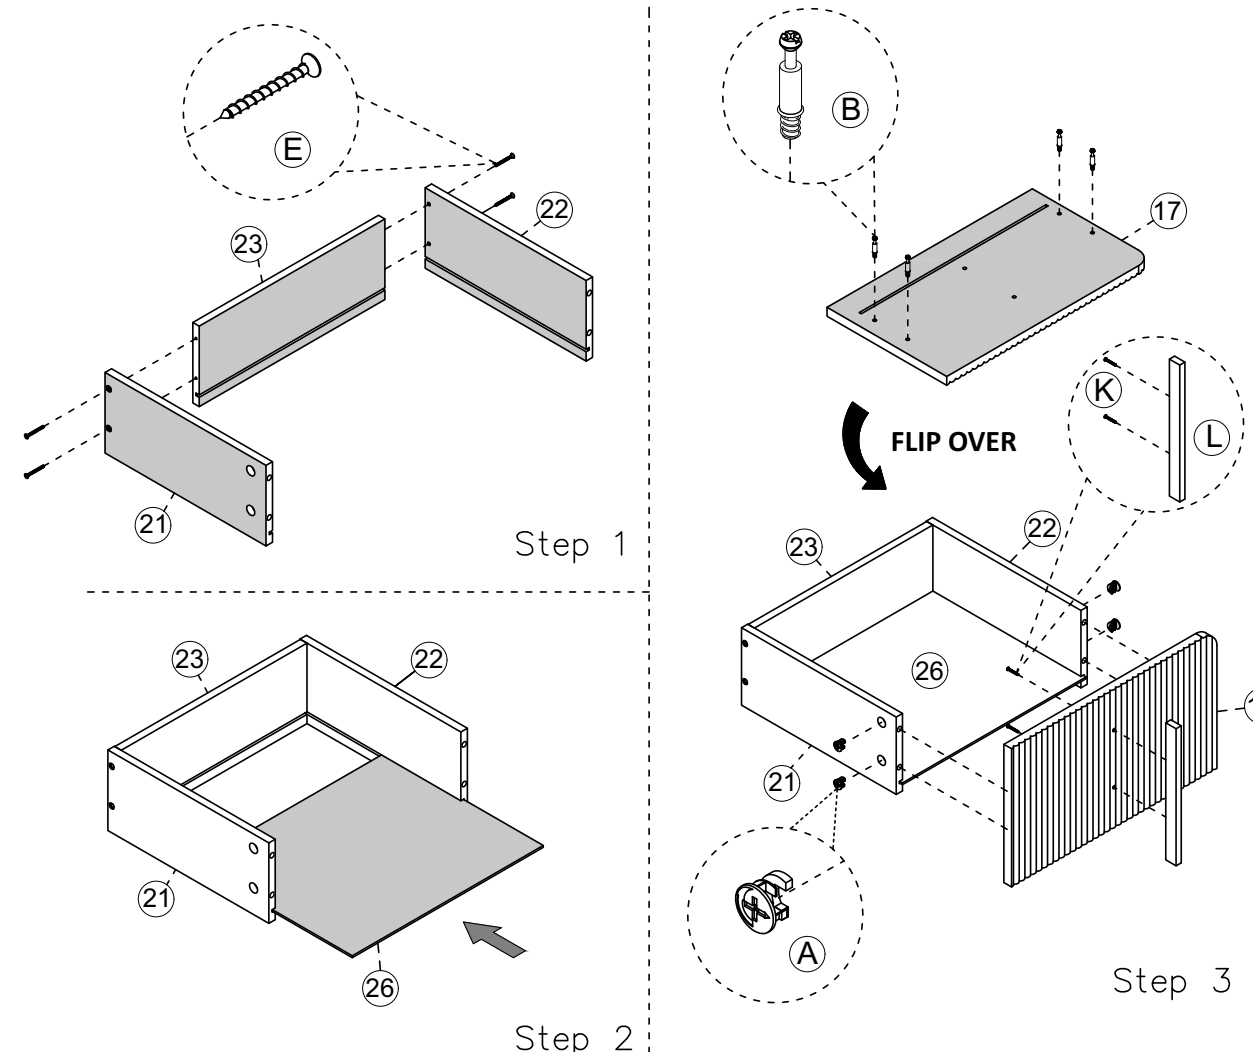


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

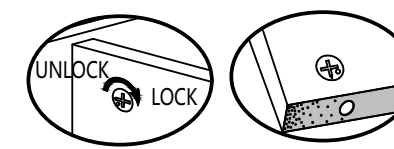


Proper orientation of CAM LOCK

  
 
Step 24

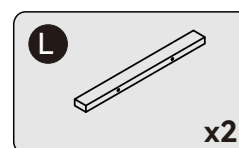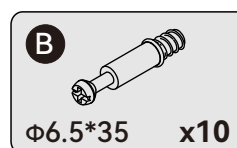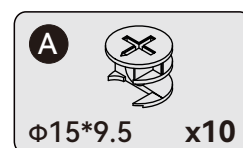

 
Use screw E to secure boards 21, 22, 25, and 29, then insert board 28 as shown. Attach accessory B to board 19, flip it over, and connect it to boards 21, 22, and 29, securing it with accessory A.

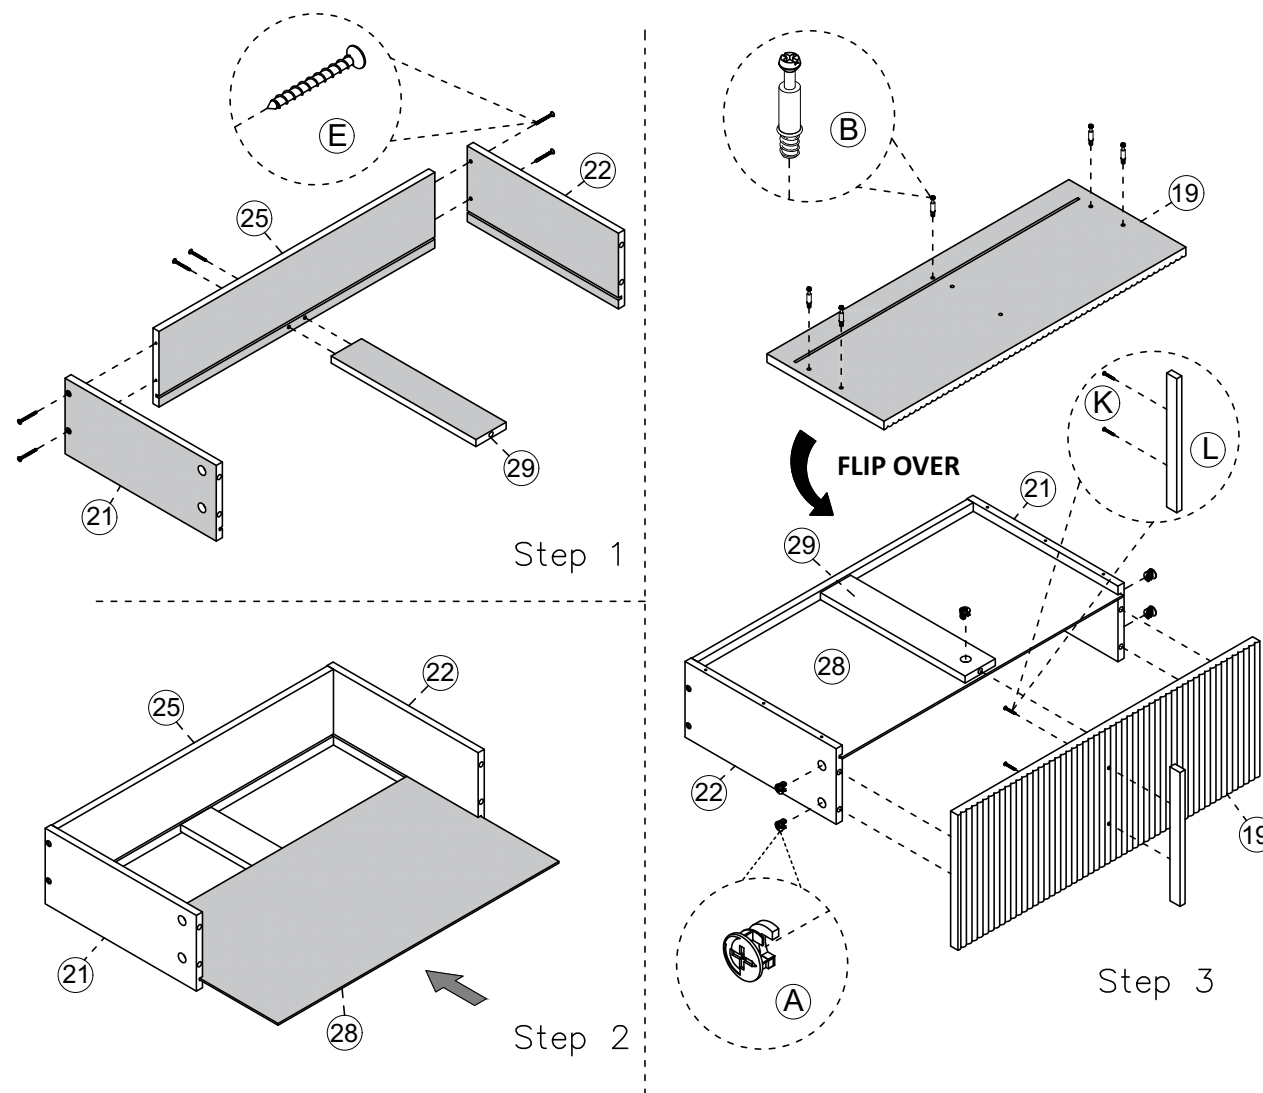

X2



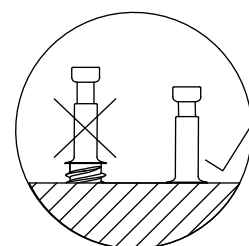 
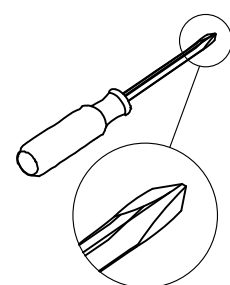 


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

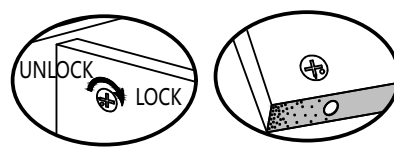


Proper orientation of CAM LOCK

   
 
Step 25

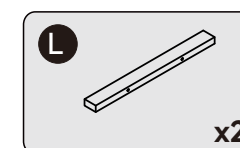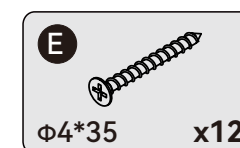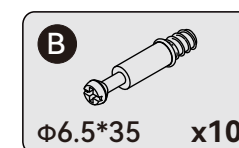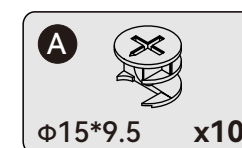

 
Use screw E to secure boards 21, 22, 25, and 29, then insert board 28 as shown. Attach accessory B to board 20, flip it over, and connect it to boards 21, 22, and 29, securing it with accessory A.

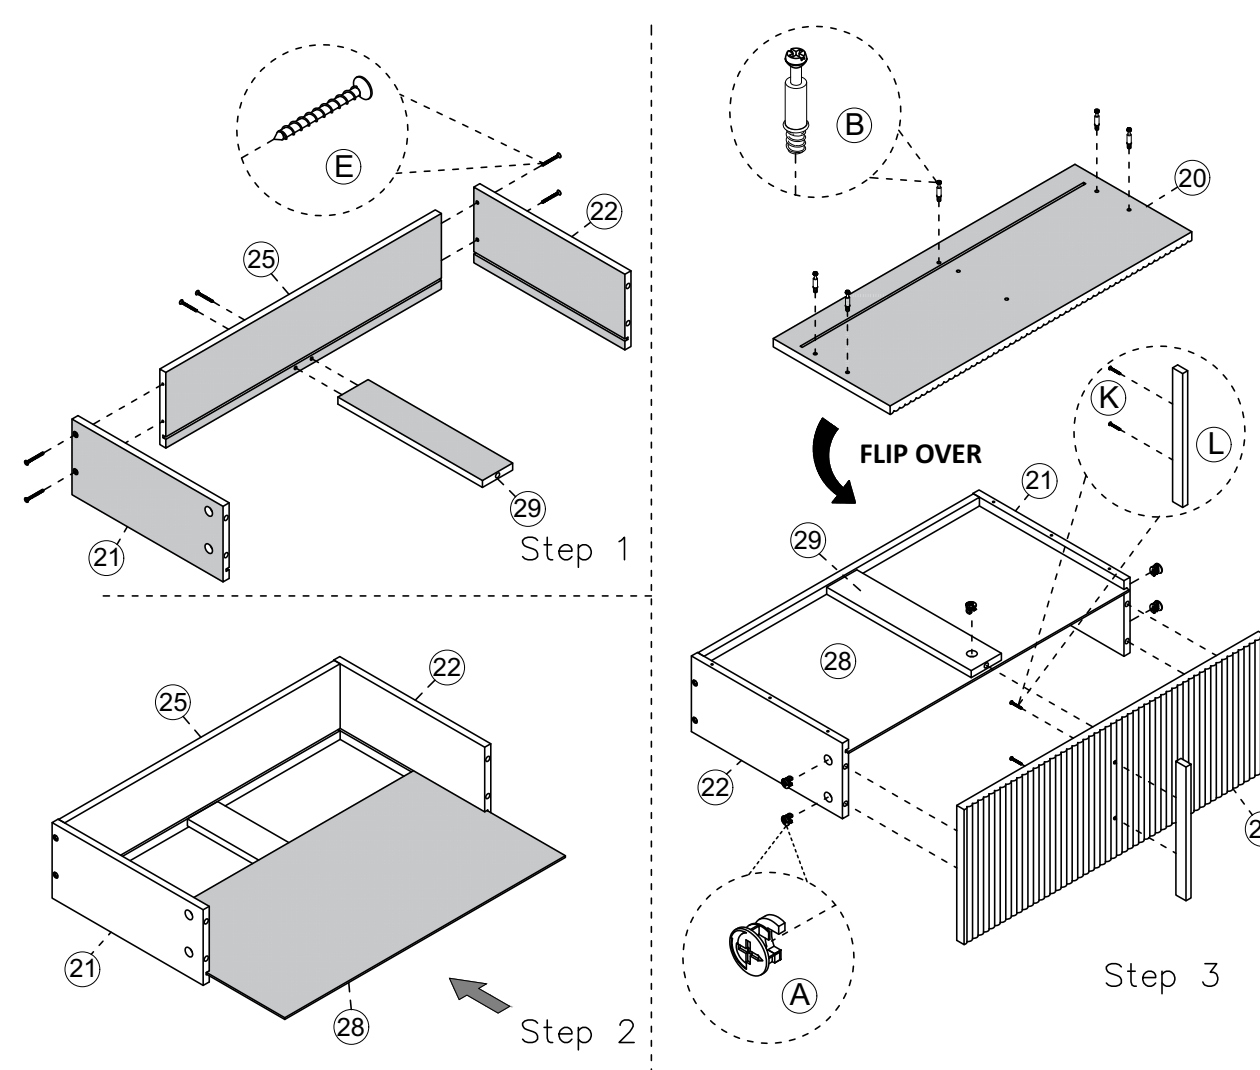

X2

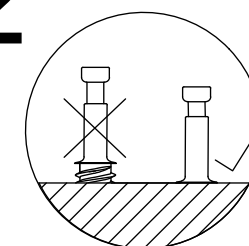 
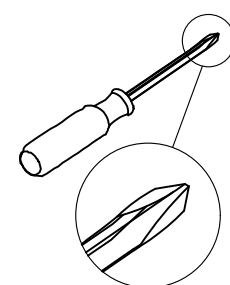 


 Insert the cam bolt into the hole first, then insert the cam lock and lock it.

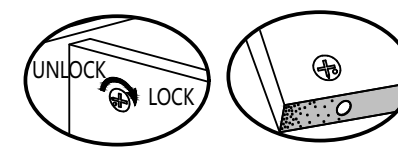


Proper orientation of CAM LOCK

 
 
Step 26

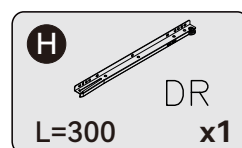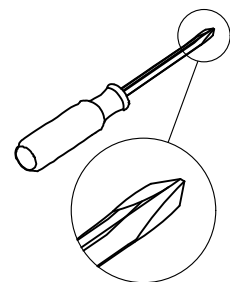

 
As shown in the figure, screw D is used to secure accessory H to boards 21 and 22.

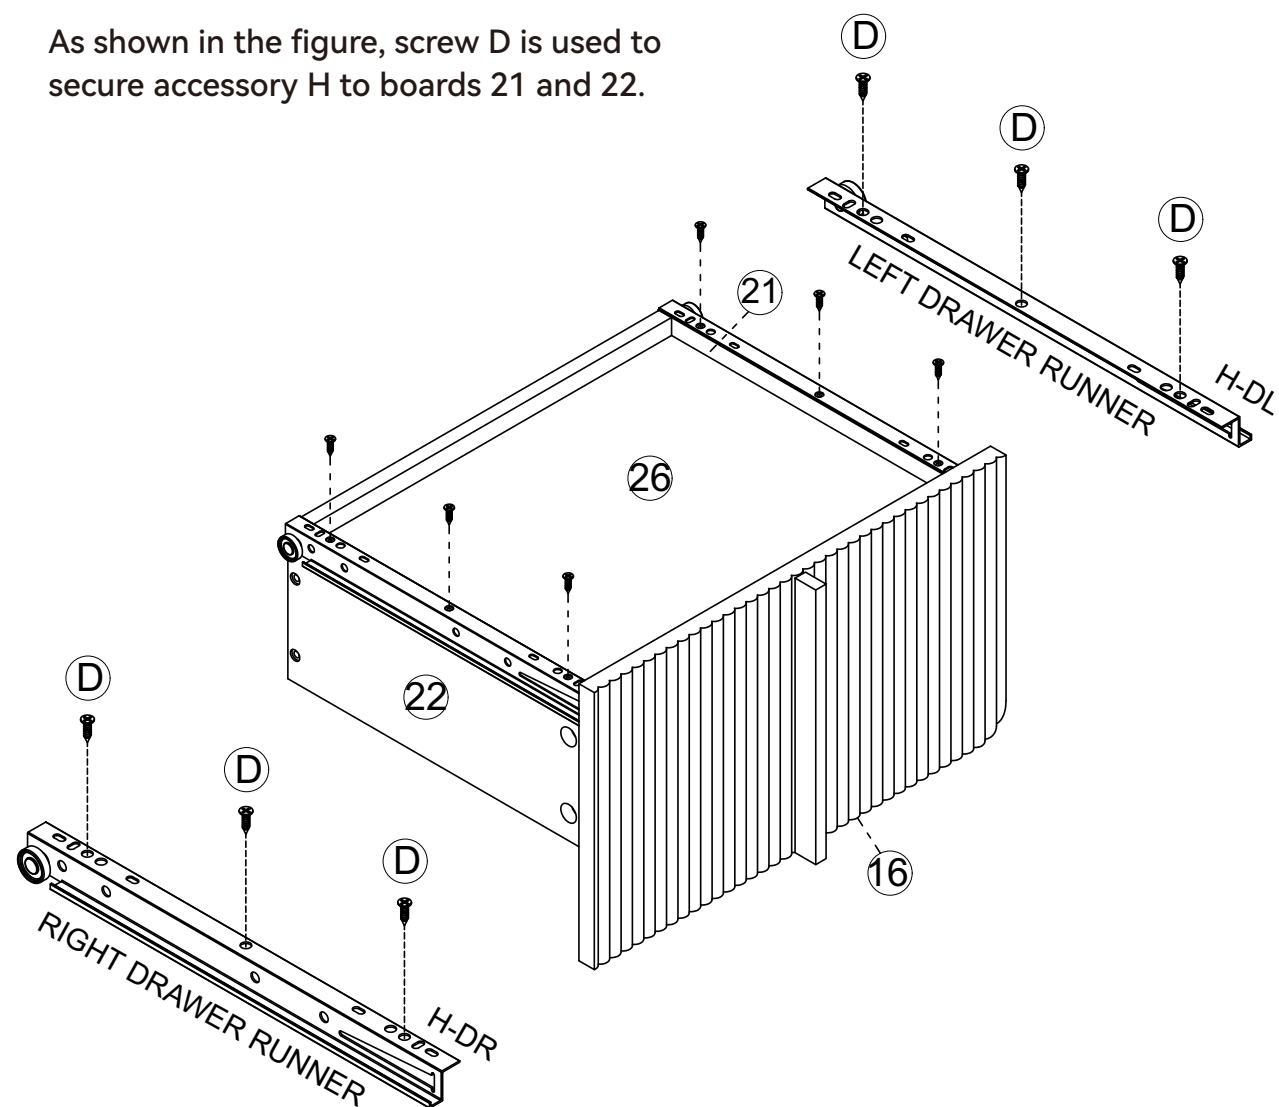

 
 
Step 27

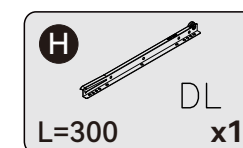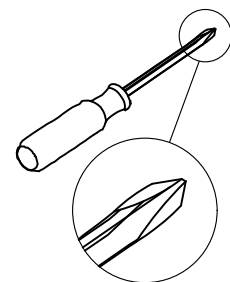

 
As shown in the figure, screw D is used to secure accessory H to boards 21 and 22.

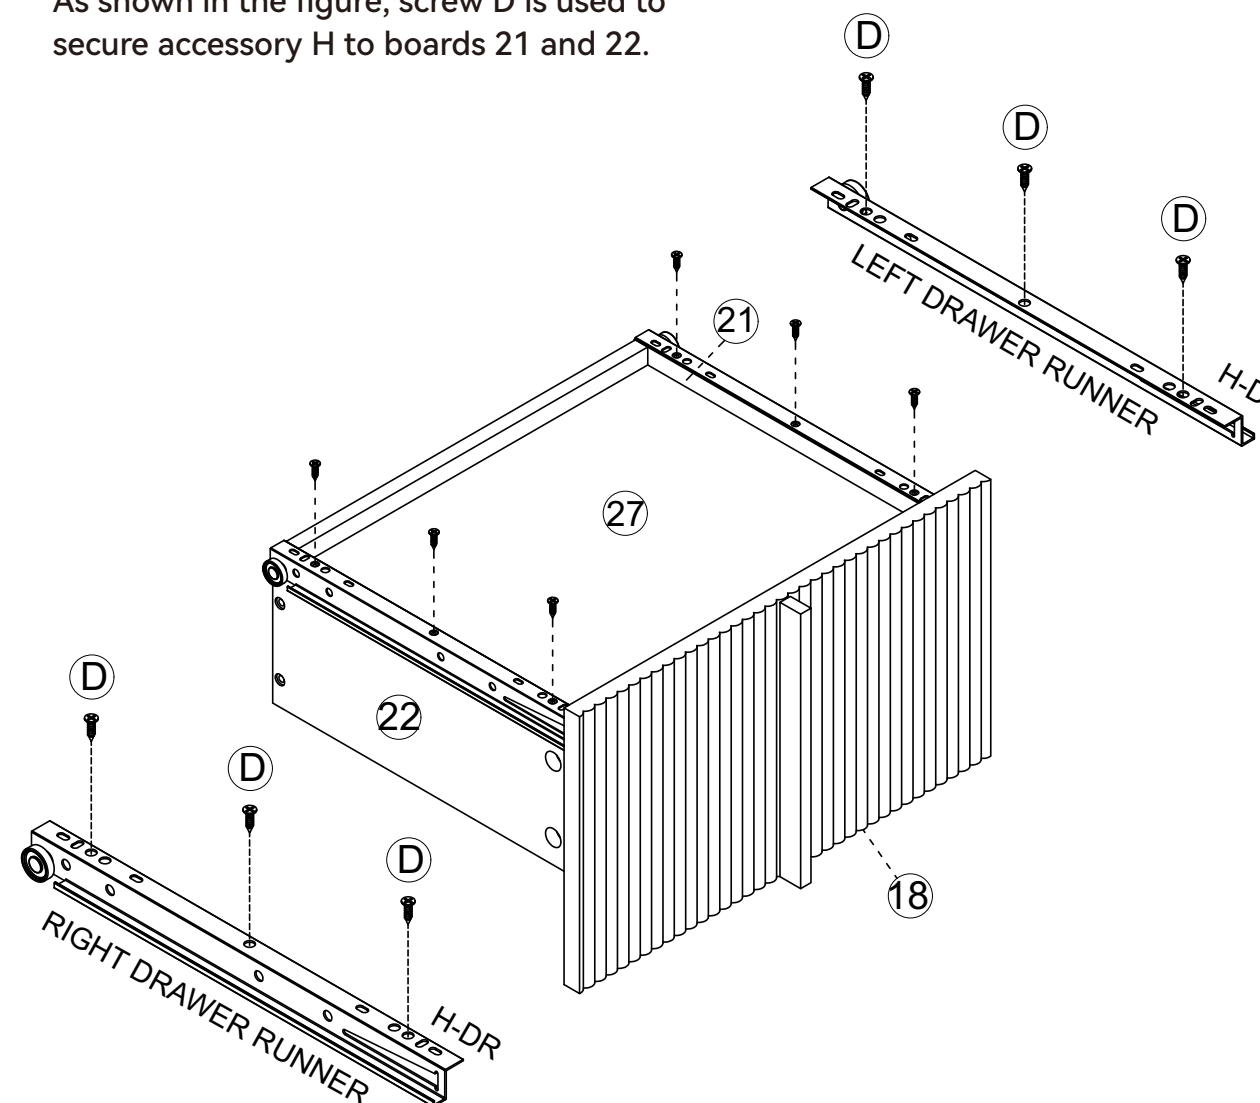


 
 
Step 28

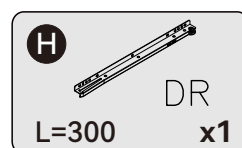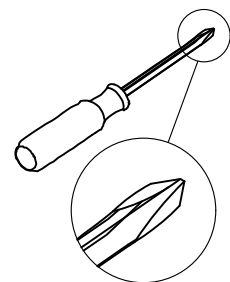

 
As shown in the figure, screw D is used to secure accessory H to boards 21 and 22.

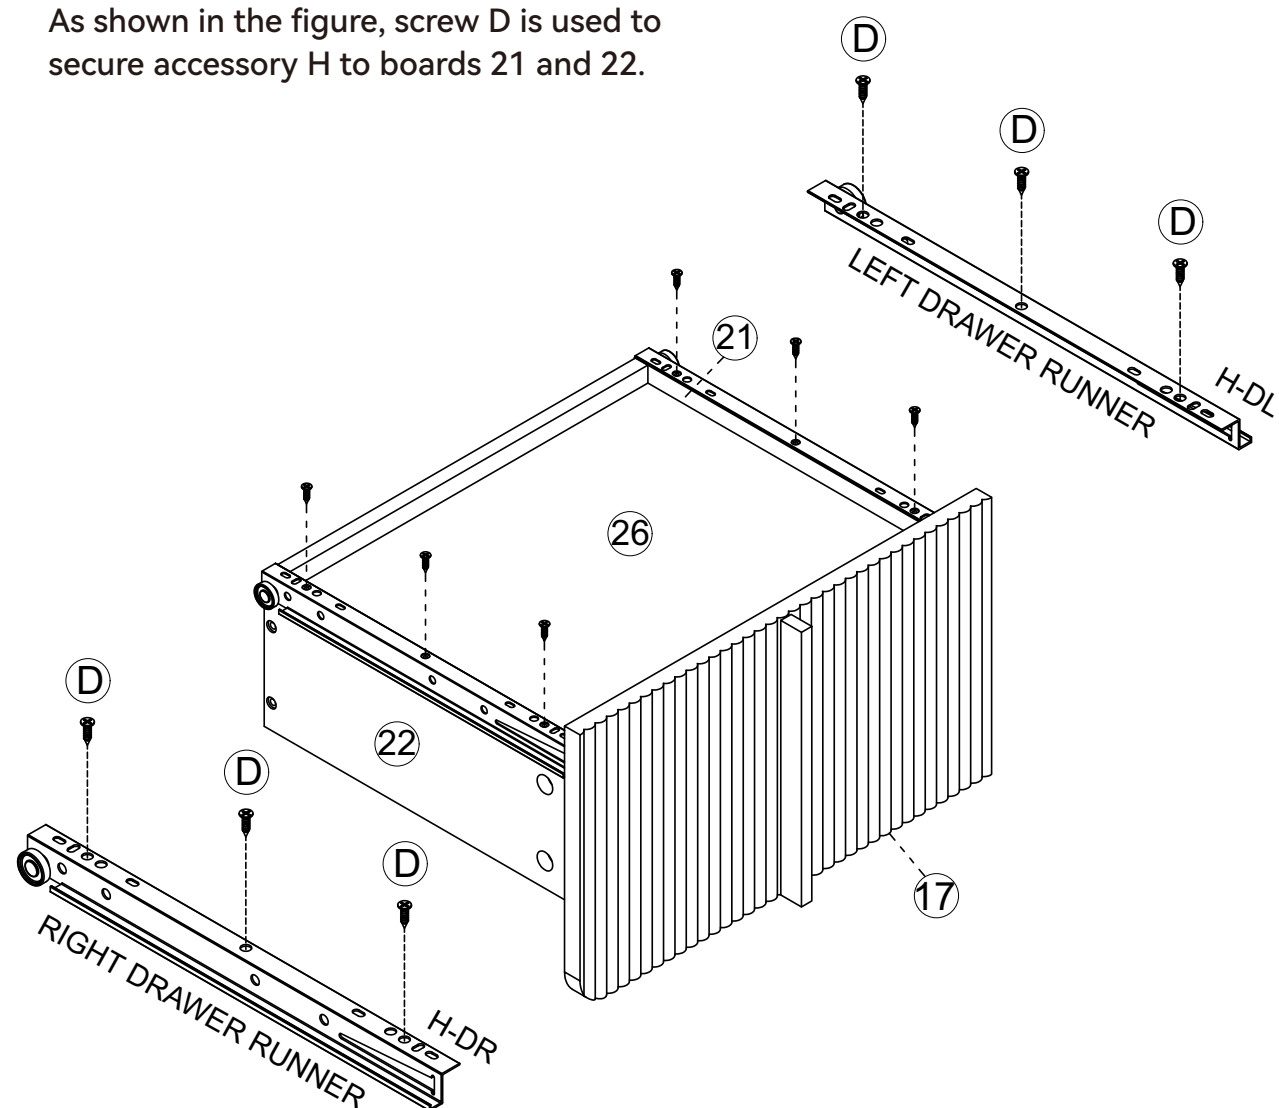

   Step 29


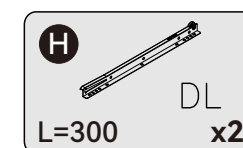
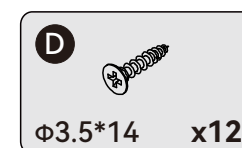
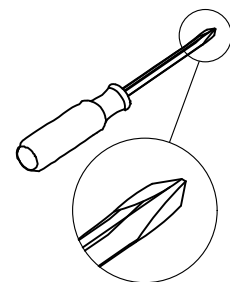


 As shown in the figure, screw D is used to secure accessory H to boards 21 and 22.

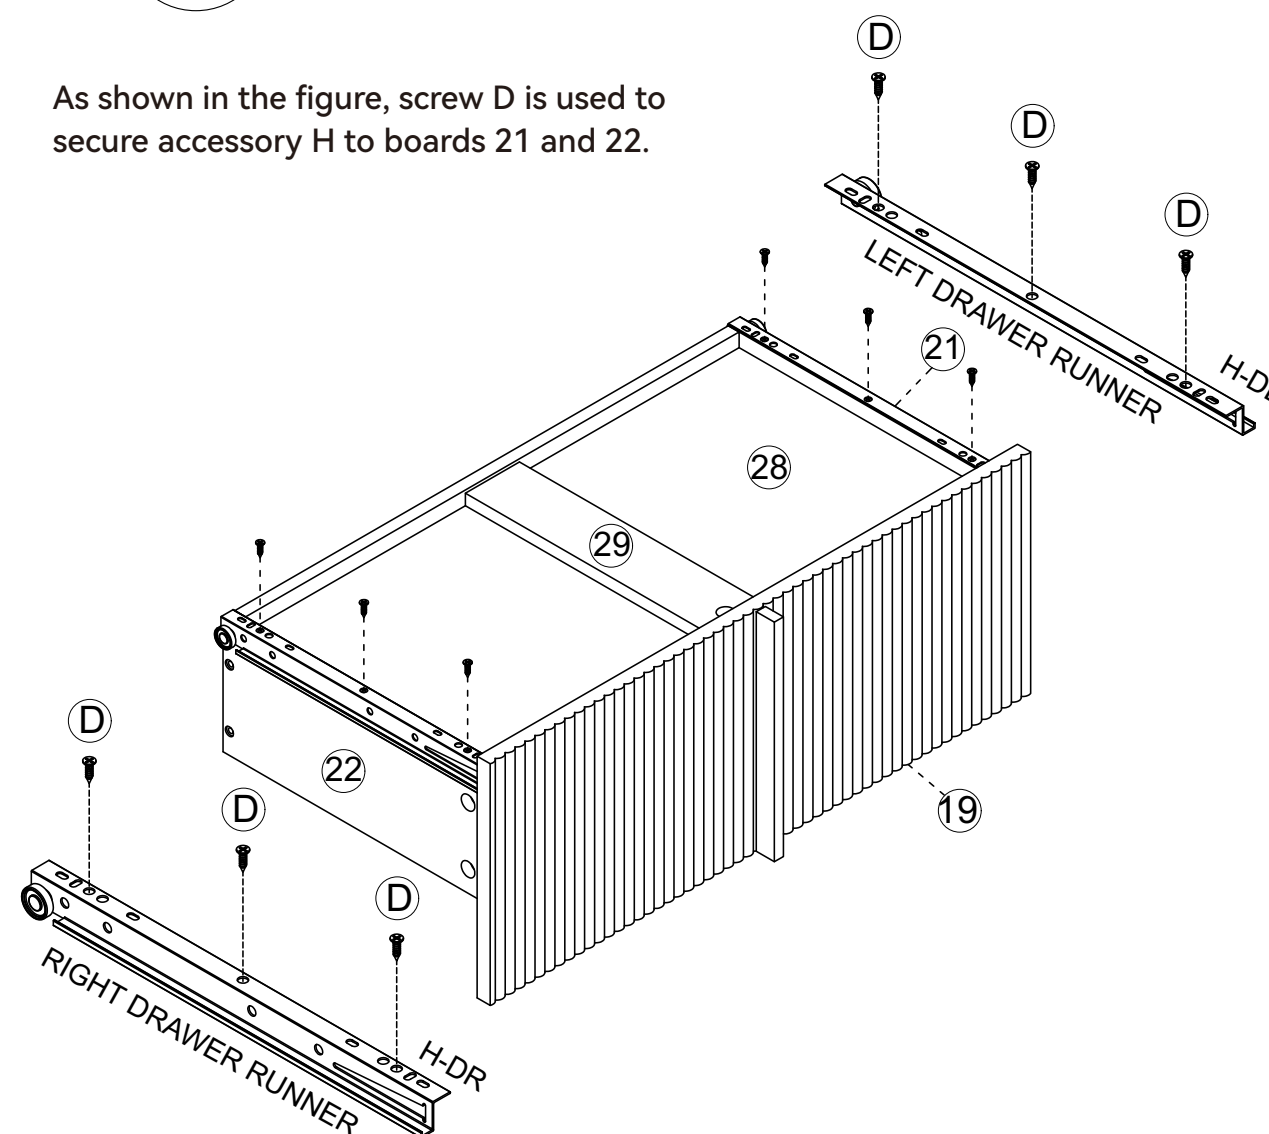


X2

    Step 30

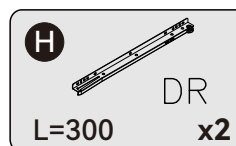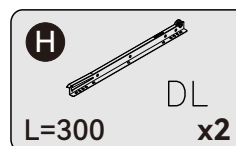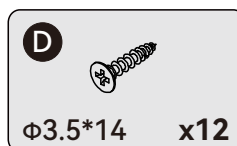
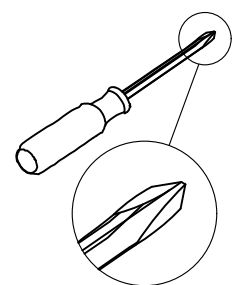


 As shown in the figure, screw D is used to secure accessory H to boards 21 and 22.

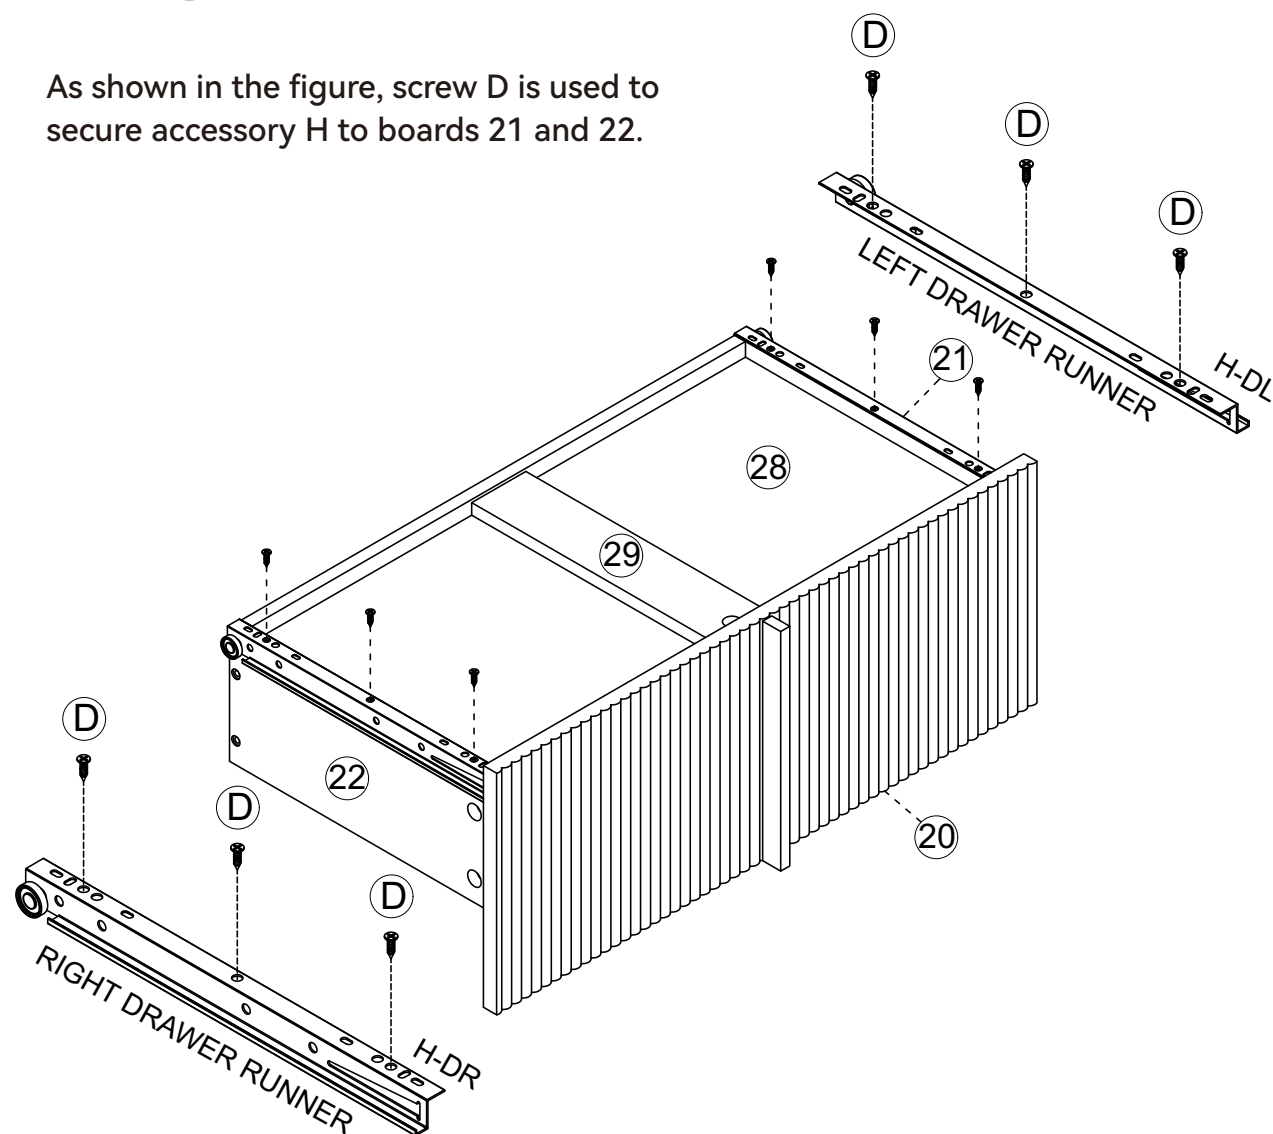


X2

 
 
Step 31

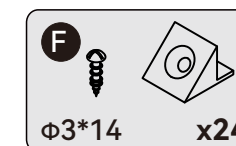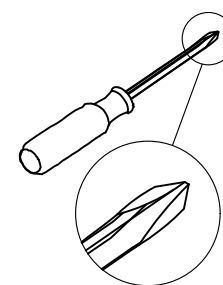

 
Insert the plastic buckle into the slot on the back panel, pass the strap through the hole in the plastic buckle, and lock it in place.

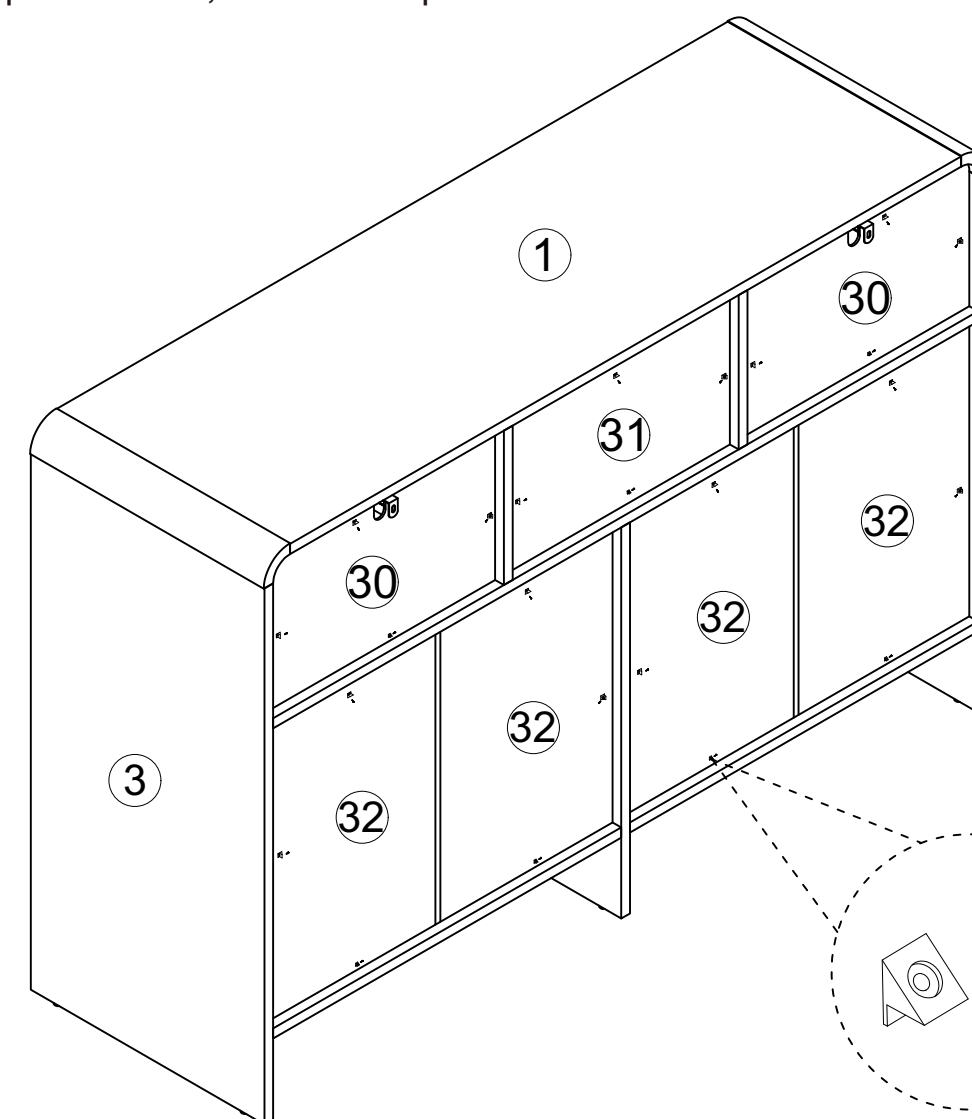

  
Step 32

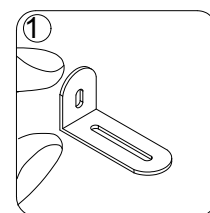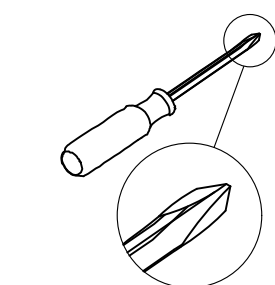

 
1. Make marks on the wall.

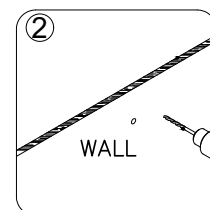



 
2. Drill two holes with a diameter of 6 mm in the wall.

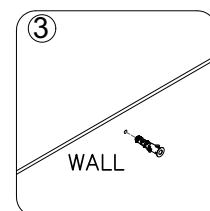

 3. Place two anchors into the holes

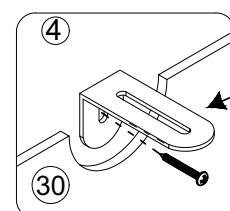

   4. Use long screws to secure the accessory to the wall.

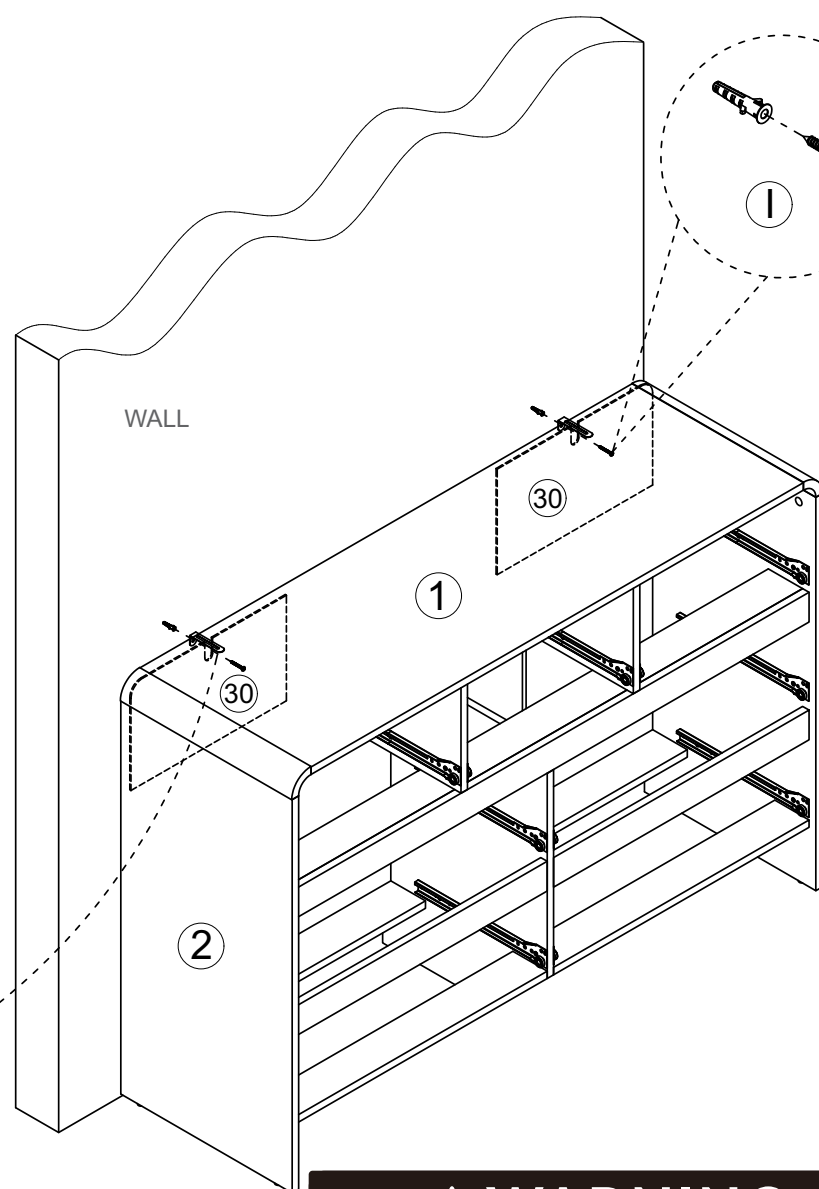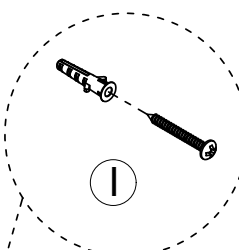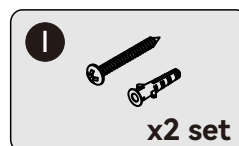

⚠ WARNING



 
Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




This is a permanent label. Do not remove!


Step 33

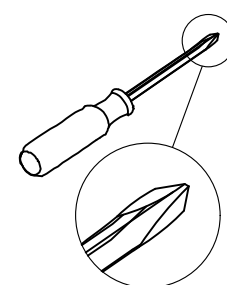

 Slide drawers 16, 17, 18, 19, and 20 in order to complete the assembly of the cabinet.

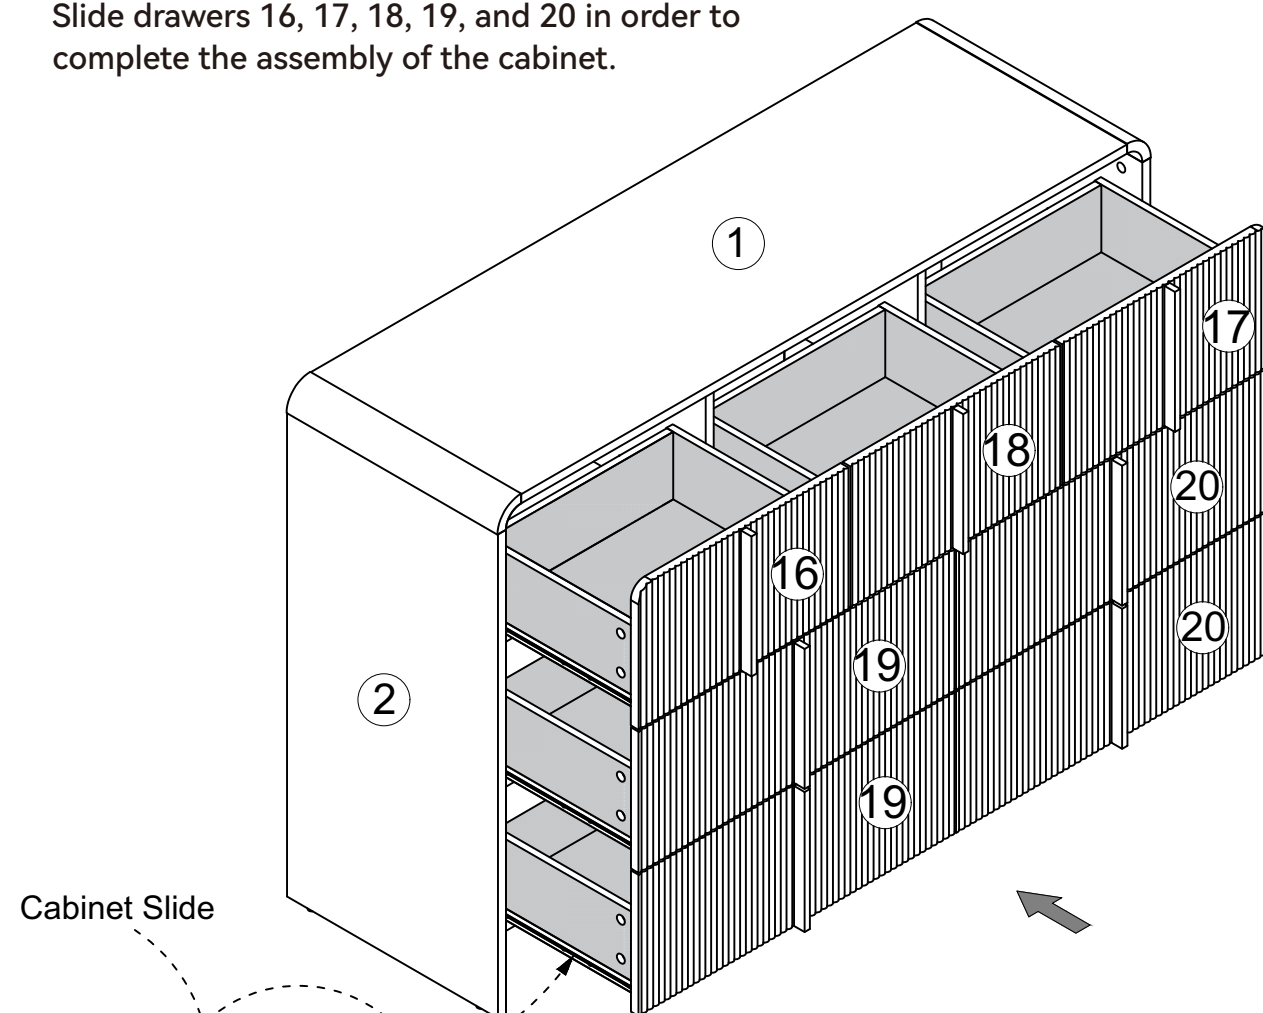

Cabinet Slide

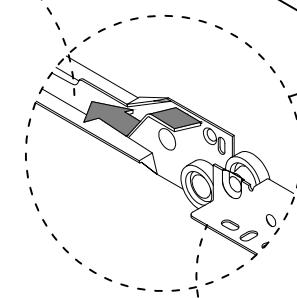 

Drawer Slide