 


Cabinet

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

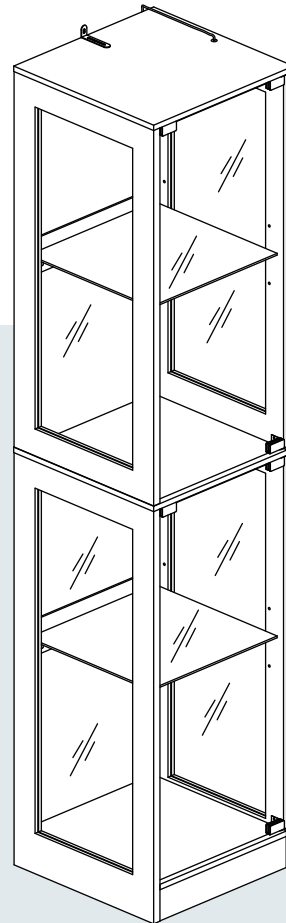

Dimensions

Width-15.7 inch
Depth-15.7 inch
Height-70.2 inch

CONTACT US

- **Email: service@grandtunnel.com**
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

EN



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type



Safety Instructions / Warnings

Please read and follow all instructions carefully before installation and use.

- **WARNING: Risk of electric shock – Do not open or disassemble electrical parts.**
- Use only the power cord specifically provided for this product. Adaptor Input: 100-240V~, 50/60Hz, 0.5A, 30W. Output: DC 12V, 2.0A.
- Do not use with damaged power cords or plugs.
- Keep power cables away from moving or sharp parts of the furniture.
- Do not use extension cords or power strips unless specifically approved for the load.
- This product is **not a toy**. Do not allow children to play with electrical components or moving parts.
- Children under 8 years old must be kept away from the furniture unless continuously supervised.
- Keep remote controls, control switches, and ports **out of children's reach**.
- Always **disconnect the product from power** before cleaning, maintenance, or relocation.
- Do not attempt to open, modify, or repair electrical components.
- **Repairs must be performed by qualified professionals only.**
- Do not insert any foreign objects into openings or mechanisms.
- Clean with a dry cloth or a slightly damp soft cloth. Do not use solvents.
- This product is intended for **indoor use only** in dry environments.
- Do not expose the furniture to moisture, liquids, or direct sunlight.
- Ensure stability and clearance around any moving parts (e.g., lift mechanisms, recliners).
- Do not overload power outlets or USB ports beyond the specified ratings.

FCC Information

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This product may cause harmful interference.
2. This product must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the distance between the product and receiver.
- Connect the product to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

- By Email:

Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

- Customer Service Email: service@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:

 
 
 
 
 
 
 
 
 
 
 
- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

Parts List - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A  6*30mm Wooden Dowel x 24	B  6*35mm Cam Bolt x 28	C  Cam Lock x 28
D  6*15mm Wooden Dowel x 4	E  4*40mm Screw x 4	F  4*14mm Screw x 16
G  x 16	H  x 1	I  x 1
J  x 1	K  x 2	L  2.5*12mm Screw x 2
M  x 2	N  x 8	O  x 2
P  x 2	Q  x 2	R  x 2
S  x 2		

Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws

mm

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



The screws length is measured from the head to the point (30mm screw shown).

 
0 1 2 3

inch

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

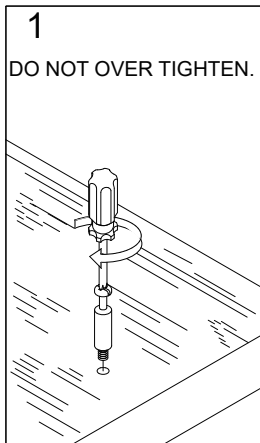

Step 2

 
Push the male camlock into the entry hole.

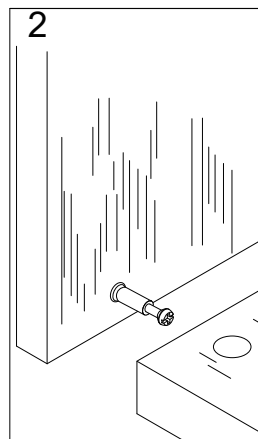

Step 3

Insert the female camlock as shown in the instructions.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

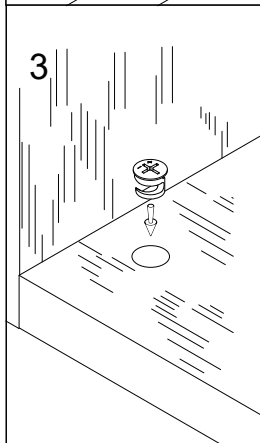


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

 The joint is now secure.

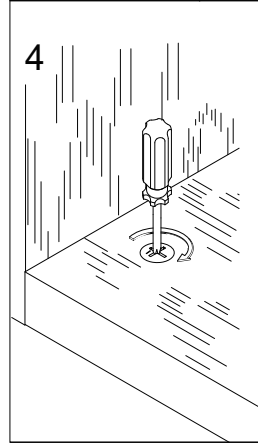


Parts List - Panels

 
Please check you have all the panels listed below

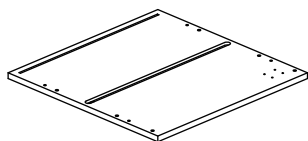


1 (400x400x12mm x1)

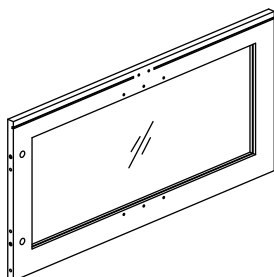 


2 (838x399x18mm x1)

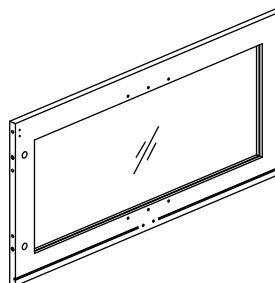 


3 (838x399x18mm x1)

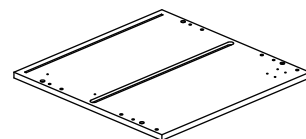 


4 (400x400x12mm x1)

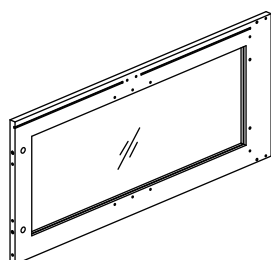 


5 (920x399x18mm x1)

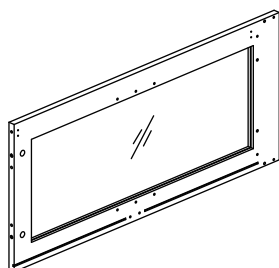 


6 (920x399x18mm x1)

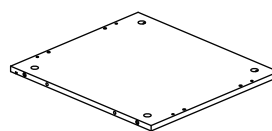 


7 (362x400x12mm x1)

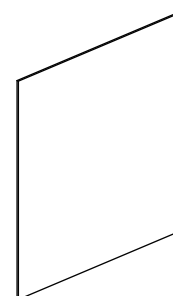 


8 (385x370x3mm x3)

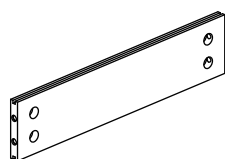 


9 (362x80x12mm x2)

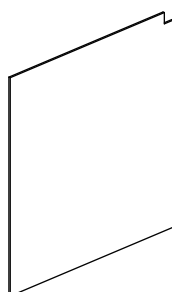 


10 (385x370x3mm x1)

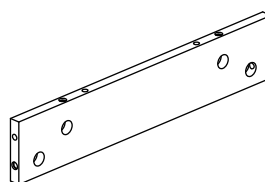 

11 (362x70x12mm x2)

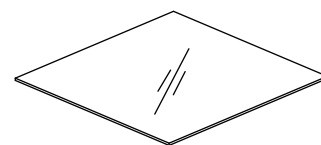 


12 (360x350x4mm x2)

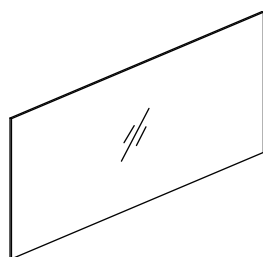 

13 (826x355x4mm x2)

 Assembly Instructions





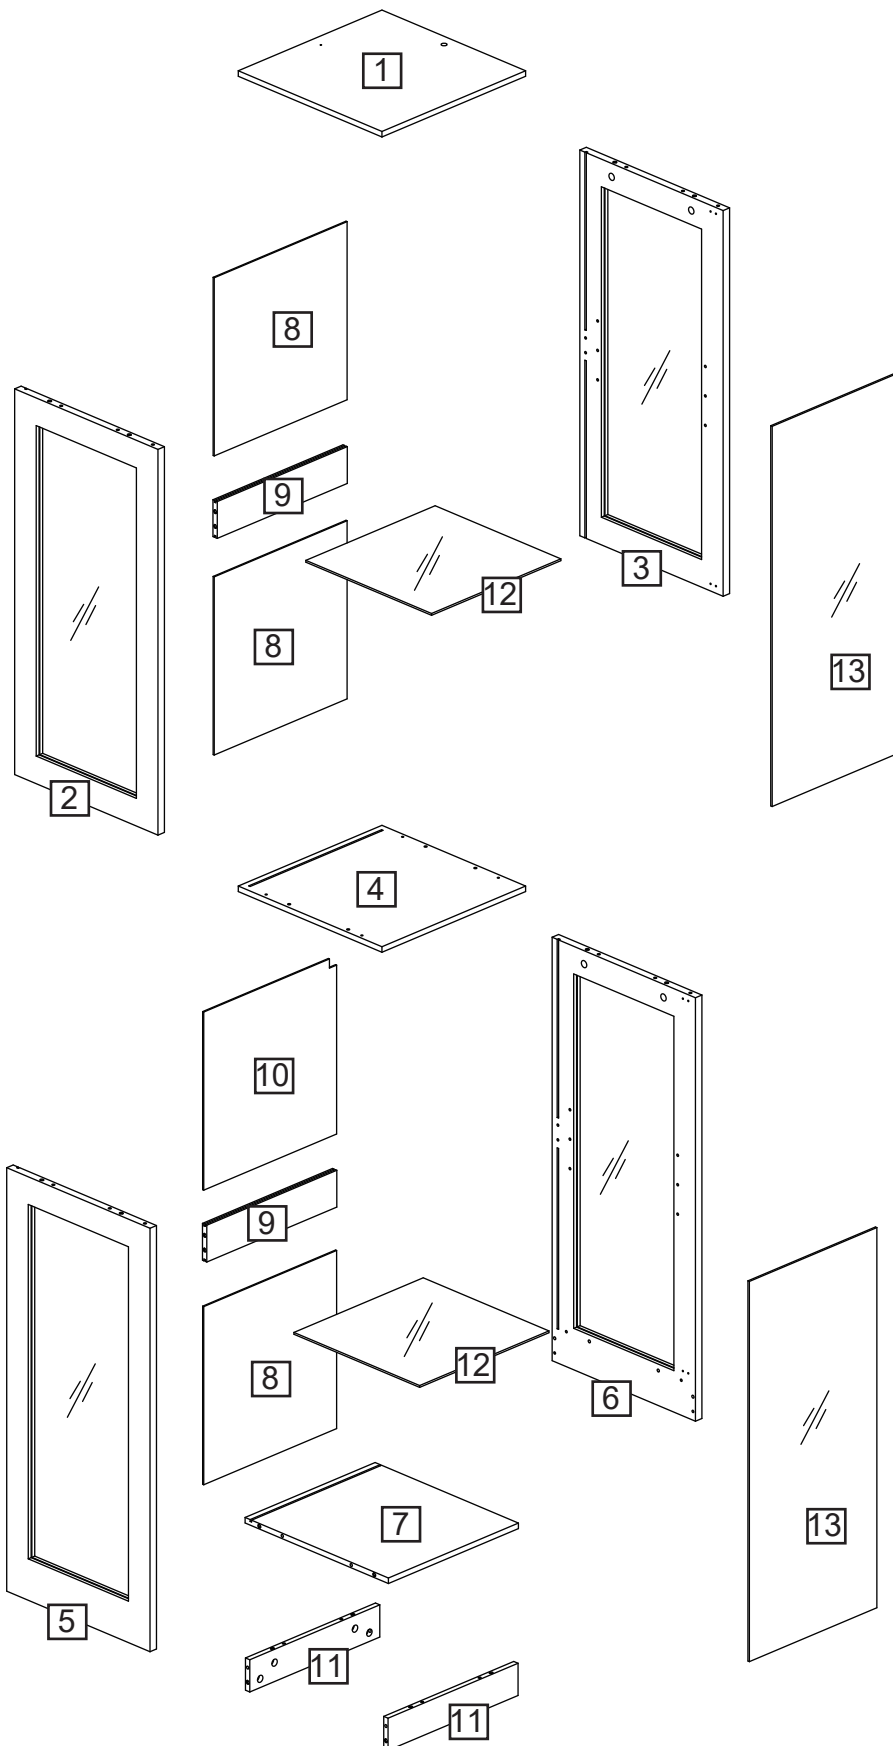


Assembly Instructions




Step 1

CAM-LOCK

     Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

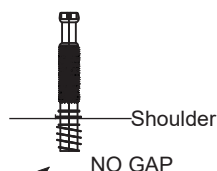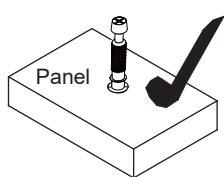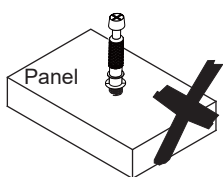

Secure the cam pin (B) to panel (7).

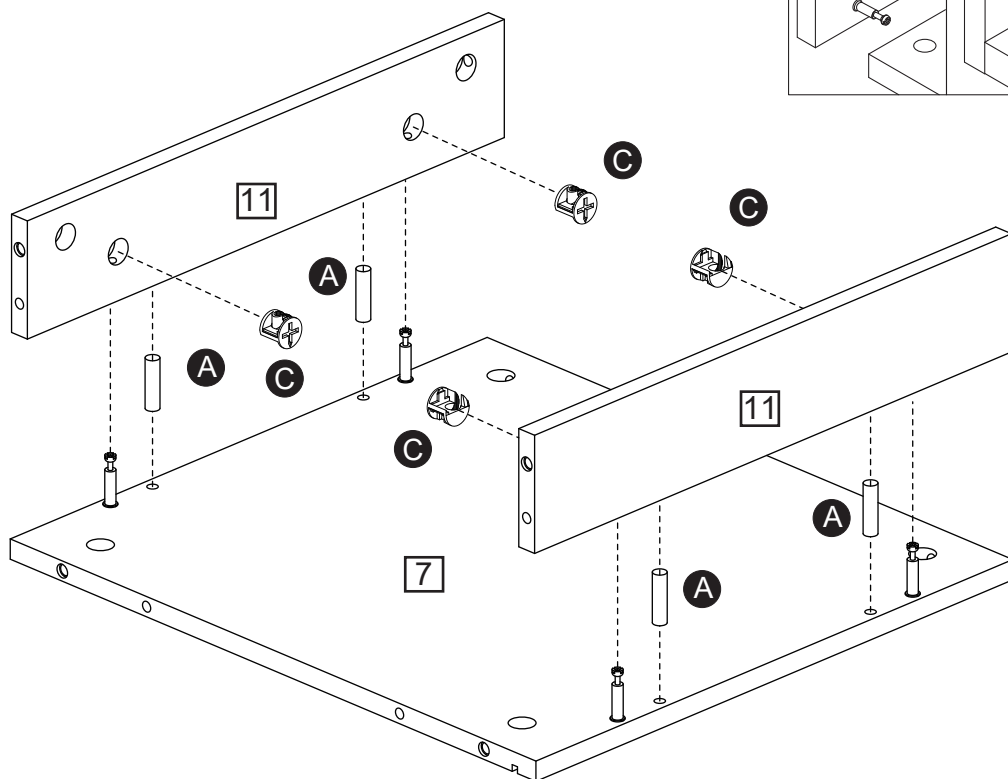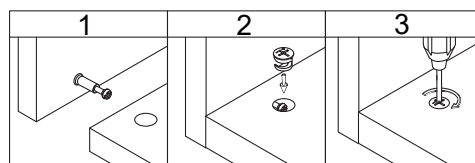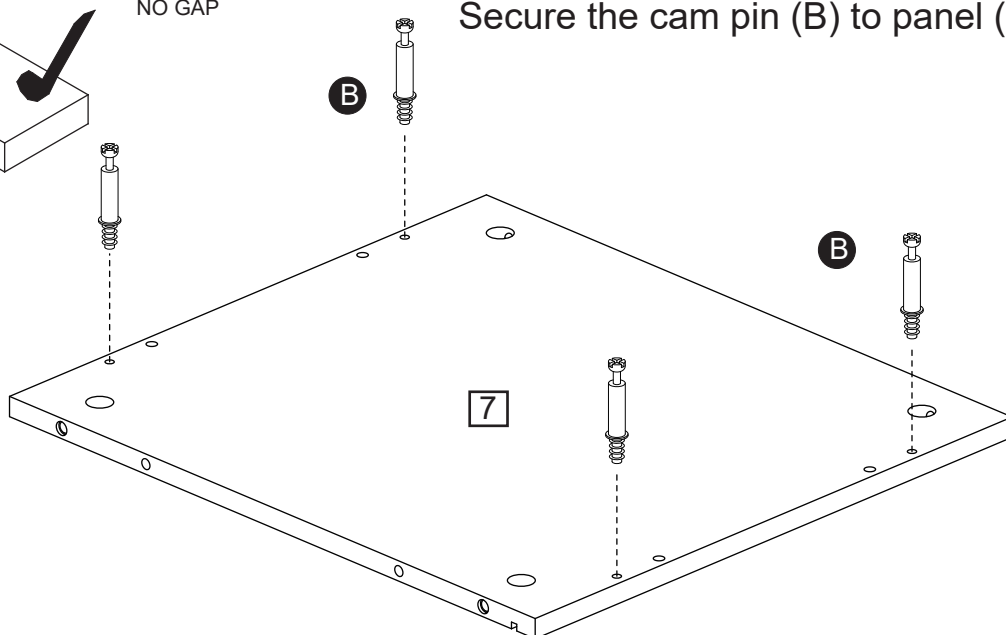   


Insert the dowel (A), assemble panels (11) onto panel (7), insert the cam nut (C), and tighten.

Assembly Instructions


Step 2

CAM-LOCK

 Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

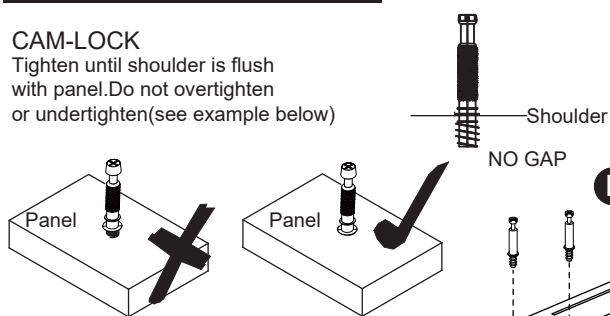

B x12

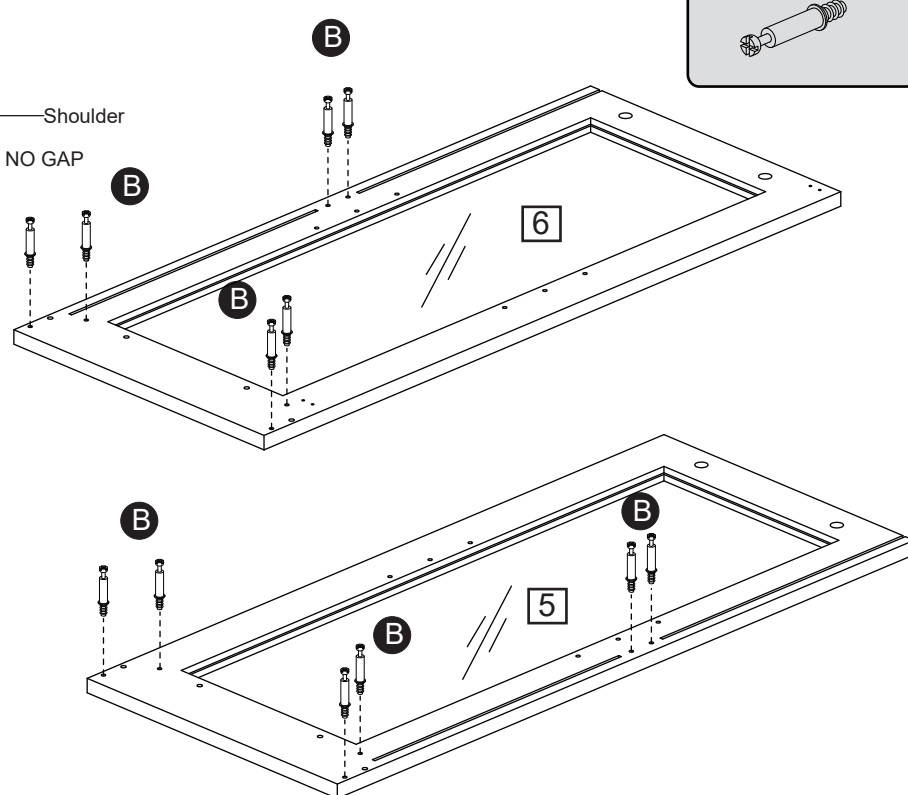 

Secure the cam pin (B) to panels (5) and (6).

 
 
Step 3

A x4

6x30mm




C x6

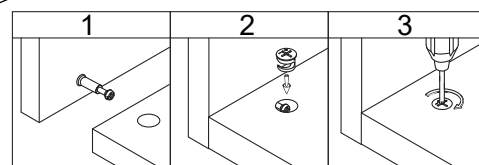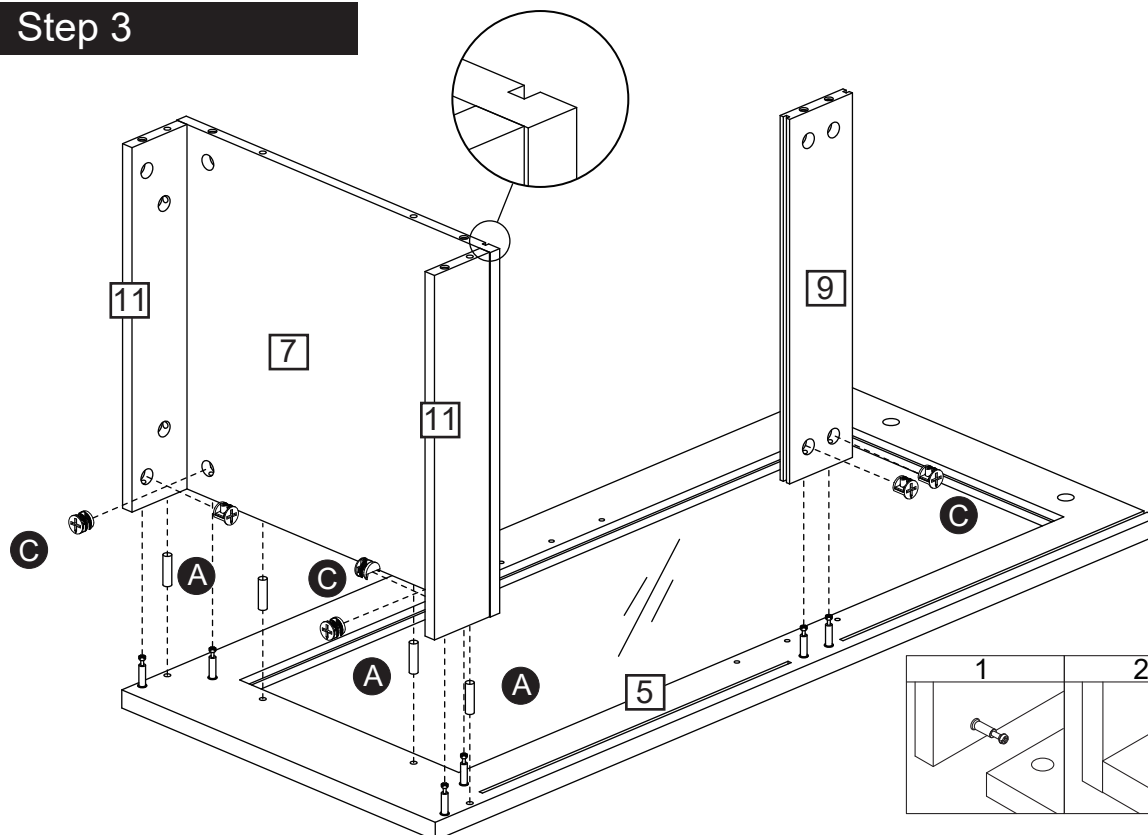

Insert the dowel (A), assemble panels (7) and (11) onto panel (5). Insert the cam nut (C) and tighten. Assemble panel (9) onto panel (5). Insert the cam nut (C) and tighten.

Assembly Instructions

 
Step 4

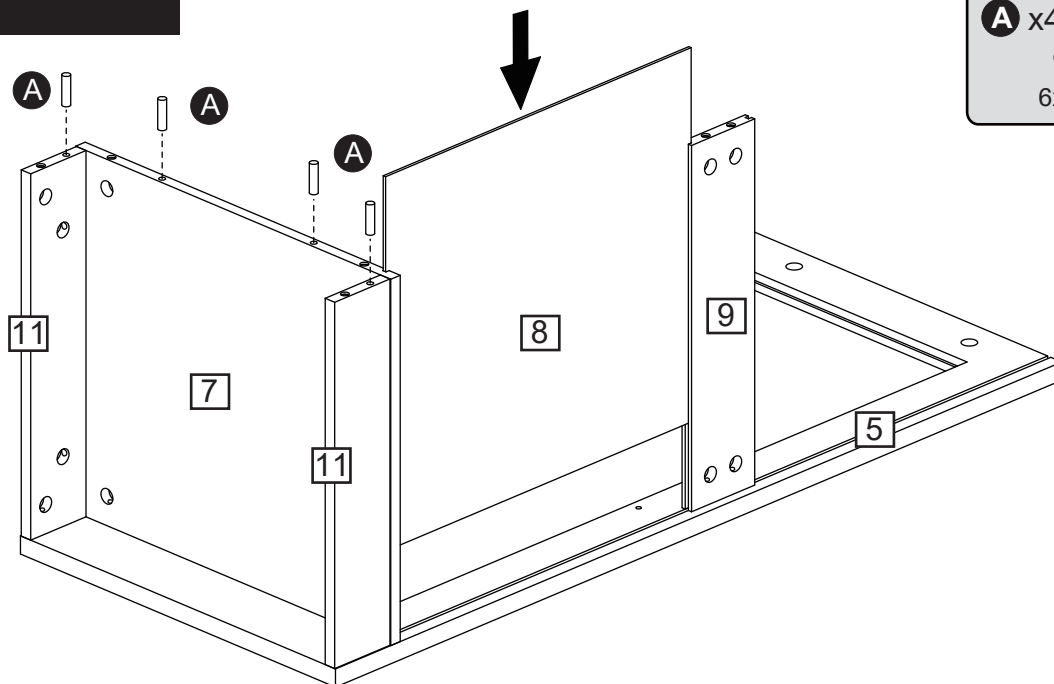


A x4
6x30mm

Insert the dowel (A) into panels (7) and (11). Insert panels (8) into the slots of panels (5), (9), and (11).

 Step 5

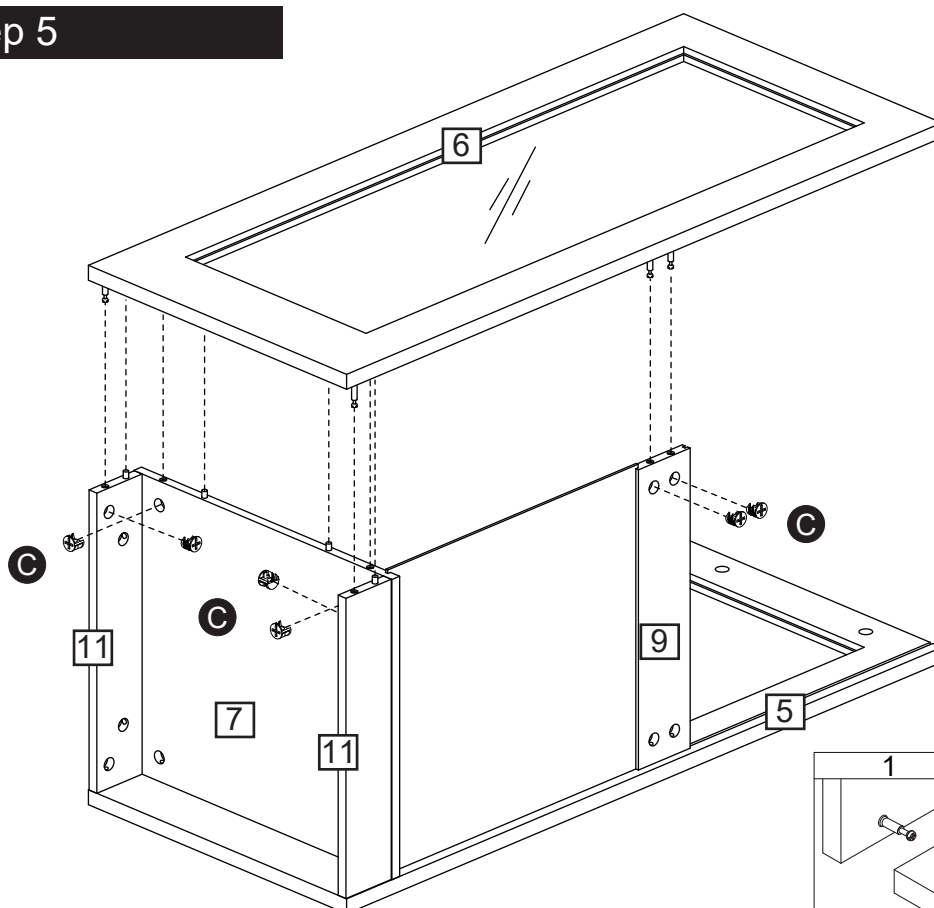


C x6

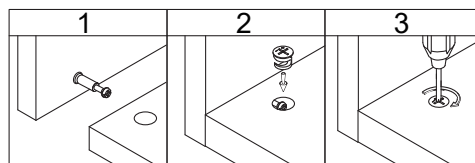 

Assemble panel (6) onto panels (7), (9), and (11). Insert cam nut (C) and tighten.

Assembly Instructions

 Step 6

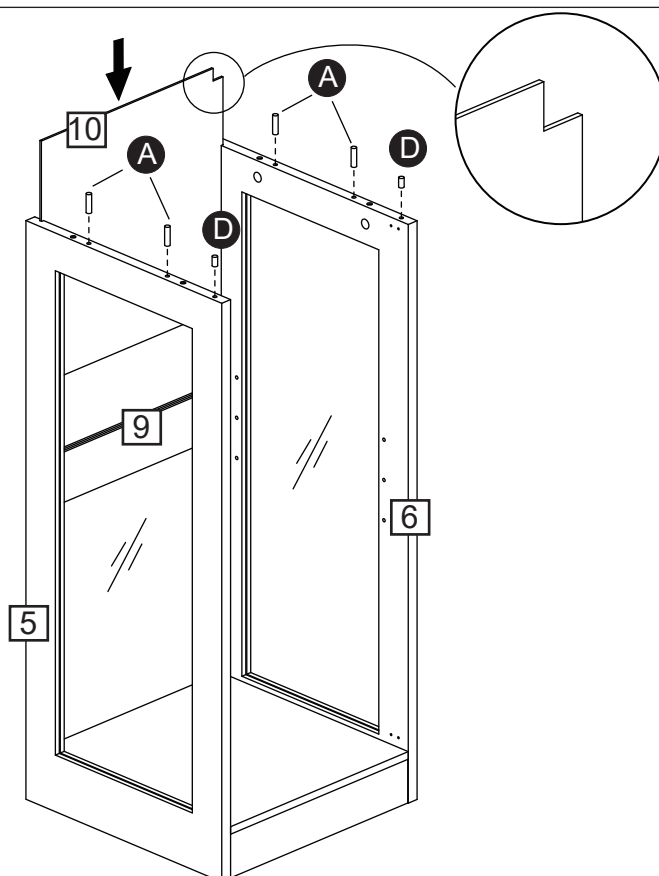

A x4
6x30mm

 
 
 
D x2
6x15mm

Insert dowels (A) and (D) into panels (5) and (6). Insert panel (10) into the slots of panels (5), (6), and (9).



Step 7

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

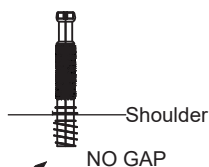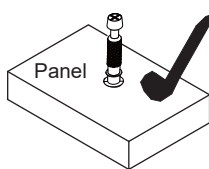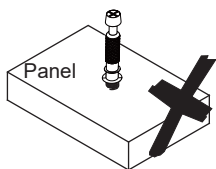


B x4

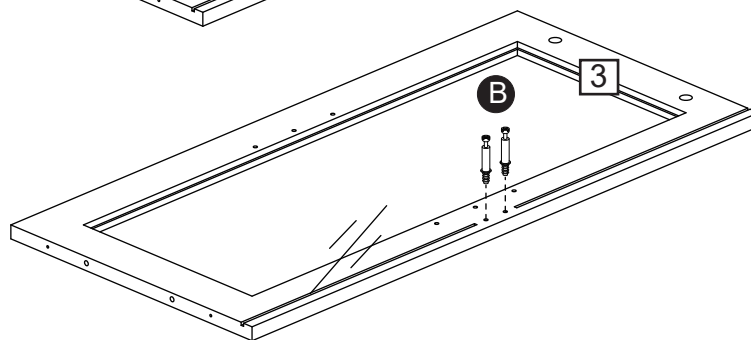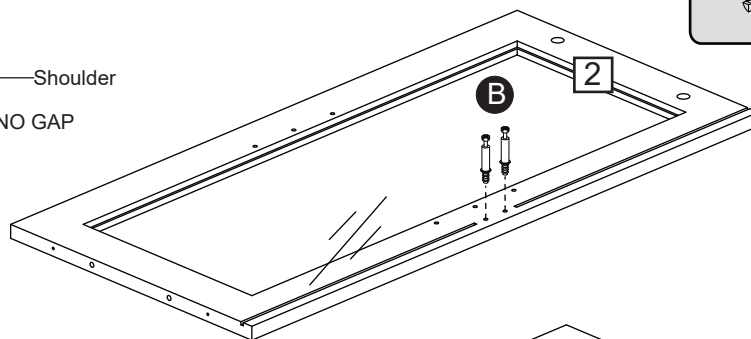  

Lock cam pin (B) onto panels (2) and (3).



Assembly Instructions

 Step 8

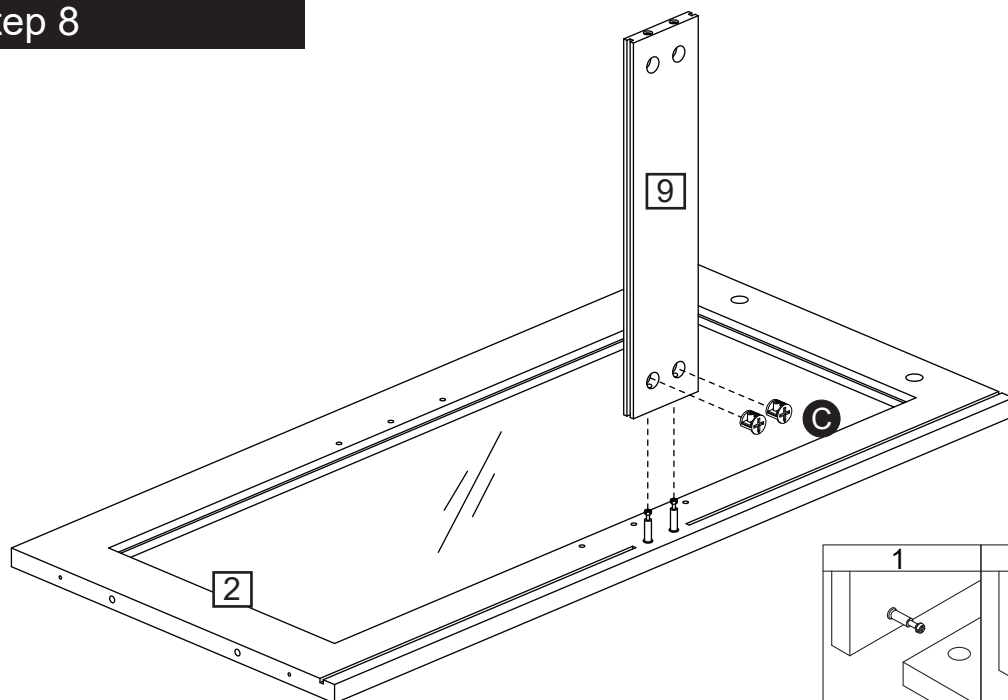

Assemble panel (9) onto panel (2). Insert cam nut (C) and tighten.

  
Step 9

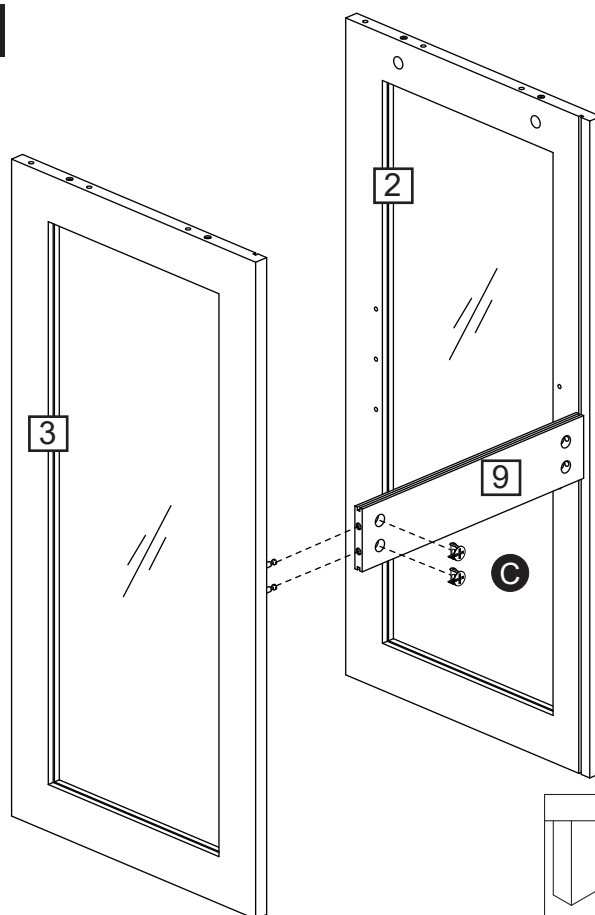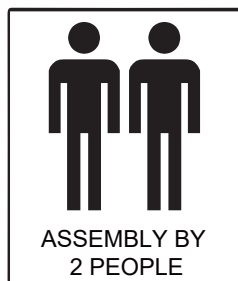

Assemble panel (3) onto panel (9). Insert cam nut (C) and tighten.

Assembly Instructions

 Step 10

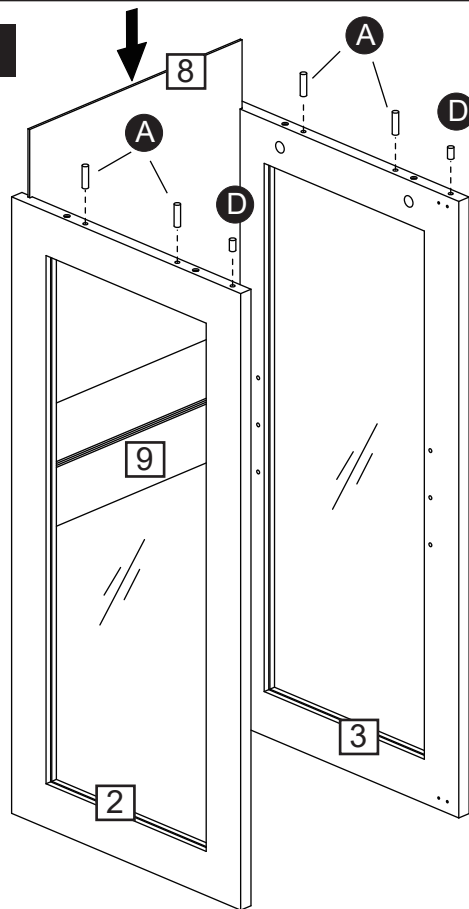

A x4



6x30mm

D x2



 
 
6x15mm

Insert dowels (A), (D) into panels (2), (3). Insert panels (8) into the slots of panels (2), (3), (9).


Step 11

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

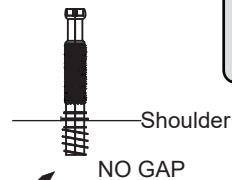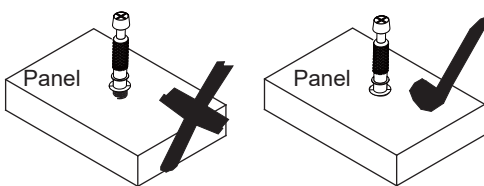

B x4


 


F x4




4x14mm

  O x1

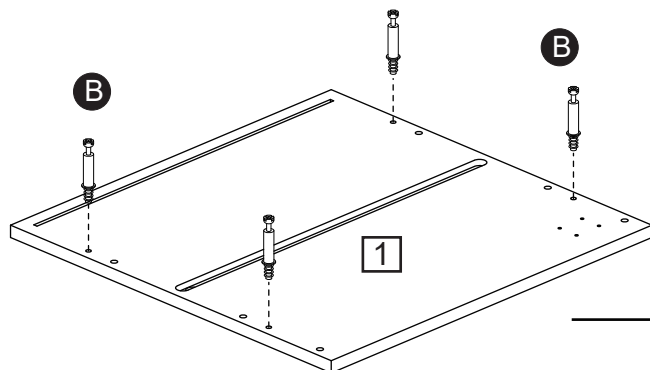



Lock cam pin (B) onto panel (1).

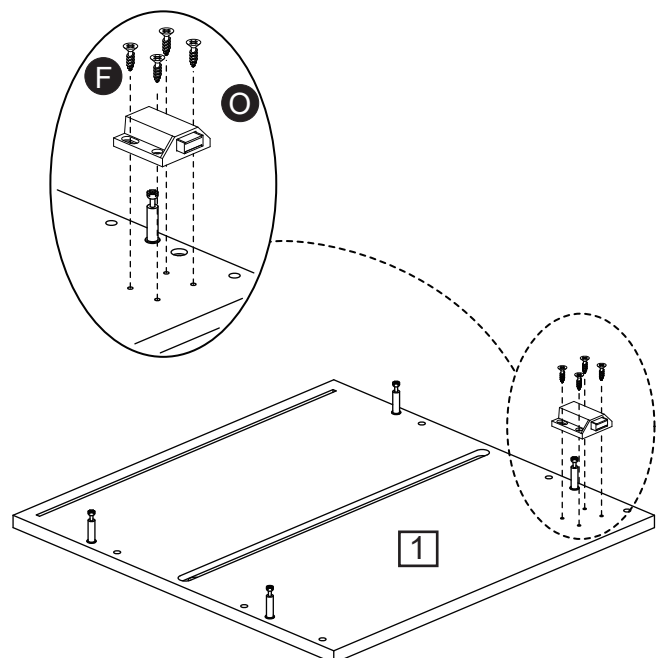 


Assemble part (O) onto panel (1) using screw (F).

Assembly Instructions

  Step 12

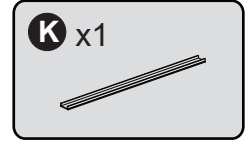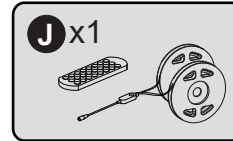


 Thread the long LED strip (J) through the circular hole in panel (1). Press part (K) onto the LED strip groove of panel (1).

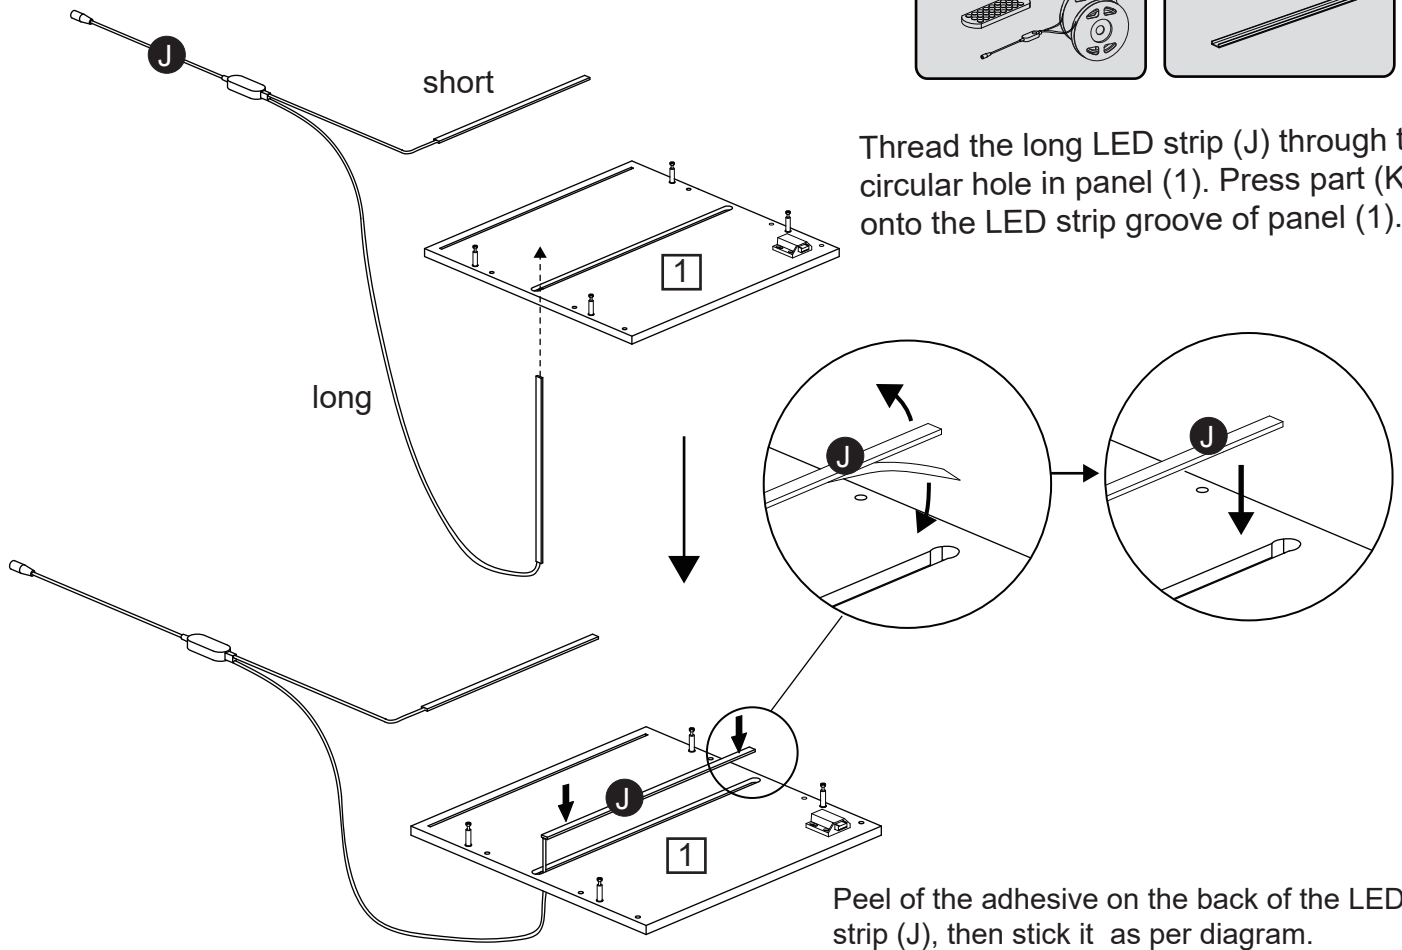

Peel of the adhesive on the back of the LED strip (J), then stick it as per diagram.

 
NOTE: If the light strip is stuck in the wrong position during application, re-sticking it will reduce its adhesiveness and may even damage the surface of the wood panel. Therefore, it is recommended that you first clean the surface of the wood panel, position the light strip correctly, then peel off the backing adhesive, and complete the proper adhesion in one go.

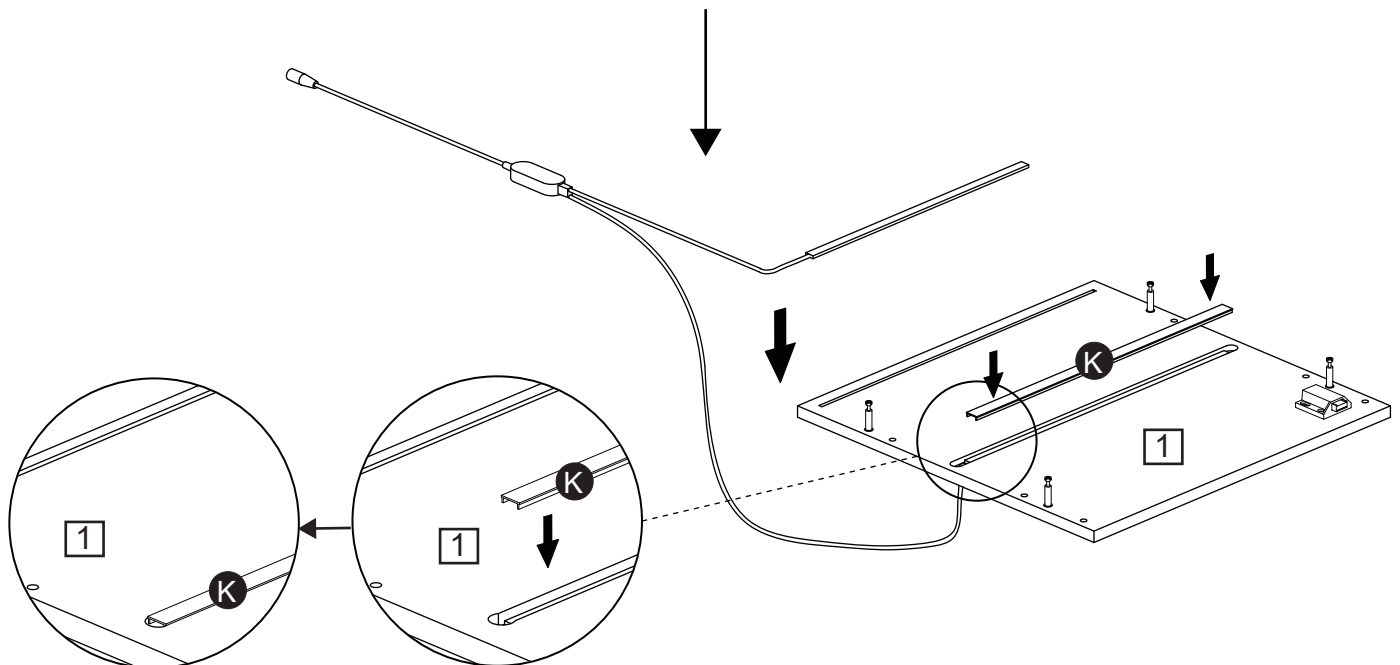

Assembly Instructions

Step 13

 The groove is here

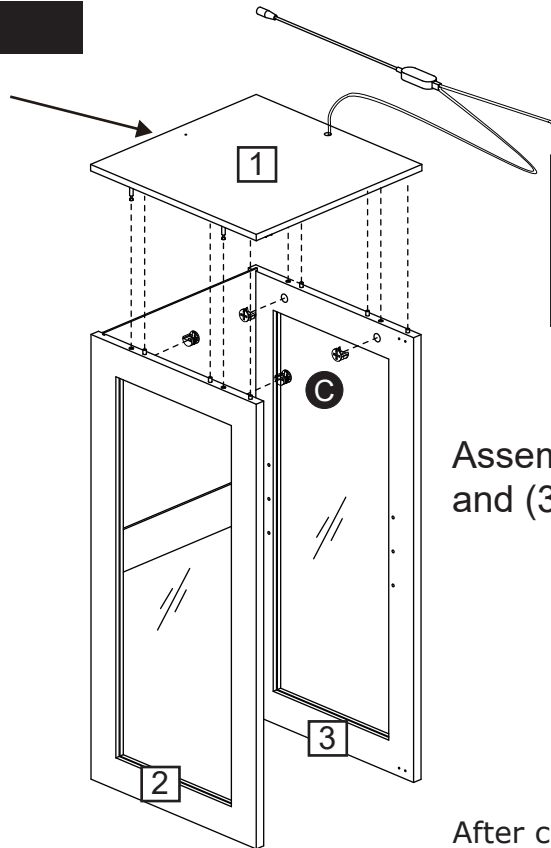

C x4



 
Assemble panel (1) onto panels (2) and (3). Insert cam nut (C) and tighten.



180°

After completing Step 13 , it is recommended that two people turn the product 180° to the next step.

Step 14

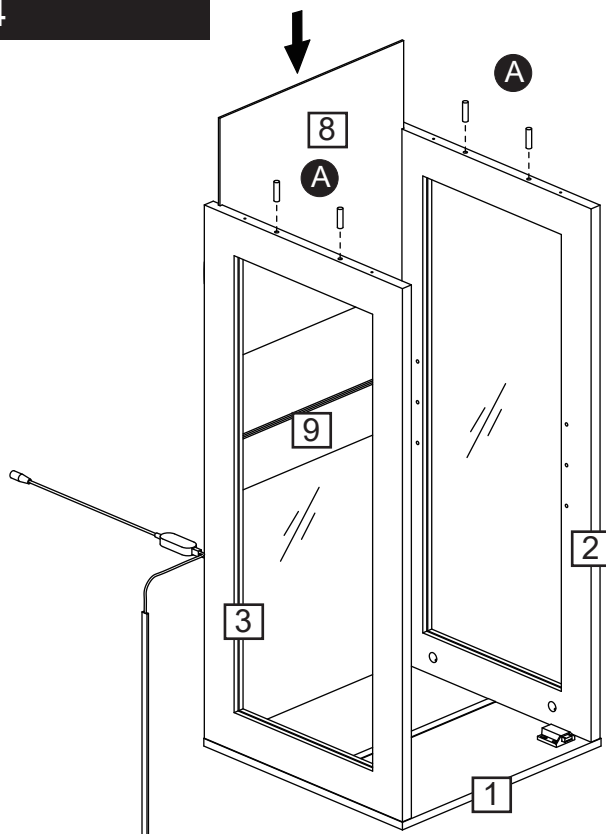

A x4



6x30mm

 
 
Insert dowel pins (A) into panels (2) and (3). Insert panels (8) into the slots of panels (2), (3), and (9).

Assembly Instructions


Step 15

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

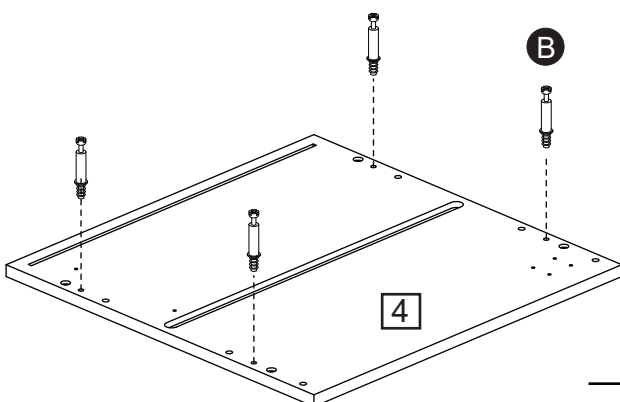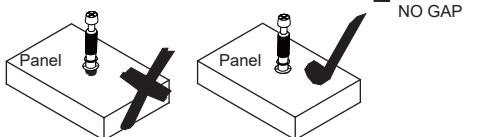

B x4



 


F x4

4x14mm



   O x1

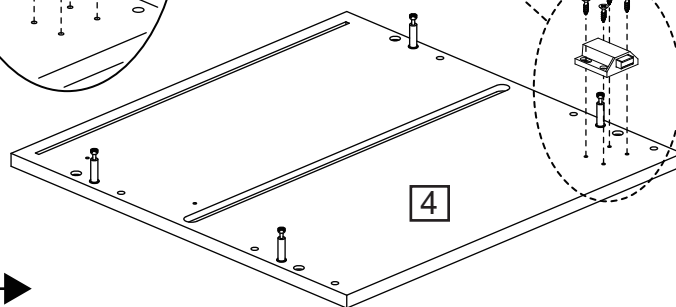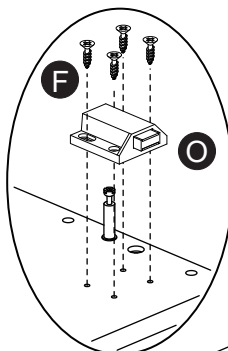


Lock cam pin (B) onto panel (4).

Assemble part (O) onto panel (4) using screw (F).

Step 16

E x4

 4x40mm

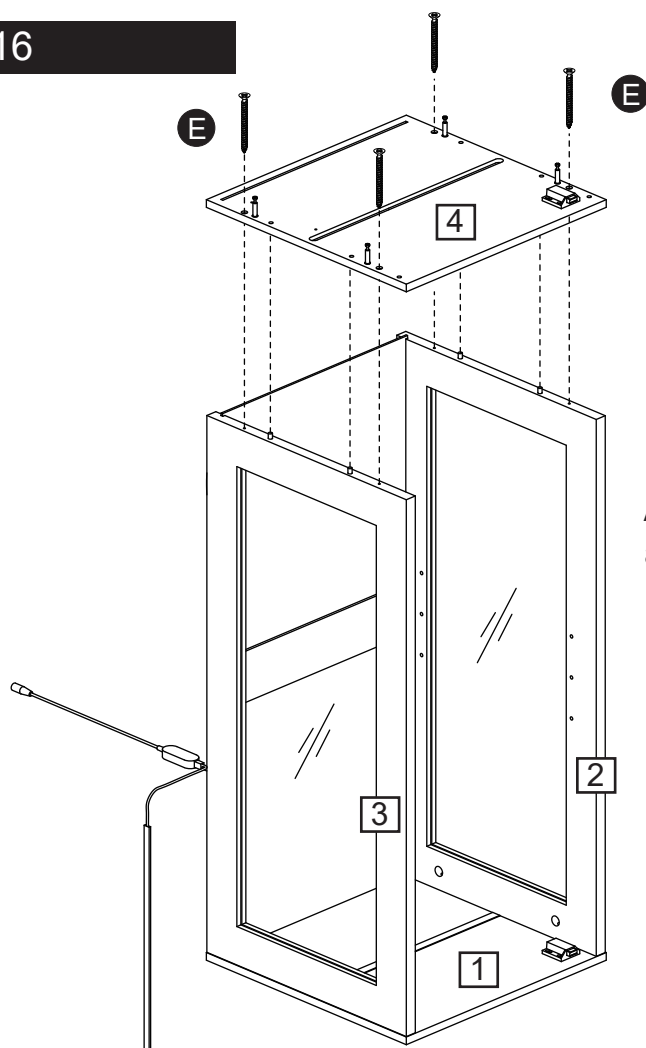


Assemble panel (4) onto panels (2) and (3) using screw (E). Insert cam nut (C) and tighten.




Assembly Instructions

Step 17

 Peel of the adhesive on the back of the LED strip (J), then stick it as per diagram.

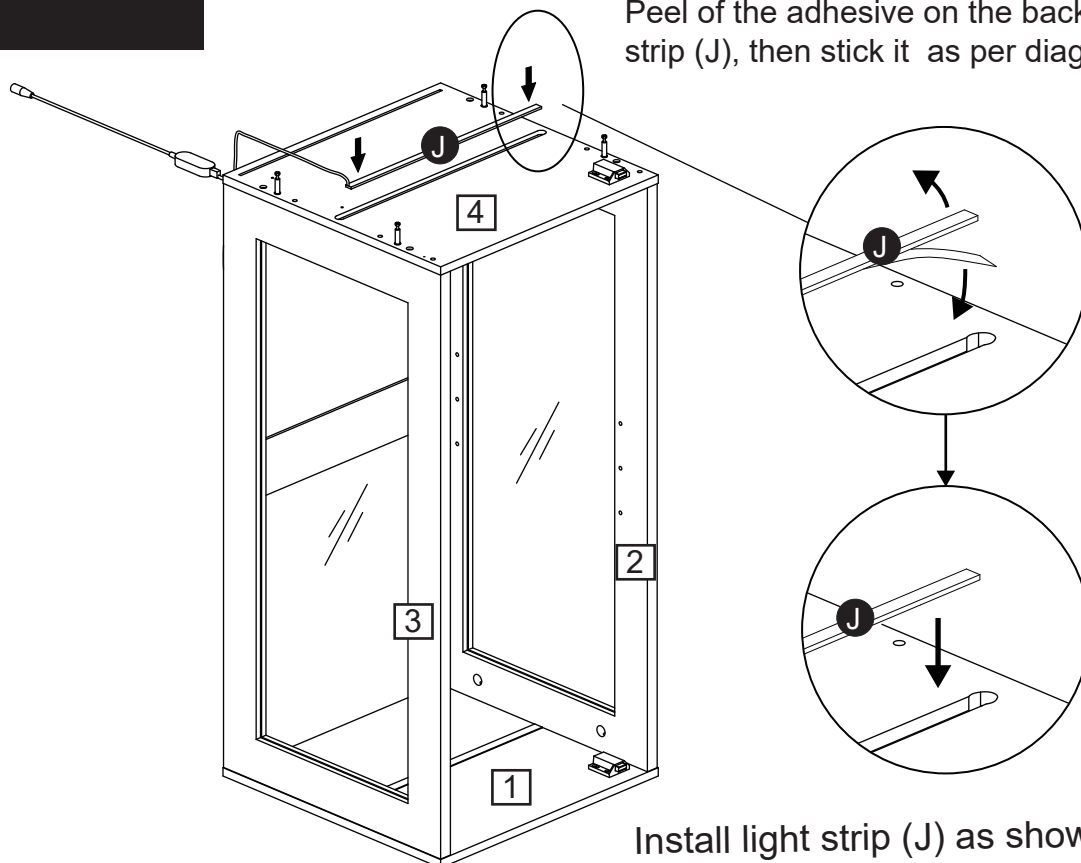

  
 
Step 18

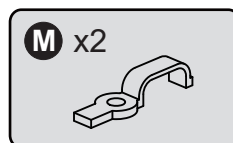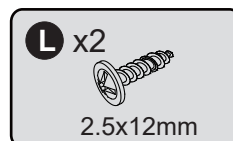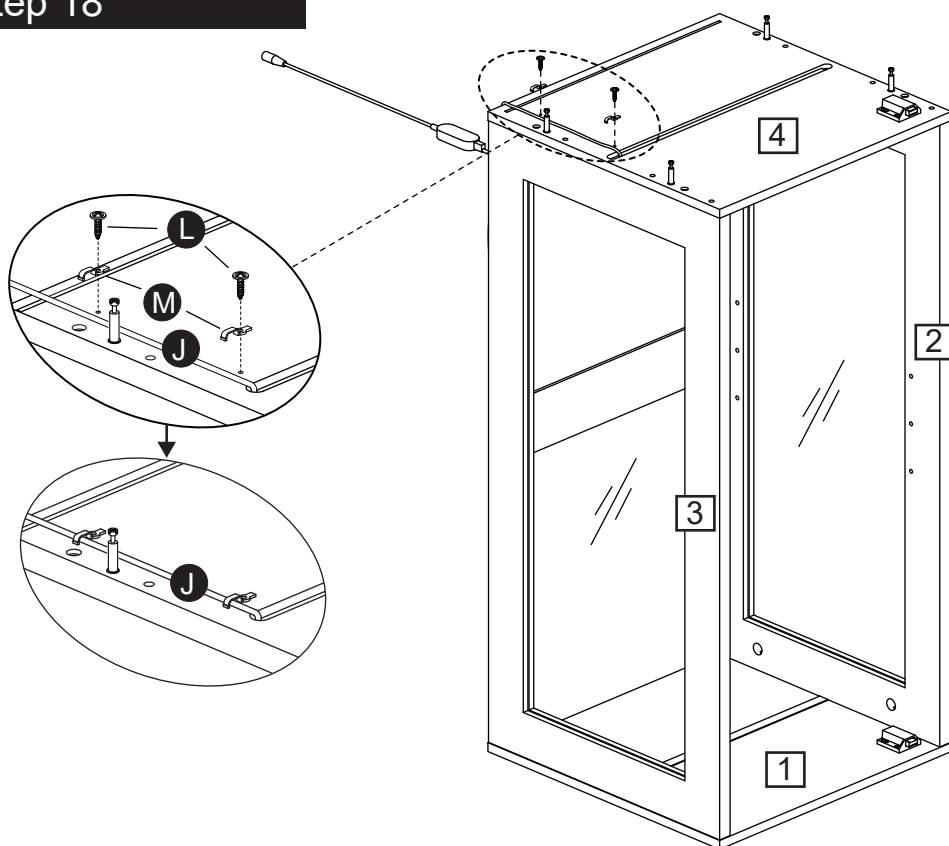

Assemble part (M) onto panel (4) with screw (L), securing the light strip.



Assembly Instructions

  Step 19

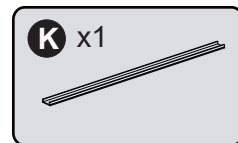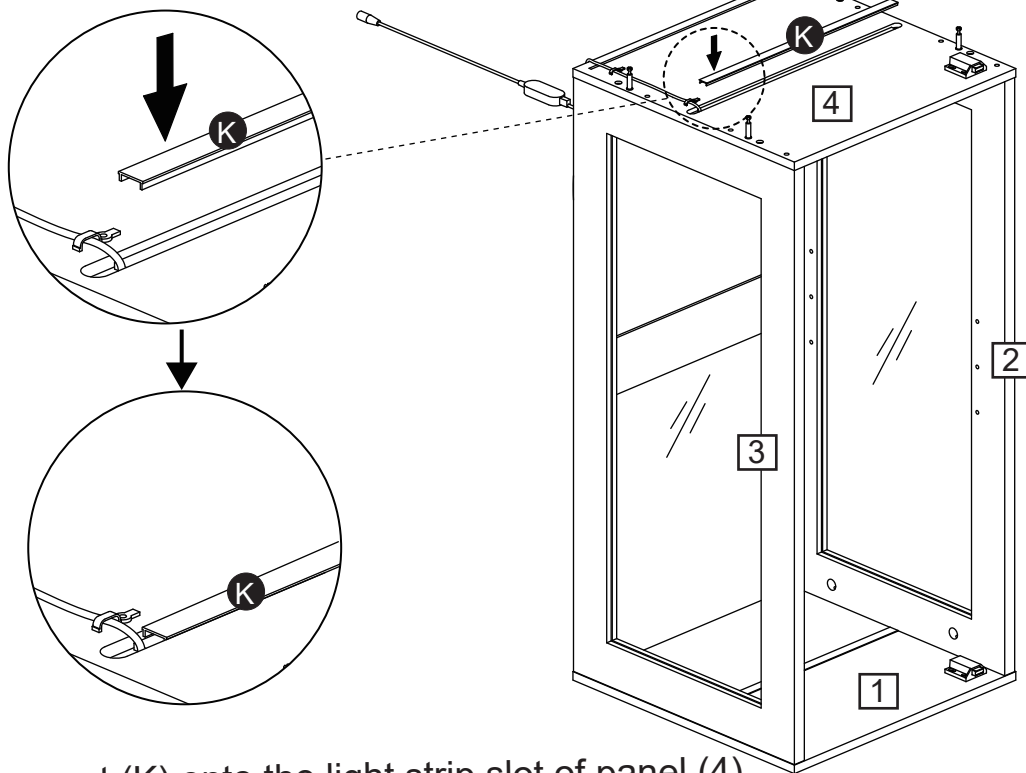


Press part (K) onto the light strip slot of panel (4).

  Step 20

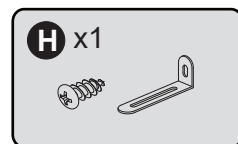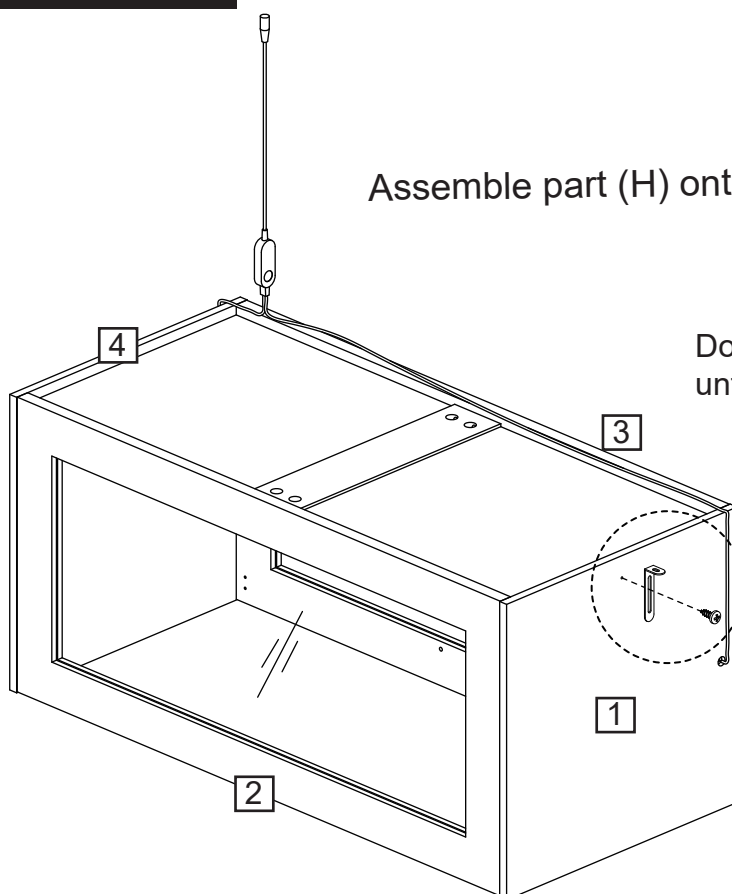




Assemble part (H) onto panel (1).

 Do not fully tighten wall fixing brackets until it's ready to be fixed to the wall.

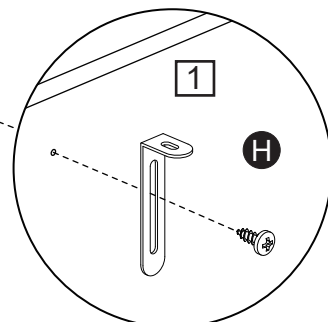


Assembly Instructions

   Step 21

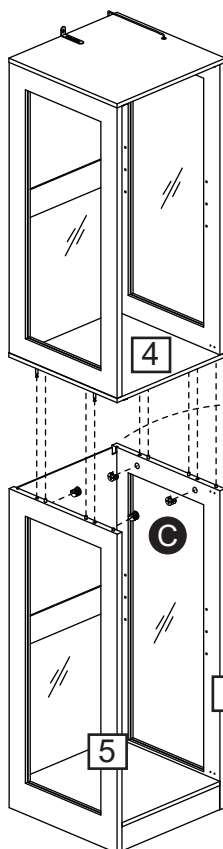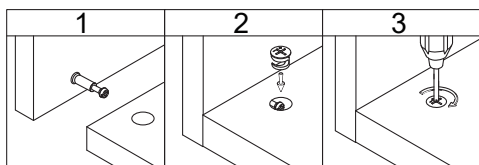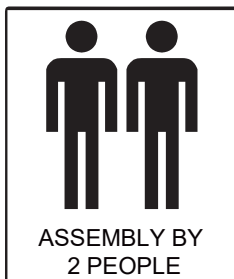



C x4

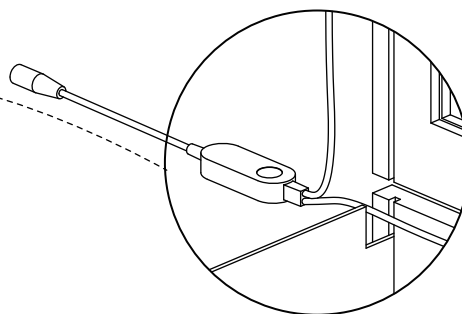 

6 With two people, assemble panel (4) onto panels (5) and (6). Insert cam nut (C) and tighten.

Step 22

  
Peel off the protective film from the surfaces of panels (2), (3), (5), and (6).

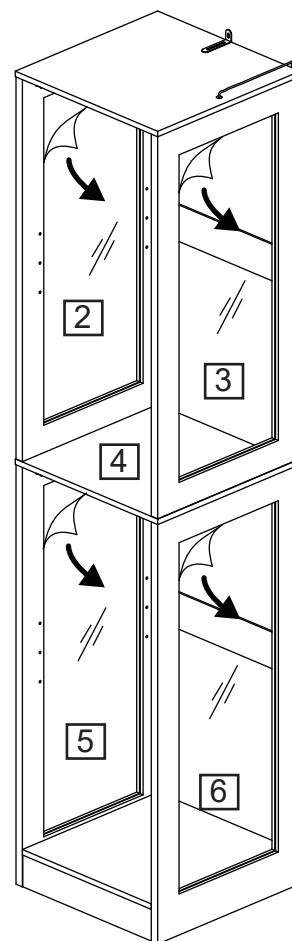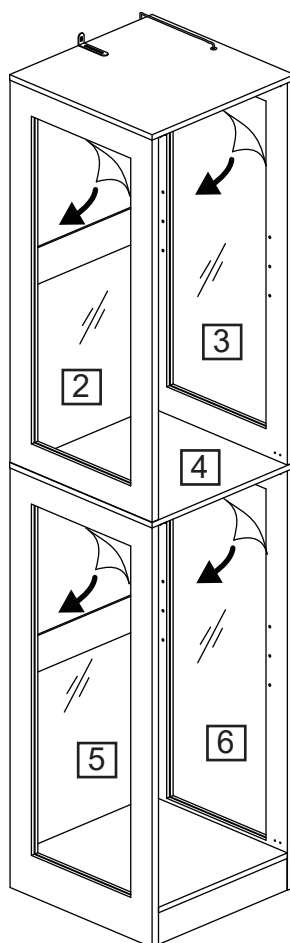

Assembly Instructions

Step 23


 
N x8

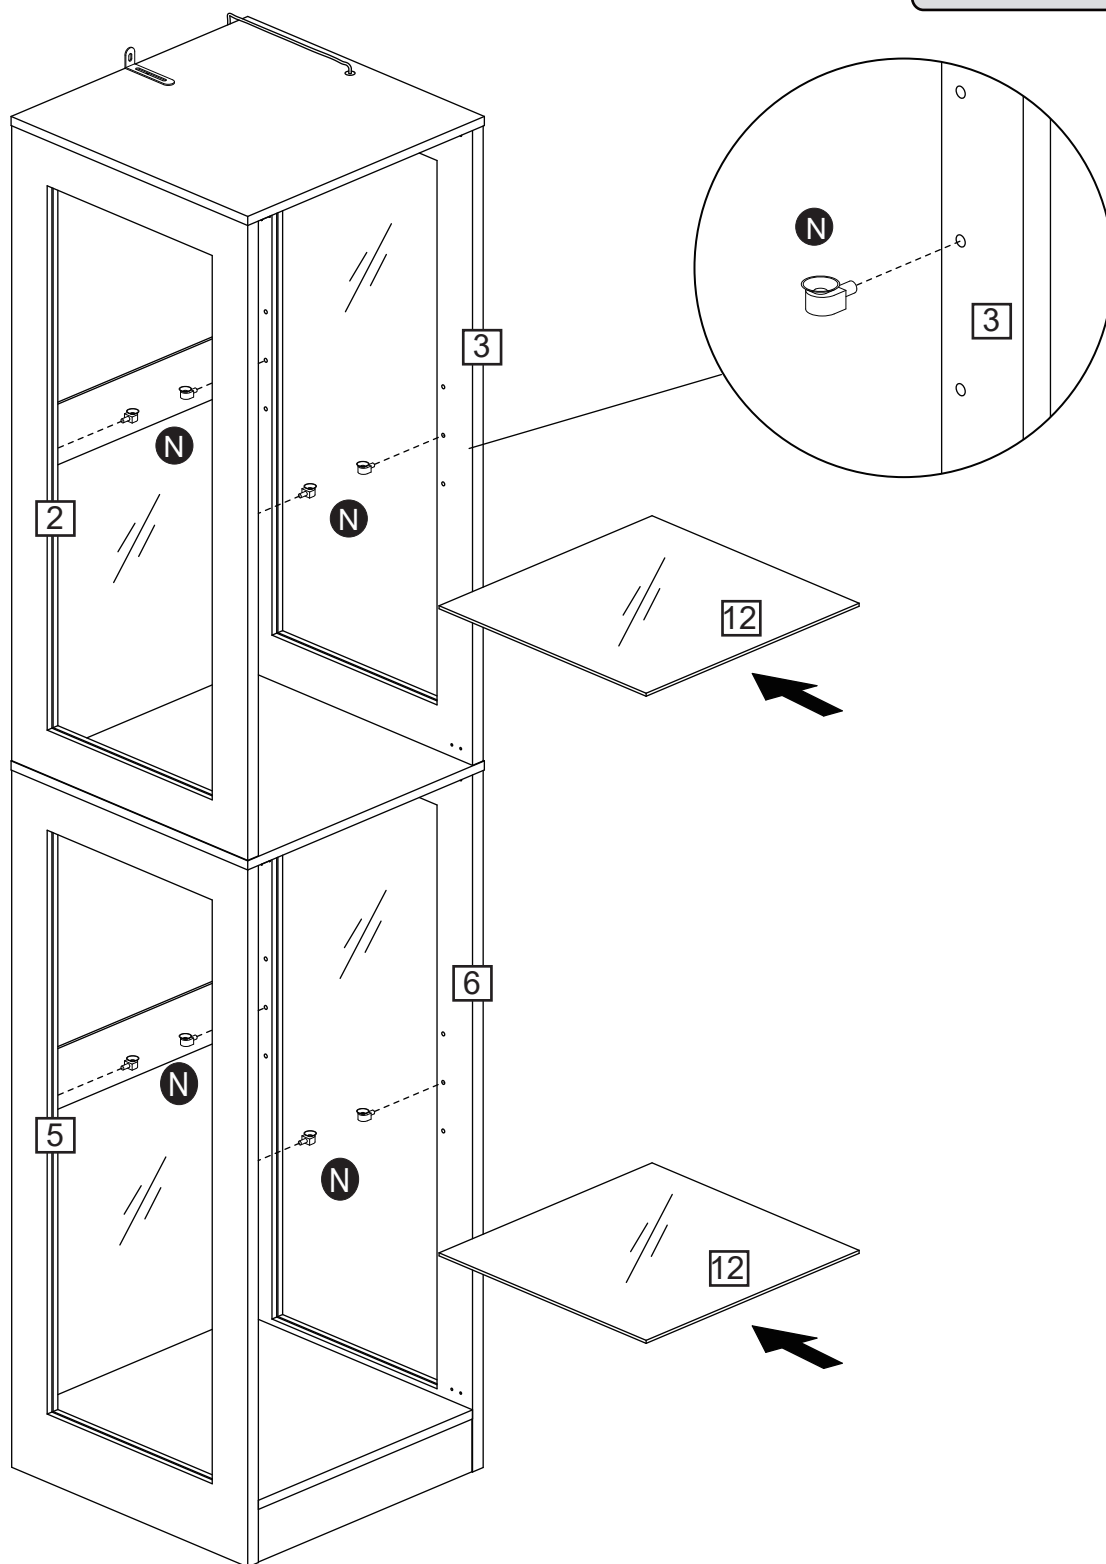

Insert shelf supports (N) into panels (2), (3), (5), and (6).
Place panel (12) into the cabinet body.

Assembly Instructions

  Step 24

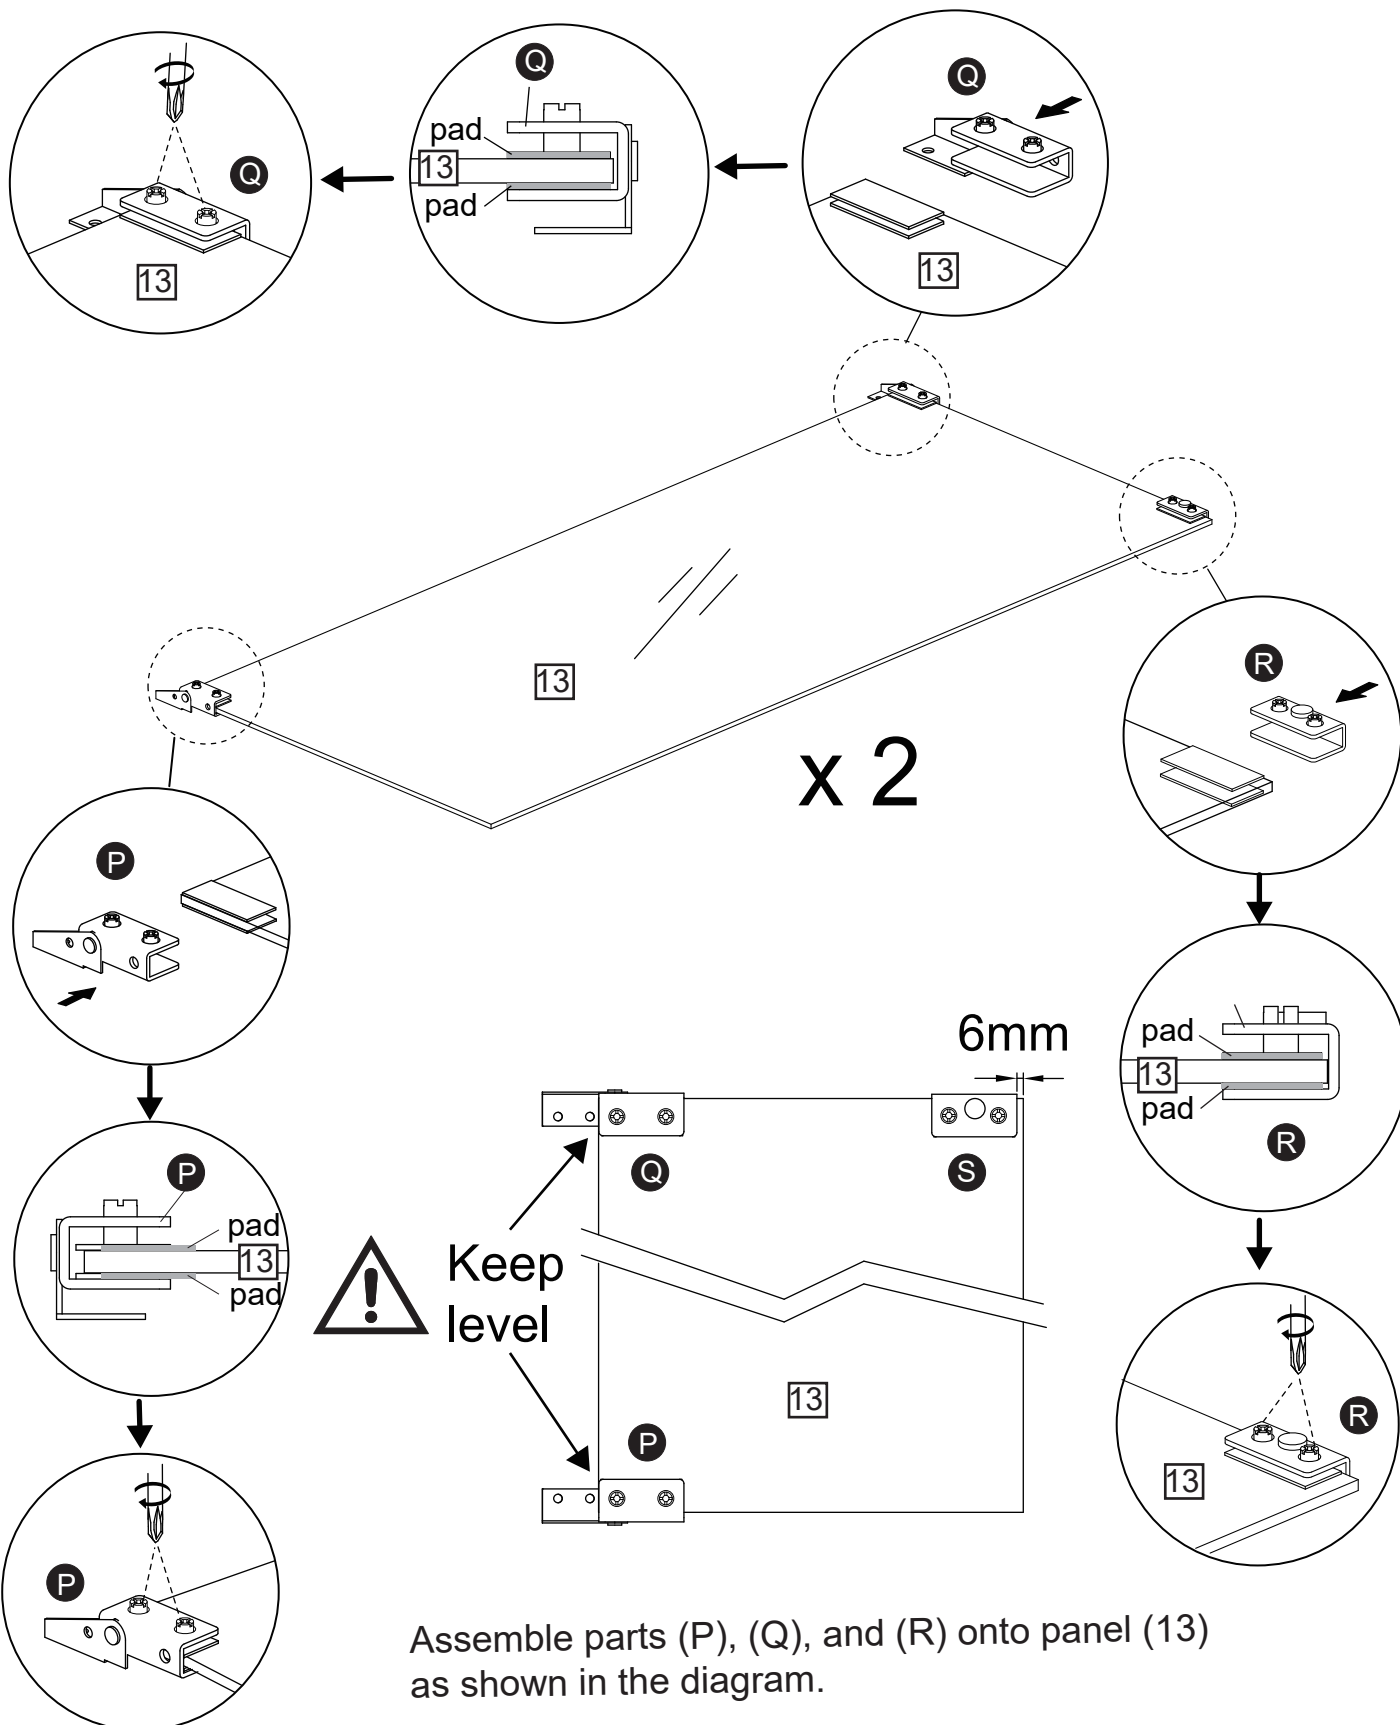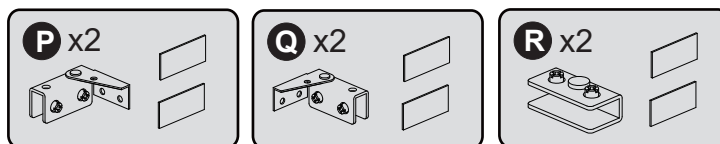



Assembly Instructions

Step 25

Two people are required for this step. Use screw (F) to attach panel (13) to the cabinet body.

F x8


 
 
4x14mm

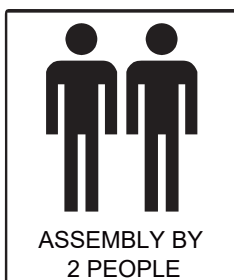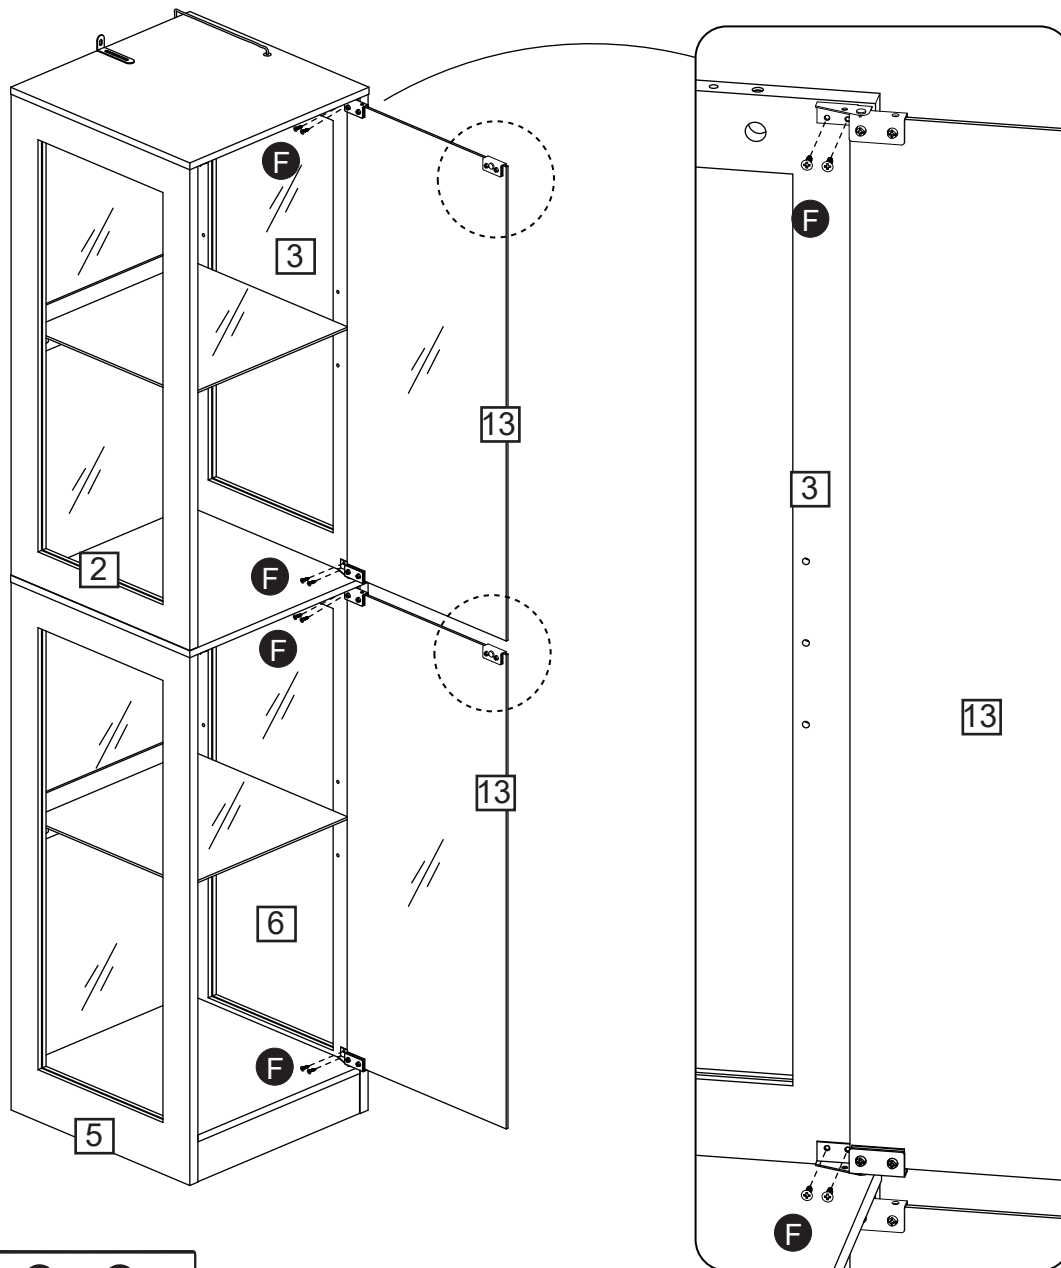

Assembly Instructions




Step 26

   Open the door by pressing the indicated area.





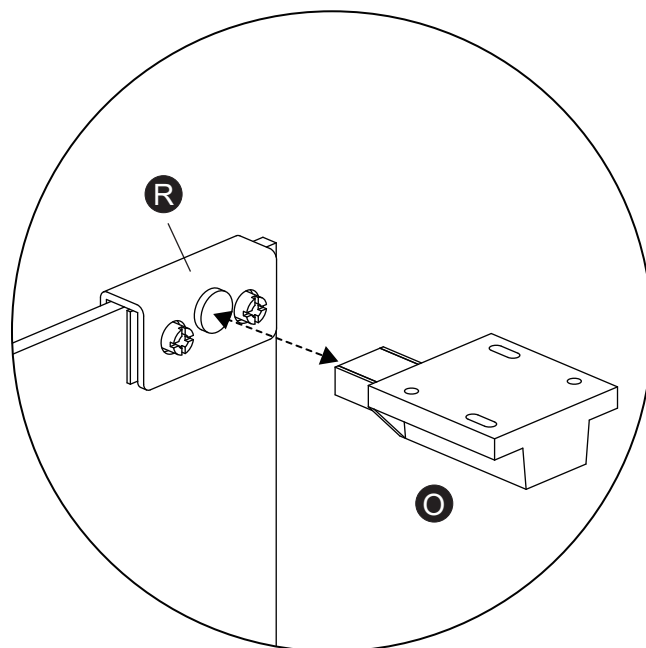
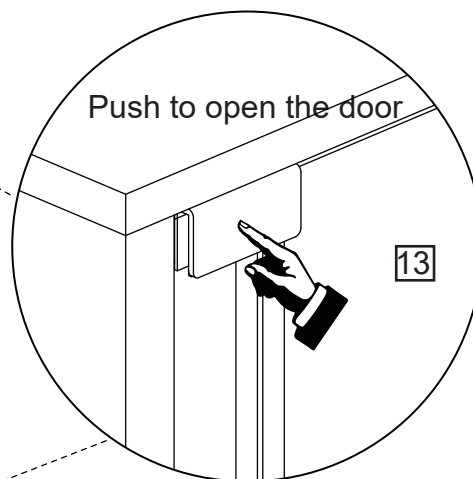
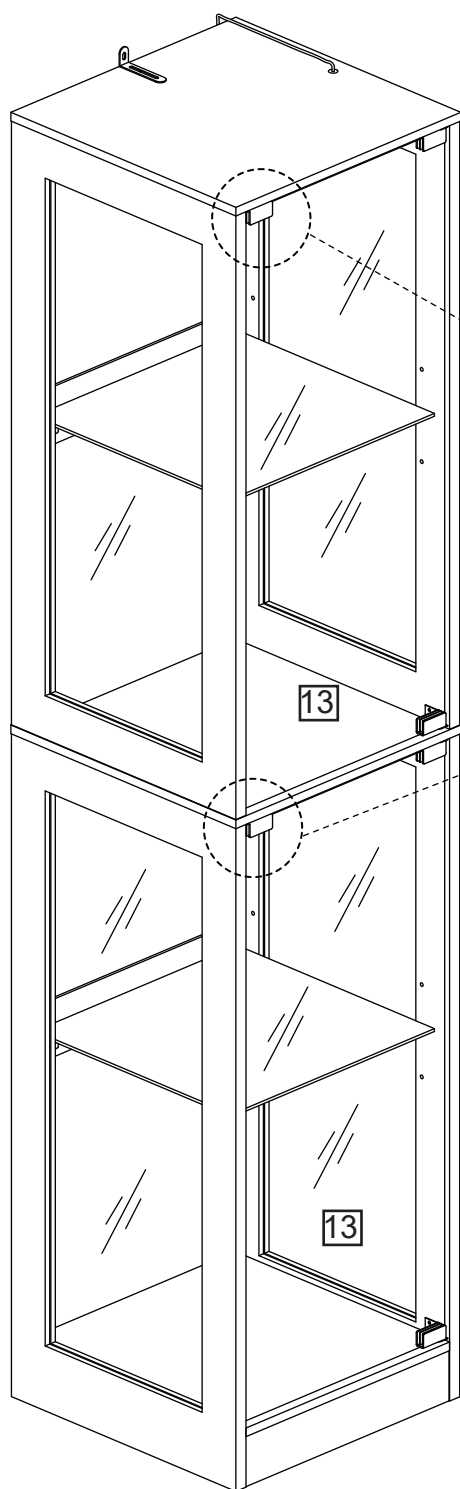


Assembly Instructions

   Step 27

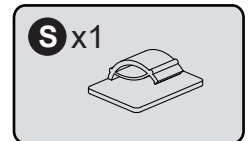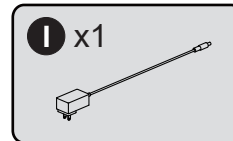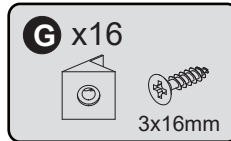

       Secure part (G) to the back panel. Adhere part (S) to the position shown in the diagram and clip the wires into place. Connect part (I) to the light strip connector.

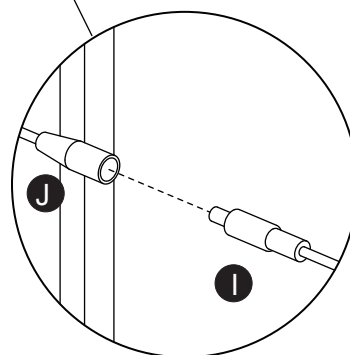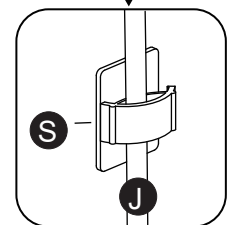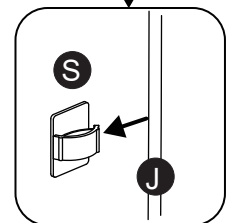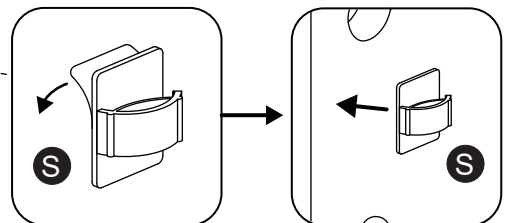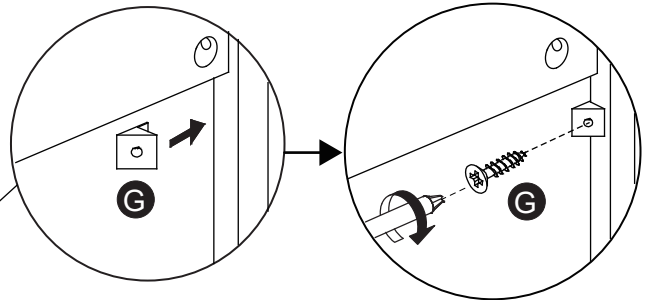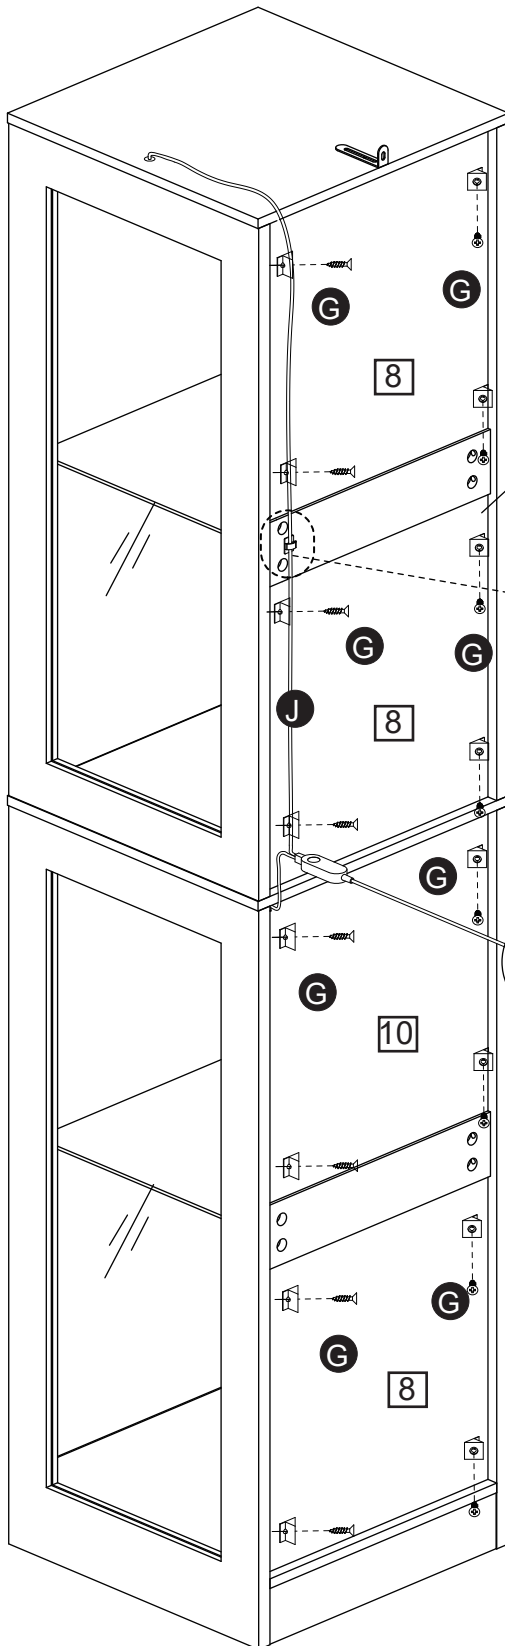


Connect the light strip with the adapter, then control the light with the remote control provided.

Assembly Instructions


Step 28

Please read the Guide to Wall Mounting & Fixings on the last page before executing this step.

 H x1




 step 1

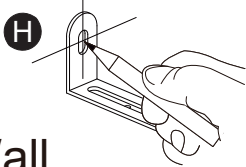


Wall



 
step 2

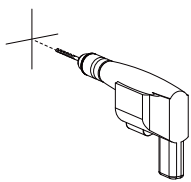

 step 3

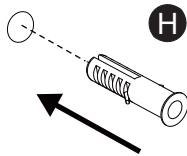

   step 4

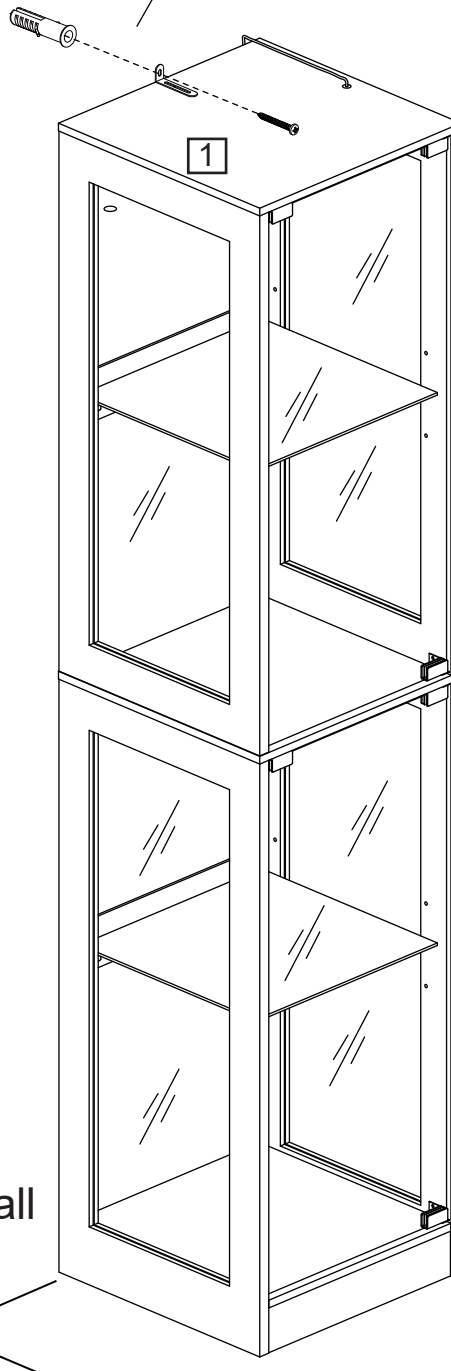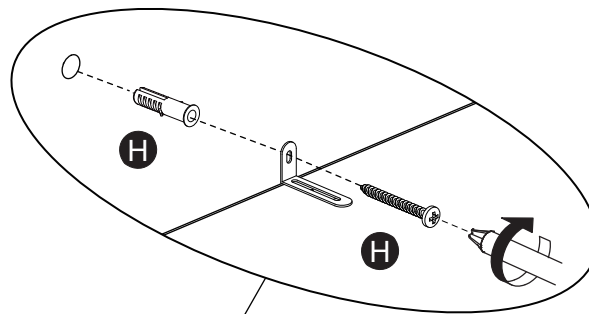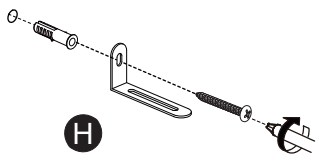

Secure the cabinet body to the wall using part (H).

Wall

The unit is floor standing, but it is recommended that the unit is secured to the wall.

1. Move the unit into desired position.
2. Mark the wall with a suitable scribe the position of the fixing holes.



Warning:
Before drilling, check wall for hidden pipes and cables.

3. Drill holes and insert wall plug.
4. Attach bracket(H) to the wall.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit**. **Consult a qualified tradesperson if you are unsure.**

 
Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

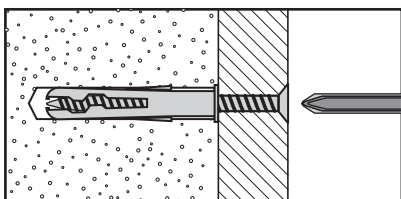


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.3 "Cavity Fixing" wall plug

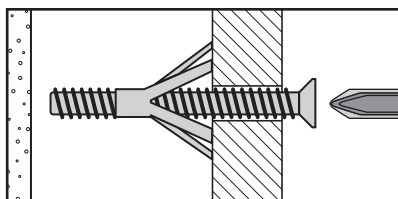


For use with plasterboard partitions or hollow wooden doors.

 No.5 "Hammer Fixing" wall plug

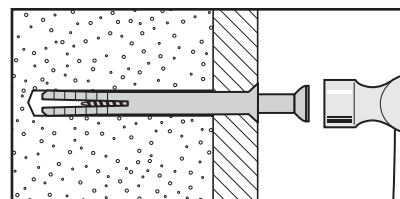


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.2 "Plasterboard" wall plug

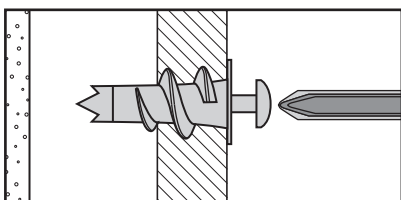


For use when attaching light loads onto plasterboard partitions.

 No.4 "Cavity Fixing – Heavy Duty" wall plug

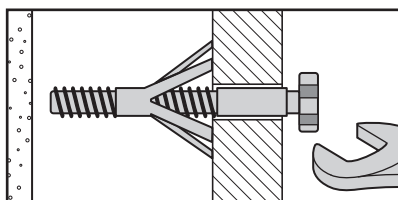

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.6 "Shield Anchor" wall plug – heavy loads

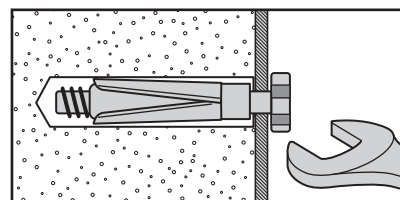

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

| Cabinet

Sku:
C000672010
C000672020

V1.0