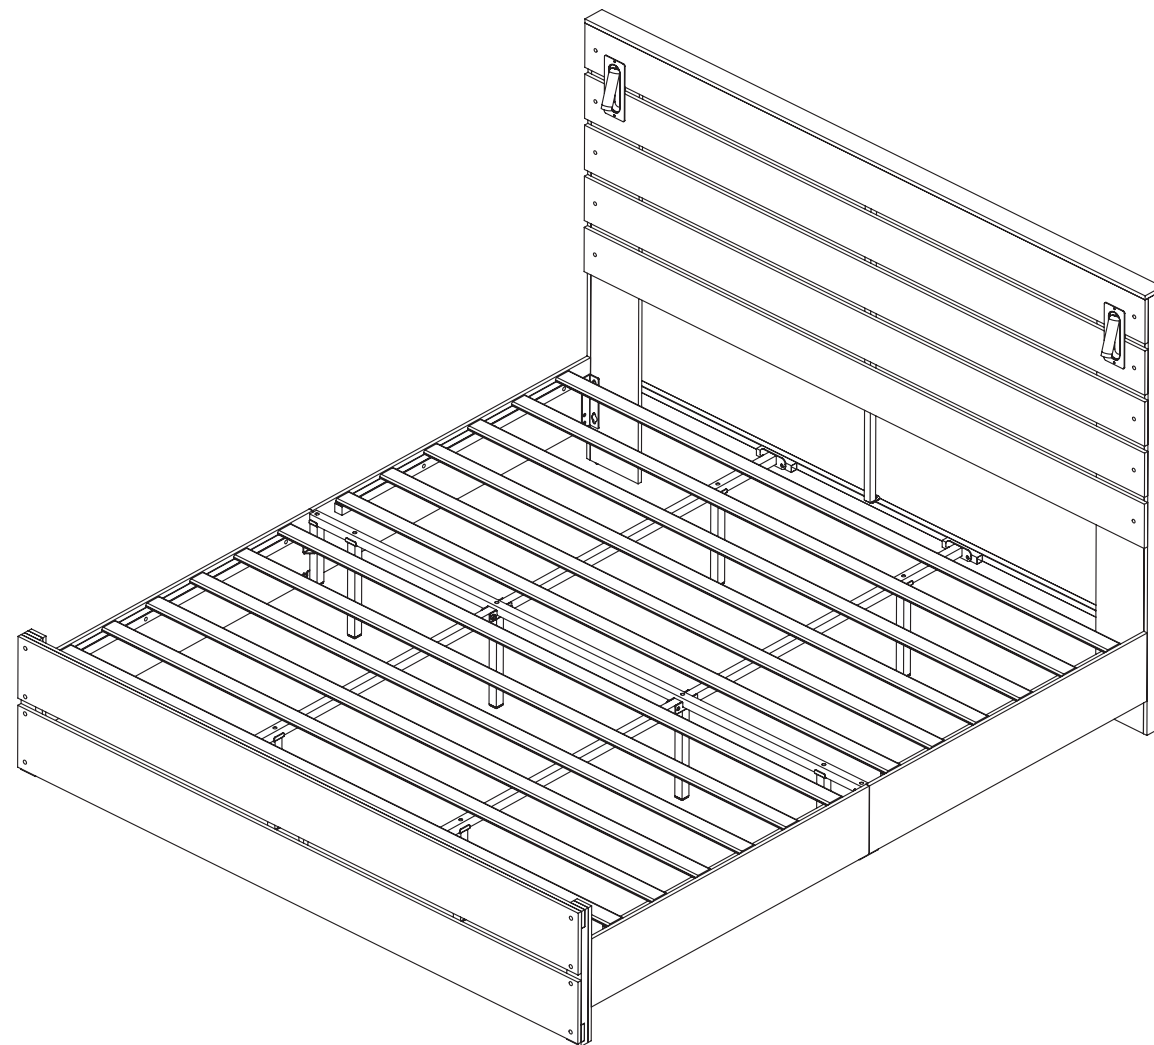


Panel Bed-K Assembly Instructions



Friendly Customer Service

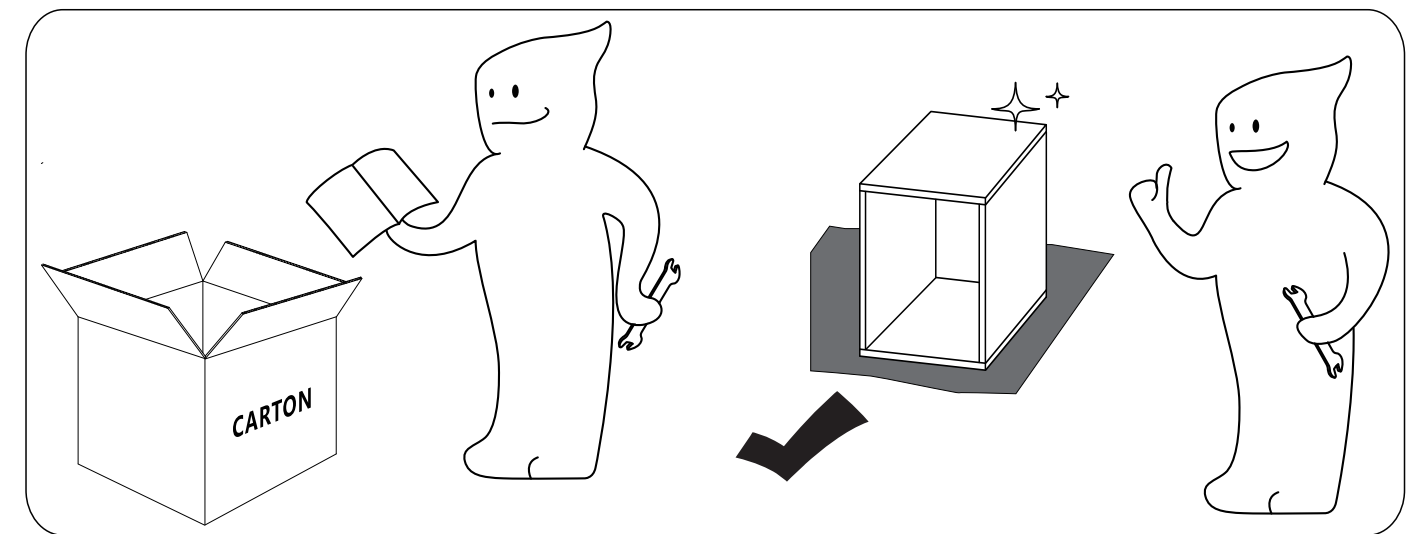
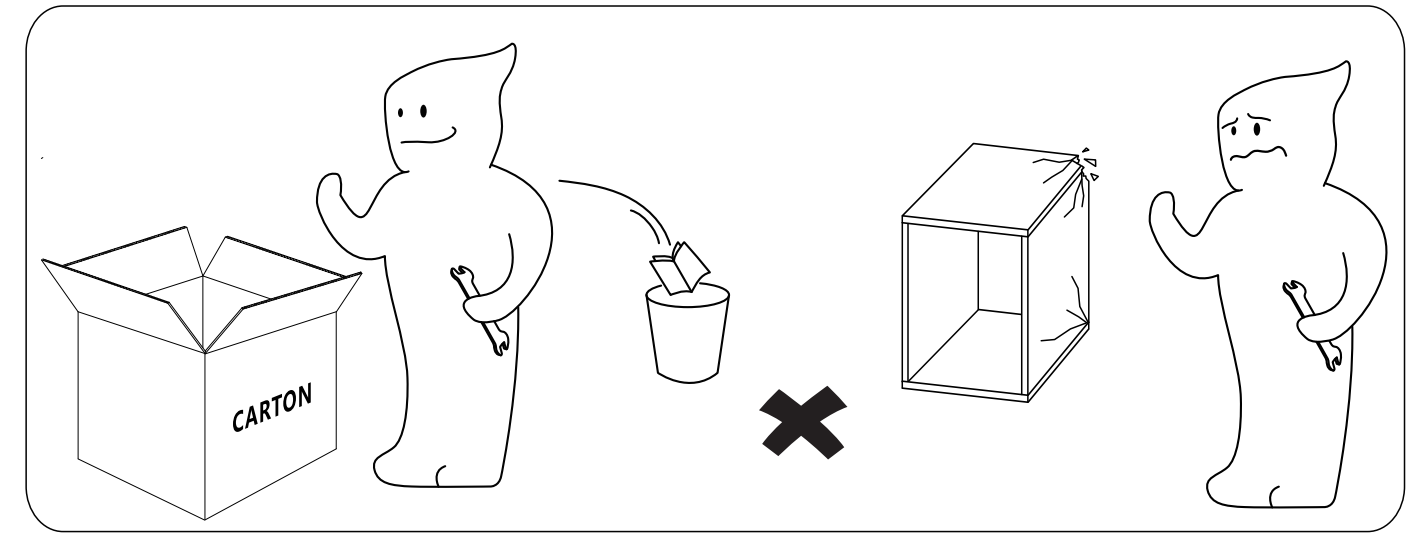
Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.

Contact us

Phone: +1 (901) 347-2181 (US) Mon-Fri 9am - 5pm (PST)
E-Mail: support@jocisland.com (Get efficient answer within 12 hours)



Please follow the instruction manuals and use a pad to protect the product during your assembly.





Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.



For easier and better assembly, **2** or more adults are required.


















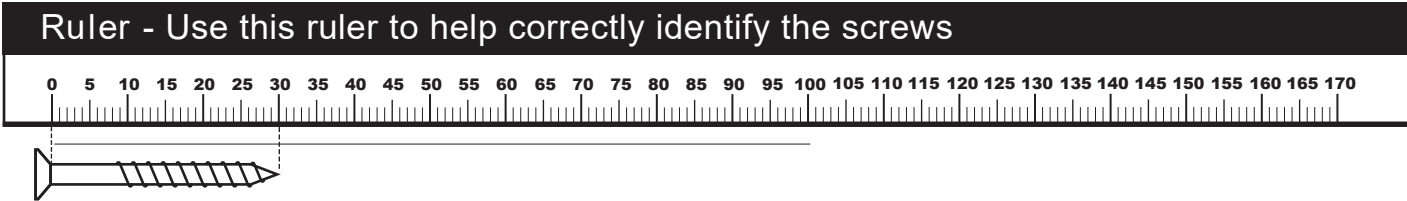
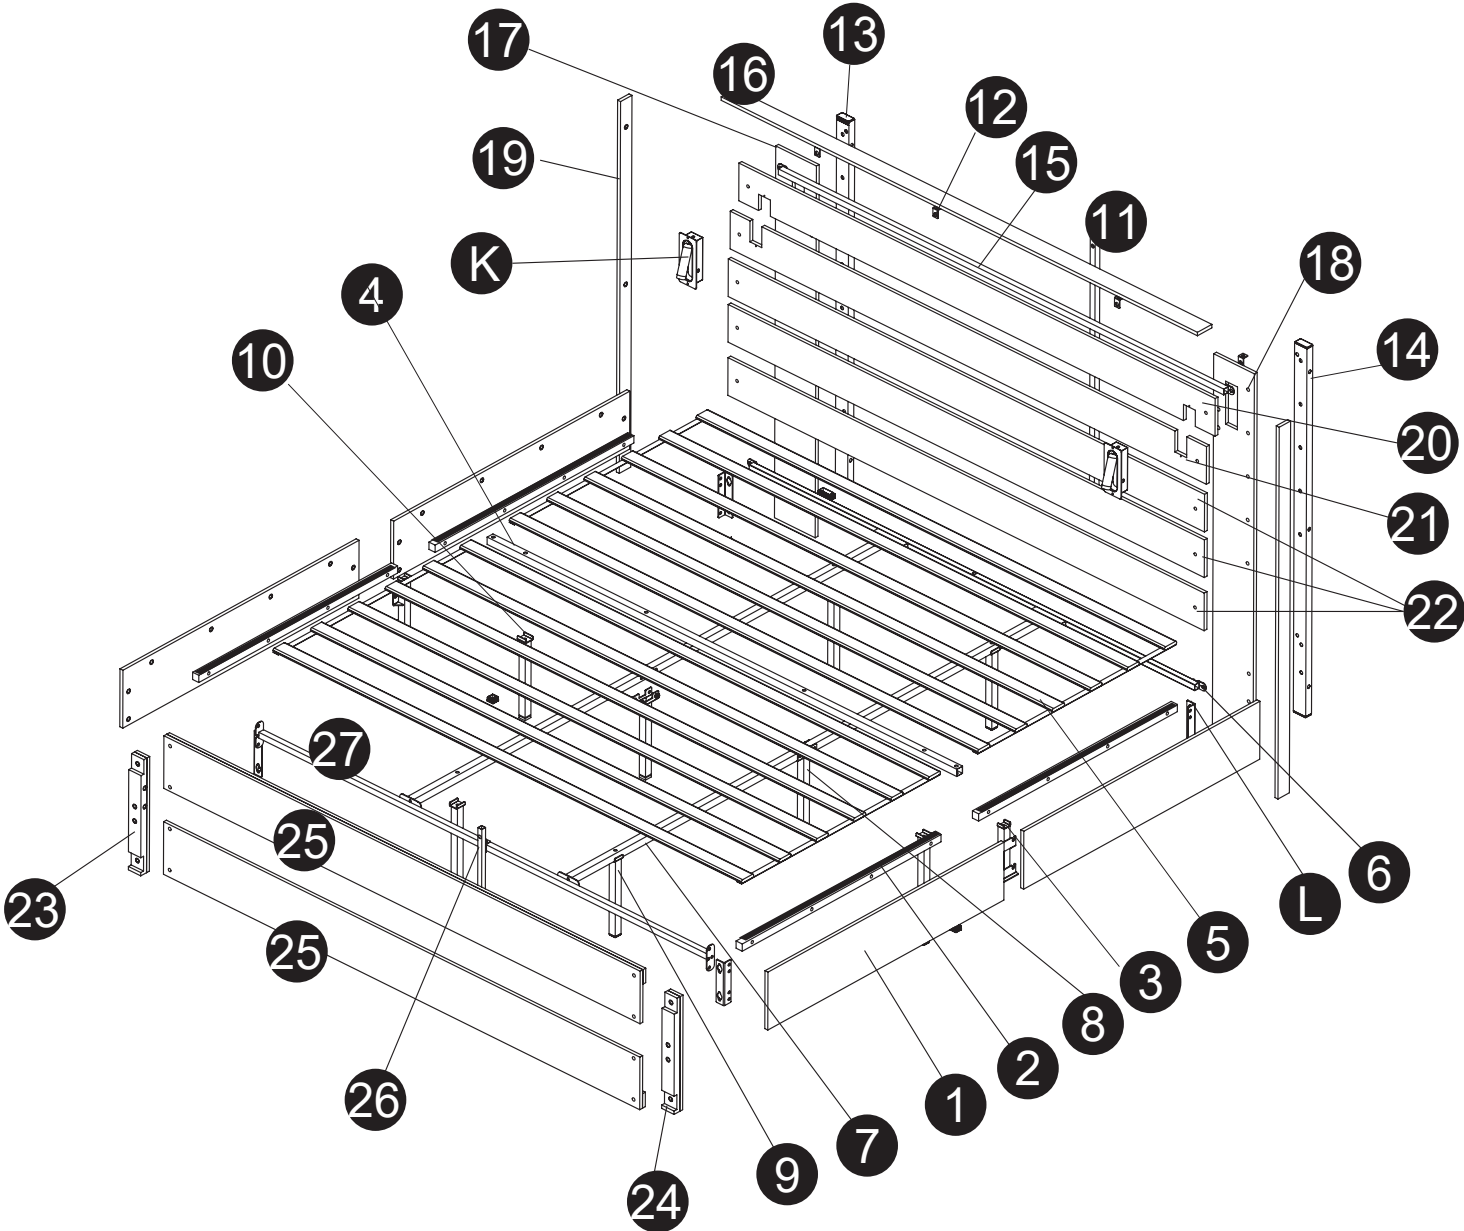
ASSEMBLY INSTRUCTIONS


















The lenath of the screw is measured from the rod part excluding the screw cap (30mm screw shown)

ASSEMBLY INSTRUCTIONS

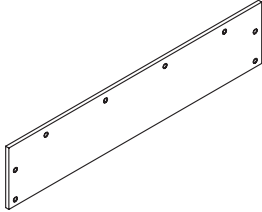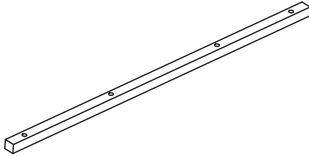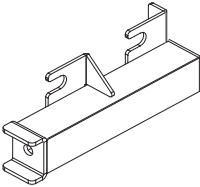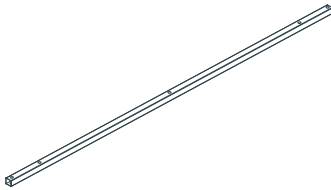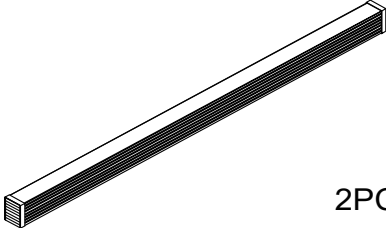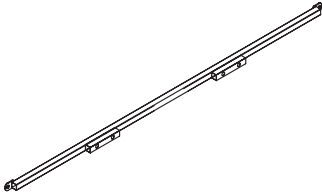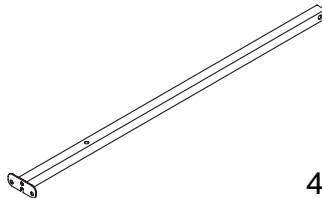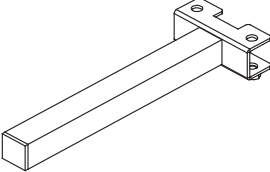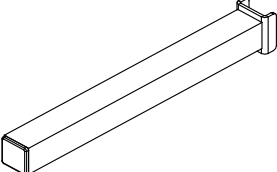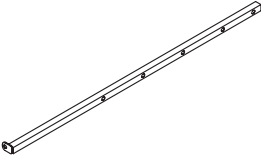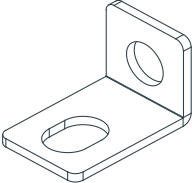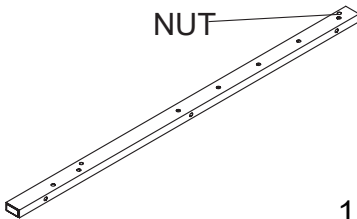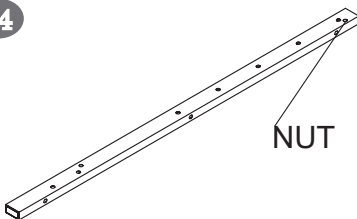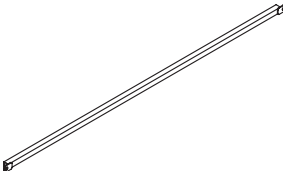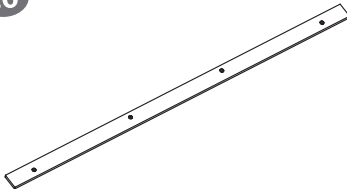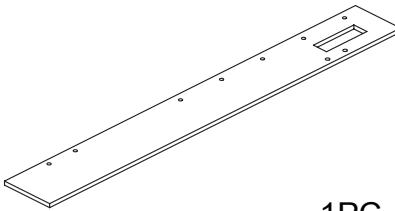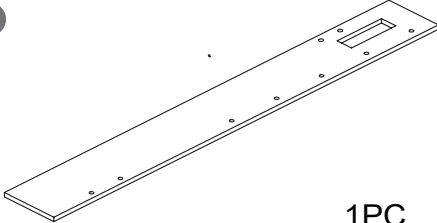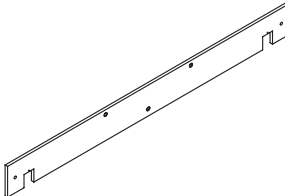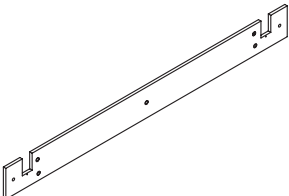PARTS LIST


1  4PCS	2  4PCS	3  2PCS
4  1PC	5  2PCS	6  1PC
7  4PCS	8  2PCS	9  Short 4PCS
10  LONG 2PCS	11  1PC	12  4PCS
13  NUT 1PC	14  NUT 1PC	15  1PC
16  1PC	17  1PC	18  1PC
19  2PCS	20  1PC	21  1PC

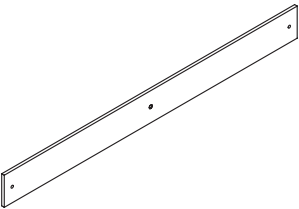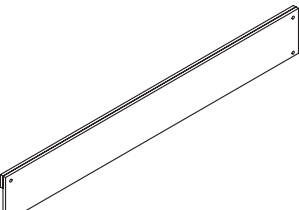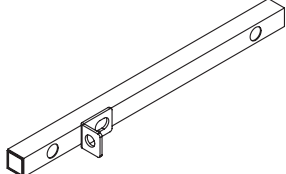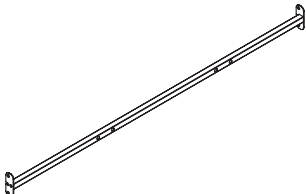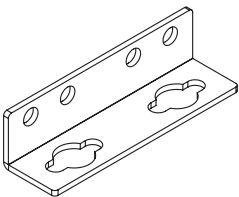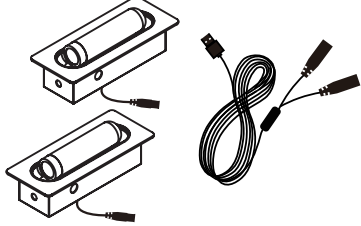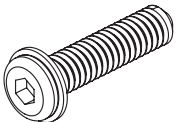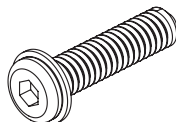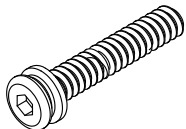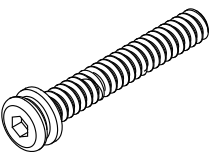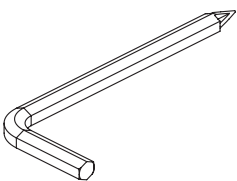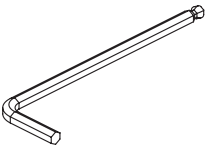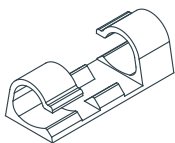ASSEMBLY INSTRUCTIONS

22  3PCS	23  1PC	24  1PC
25  2PC	26  1PC	27  1PC
L  4PCS	K  1PC	
A  M8x12 white zinc 28PCS	B  M8x20 22PCS	C  M8x25 Color Zinc 2PCS
D  M8x30 white zinc 5PCS	E  M8x35 32PCS	F  M8x50 20PCS
G  M8x60 6PCS	H  ST4.2x12 4PCS	I  M8 1PC
J  M8 1PC	M  4PCS	

ASSEMBLY INSTRUCTIONS

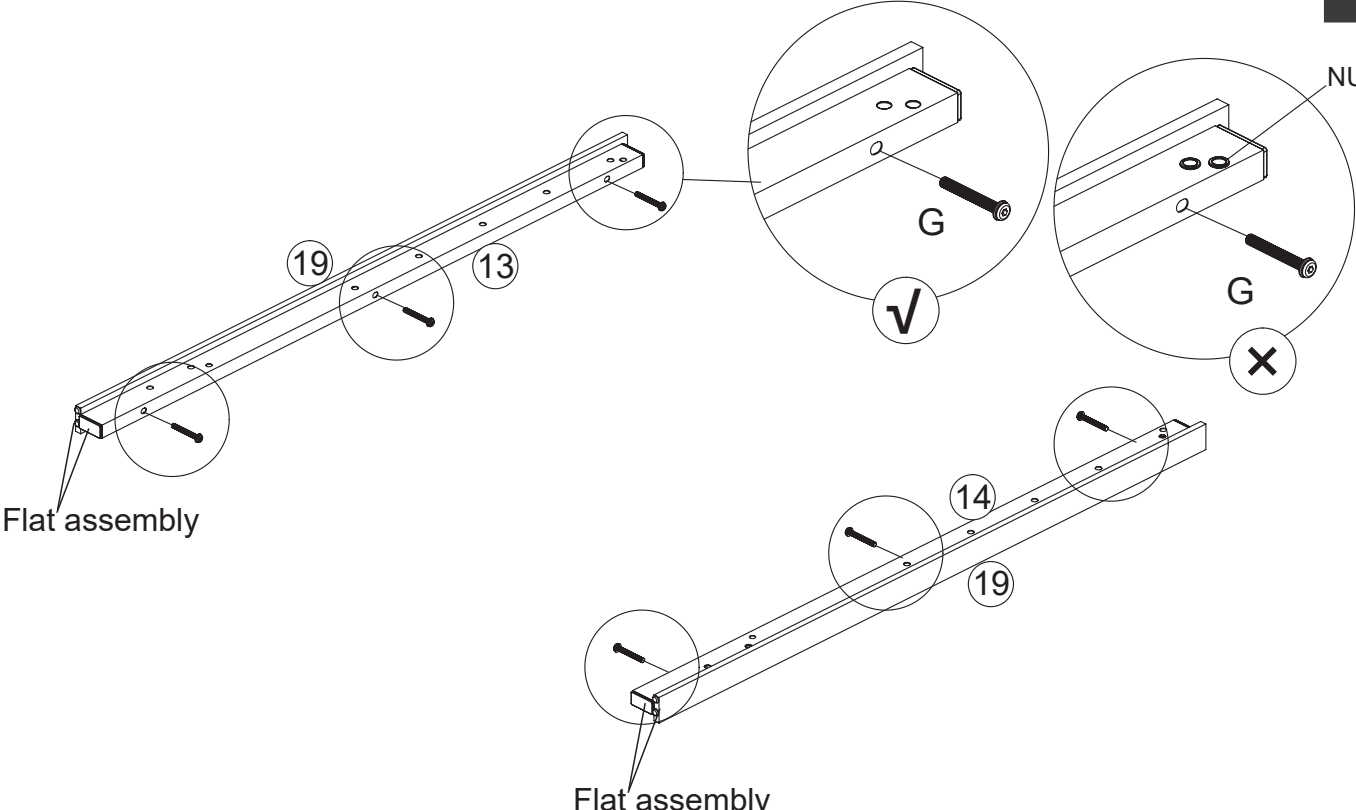1



Flat assembly

Flat assembly

NUT

G

G

✓

✗

19

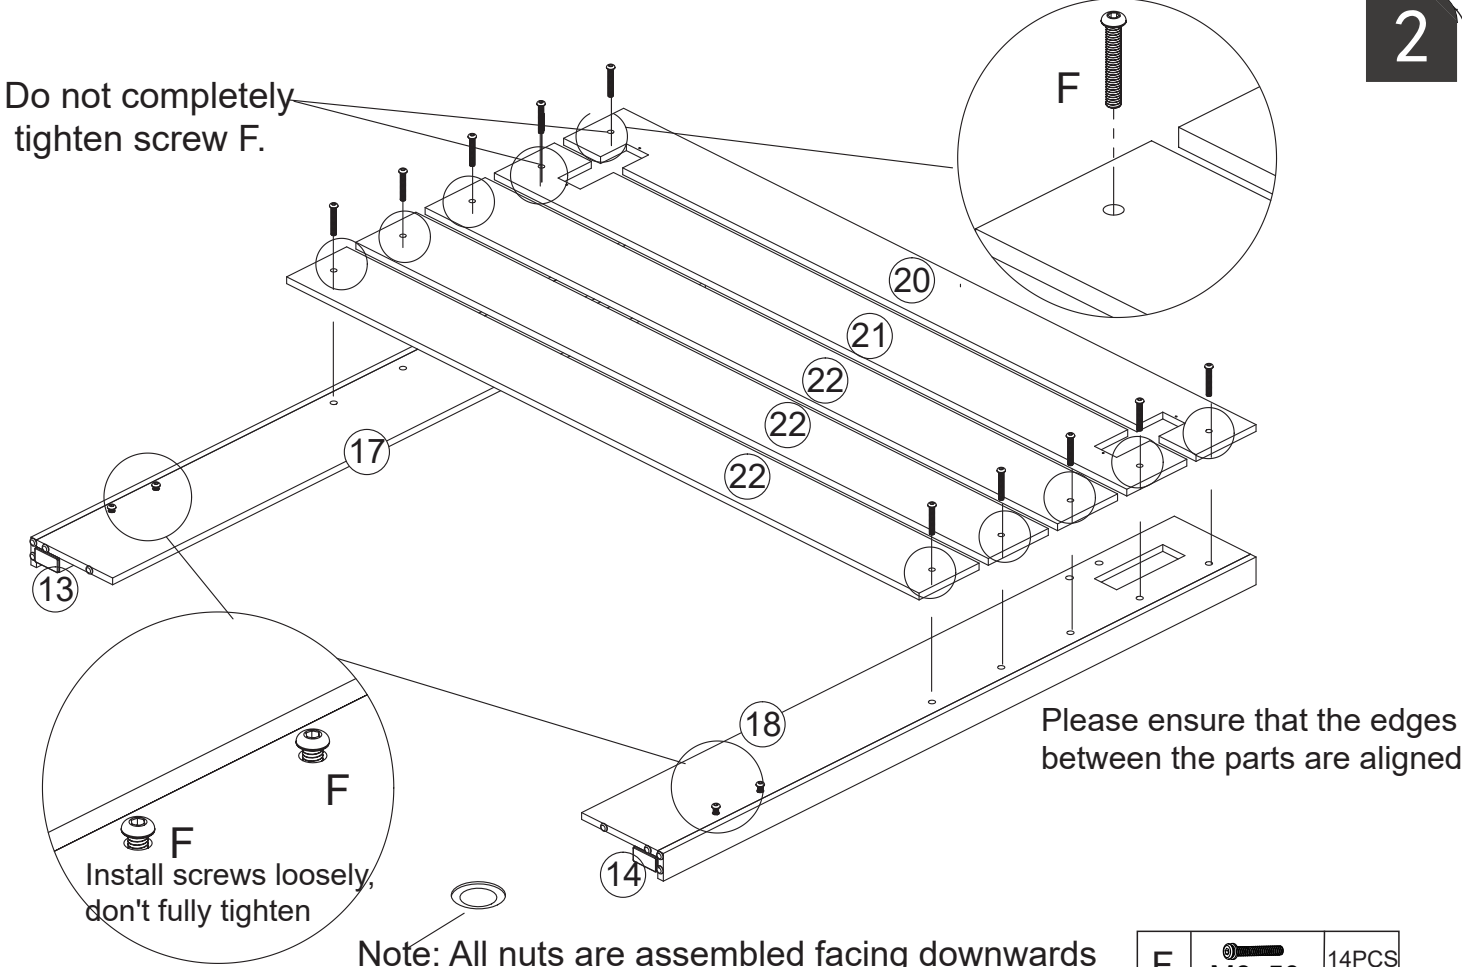
13

14

19

G M8x60 6PCS

2



Do not completely tighten screw F.

F

20

21

22

22

22

17

13

18

14

F

Install screws loosely, don't fully tighten

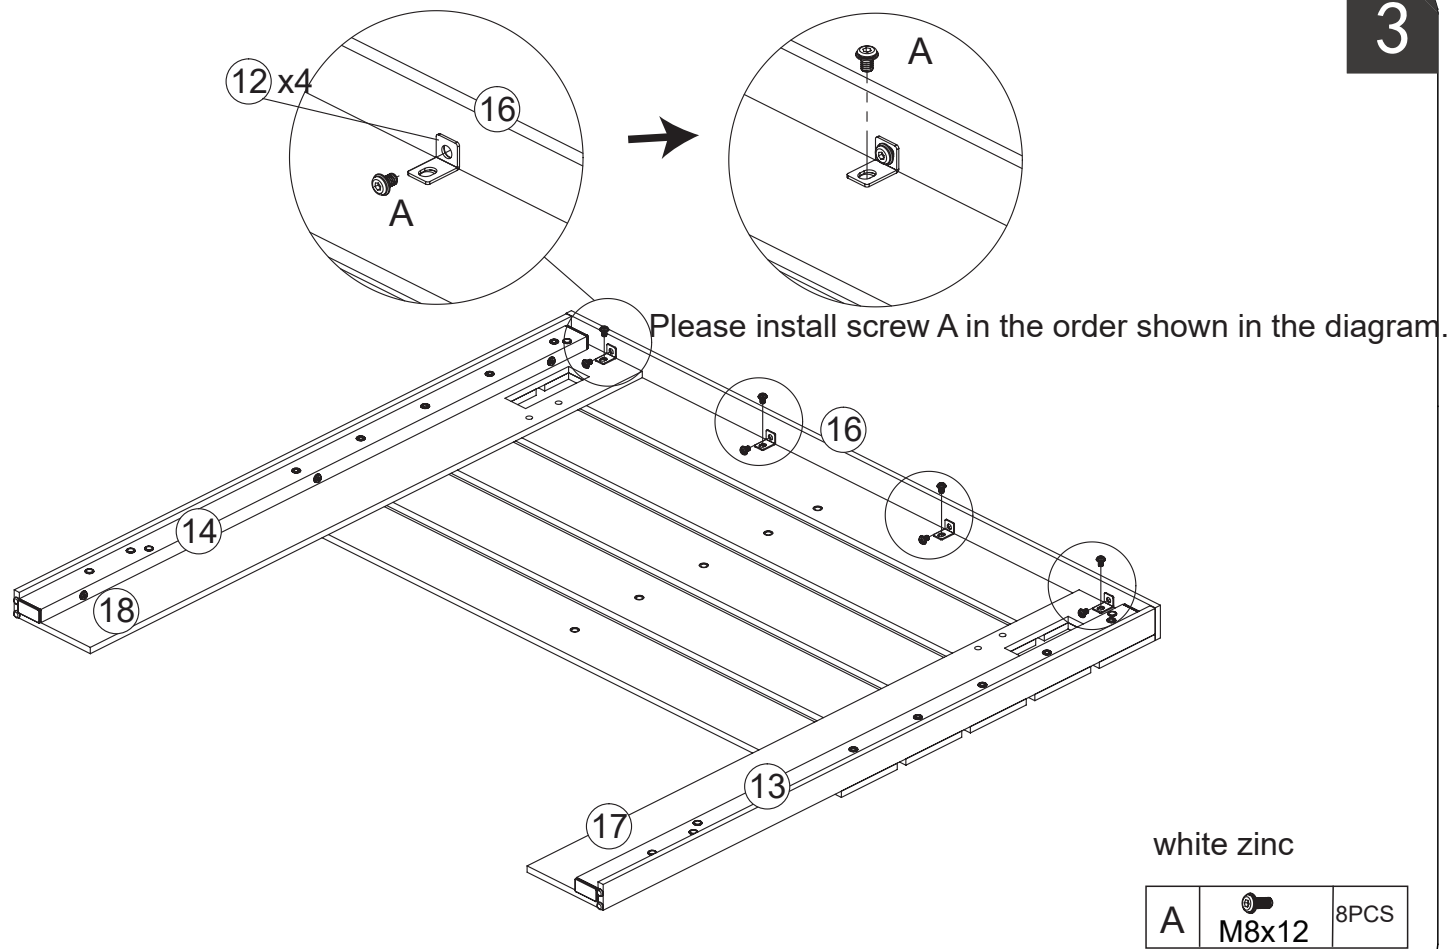
Note: All nuts are assembled facing downwards

F M8x50 14PCS

Please ensure that the edges between the parts are aligned


ASSEMBLY INSTRUCTIONS

3




ASSEMBLY INSTRUCTIONS

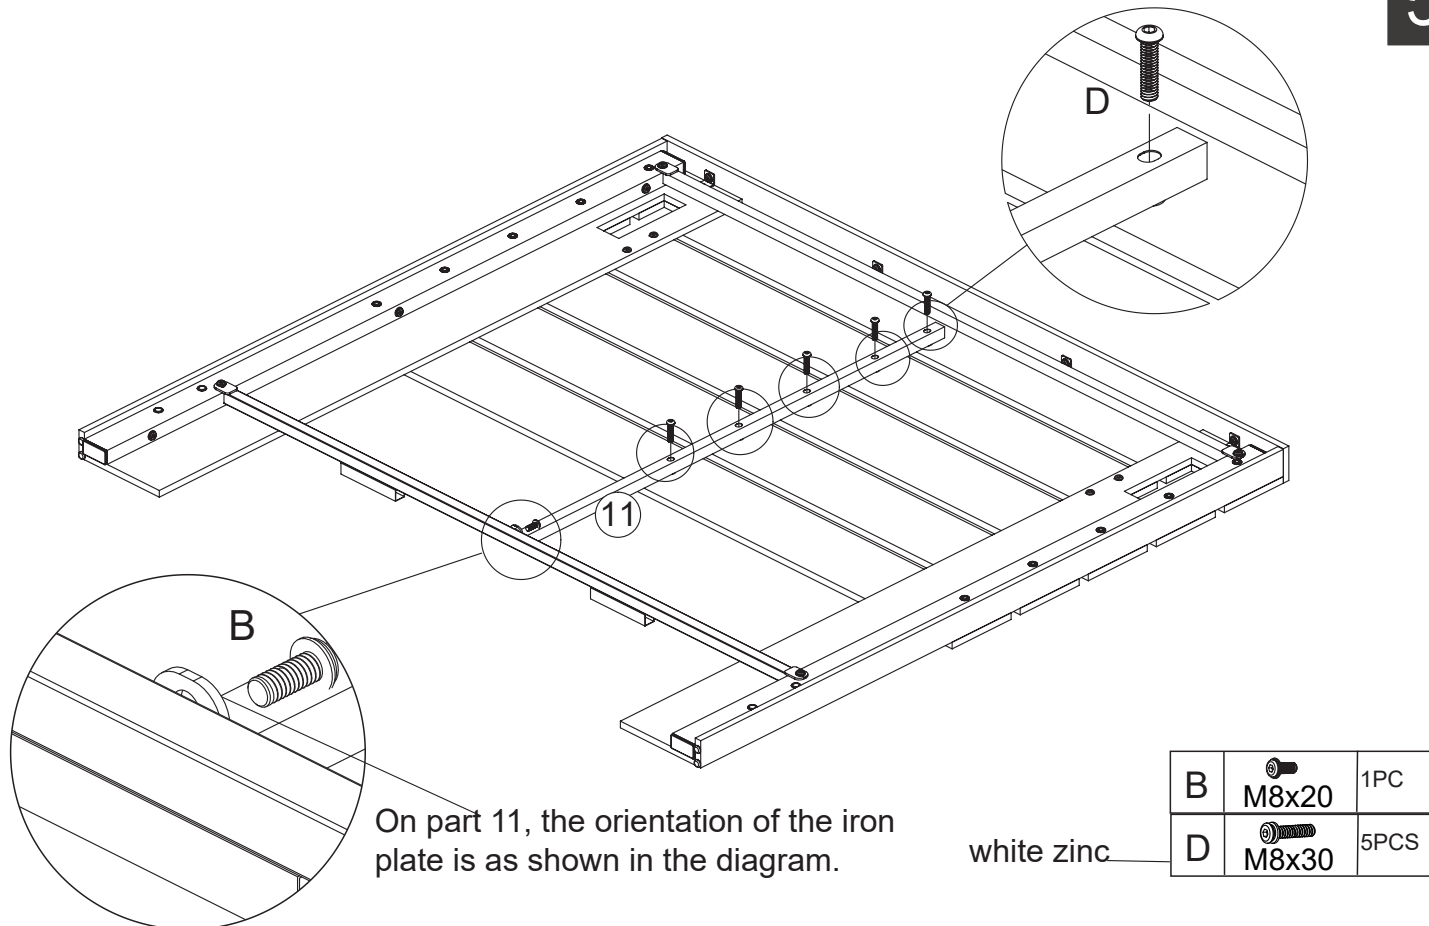
5





4


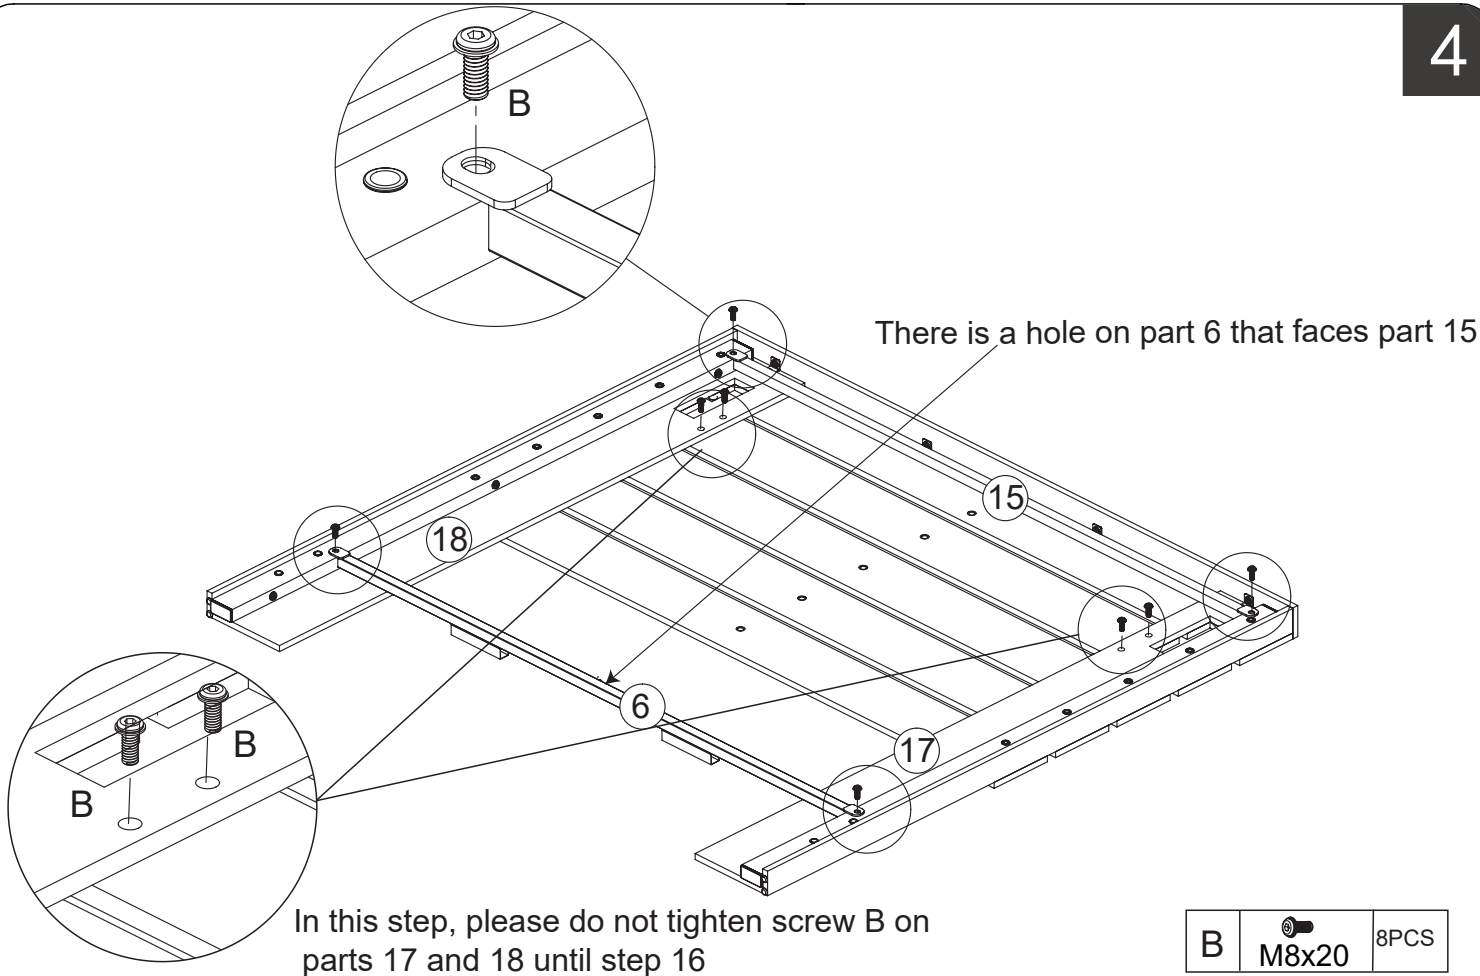


6

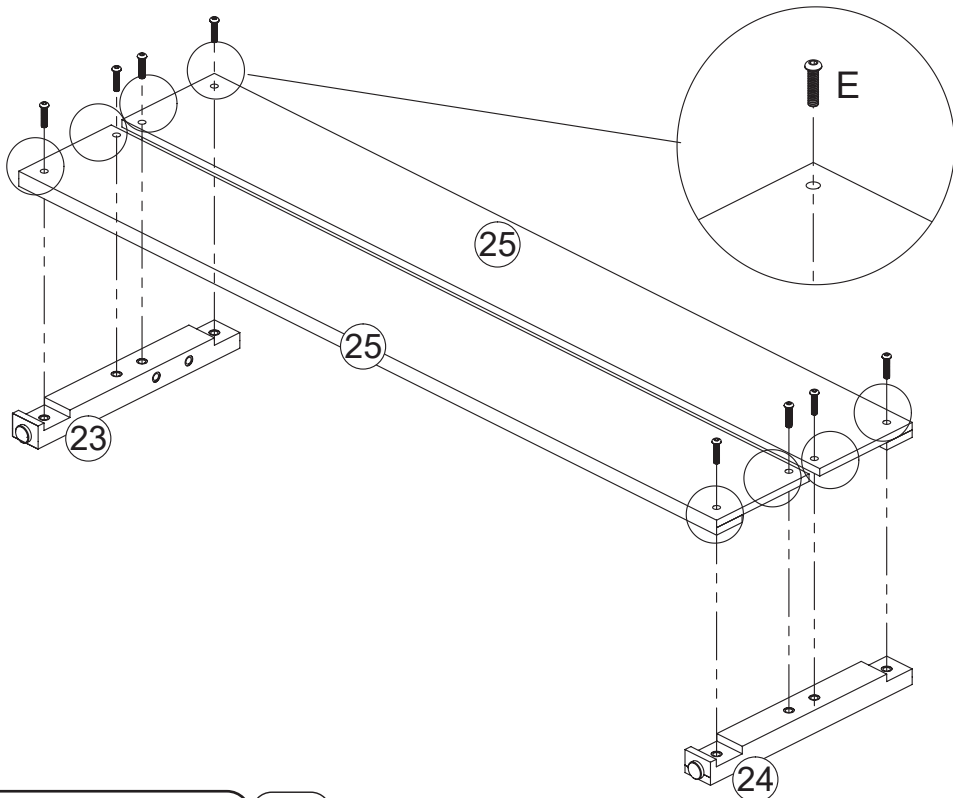

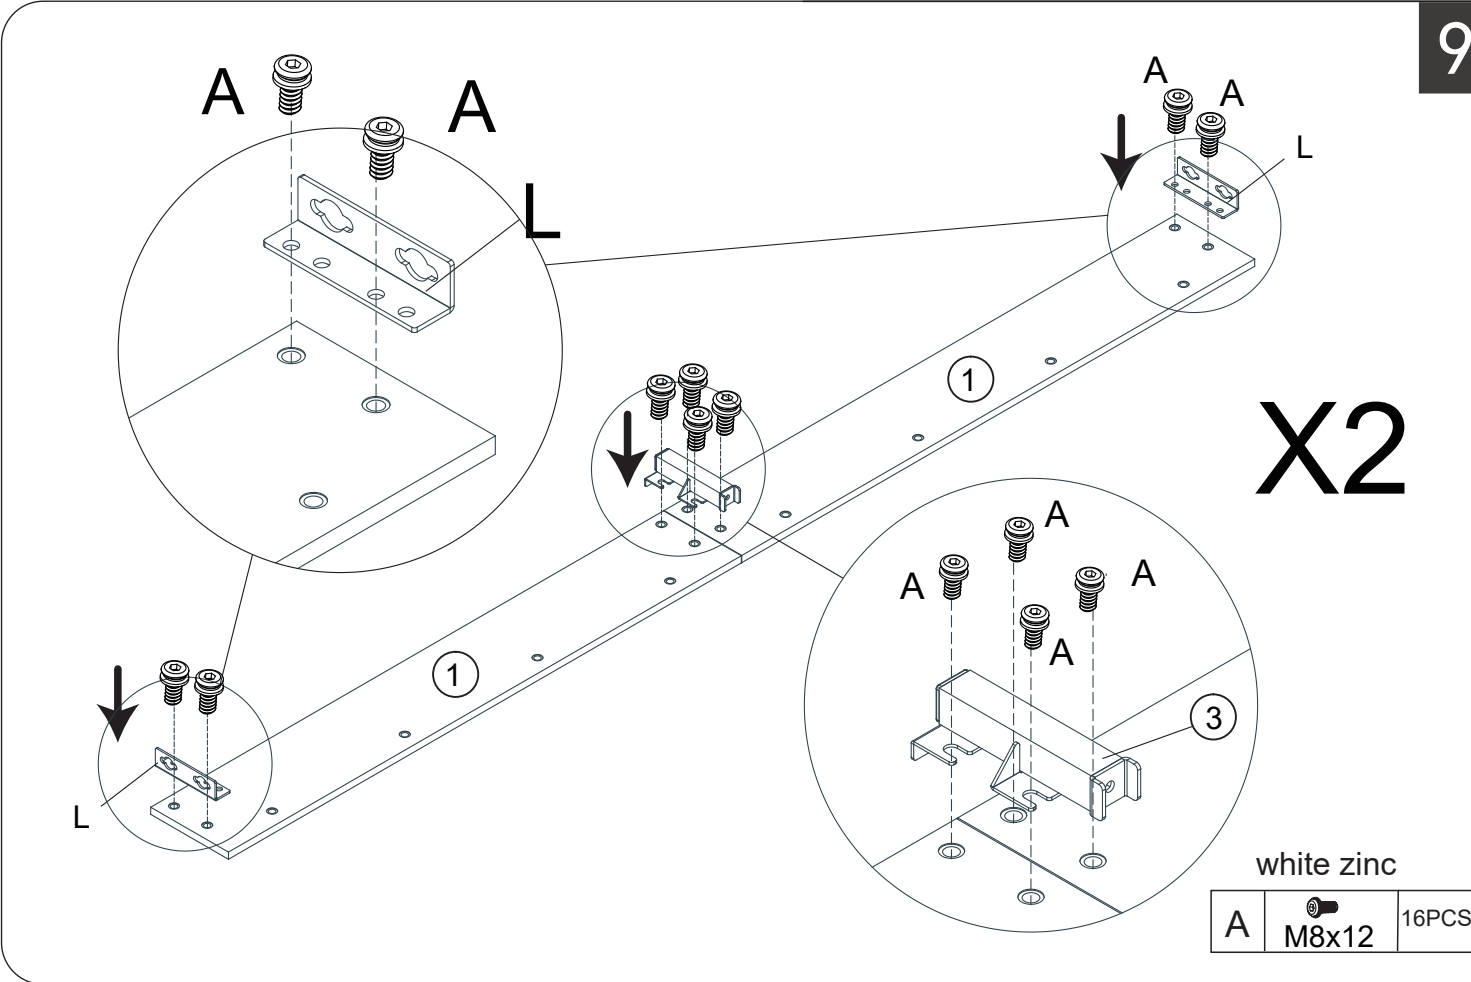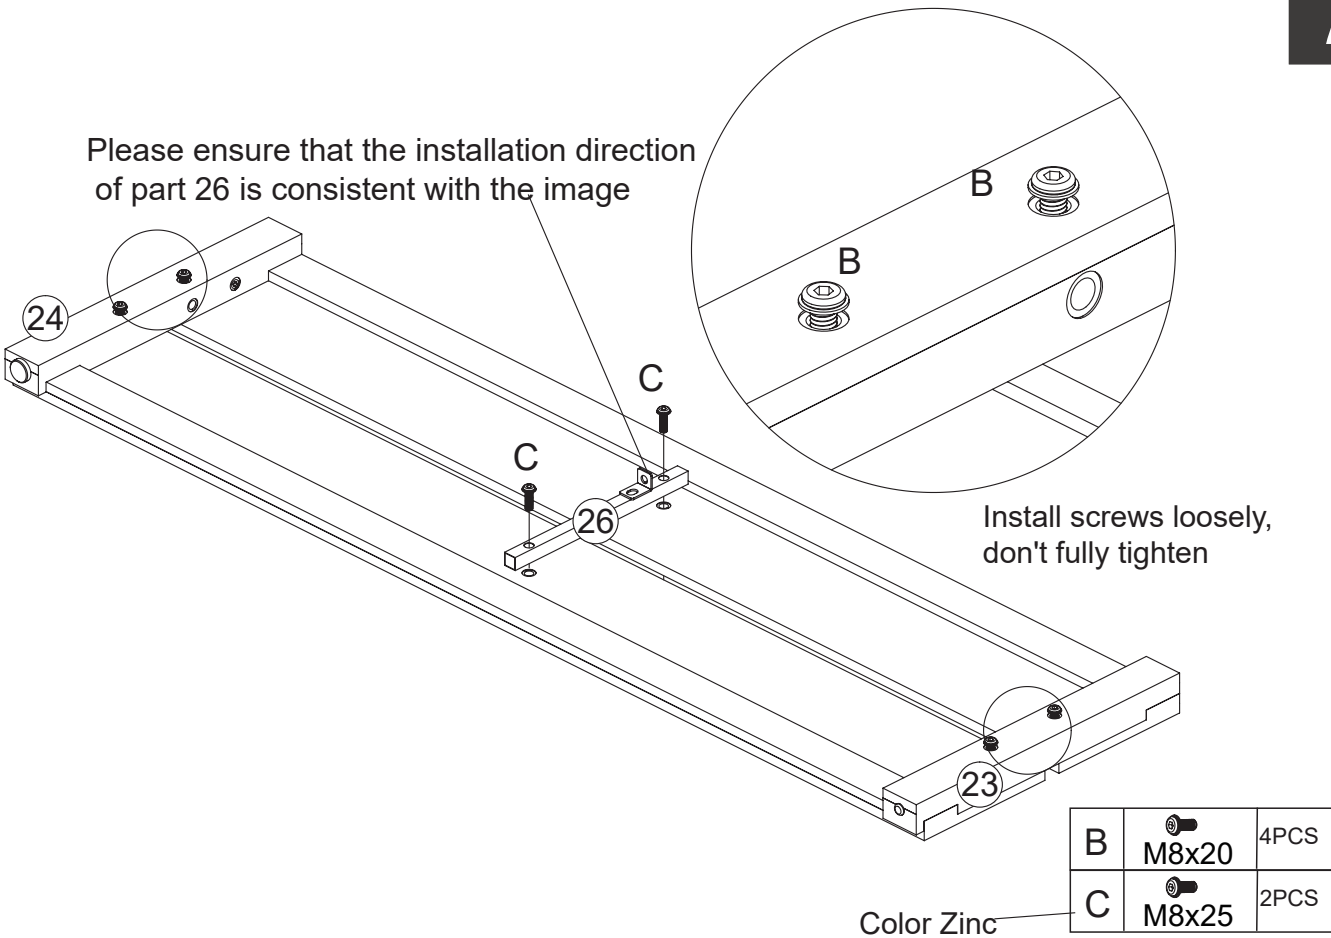


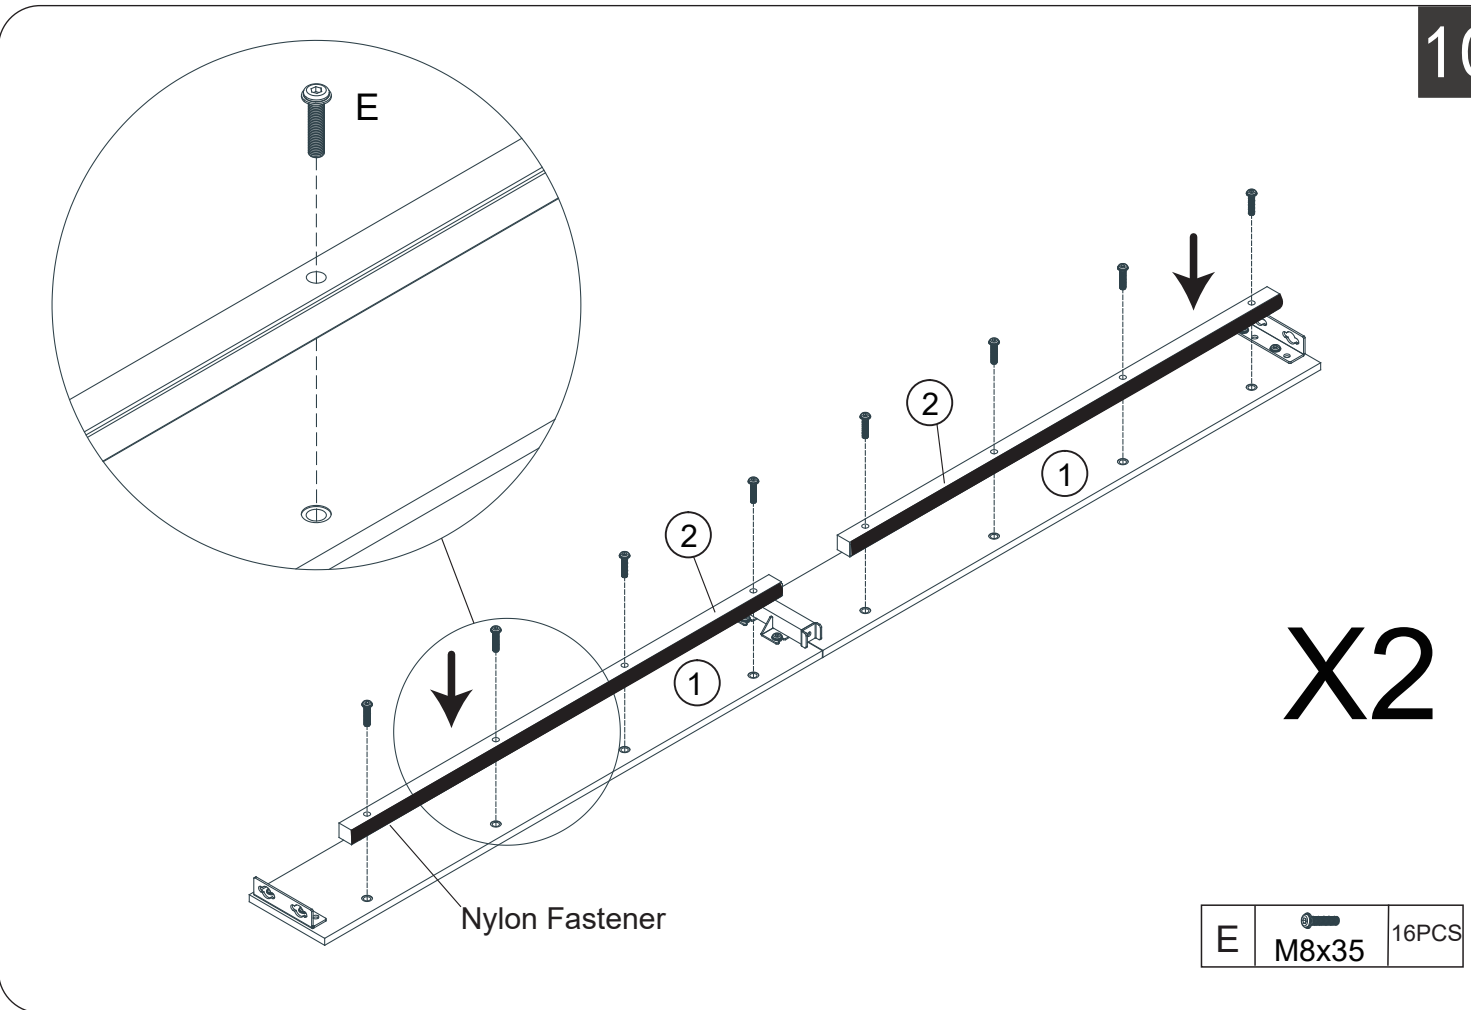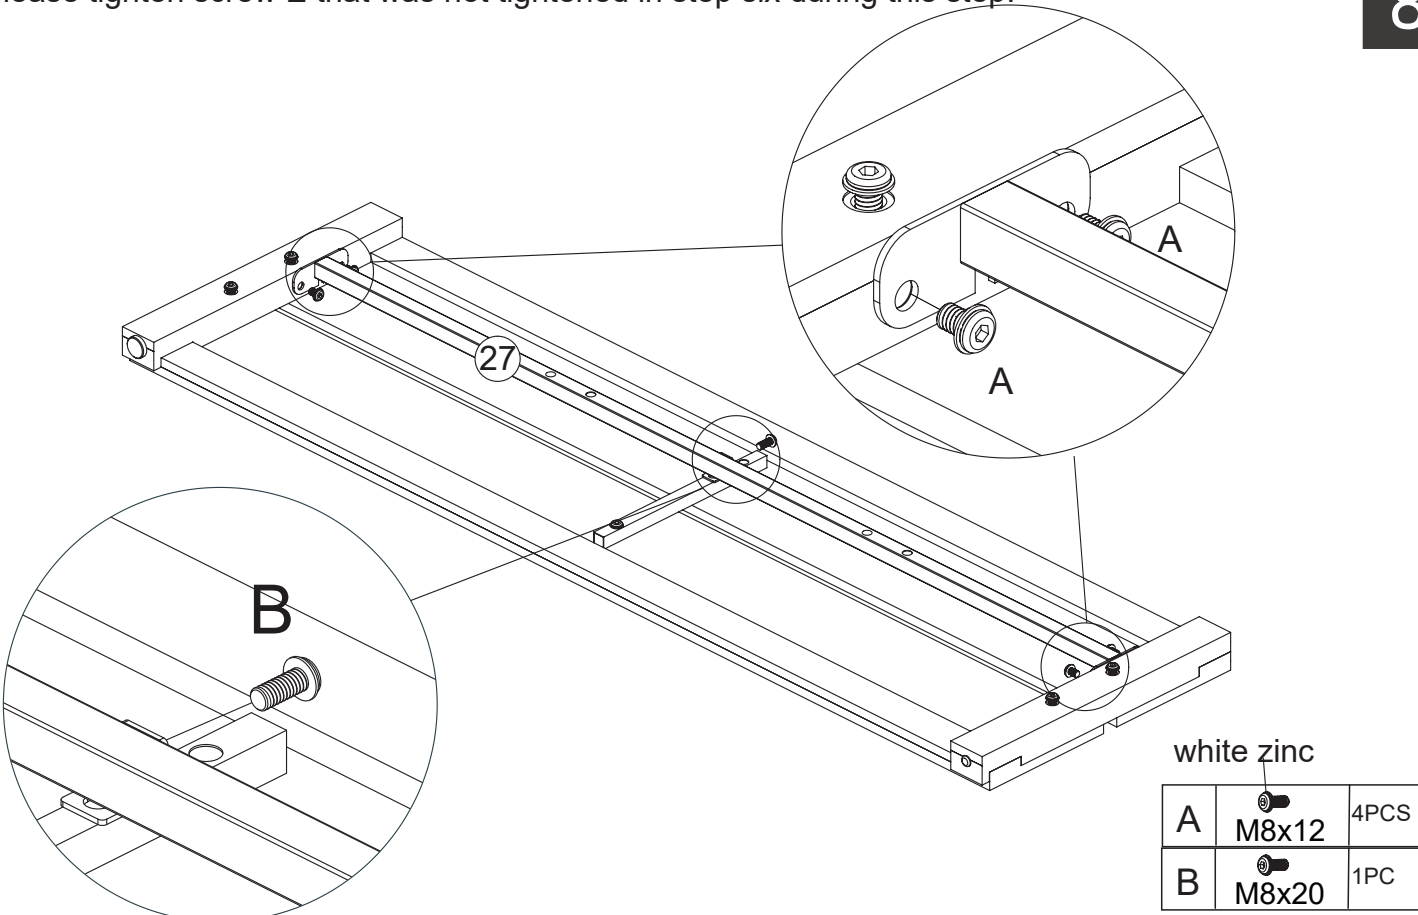Please tighten screw E that was not tightened in step six during this step.




ASSEMBLY INSTRUCTIONS

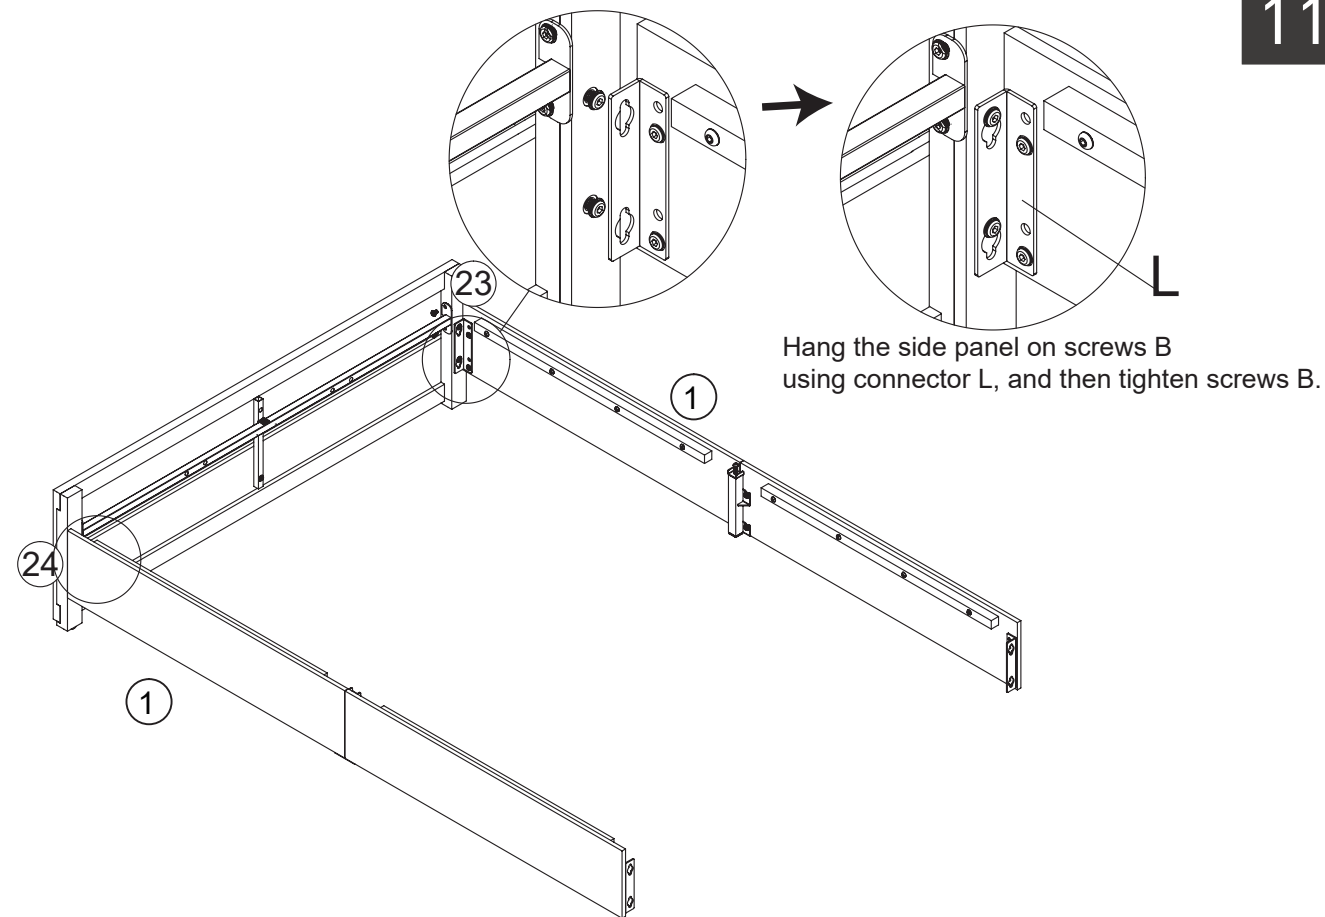11



Hang the side panel on screws B using connector L, and then tighten screws B.

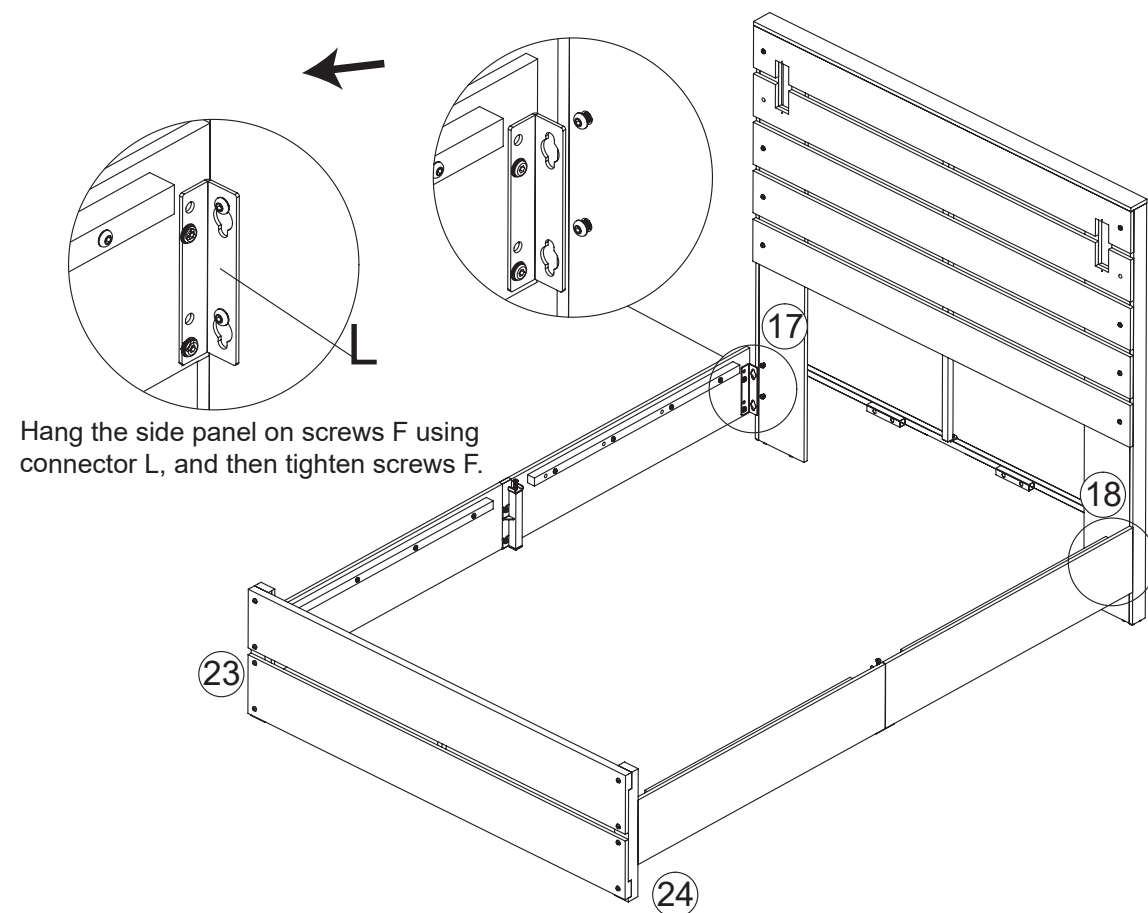Hang the side panel on screws F using connector L, and then tighten screws F.




12

10/15

ASSEMBLY INSTRUCTIONS

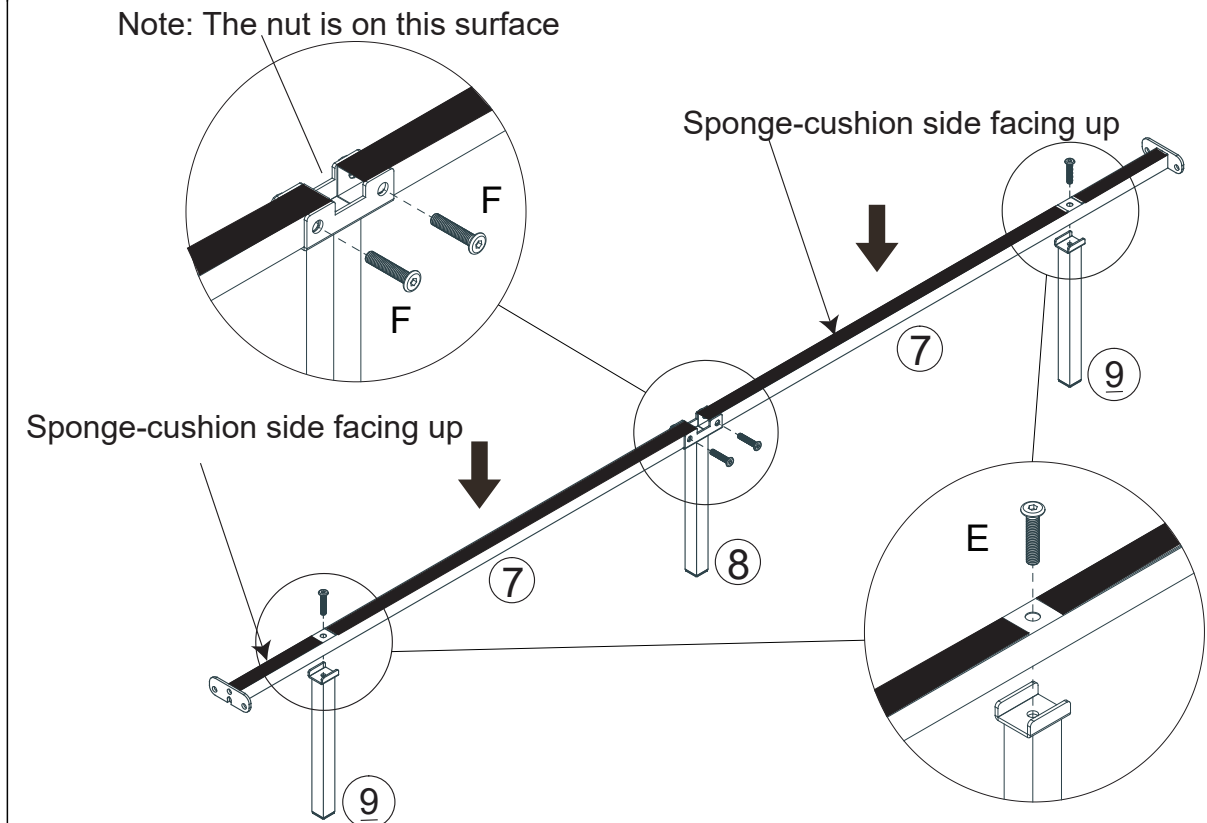3




Note: The nut is on this surface

Sponge-cushion side facing up

Sponge-cushion side facing up

X2

E	 M8x35	4PCS
F	 M8x50	4PCS

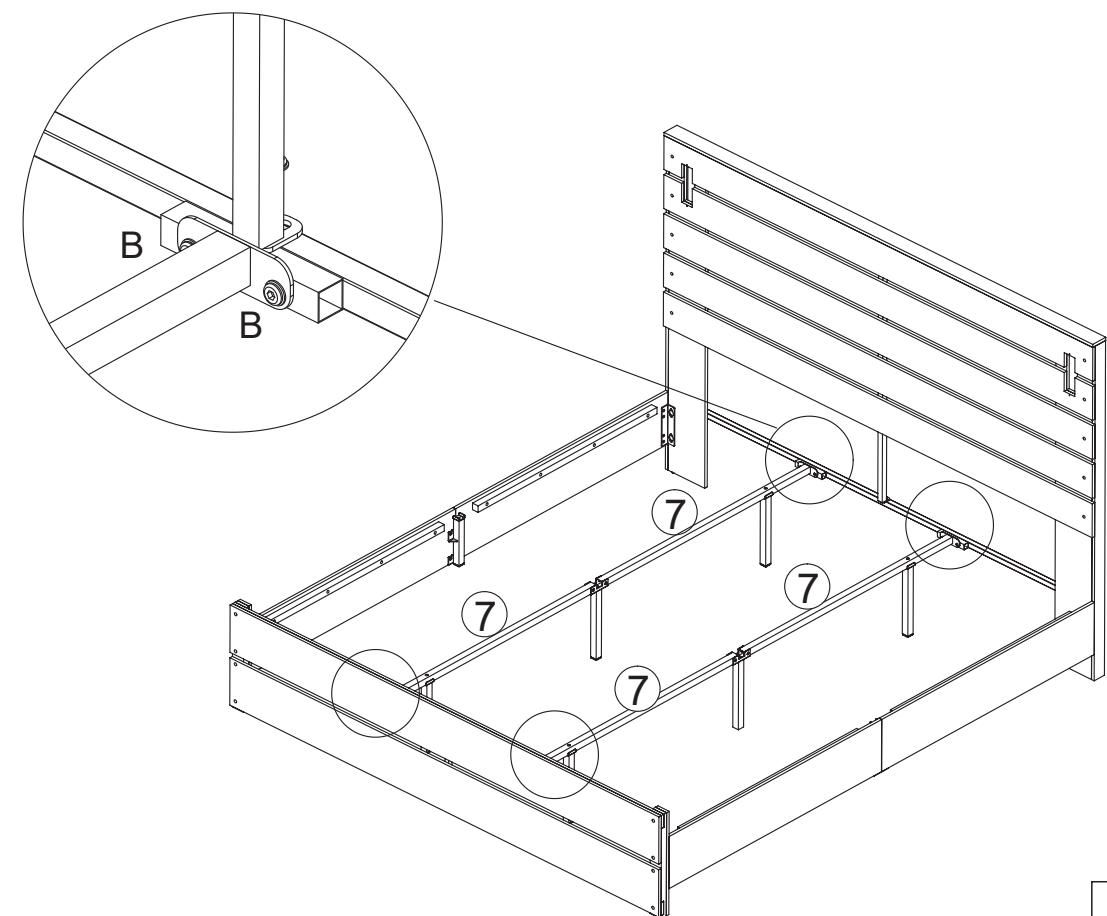


E



E

B	 M8x20	8PCS
---	--	------


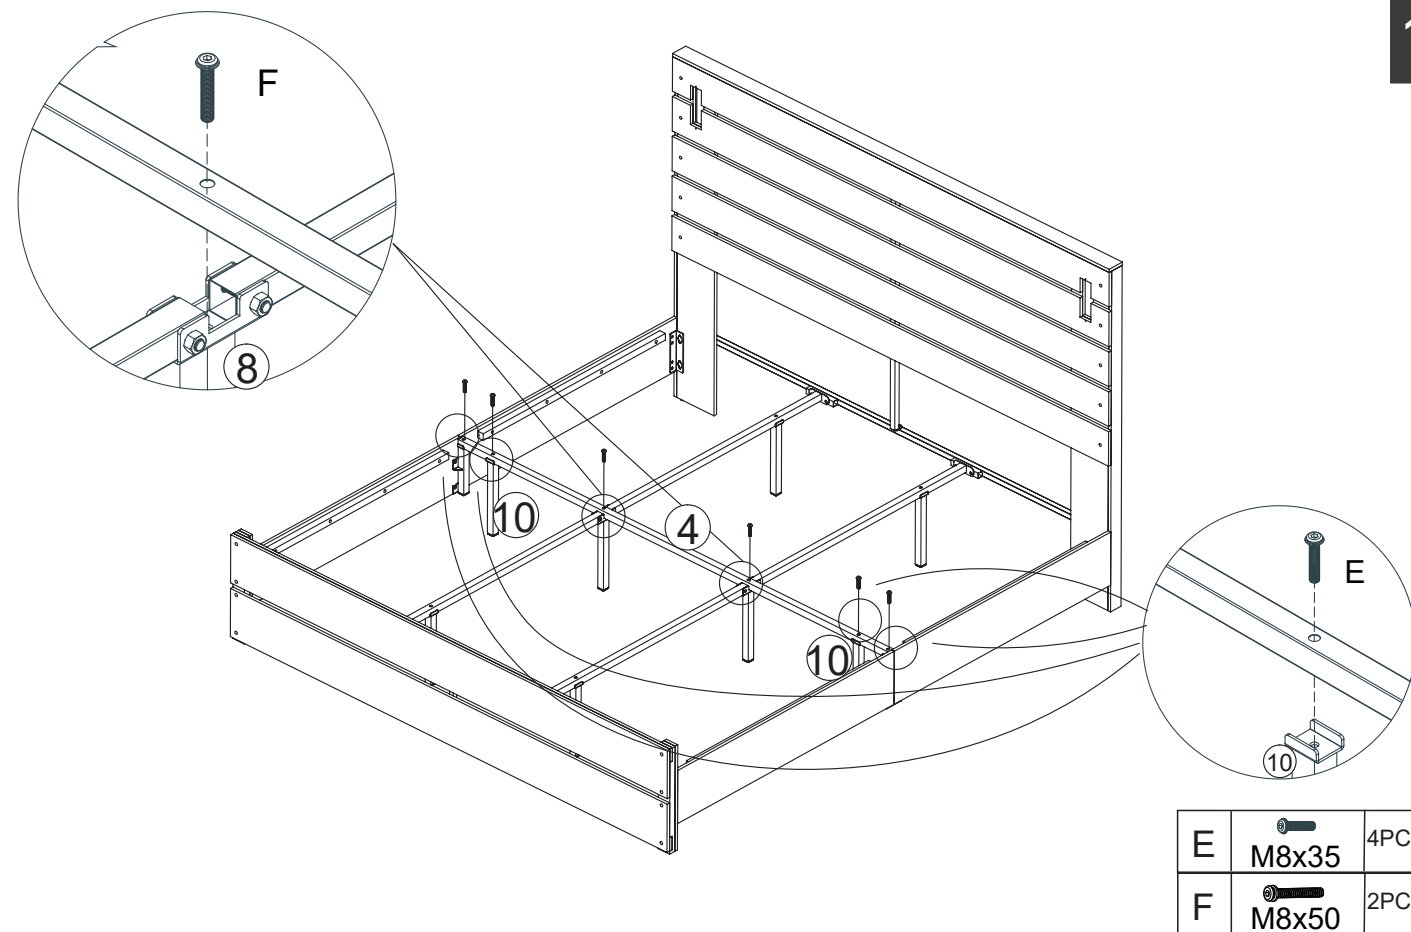
11/15



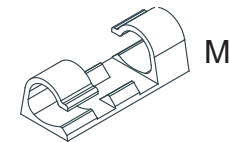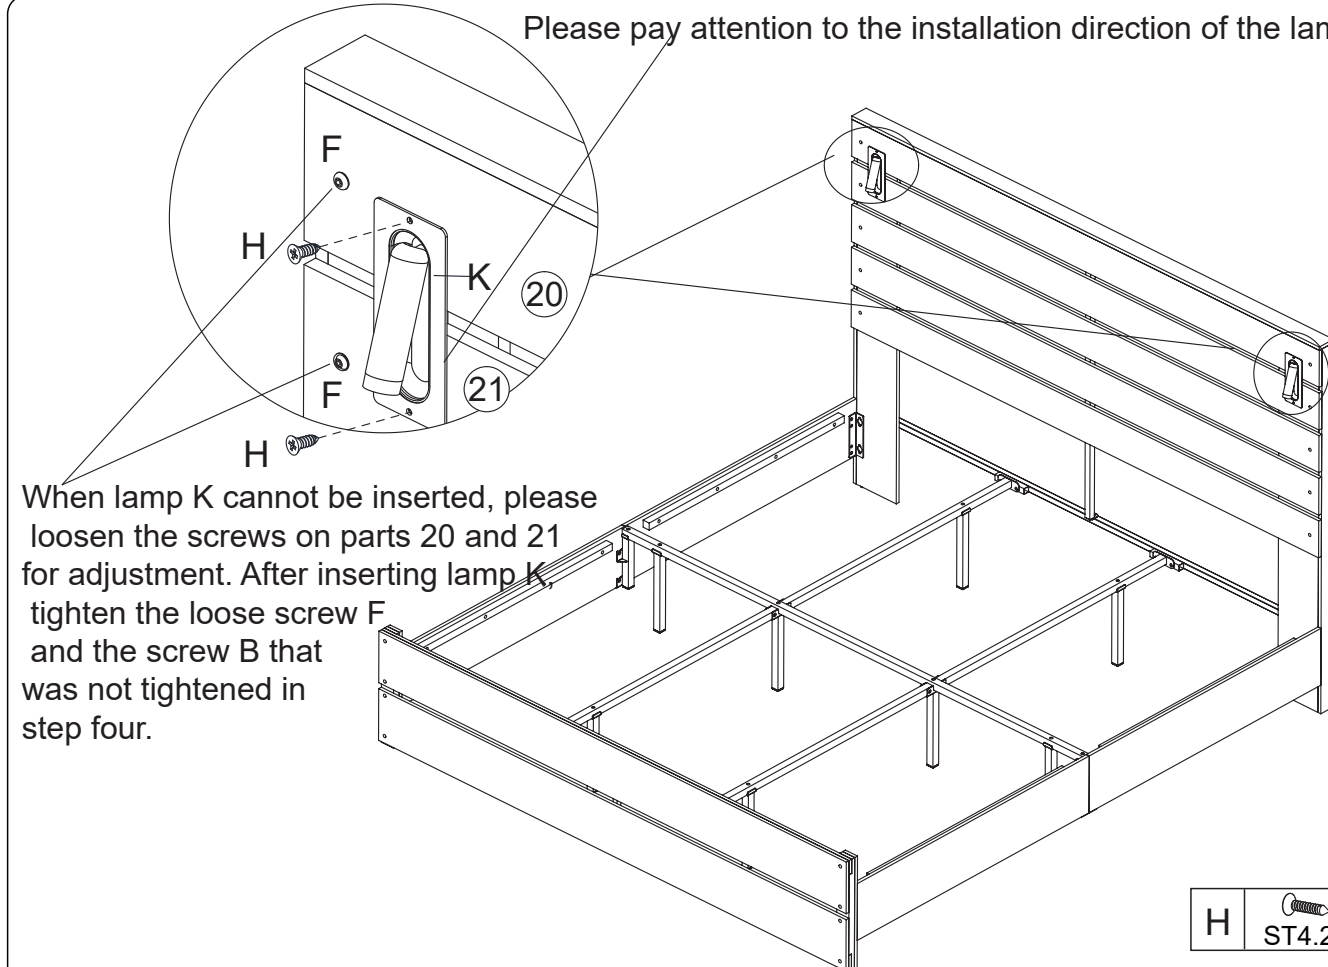Please pay attention to the installation direction of the lamp K




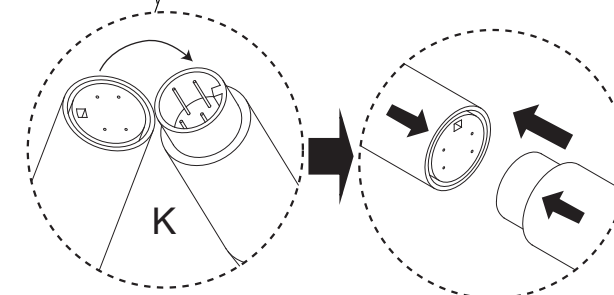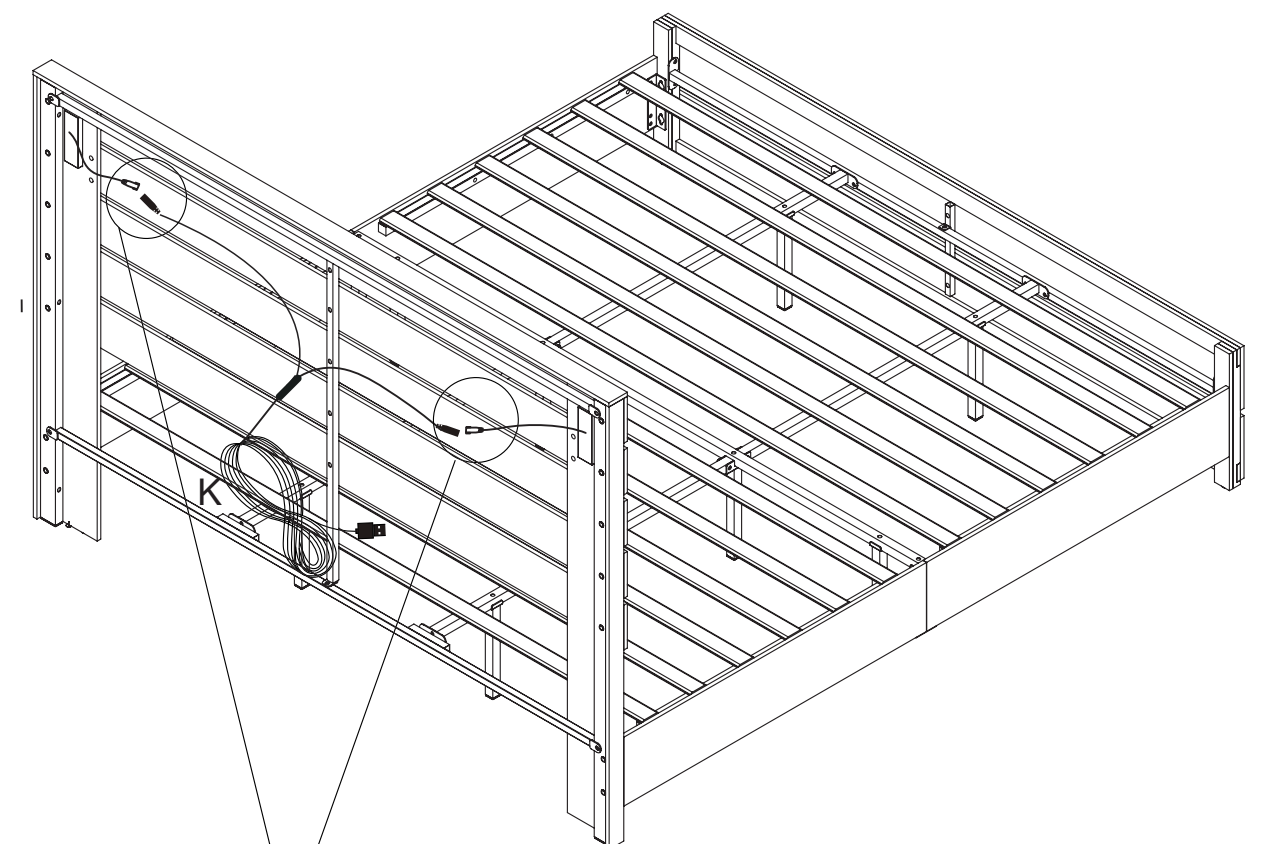Use a line organizer to organize the circuit





Connect cables from the lights on headboard with one power cable.

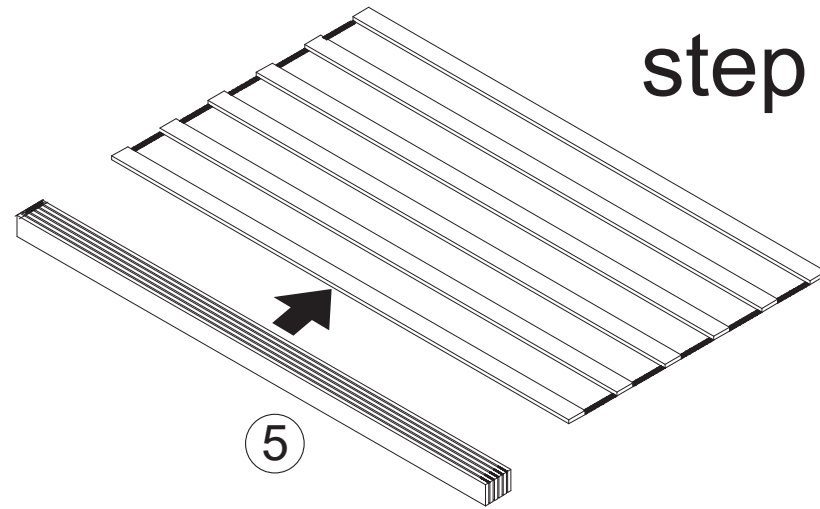step 1



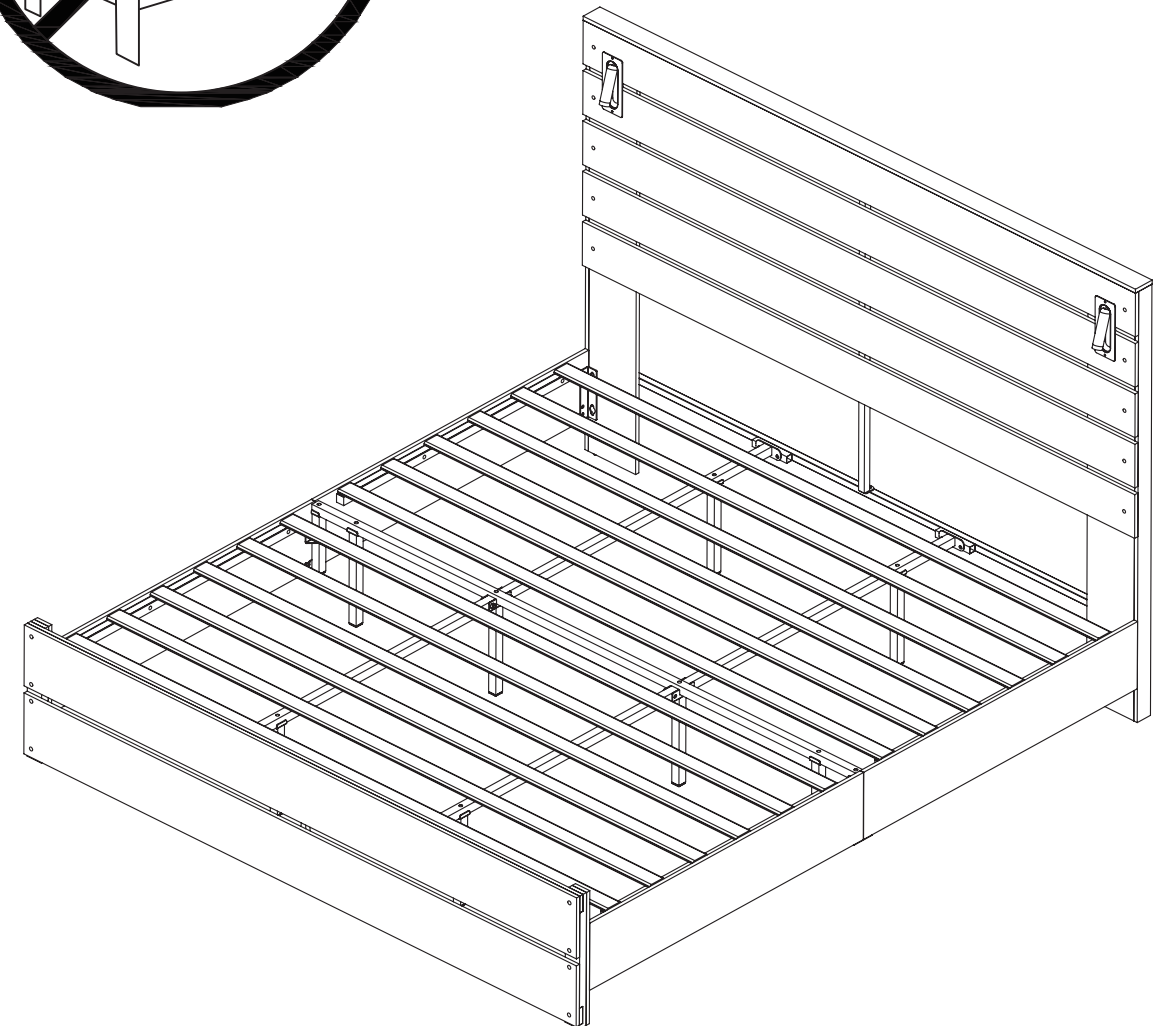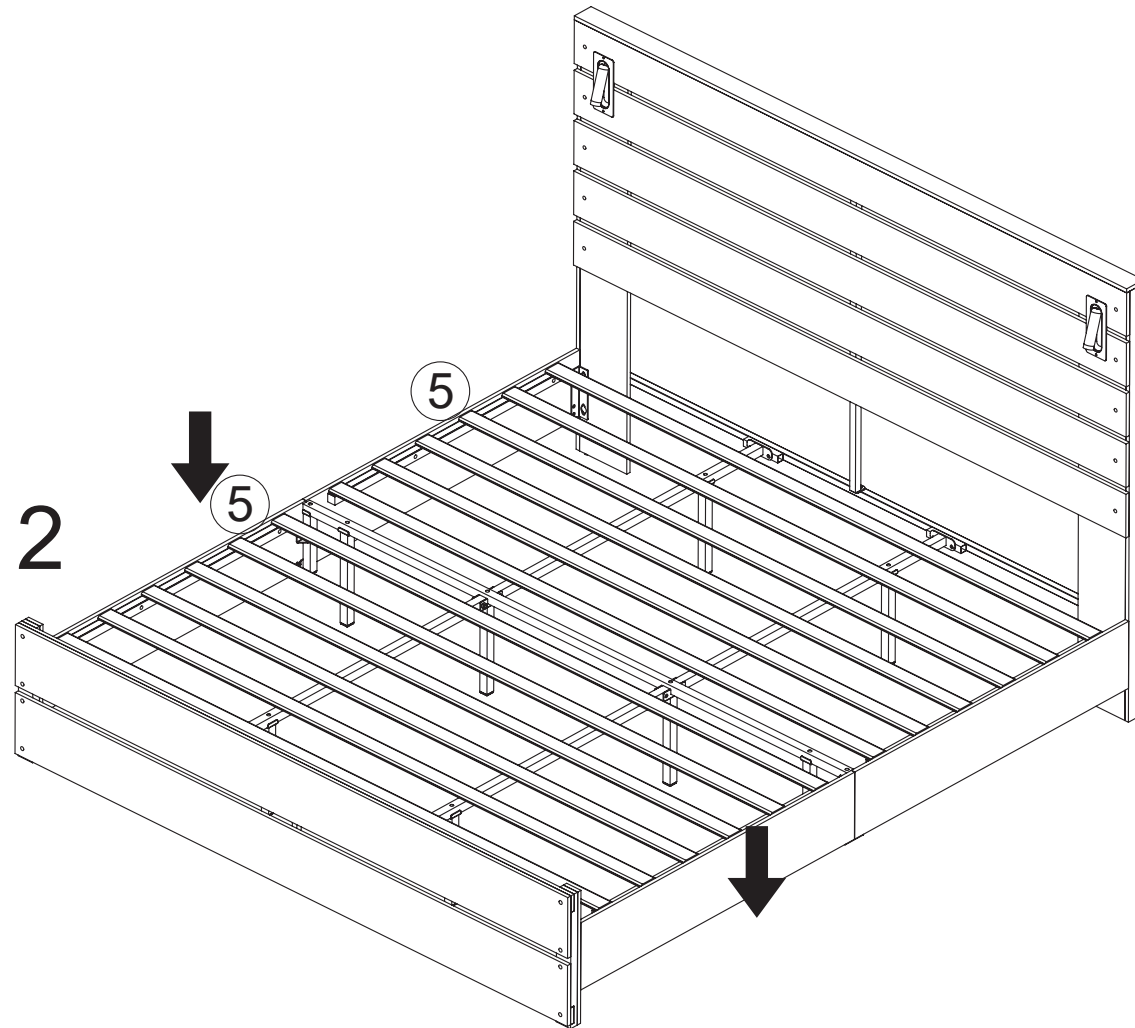step 2



Please make sure to check that all screws are tightened after completing the entire installation.

Installation Complete