


ASSEMBLY INSTRUCTIONS

Wood Platform Bed (BSW010-Q)


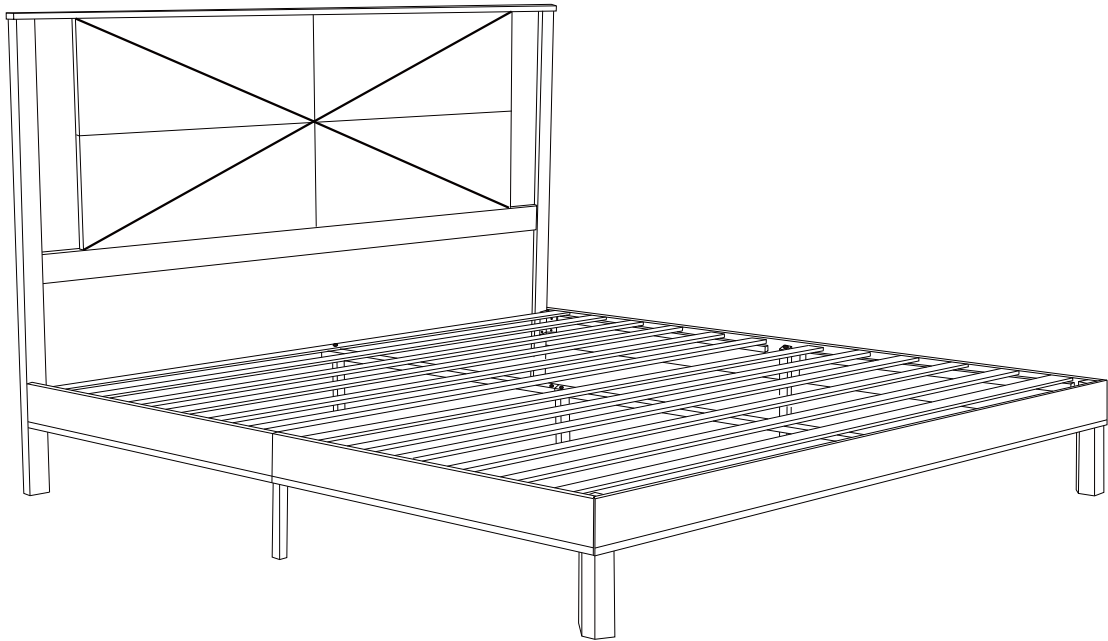


Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.



Please follow the instruction manuals and use a pad to protect the product during your assembly.

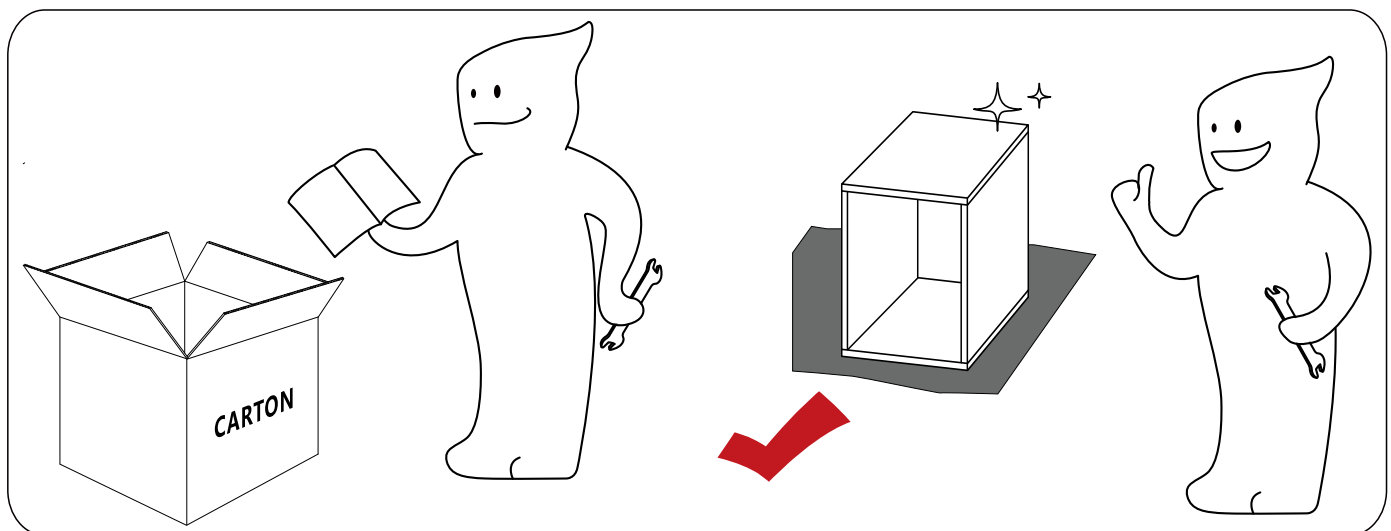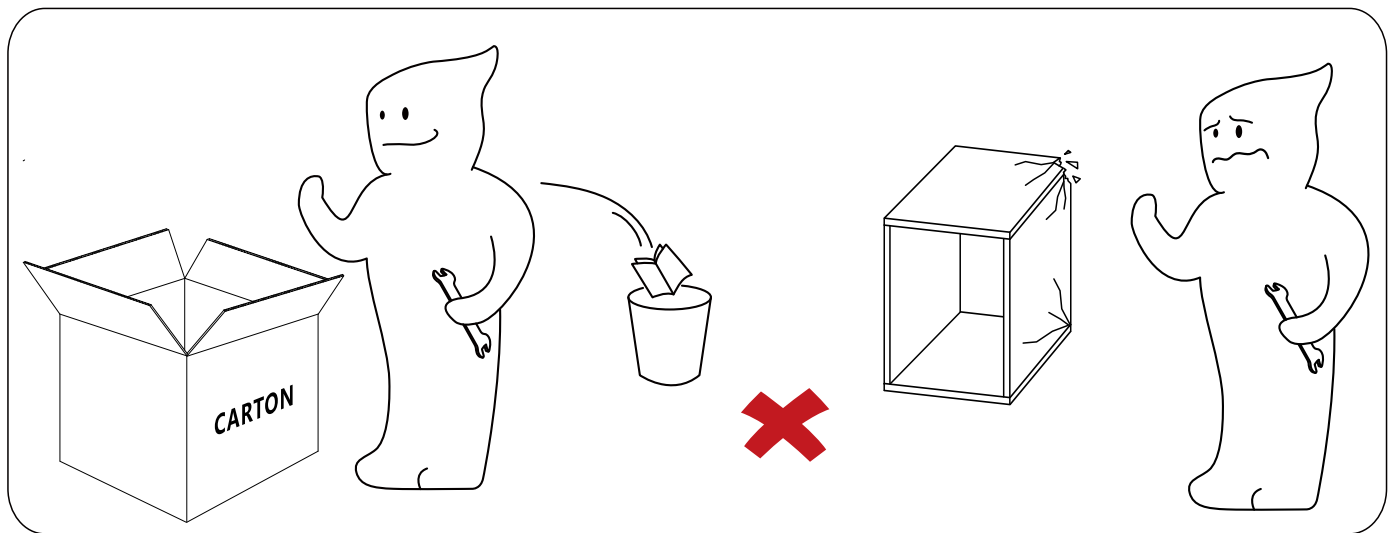


Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.














For easier and better assembly, **2** or more adults are required.

ASSEMBLY INSTRUCTIONS

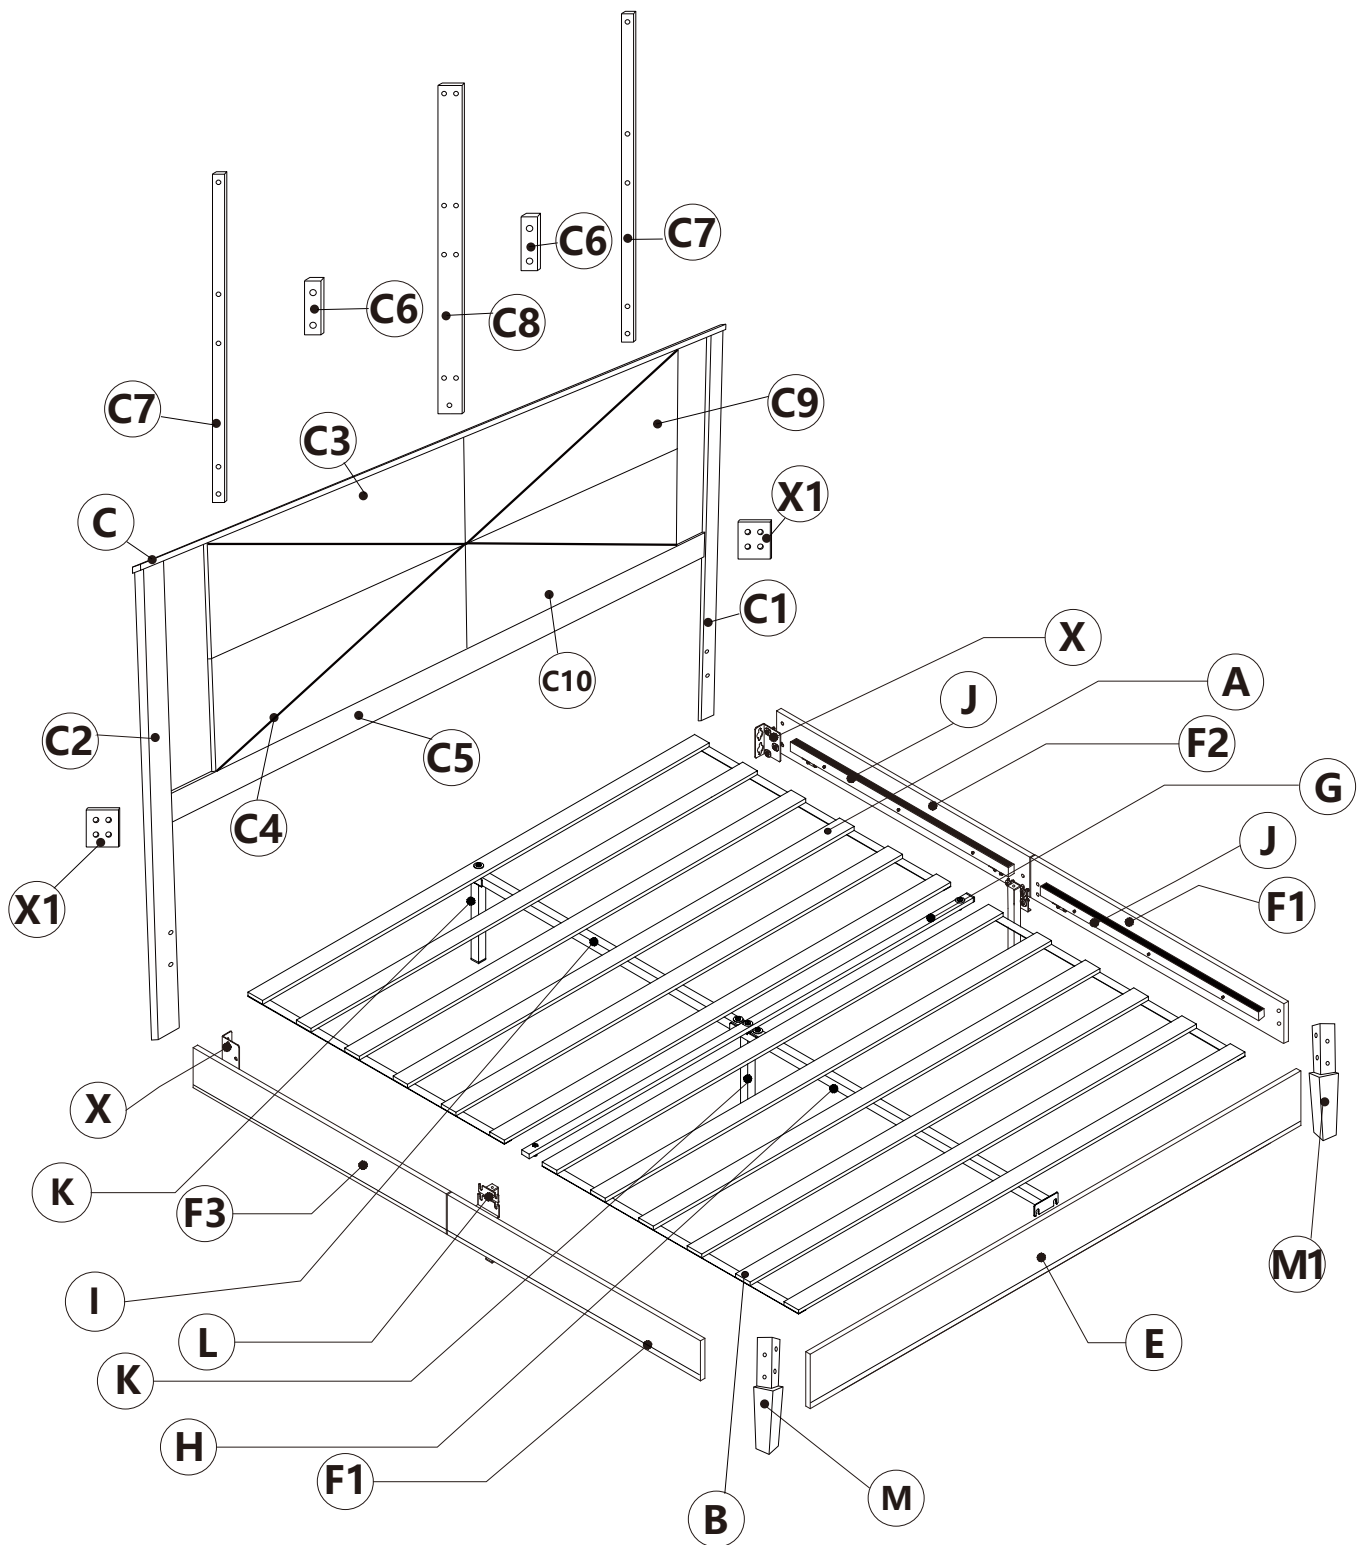


ASSEMBLY INSTRUCTIONS

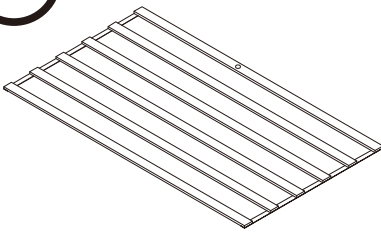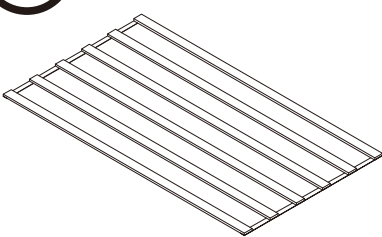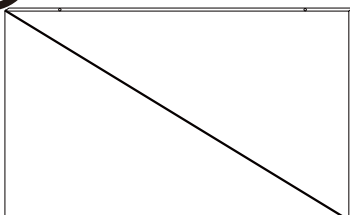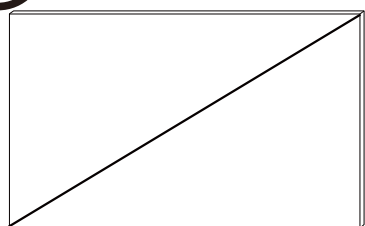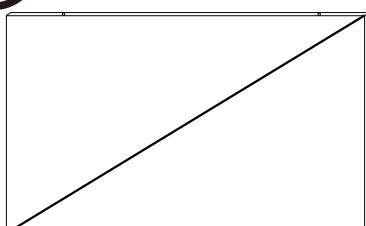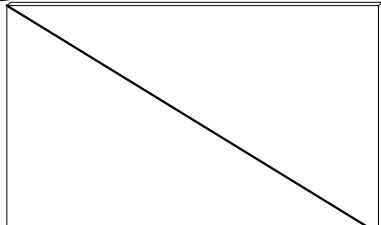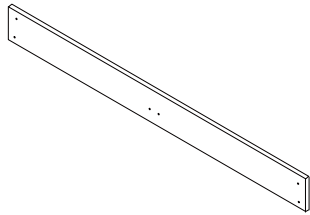(A)  1pc	(B)  1pc	(C)  1pc
(C1)  1pc	(C2)  1pc	(C3)  1pc
(C4)  1pc	(C5)  12pcs	(C6)  2pcs
(C7)  1pc	(C8)  2pcs	(C9)  1pc
(C10)  1pc	(E)  1pc	(J)  4pcs


ASSEMBLY INSTRUCTIONS

F1

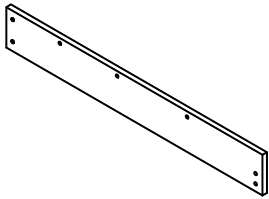


2pcs

F2

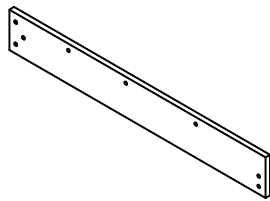


1pc

F3

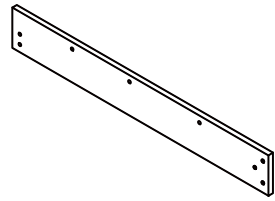


1pc

M




1pc

M1




1pc

G

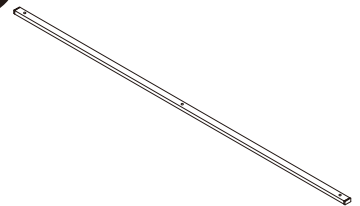


1pc

H

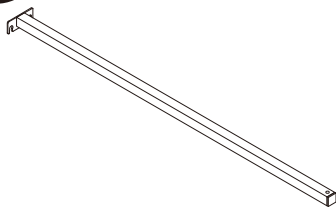














1pc

I

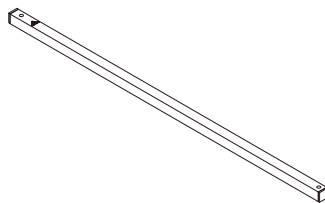


1pc

ASSEMBLY INSTRUCTIONS

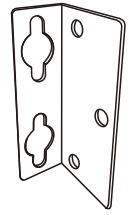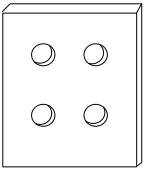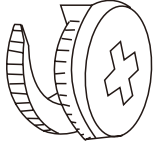
(K)  2pcs	(L)  2pcs	(N)  M6 1pc
(P)  M8x35 mm 5pcs	(Q)  φ8x18x1.5 mm 46pcs+1pc	(R)  M8x30 mm 12pcs
(S)  M8x50 mm 9pcs	(W)  M8x14 mm 20pcs+1pc	(X)  100x2 mm 2pcs
(X1)  70x2 mm 2pcs	(T)  M6x14 mm 8pcs	(U)  M6x25 mm 23pcs+1pc
(Z)  φ6x18x1.5 mm 31pcs+1pc	(D1)  6pcs	(D2)  6pcs

1

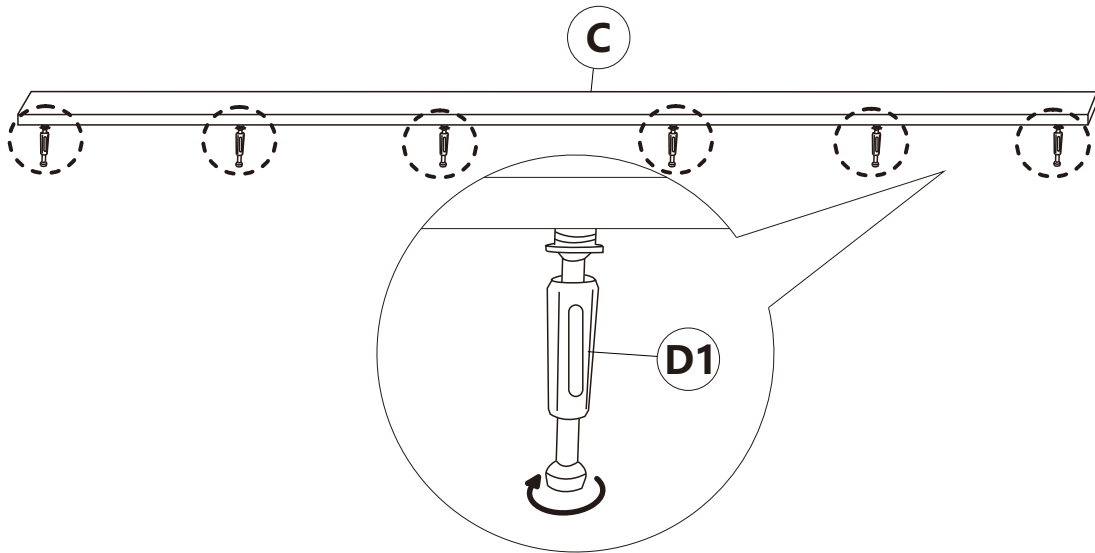


D1  **6pcs**

2

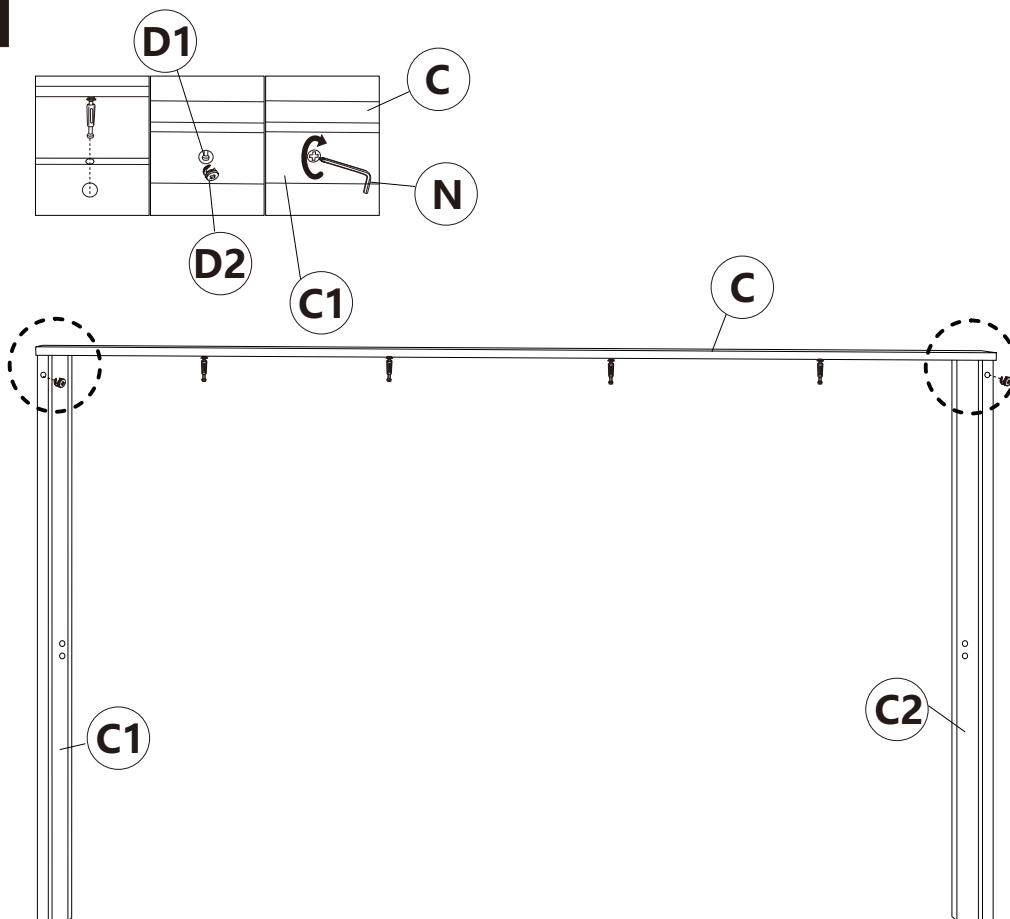


D2  **2pcs**
N  **1pc**
M6

3

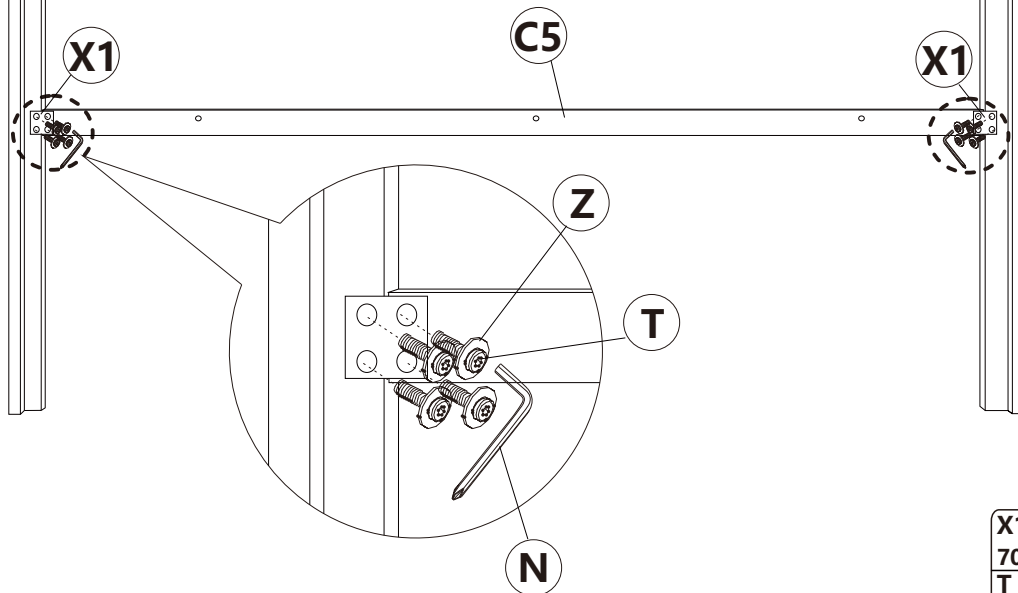


X1		2pcs
T		8pcs
Z		8pcs
N		1pc

4

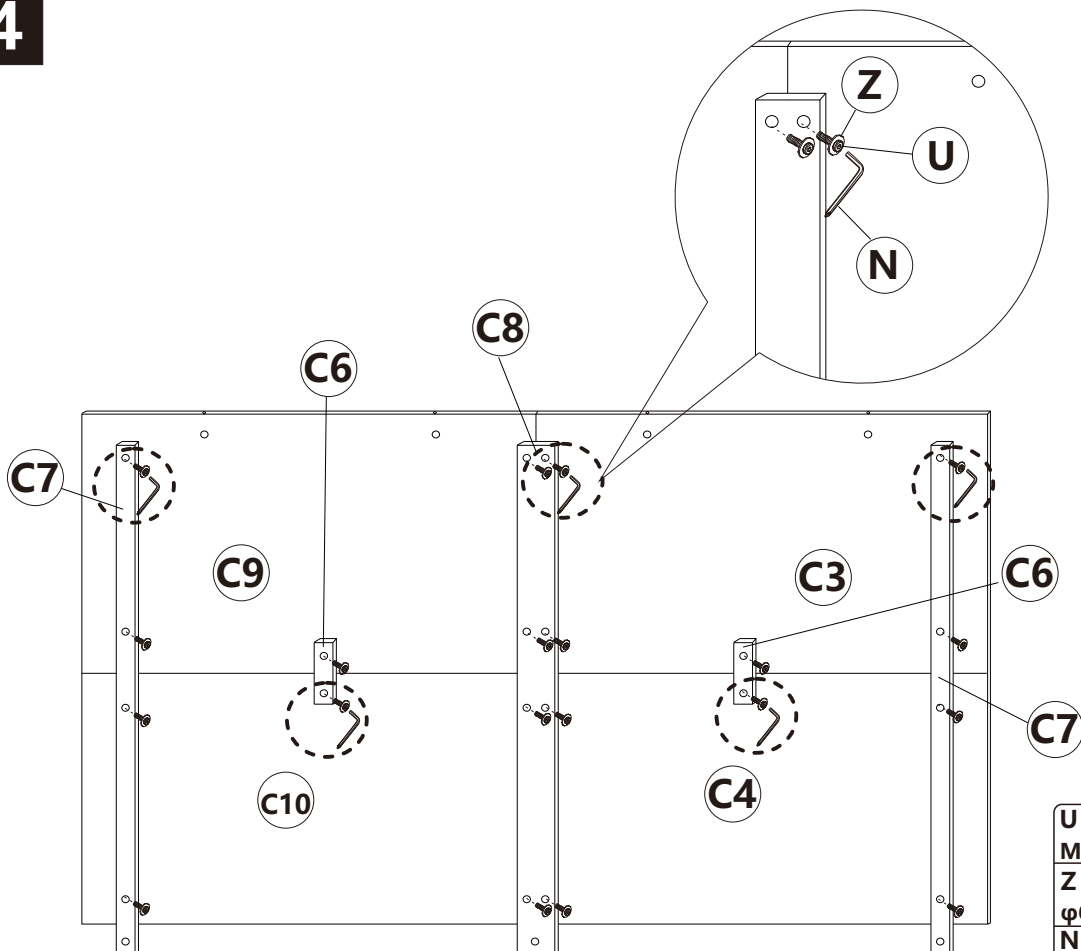


U		20pcs
Z		20pcs
N		1pc

5

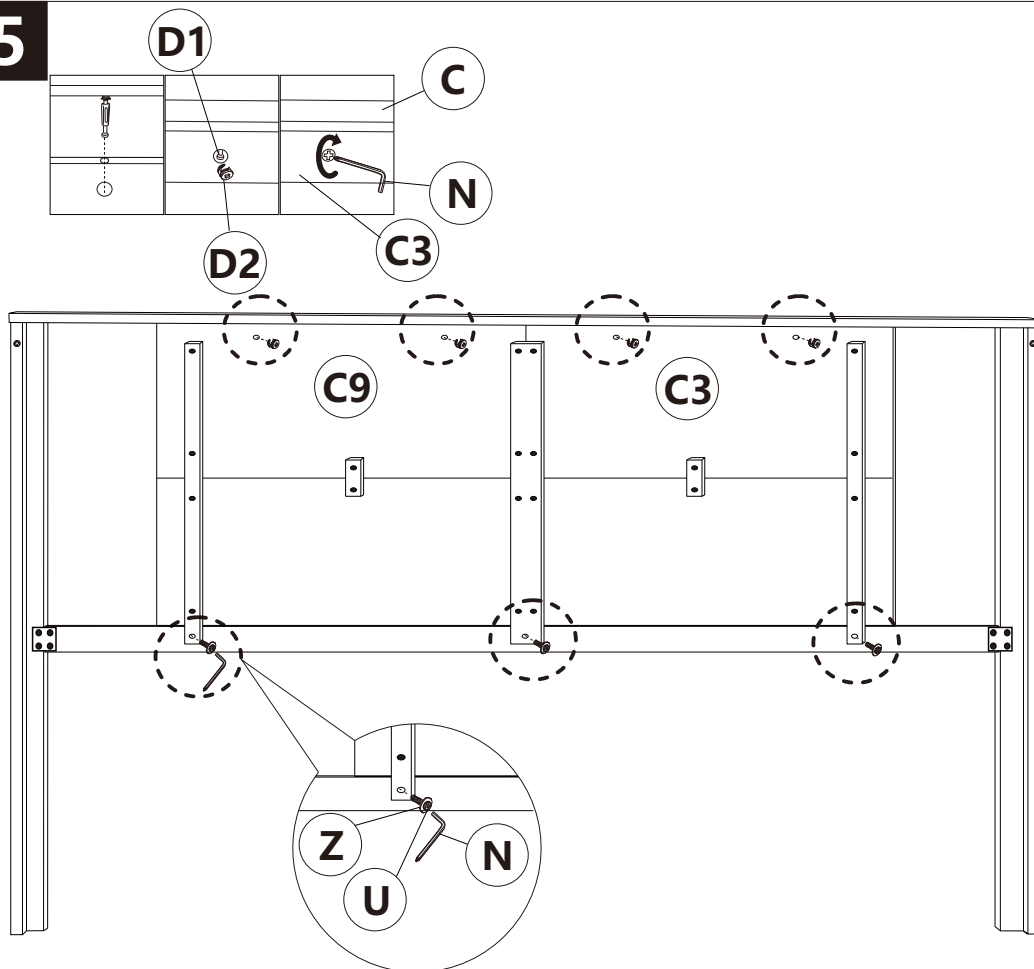

D2		4pcs
U		3pcs
M6x25 mm		
Z		3pcs
φ6x18x1.5 mm		
N		1pc
M6		


6

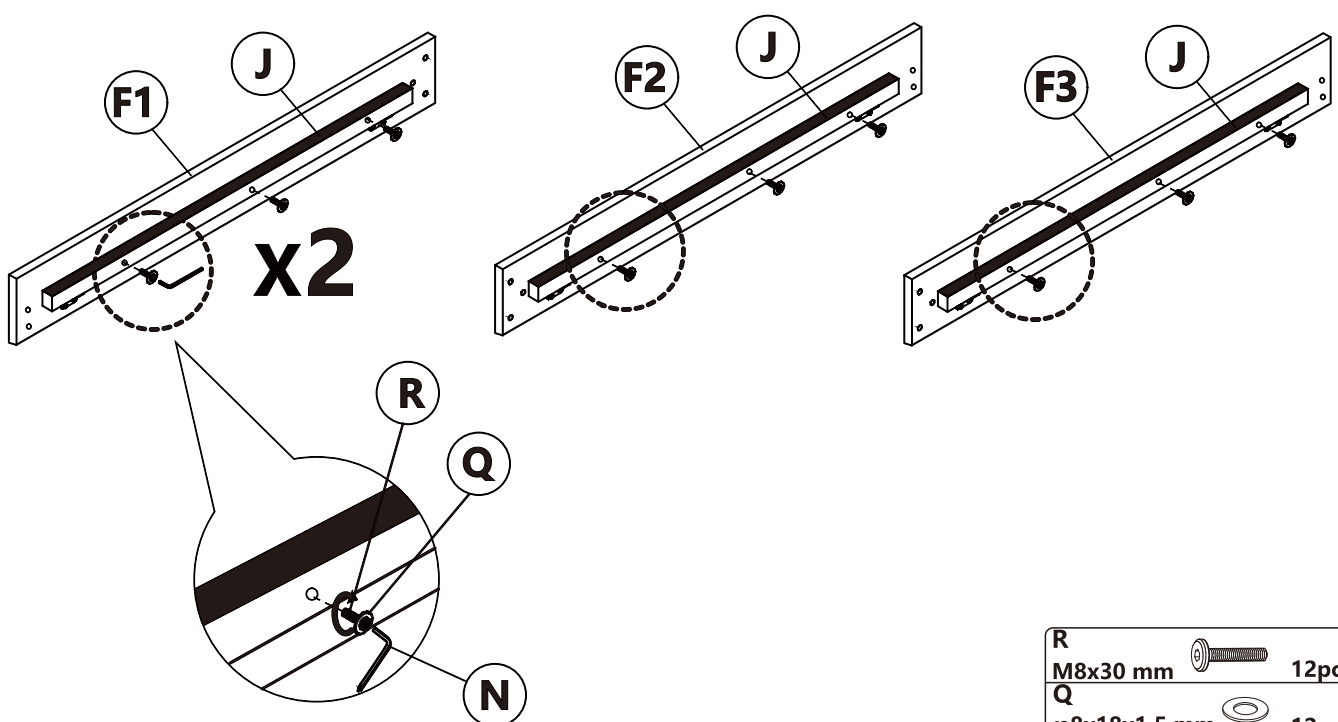

R		12pcs
M8x30 mm		
Q		12pcs
φ8x18x1.5 mm		
N		1pc
M6		

7


Take out parts F1 and F3, and lock the iron frame foot L in the middle according to the figure. Note that there are **2 holes** located on the inner side of the board. Then lock the bed hanging pieces X on the front of the board, with **3 holes** on the side.

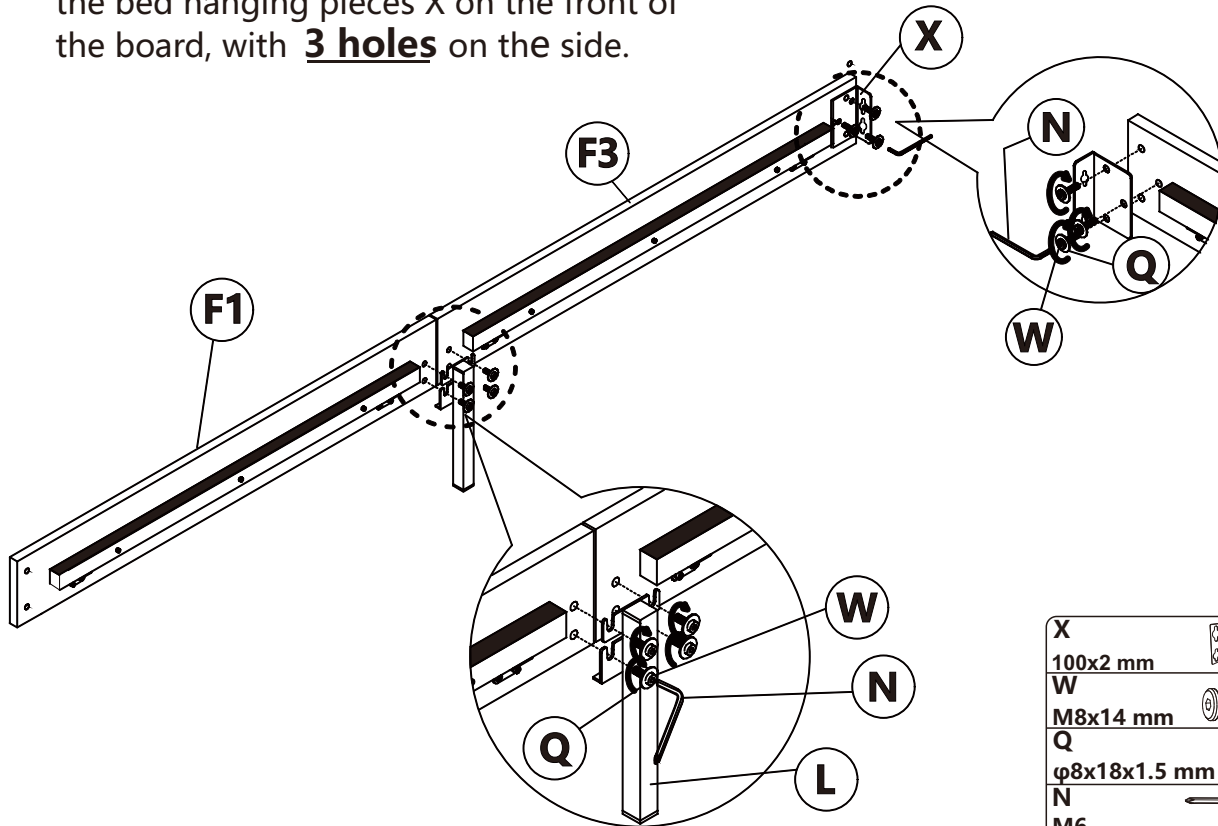

X		1pc
100x2 mm		
W		7pcs
M8x14 mm		
Q		7pcs
φ8x18x1.5 mm		
N		1pc
M6		


8

Same as Step 7

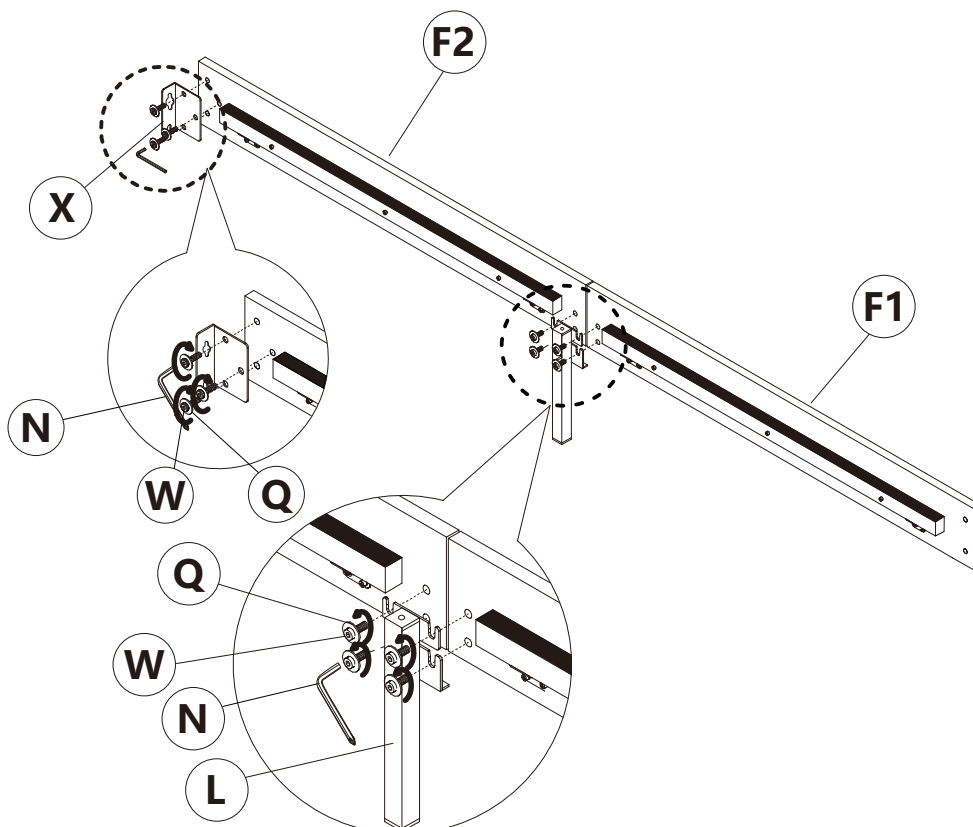


X		1pc
100x2 mm		
W		7pcs
M8x14 mm		
Q		7pcs
φ8x18x1.5 mm		
N		1pc
M6		

9 Noted the direction of the arrow on the middle cross beam is pointing to the front.

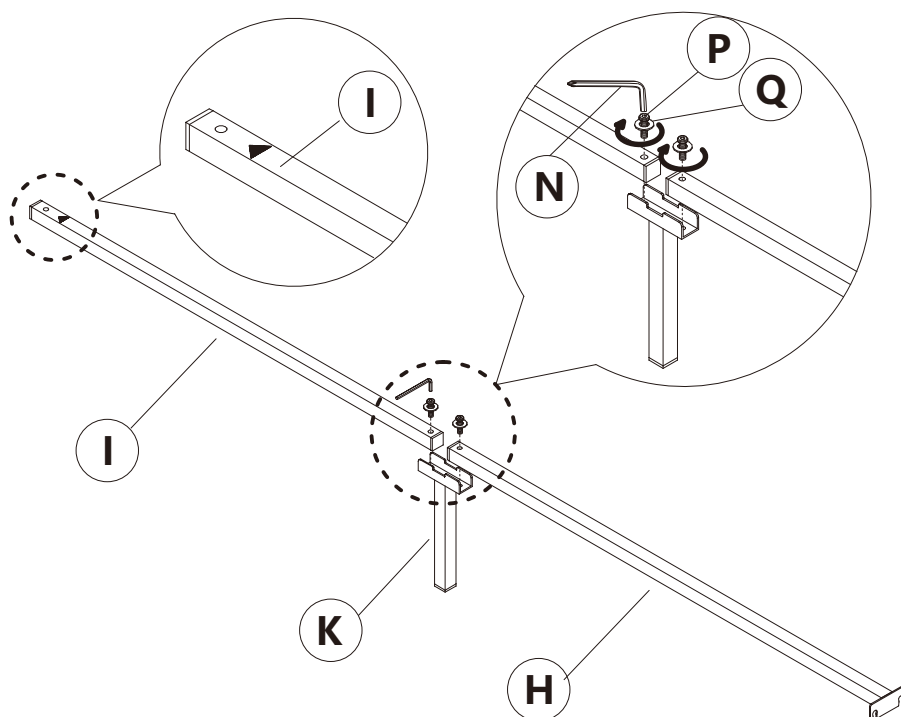

P	M8x35 mm		2pcs
Q	φ8x18x1.5 mm		2pcs
N	M6		1pc


10

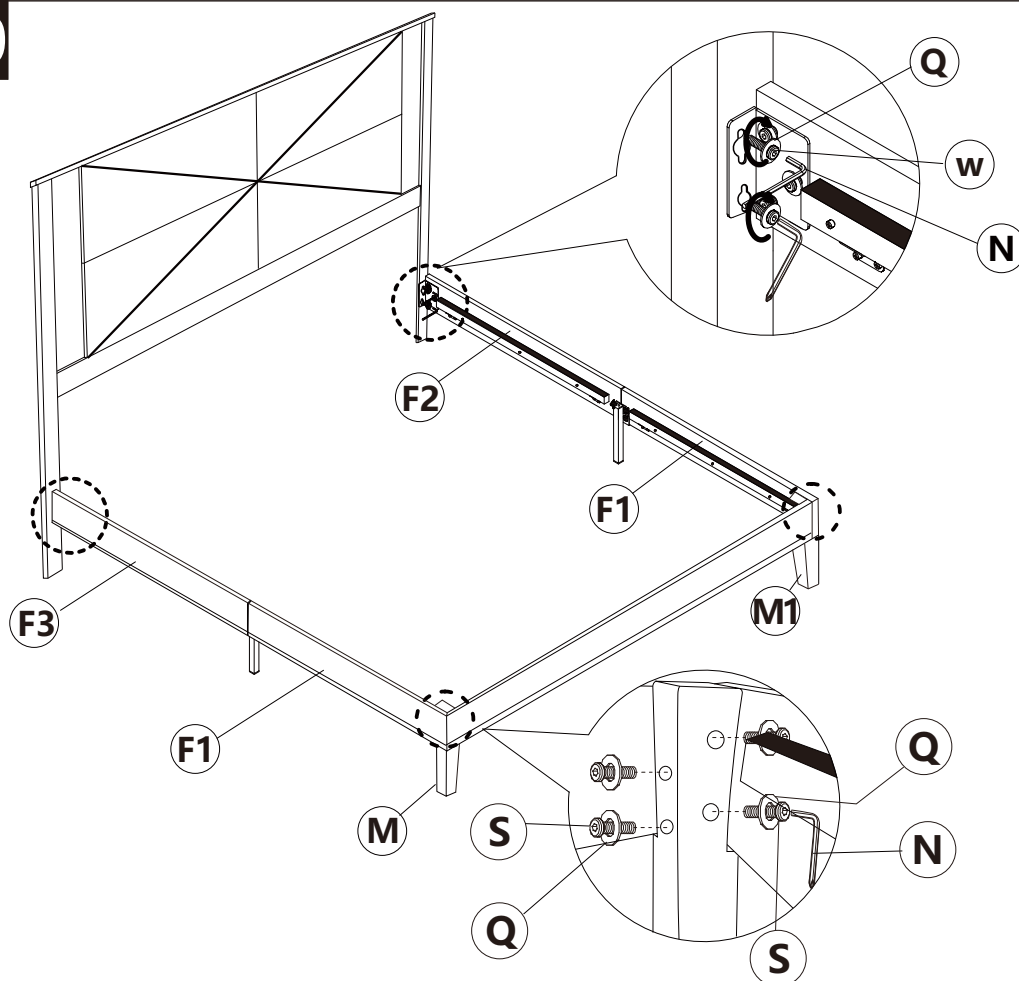

W	M8x14 mm		4pcs
S	M8x50 mm		8pcs
Q	φ8x18x1.5 mm		12pcs
N	M6		1pc


ASSEMBLY INSTRUCTIONS

11

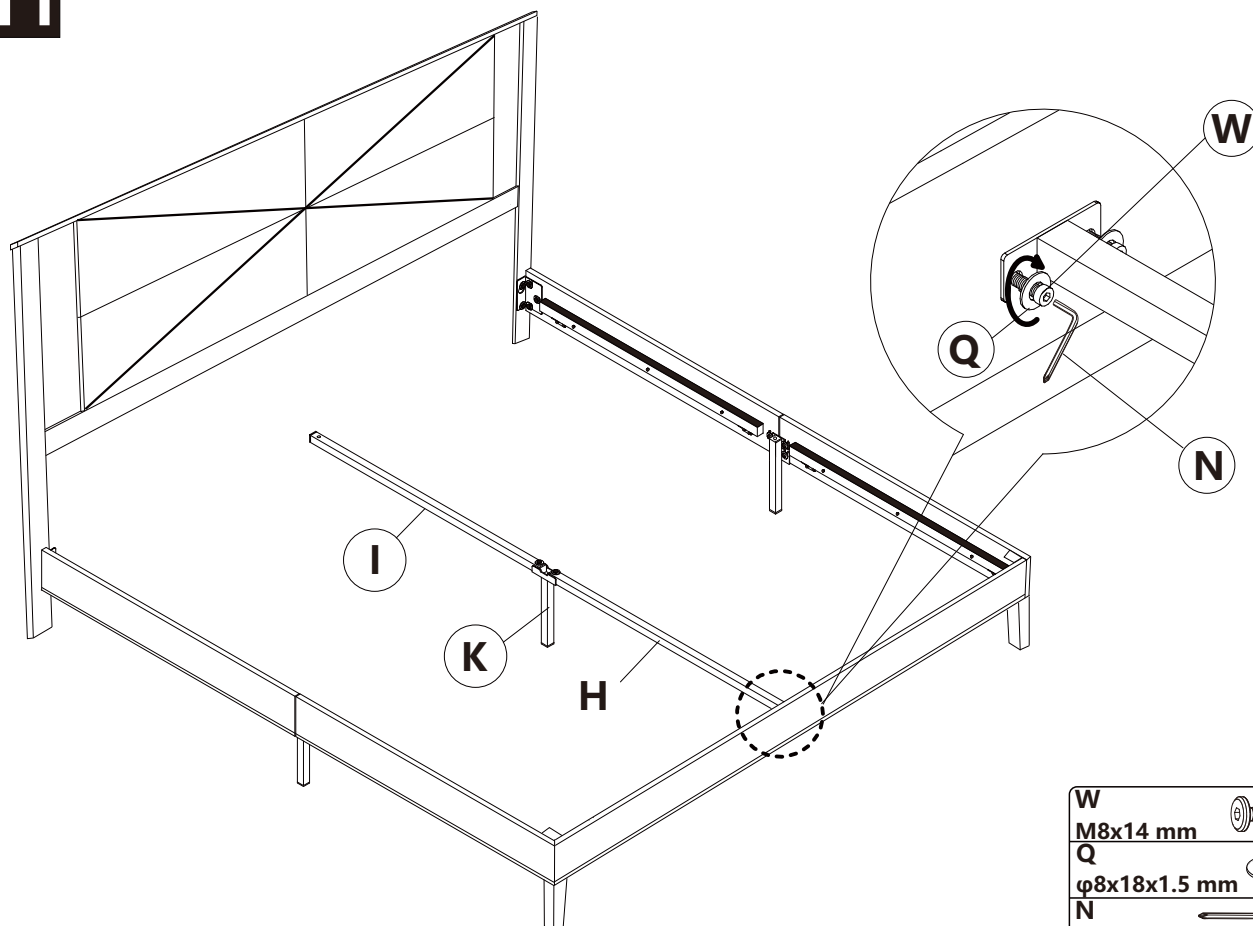


W		2pcs
M8x14 mm		
Q		2pcs
φ8x18x1.5 mm		
N		1pc
M6		

12

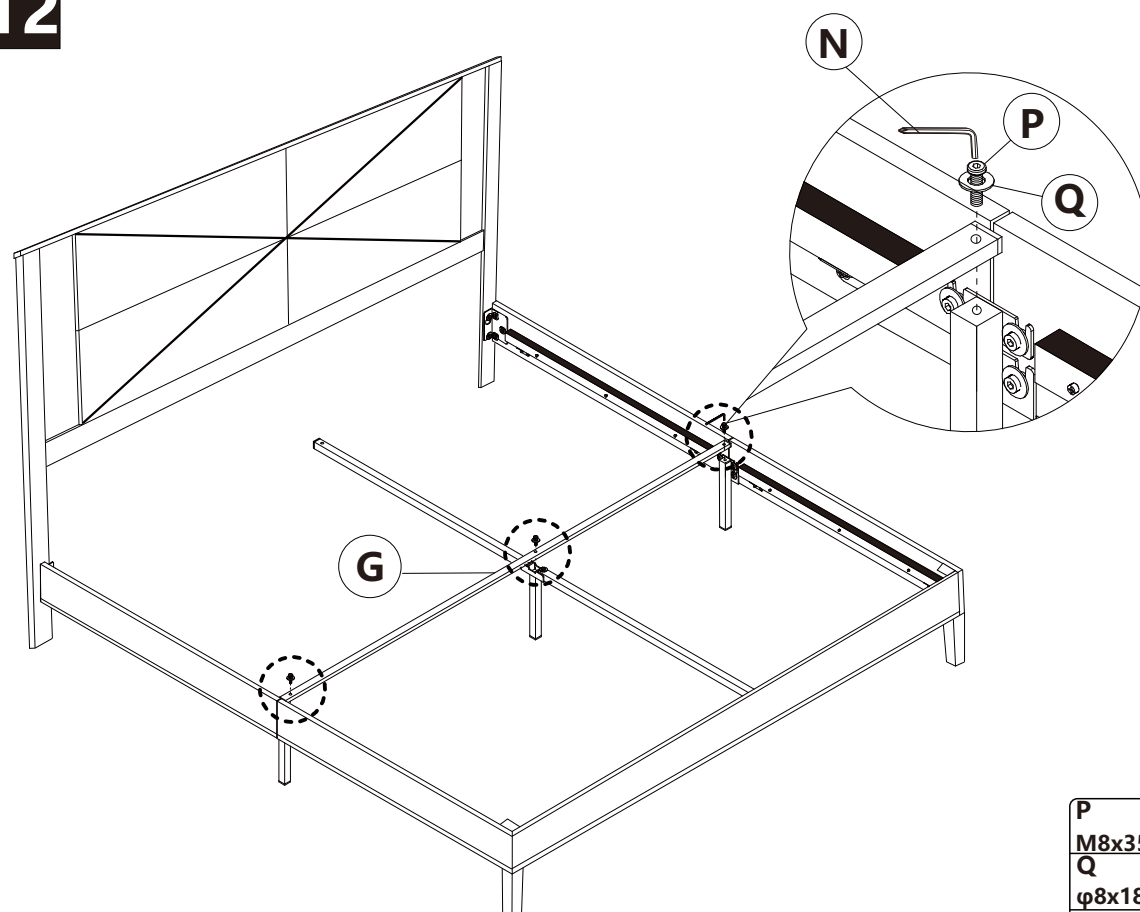


P		3pcs
M8x35 mm		
Q		3pcs
φ8x18x1.5 mm		
N		1pc
M6		

13

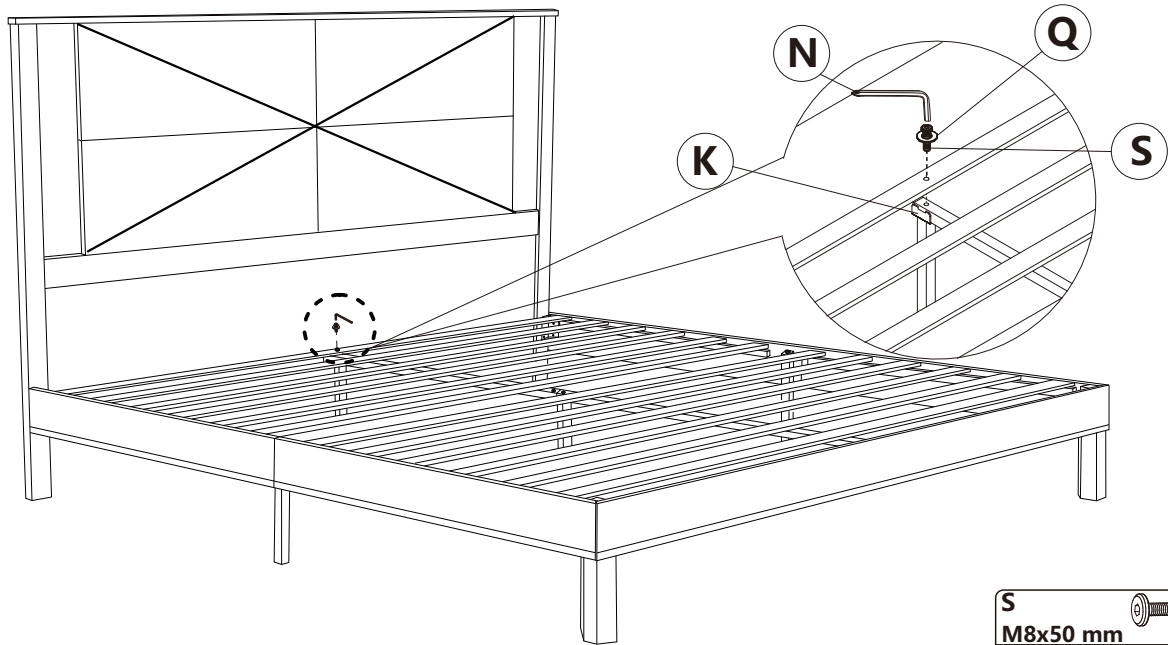

S		1pc
M8x50 mm		
Q		1pc
φ8x18x1.5 mm		
N		1pc
M6		

14

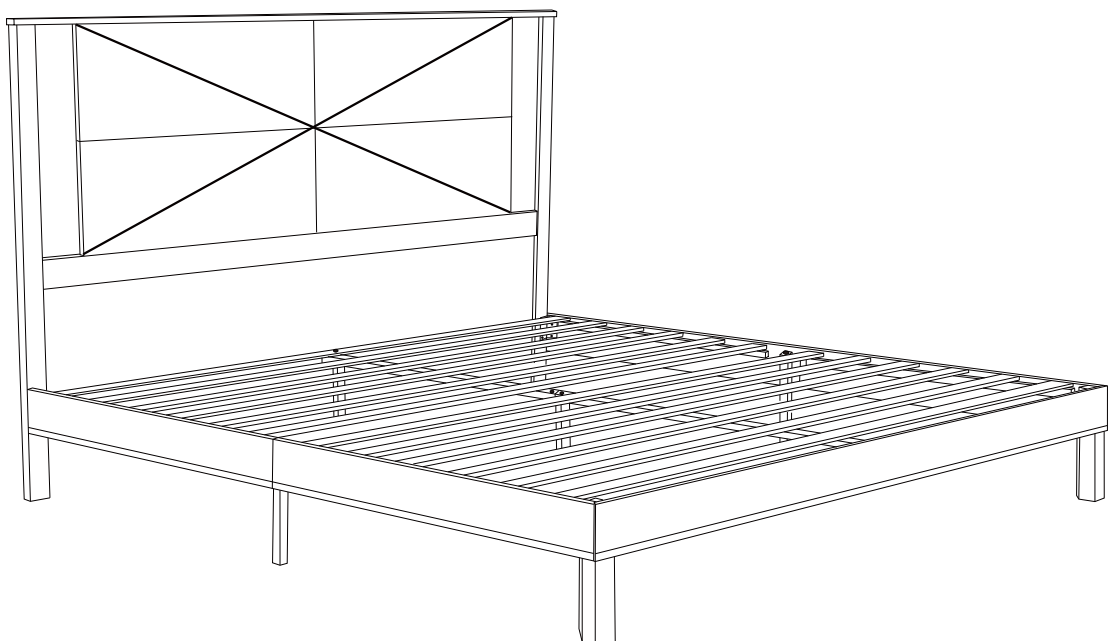

Installation Complete