


Assembly Instruction


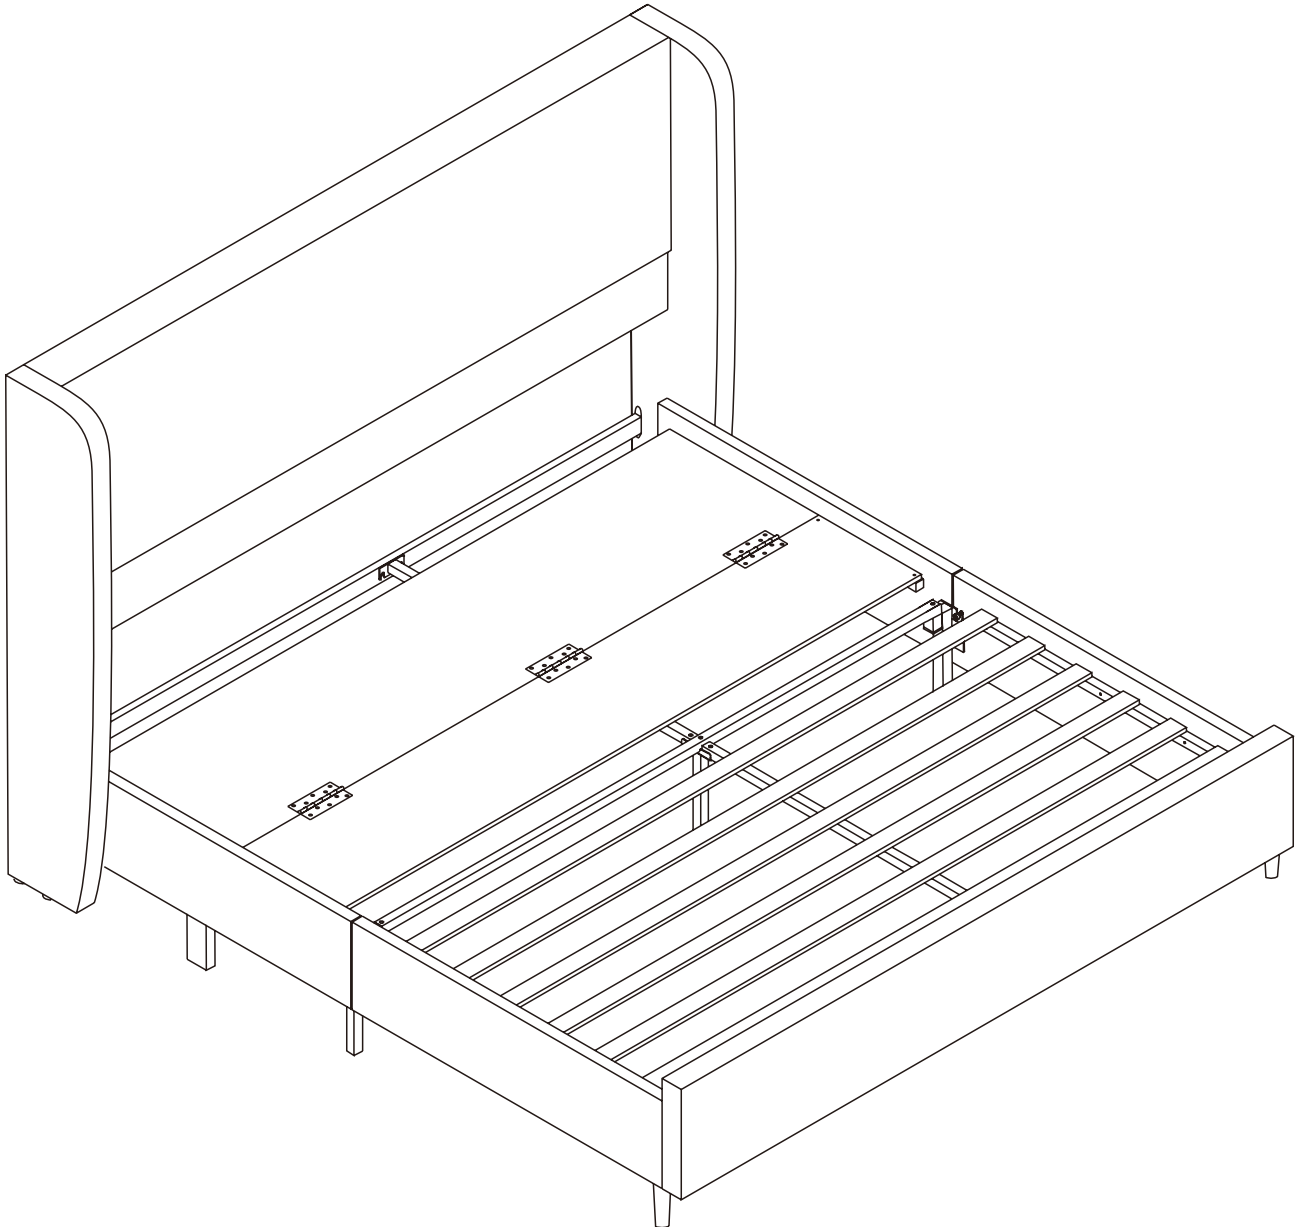


Please check that you have all the parts listed before you start assembling,if you do find that something is missing,do not continue assembly,please contact us immediately.

NOTE:Please do not completely tighten all the hardware until the entire assembly is complete!


! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

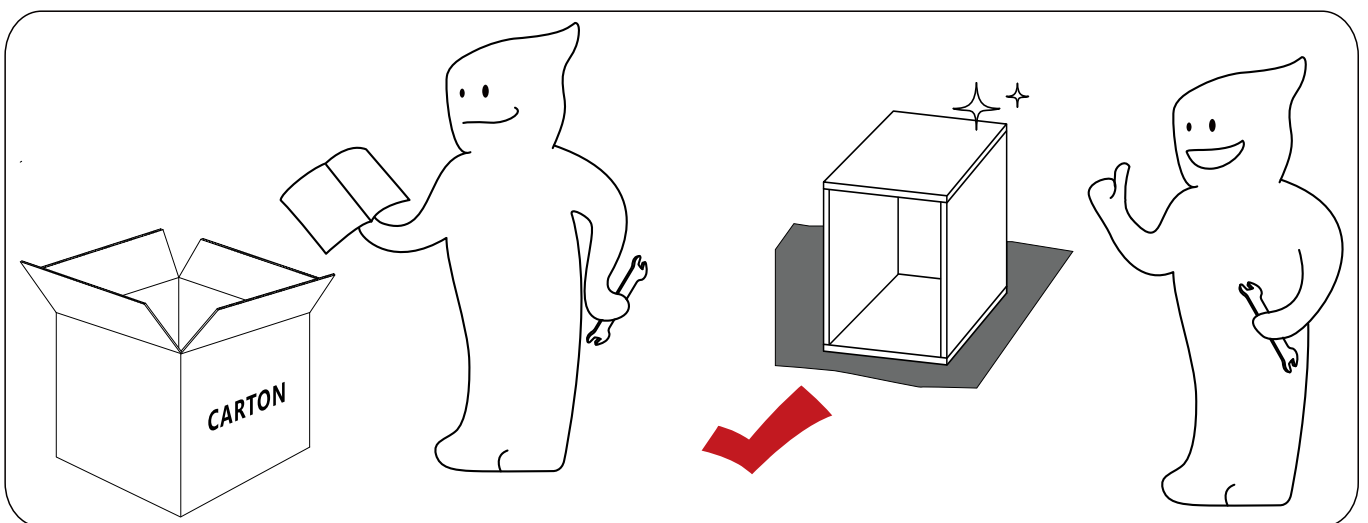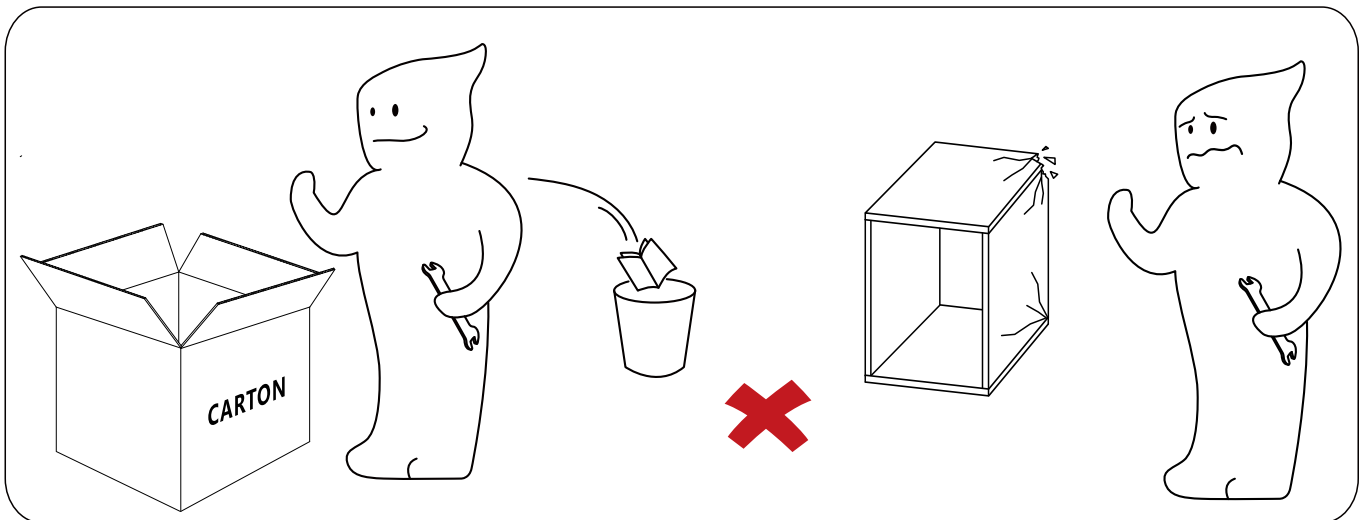


Note:















1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

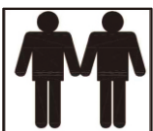
















For easier and better assembly, **2** or more adults are required.



BED FRAME PARTS LIST

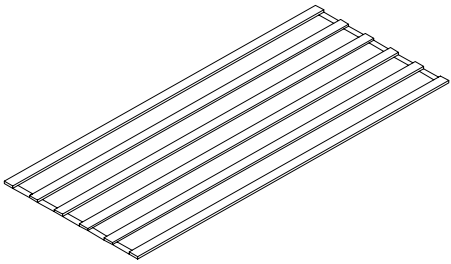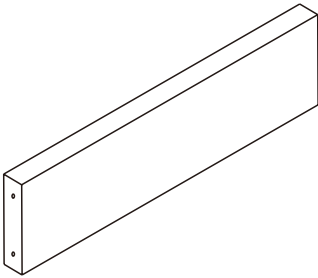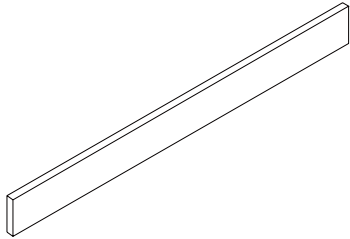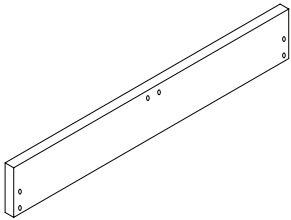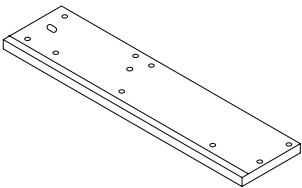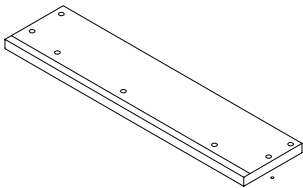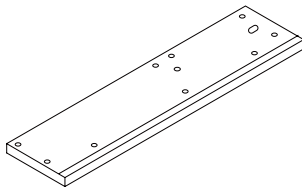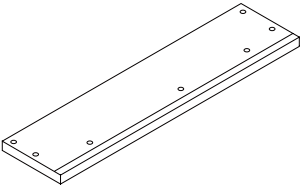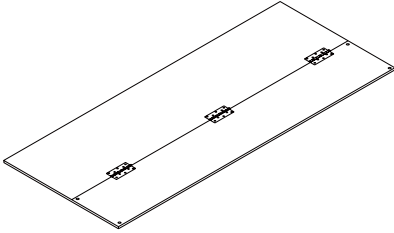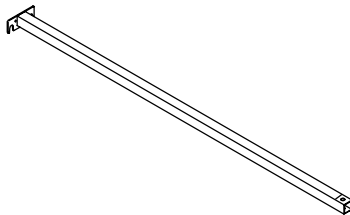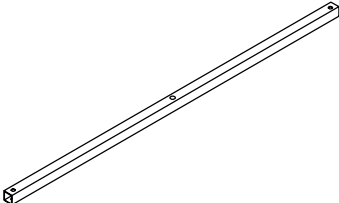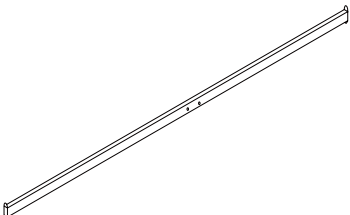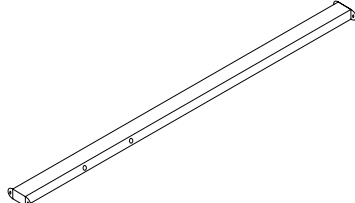B 1PCS  Slat	C1 1PC  Top headboard	C2 1PC  Top headboard
D1 1PC  Left Leg	D2 1PC  Right Leg	E 1PC  Footboard
F1 1PC  Side rail	F2 1PC  Side rail	F3 1PC  Side rail
F4 1PC  Side rail	G 1PC  Front support panel	H1 1PC  Middle front support bar
H2 1PC  Cross bar	H3 1PC  Upper Headboard bar	H4 1PC  Lower Headboard bar


BED FRAME PARTS LIST

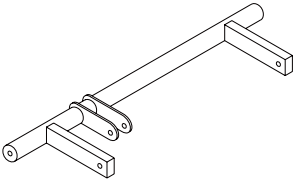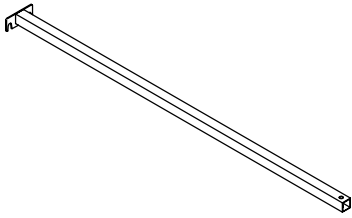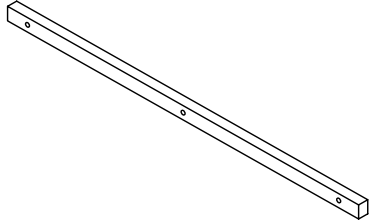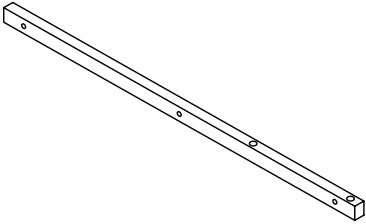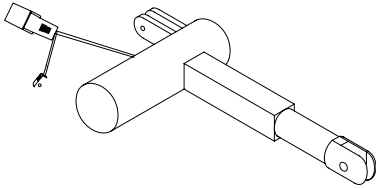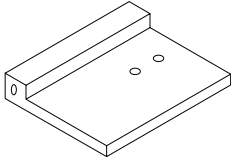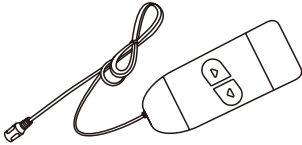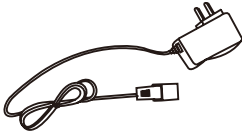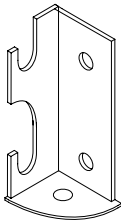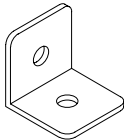H5	1PC	H6	1PC	J1	2PCS
					
Drive rod		Middle behind support bar		Side bar	
J2	2PCS	K	1PC	L	1PC
					
Side bar		Gas-lifter		Mounting base	
M1	1PC	M2	1PC	N1	1PC
					
Controllers		Power cable		Middle support leg	
N2	2PCS	N3	2PCS	N4	2PCS
					
Bed side support leg		Bed side support leg		Foot	
P1	1PC	P2	1PC	P3	7PCS
					
Connector-P1		Connector-P2		Connector-P3	

BED FRAME PARTS LIST

P4


1PC



Connector-P4










P5

1PC



Connector-P5

FITTING PART LIST

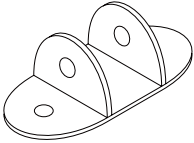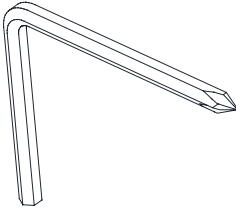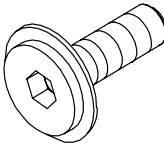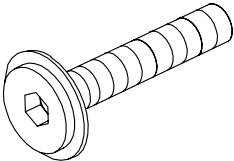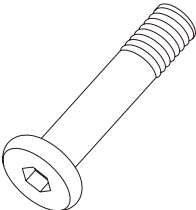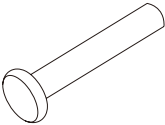
a	2PCS	b	1PC	c	1PC	d	8PCS
							
				M6		M4*45	
e	4PCS	f	38PCS	g	17PCS	h	12PCS
							
M8*40		M8*18		M8*35		M8*50	
i	14PCS	j	2PCS	m	4PCS	n	1PC
							
M8*18		M10*37				M8	
o	8PCS	r	4PCS	s	4PCS	v	2PCS
							

step1

f

M8*18

8PCS

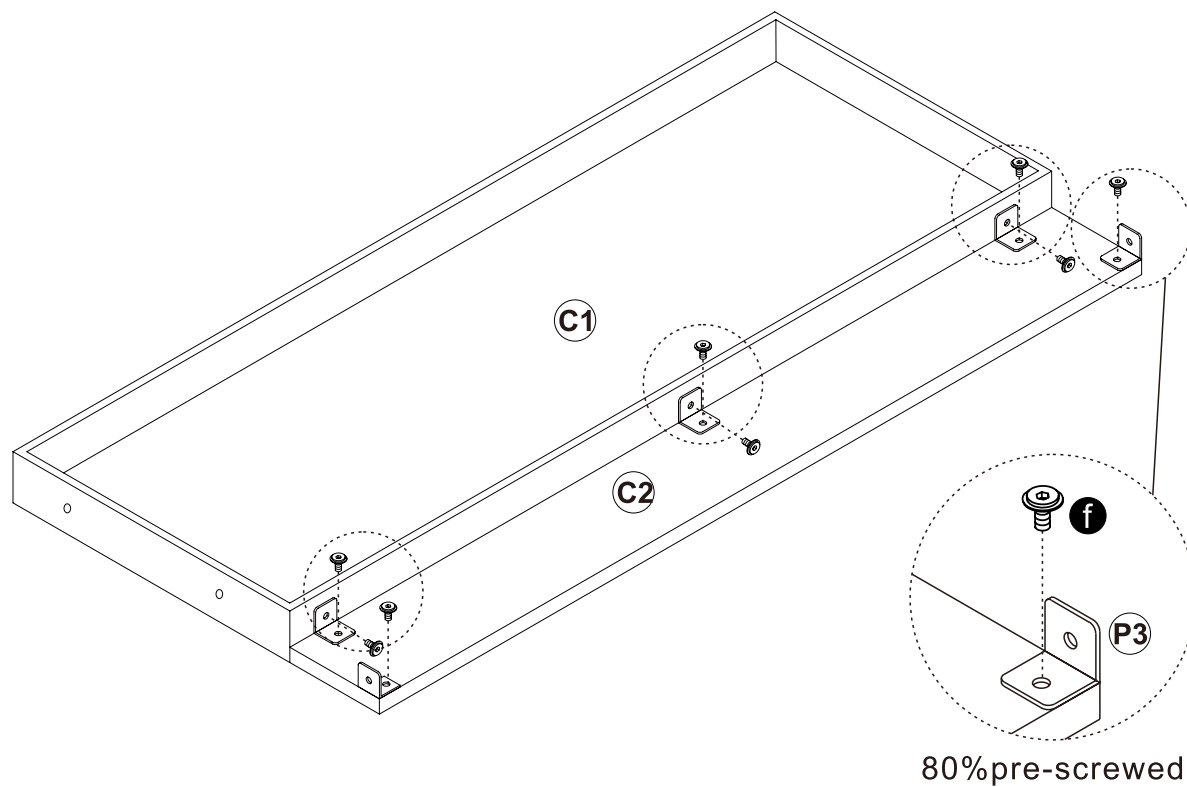


step2

g

M8*35

4PCS

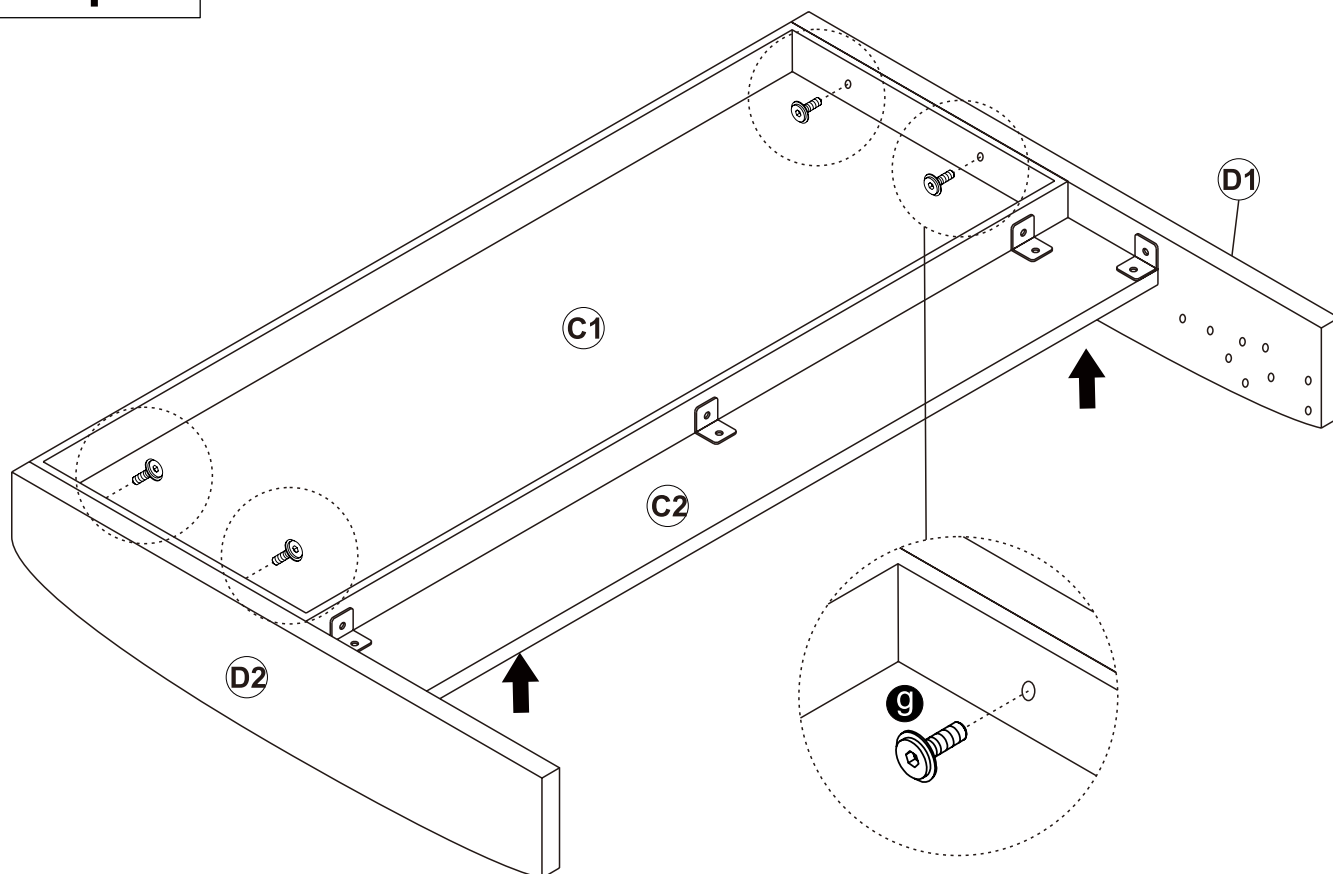


step3

f

M8*18

2PCS

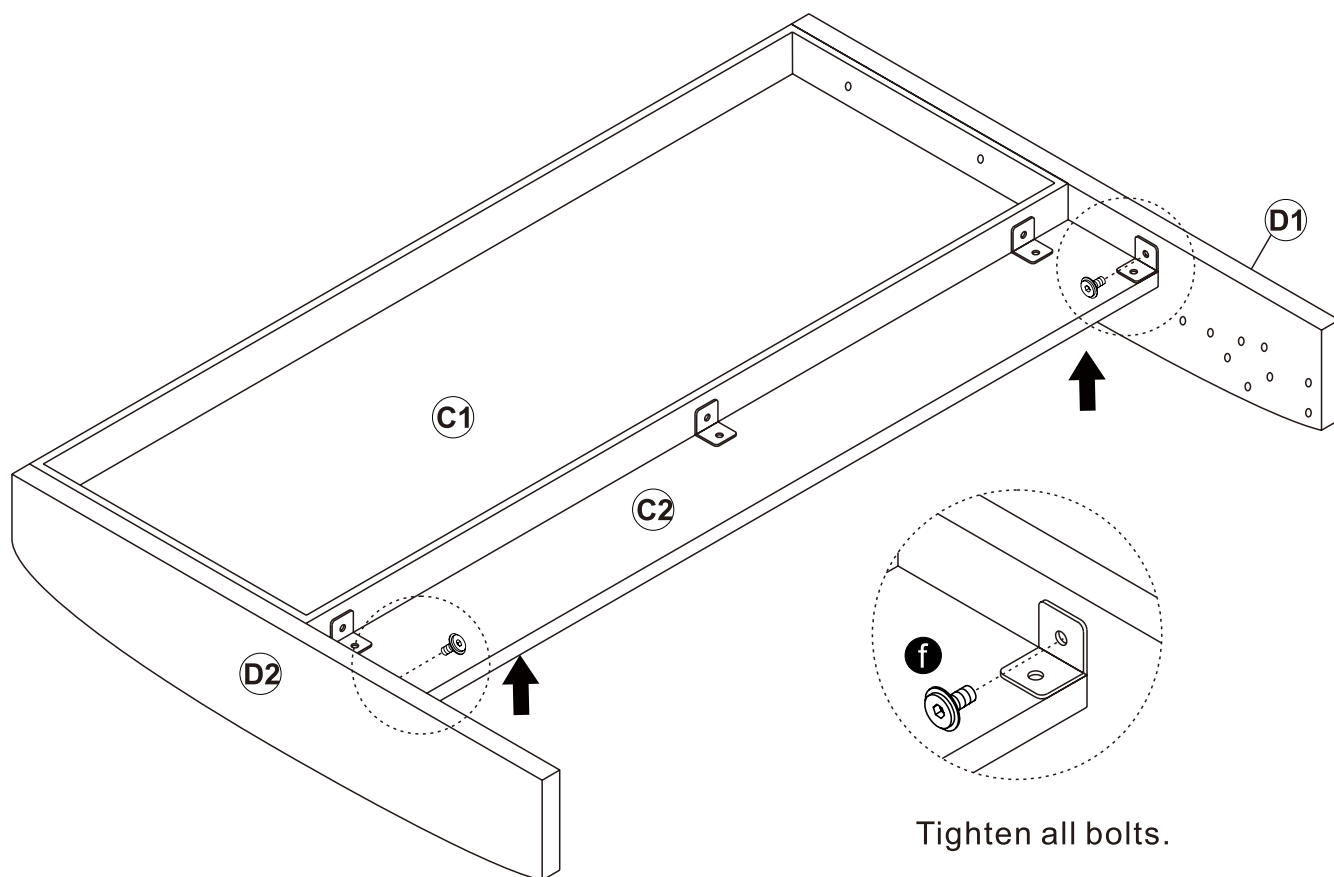


Tighten all bolts.

step4

i

M8*18

8PCS

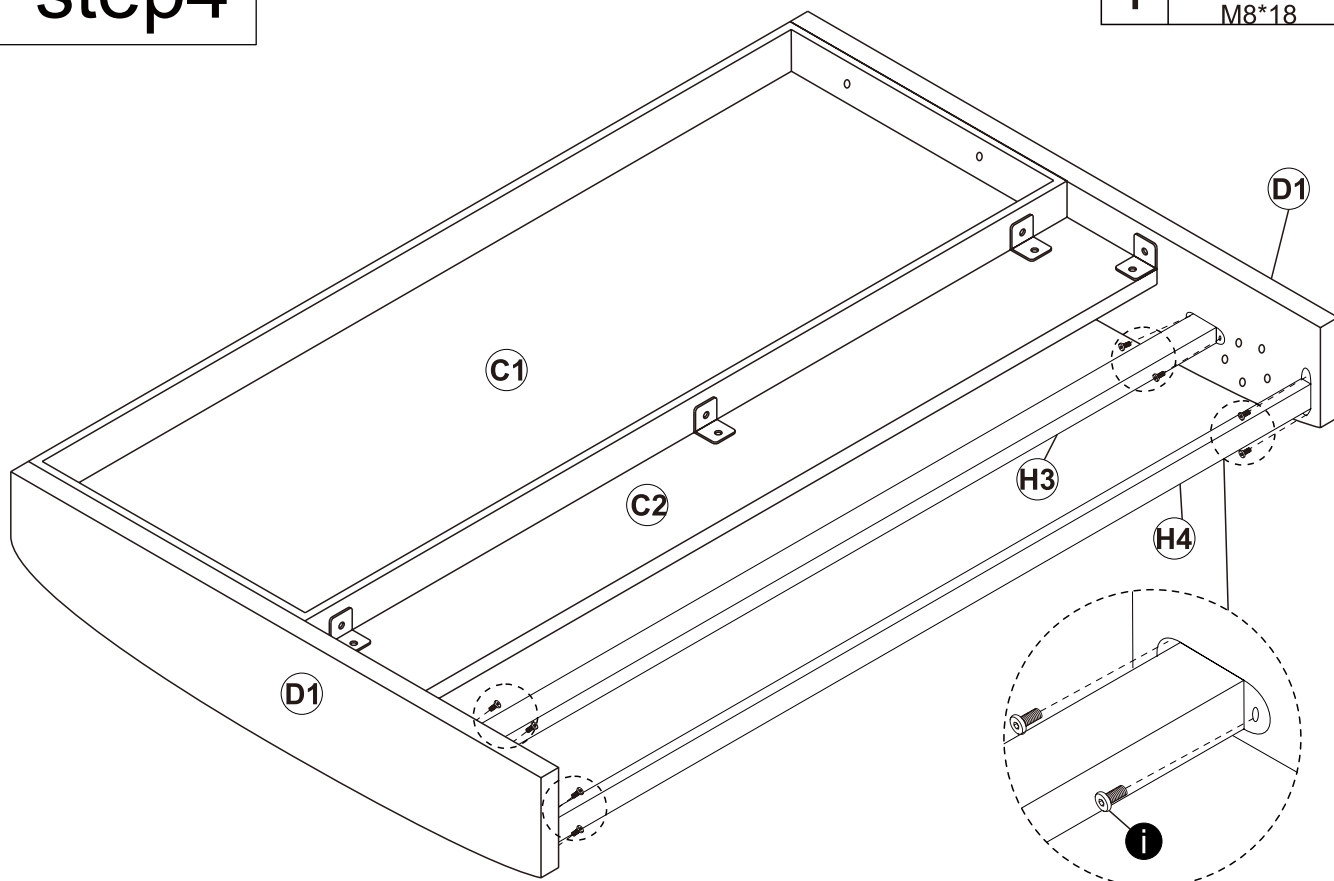


The holes for the G3 and G4 irons are facing downwards.

step5

f

M8*18

4PCS

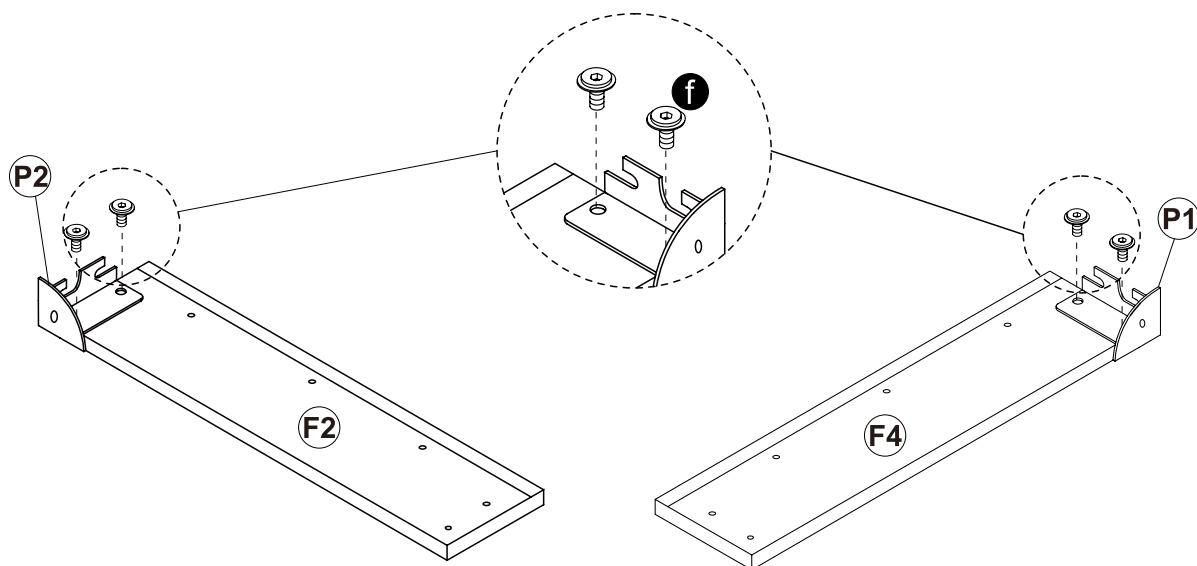


step6

f

M8*18

8PCS

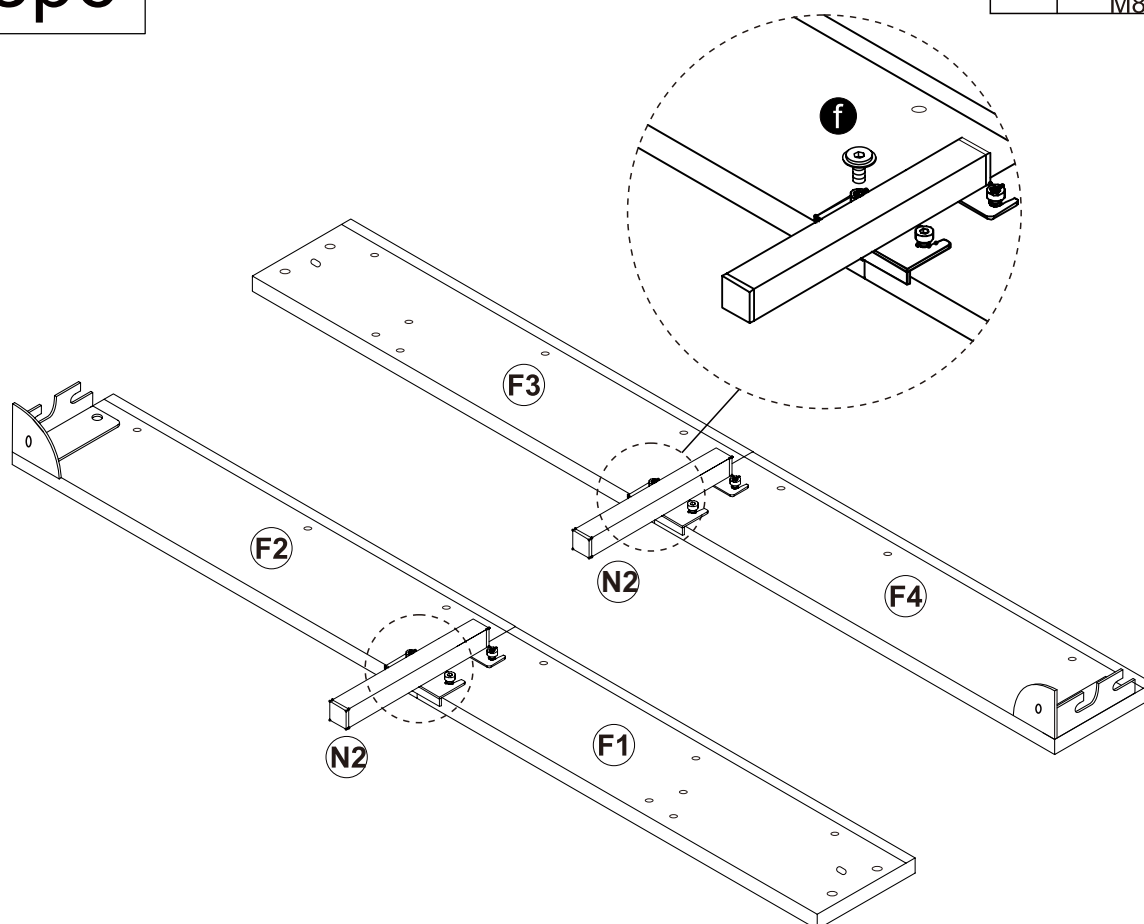


step7


f

M8*18


6PCS

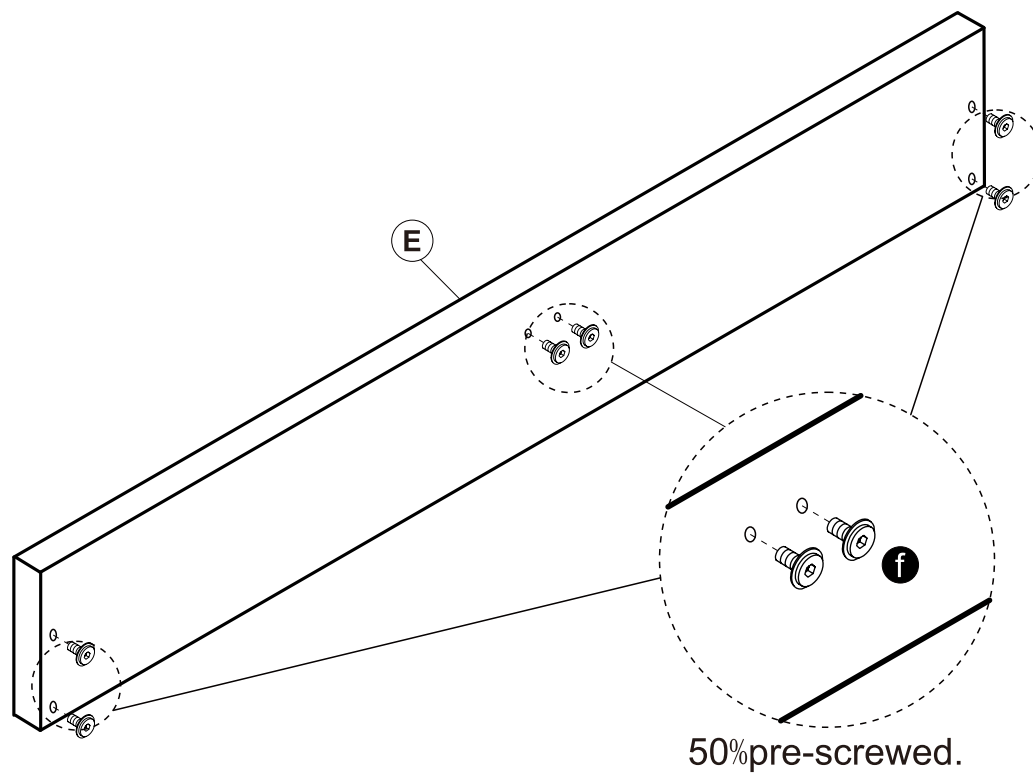


step8

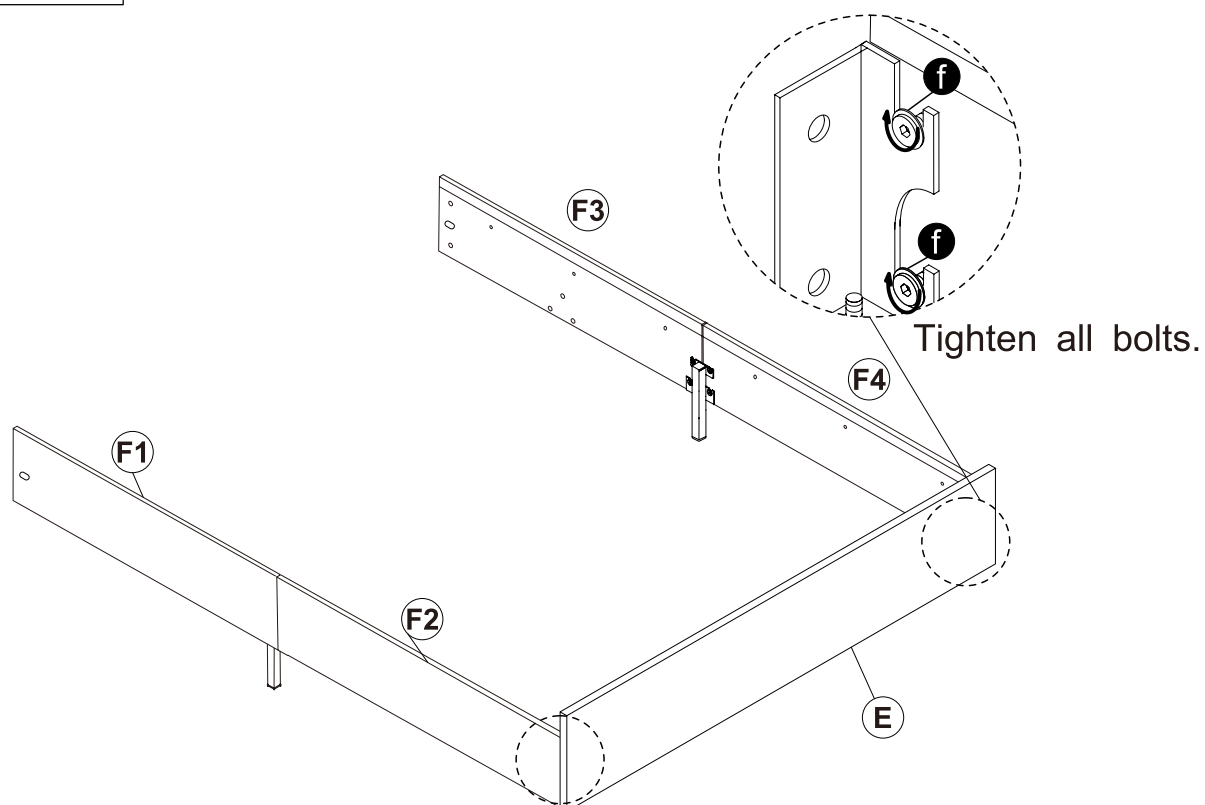


step9

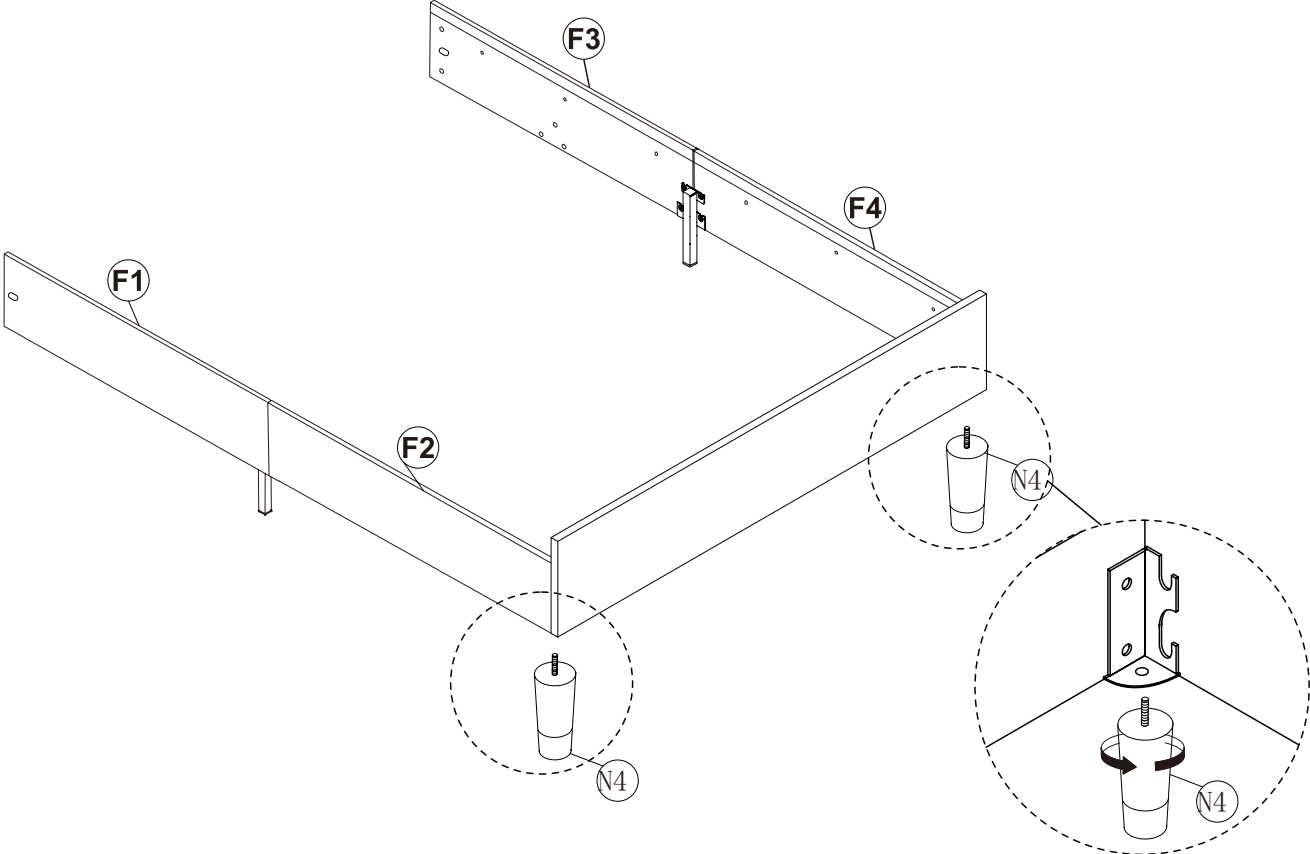


step10

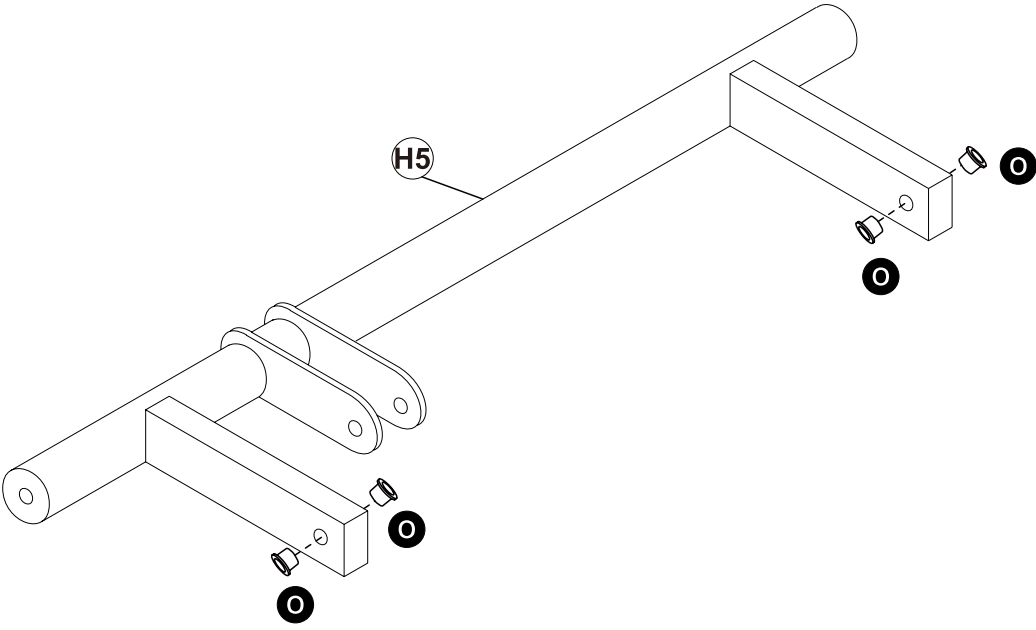


step11

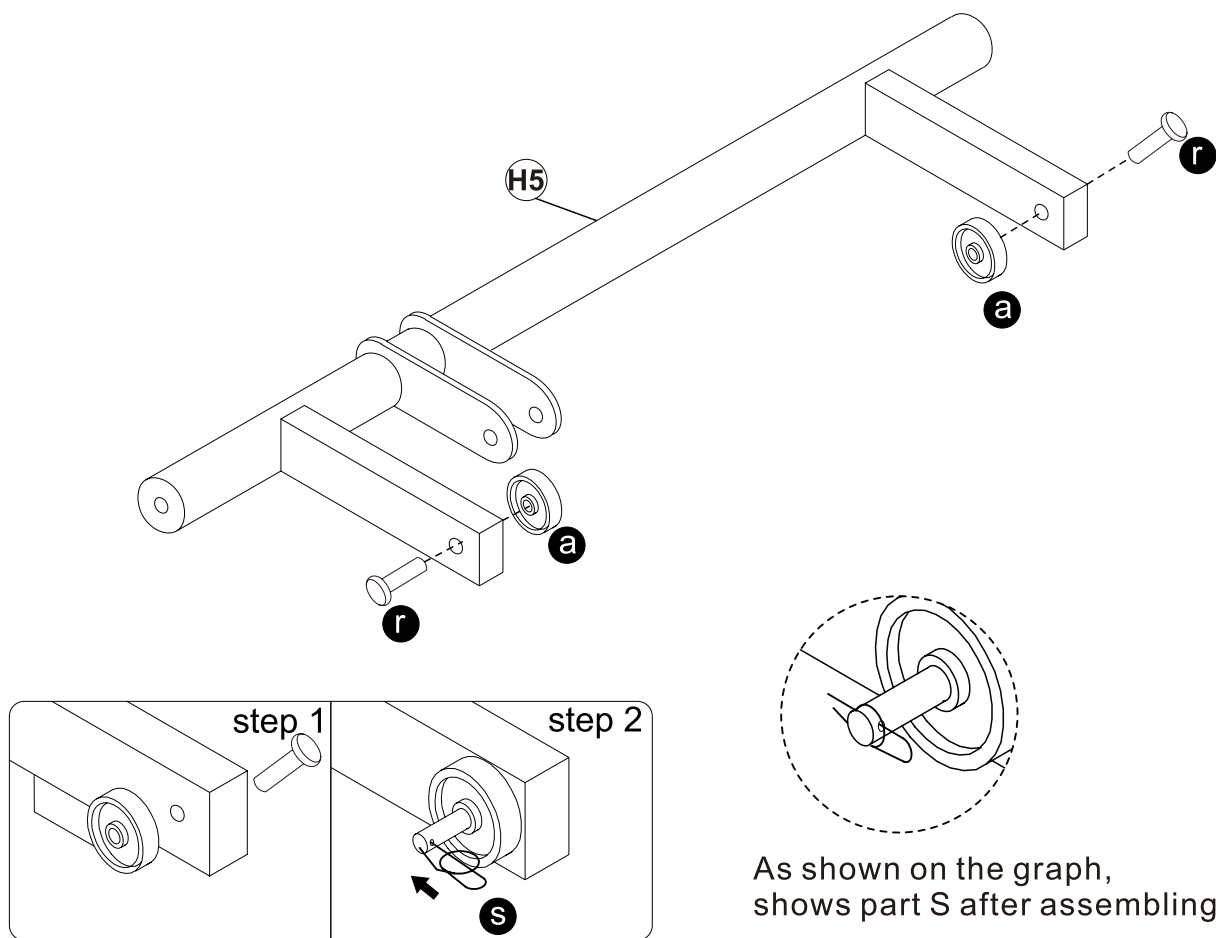


step12

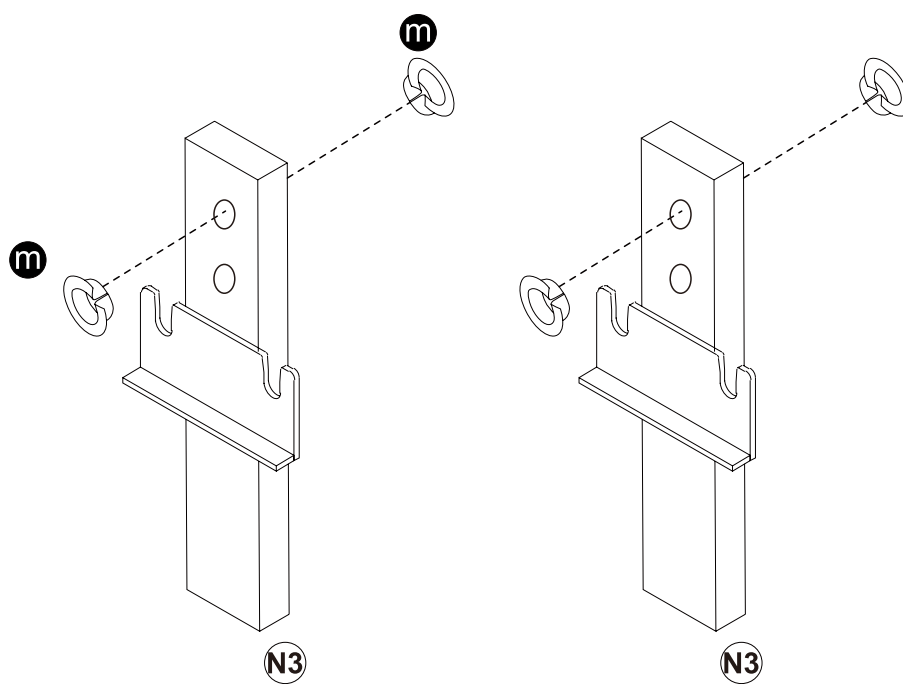


step13

j	 M10*37	2PCS
---	--	------

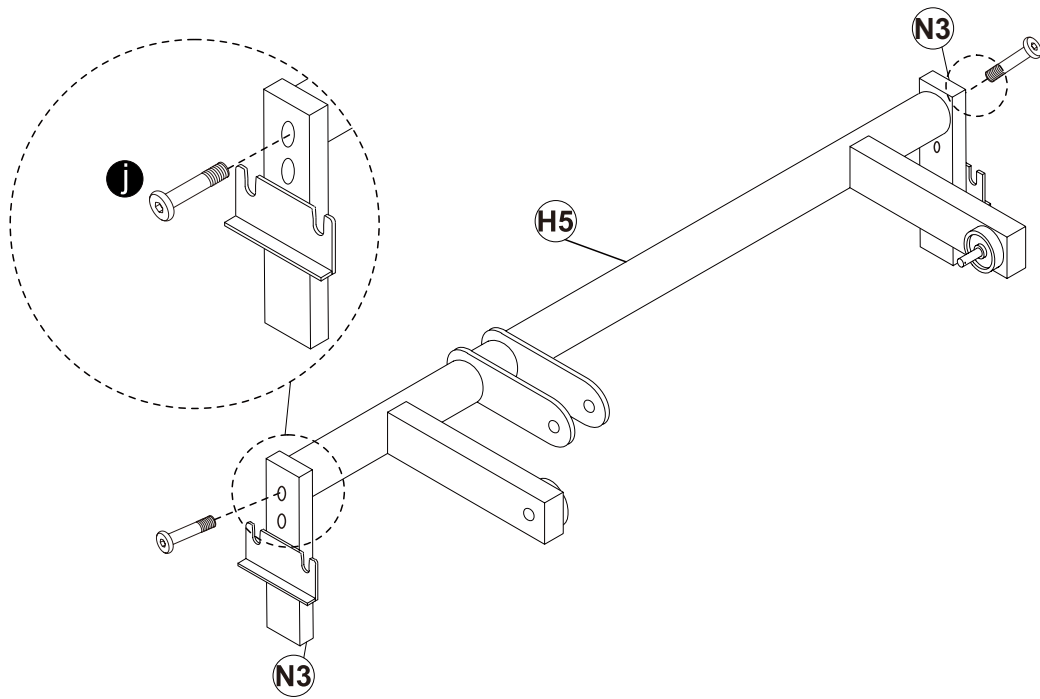



step14

f	 M8*18	4PCS
g	 M8*35	2PCS

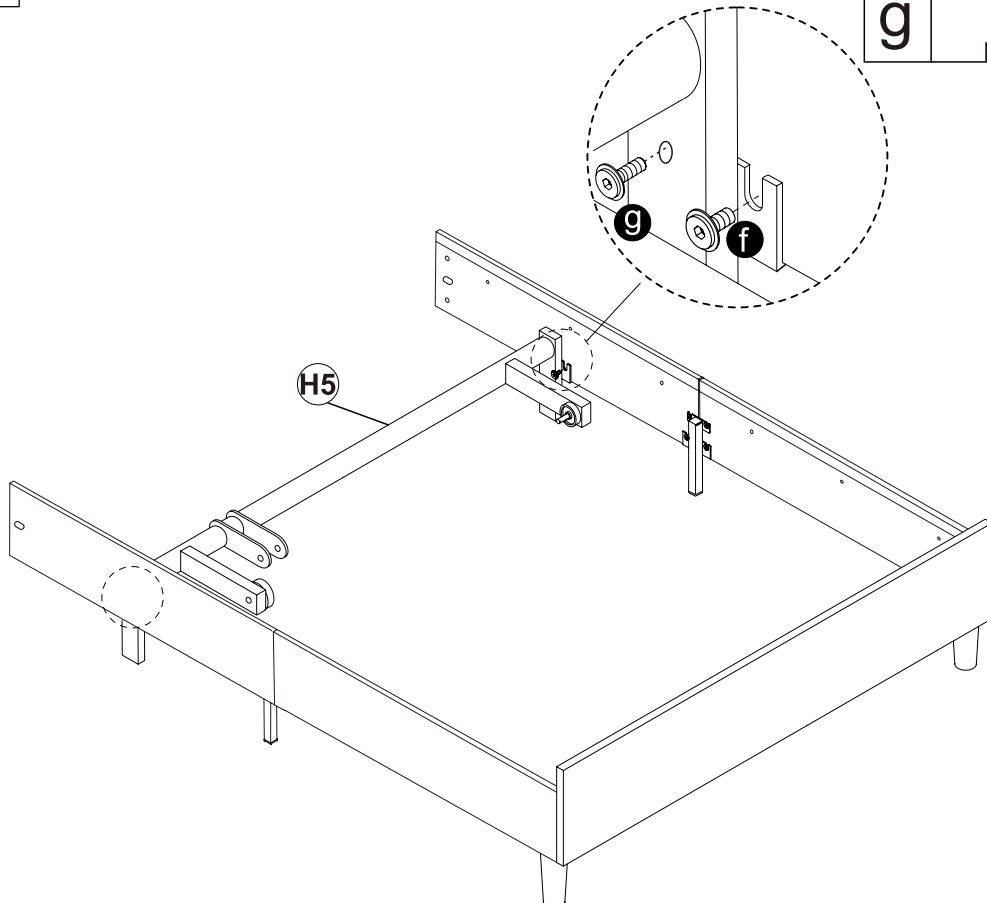


step15

d	 M4*45	8PCS
f	 M8*18	4PCS
g	 M8*35	4PCS

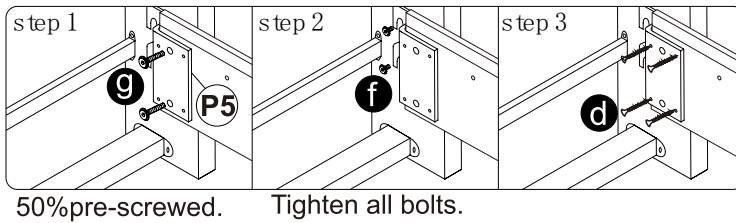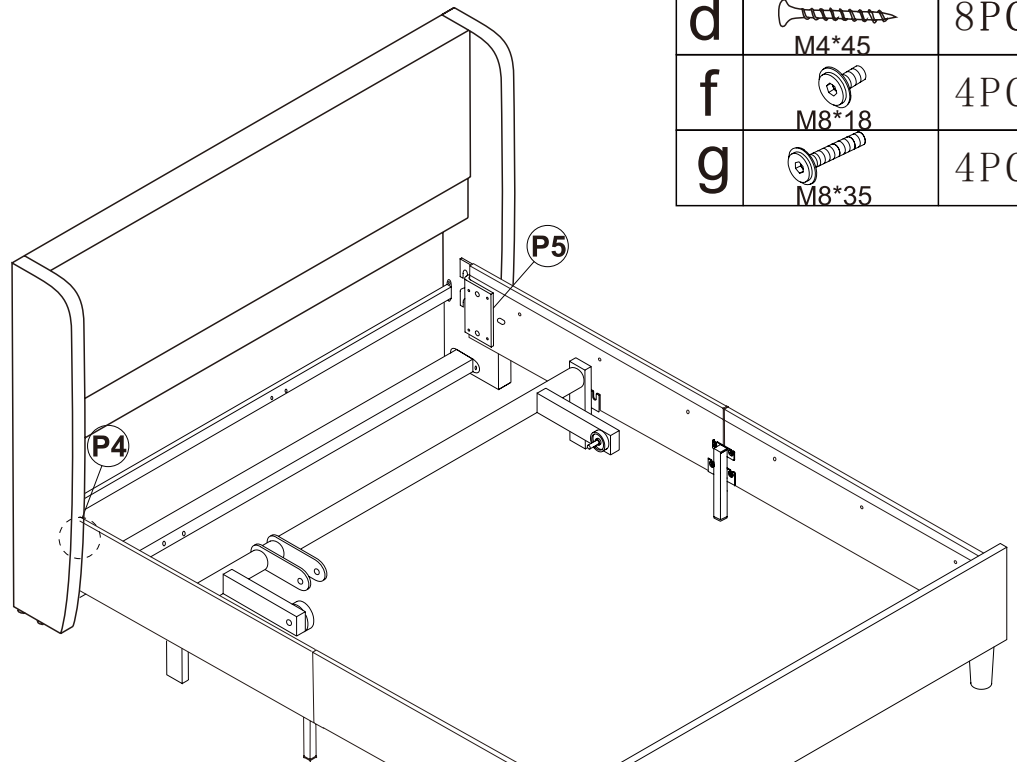

step16

g	 M8*35	2PCS
v	 	2PCS

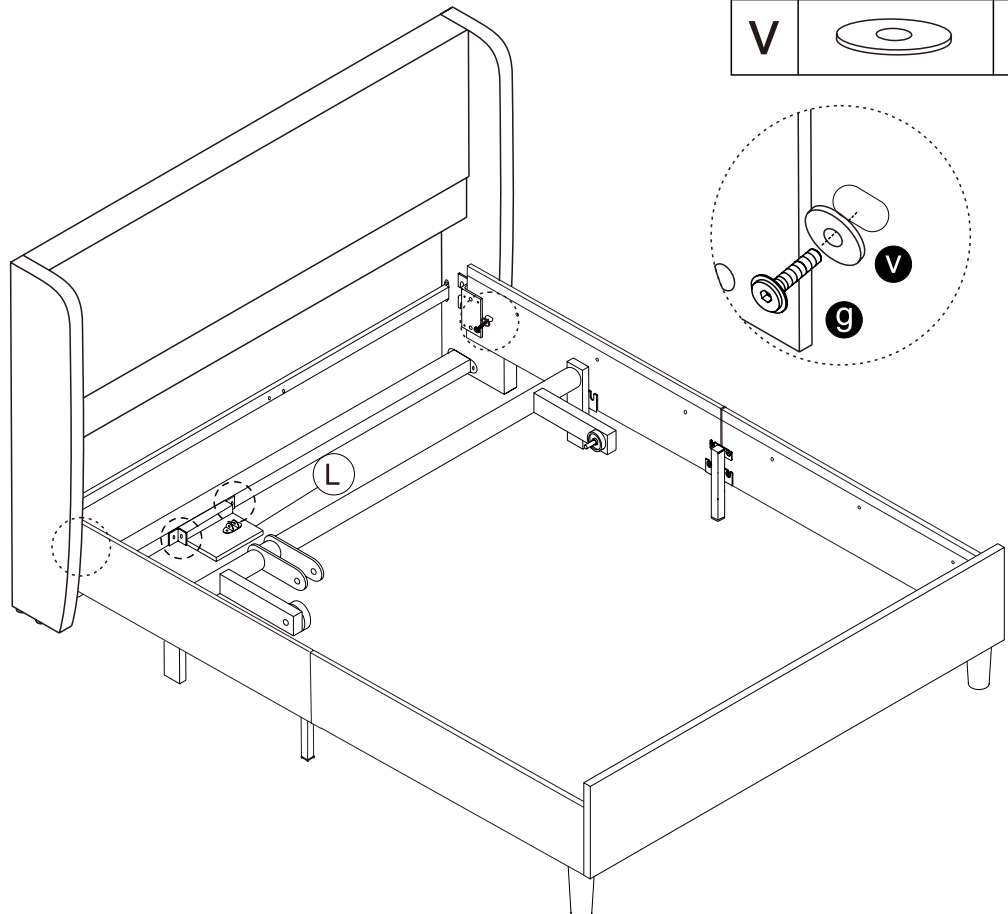


step17

i



2PCS

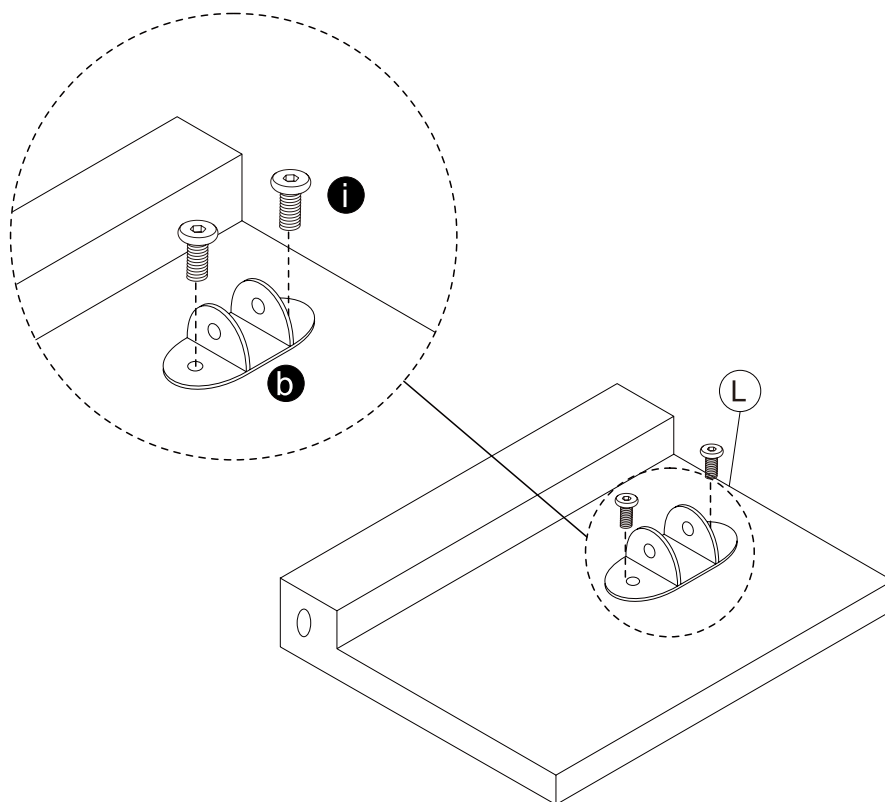


step18


i




4PCS

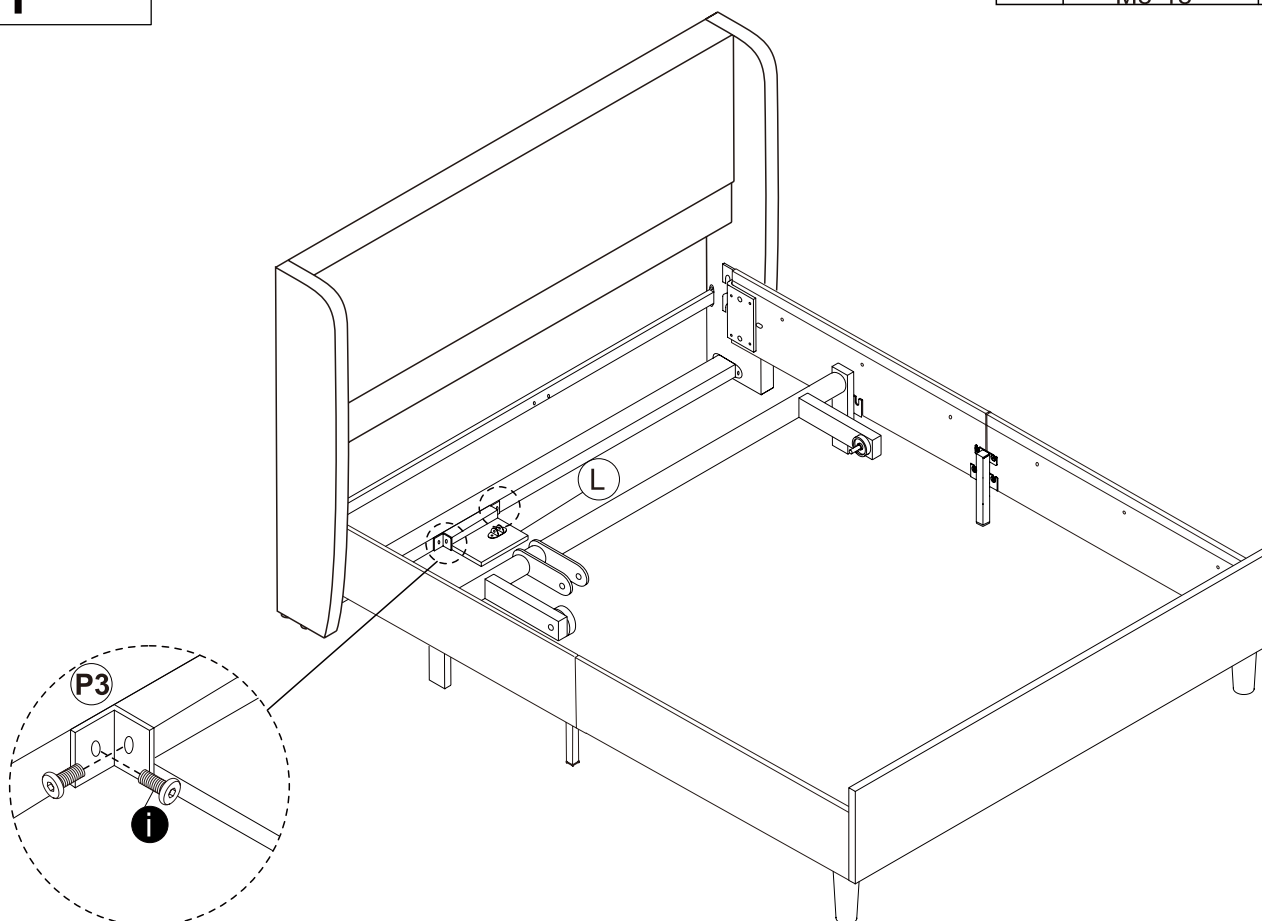


step19

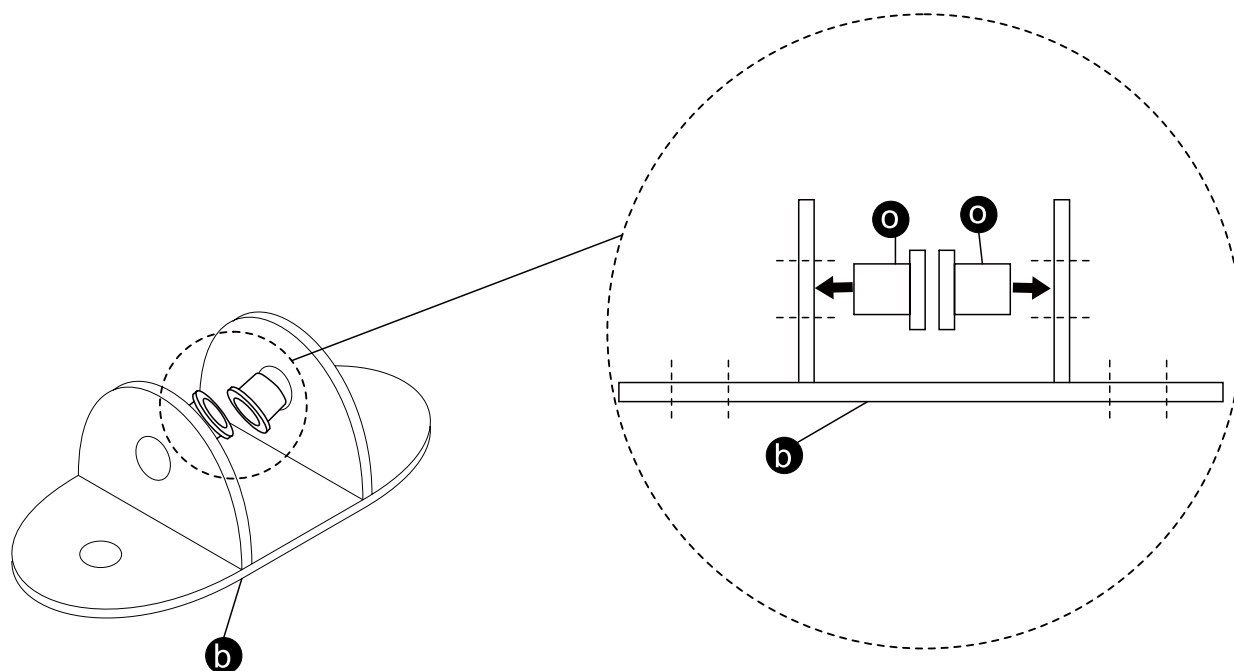


step20

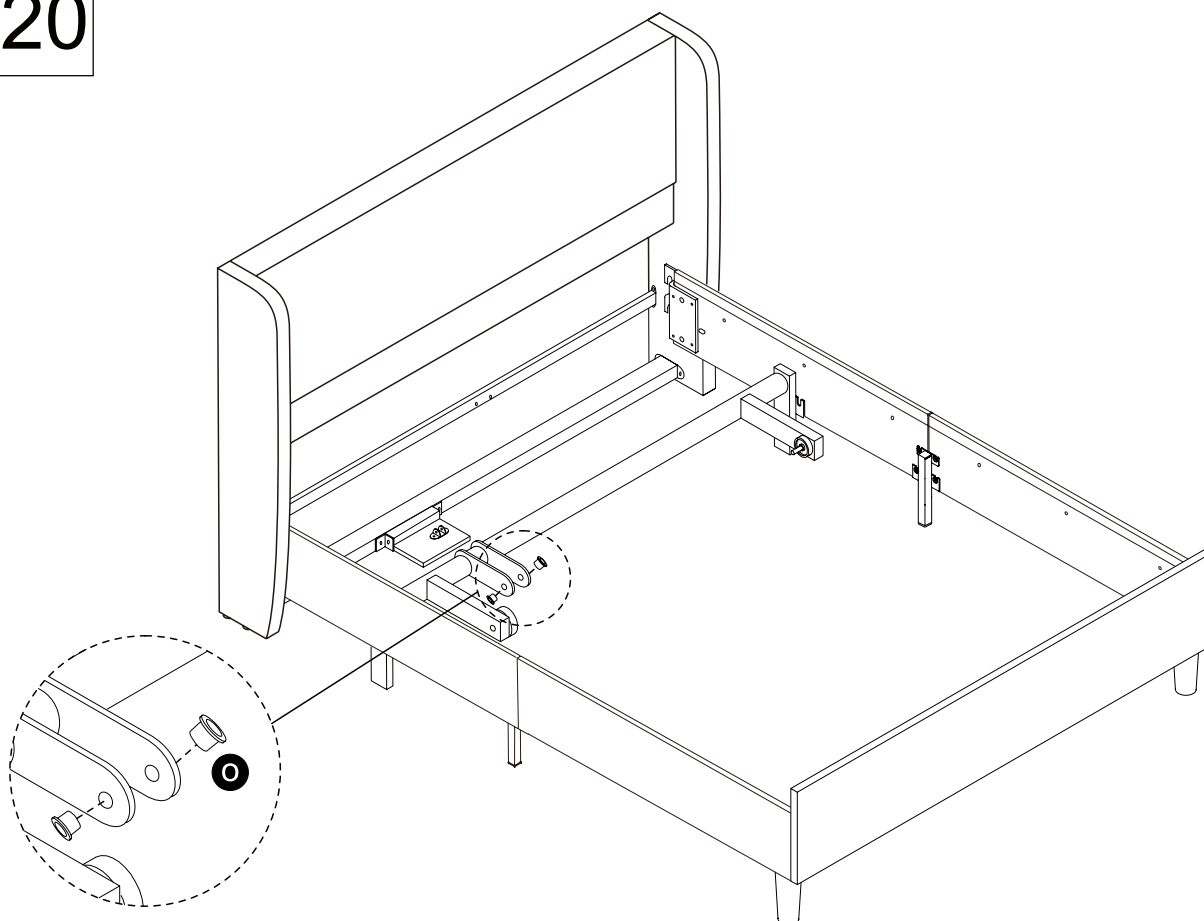


step21

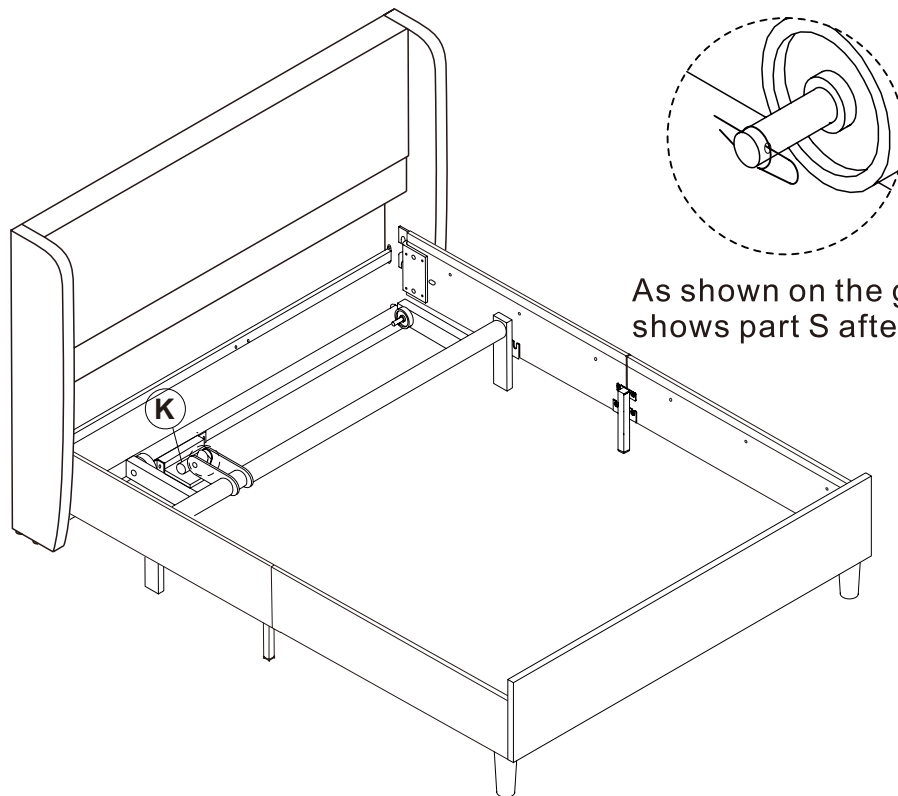

As shown on the graph, shows part S after assembling.

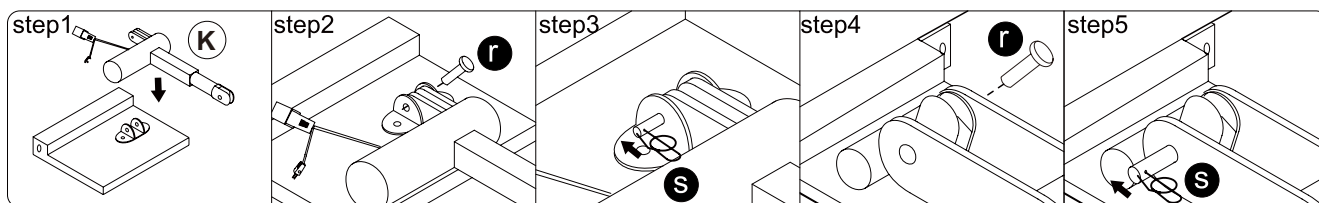

step22

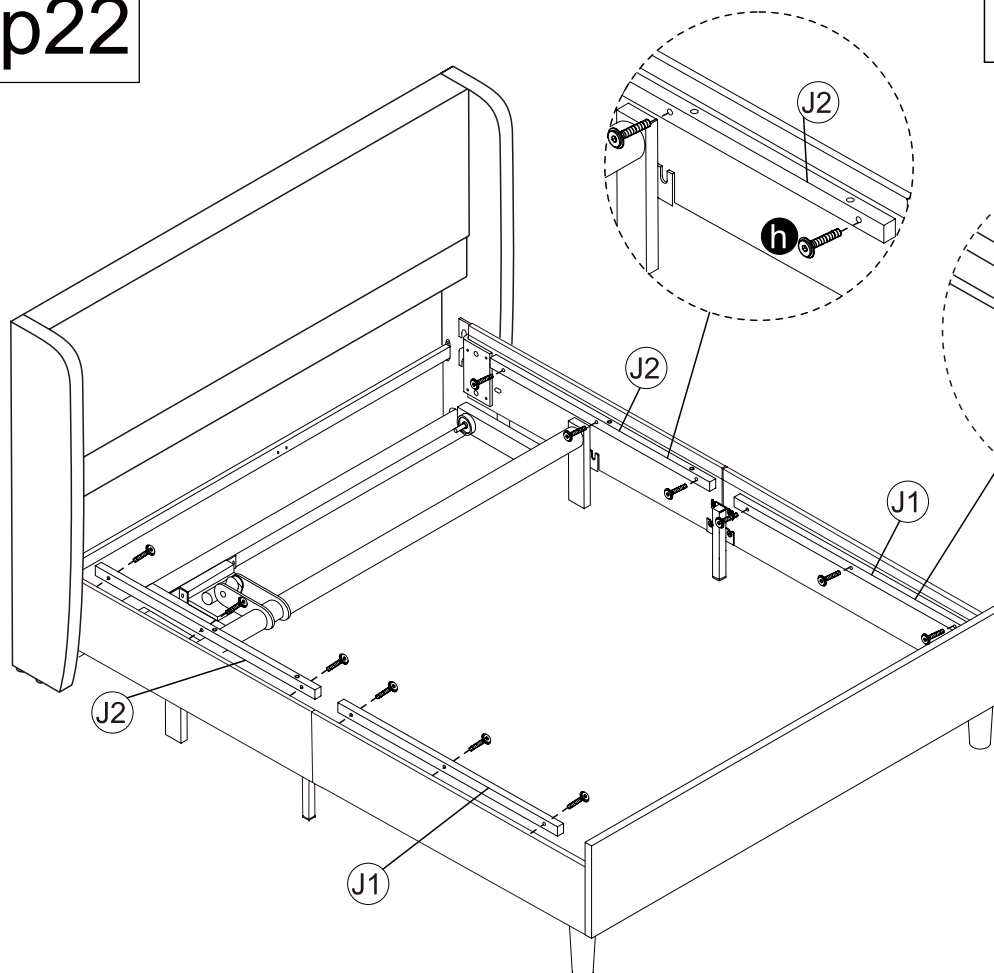


h	M8*50	12PCS
----------	-------	-------

step23

g



2PCS

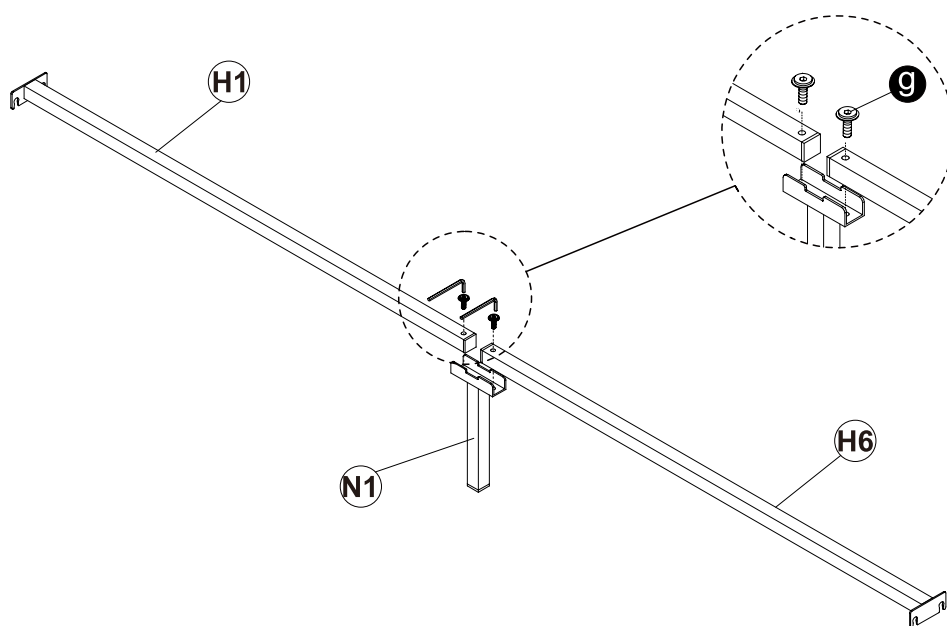


step24

f



2PCS

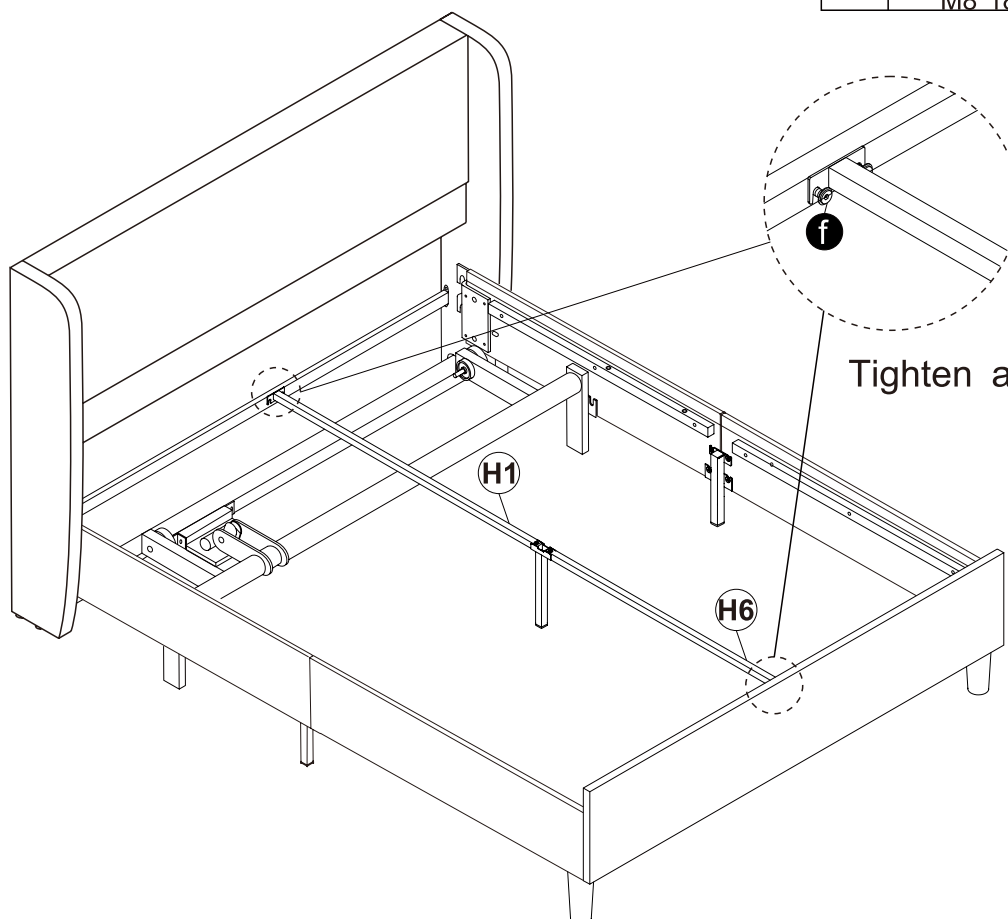


step25


g

M8*35

3PCS

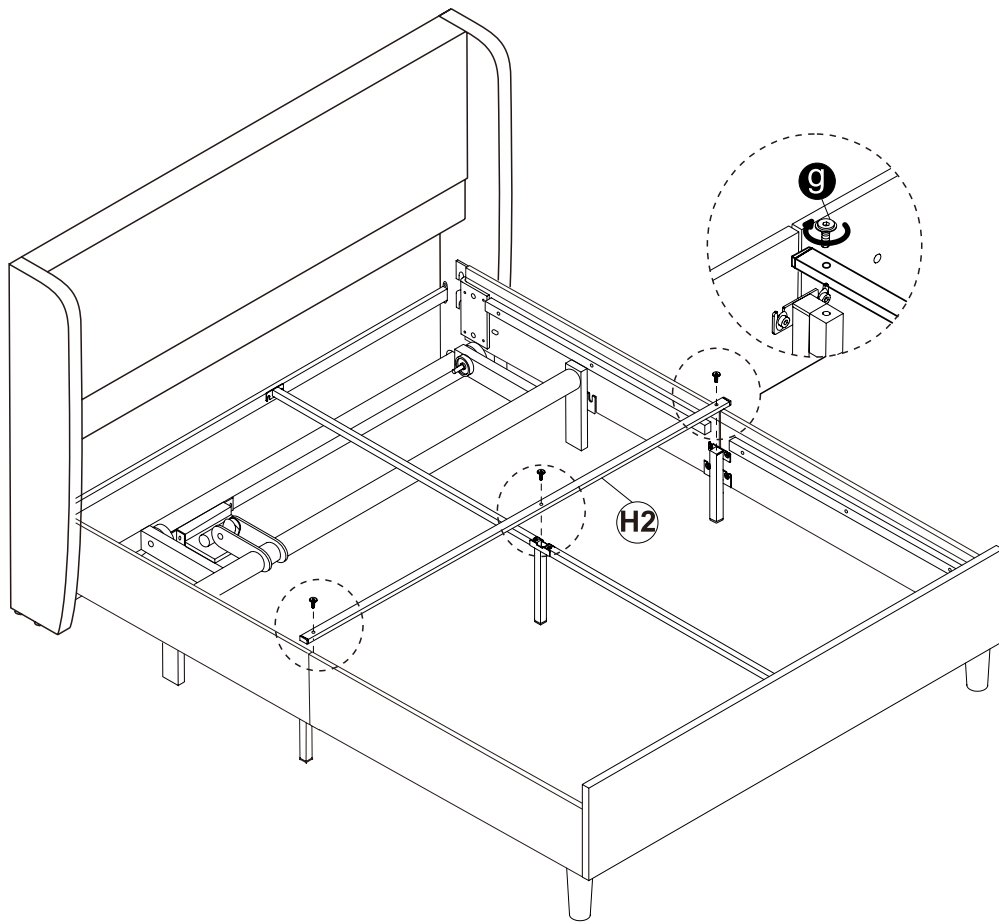

step26

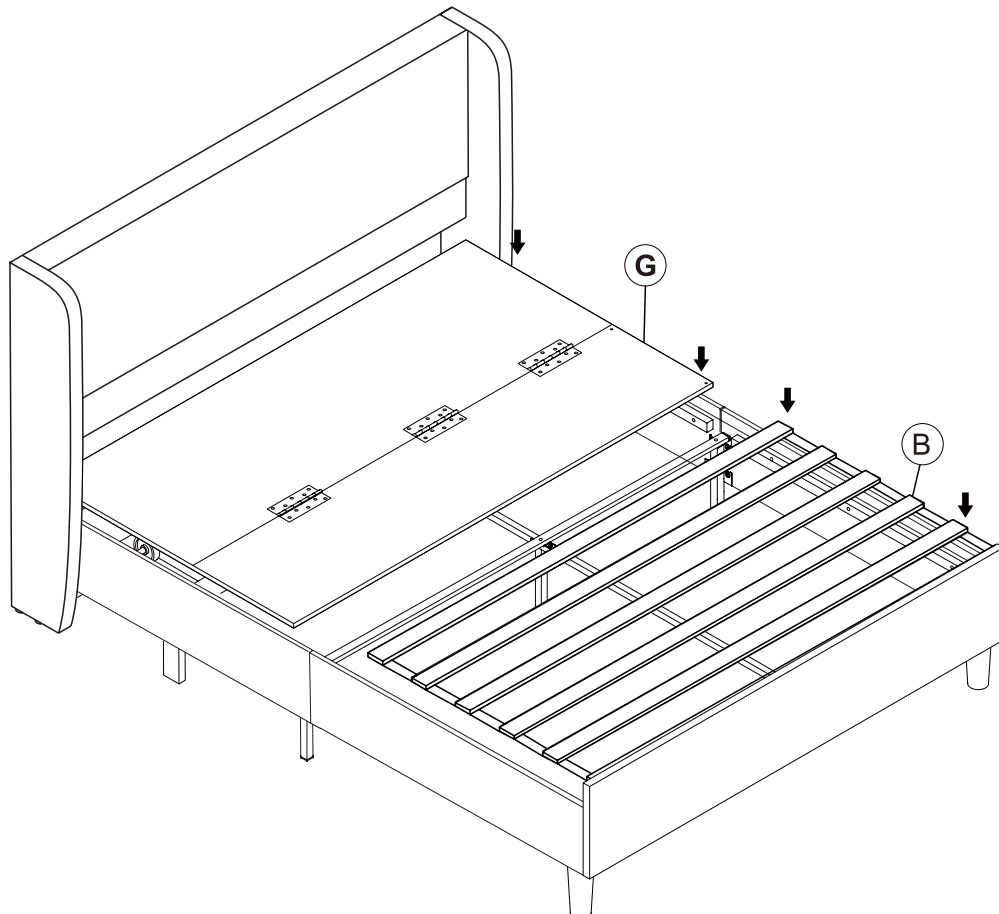


step27


e

M8*40



4PCS

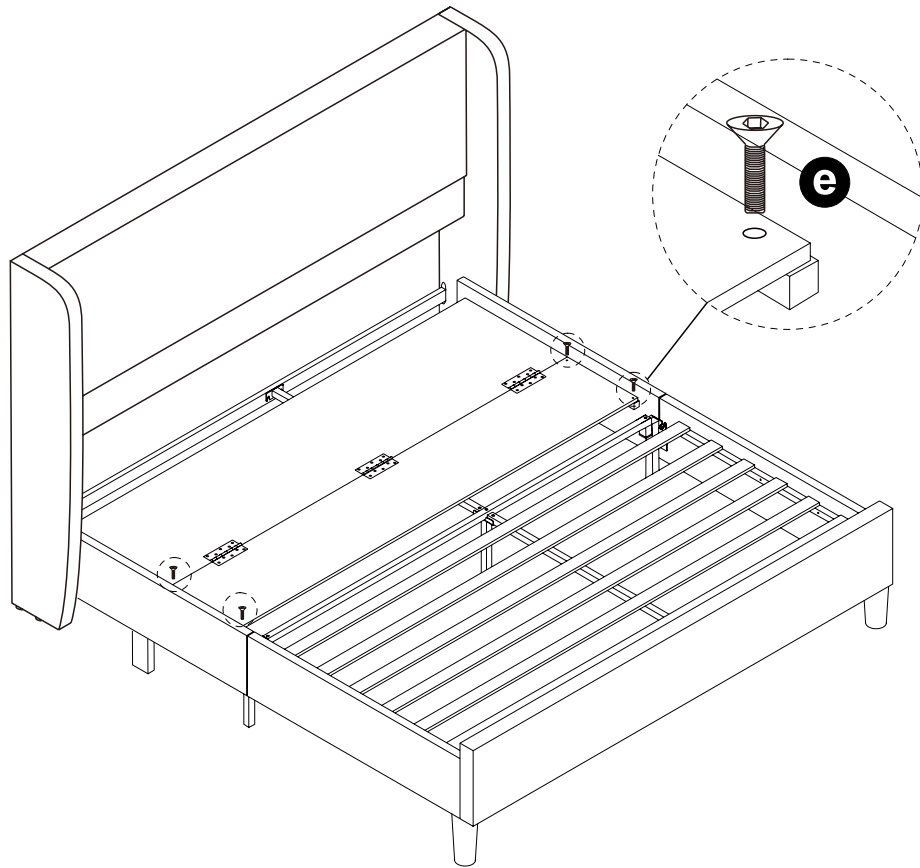

step28

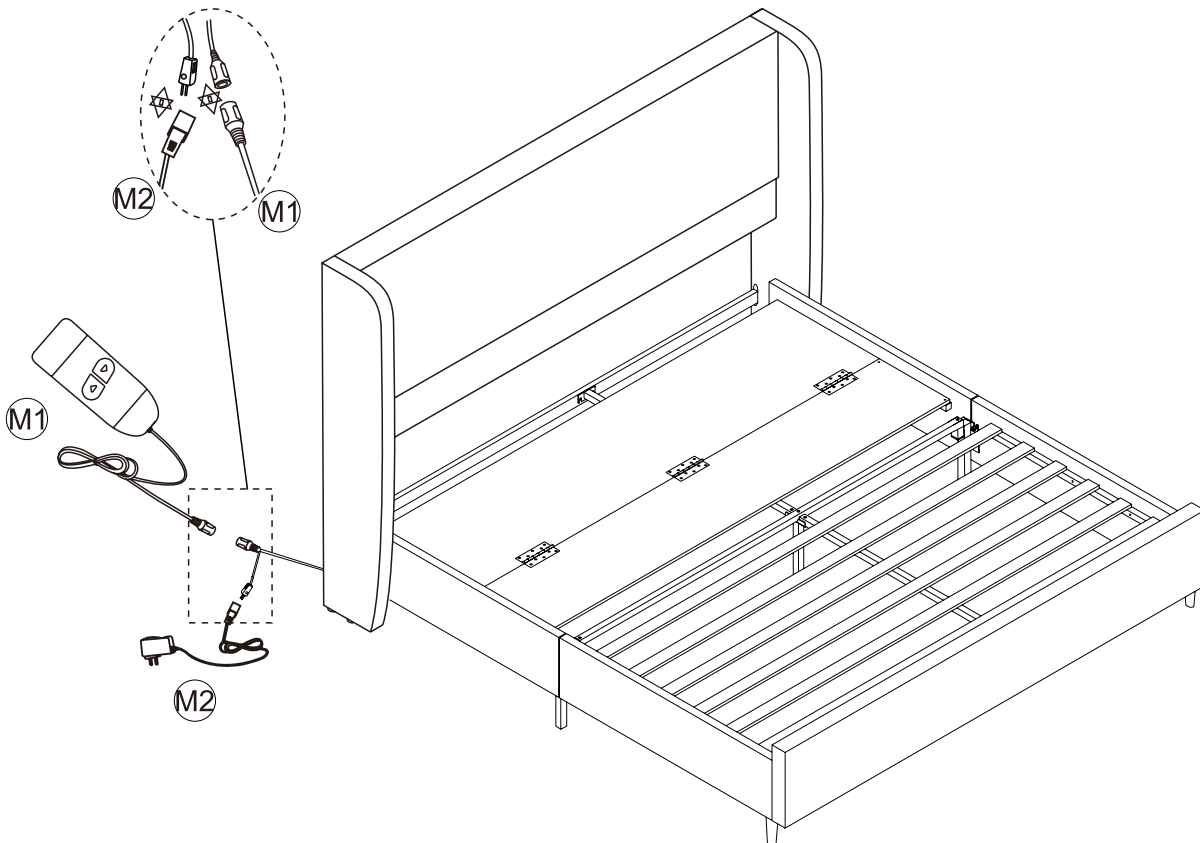

step29

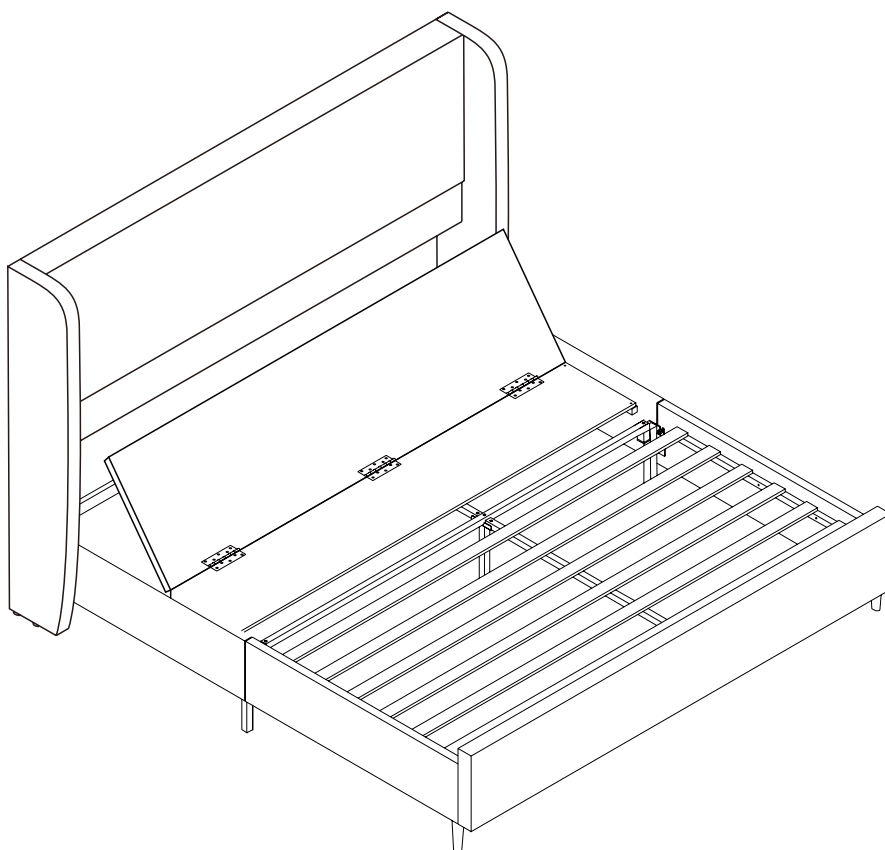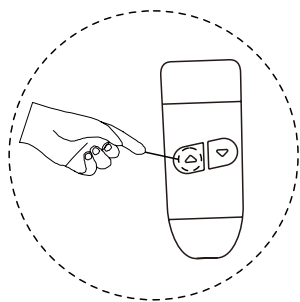

step30

