

Dining Table Set with 4 Barstools

Assembly Instructions - Please keep for future reference

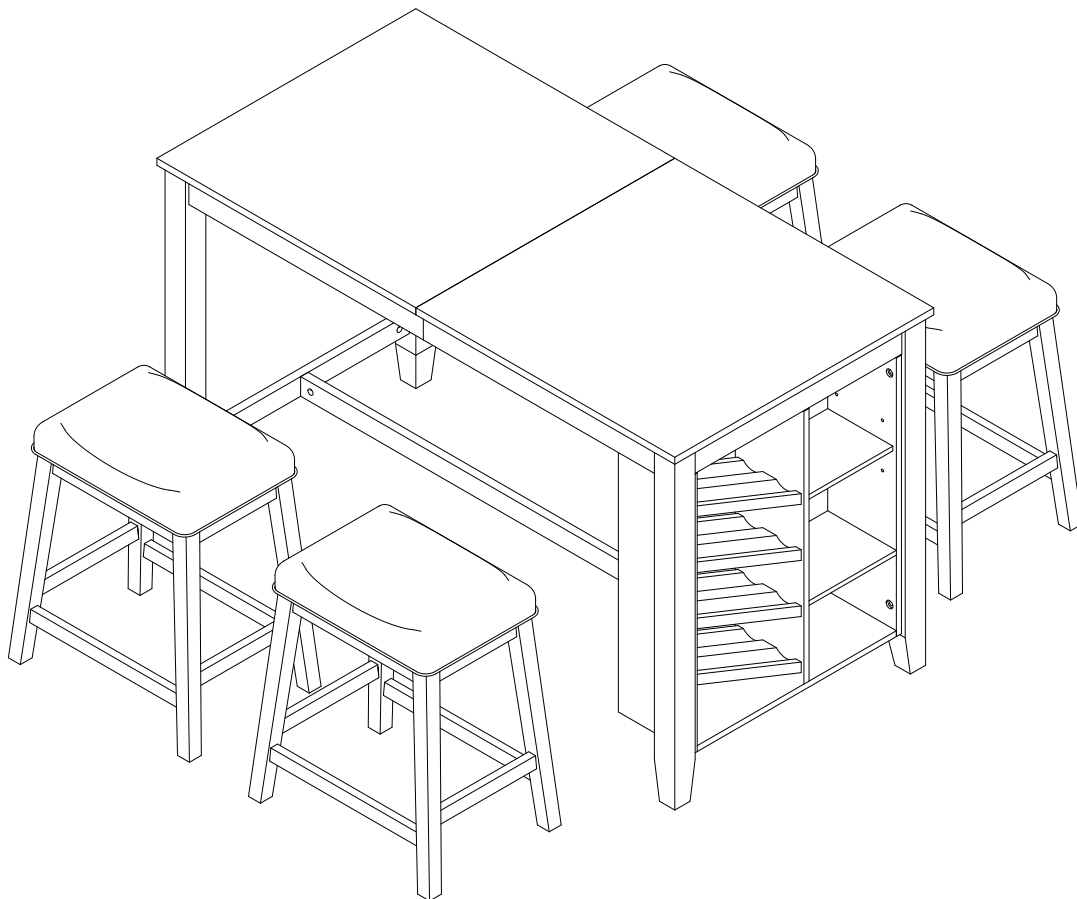


Table Dimensions

Width - 60inch
Depth - 30inch
Height - 35.86inch

Chair Dimensions

Width - 20.75inch
Depth - 15.5inch
Height - 23.75inch

Delivered with TWO PACKAGES with TWO TRACKINGS, may NOT be delivered at the same time.


Any question please feel free to contact us:
support@amer-life.com TEL: (901) 347-2181
We will provide further assistance within 24 hours.

Important – Please read these instructions fully before starting assembly






Seller's Notice:

Our product is packed in separate boxes as shown below, and they might be shipped in different batches. Please wait until you received all the boxes then start the assembly.
Noted: Assembly instruction is only provided in Box1.
The following is the list of components contained in each box.

BOX 1

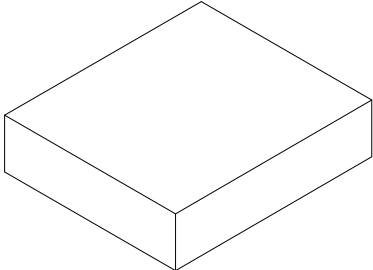

Main structure accessories

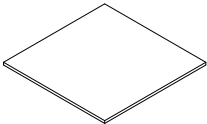1		Top panel	x2
12		Back panel	x1
13		Side panel 1	x1
15		Side panel 2	x1
20		Barstool seat	x4
24		Barstool short stretcher	x8

HARDWARE

All hardware are in Box 1.


Seller's Notice:

Our product is packed in separate boxes as shown below, and they might be shipped in different batches. Please wait until you received all the boxes then start the assembly.










Noted: Assembly instruction is only provided in Box1.

The following is the list of components contained in each box.

BOX 2

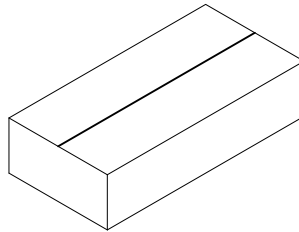

Main structure accessories

2		Side build up	x2	11		Table long stretcher	x1
3		Front-back build up 1	x2	14		Center side panel	x1
4		Front-back build up 2	x2	16		Shelf wine panel	x4
5		Connect build up	x2	17		Shelf panel 1	x1
6		Table leg 1	x1	18		Shelf panel 2	x1
7		Table leg 2	x1	19		Bottom panel	x1
8		Table leg 3	x1	21		Barstool leg 1	x8
9		Table leg 4	x1	22		Barstool leg 2	x8
10		Table short stretcher	x1	23		Barstool long stretcher	x8



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Panels

Please check you have all the panels listed below


Table

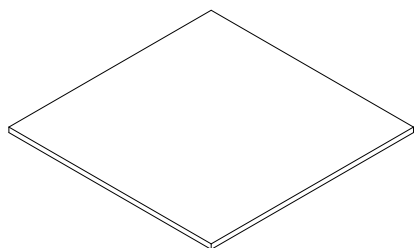


1 (762x762x18mm) X 2

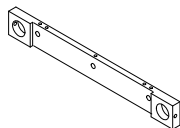


2 (618x75x21mm) X 2

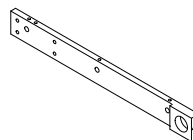

3 (690x75x21mm) X 2

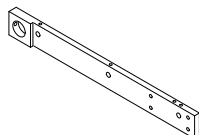


4 (690x75x21mm) X 2




5 (400x75x18mm) X 2




6 (60x60x893mm) X 1




7 (60x60x893mm) X 1




8 (60x60x893mm) X 1




9 (60x60x893mm) X 1

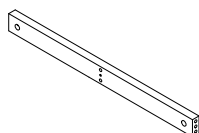

10 (618x50x22mm) X 1

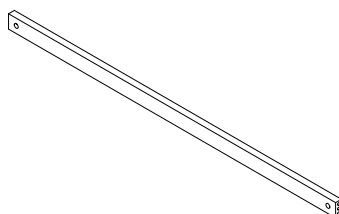

11 (1232x50x22mm) X 1

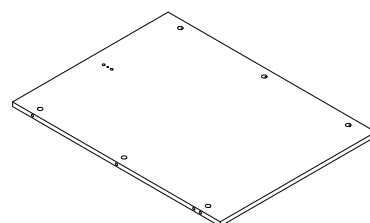


12 (782x586x15mm) X 1


Components - Panels

Please check you have all the panels listed below


Table

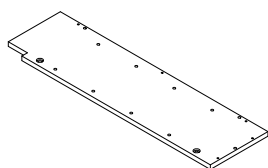


13 (782x217x15mm) X 1

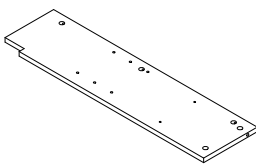


14 (767x202x15mm) X 1

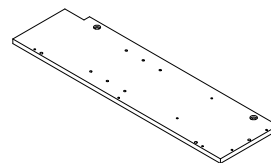


15 (782x217x15mm) X 1




16 (351x186x25mm) X 4



17 (251x197x15mm) X 1




18 (257x202x15mm) X 1

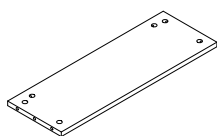


19 (586x202x15mm) X 1


Barstool x4

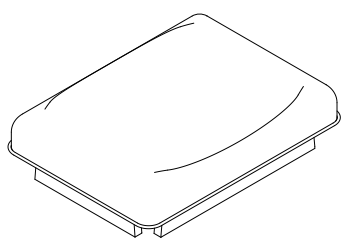


20 (455x325x115mm) X 1

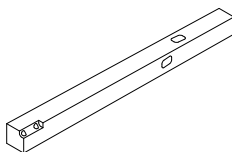


21 (40x40x540mm) X 2

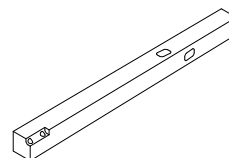

22 (40x40x540mm) X 2

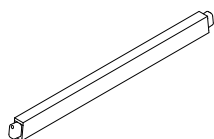

23 (32x20x465mm) X 2




24 (32x20x315mm) X 2

Components - Fittings



Please check you have all the hardware listed below

Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.


Table

A  1/4"x15mm Bolt x 4	B  1/4"x32mm Bolt x 20	C  1/4" Lock washer x 24
D  1/4"x19mm Flat washer x 24	E  Male Camlock x 43	F  Ø15x12mm Female Camlock x 43
G  Allen wrench 12mm x 1	H  5/16"x80mm Bolt x 8	I  5/16" Lock washer x 8
J  5/16" Nut x 8	K  Mounting plate metal x 2	L  Ø8x30mm Dowel x 47
M  Shelf dowel x 4	R  Allen key 4mm x 1	T  5/16" Half moon x 8

Barstool x4



N  #4x51mm Screw pan head x 8	O  1/4"x51mm Bolt x 8	P  1/4" Lock washer x 8
Q  1/4"x19mm Flat washer x 8	R  Allen key 4mm x 1	

Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (30mm screw shown).


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

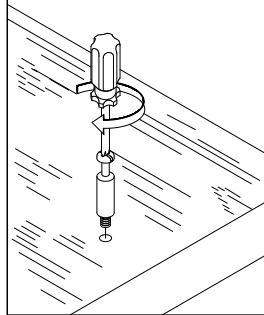

Step 2

Push the male camlock into the entry hole.

2

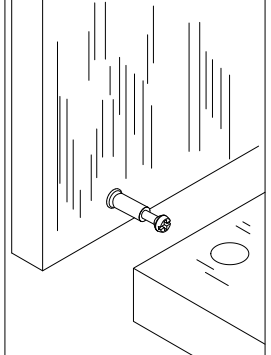


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

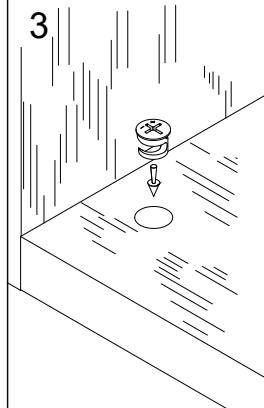


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

4

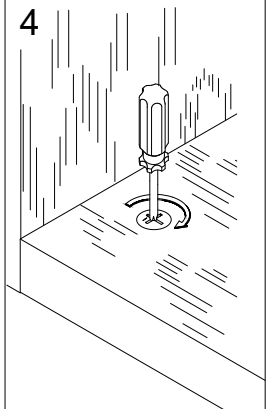


Assembly Instructions

Table

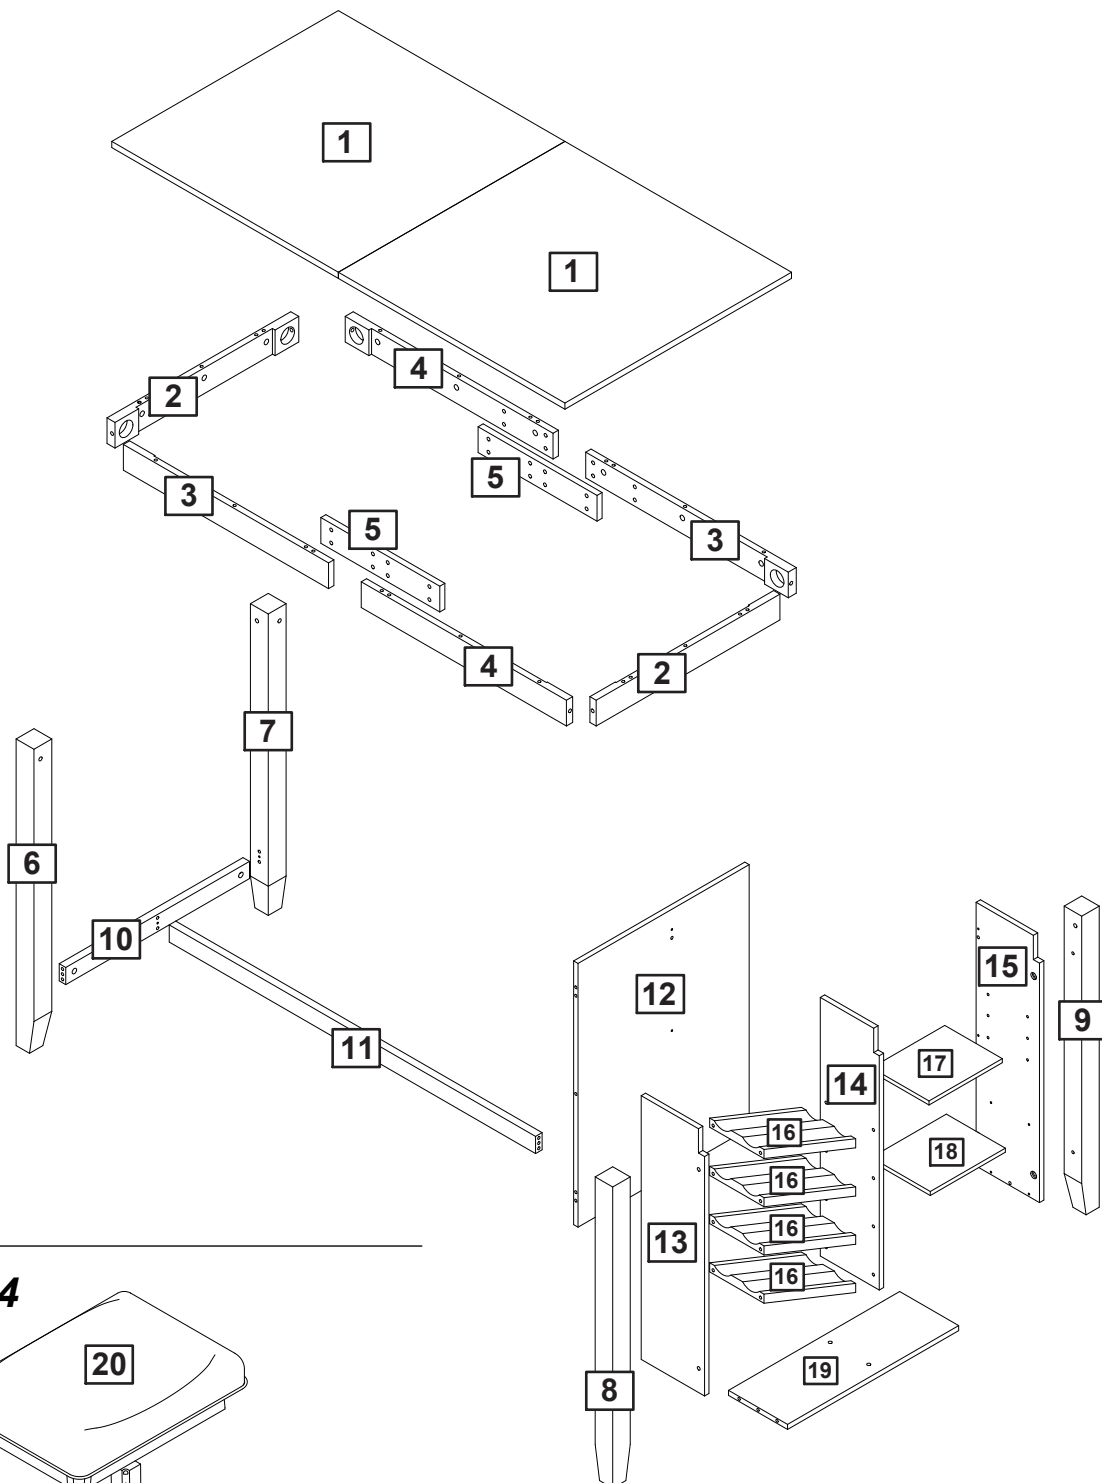


Barstool x4

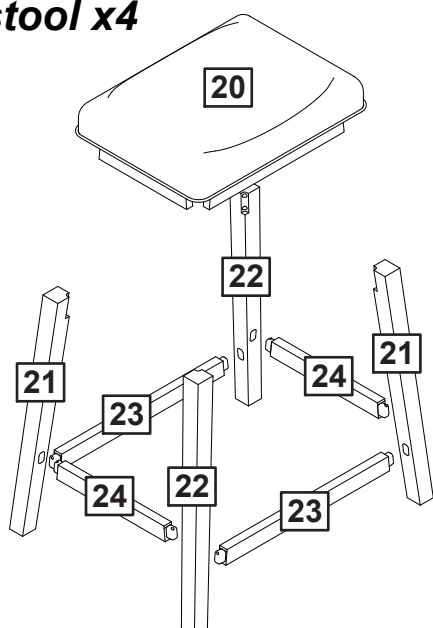


Assembly Instructions

Step 1

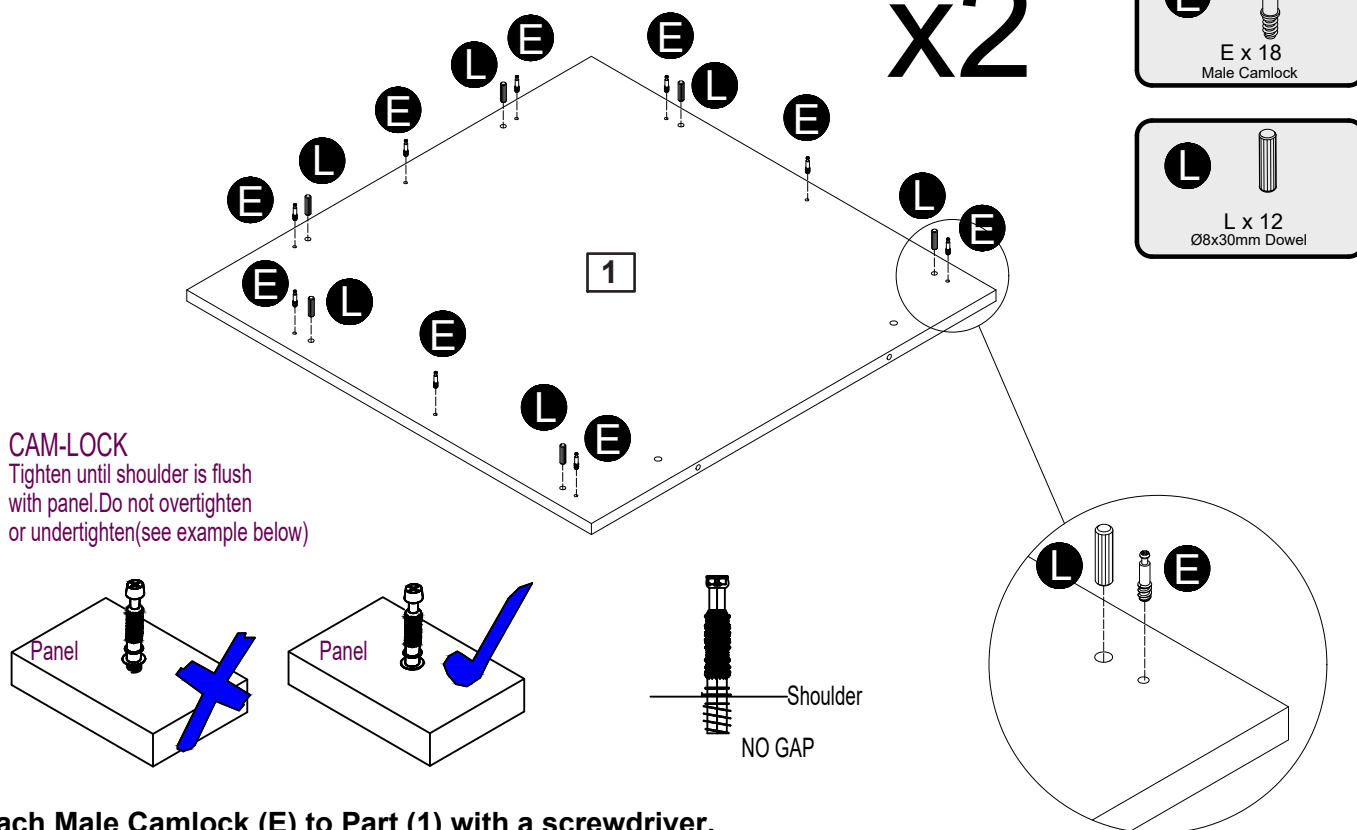

Attach Male Camlock (E) to Part (1) with a screwdriver.
Insert Dowel (L) into Part (1).


Step 2

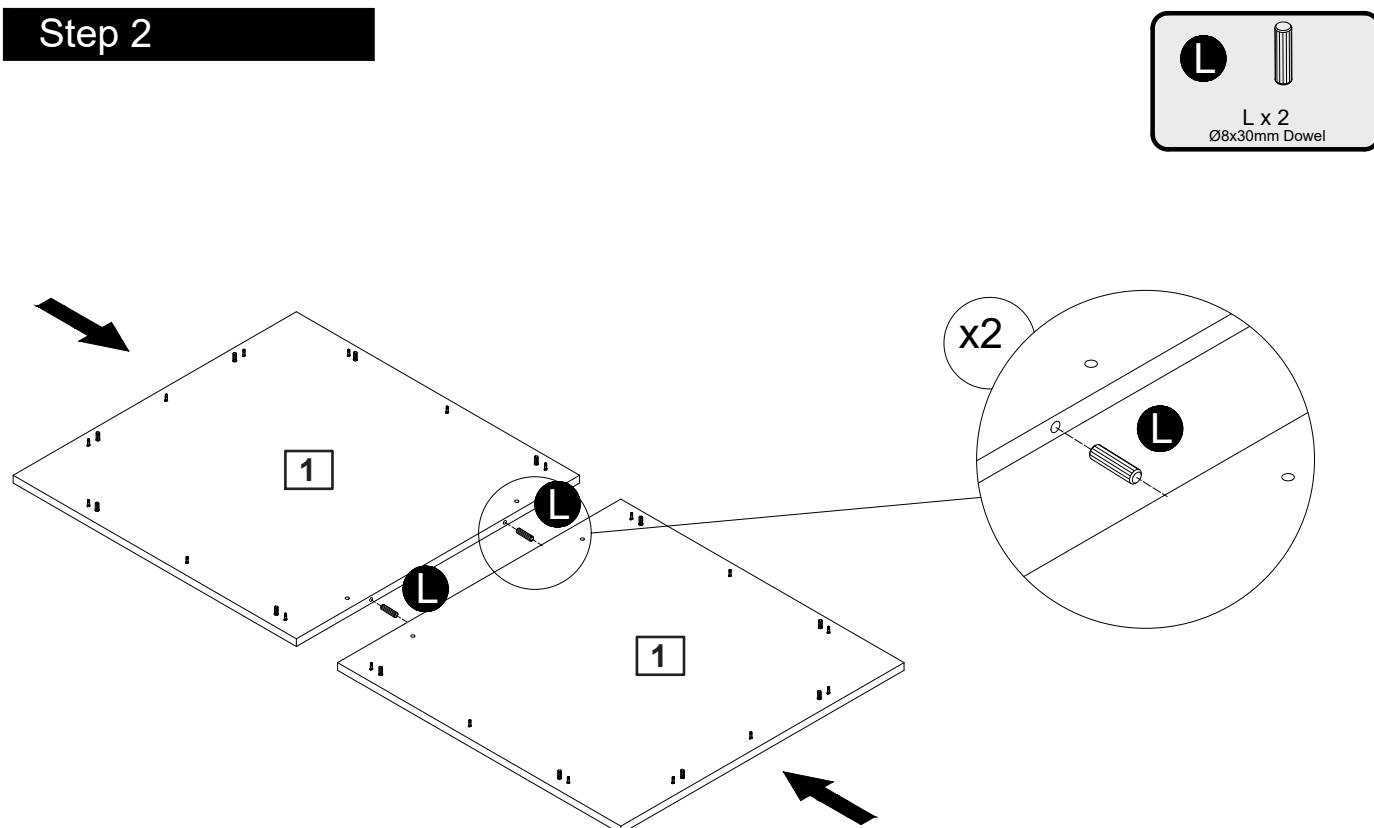

Connect Parts (1) with Dowel (L).

Assembly Instructions

Step 3

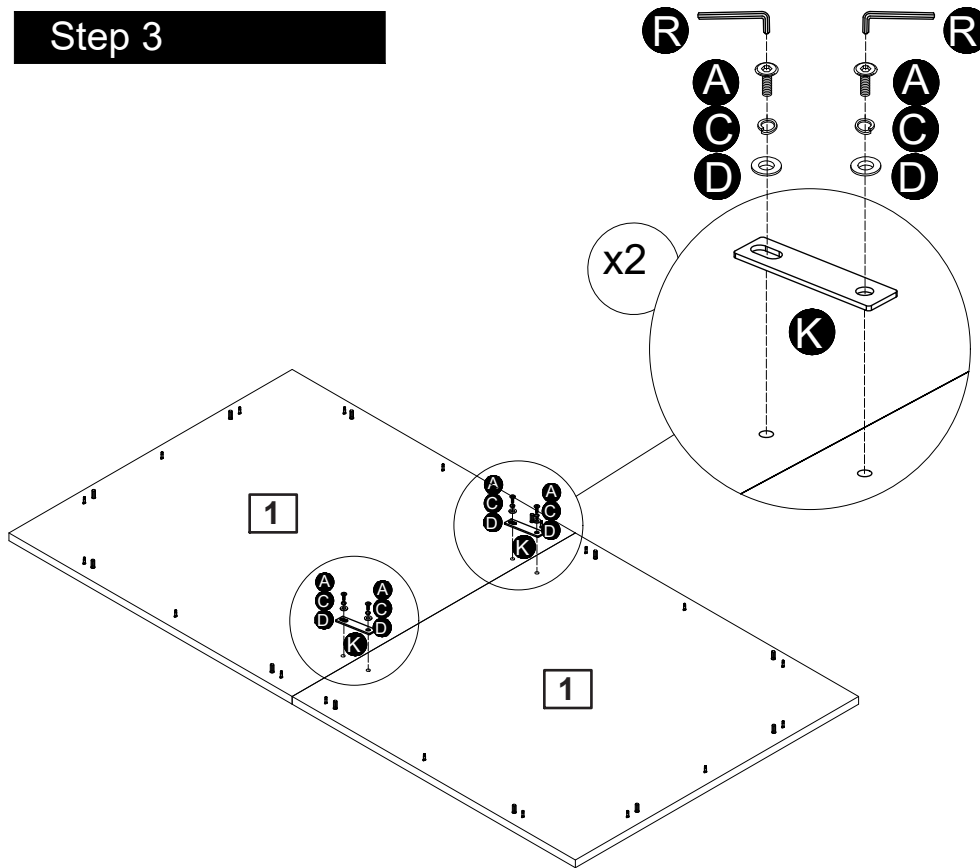

A
A x 4
1/4"x15mm Bolt

C
C x 4
1/4" Lock washer


D
D x 4
1/4"x19mm Flat washer

K
K x 2
Mounting plate metal

R
R x 1
Allen key 4mm

Attach Mounting plate metal (K) to Part (1) , using Flat washer (D), Lock washer(C) and Bolt (A) , tighten them by Allen key (R) .

Step 4

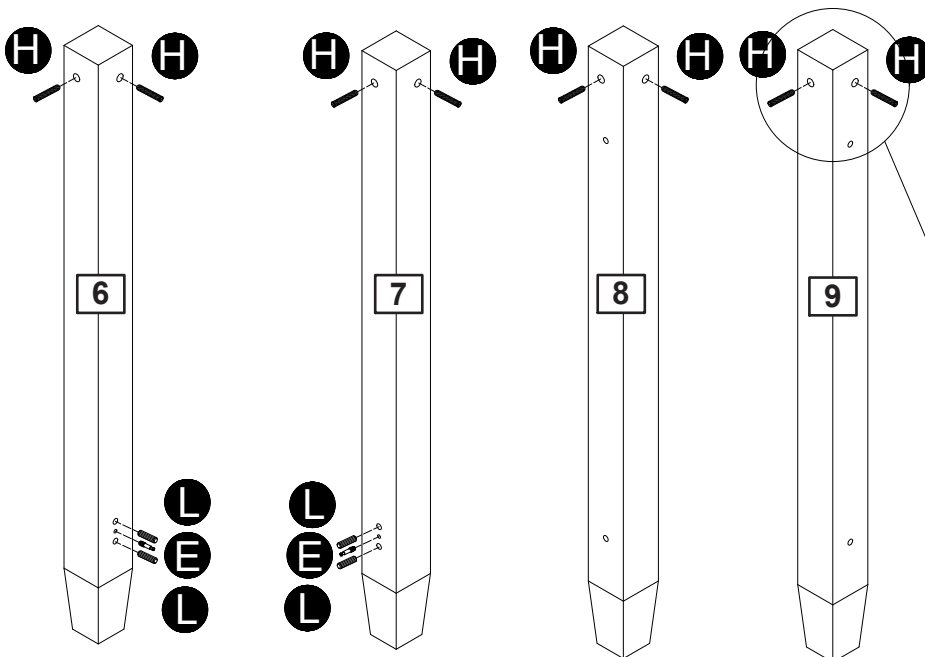

E
E x 2
Male Camlock

L
L x 4
Ø8x30mm Dowel






H
H x 8
5/16"x80mm Bolt

Attach Male Camlock (E) to Part (6,7) and Bolt (H) to Part (8,9) with a screwdriver. Insert Dowel (L) into Part (6,7).

Assembly Instructions





Step 5

CAM-LOCK
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

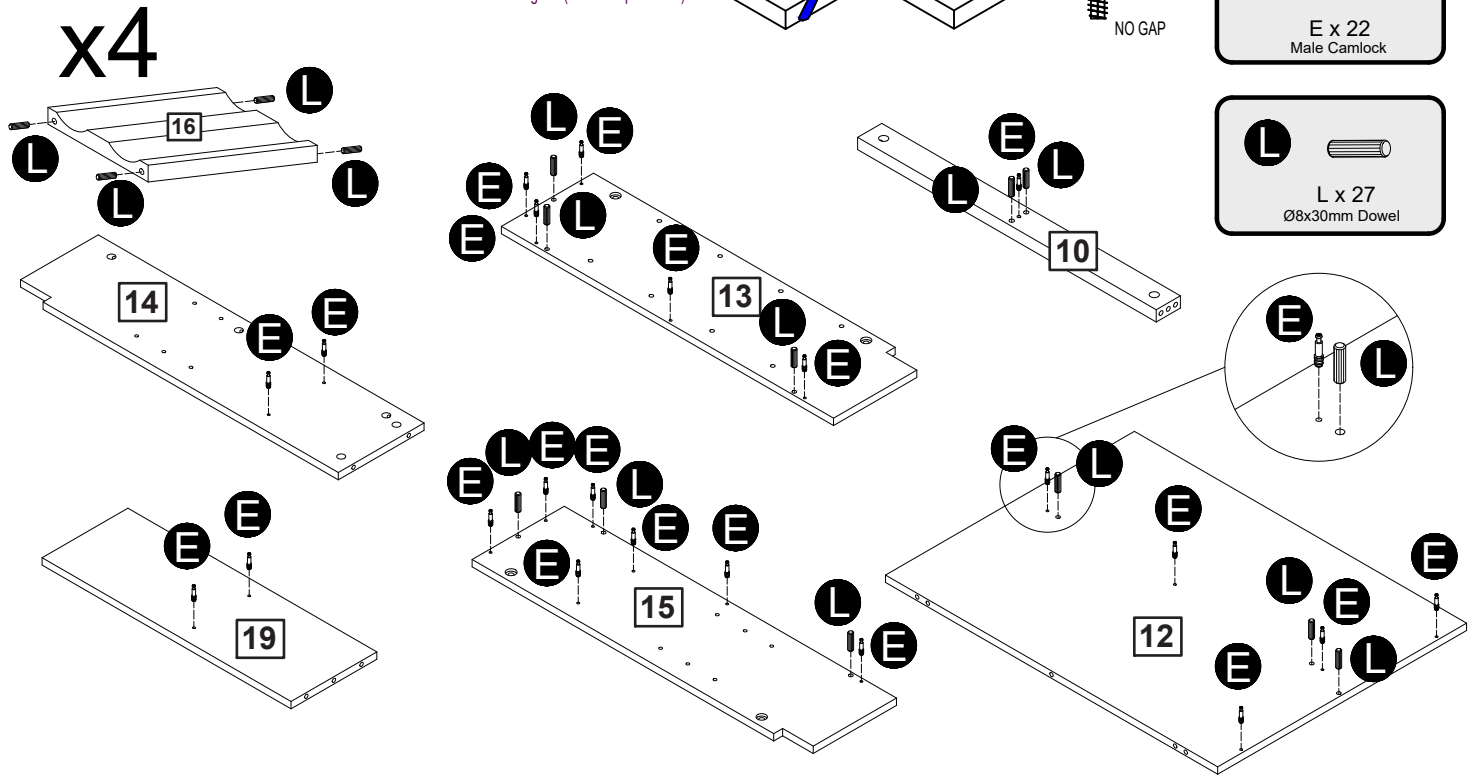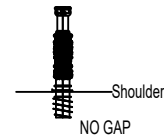

Attach Male Camlock (E) to Part (10,12,13,14,15,19) with a screwdriver.
Insert Dowel (L) into Part (10,12,13,15,16).


Step 6

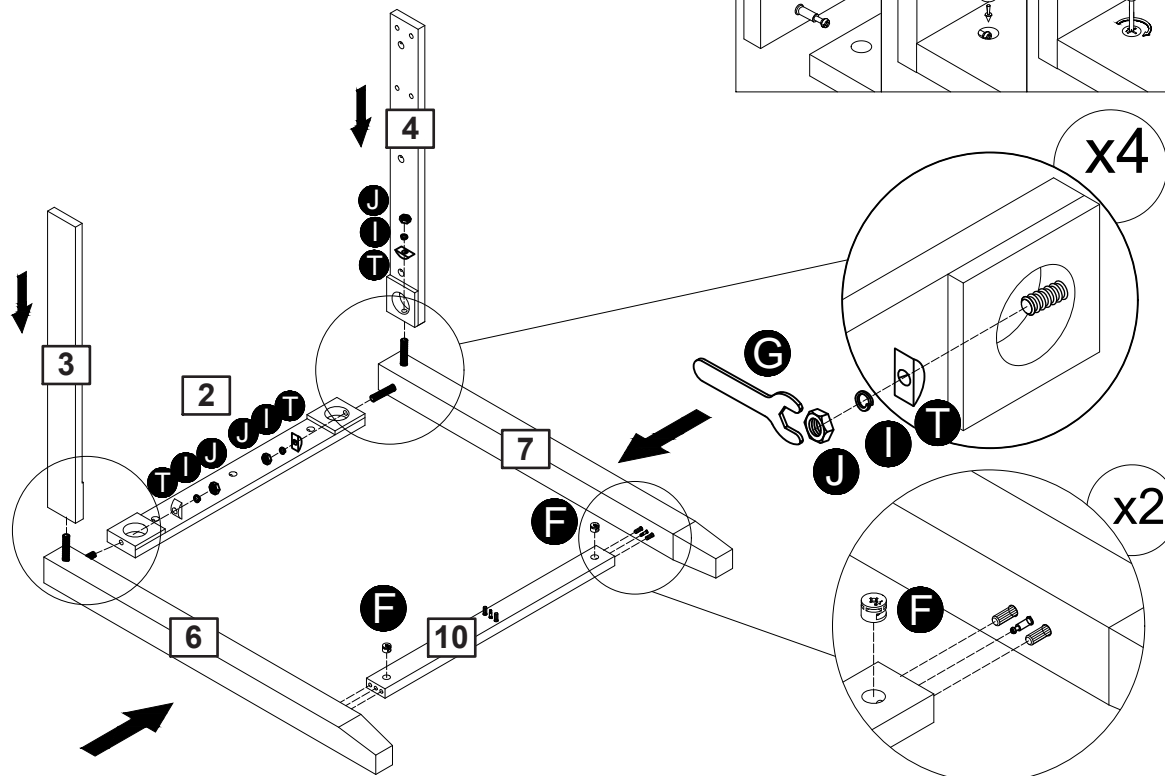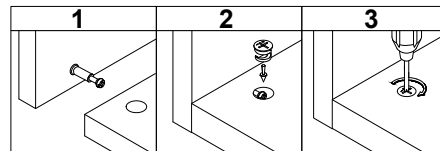

Attach Part (2,3,4,10) to Part (6,7), Insert Female Camlock (F) into Part (10) and secure.
Using Half moon (T), Lock washer (I) and Nut (J), tighten them by Allen wrench (G).

Assembly Instructions

Step 6

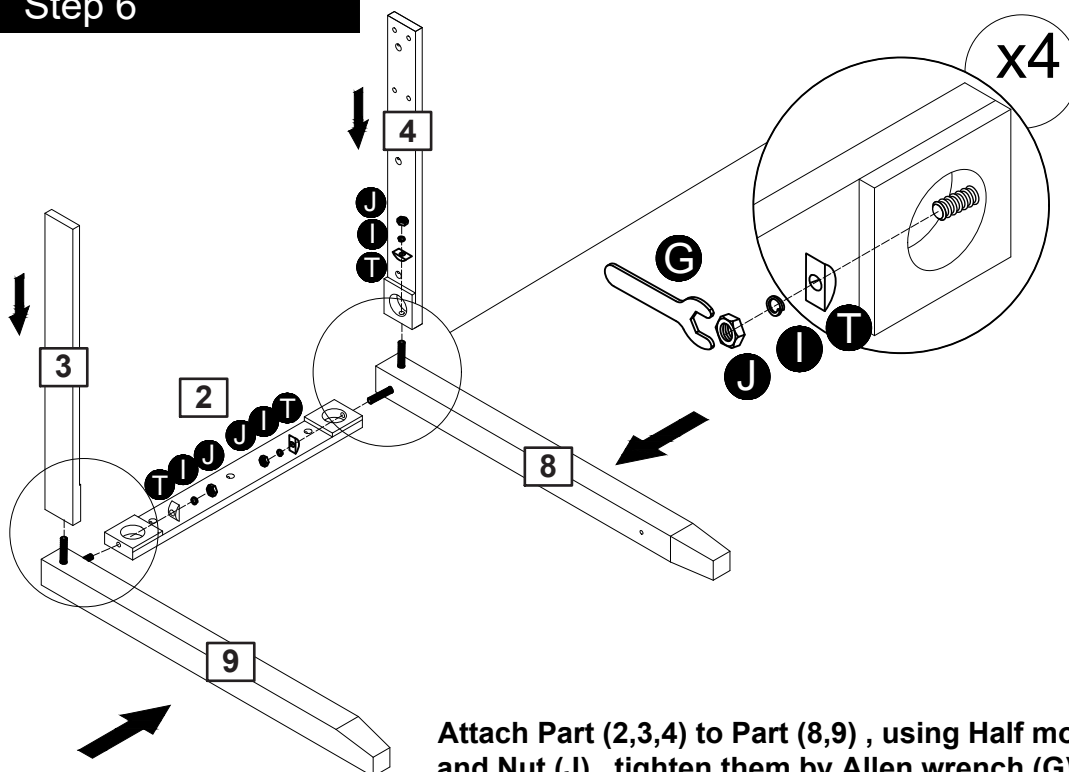

I 
I x 4
5/16" Lock washer


J 
J x 4
5/16" Nut

T 
T x 4
5/16" Half moon

G 
G x 1
Allen wrench 12mm

Attach Part (2,3,4) to Part (8,9) , using Half moon (T), Lock washer(I) and Nut (J) , tighten them by Allen wrench (G) .

Step 8

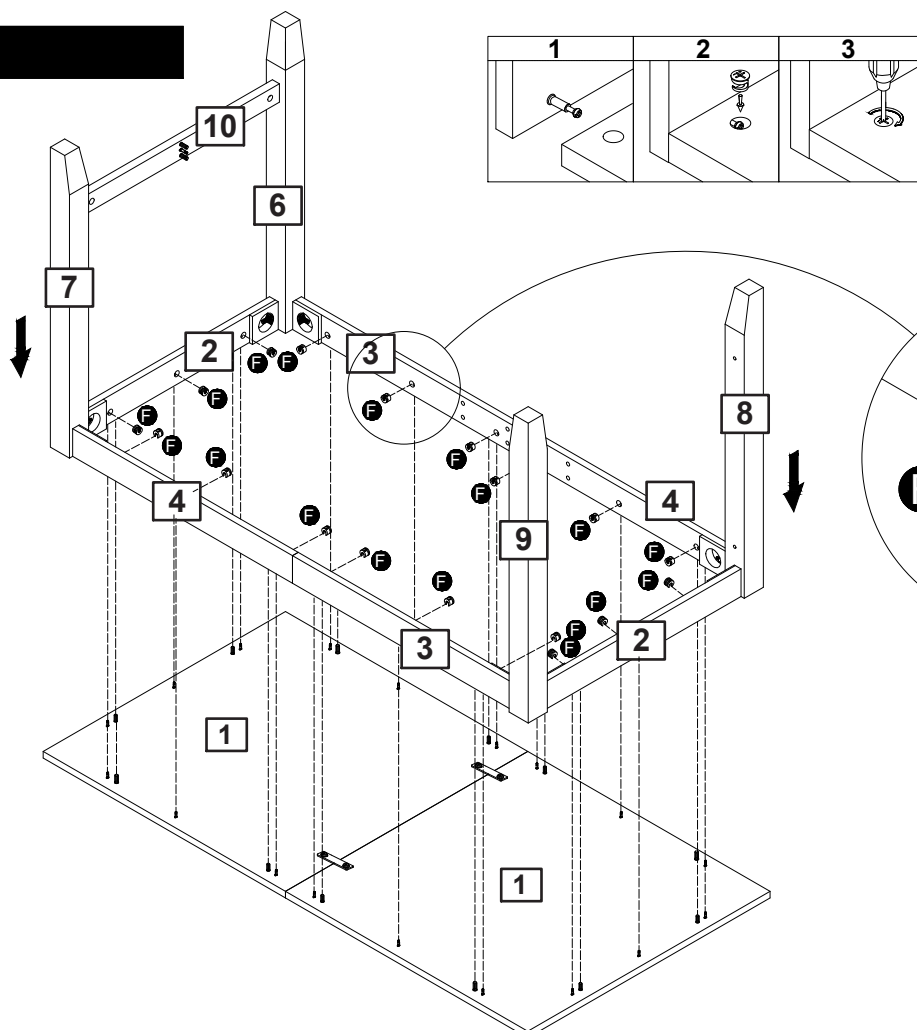



F 
F x 18
Female Camlock

x18

Attach Table frame (2,3,4) to Part (1) , Insert Female Camlock (F) and secure.




Assembly Instructions

Step 9

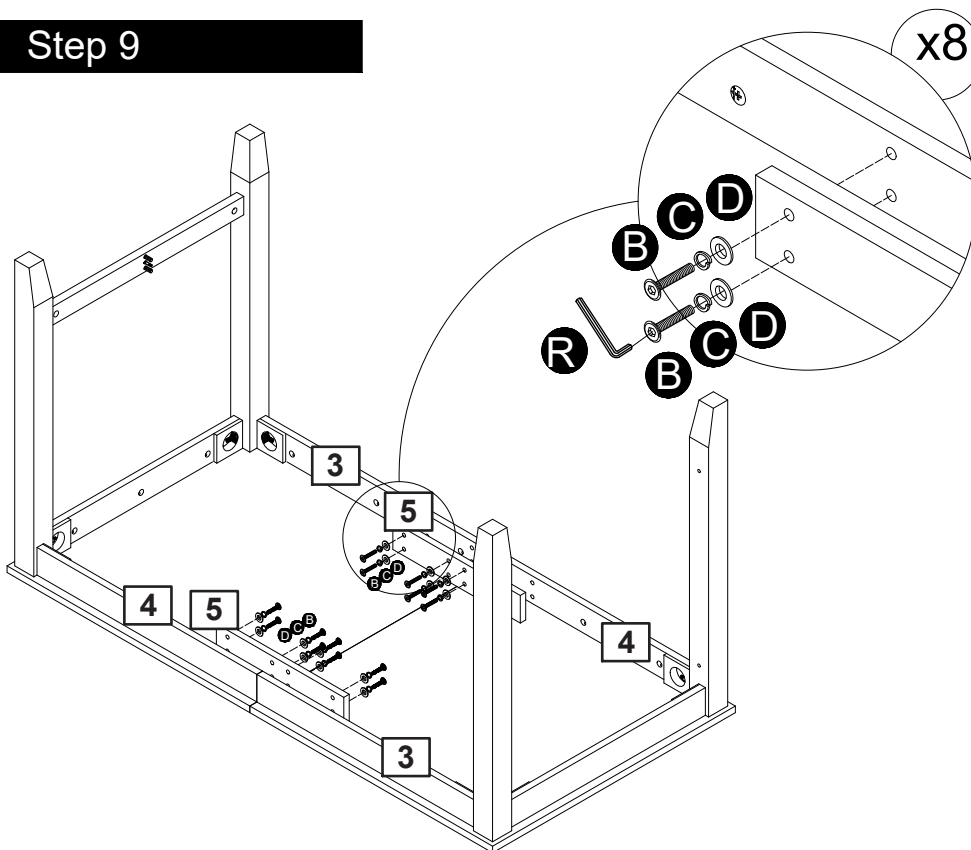

Attach Part (5) to Part (3,4) ,using Flat washer (D), Lock washer(C) and Bolt (B) , tighten them by Allen key (R) .


Step 10

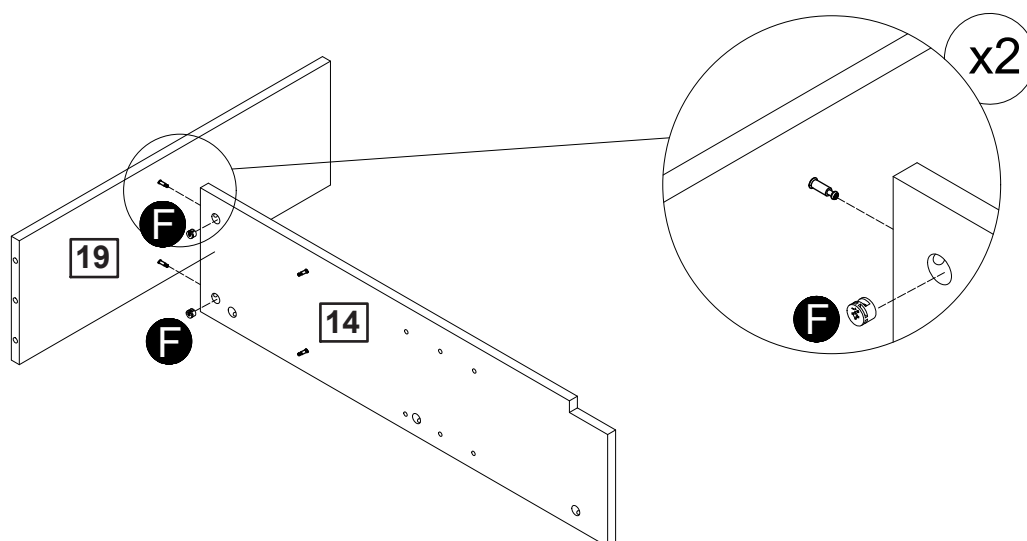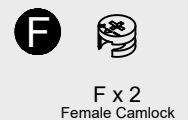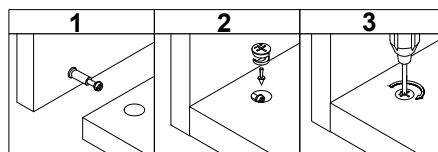

Insert Part (19) to Part (14) , Insert Female Camlock (F) and secure.

Assembly Instructions


Step 11

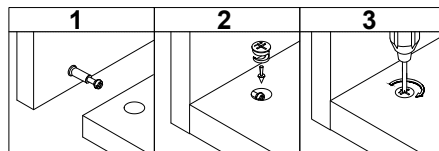

F




F x 5
Female Camlock

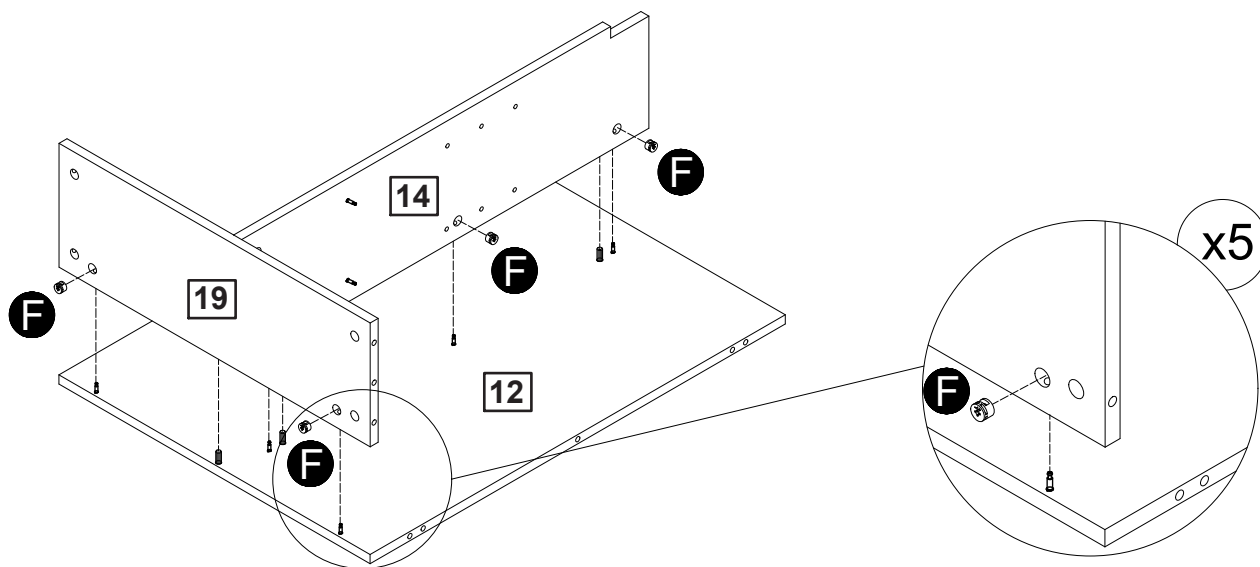

Insert Part (12) to Part (14,19) , Insert Female Camlock (F) and secure.


Step 12

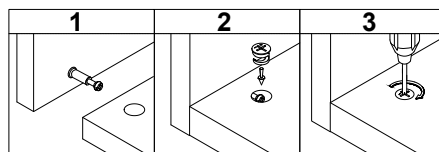

F





F x 4
Female Camlock

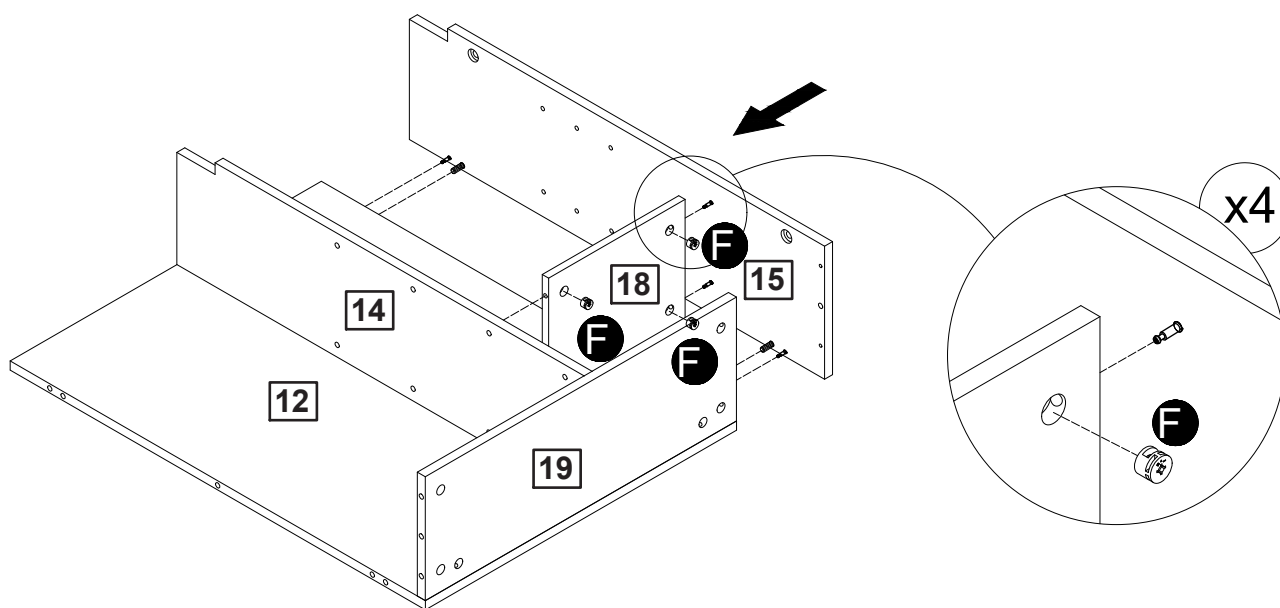

Insert Part (18) to Part (14) , Insert Female Camlock (F) and secure.
Insert Part (15) to Part (12,18,19) , Insert Female Camlock (F) and secure.

Assembly Instructions



Step 13

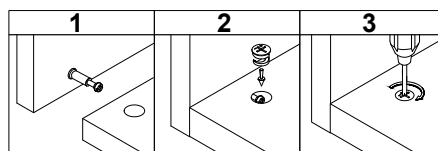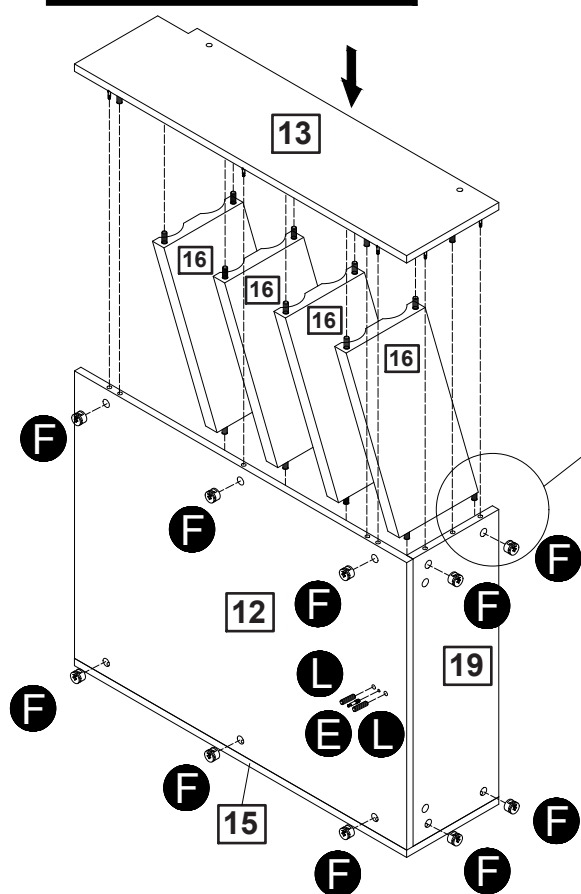



F
 F x 10
 Female Camlock

E
 E x 1
 Male Camlock

L
 L x 2
 Ø8x30mm Dowel

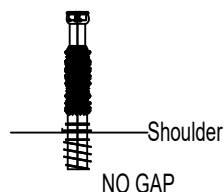
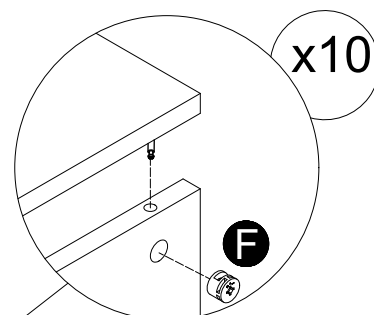


CAM-LOCK
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

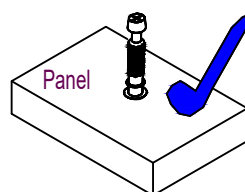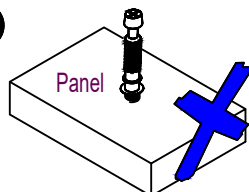

Insert Part (16) to Part (14), Insert Part (13) to Part (12, 19)
Insert Female Camlock (F) and secure.
Attach Male Camlock (E) to Part (12) with a screwdriver.
Insert Dowel (L) into Part (12).

Step 14

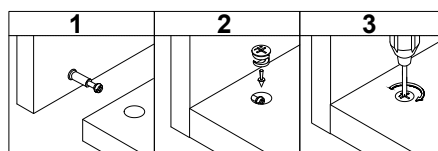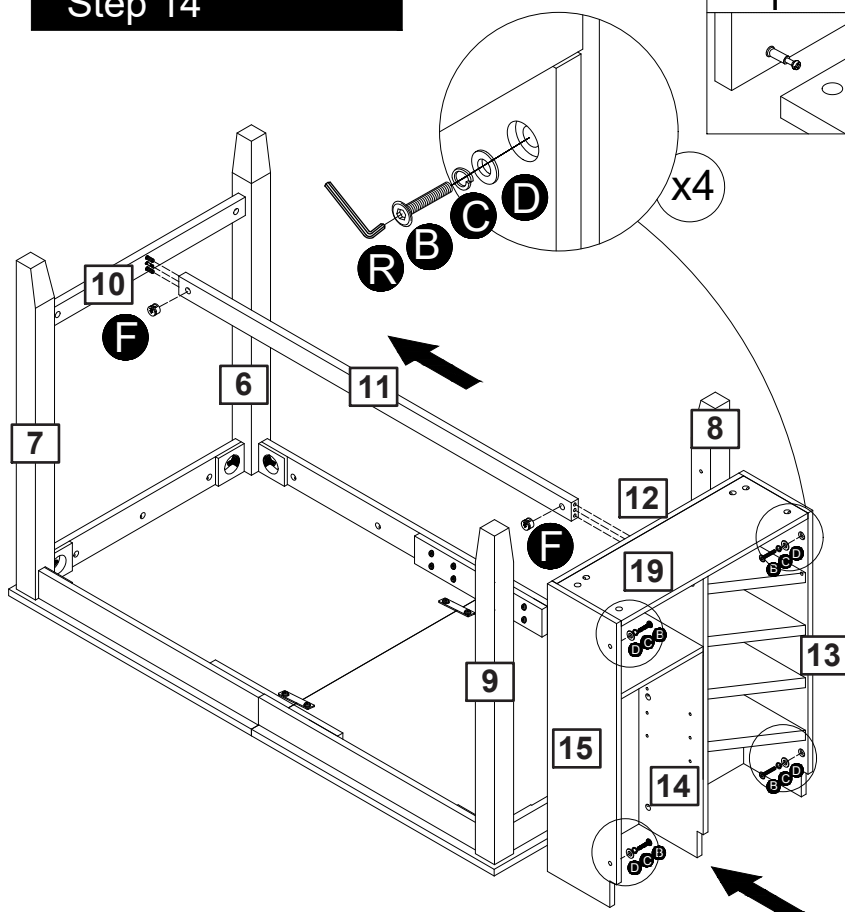

F
 F x 2
 Female Camlock

D
 D x 4
 1/4"x19mm Flat washer

B
 B x 4
 1/4"x32mm Bolt


R
 R x 1
 Allen key 4mm

C
 C x 16
 1/4" Lock washer

Attach Side Box to Part (8, 9)
Insert Part (11) to Part (10, 12), Insert Female Camlock (F) and secure.
Locking Part (9, 15) and Part (8, 13), Using Flat washer (D), Lock washer (C) and Bolt (B), tighten them by Allen key (R).

Assembly Instructions

Step 15

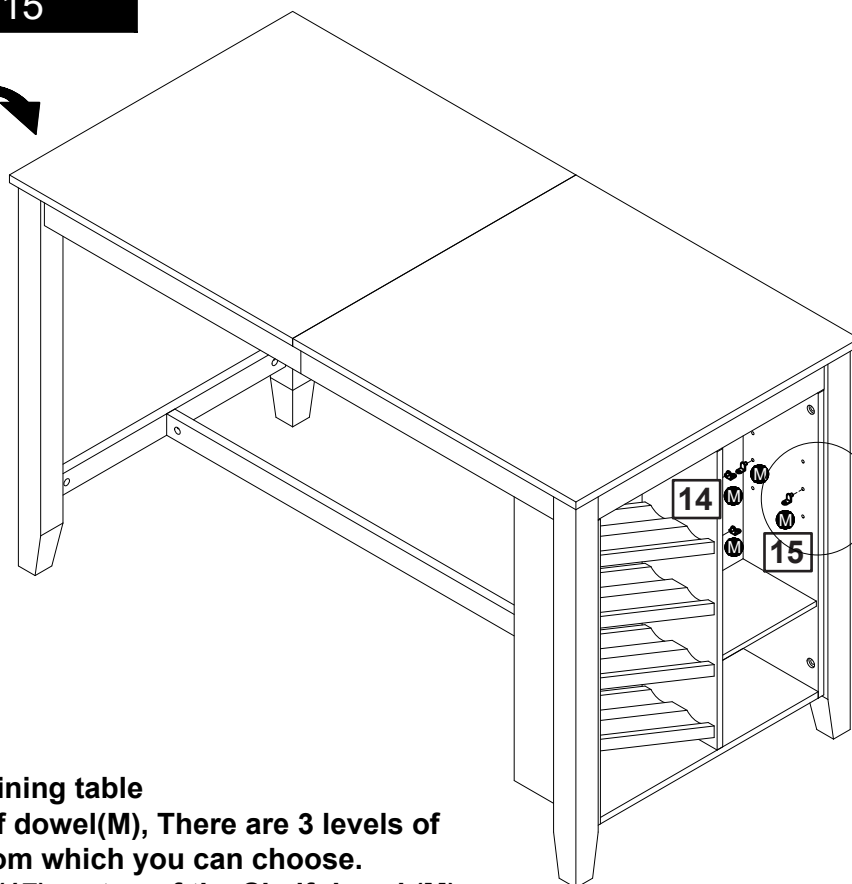

M



M x 4
Shelf dowel


x4

M


17

Overturn dining table
Insert Shelf dowel(M), There are 3 levels of position from which you can choose.
Place Part (17) on top of the Shelf dowel (M).

Step 16

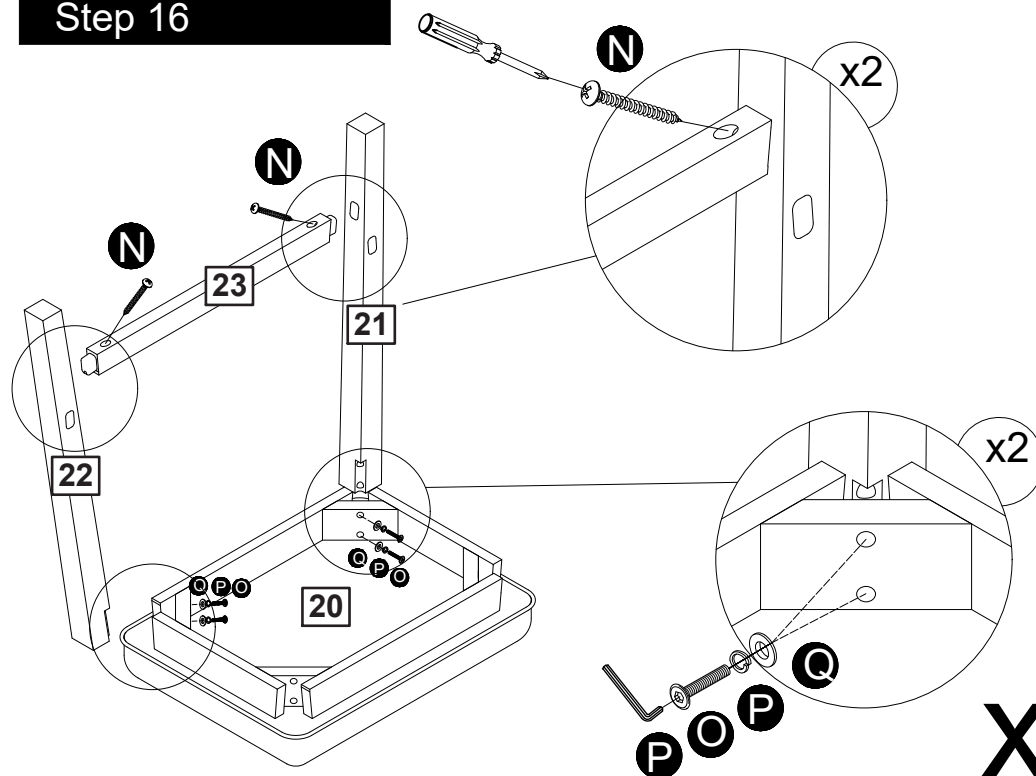

O



O x 4
1/4"x51mm Bolt

P




P x 4
1/4" Lock washer

Q




Q x 4
1/4"x19mm Flat washer

N



N x 2
#4x51mm Screw pan head

R





R x 1
Allen key 4mm

x4

Attach Part (21,22) to Part (20) ,using Flat washer (Q), Lock washer(P) and Bolt (O) ,locking by Allen key (R), don't tighten it.
Insert Part (23) to Part (21,22), using Screw (N) with a screwdriver.


Assembly Instructions

Step 17

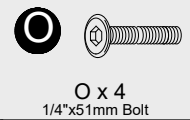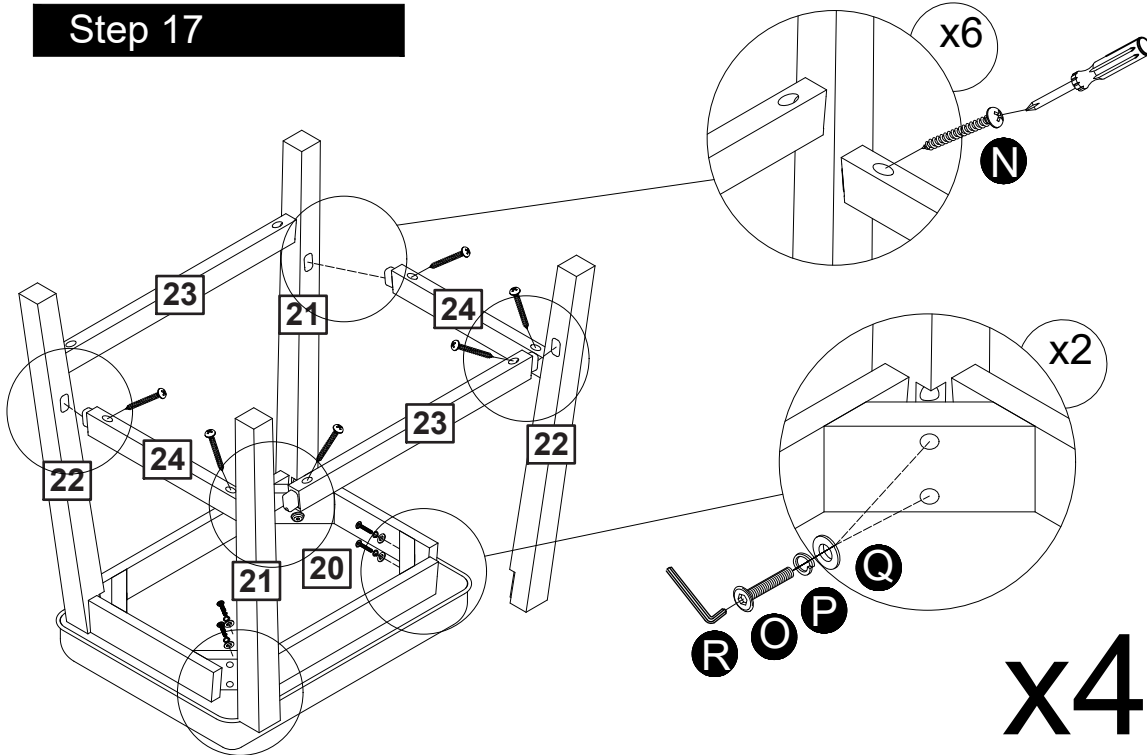

Attach Part (21,22) to Part (20) ,using Flat washer (Q), Lock washer(P) and Bolt (O) ,locking by Allen key (R), don't tighten it.
Insert Part (23) to Part (21,22), using Screw (N) with a screwdriver.


Step 18

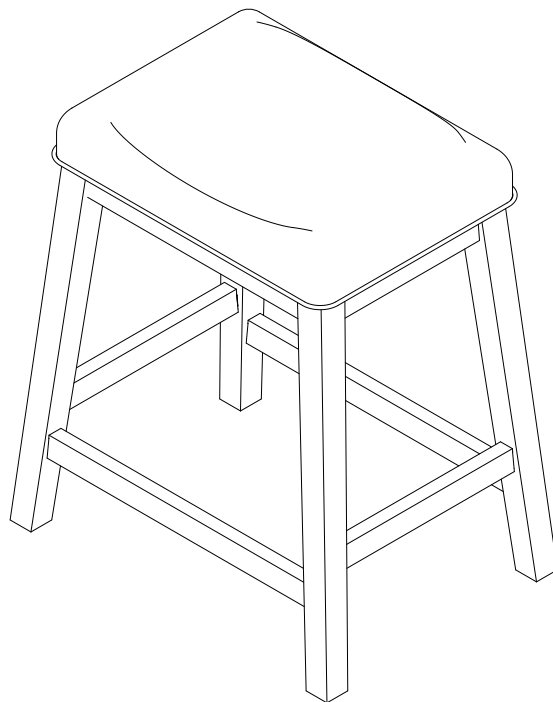

Place the Barstool on a flat surface, now tighten all the bolts.

Assembly Instructions

Step 19

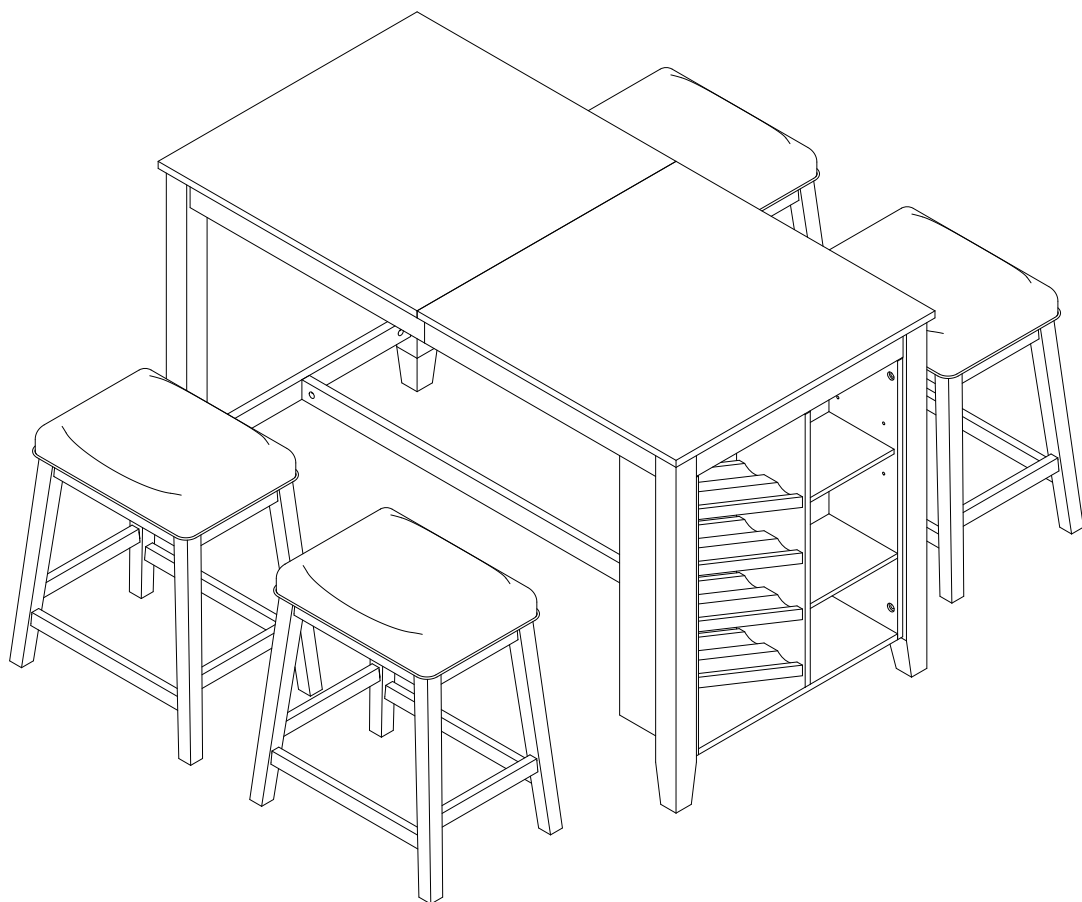

Installation Complete.