


STORAGE BED FRAME

The product comes in 2 BOXES. Do not proceed with unpacking or assembly until both boxes are received.

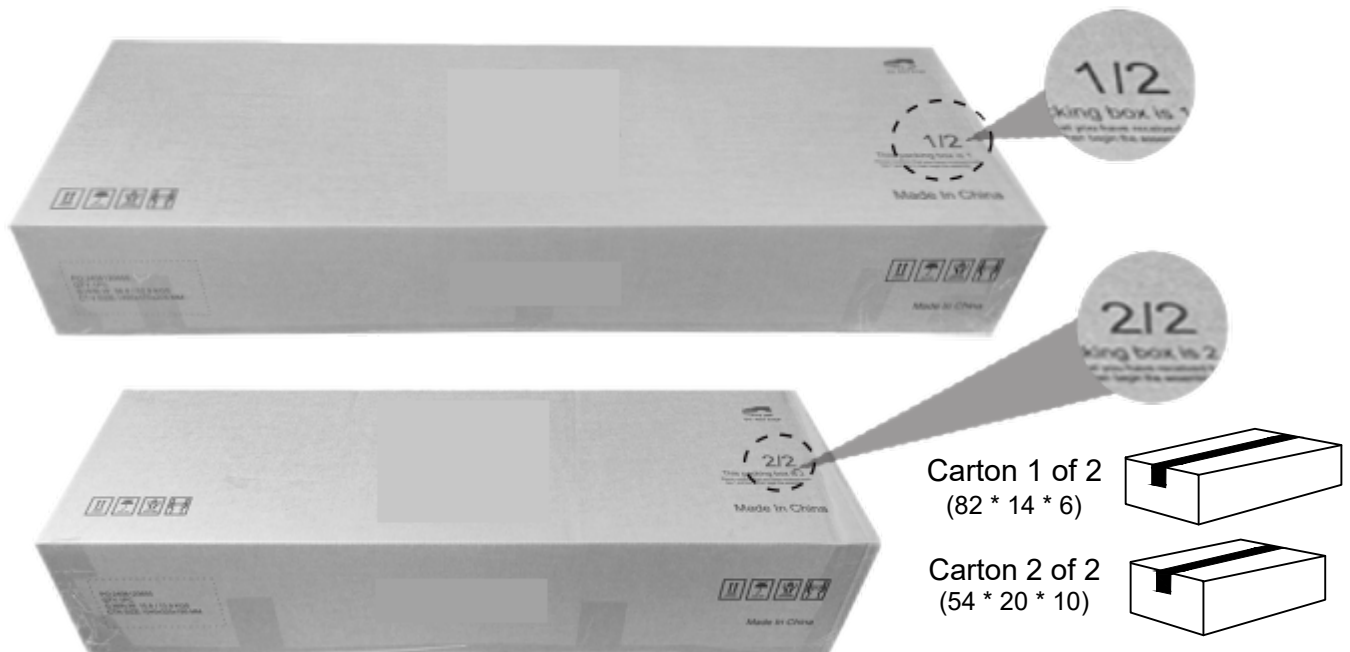

- To prevent the hardware package from being lost, a special loss-prevention cord is included. Use it to locate the hardware package.



- Box identification is shown in the location indicated in the picture on the left of the outer box. The assembly guide and accessory box (including hardware, socket, lamp, and remote) are in box 2/2. Please locate all accessories from both boxes before assembly.

Bookcase Storage Bed Frame Assembly Instructions



Please carefully reading this manual
will help you complete the product
installation more efficiently



BEFORE INSTALLATION

- .Please read this guide carefully to familiarize yourself with the required tools, materials, and procedures. Follow the applicable sections to ensure proper assembly.
- .This guide is based on the latest product information at the time of printing. The company reserves the right to make changes to product features, packaging, or availability without notice. Before assembling the furniture, ensure all necessary preparations are completed.
- .This manual includes important installation, cleaning, and maintenance information. Please read and keep it for future reference.
- .This furniture is made from E1-grade board material, with harmful gas emissions of less than 1.5mg/L, compliant with GB/T 15102-20170 standards.
- .Before assembly, check if the product is damaged. Place it on a flat surface for balance.
- .Avoid prolonged exposure to moisture and sunlight. Clean the furniture regularly with a damp cloth to prevent bacterial growth.
- .Do not expose the furniture to acidic, alkaline, or corrosive liquids. Handle with care during installation to avoid scratches or damage.
- .For questions, contact customer service at 具体邮箱地址, or call the after-sales hotline at xxxxxxxx between xx AM and xx PM
























SAFETY WARNINGS

- .Please follow the warning information displayed on this product and its packaging. Do not remove the warning labels.
- .Always use recommended mattress sizes or supports to prevent entrapment or falling.
- .Regularly inspect the product for proper assembly, damage, and tightness.
- .Do not play or jump on the bed
- .Avoid using replacement parts without manufacturer approval.
- .Do not use waterbeds or floating mattresses.
- .Avoid attaching any objects like hooks, straps, or ropes to the bed.
- .Please keep this manual for future reference.
- .Safety is a shared responsibility between us as the manufacturer and you as the guardian. Please read and consider the warnings on the page.

















ASSEMBLY INSTRUCTIONS

The box 1

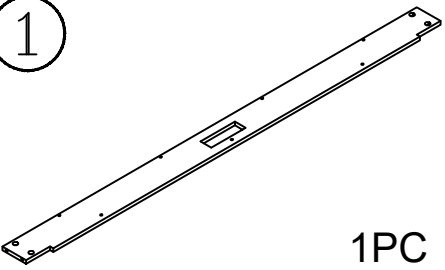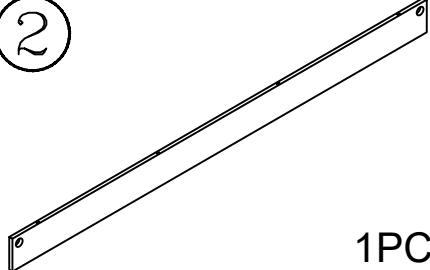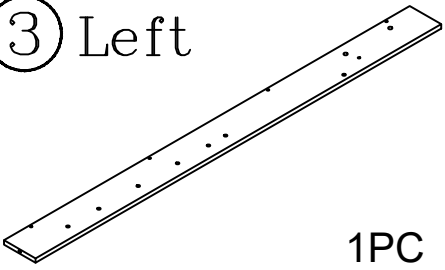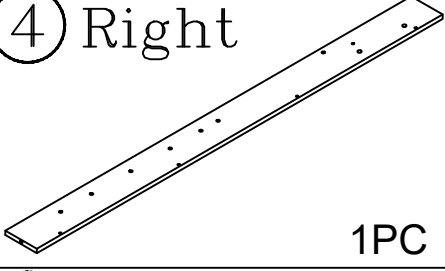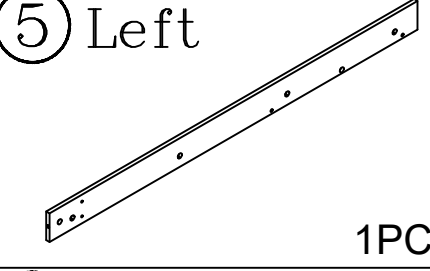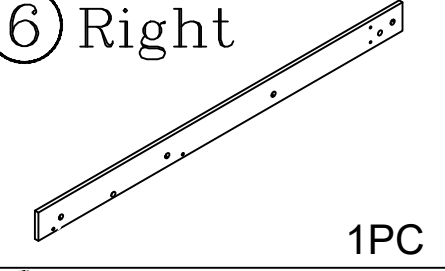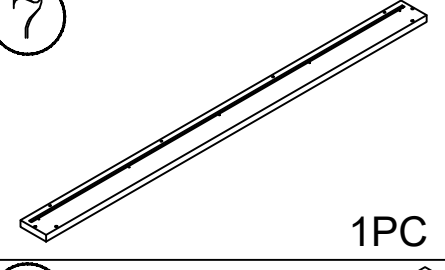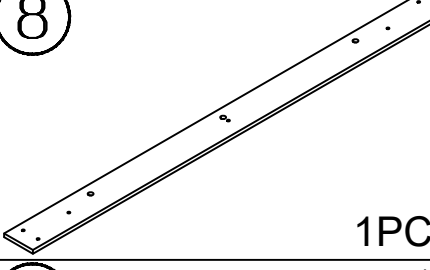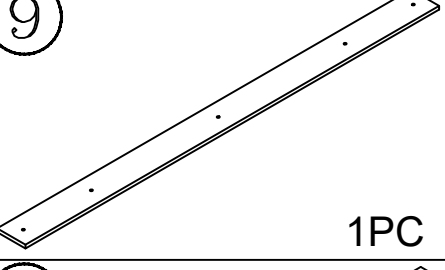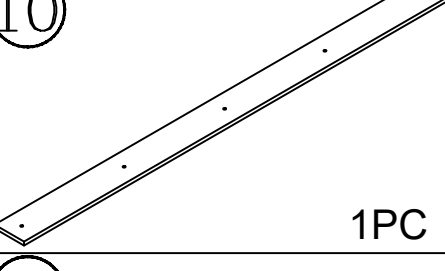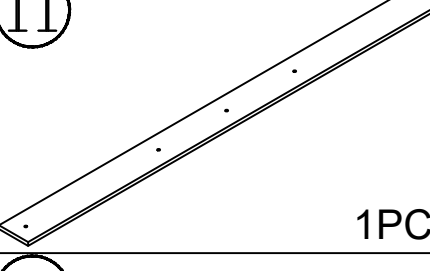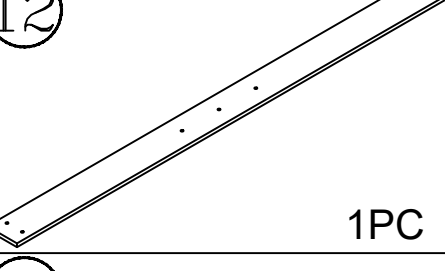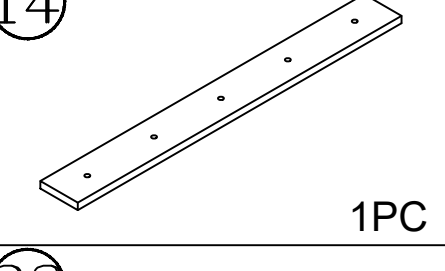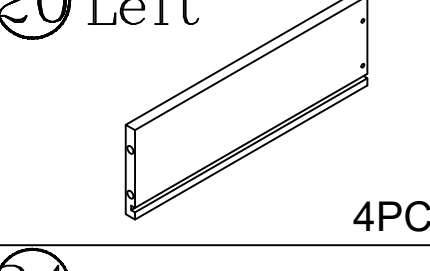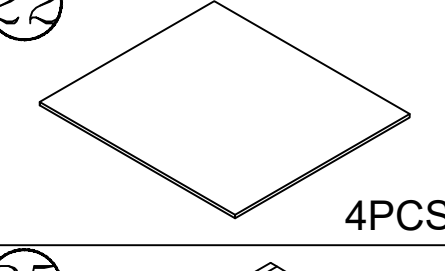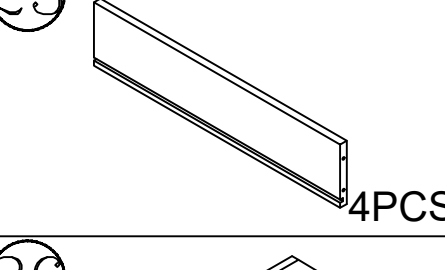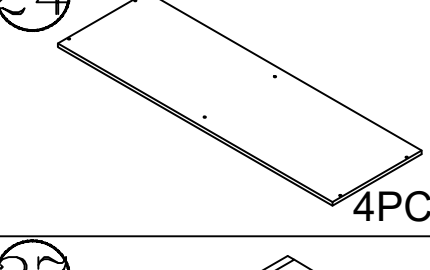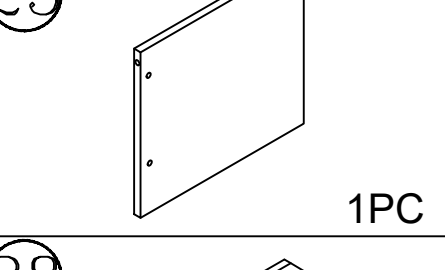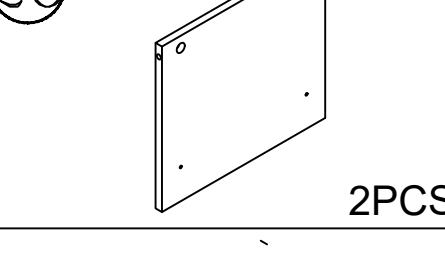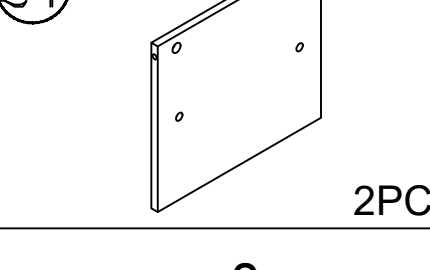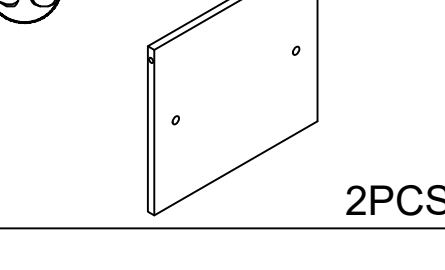①  1PC	②  1PC	③ Left  1PC
④ Right  1PC	⑤ Left  1PC	⑥ Right  1PC
⑦  1PC	⑧  1PC	⑨  1PC
⑩  1PC	⑪  1PC	⑫  1PC
⑭  1PC	⑯ Left  4PCS	⑰  4PCS
⑳  4PCS	㉑  4PCS	㉒  1PC
㉓  2PCS	㉔  2PCS	㉕  2PCS















ASSEMBLY INSTRUCTIONS


The box 1 continued

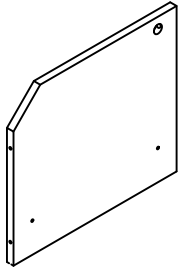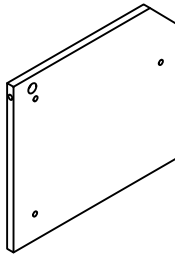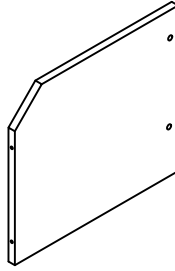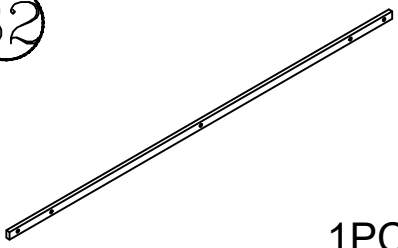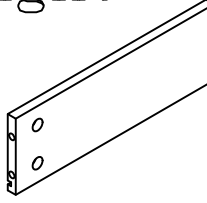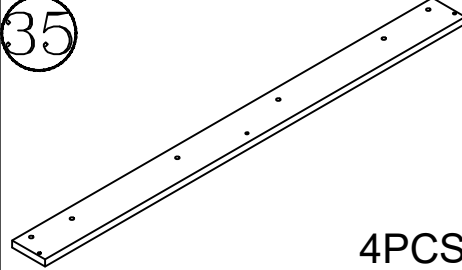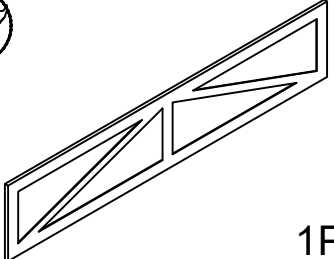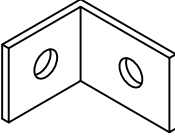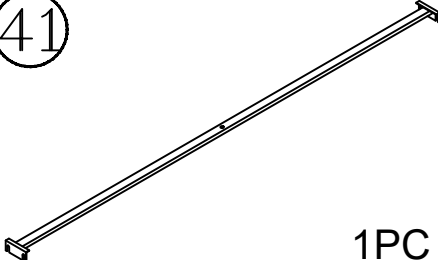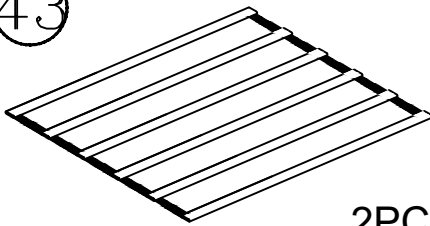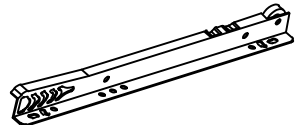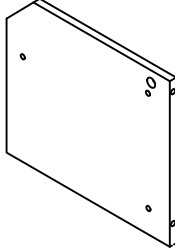 29 2PCS	 30 1PC	 31 1PC
 32 1PC	 21 Right 3PCS	 35 4PCS
 37 1PC	 48 4PCS	 40 PARTS LIST 1PC
 41 1PC	 43 2PCS	 44-1 4PCS
 44-2 4PCS	 45-1 Left 4PCS	 45-2 Right 4PCS
 47 1PC		

ASSEMBLY INSTRUCTIONS


The box 2

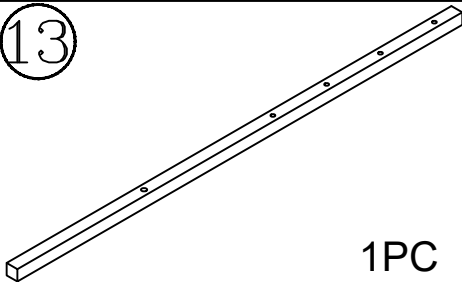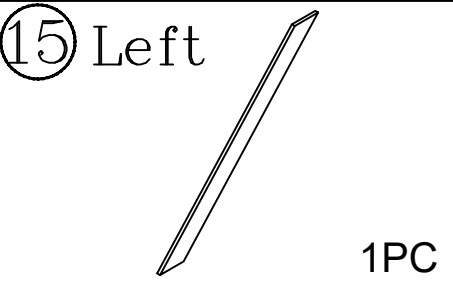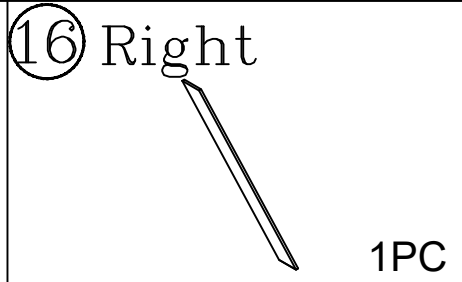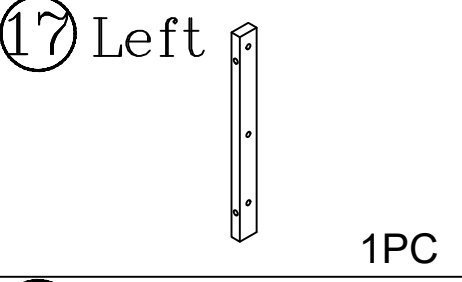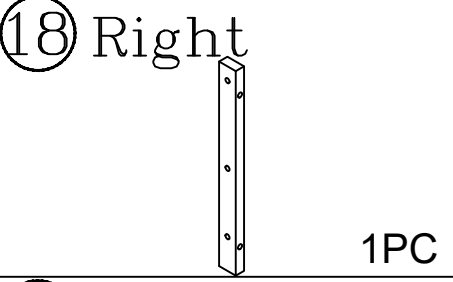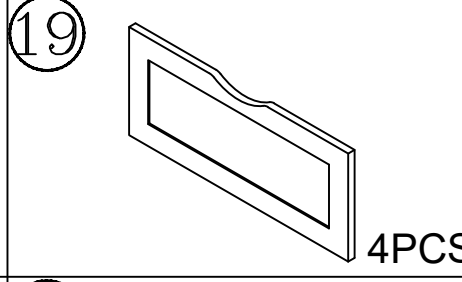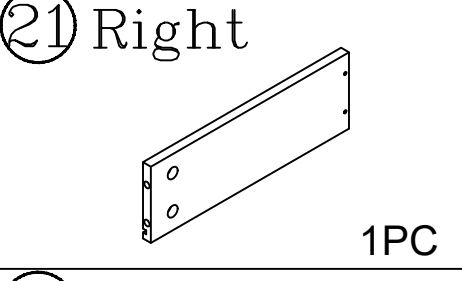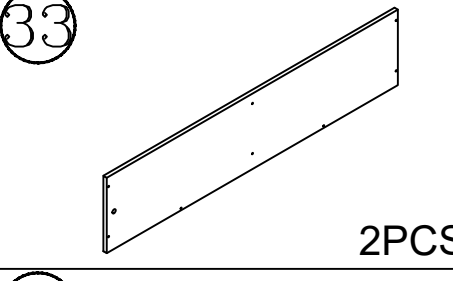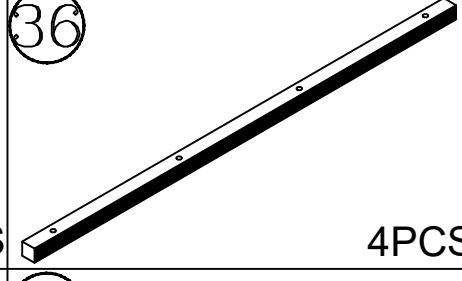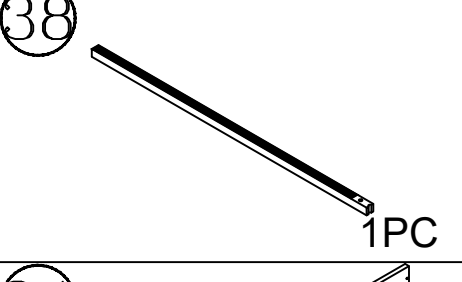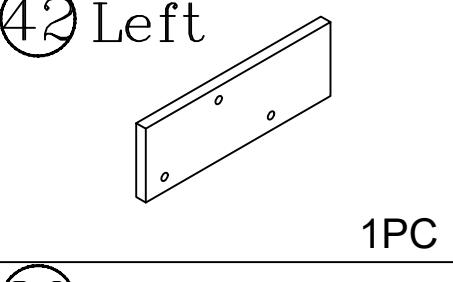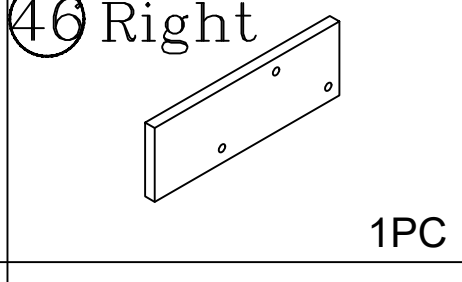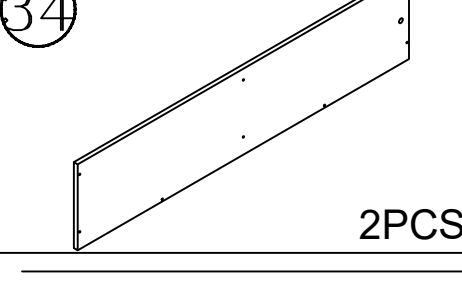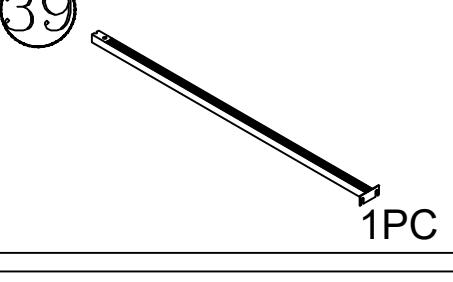 13 1PC	 15 Left 1PC	 16 Right 1PC
 17 Left 1PC	 18 Right 1PC	 19 4PCS
 21 Right 1PC	 33 2PCS	 36 4PCS
 38 1PC	 42 Left 1PC	 46 Right 1PC
 34 2PCS	 39 1PC	



Phillips screwdriver
(medium & large)




















Ruler-Use this ruler to help correctly identify the screws.



The length of the screw is measured from the rod part excluding the screw cap (30mm screw shown).

ASSEMBLY INSTRUCTIONS

The box 1 continued

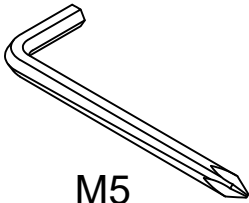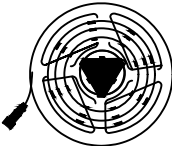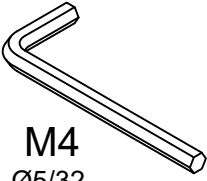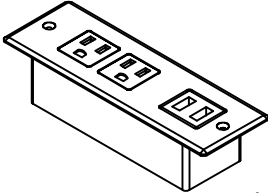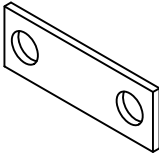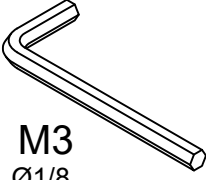(A)  M6*11mm Ø15/64*15/32" 18PCS	(B)  M6*20mm Ø15/64*51/64" 43PCS	(C)  M6*30mm Ø15/64*3/16" 2PCS
(D)  M6*35mm Ø15/64*1-3/8" 16PCS	(E)  M6*50mm Ø15/64*1-31/32" 4PCS	(F)  M8*35mm Ø5/16*1-3/8" 2PCS
(G)  M8*50mm Ø5/16*1-31/32" 5PCS	(H)  Φ6*Φ16mm Ø16/64*19/32" 22PCS	(I)  Φ6*30mm Ø15/64*1-3/16" 2PCS
(J)  M5 Ø13/64 1PC	(K1)  Ø15*10mm Ø19/32*25/64" 49PCS	(K2)  Ø7*40mm Ø9/32*1-37/64" 49PCS
(L)  M5*40mm Ø13/64*1-37/64" 76PCS	(M)  1PC	(N)  M4 Ø5/32 1PC
(O)  1PC	(P)  M4*12mm Ø5/32*15/32" 42PCS	(Q)  M6*45mm Ø15/64*1-49/64" 4PCS
(R)  2PCS	(S)  M3 Ø1/8 1PC	(T)  M8*60mm Ø5/16*2-23/64" 1PC

Contact After-Sales Support:

Phone Contact: Call our after-sales hotline [具体电话号码], during business hours [明确售后工作时间范围, 例如周一至周五, 上午 9:00 - 下午 6:00], Our professional customer service staff will promptly answer and carefully record your feedback. Please accurately describe the details of the missing parts as well as your order information (e.g., order number, purchase platform, purchase date). This helps us efficiently locate your records and handle the issue quickly. **Email Support:** Alternatively, you can send an email to our after-sales service email address at [具体邮箱地址], Please use the subject line "Missing Bed Parts Issue" and clearly list the details of the missing parts in the email body. Attach the prepared photos and your order information. Our after-sales team will review your email as soon as possible and arrange for the replacement parts.

Product or Packaging Damage

Damage Affecting Use:

If the product or packaging damage is severe and has affected the normal use of the panel bed, please promptly take clear photos or videos showing the damaged area and its extent (multi-angle shots are recommended to provide a complete view). Send the photos or videos to our after-sales service email address at [具体邮箱地址] with the subject line " Bed Damage Affecting Use." Include your order information in the email body. Once we verify the situation, we will replace the product with a brand-new one or arrange a refund according to your preference to ensure your rights are fully protected.

Damage Not Affecting Use:

If the product or packaging damage does not affect the normal use of the panel bed, you can still contact our after-sales team via phone at [具体联系号码] or email at [具体邮箱地址] to report the damage. Attach relevant photos, videos, and order details (as described above). Based on the actual damage, we will provide professional repair guidance to help you perform a simple fix yourself. Alternatively, we may offer partial compensation to express our apologies, ensuring your satisfaction with our product.

Regardless of the situation, our after-sales team will maintain a professional and responsible attitude, actively resolve the issue, and strive to ensure a pleasant shopping experience for you

HANDLING MISSING OR DAMAGED ITEMS

If you find missing parts, damaged packaging, or product damage, follow these steps to contact our support team

Missing Parts

Parts Verification: Please carefully compare the parts you received with the accessory list provided in the manual (the accessory list can be found on [具体章节或页码] of this manual)-Check the specific names, specifications, and quantities of the missing parts. To help us understand the situation more clearly and expedite the replacement process, we kindly ask you to provide clear photos of the missing parts, as shown in the example below.

STORAGE BED FRAME


ASSEMBLY INSTRUCTIONS - PLEASE KEEP FOR FUTURE REFERENCE




NOTE:

Comes with TWO PACKAGES with TWO TRACKINGS, may NOT be delivered at the same time.


KING SIZE:

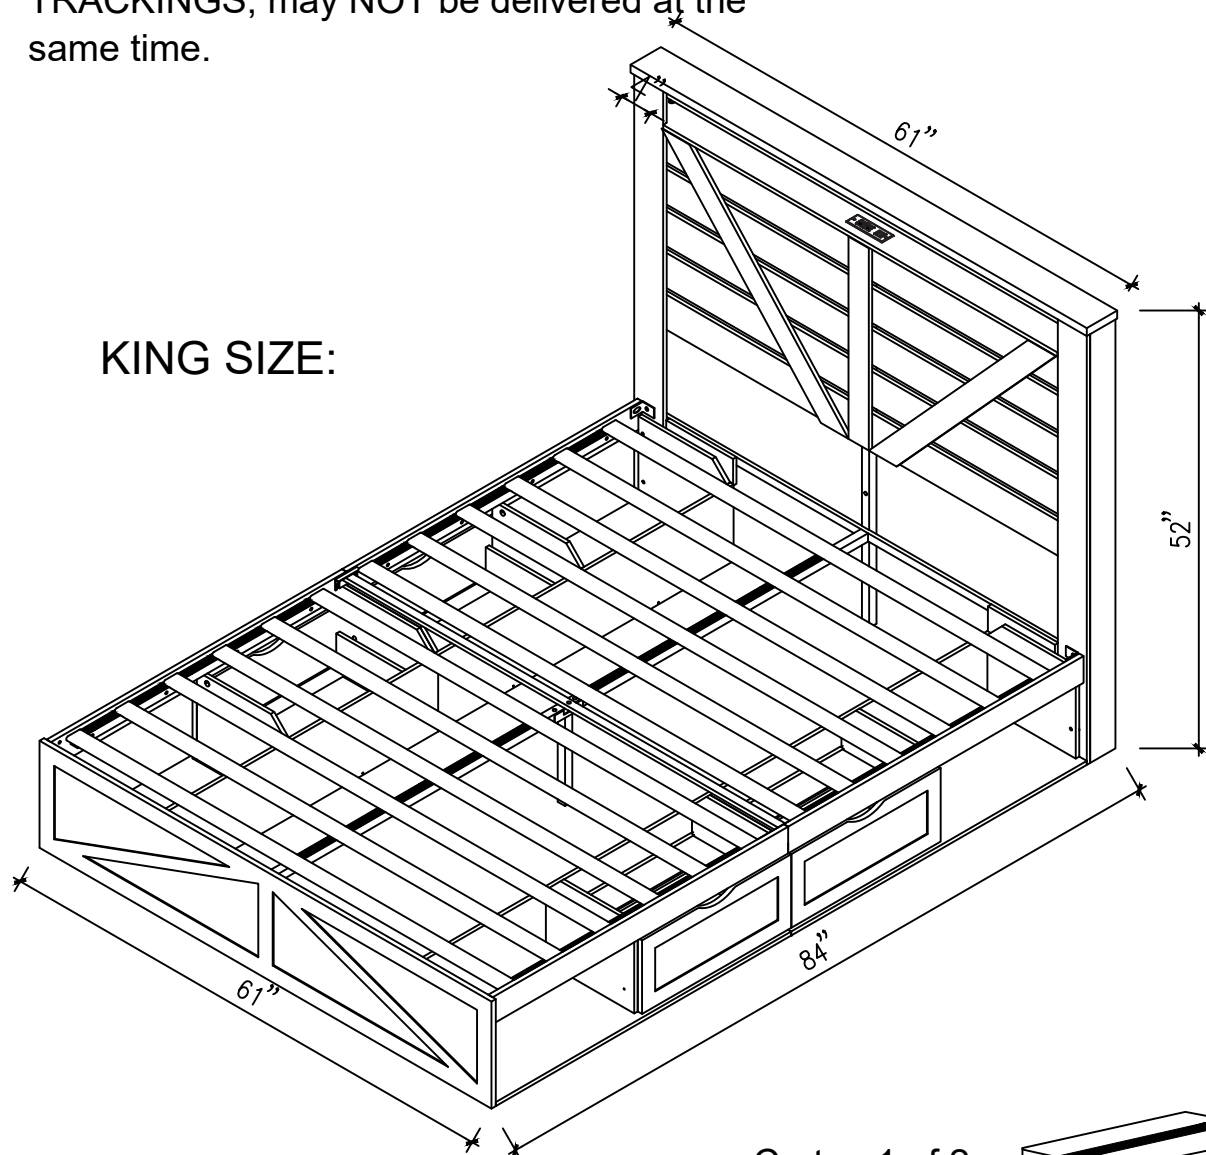

Carton 1 of 2
(64 * 17 * 10)

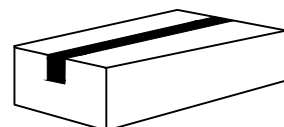


Carton 2 of 2
(45 * 14 * 7)

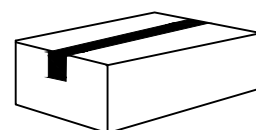


Important - Please read these instructions fully before starting assembly


TOOLS & EQUIPMENT

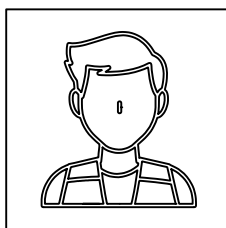


2 people needed

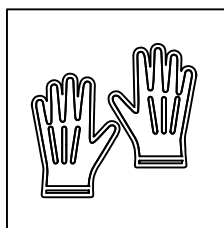

Work gloves

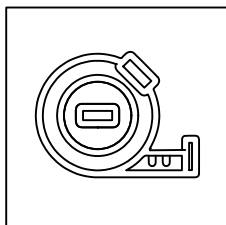

Tape measure

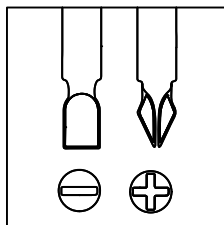

Other Tools Required
.Phillips Screwdriver
(Not Included)



SIMPLE ASSEMBLY STEPS

1. Read the manual carefully.
2. Check all parts and hardware.
3. Prepare necessary tools.
4. Have at least two adults for assembly.
5. Assemble on a flat surface for balance.
6. Do not tighten screws until assembly is complete.


Protect parts during assembly. Clean surfaces with a damp cloth only.

Customer Support:

If parts are missing or you need assistance, please contact us. When calling or emailing, please provide your order number and relevant product information.

HEADBOARD SECTION




The headboard section assembly requires a total of 19 labeled panels, as shown in the diagram. Please identify and gather all the panels before proceeding

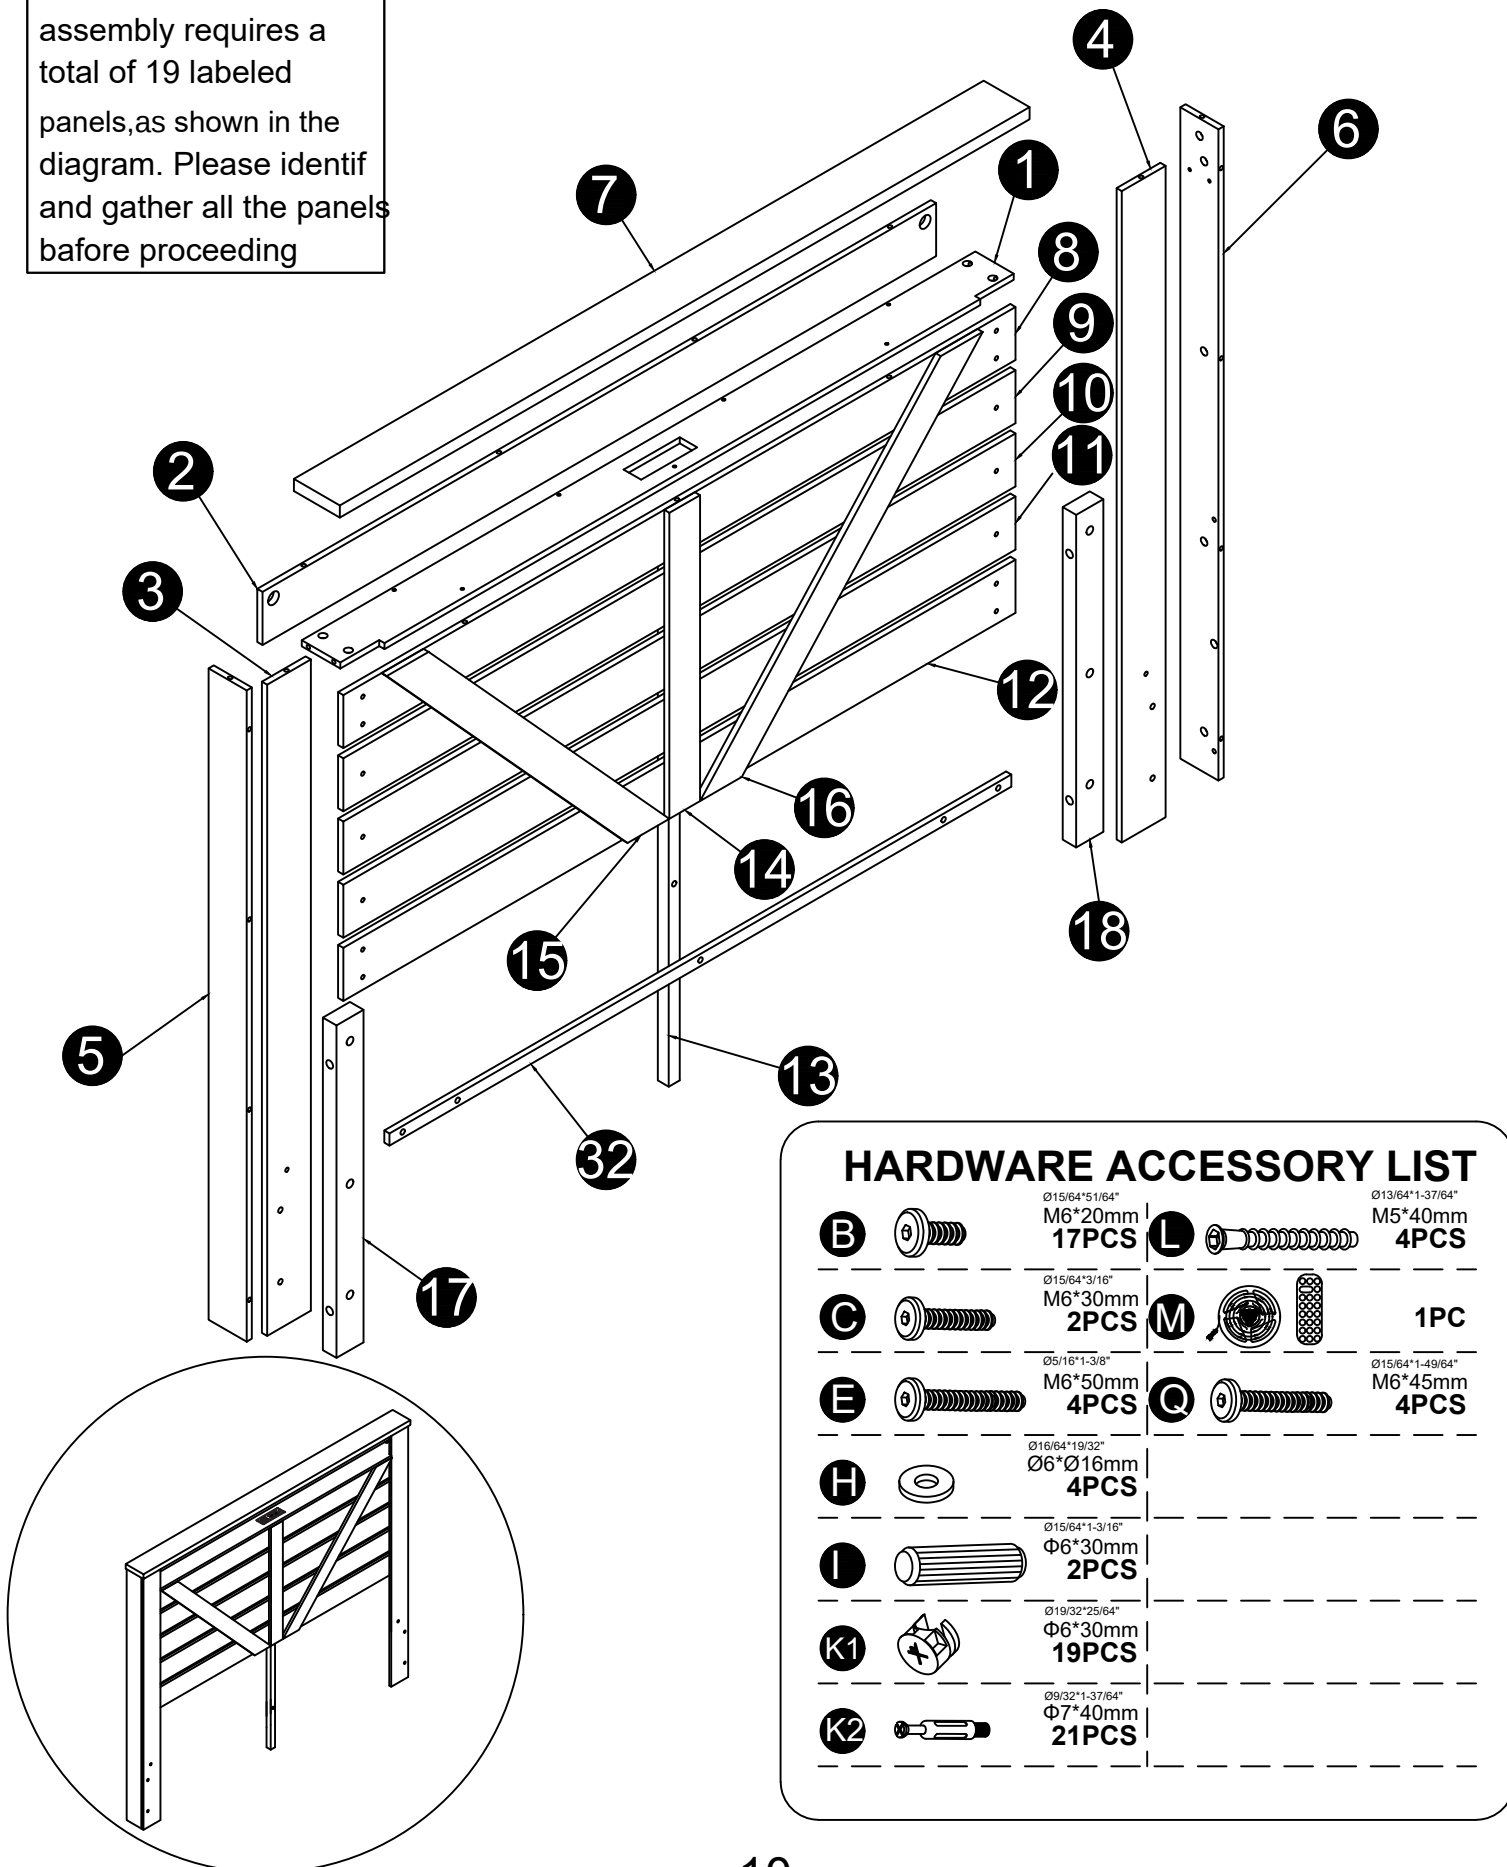

ASSEMBLY INSTRUCTIONS

Headboard Section

Step 1

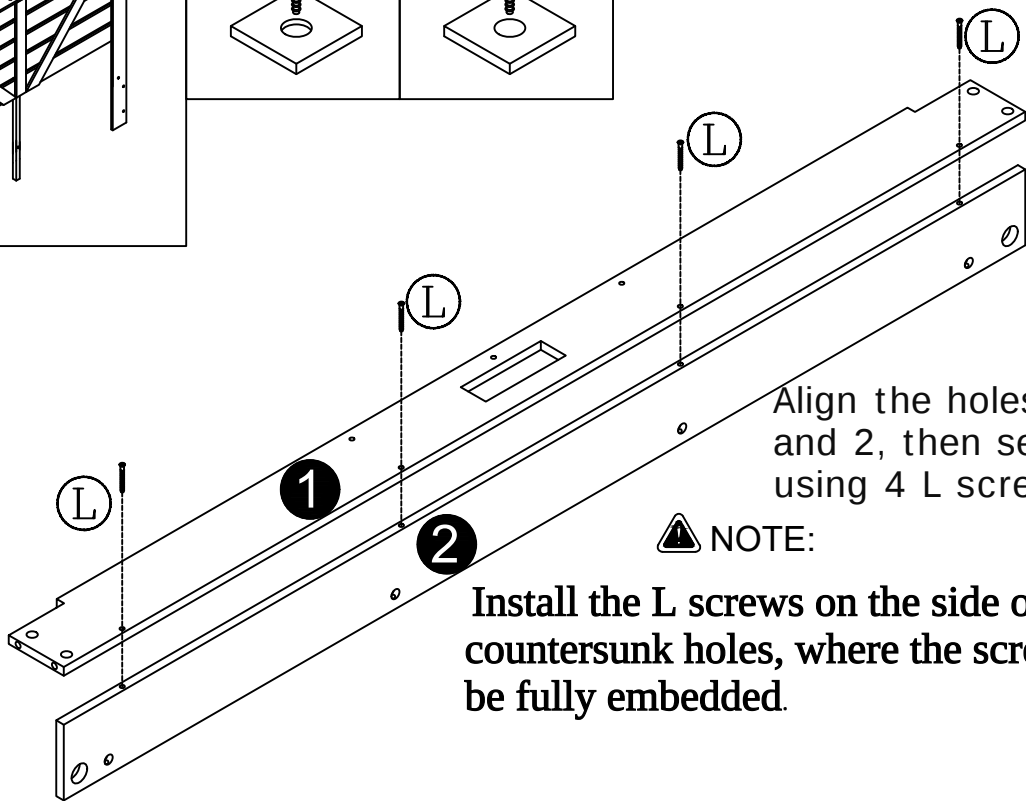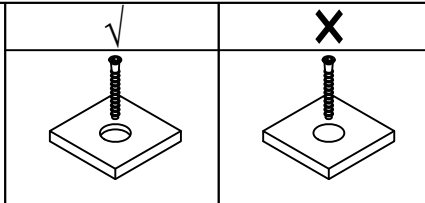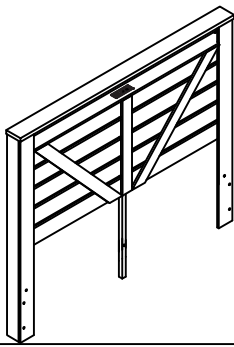

Align the holes of parts 1 and 2, then secure them using 4 L screws.



NOTE:

Install the L screws on the side of part 1 with countersunk holes, where the screw caps can be fully embedded.


L	4PCS
M5*40mm Ø13/64" x 1-37/64"	

Headboard Section

Step 2

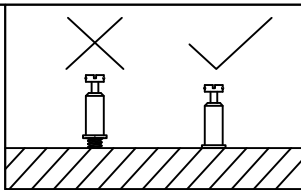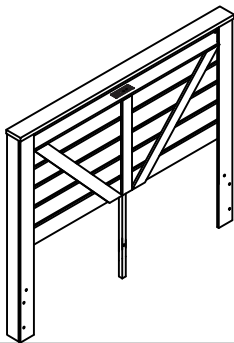

Install 8 K2 screws into parts 3 and 4.

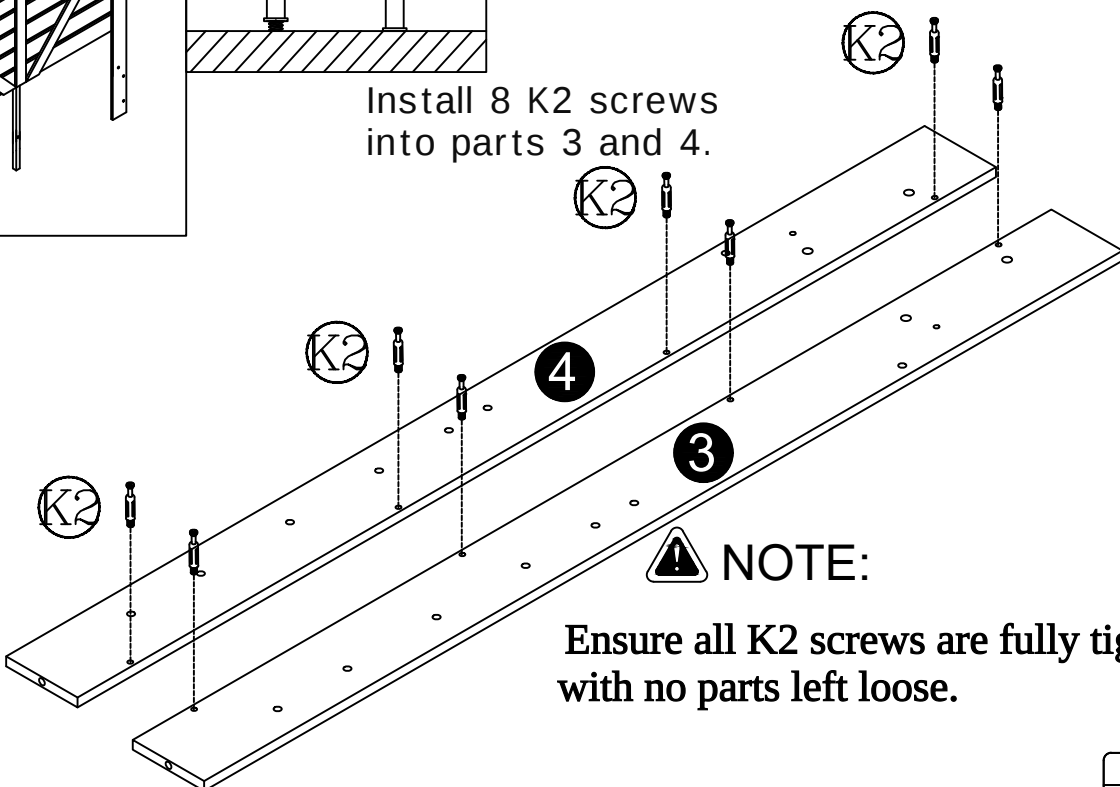

NOTE:

Ensure all K2 screws are fully tightened, with no parts left loose.



K2	8PCS
Ø7*40mm Ø9/32" x 1-37/64"	

Part 3 is the left side panel, and part 4 is the right side panel. Be sure to distinguish between left and right during installation.


ASSEMBLY INSTRUCTIONS

Headboard Section


Step 3

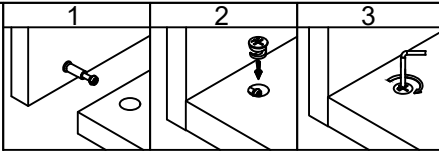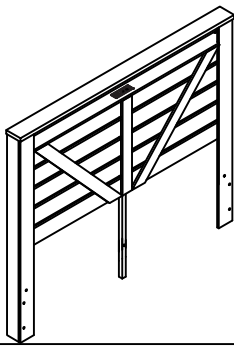

a. Insert the K2 screws from part 3 into part 5 and secure using 4 K1 locking nuts.


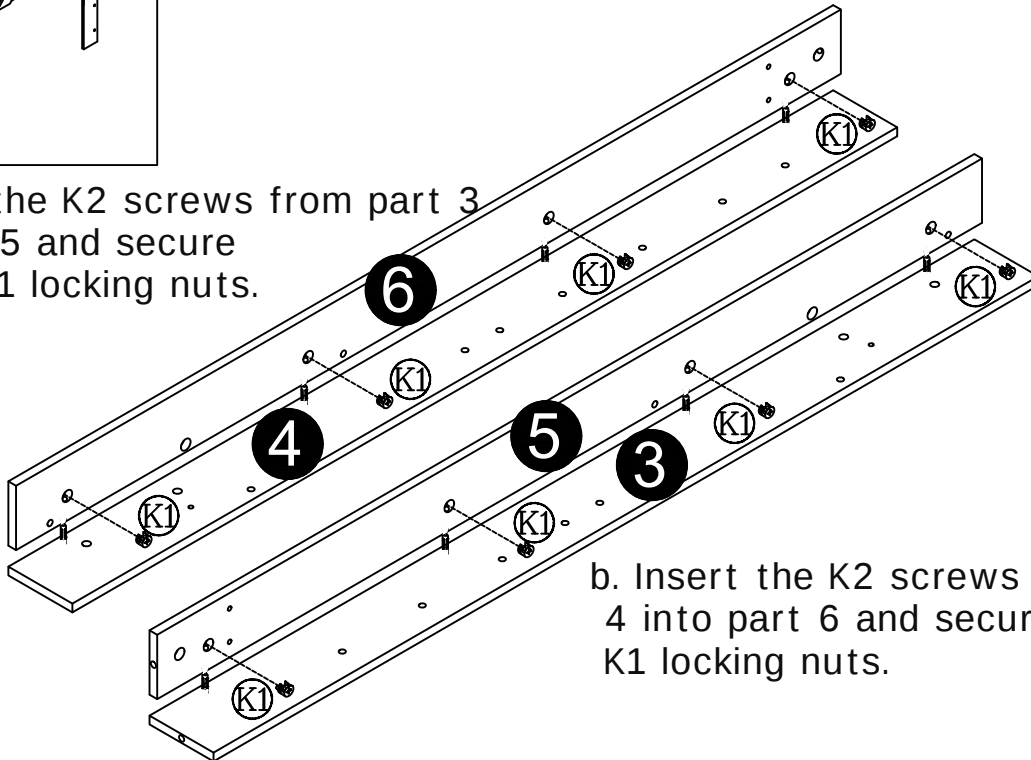


b. Insert the K2 screws from part 4 into part 6 and secure using 4 K1 locking nuts.

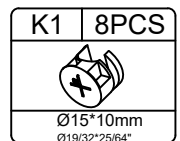


Headboard Section

Step 4

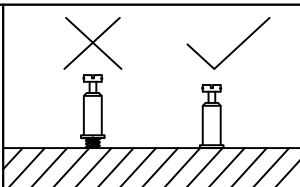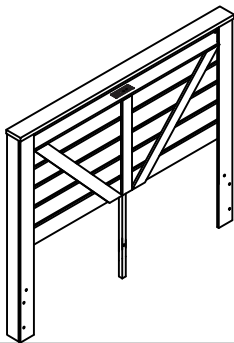


Note : Ensure all K2 screws are fully tightened.

a. Attach 2 K2 screws to part 5

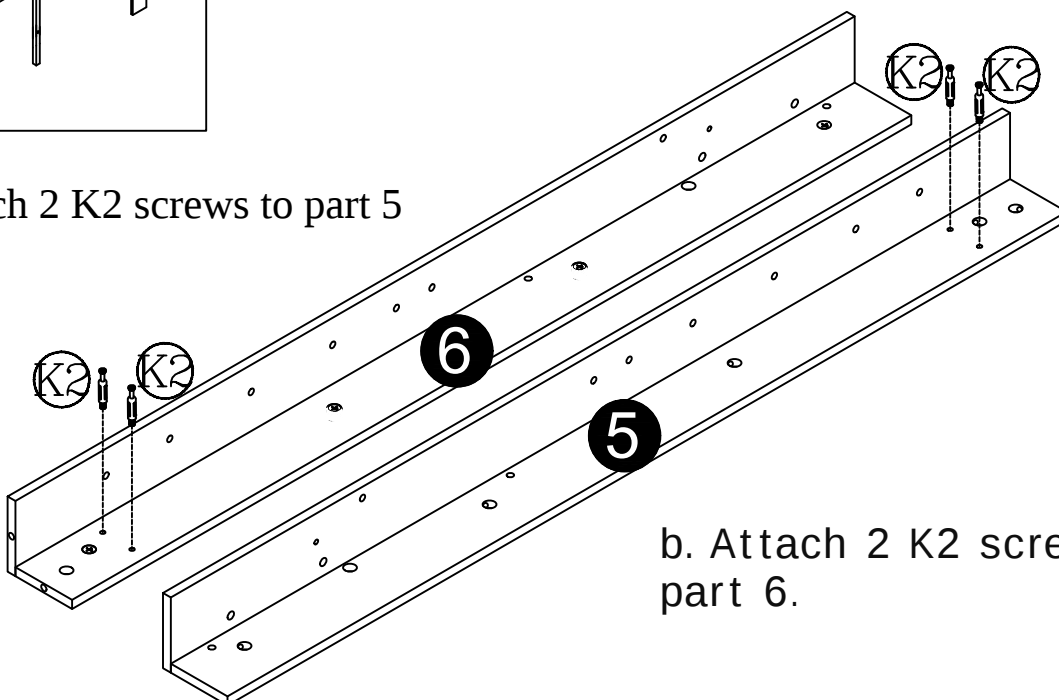

b. Attach 2 K2 screws to part 6.

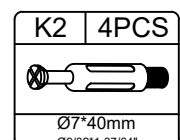


ASSEMBLY INSTRUCTIONS


Headboard Section

Step 5

Note that there is a hole for the LED strip to pass through in this direction.

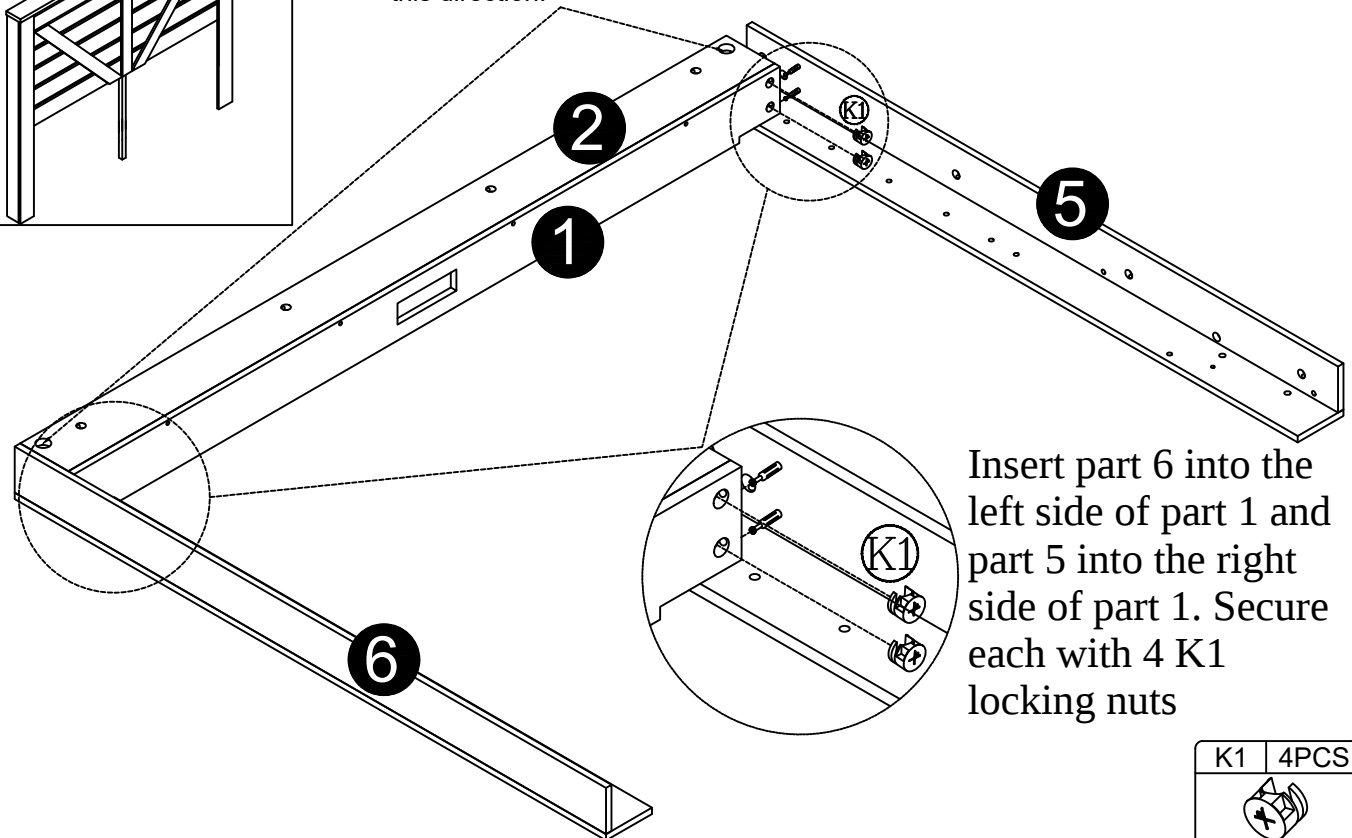


Insert part 6 into the left side of part 1 and part 5 into the right side of part 1. Secure each with 4 K1 locking nuts

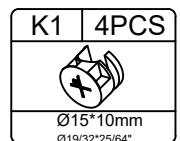


Headboard Section

Step 6

Affix the LED strip (M) into the groove on part 7.

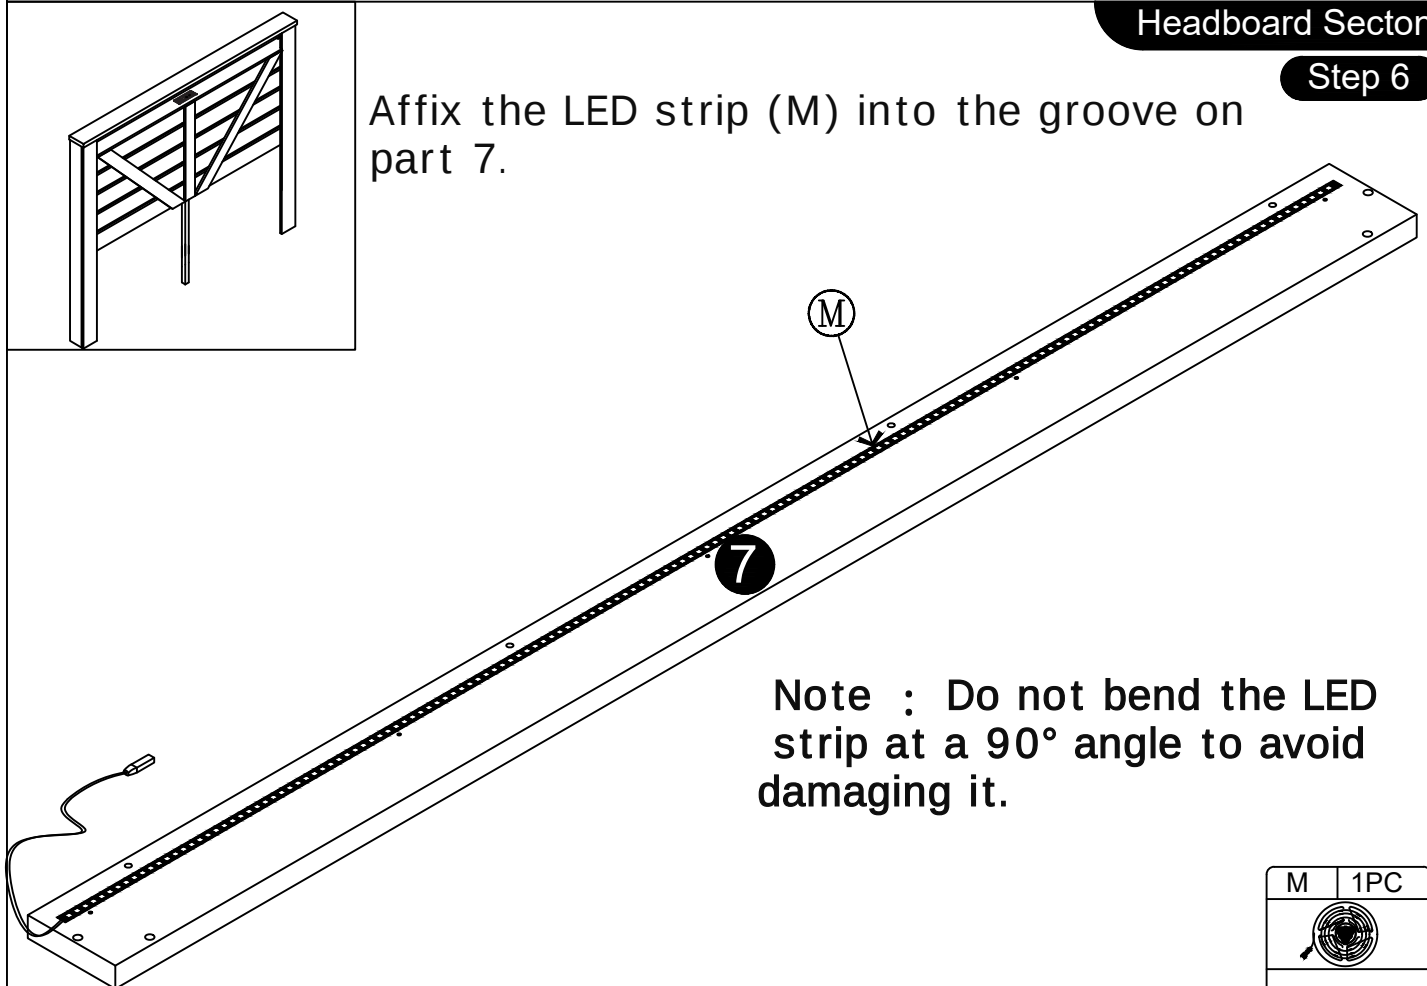



Note : Do not bend the LED strip at a 90° angle to avoid damaging it.

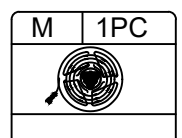


ASSEMBLY INSTRUCTIONS

Headboard Section

Step 7

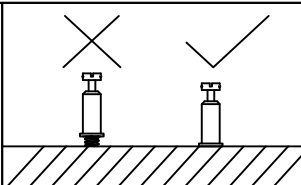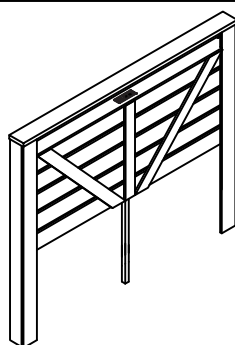

Note : Ensure all K2 screws are fully tightened.



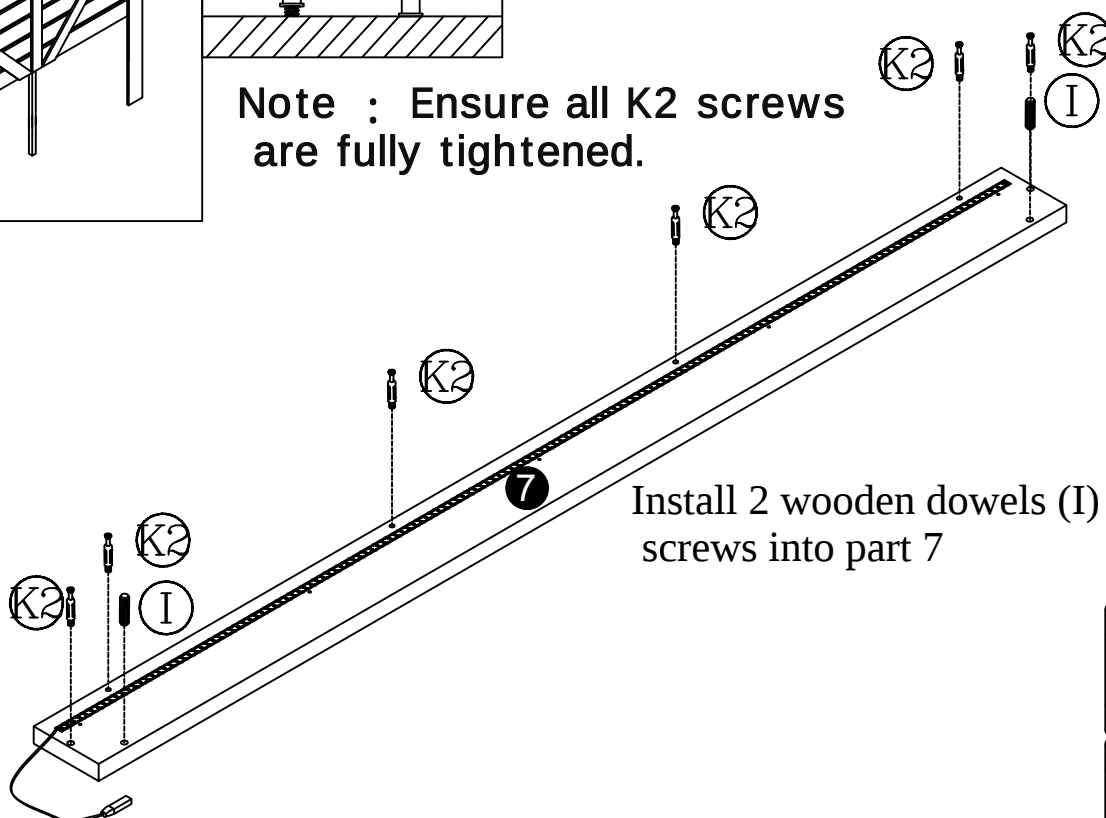


Install 2 wooden dowels (I) and 6 K2 screws into part 7

I	2PCS
Ø6*30mm Ø15/64*1-3/16"	
K2	6PCS
Ø7*40mm Ø9/32*1-37/64"	

Headboard Section

Step 8

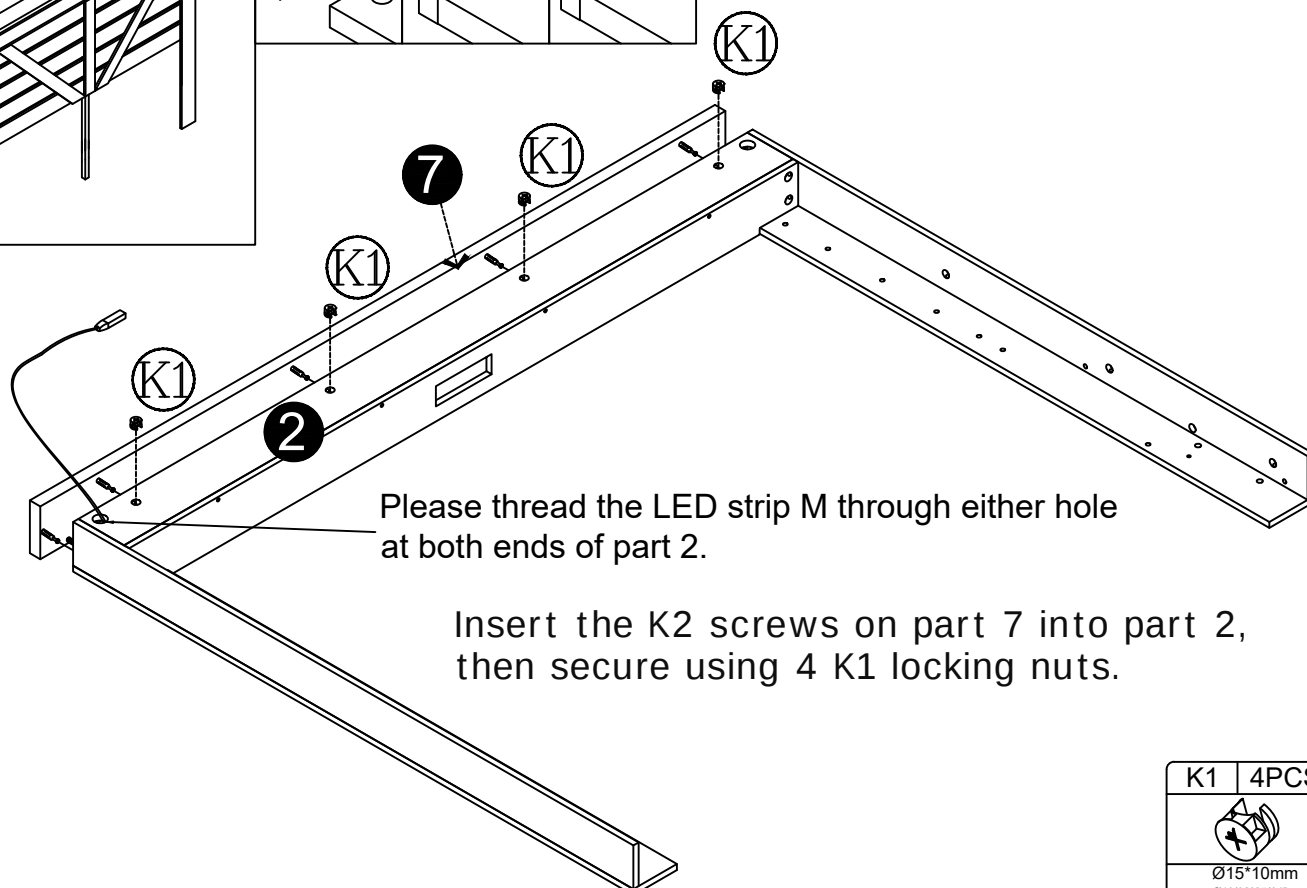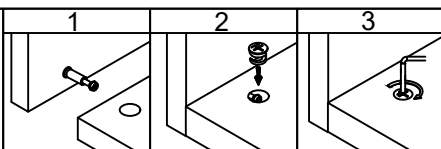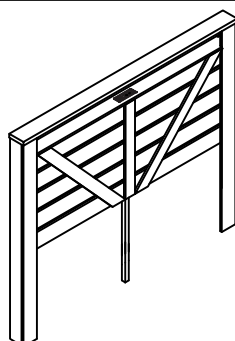

Please thread the LED strip M through either hole at both ends of part 2.

Insert the K2 screws on part 7 into part 2, then secure using 4 K1 locking nuts.




K1	4PCS
Ø15*10mm Ø19/32*25/64"	

ASSEMBLY INSTRUCTIONS


Headboard Section

Step 9

Note : Ensure all K2 screws are fully tightened.

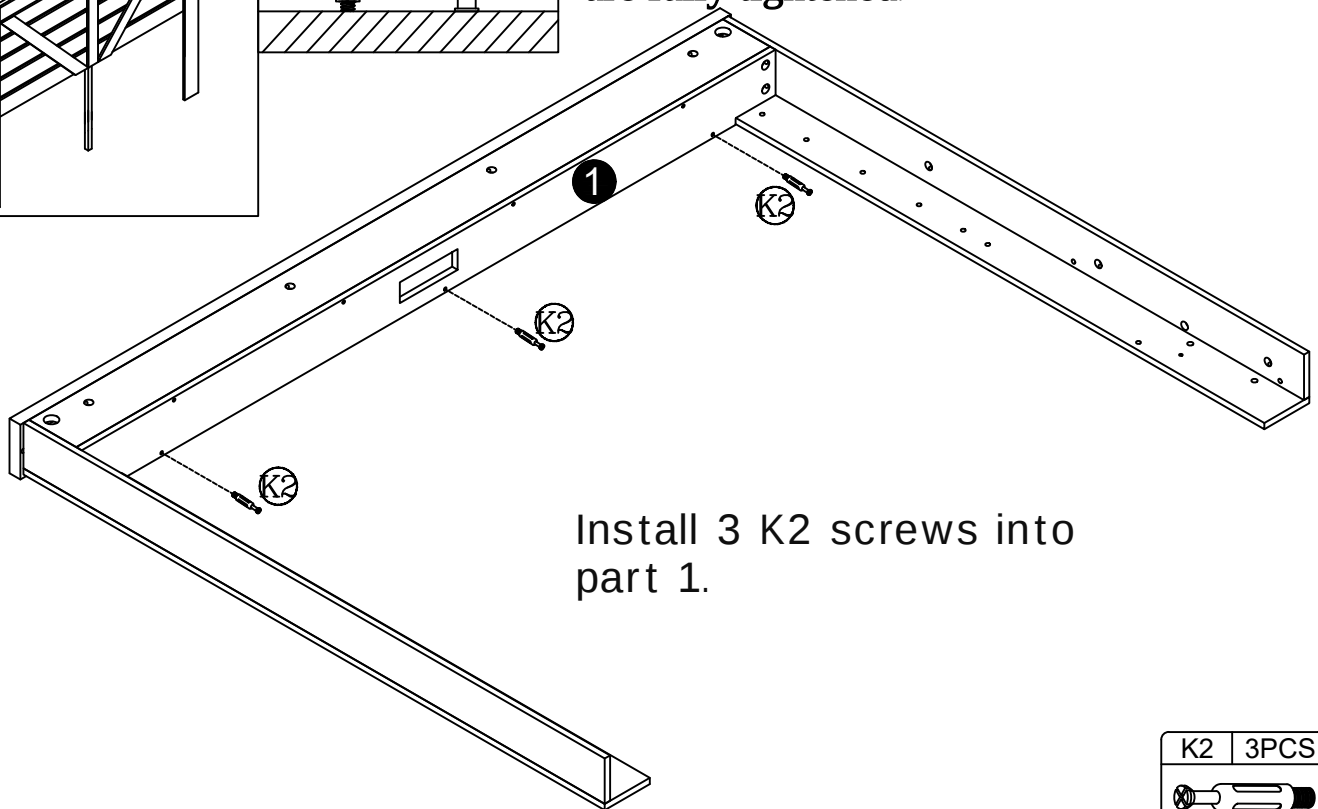
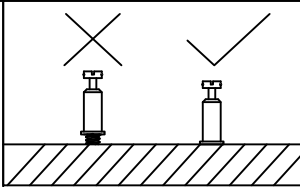
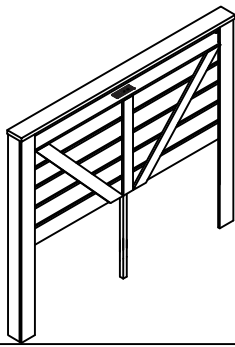


Install 3 K2 screws into part 1.

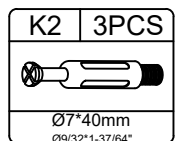


Headboard Section

Step 10

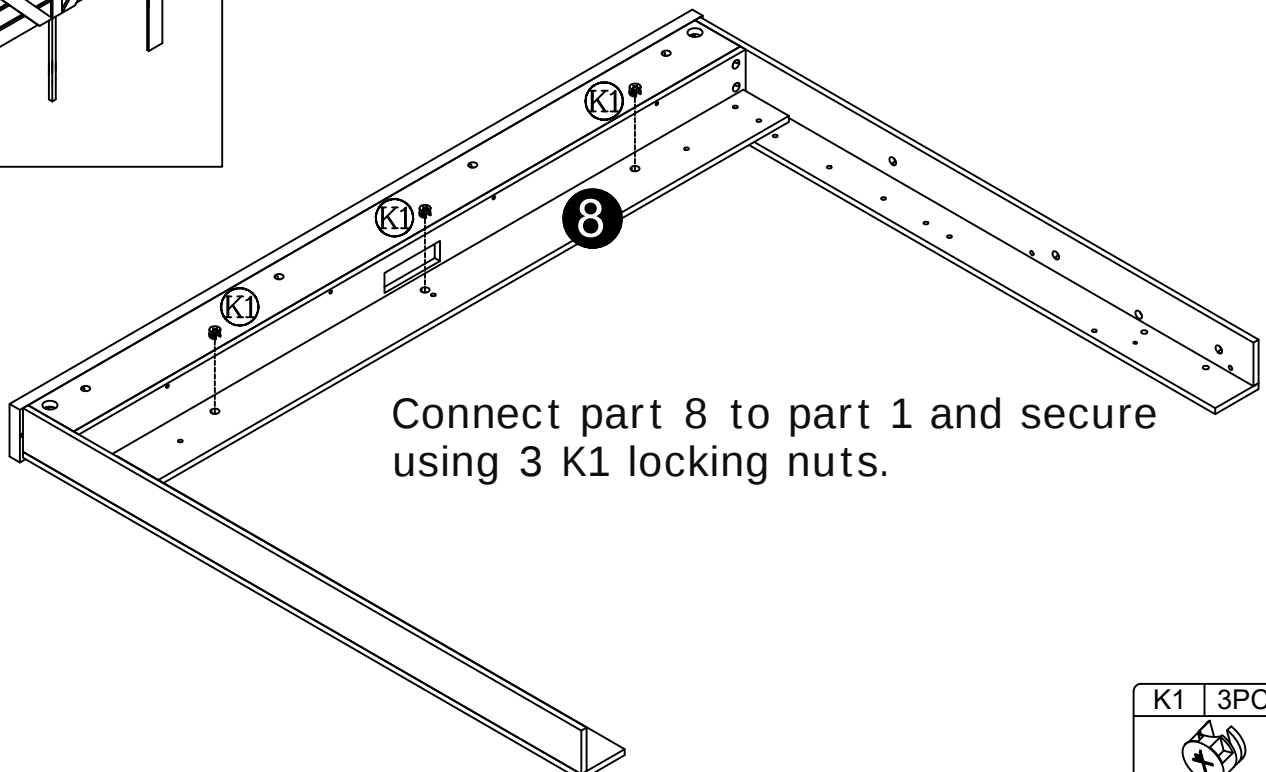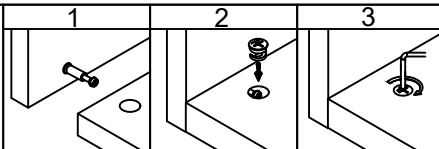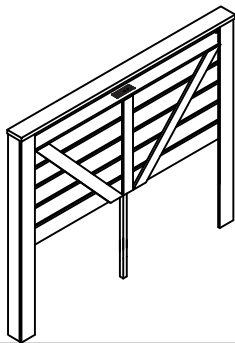

Connect part 8 to part 1 and secure using 3 K1 locking nuts.

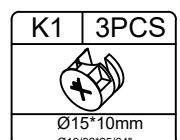


ASSEMBLY INSTRUCTIONS

Headboard Section

Step 11

Note : Ensure the holes on parts 8 – 12 align with the holes on parts 3 and 4 before tightening

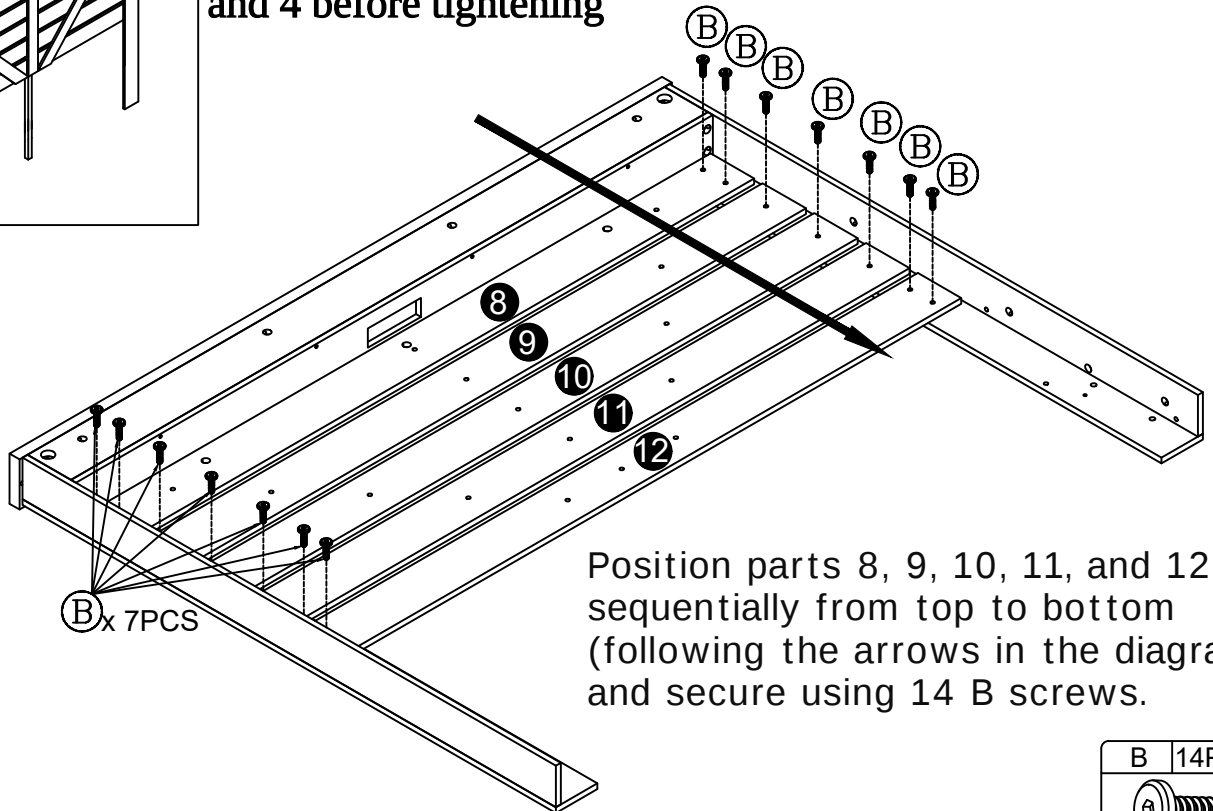


Position parts 8, 9, 10, 11, and 12 sequentially from top to bottom (following the arrows in the diagram) and secure using 14 B screws.

B	14PCS

Headboard Section

Step 12

Please note that part 14 must be installed as shown in the diagram, or the screws will puncture part 13!

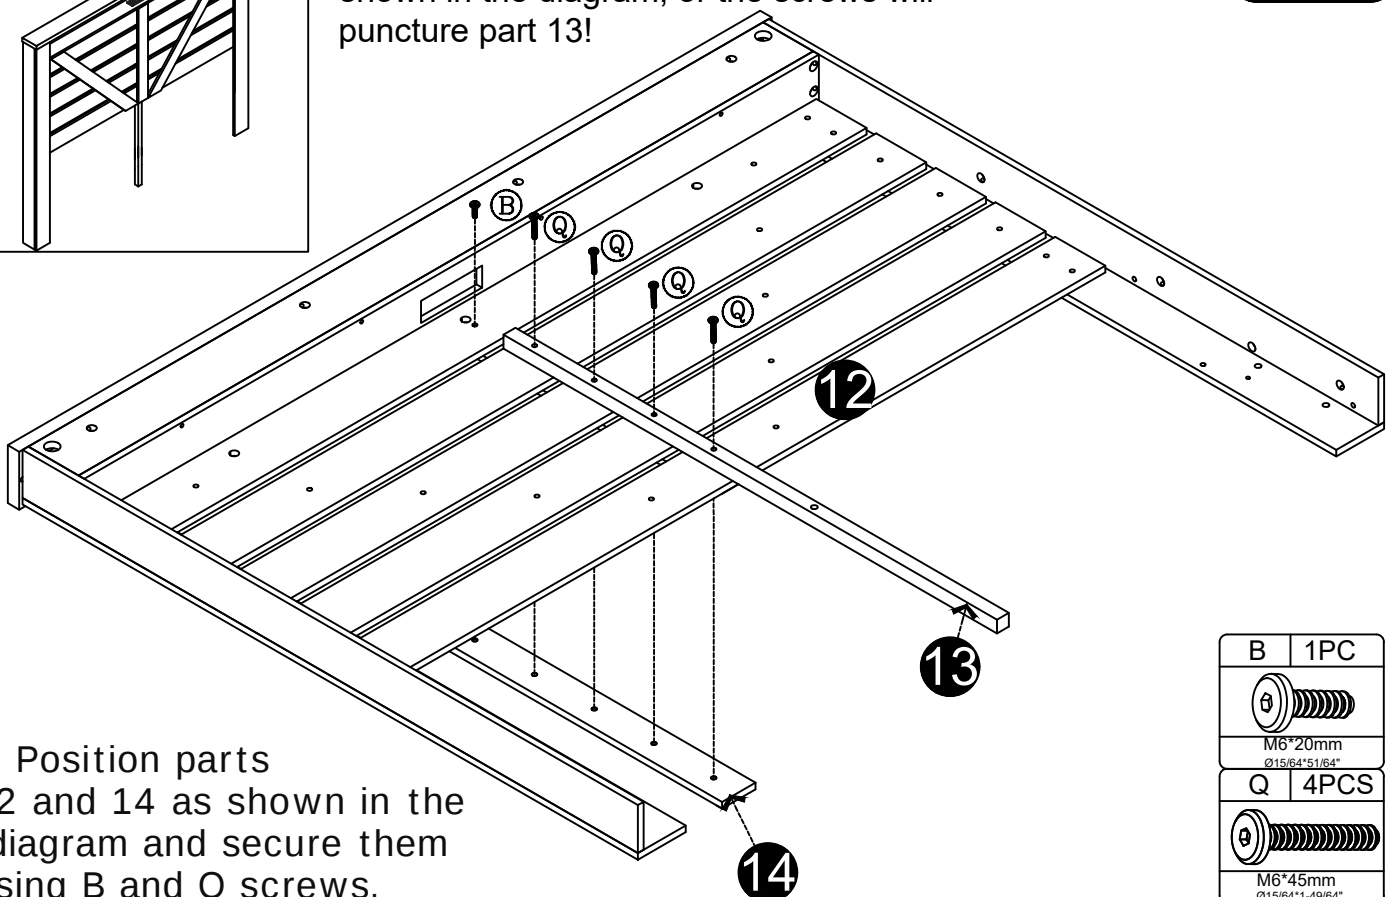

a. Position parts 12 and 14 as shown in the diagram and secure them using B and Q screws.



B	1PC
Q	4PCS

ASSEMBLY INSTRUCTIONS

Headboard Section

Step 13

Note : Ensure the rivet surfaces of parts 17 and 18 face upward.

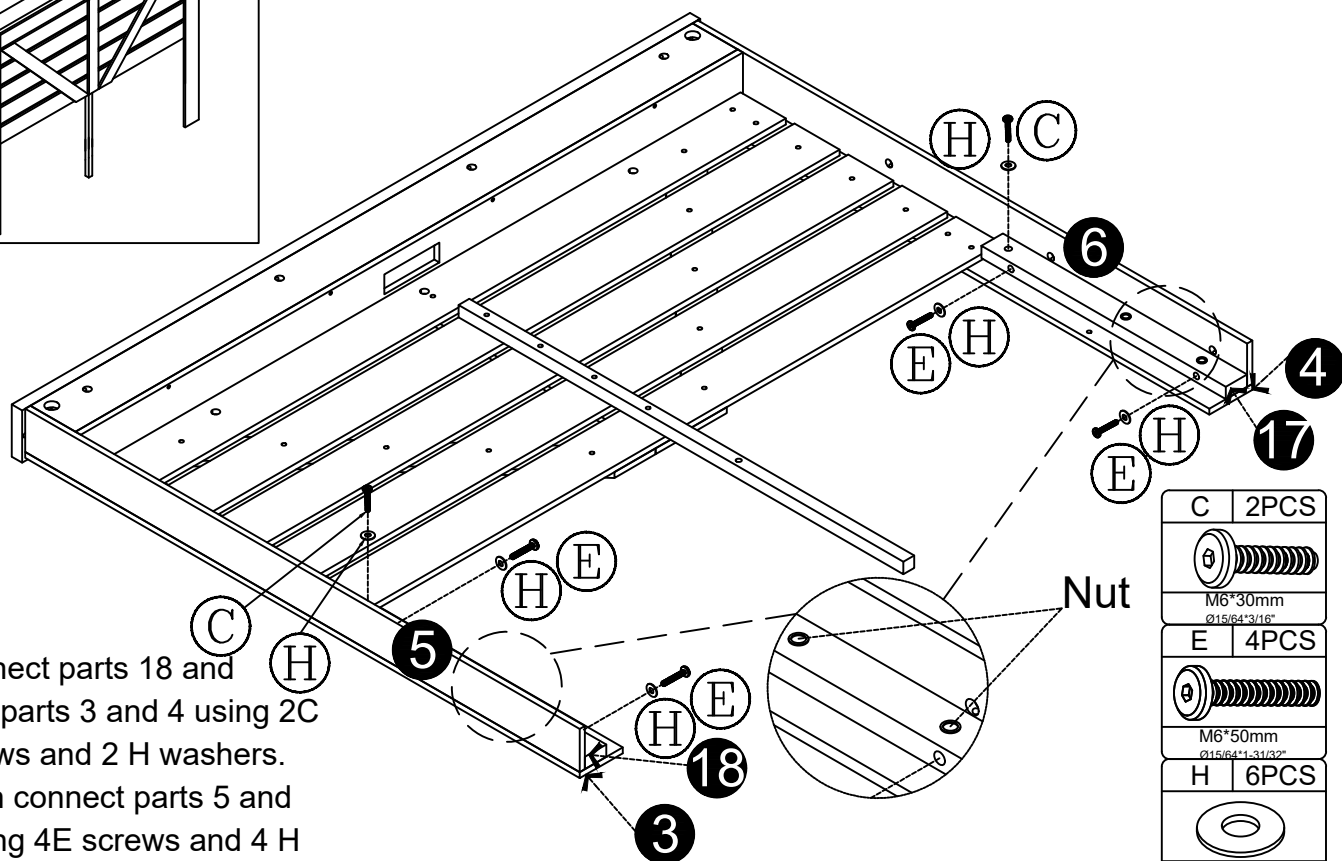
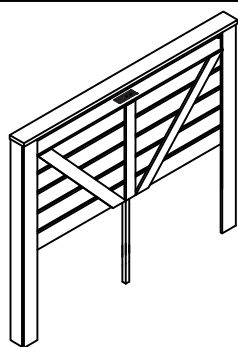


Connect parts 18 and 17 to parts 3 and 4 using 2C screws and 2H washers. Then connect parts 5 and 6 using 4E screws and 4H washers.

C	2PCS
	
M6*30mm Ø15/64*3/16"	
E	4PCS
	
M6*50mm Ø15/64*1-31/32"	
H	6PCS
	
Ø6*Ø16mm Ø16/64*19/32"	

Headboard Section

Step 14

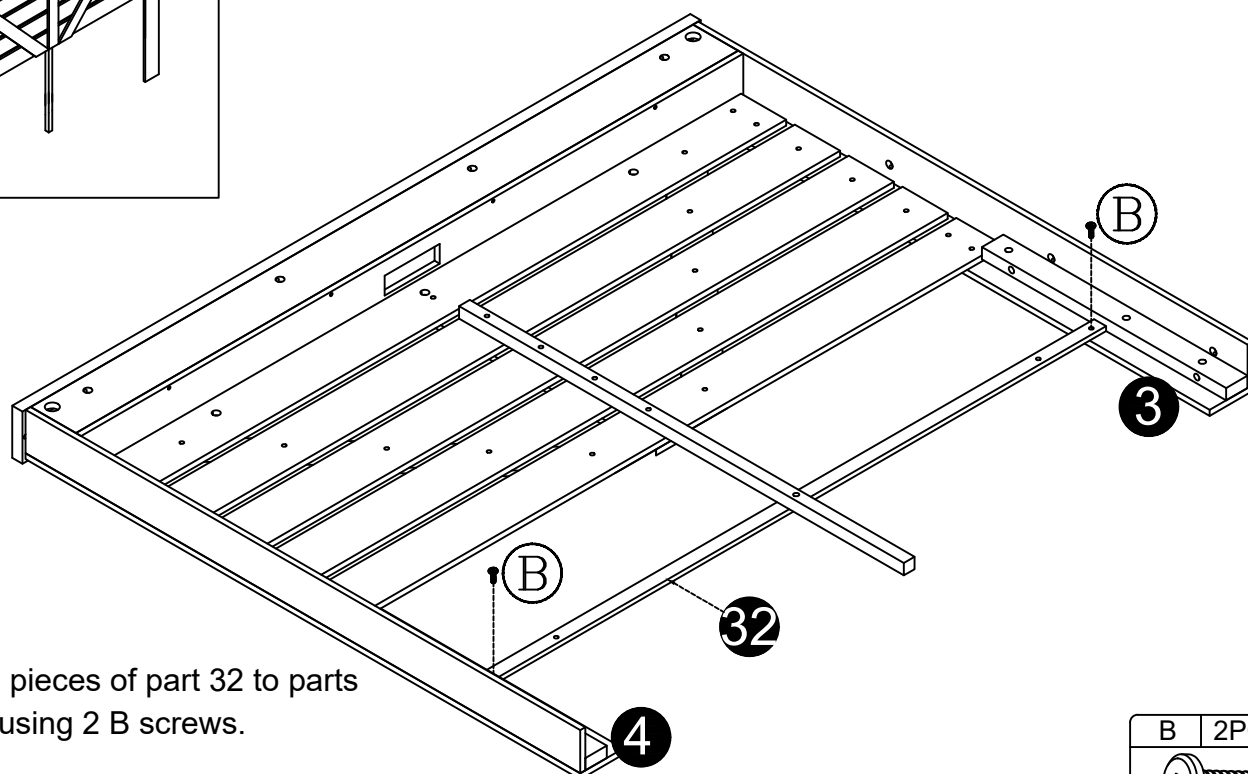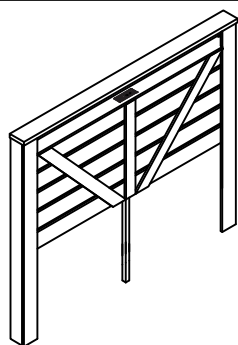


Attach 2 pieces of part 32 to parts 3 and 4 using 2B screws.

B	2PCS
	
M6*20mm Ø15/64*51/64"	

FRAME PARTS SECTION

The frame assembly requires a total of 27 labeled panels, as indicated in the diagram. Please identify and gather all the panels before preparing.

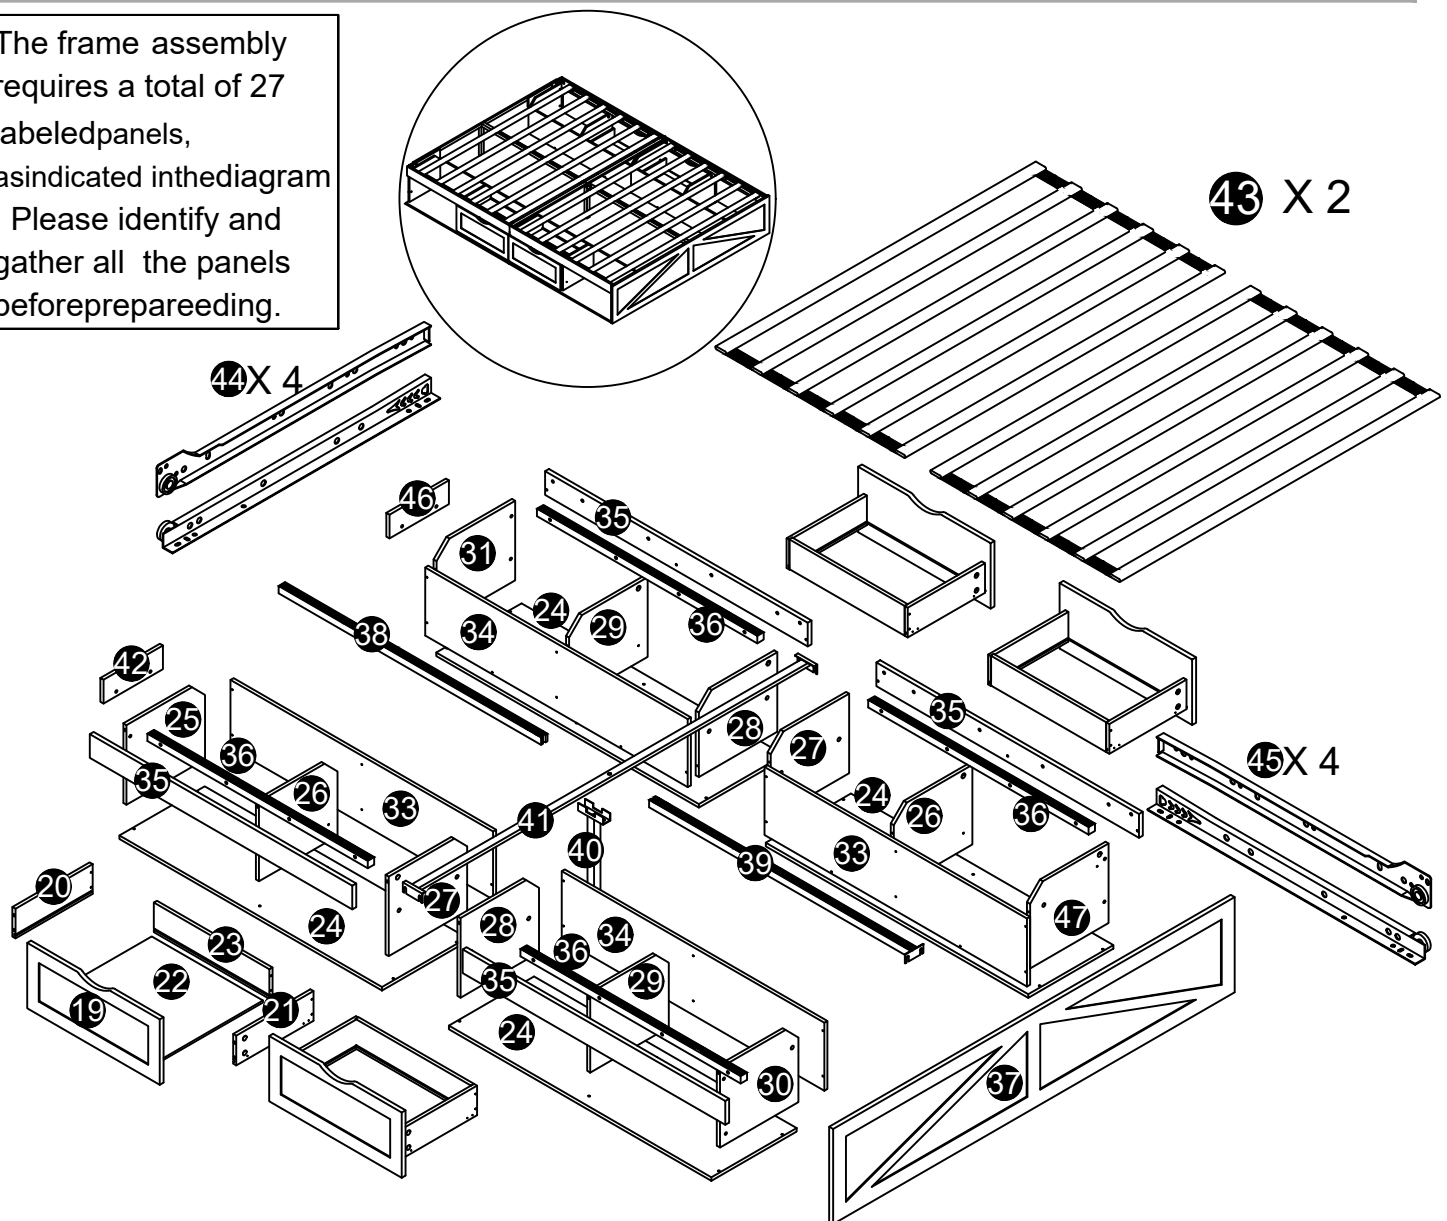



HARDWARE ACCESSORY LIST

A		Ø15/64"15/32" M6*11mm 18PCS	K1		Ø19/32"25/64" Φ6*30mm 30PCS
B		Ø15/64"51/64" M6*20mm 26PCS	K2		Ø9/32"1-37/64" Φ7*40mm 28PCS
D		Ø15/64"1-3/8" M6*35mm 16PCS	L		Ø13/64"1-37/64" M5*40mm 4PCS
F		Ø5/16"1-3/8" M8*35mm 2PCS	O		1PC
G		Ø5/16"1-31/32" M8*50mm 5PCS	P		Ø5/32"15/32" M4*12mm 42PCS
H		Ø16/64"19/32" Ø6*Ø16mm 16PCS	Q		Ø15/64"1-49/64" M6*45mm 4PCS
T		M8*50mm 5PCS	R		2PCS

ASSEMBLY INSTRUCTIONS


Frame Parts Section

Step 1

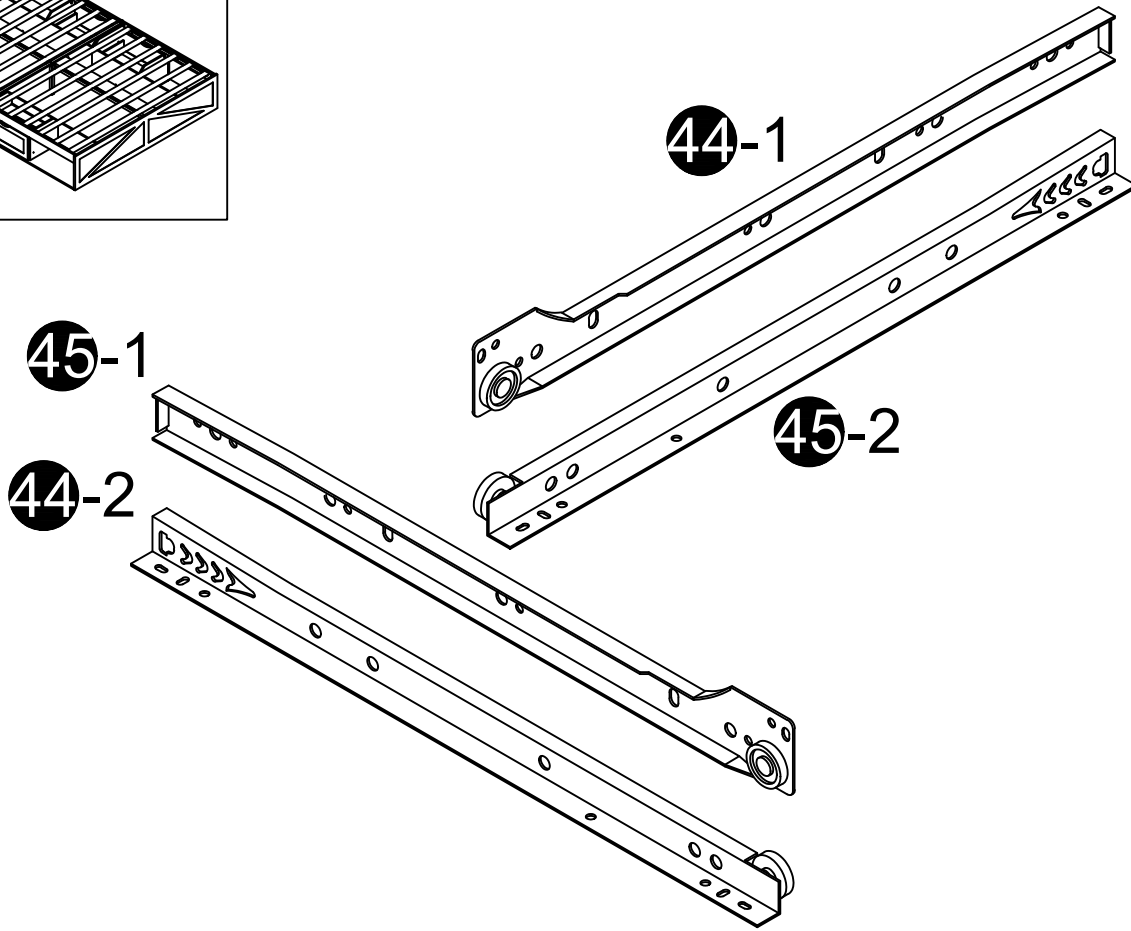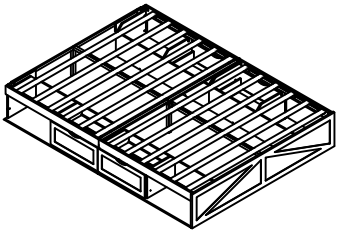


Frame Parts Section

Step 2

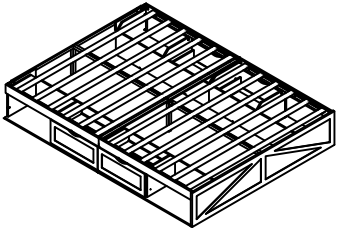



Note : Ensure the concealed holes on the slide rails are correctly aligned.

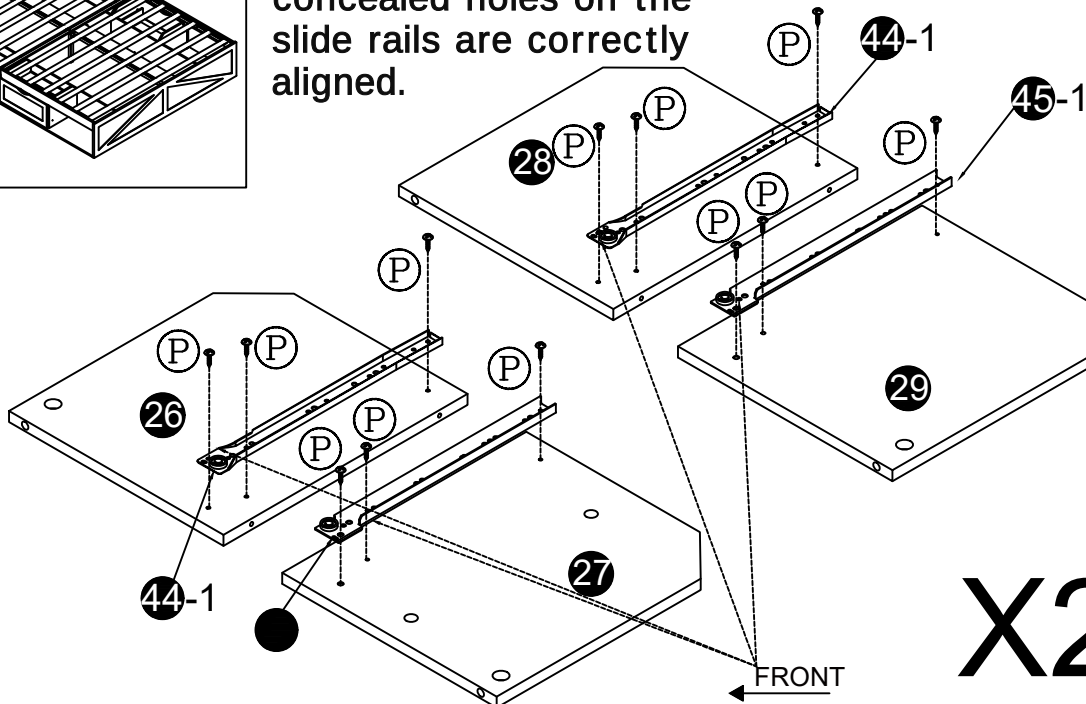

Position parts 26, 27, 28, and 29 symmetrically as shown in the diagram. Connect parts 44-1 and 45-1 using 24 P screws (self-tapping).

Attention:
1. Please locate the holes from the back of part 44-1.



44-1/45-1
Back:

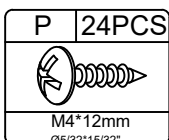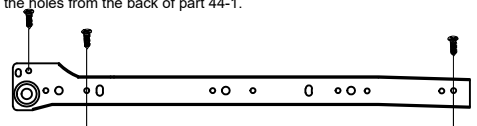

ASSEMBLY INSTRUCTIONS


Frame Parts Section

Step 3

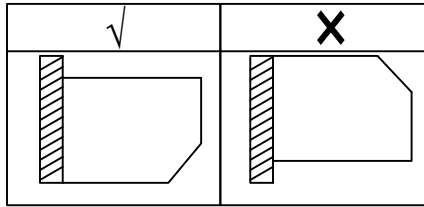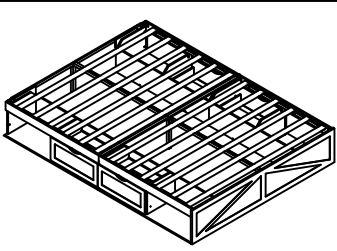

The installation directions of parts 25, 26, and 27 must be as shown in the diagram.

Note : Ensure the concealed holes on the slide rails are correctly aligned.

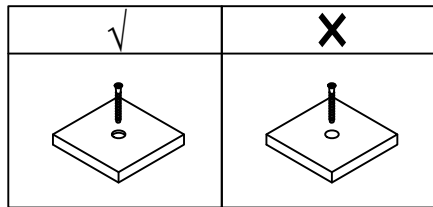


The shape of the hole facing the screws on part 24 must be as shown in the diagram.


L	6PCS
M5*40mm Ø13/64"×1-37/64"	

Frame Parts Section

Step 4

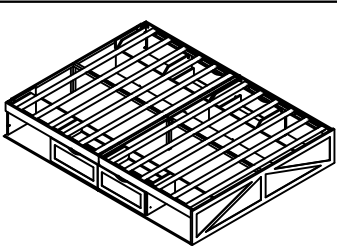

Attach part 33 to the frame using 8 L screws.

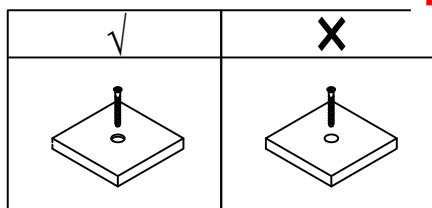



The shape of the hole facing the screws on part 33 must be as shown in the diagram.

L	8PCS
M5*40mm Ø13/64"×1-37/64"	


ASSEMBLY INSTRUCTIONS

Frame Parts Section


Step 5

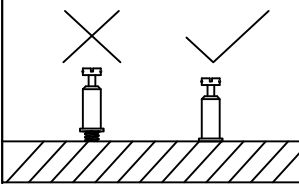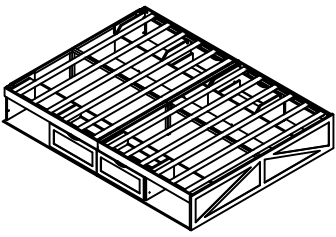

Note : Ensure all screws are fully tightened


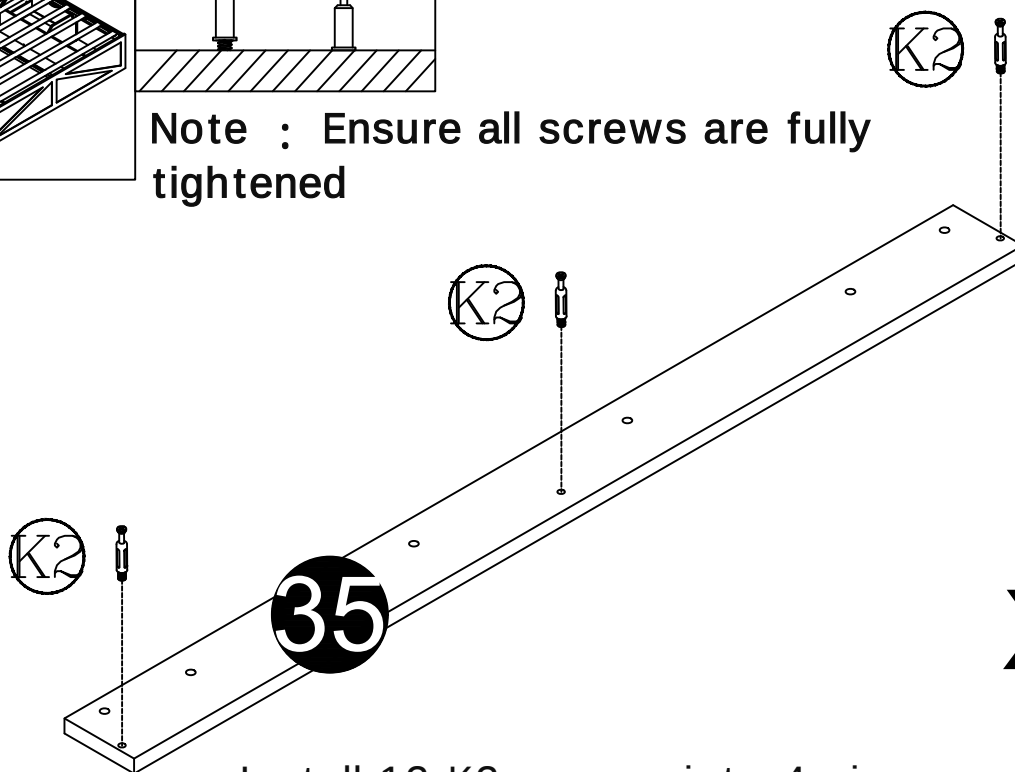


Install 12 K2 screws into 4 pieces of part 35.

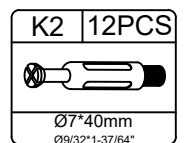

Frame Parts Section


Step 6

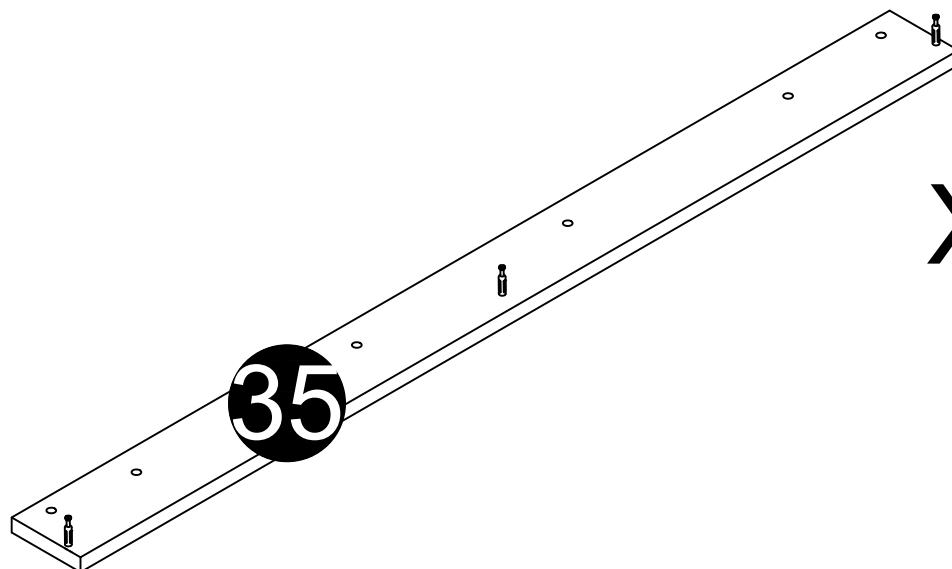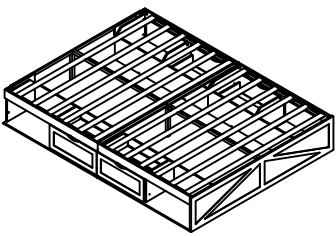

ASSEMBLY INSTRUCTIONS

Frame Parts Section


Step 7

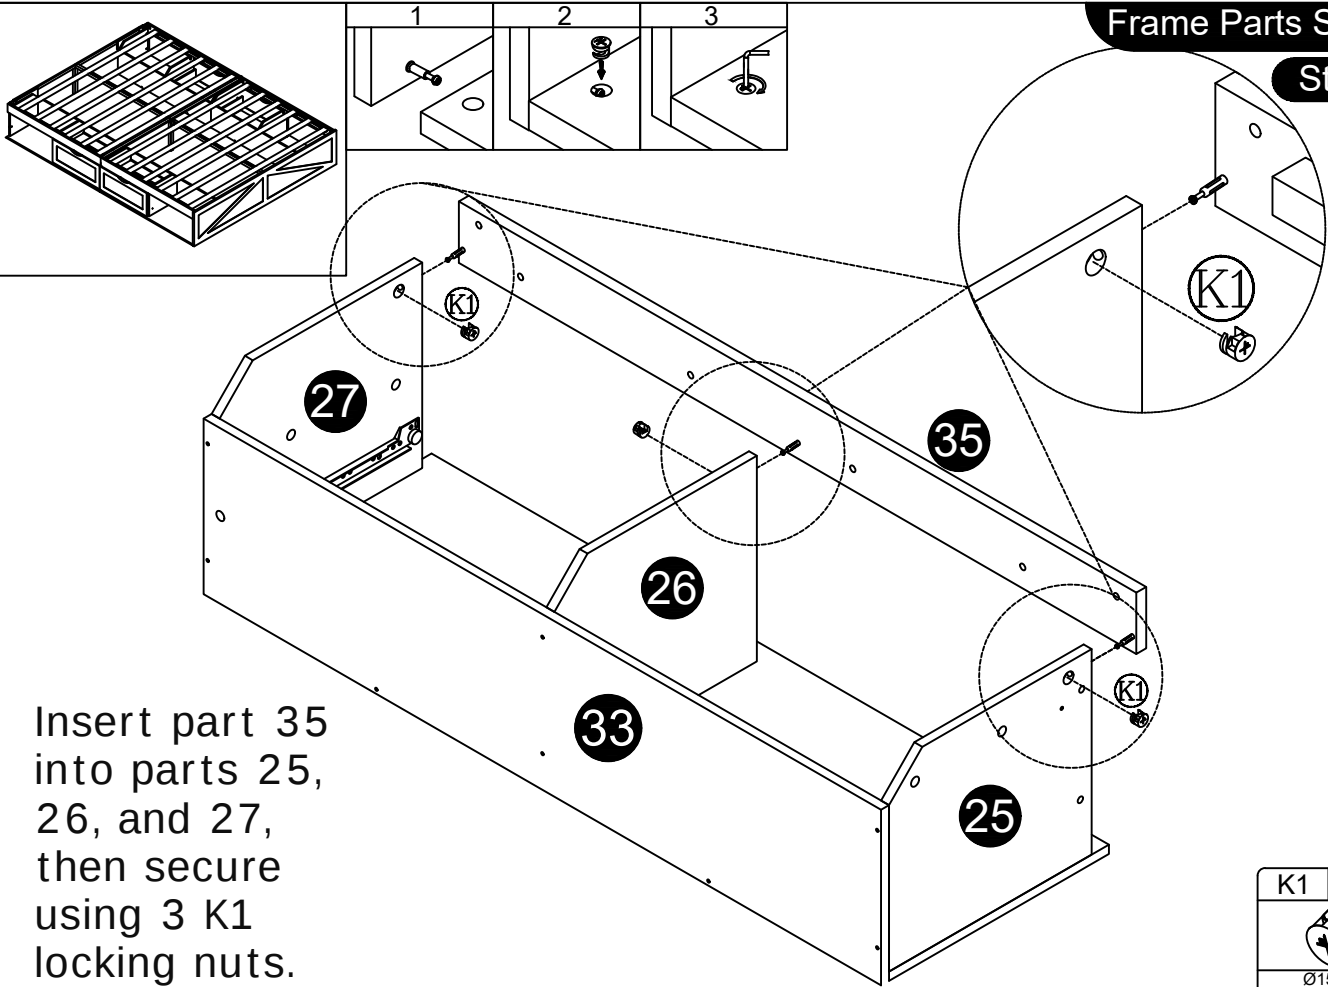

K1	3PCS
Ø15*10mm Ø19/32*25/64"	

Frame Parts Section



Step 8

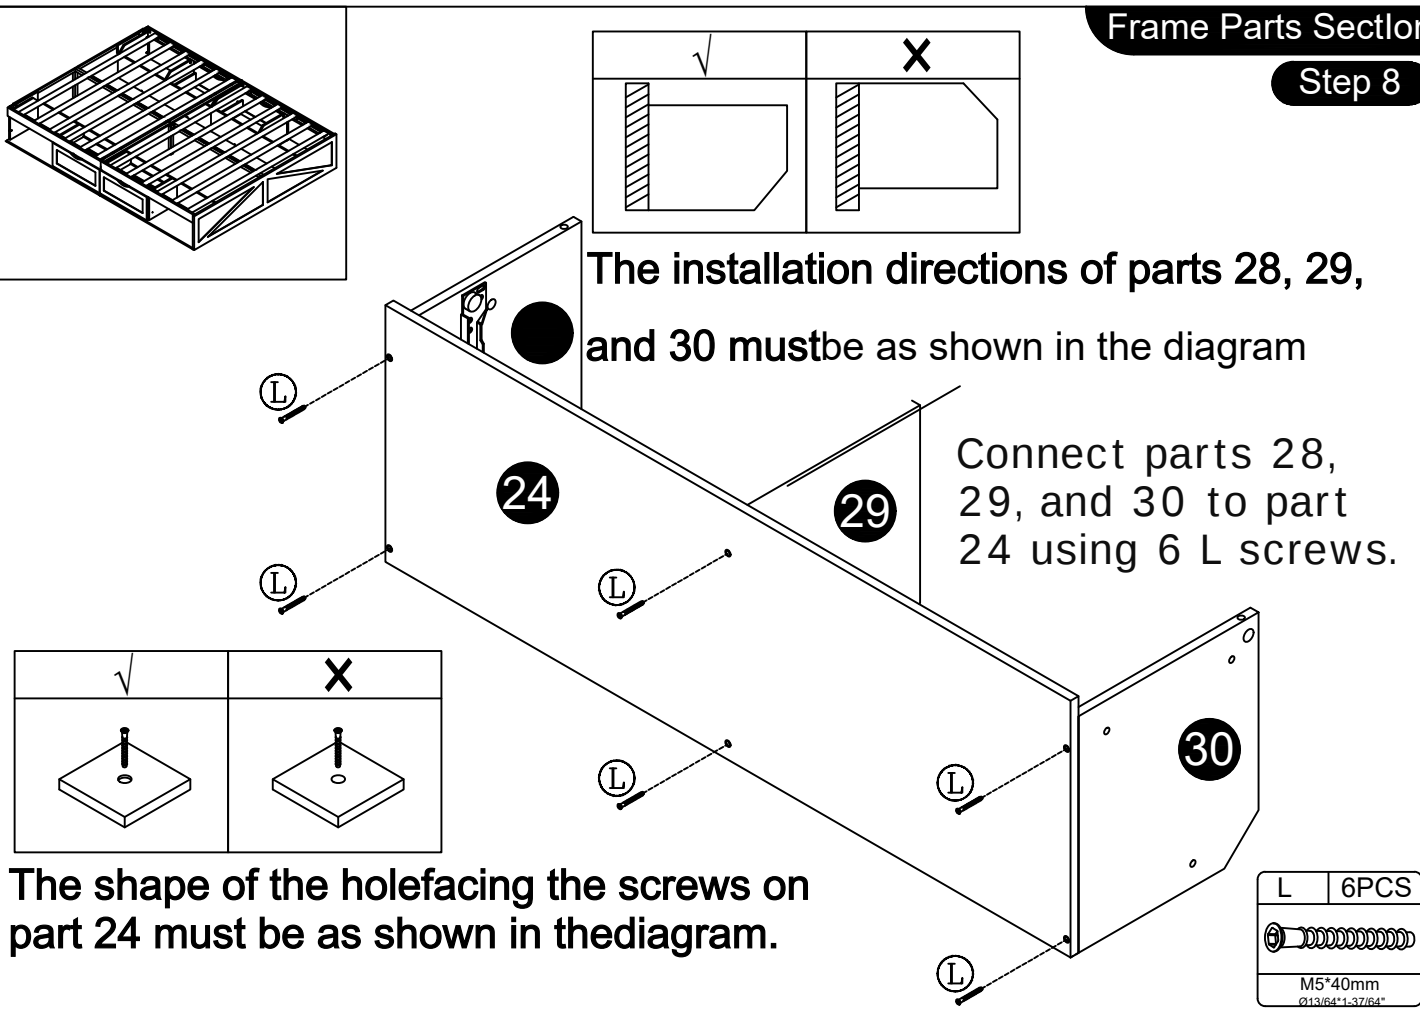

L	6PCS
M5*40mm Ø13/64*1-37/64"	


Frame Parts Section

Step 9

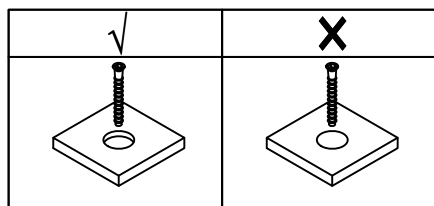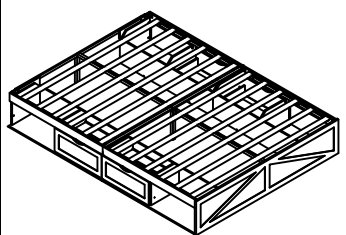



The shape of the holefacing the screws on part 34 must be as shown in the diagram.

Attach part 34 to the frame using 8 L screws.


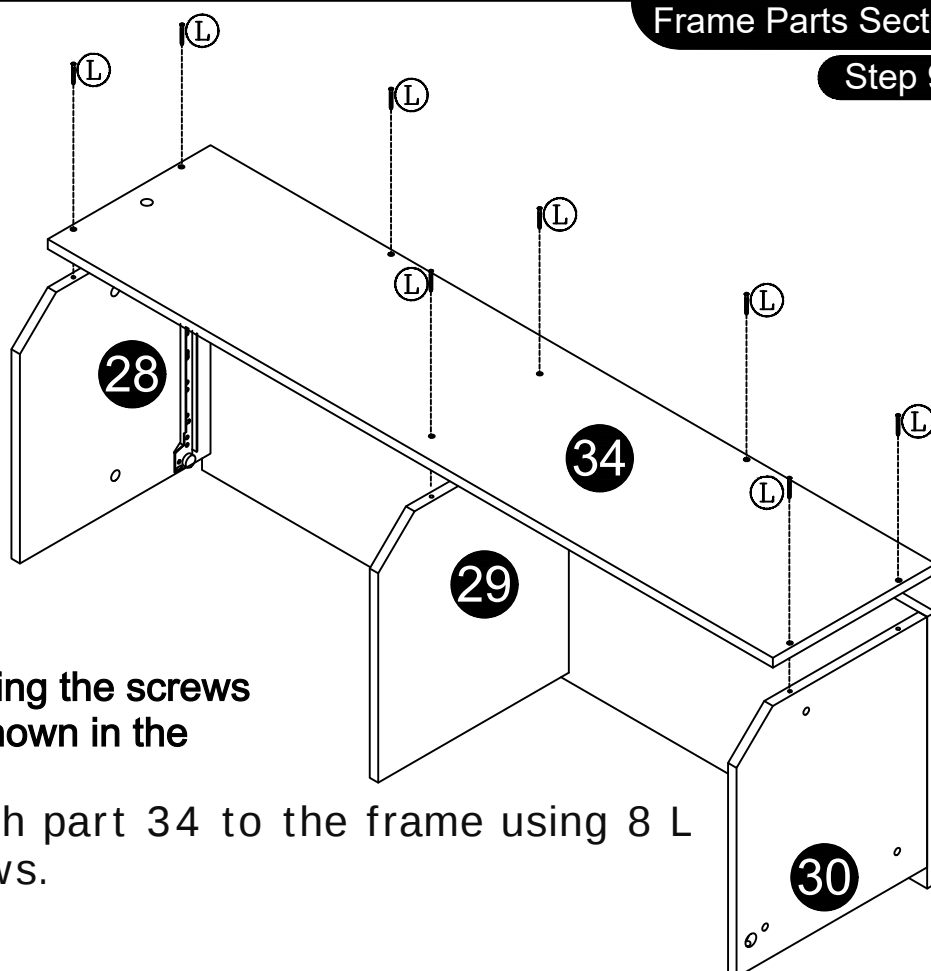


Frame Parts Section

Step 10

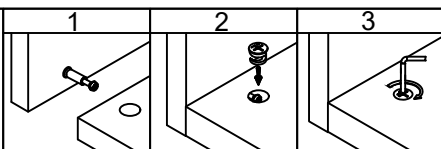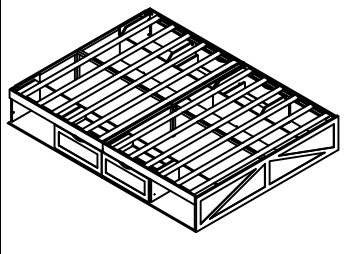



Insert part 35 into parts 28, 29, and 30, then secure using 3 K1 locking nuts.

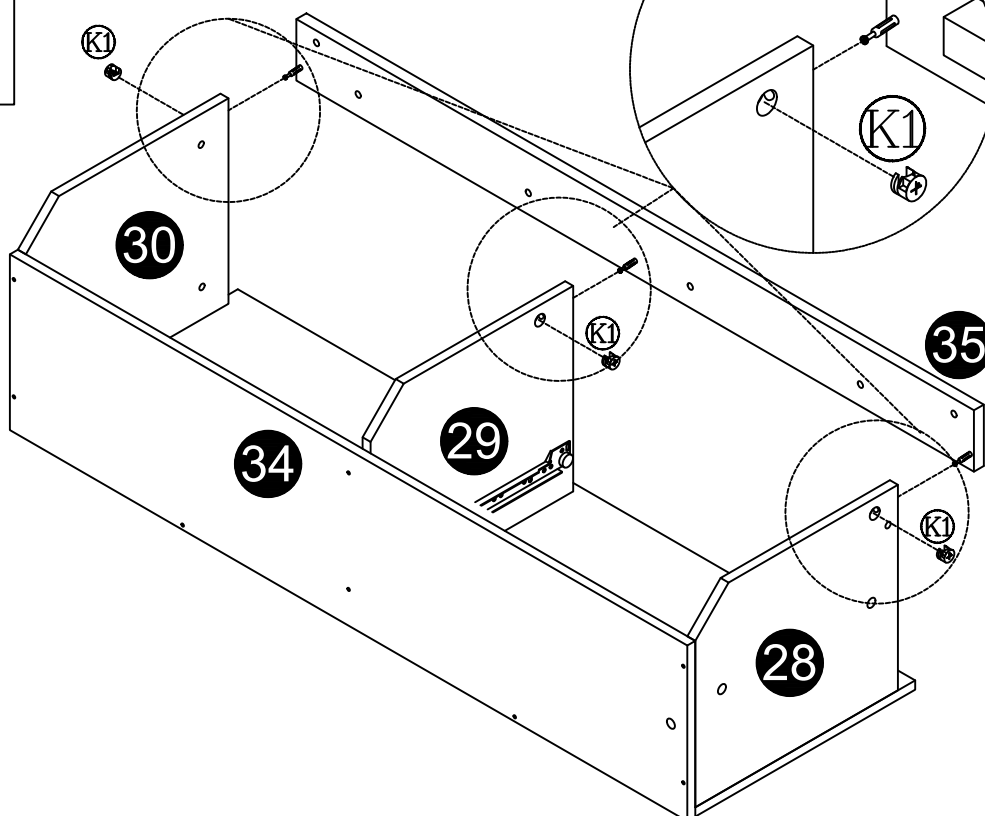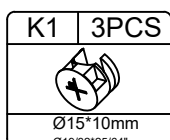


ASSEMBLY INSTRUCTIONS

Frame Parts Section

Step 11

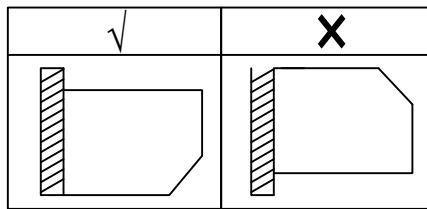
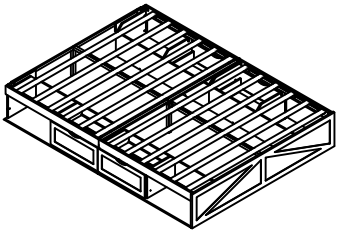


The installation directions of parts 28, 29, and 31 must be as shown in the diagram.

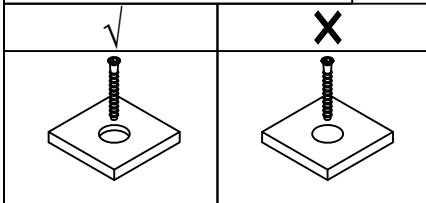


The shape of the hole facing the screws on part 24 must be as shown in the diagram.

Connect parts 28, 29, and 31 to part 24 using 6 L screws

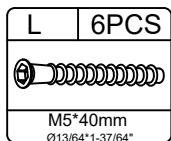
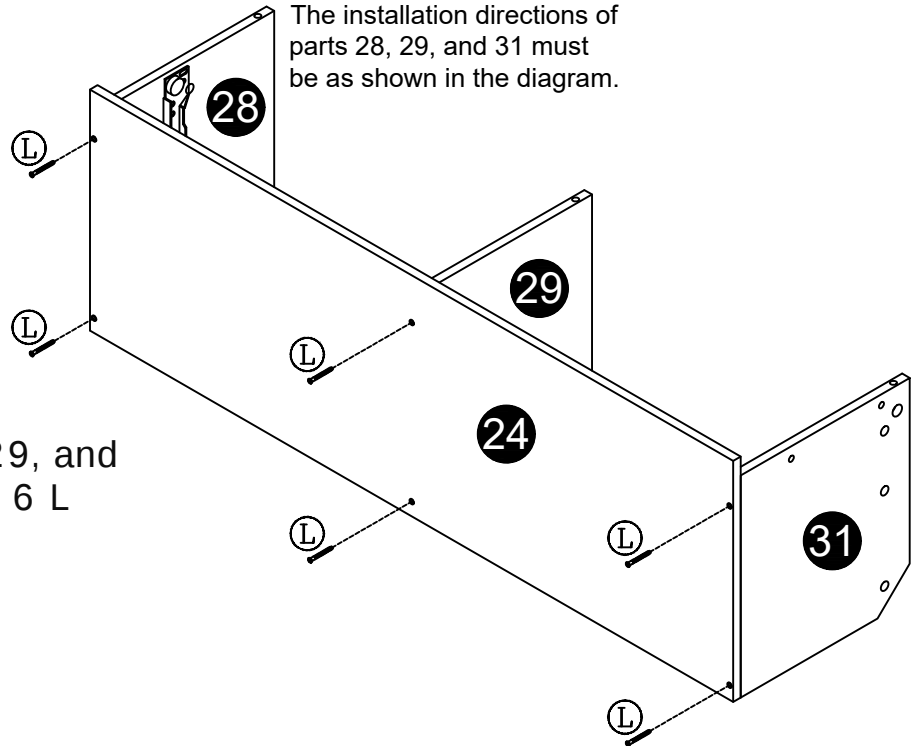


Frame Parts Section


Step 12

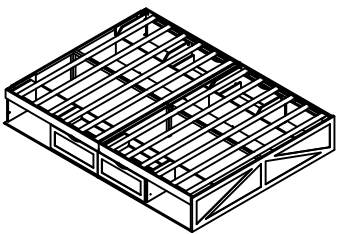

Attach part 34 to the frame using 8 L screws.

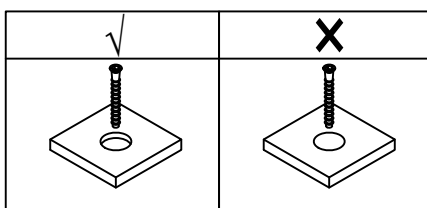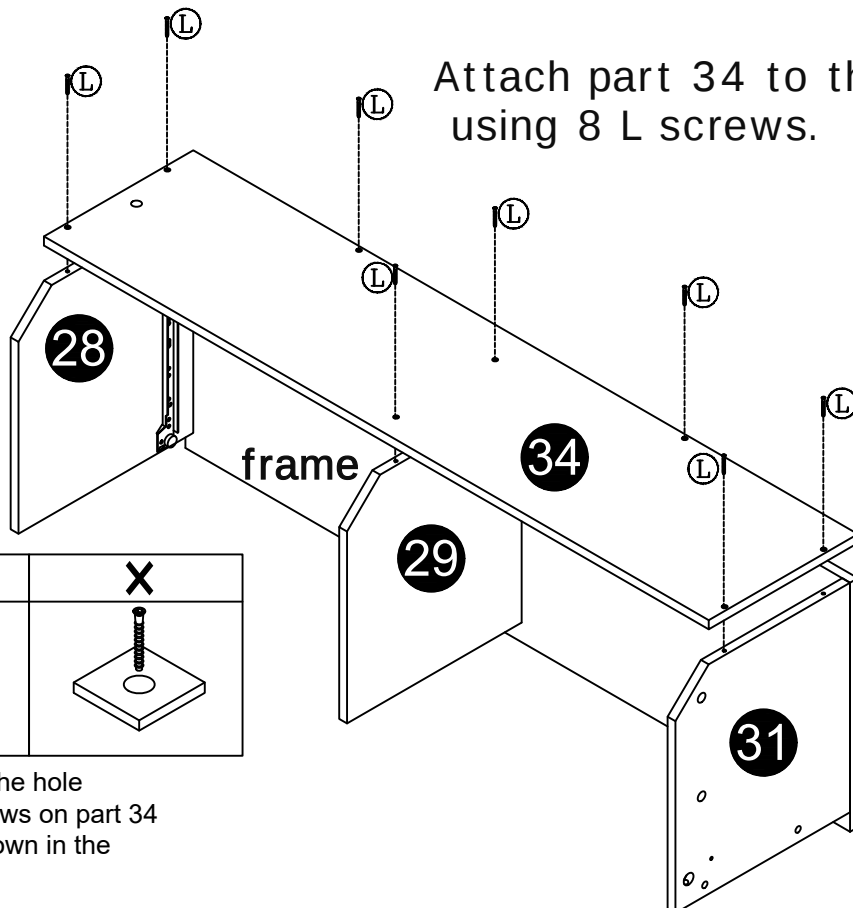




The shape of the hole facing the screws on part 34 must be as shown in the diagram.

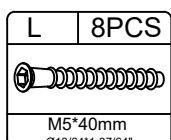


ASSEMBLY INSTRUCTIONS

Frame Parts Section

Step 13

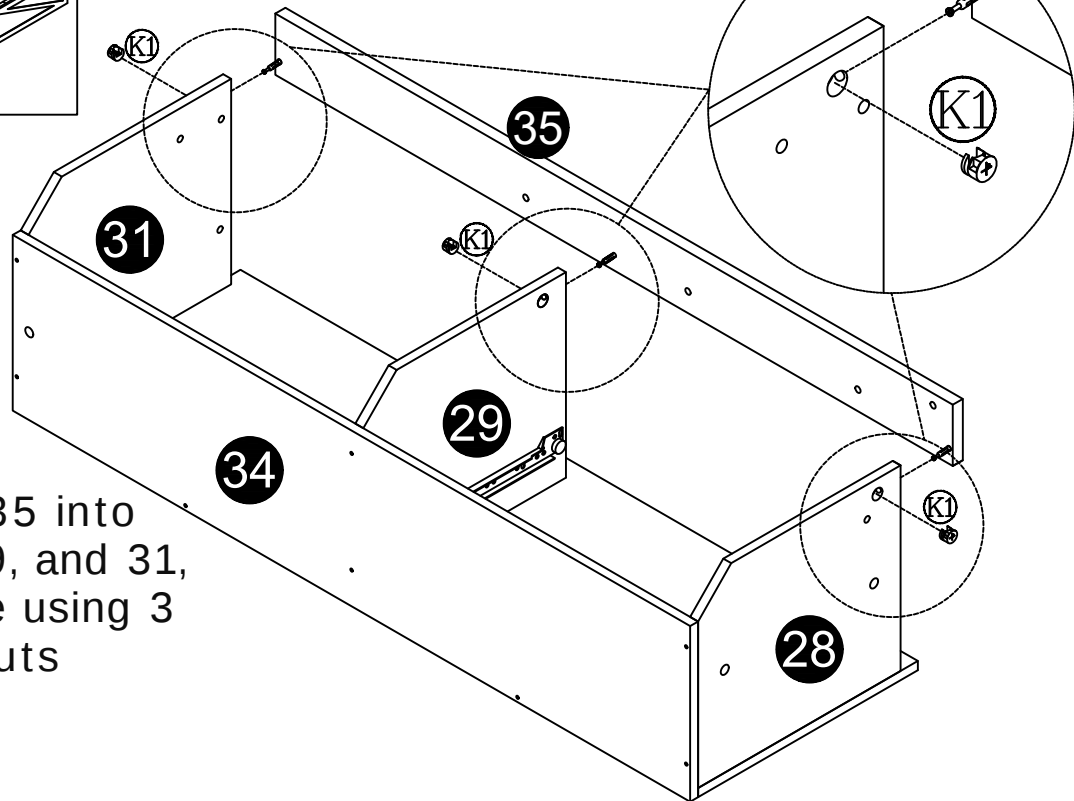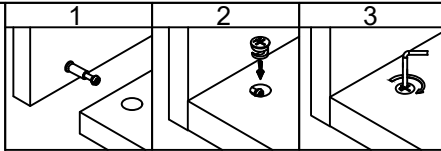
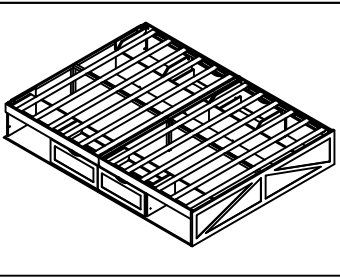


Insert part 35 into parts 28, 29, and 31, then secure using 3 K1 locking nuts

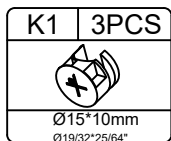


Frame Parts Section


Step 14

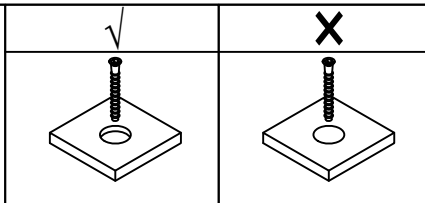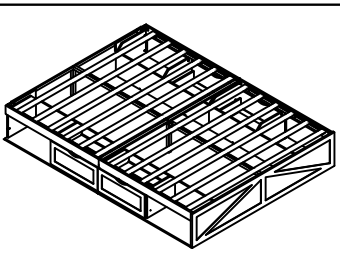


The shape of the hole facing the screws on part 24 must be as shown in the diagram.

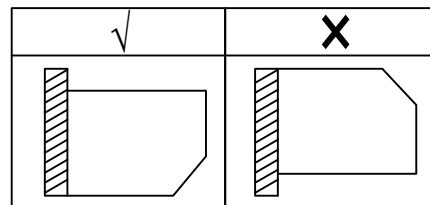

The installation directions of parts 26, 27, and 47 must be as shown in the diagram.

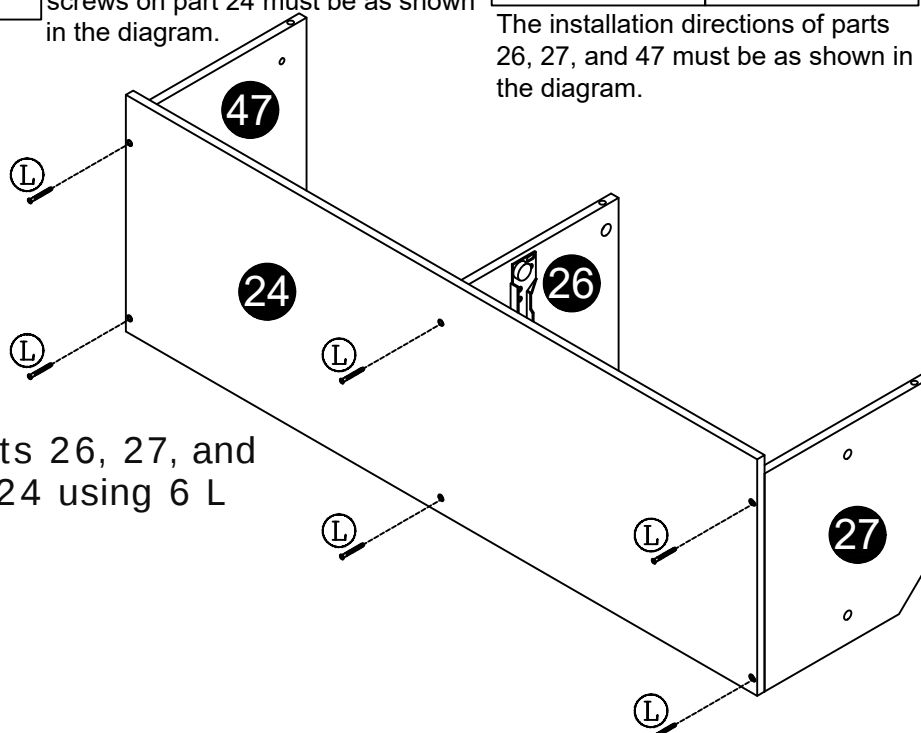



Connect parts 26, 27, and 47 to part 24 using 6 L screws.

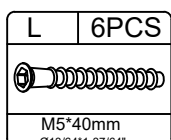


ASSEMBLY INSTRUCTIONS

Frame Parts Section


Step 15

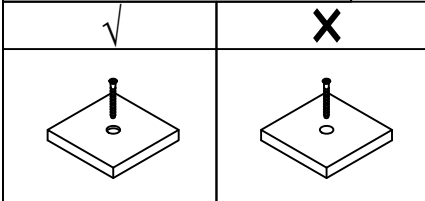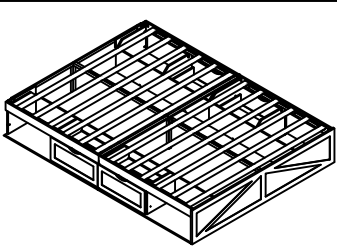

The shape of the hole facing the screws on part 33 must be as shown in the diagram.



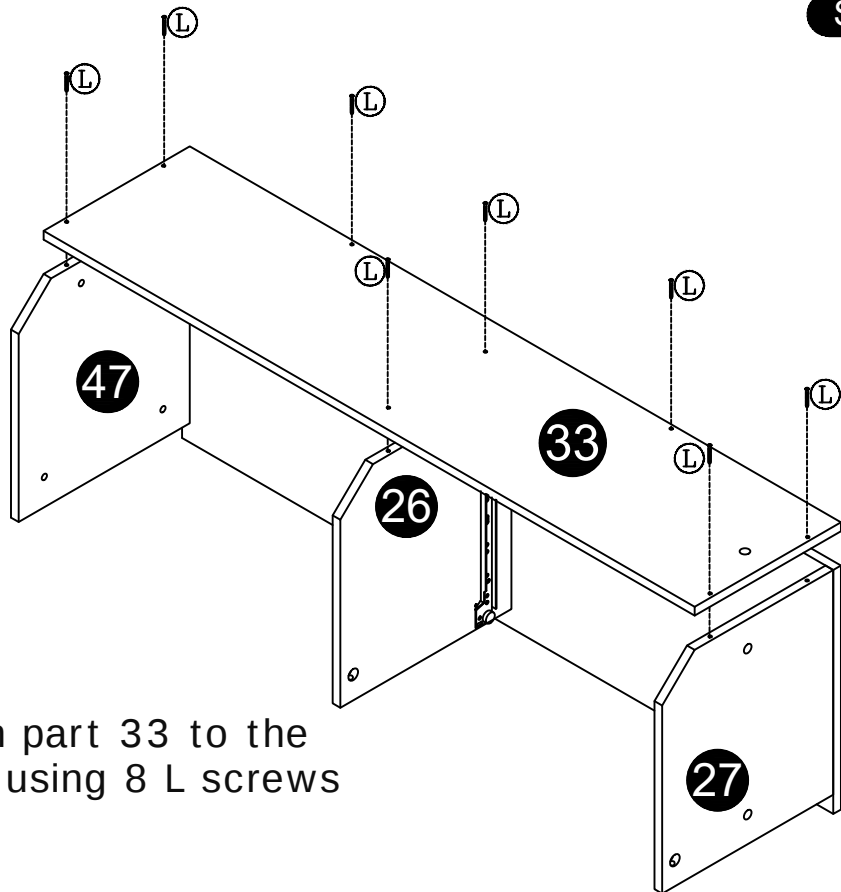


Attach part 33 to the frame using 8 L screws

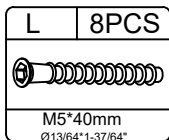


Frame Parts Section

Step 16

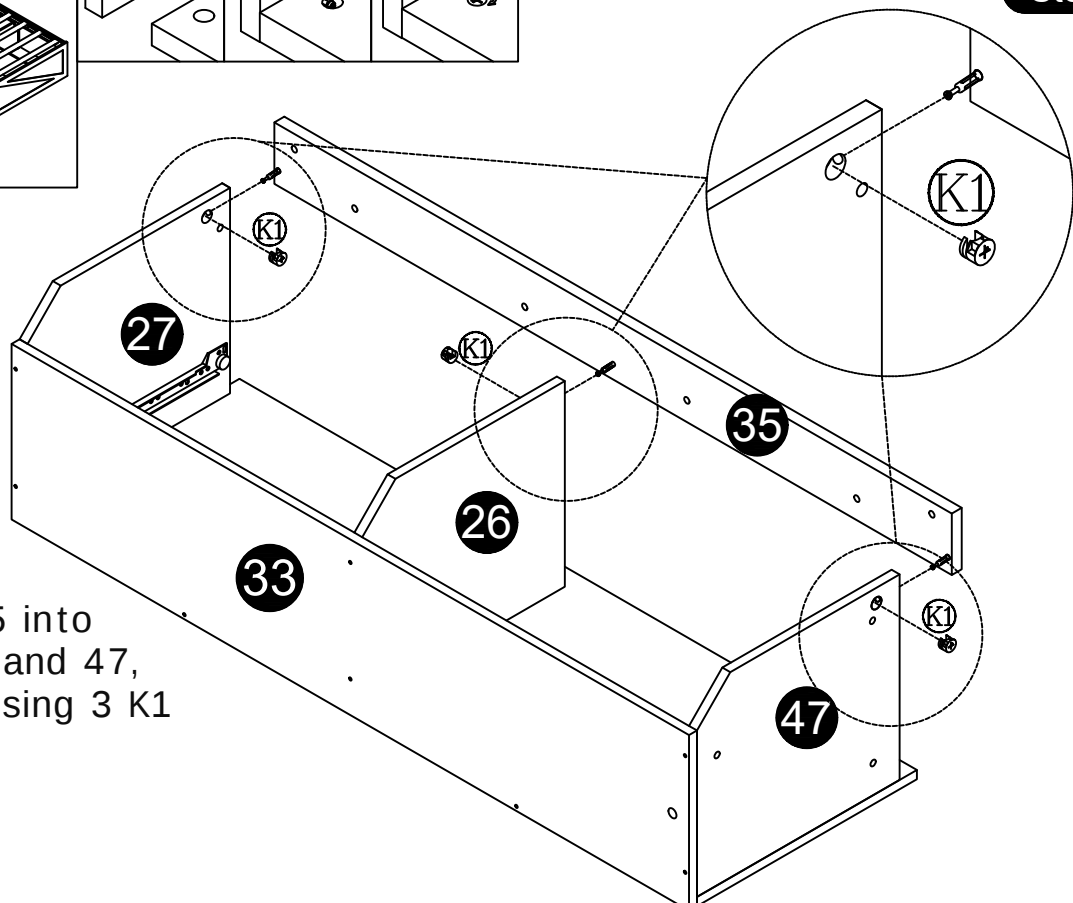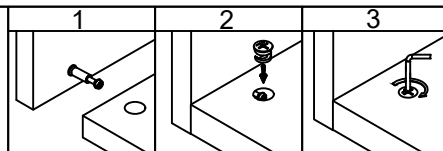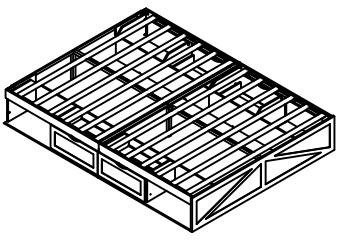


Insert part 35 into parts 26, 27, and 47, then secure using 3 K1 locking nuts.

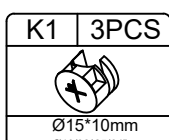


Note : Ensure all holes are properly aligned.

a. Align the holes on the four drawer frames and secure using 4 B screws.

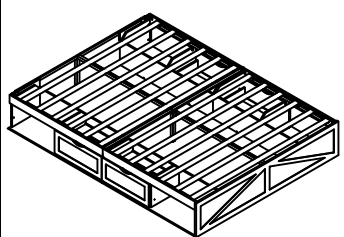


A	4PCS
	
M6*11mm	
Ø15/64*15/32"	
B	4pcs
	
M6*20mm	
Ø15/64*51/64"	
R	2PCS
	

b. Use 2 R metal plates and 4 A screws to reinforce the bed frame.

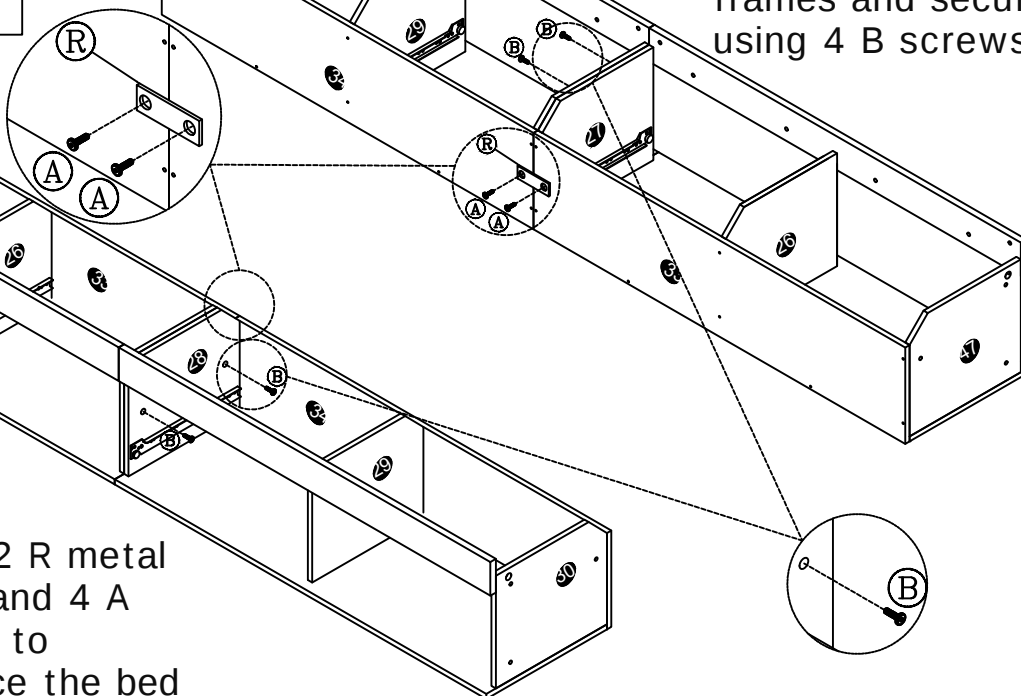


a. Connect parts 30 and 47 to part 37 using 6 B screws

b. Attach part 48 to parts 35 and 37 using 2 A screws, as shown in the diagram.

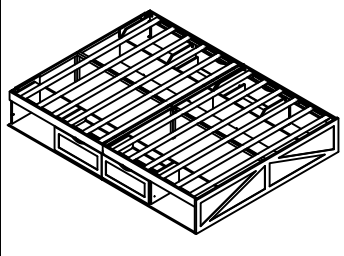

A	4PCS
	
M6*11mm	
Ø15/64*15/32"	
B	6PCS
	
M6*20mm	
Ø15/64*51/64"	
Q	2PCS
	



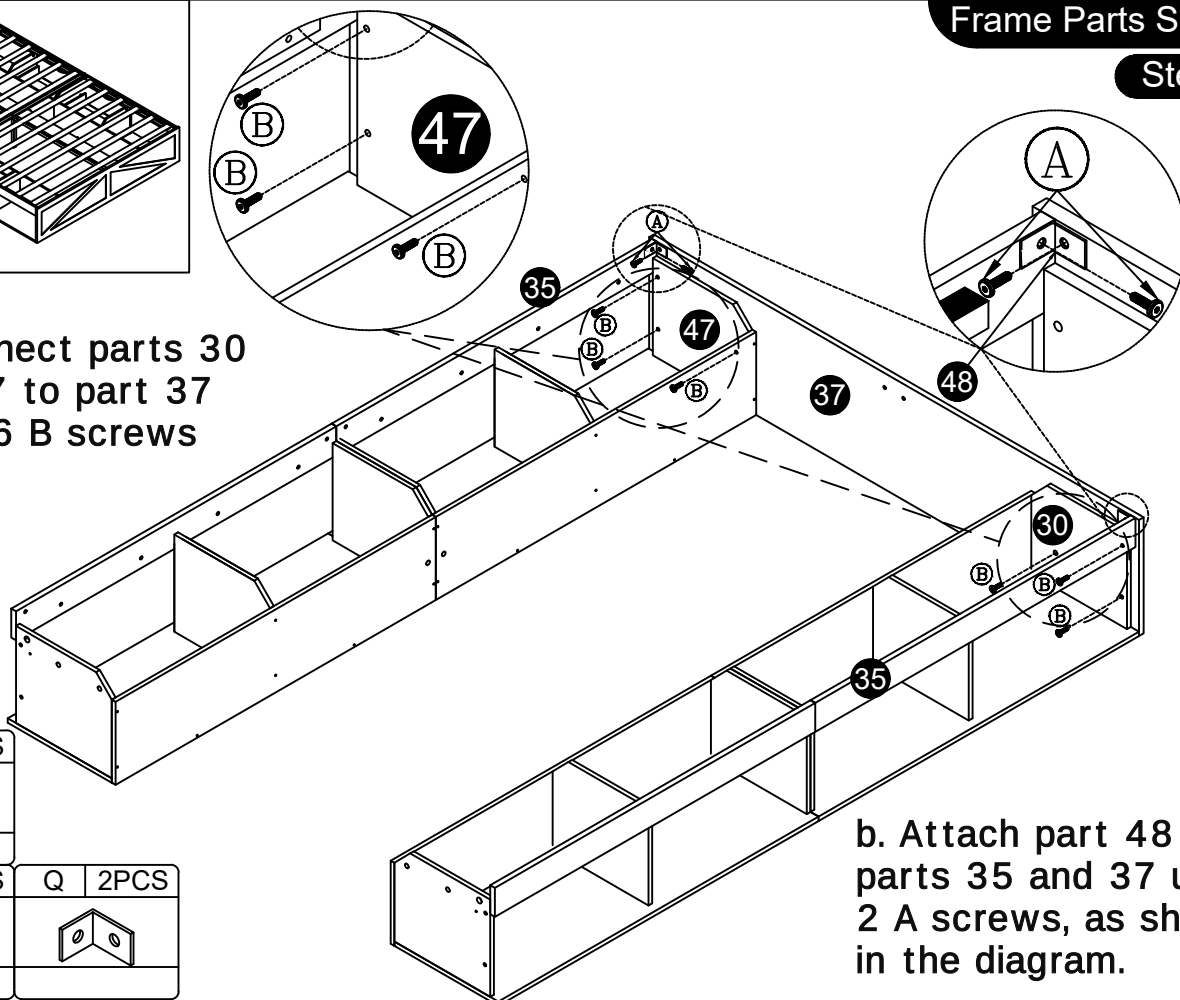


ASSEMBLY INSTRUCTIONS

Frame Parts Section



Step 19

Connect parts 42 and 46 to parts 25 and 31 using 4 B screws.

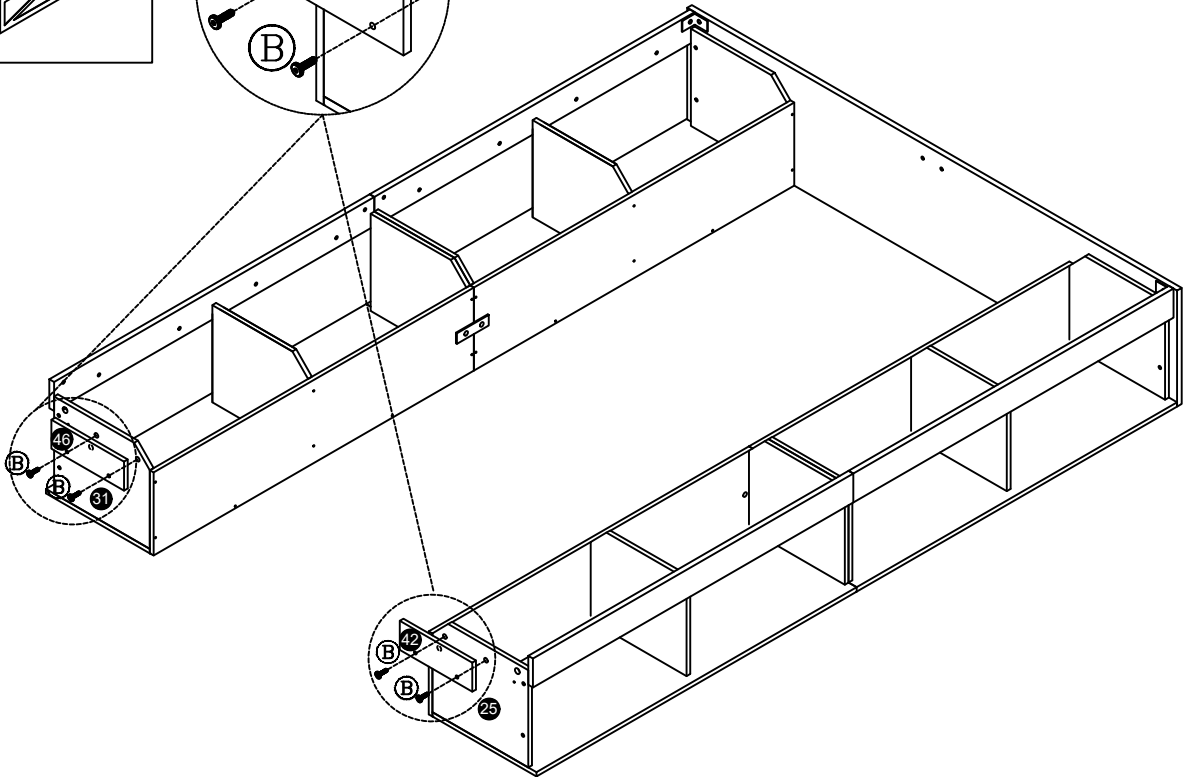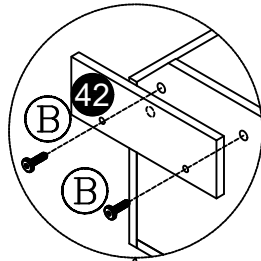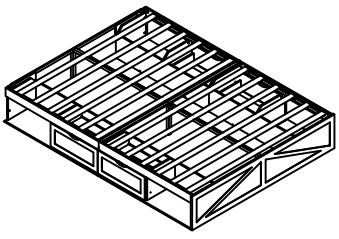

Frame Parts Section




Step 20

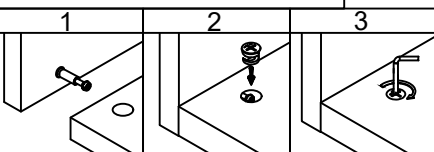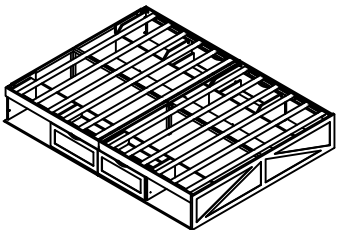

a. Secure 2 K1 locking nuts as shown in the diagram.

b. Connect parts 25 and 31 to parts 3 and 4 using 4 G screws.


c. Connect parts 3 and 4 to part 25 using 4 A screws

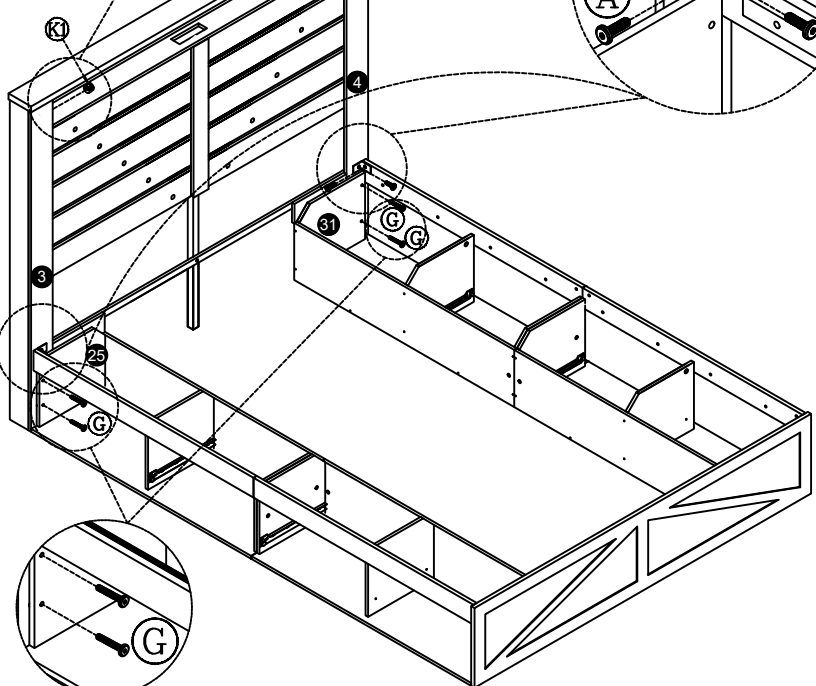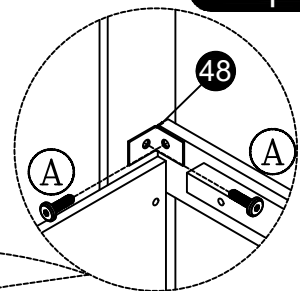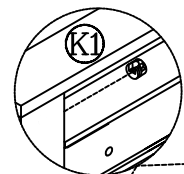

ASSEMBLY INSTRUCTIONS



Frame Parts Section

Step 21

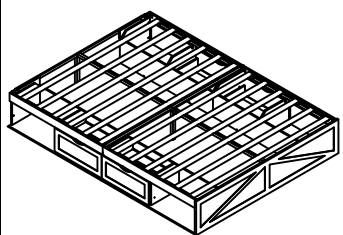

Note : Ensure the rubber pads on parts 38 and 39 face upward




Position parts 38, 39, and 40 as shown in the diagram and secure using 2 F screws.

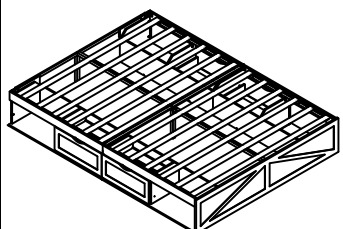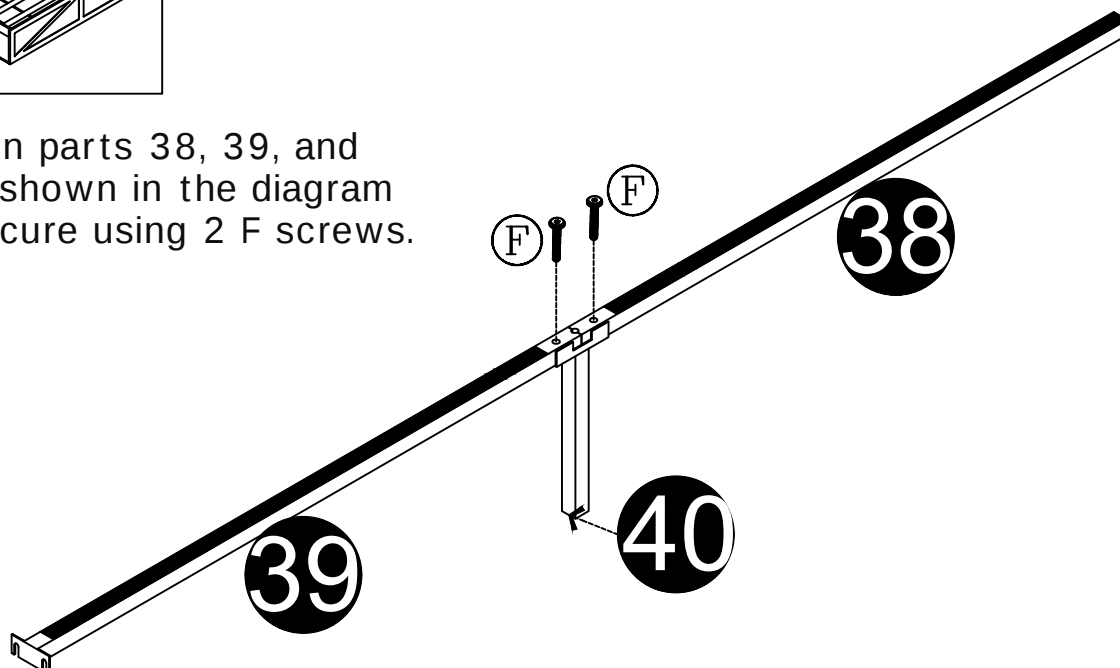

c. Secure part O to part 1 using 2 P screws.



a. Connect part 36 to part 35 using 16 D screws and 16 H washers.

Do not tighten screw A at first, tighten screw A after the bracket is hung on it.

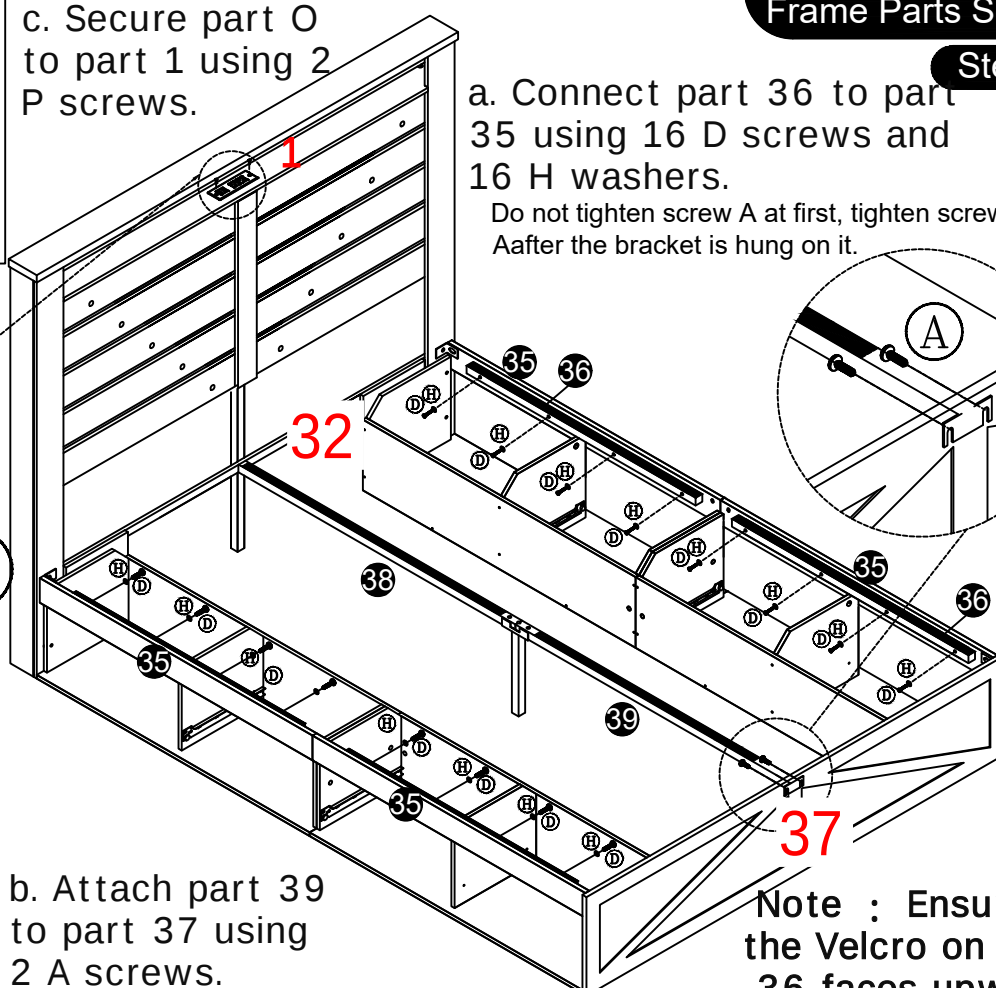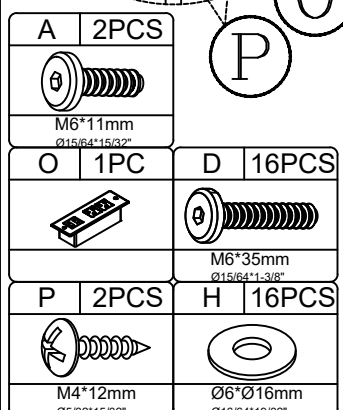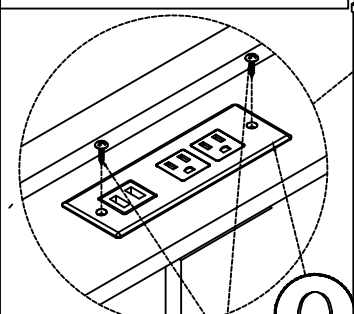


b. Attach part 39 to part 37 using 2 A screws.

Note : Ensure the Velcro on part 36 faces upward.

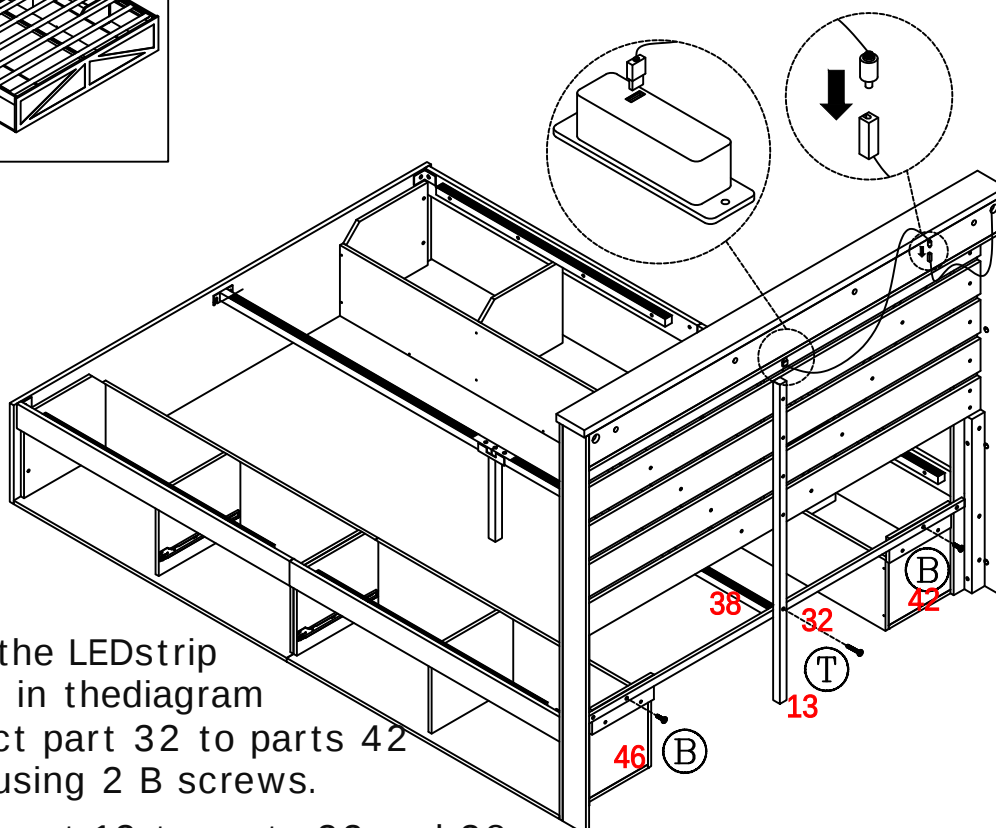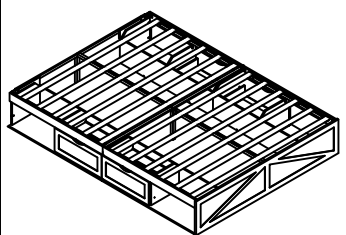


- Install the LEDstrip as shown in the diagram
- Connect part 32 to parts 42 and 46 using 2 B screws.
- Secure part 13 to parts 32 and 38 using T screws

B	2PCS
M6*20mm Ø15/164*51/64"	
T	1PC
M8*60mm Ø5/16*2-23/64"	

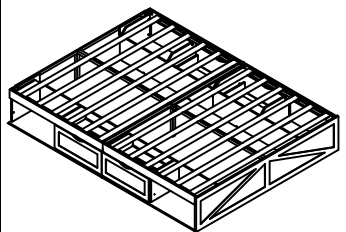

Note : This step requires two people—one to hold parts 15 and 16 and another to tighten the screws.

Attach parts 15 and 16 to the headboard using 10 B screws.

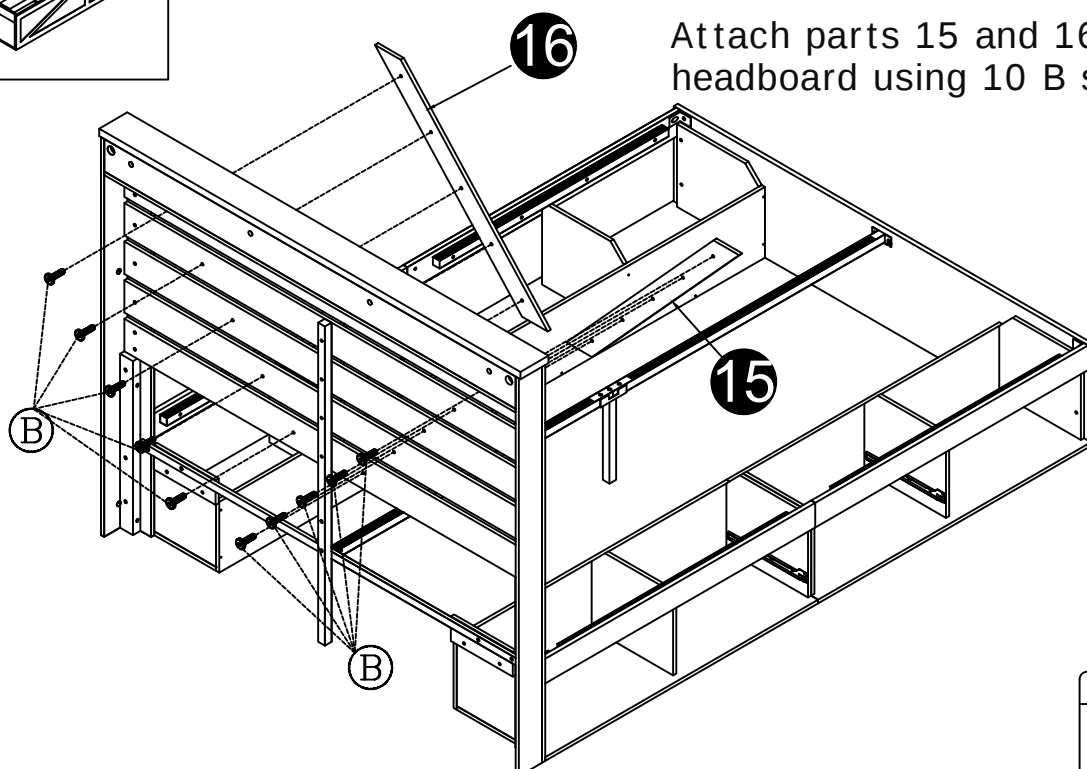


B	10PCS
M6*20mm Ø15/164*51/64"	


ASSEMBLY INSTRUCTIONS

Frame Parts Section

Step 25

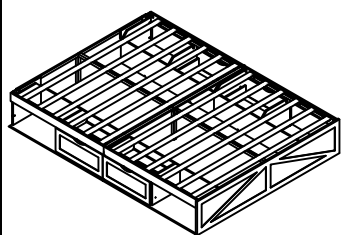


Do not tighten screw A at first, tighten screw A after the bracket is hung on it.

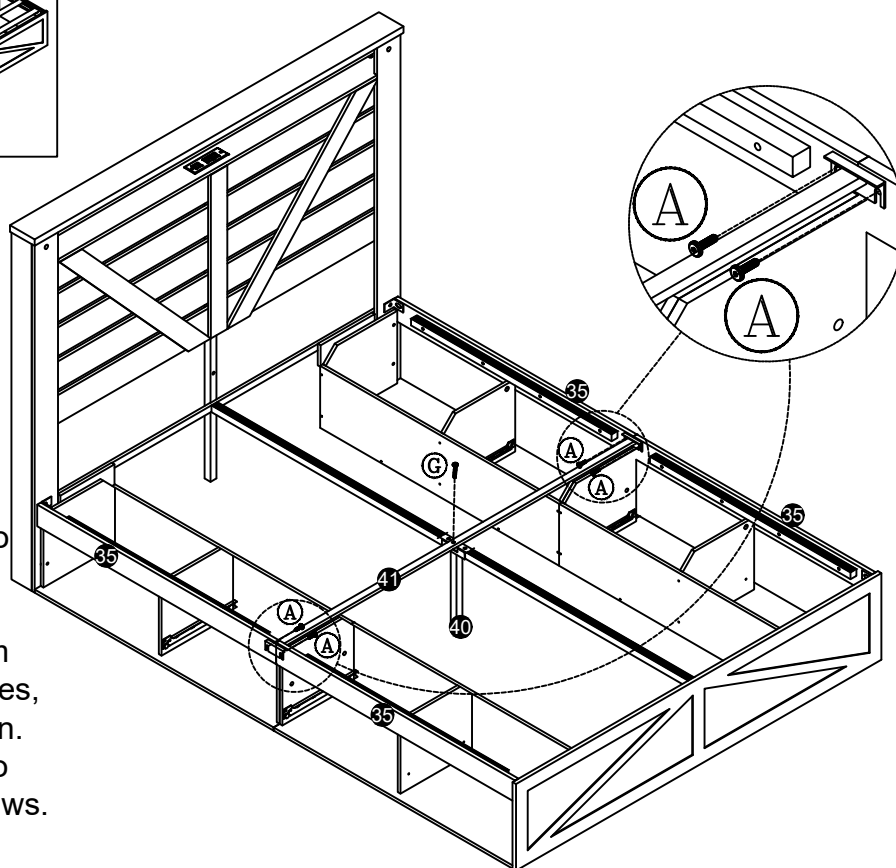


- a. Connect part 41 to part 35 using 4 A screws.
Initially, tighten them to 70%, align all holes, and then fully tighten.
b. Connect part 41 to part 40 using T screws.

G	1PC
	
M8*50mm Ø5/16*1-31/32"	
A	4PCS
	
M6*11mm Ø5/16*15/32"	

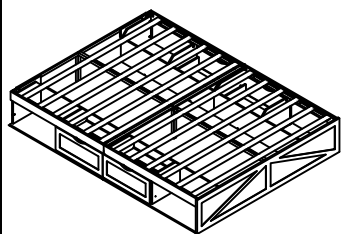



Frame Parts Section

Step 26

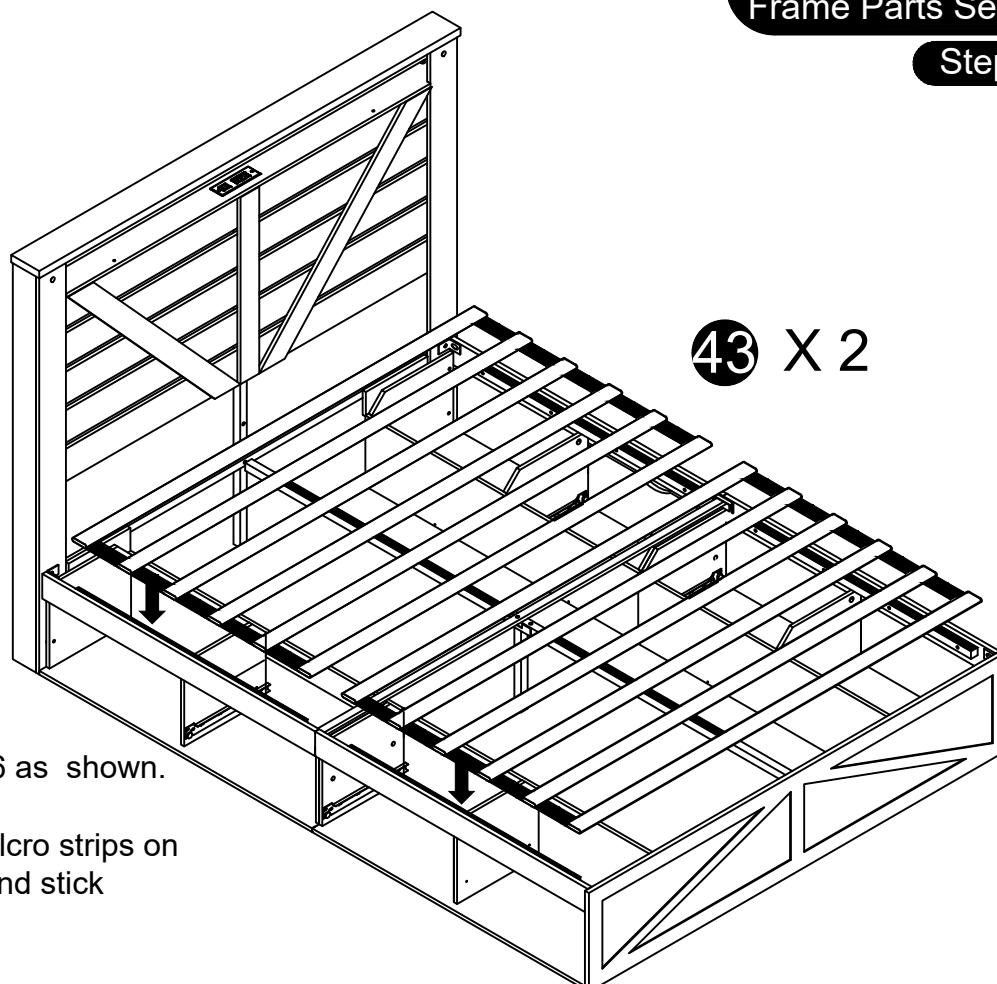


Lay 2 pieces of part 43 flat on part 36 as shown.

Note : Ensure the Velcro strips on parts 42 and 36 align and stick together.

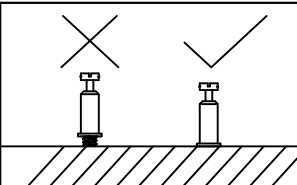
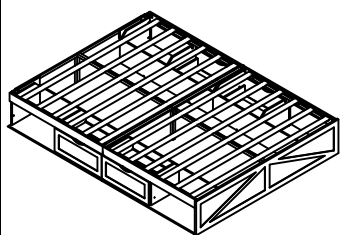


Install 4 K2 screws into 4 pieces of part 19.

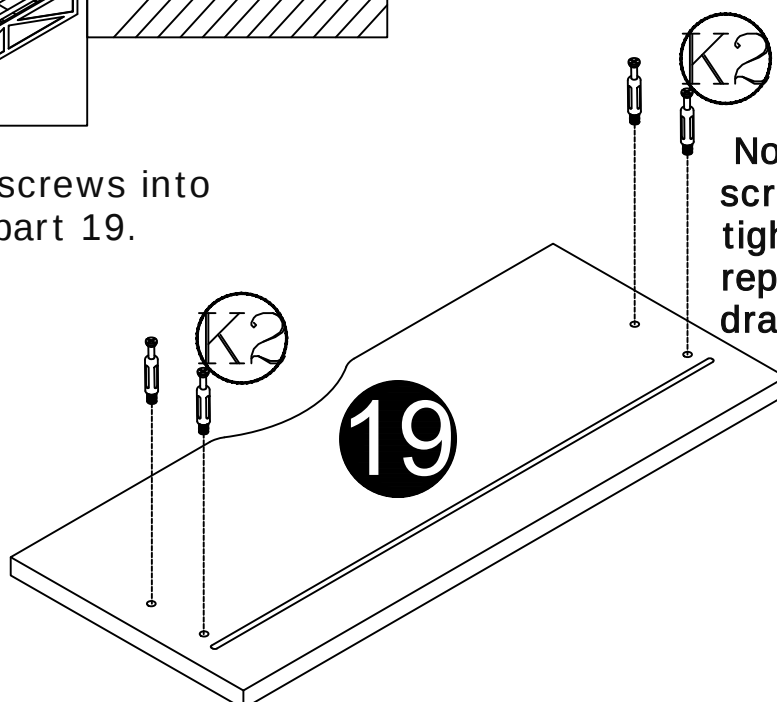


Note : Ensure all K2 screws are fully tightened. This step is repeated for 4 drawers.

X 4

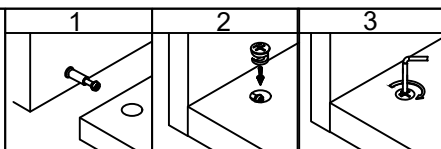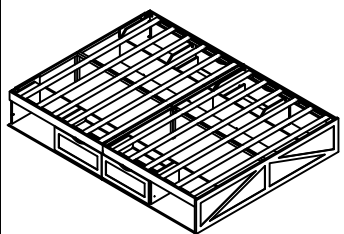


Note : Ensure the grooves on parts 20 and 21 align with the groove on part 19. This step is repeated for 4 drawers.

Insert parts 20 and 21 into part 19 and secure using 4 K1 locking nuts.

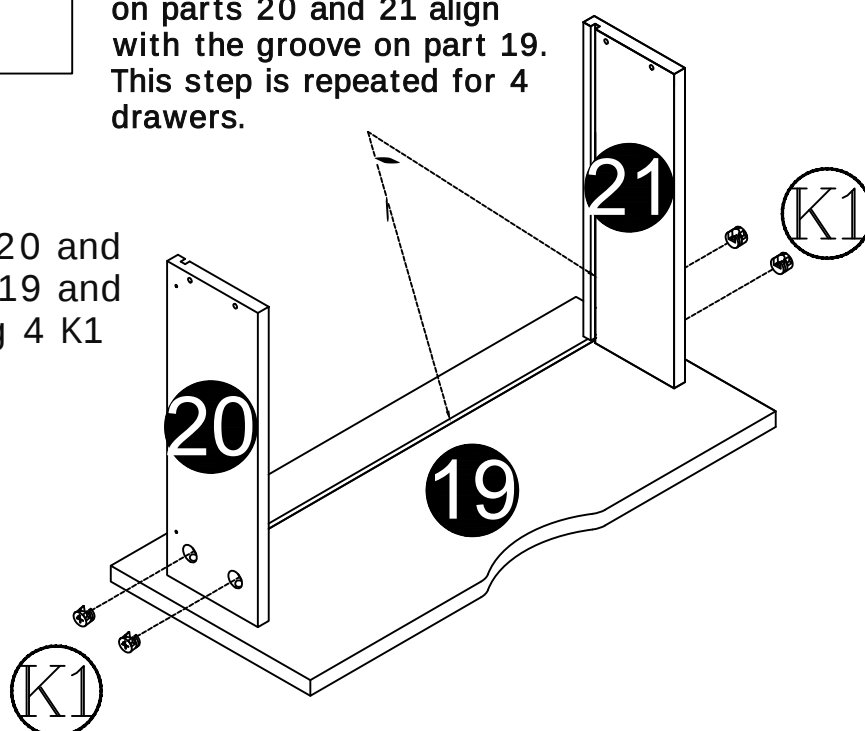

X 4

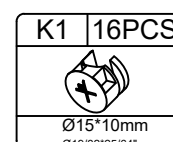


ASSEMBLY INSTRUCTIONS


Frame Parts Section

Step 29


- Insert part 22 along the grooves of parts 20 and 21.
- Align part 23 with part 22, then secure to parts 20 and 21 using 4 L screws.

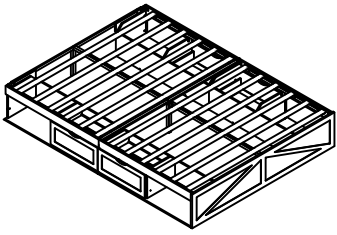

Note : This step is repeated for 4 drawers.

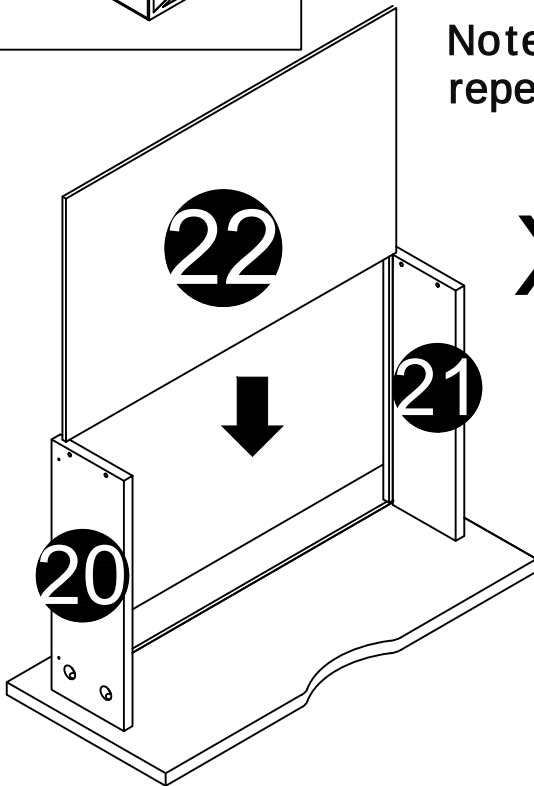

X 4

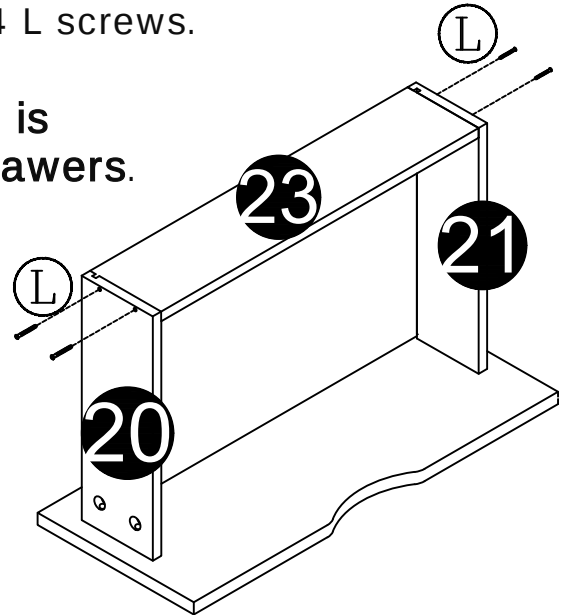


L	16PCS
	
M5*40mm Ø13/64*1-37/64"	

Frame Parts Section

Step 30


- Attach part 45-2 to part 21 using 2 P screws.

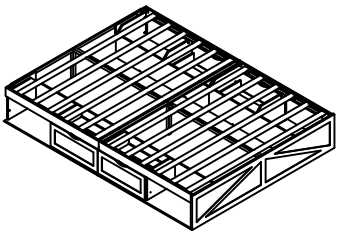

45-2 44-2


- Attach part 44-2 to part 20 using 2 P screws.

Note :
This step is repeated for 4 drawers

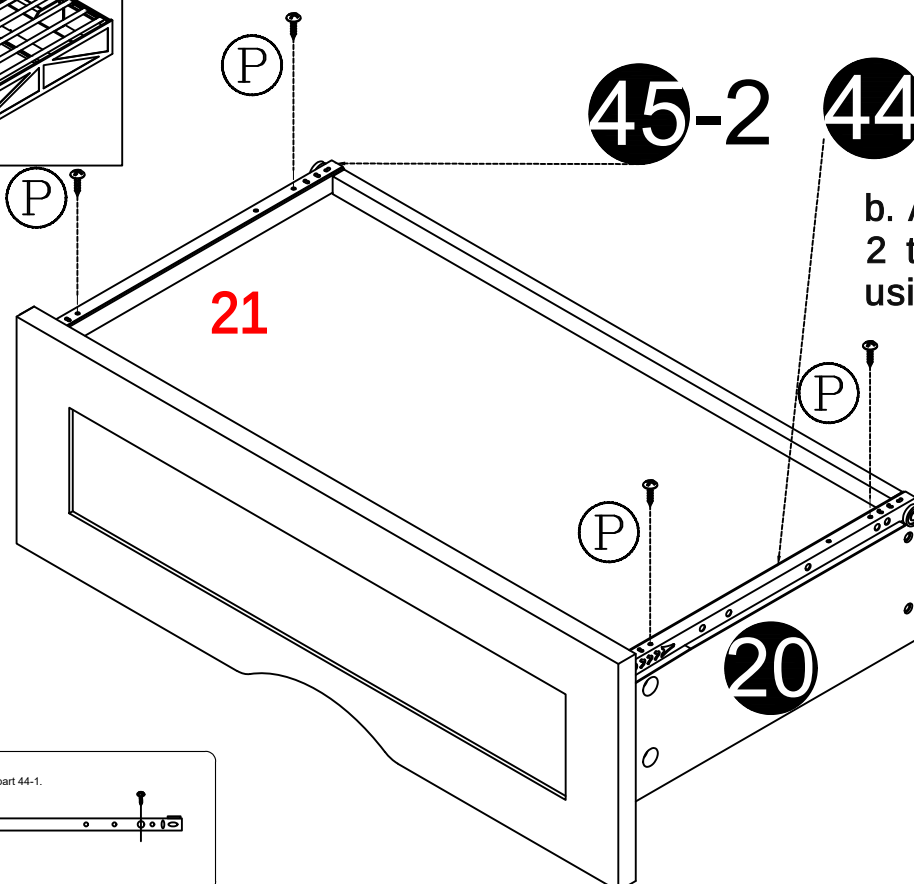

X 4

Attention:
1. Please locate the holes from the back of part 44-1.





P	16PCS
	
M4*12mm Ø5/32*15/32"	


ASSEMBLY INSTRUCTIONS

Frame Parts Section

Step 31

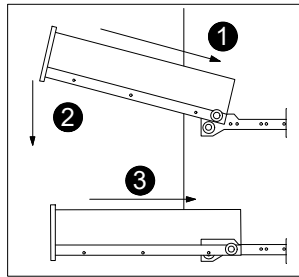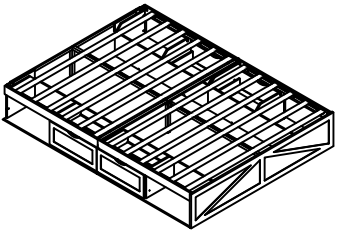


Install the drawers into the side frames of the bed, as shown in the diagram.

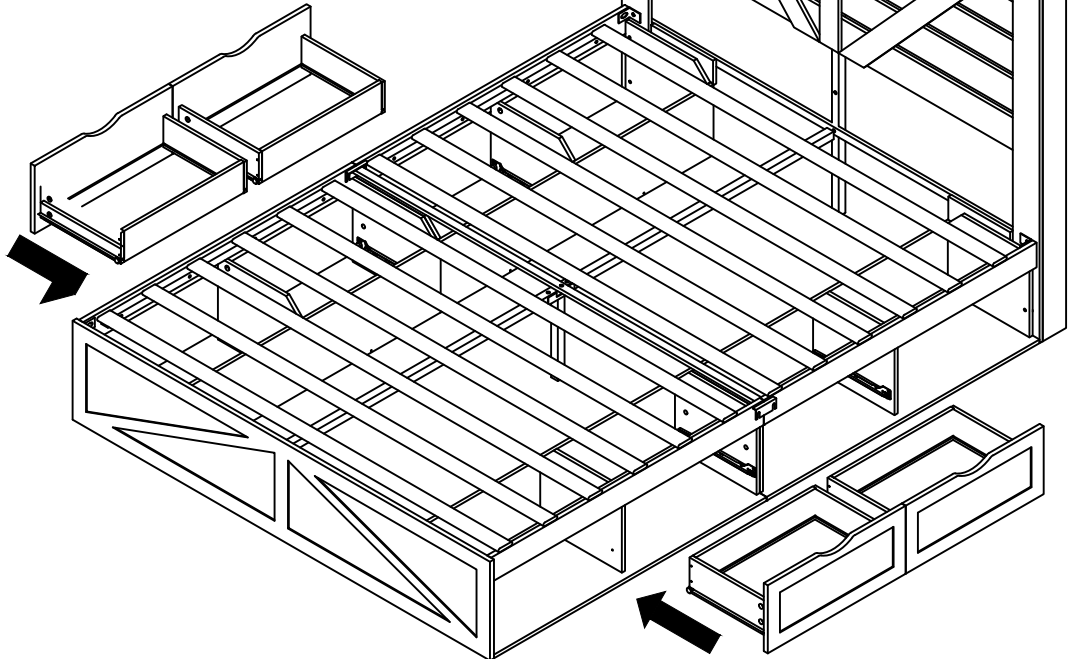


Frame Parts Section

Step 32

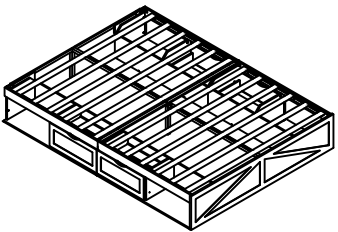

Warning: Do not jump or stand on the bed frame. This may cause damage or lead to injury.

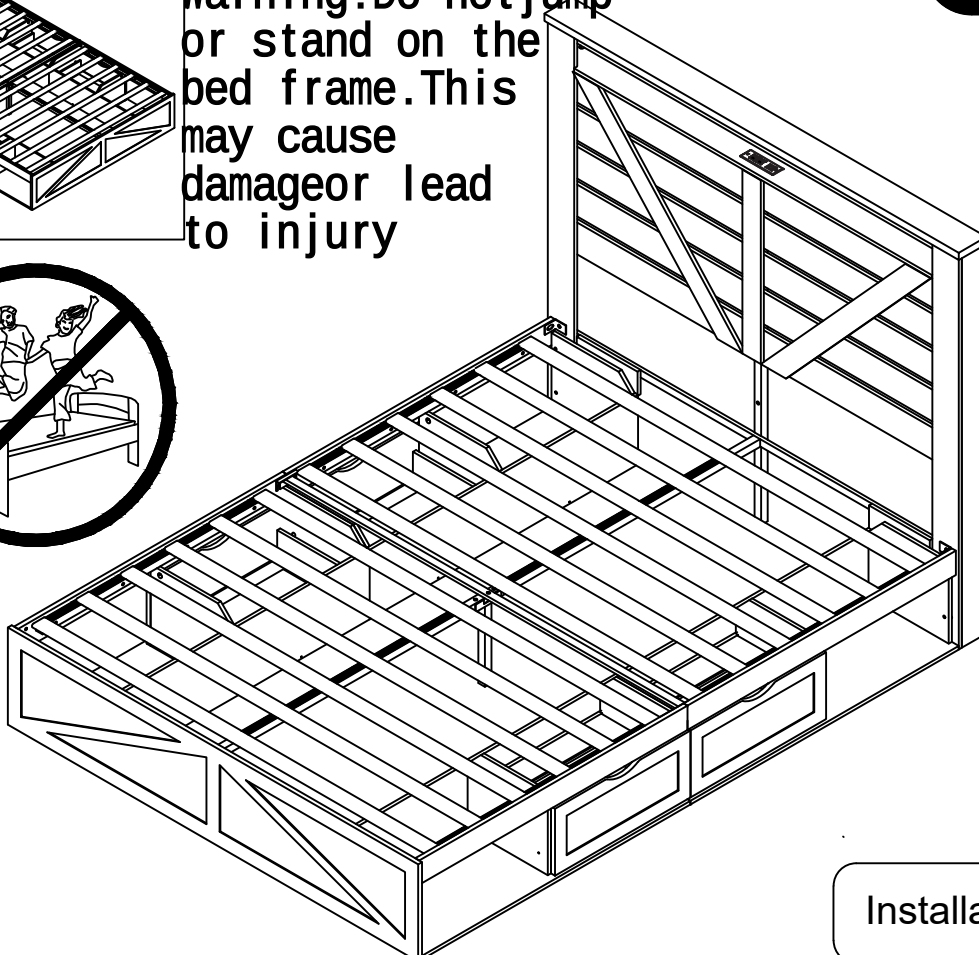

Installation Complete



MAINTENANCE AND CARE

1. Prevent Pests

Keep wooden furniture away from damp areas to avoid pests and wood damage. Use a dehumidifier or air conditioner in humid seasons to keep the room dry.

2. Protect from Sunlight

Avoid placing furniture in direct sunlight to prevent cracking, discoloration, or fading. Use curtains or shades if sunlight is unavoidable.

3. Keep Away from Fire

Place furniture away from heat sources or open flames to avoid damage and maintain its condition.

4. Regular Care

Apply furniture oil regularly to keep the wood shiny, prevent cracks, and extend its lifespan.

5. Clean Often

Vacuum dust and debris, especially under beds, to keep the furniture clean and hygienic.

6. Stay Dry

Ensure good ventilation to prevent moisture buildup. Use a dehumidifier if needed to protect the wood.

7. Avoid Corrosive Liquids

Keep the furniture away from acidic or alkaline substances to protect its surface and durability.

8. Use a Damp Cloth

Clean with a well-wrung damp cloth to avoid water damage or swelling.

9. Limit Sun Exposure

Too much sunlight can dry and damage wood. Position furniture in shaded areas or use curtains to block UV rays.