

Nightstand

Assembly Instructions - Please keep for future reference

1061030305B

1061030306B



Dimensions

Width - 17.7inch

Depth - 17.7inch

Height - 23.62inch

Important – Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

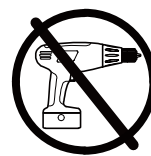

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance


- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

Components - Panels

Please check you have all the panels listed below

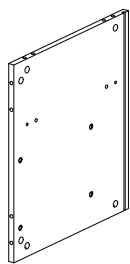


1 (475x415X15mm)X1

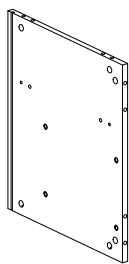


2 (475x415X15mm)X1




3 (475x50X15mm)X2




4 (300x40x34mm)X4

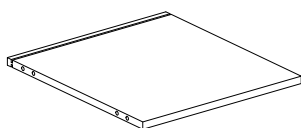


5 (380x415X15mm)X1

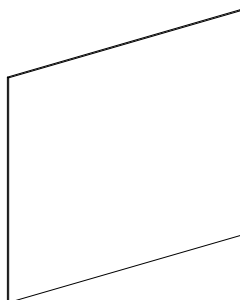


6 (390x320x2.7mm)X1




7 (85X50X50mm)X4




8 (310x45x15mm)X2




9 (325x45x15mm)X2




10 (440x445x15mm)X1

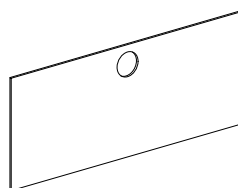


11 (390x160x2.7mm)X1

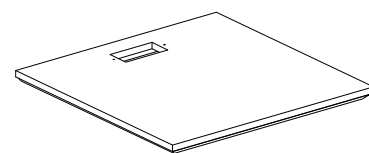


12 (450x450x25mm)X1

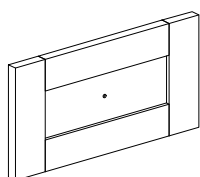


13 (308x160x15mm)X2

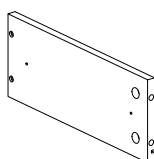


14 (300x118x12mm)X2

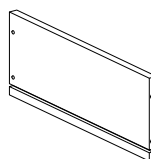

15 (300X118X12mm)X2

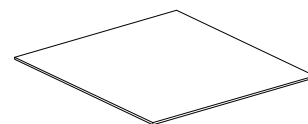

16 (272x297x2.7mm)X2




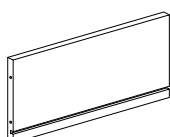



17 (262x118x12mm)X2

Components - Fittings

Please check you have all the panels listed below

Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Male Camlock x 40	B  Female Camlock x 40	C  Dowel x 16
D  Drawer slider 12" X 2	E  3.5*12mm Screw x 18	F  4*30mm Screw x 8
G  Handle & Fixings x 2	H  Back Panel Stiffener x 8	I  Protective Feet x 4
J  Handle & Fixings x 1	K  6*35mm Screw x12	



Tools required



Phillips screwdriver
(medium & large)

Ruler - Use this ruler to help correctly identify the screws




Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

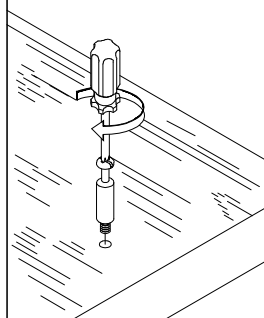

Step 2

Push the male camlock into the entry hole.

2

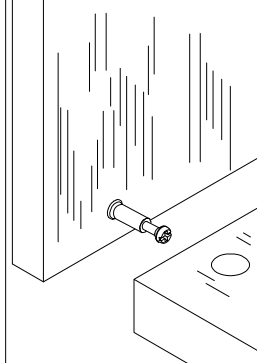


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

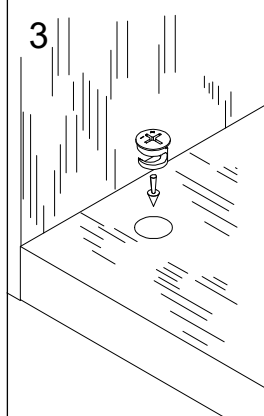


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4

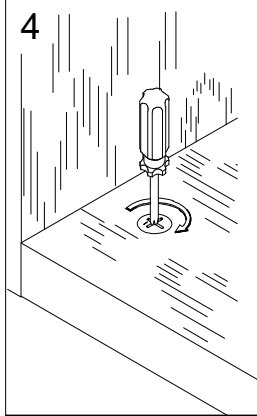


Assembly Instructions

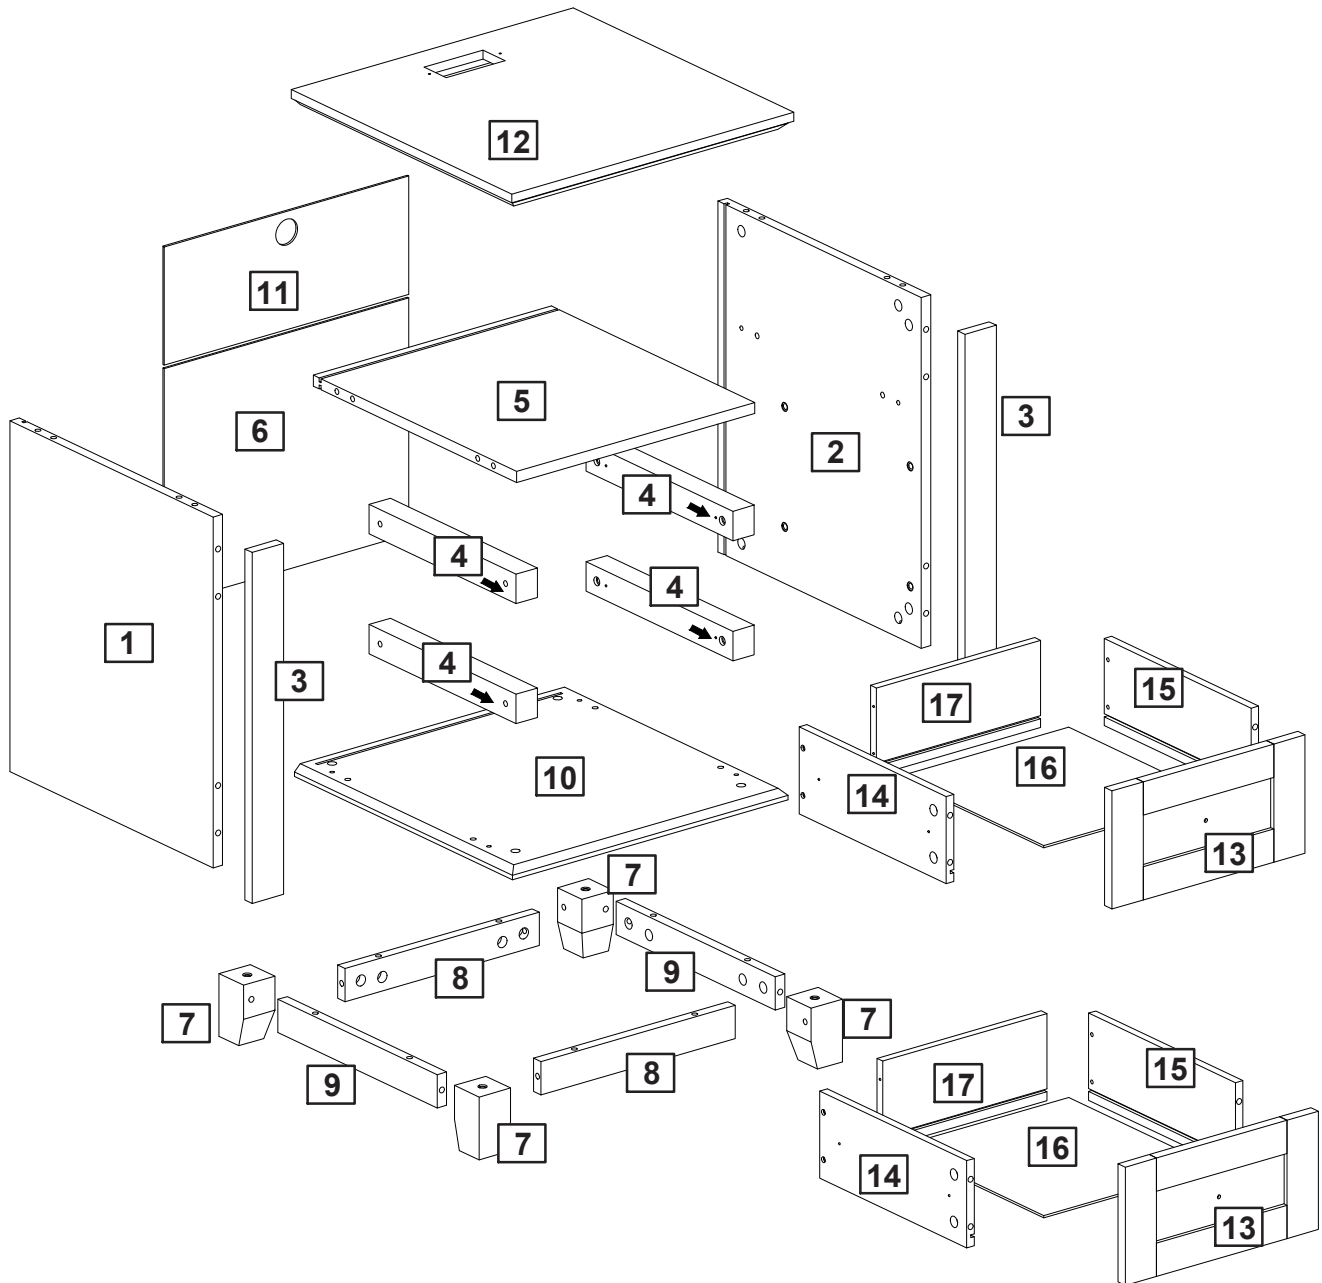


Assembly Instructions

Step 1

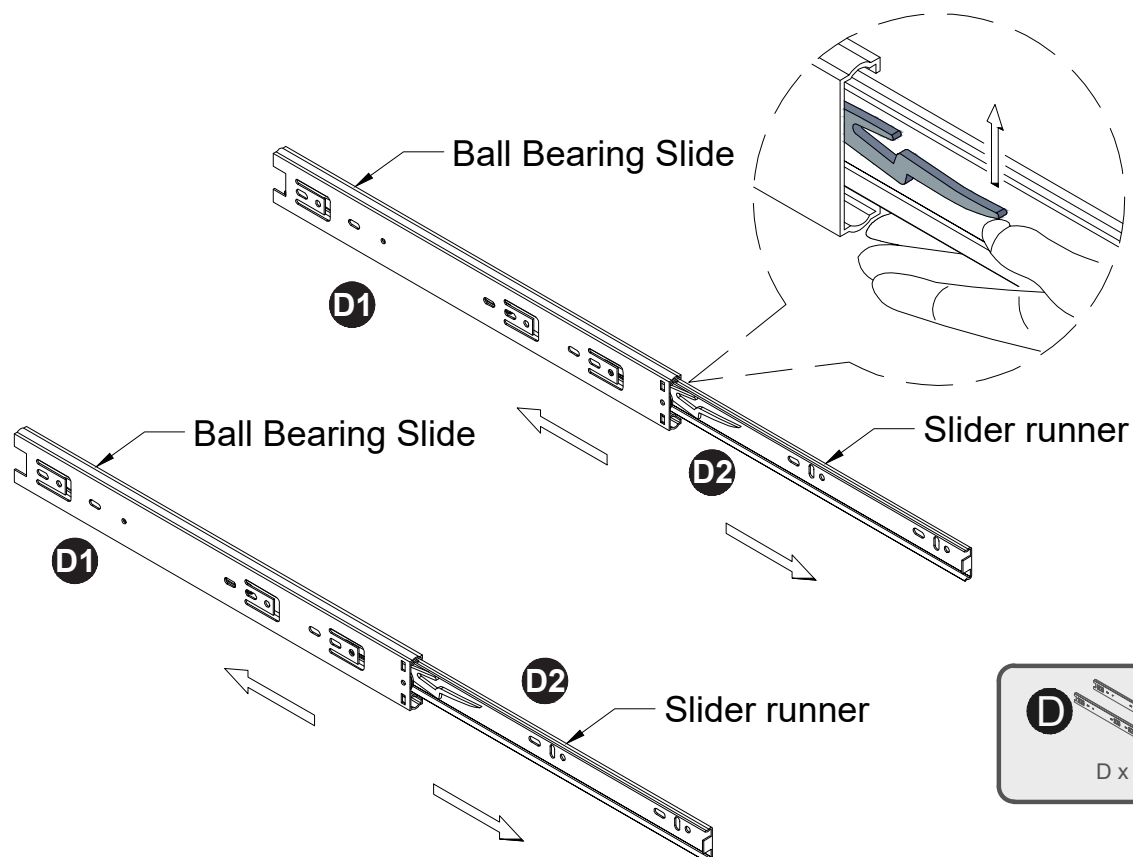

Step 2

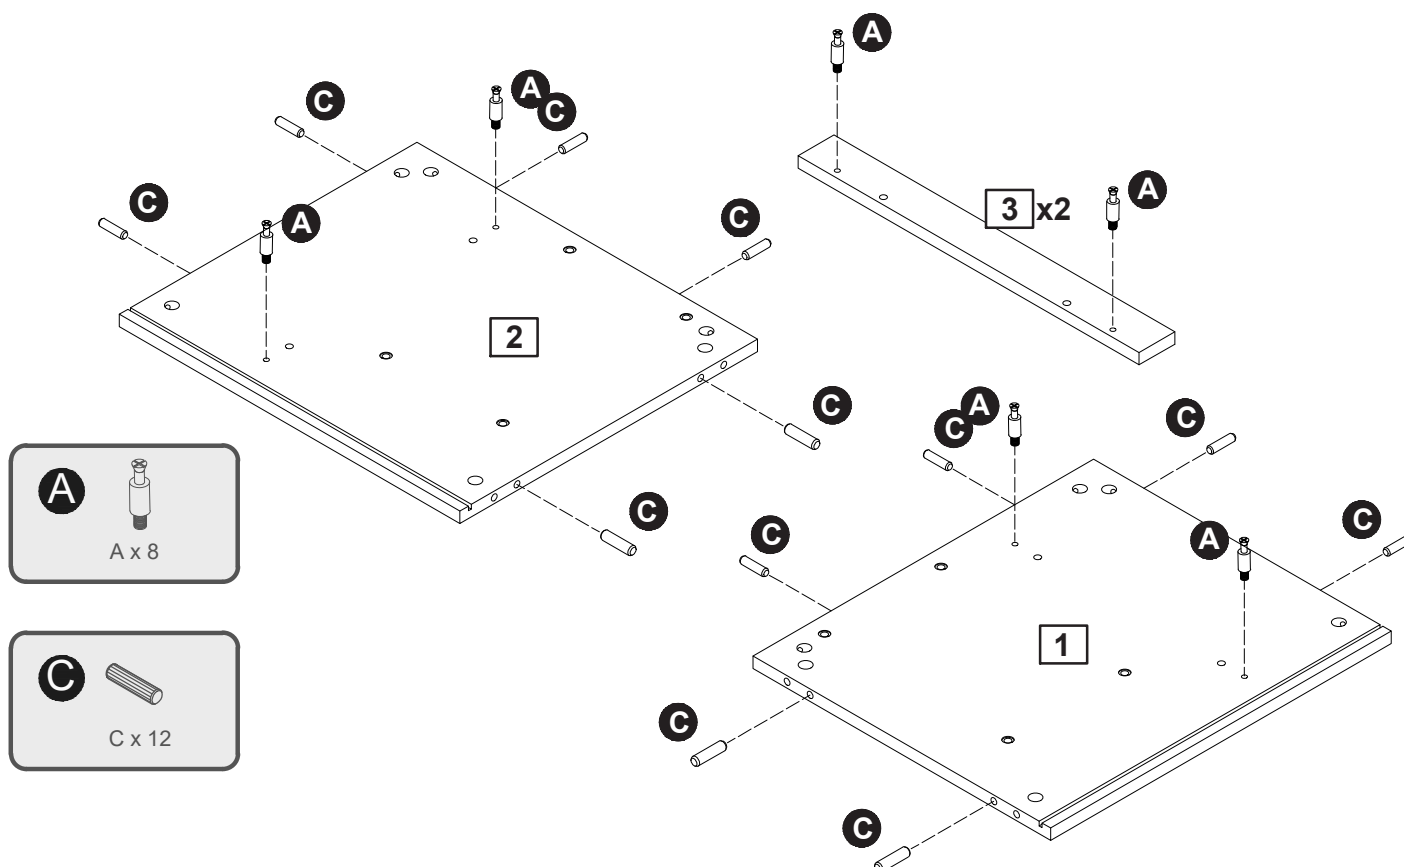



Assembly Instructions

Step 3

B



B x 2

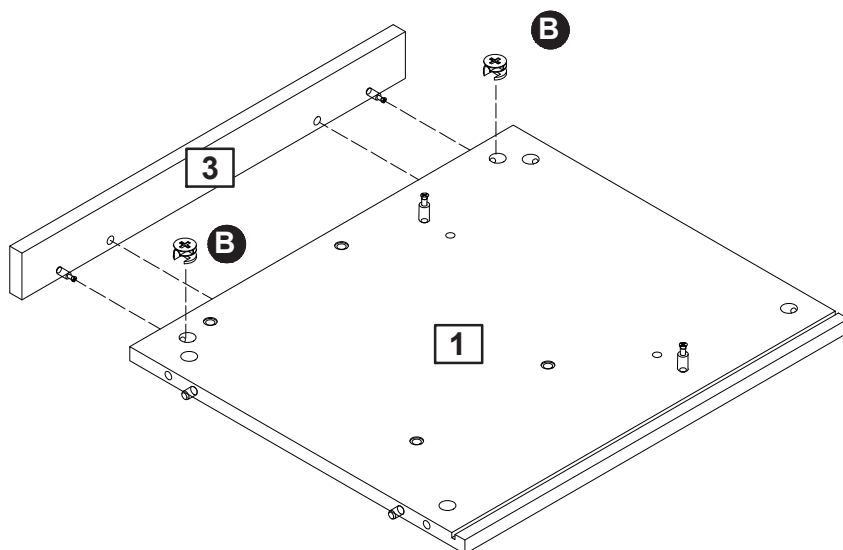
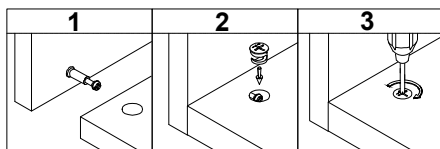


Step 4

B




B x 2

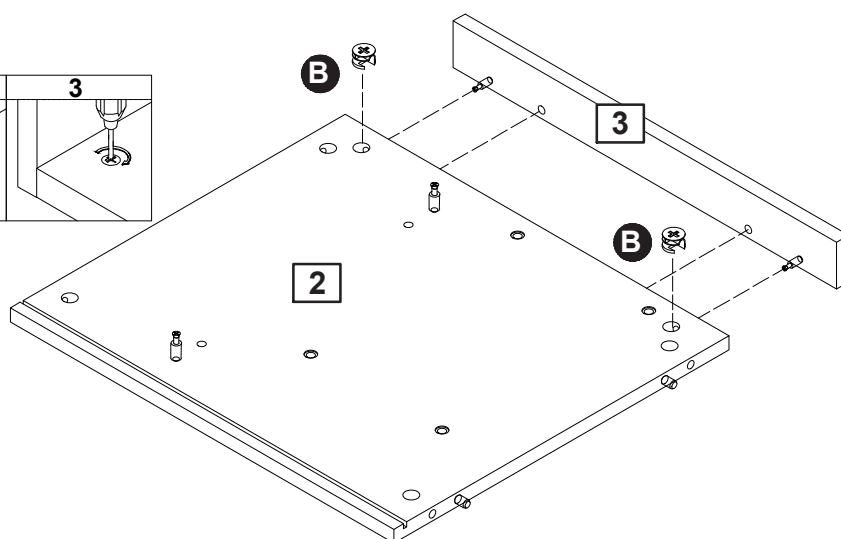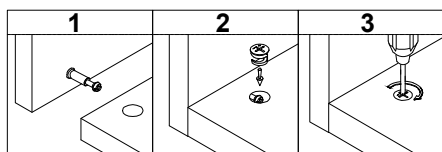


Assembly Instructions

Step 5

K



K x 8

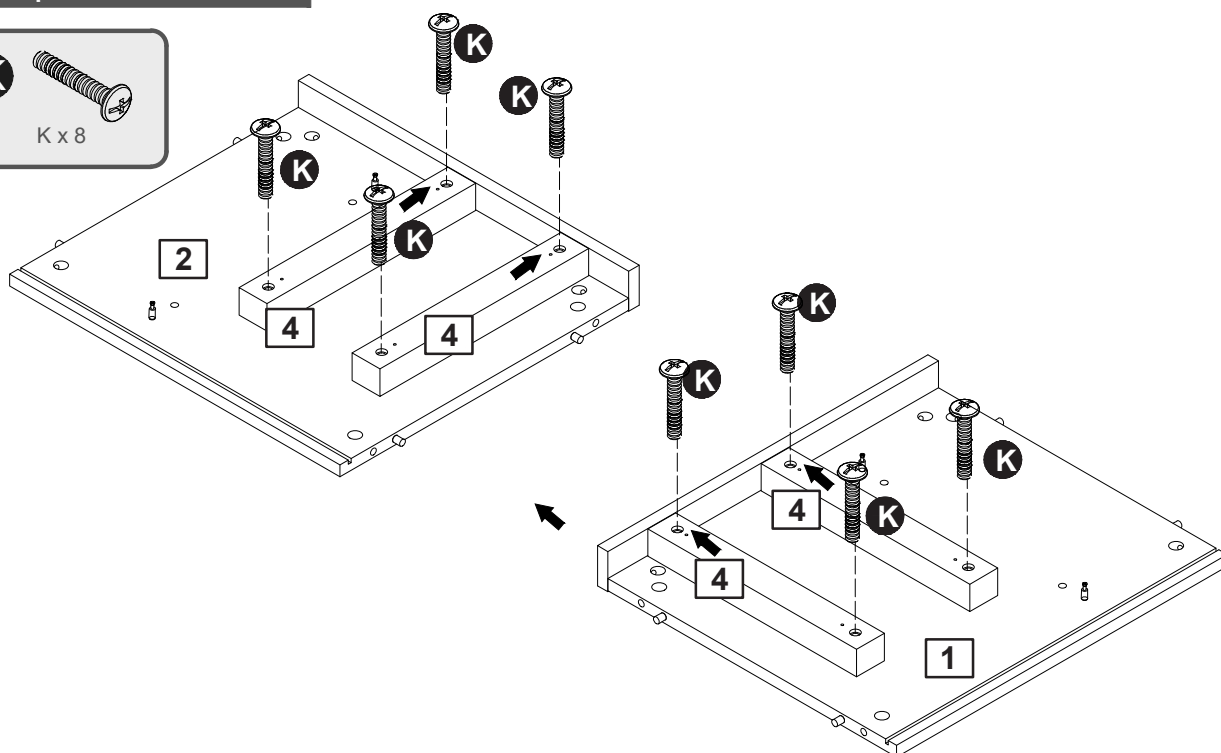


Step 6

E



E x 8

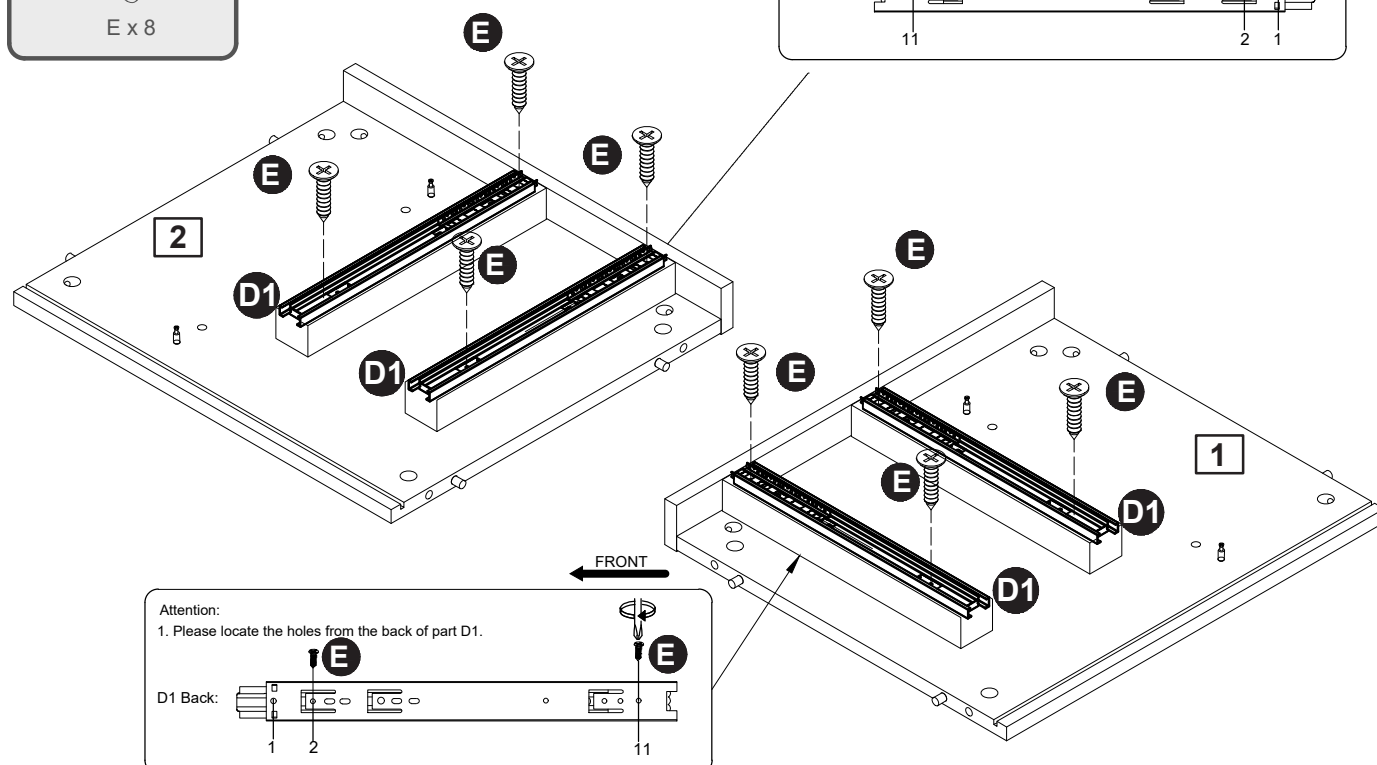


Assembly Instructions

Step 7

C



C x 4


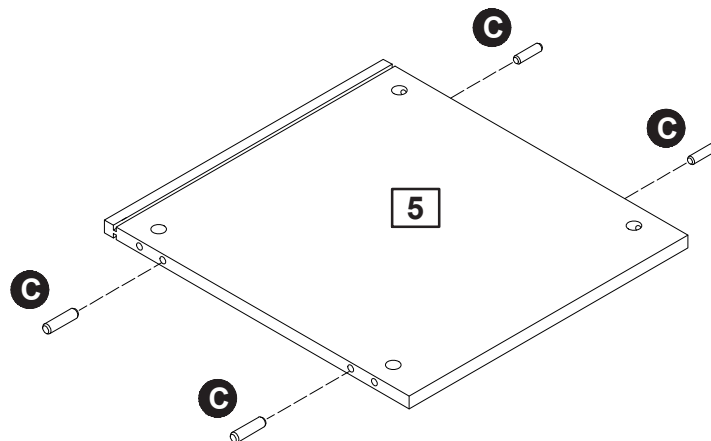


Step 8

B



B x 2

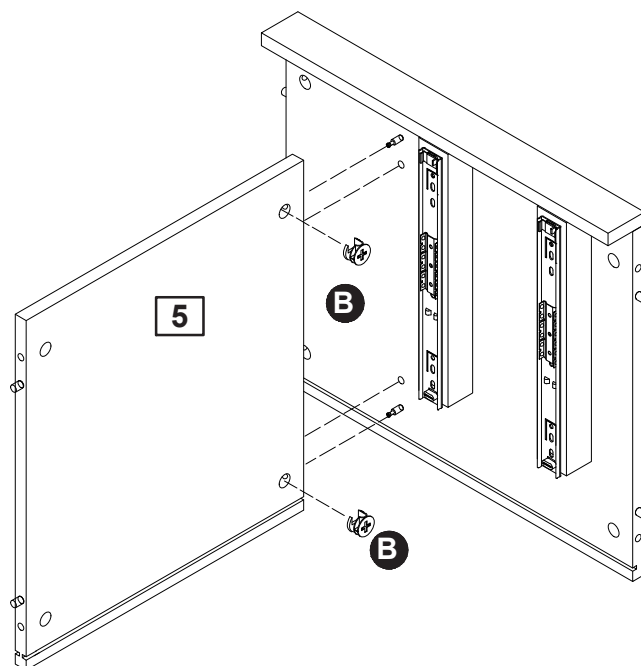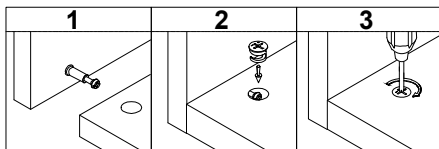



Assembly Instructions

Step 9


B



B x 2

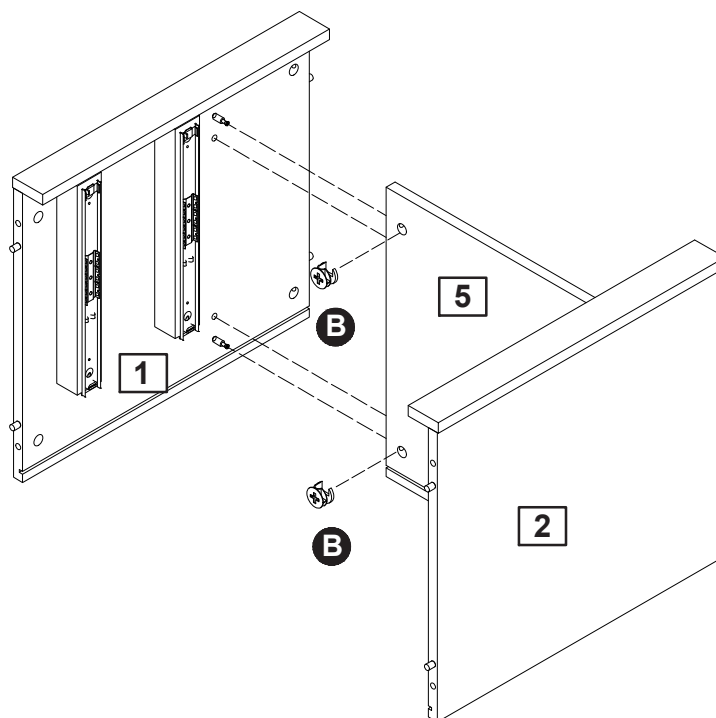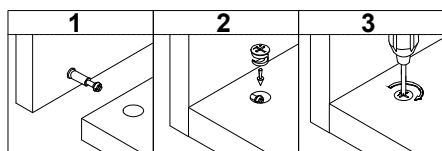

Step 10

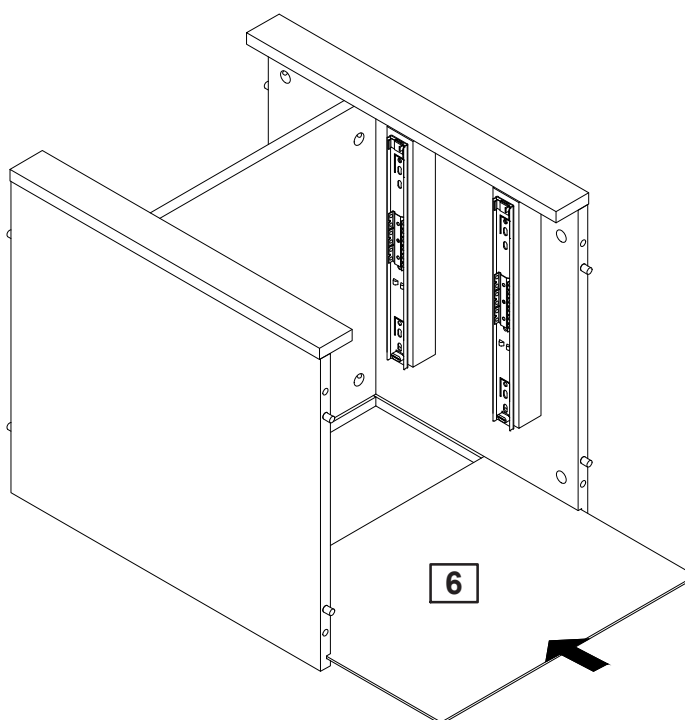


Assembly Instructions

Step 11

A



A x 8

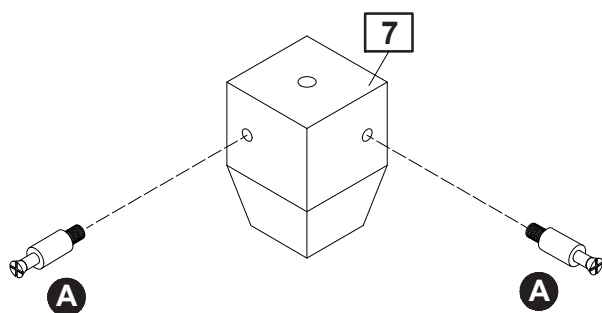



X4

Step 12

B



B x 8

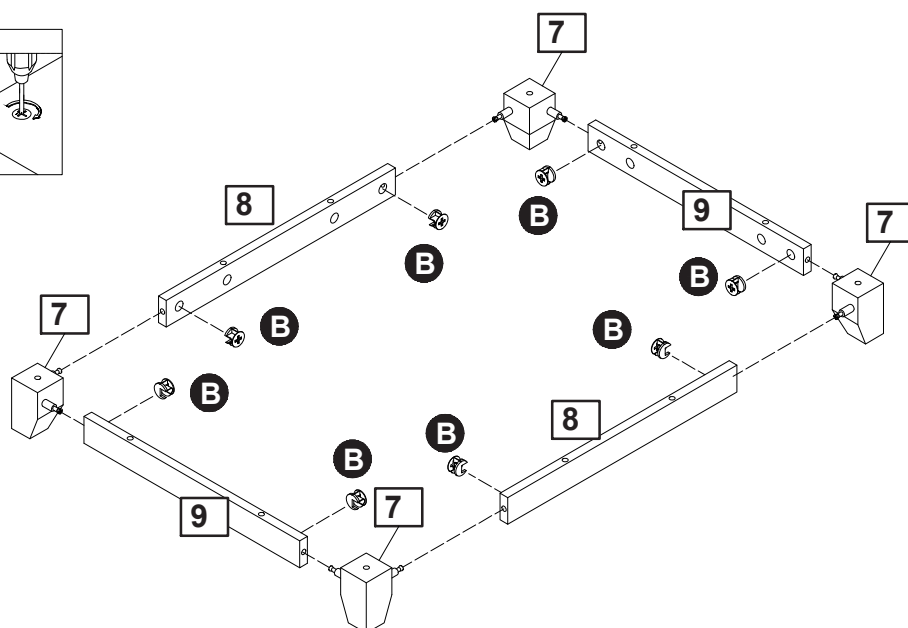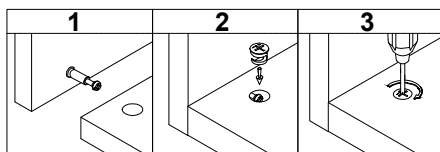


Assembly Instructions

Step 13

A



A x 8

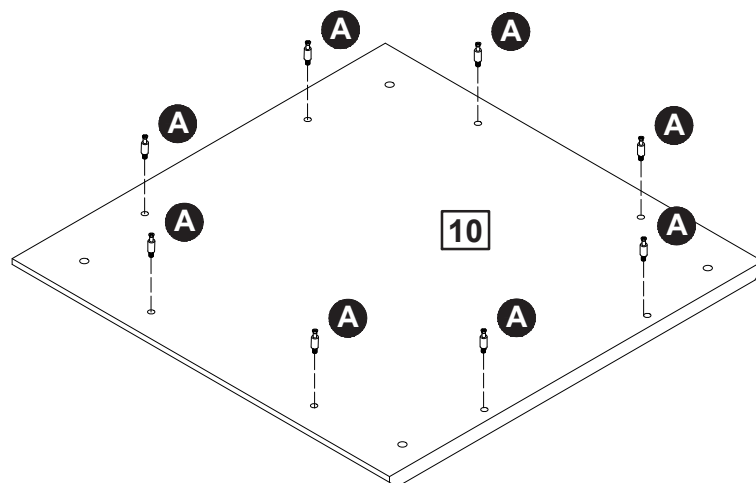


Step 14

B




B x 8

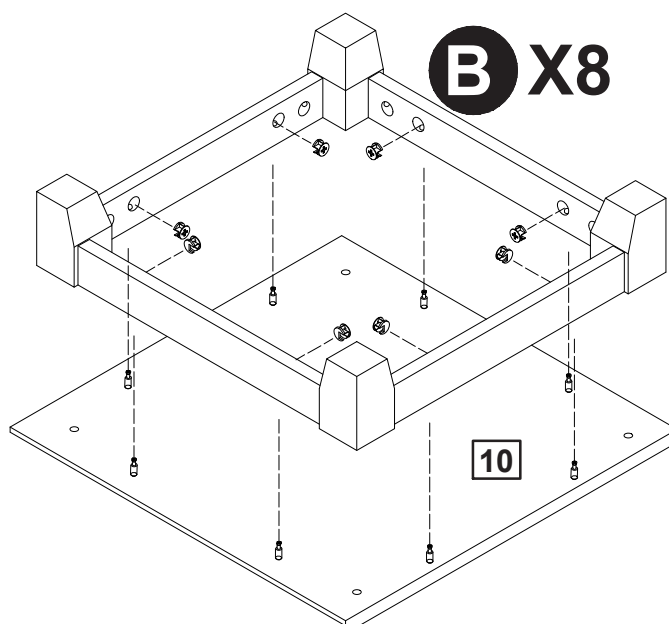


Assembly Instructions

Step 15

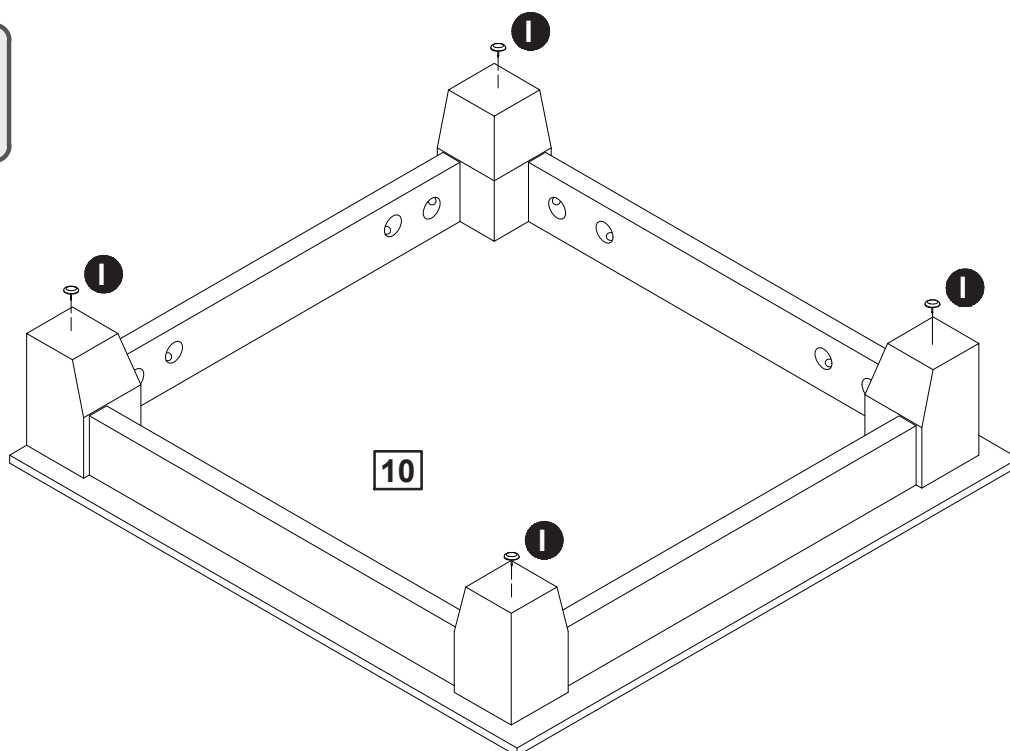

Step 16

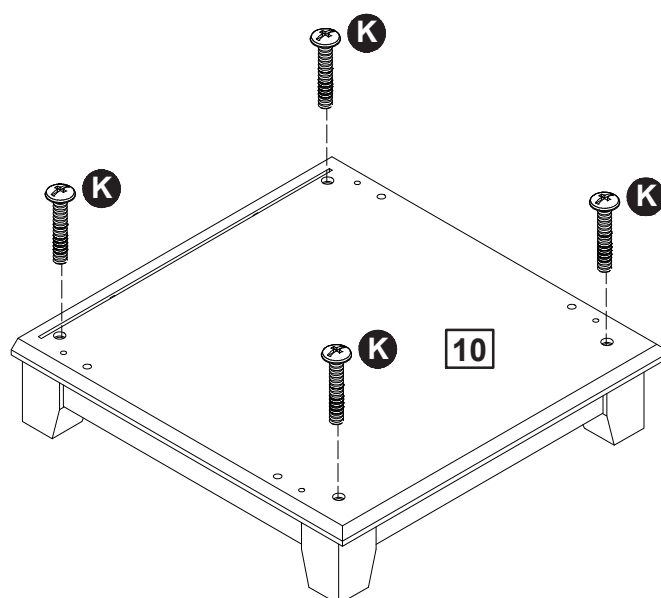


Assembly Instructions

Step 17

A



A x 4


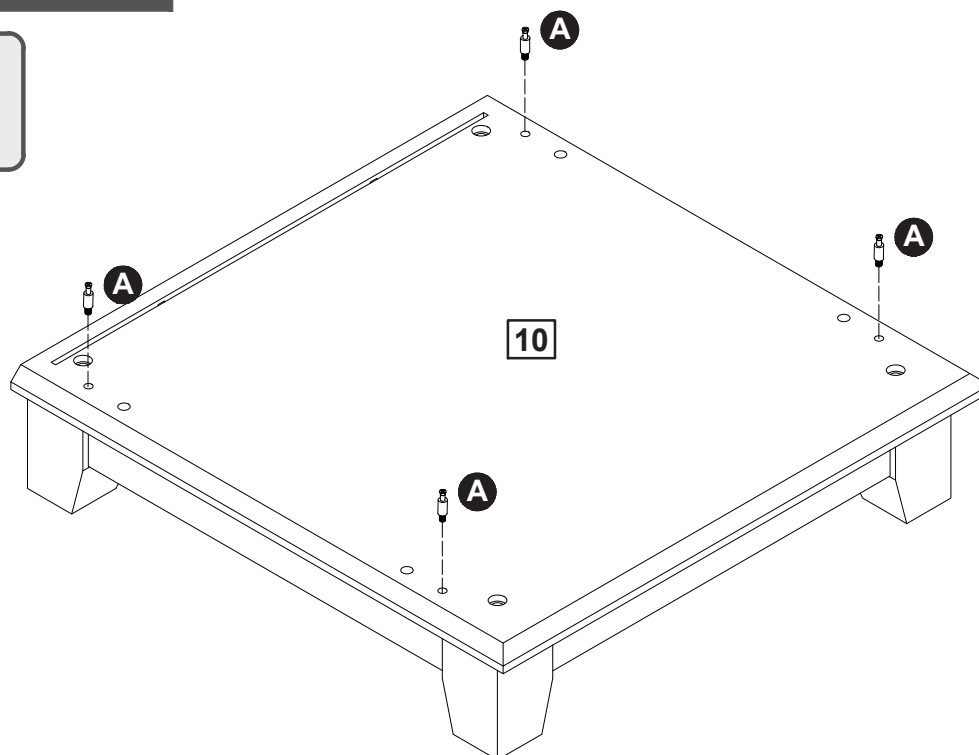


Step 18

B




B x 4

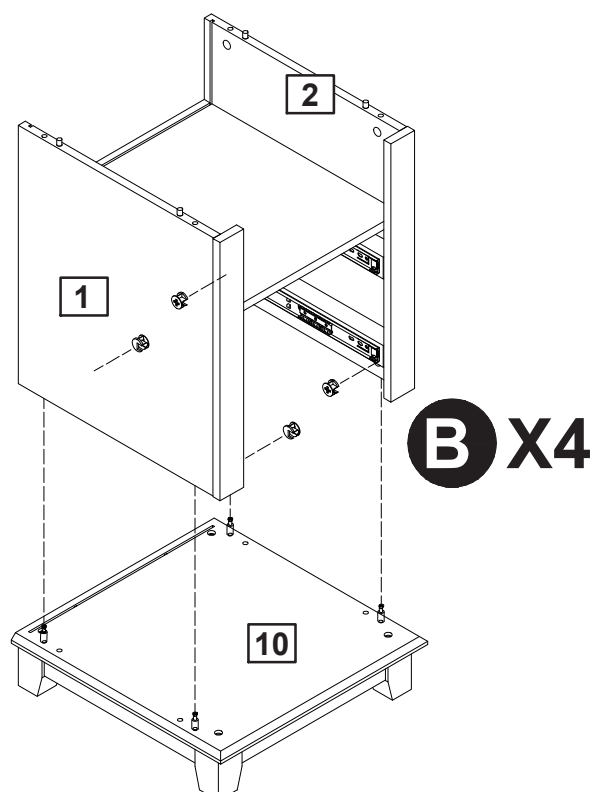
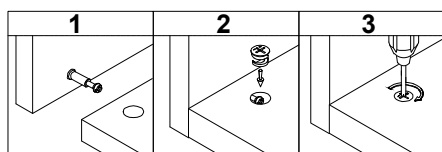


Assembly Instructions

Step 19


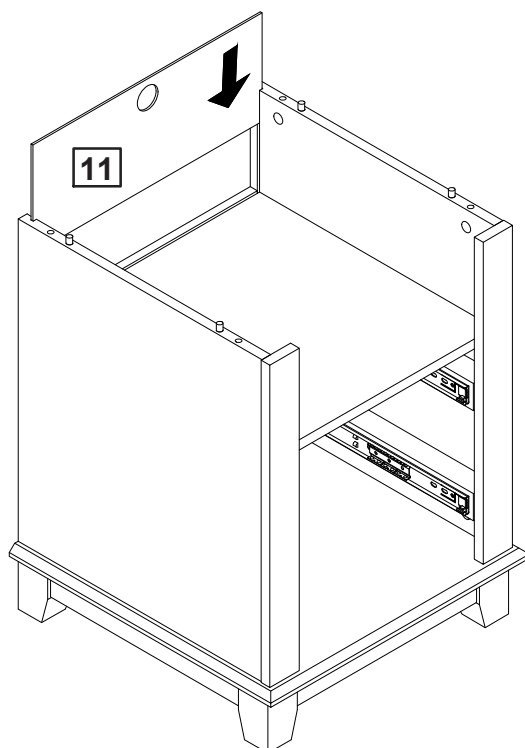


Step 20

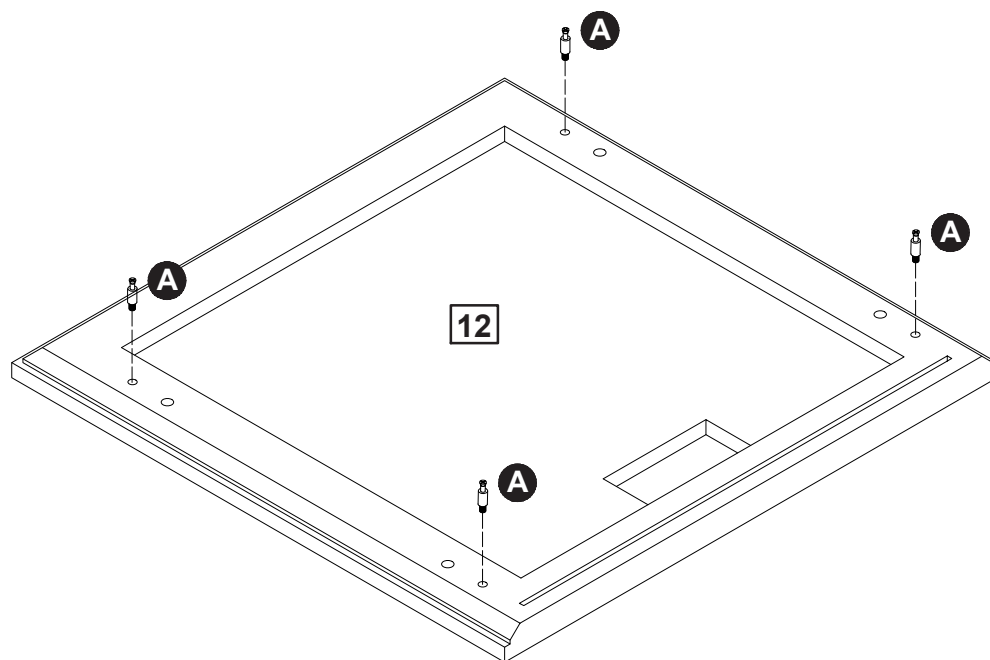
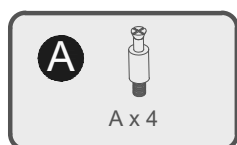


Assembly Instructions

Step 21

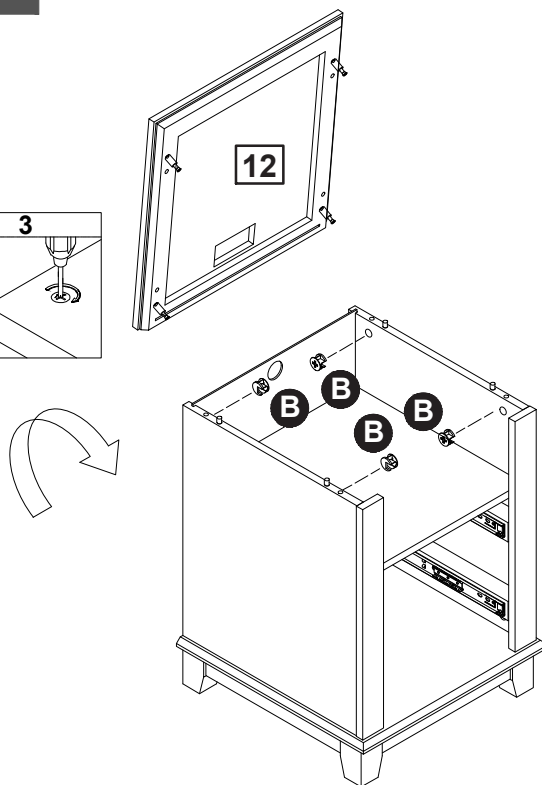
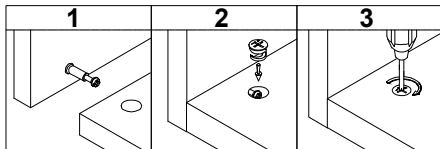


Step 22

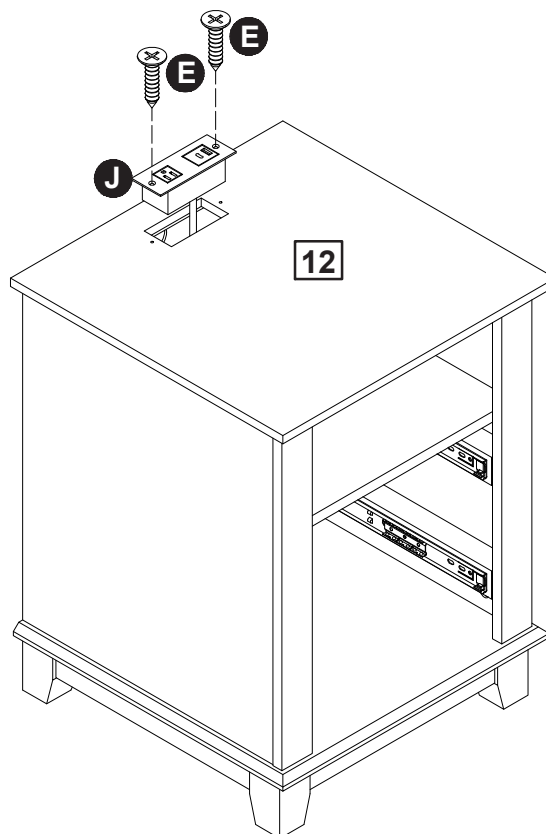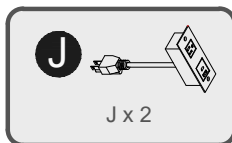



Assembly Instructions

Step 23

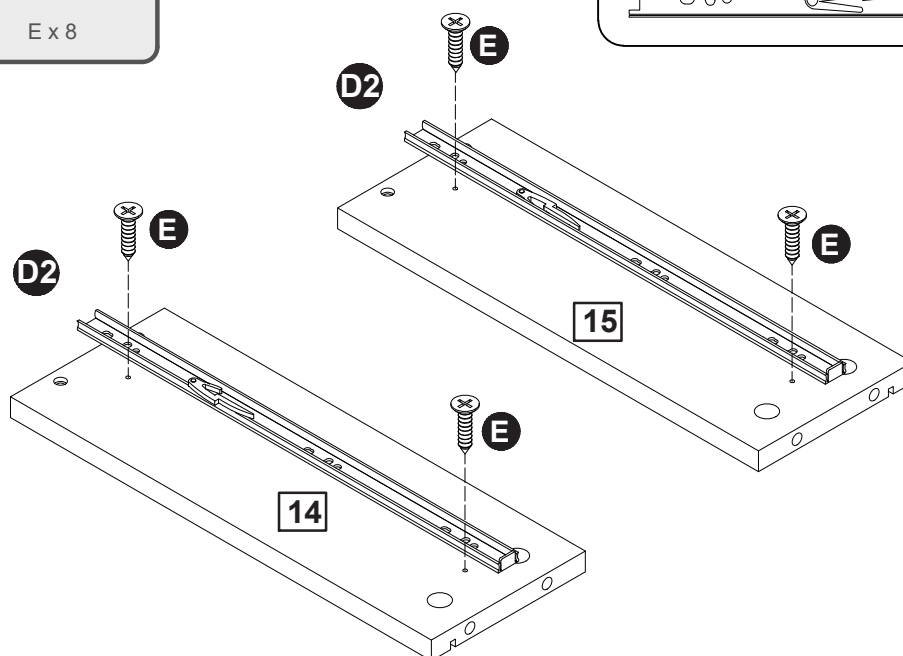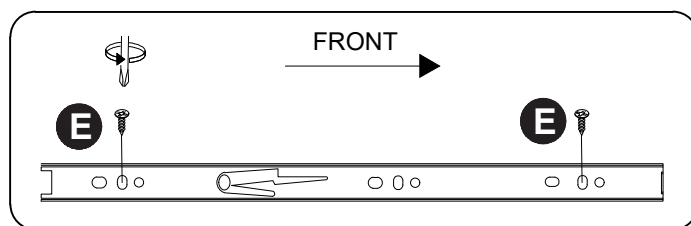

X2

Step 24

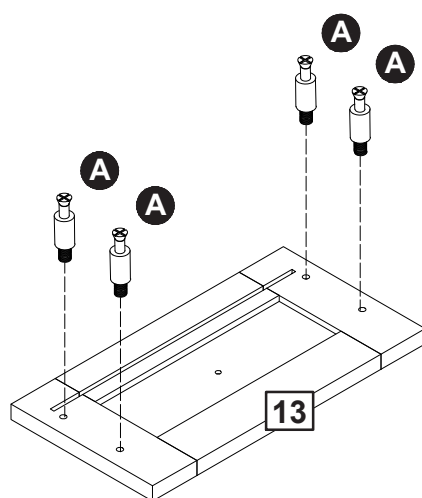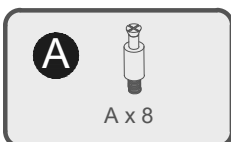

X2



Assembly Instructions

Step 25

B




B x 8

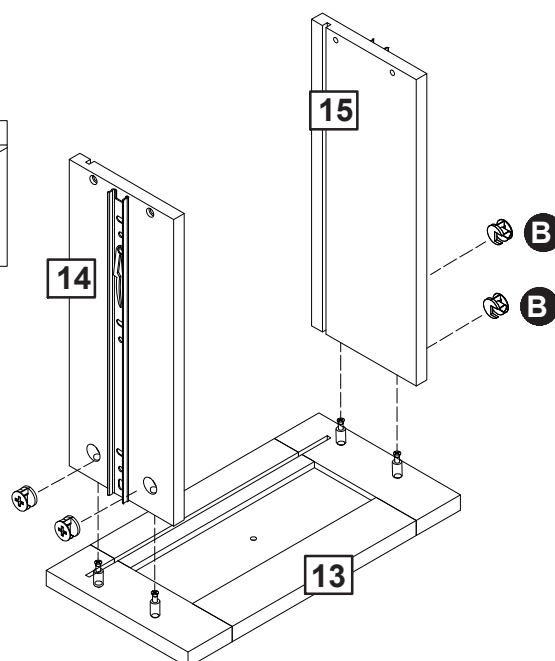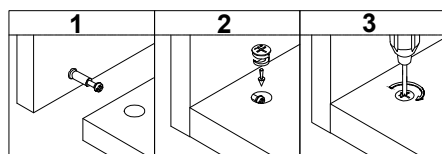

X2


Step 26

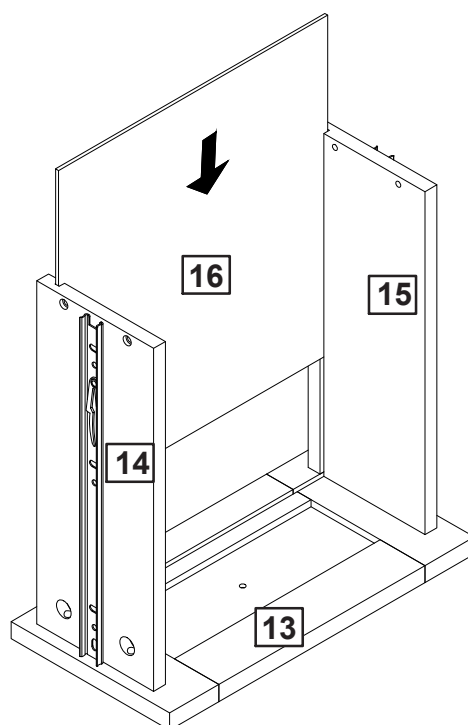


X2

Assembly Instructions

Step 27

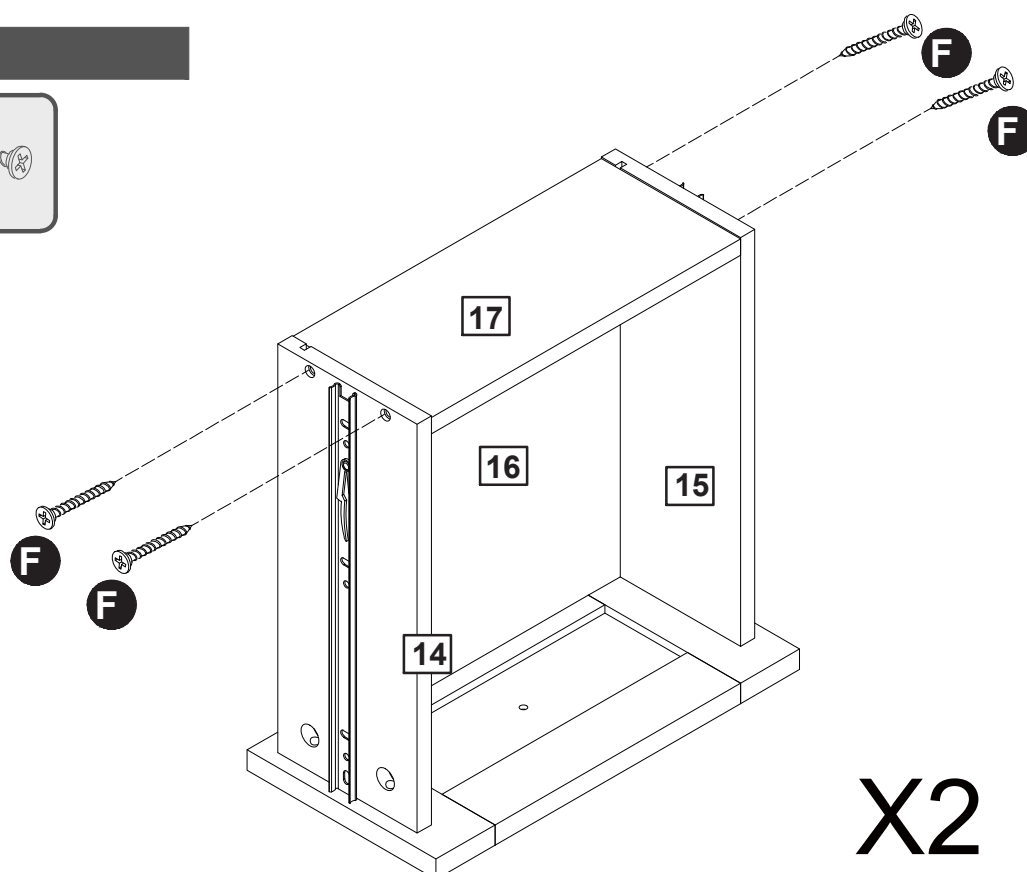


Step 28

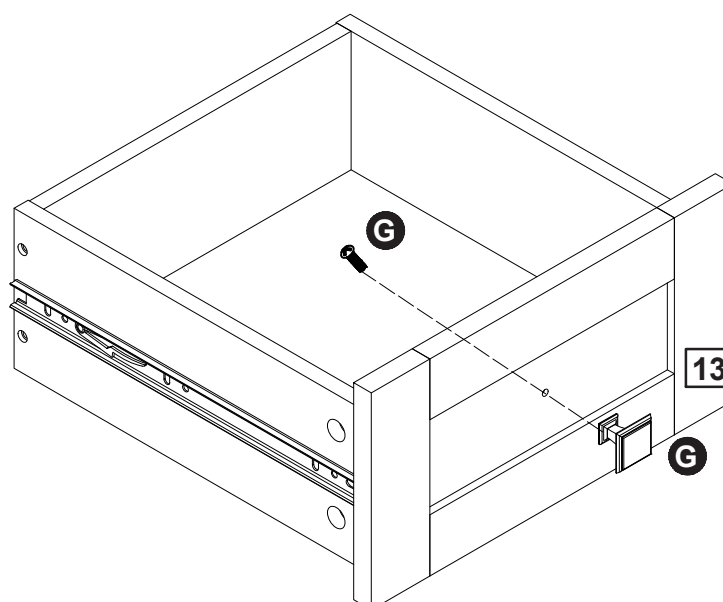

Assembly Instructions


Step 29

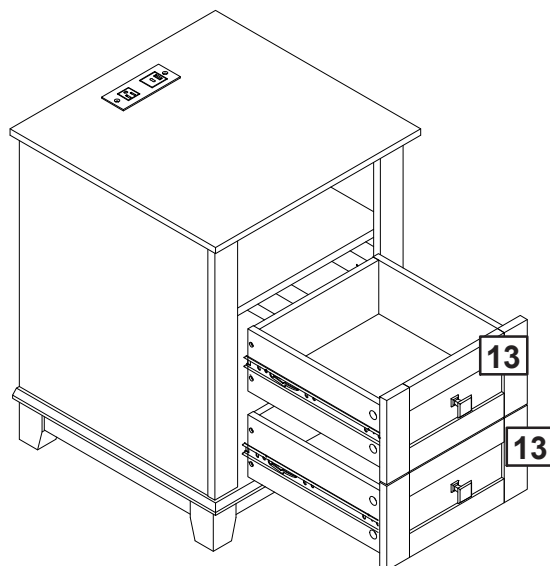



Attention:

1. Align the slide runners on the drawer with the unit and push it carefully inside until it stops.


★ If the drawer does not go in smoothly please take it out and repeat the step.

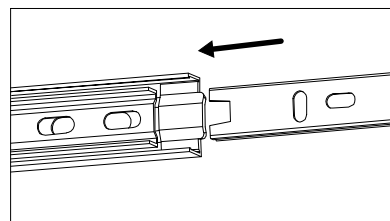

Step 30

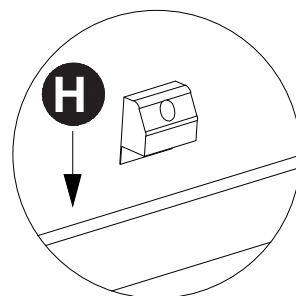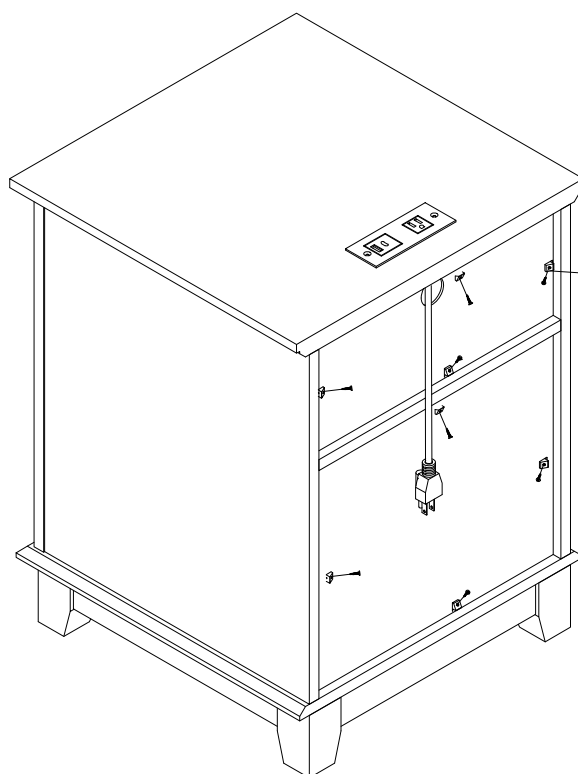

H X8

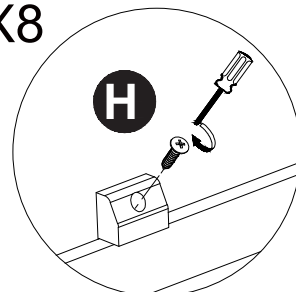

Assembly Instructions

Step 31



Assembly is complete.