


2 Drawer Cabinet

Assembly Instructions - Please keep for future reference

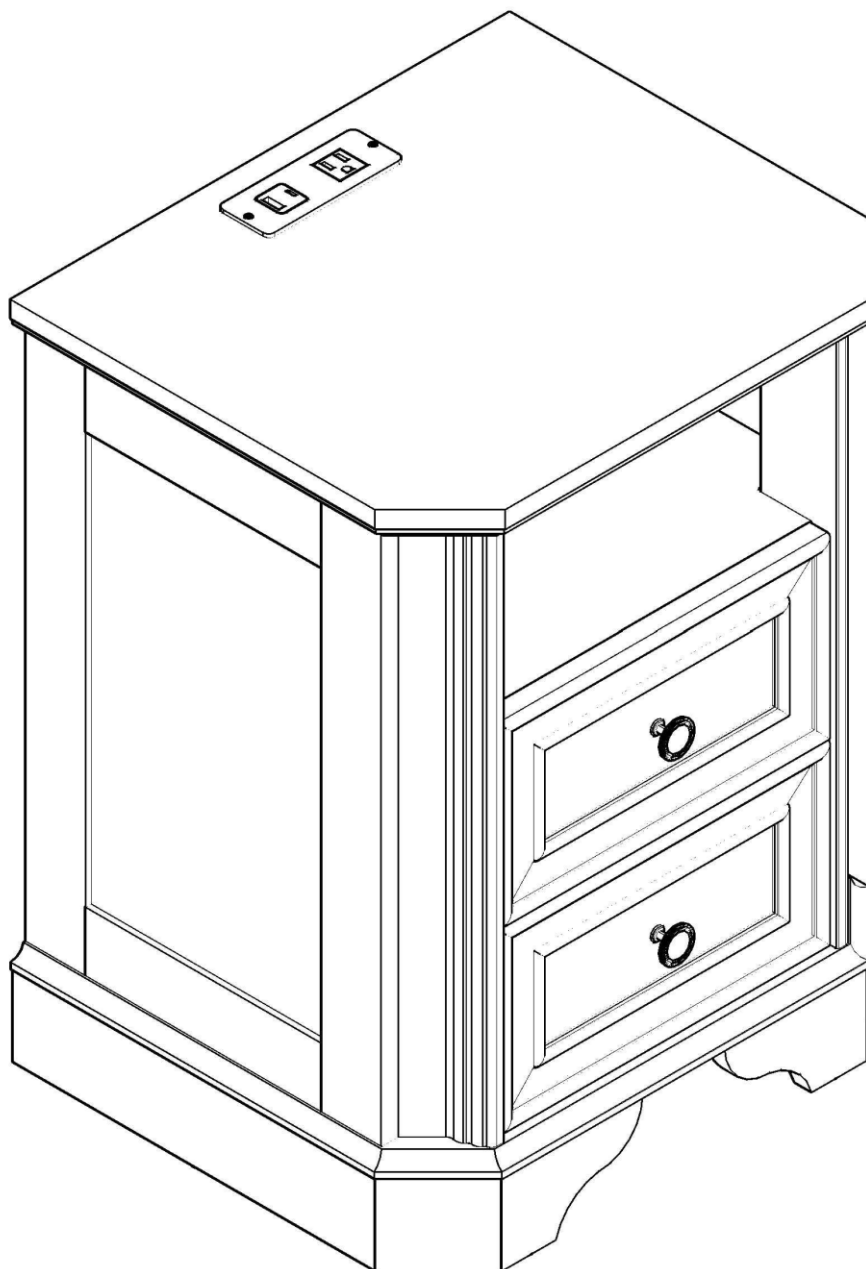

Dimensions

Width-18 inch
Depth-15.6 inch
Height-24 inch

Any question please feel free to contact us:
support@amer-life.com TEL:(901) 347-2181
We will provide further assistance within 24 hours

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.


- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- Parts of the assembly will be easier with 2 people.

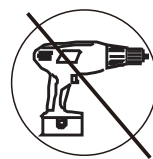

power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.

- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time

Do not place heavy items in the top drawers























Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

Components - Panels














Please check you have all the panels listed below

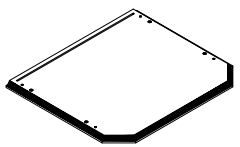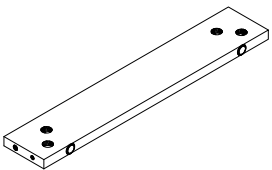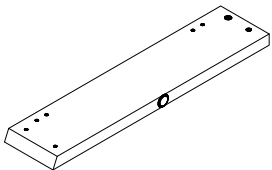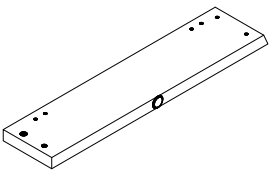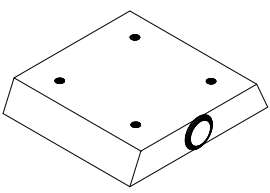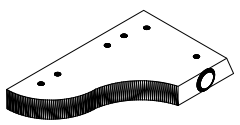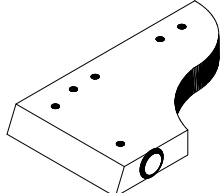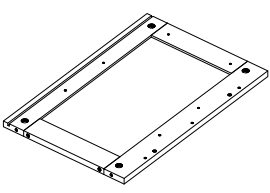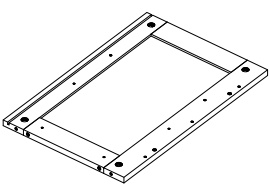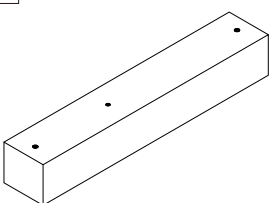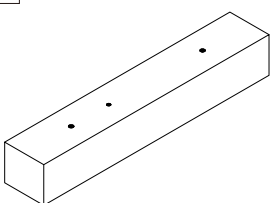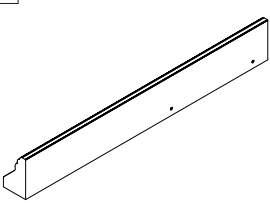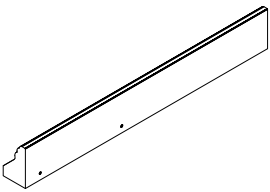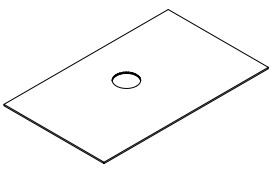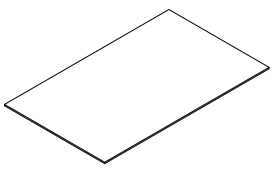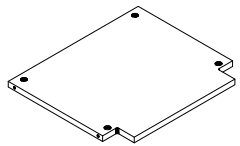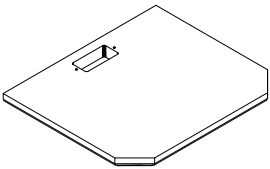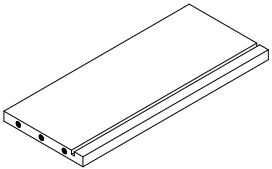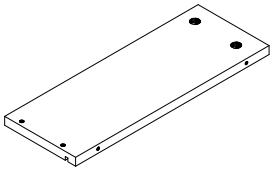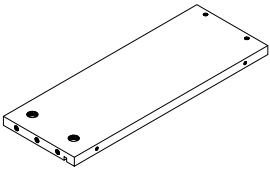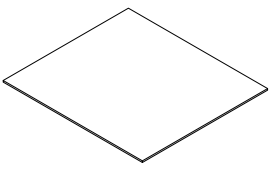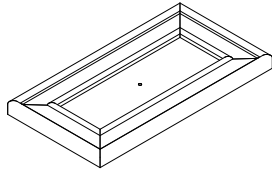1  (456*394*15mm)*1	2  (422*75*15mm)*2	3  (334.5*75*15mm)*1	4  (334.5*75*15mm)*1
5  (81.5*75*15mm)*2	6  (130*75*15mm)*1	7  (130*75*15mm)*1	8  (490*328*15mm)*1
9  (490*328*15mm)*1	10  (288*50*45mm)*2	11  (288*50*45mm)*2	12  (490*70*45mm)*1
13  (490*70*45mm)*1	14  (409*250*3mm)*1	15  (409*250*3mm)*1	16  (398*341*15mm)*1
17  (460*396*30mm)*1	18  (258*110*12mm)*2	19  (300*110*12mm)*2	20  (300*110*12mm)*2
21  (269*299*3mm)*2	22  (304*163*21mm)*2		


Components – Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

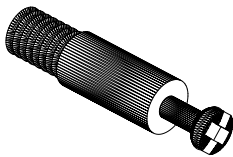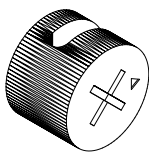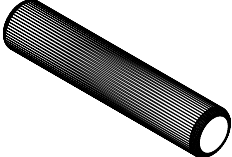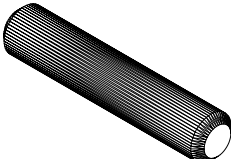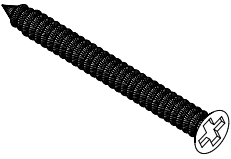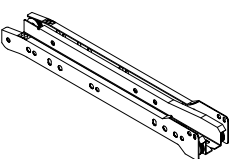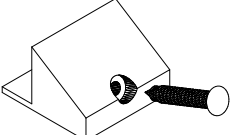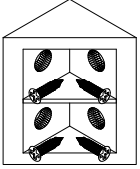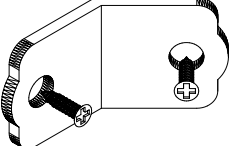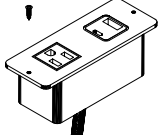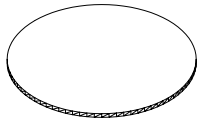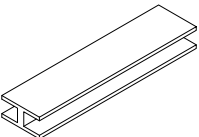A  Cam Bolt*30	B  Cam Lock*30	C  8*30mm Wooden Dowel*16
D  6*30mm Wooden Dowel*8	E  4*35mm Screw*16	F  Drawer slide*2
G  4*13 Screw*16	H  Handle*2	I  Back panel stiffener *8
J  90° plastic corner brace *8	K  135° Metal corner brace*8	L  Socket*1
M  Sticker*8	N  Back panel splice strip *1	

Tools required

 Phillips screwdriver
(medium & large)


Ruler - Use this ruler to help correctly identify the screws

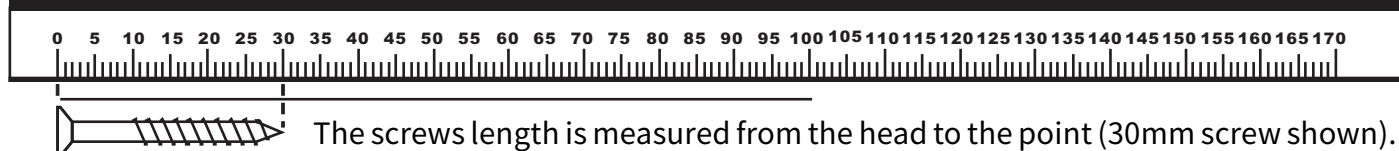

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

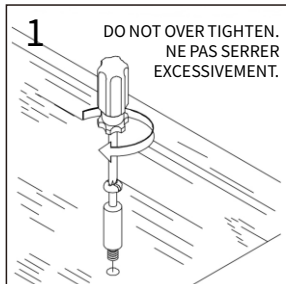


Step 2

Push the male camlock into the entry hole.

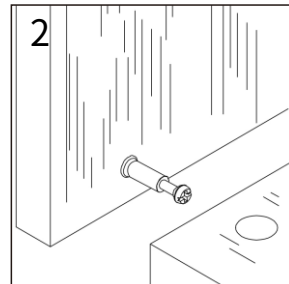




Step 3

Insert the female camlock as shown in the instruction.
Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

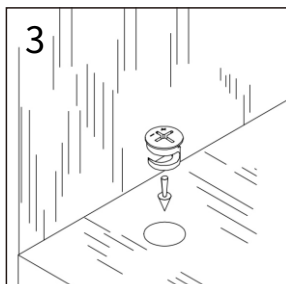

Step 4



Turn the female camlock clockwise with a screwdriver. You should feel a click when the camlock is locked in place. The joint is now secure.

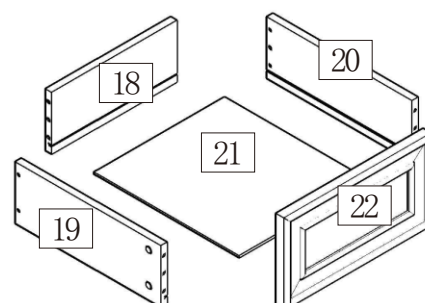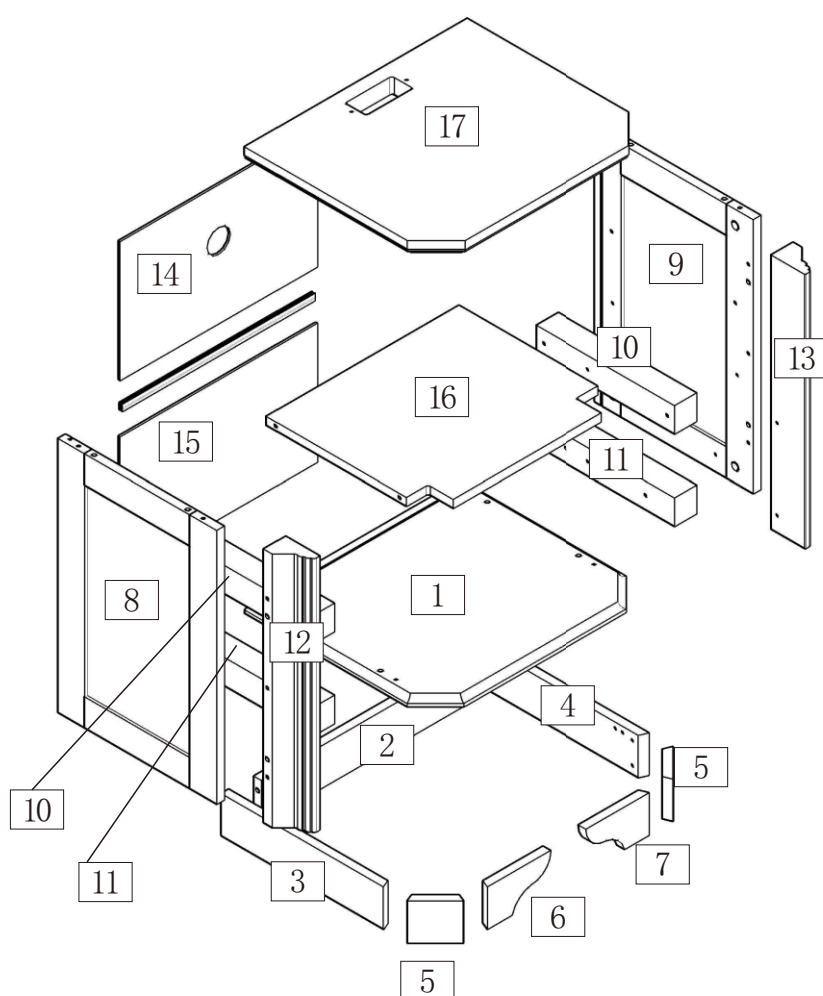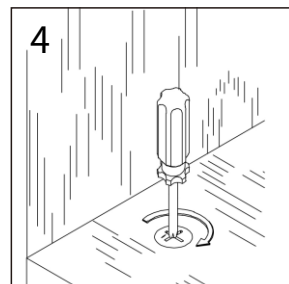

×2



Assembly instructions

Step 1

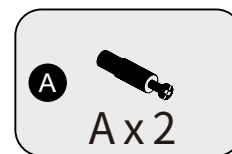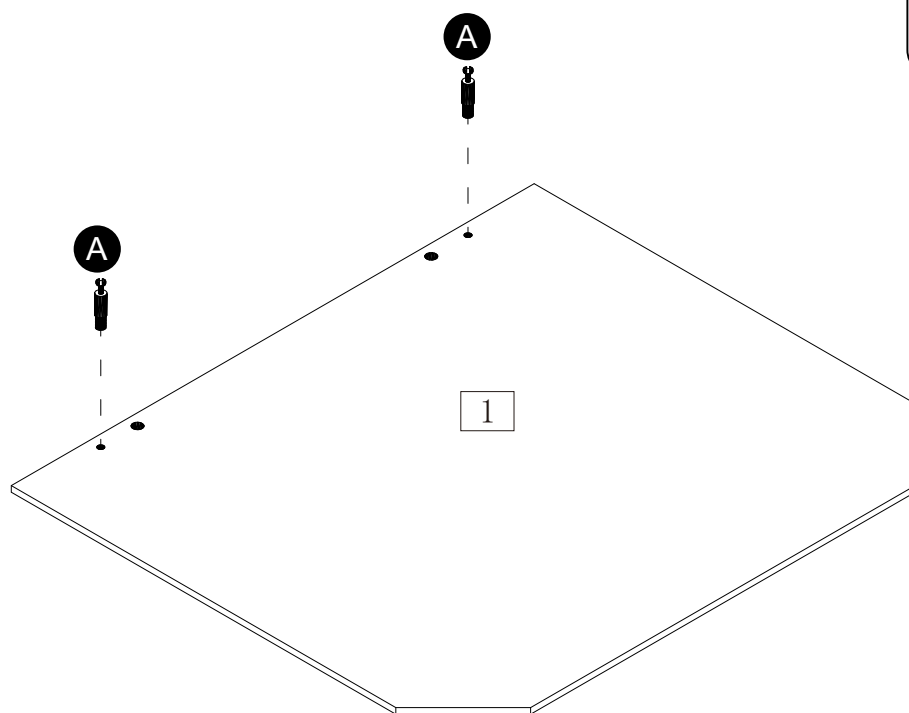

Install Cam Bolt (A) on the bottom panel (1).




Step 2

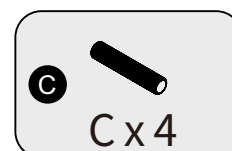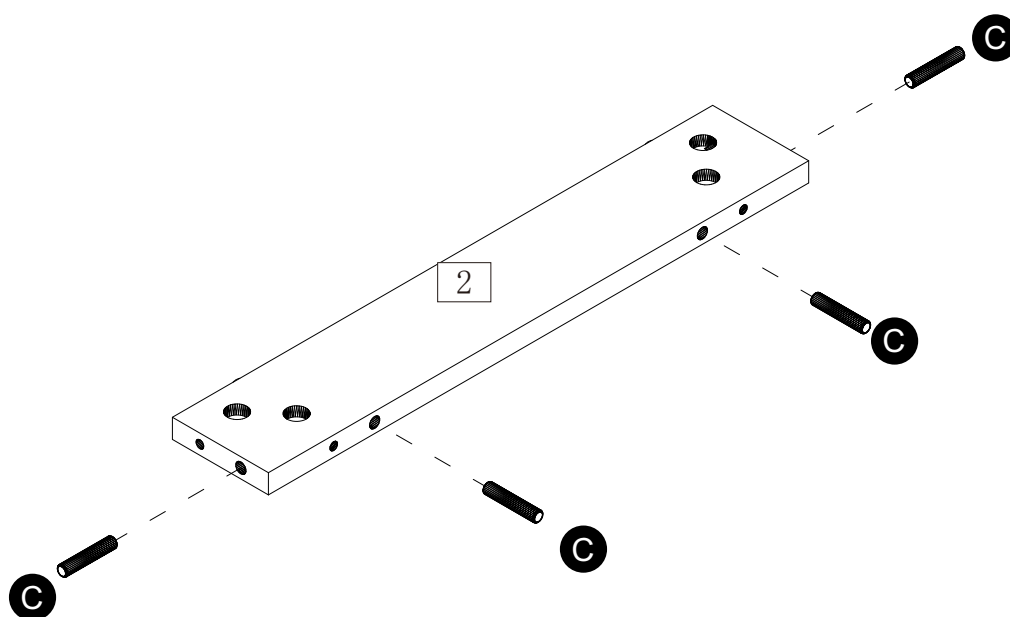

Install Wooden Dowel (C) on the part (2)



Assembly instructions

Step 3

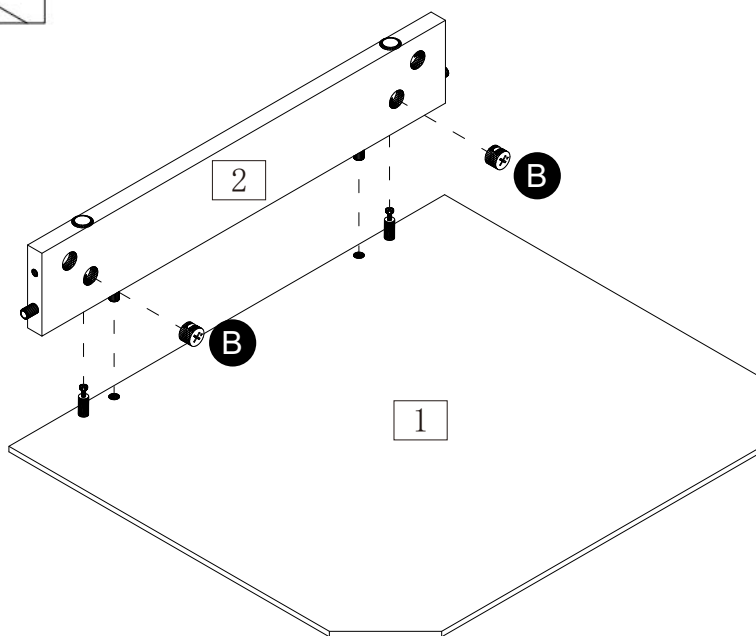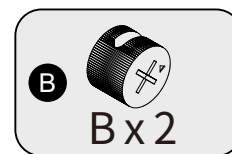

Attach part (2) on part (1) , then use Cam Lock (B) to lock it.




Step 4

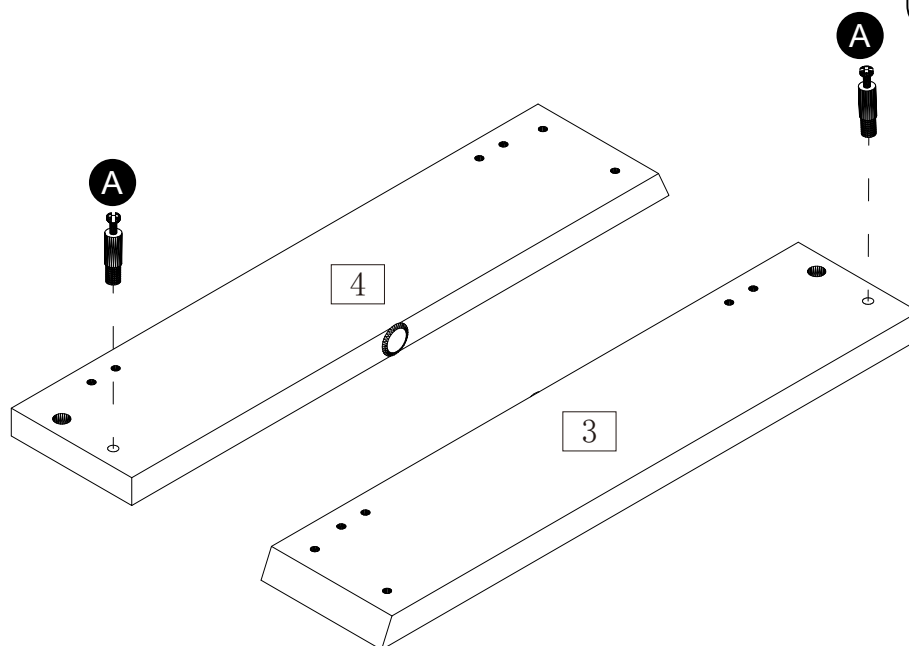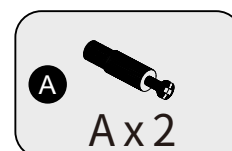

Install Cam Bolt (A) on part (3.4)


Assembly instructions

Step 5

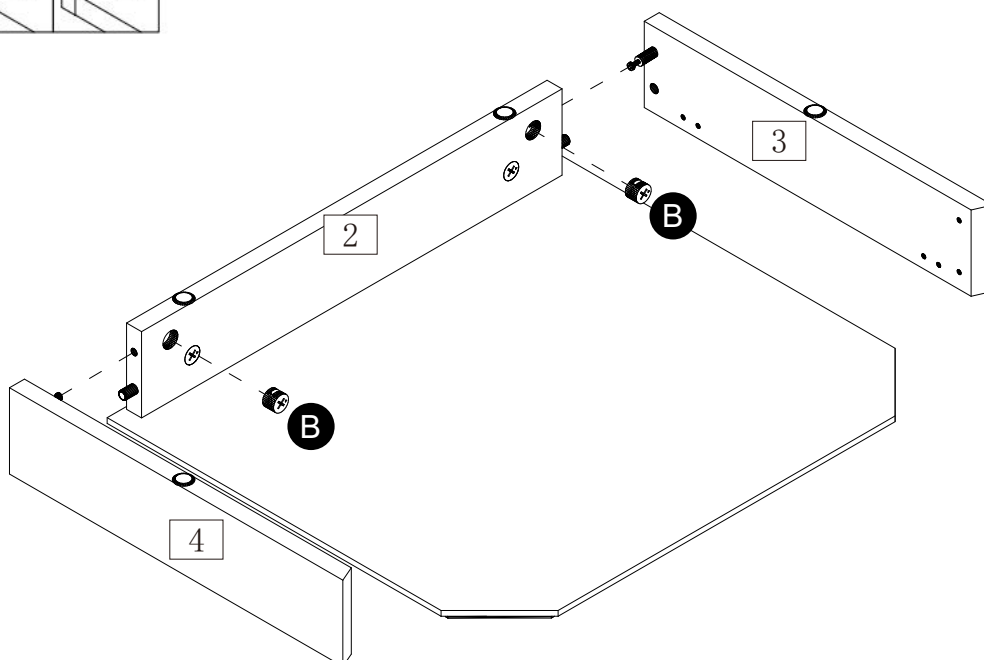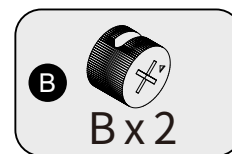

Attach part(2) on part(3.4), then use Cam Lock(B) to lock it.


Step 6

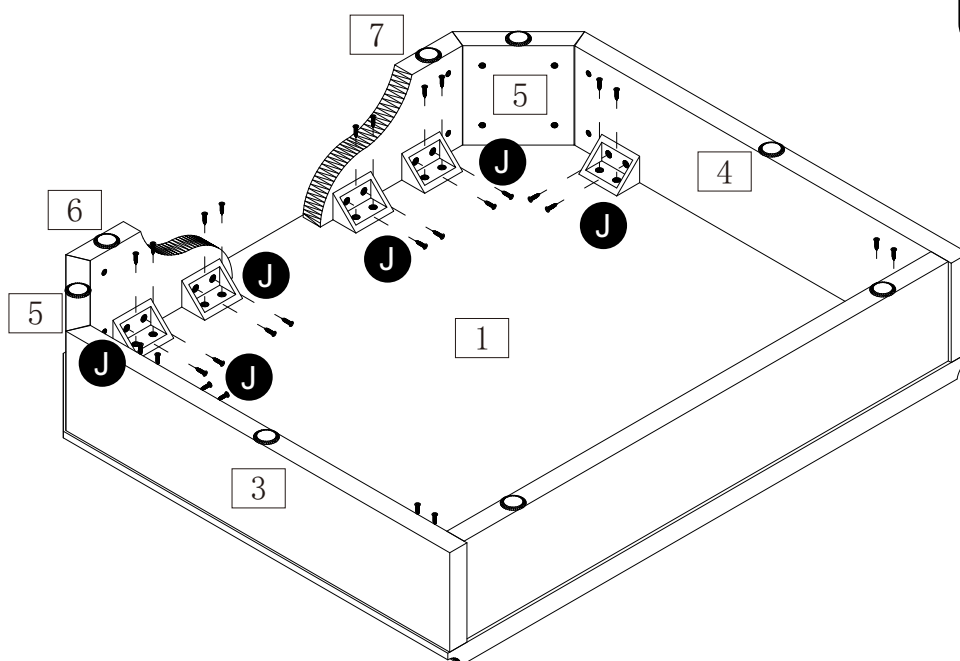

Use part(J) to connect part(3.4.5) and part (6.7) with part(1), then lock it.



Assembly instructions

Step 7

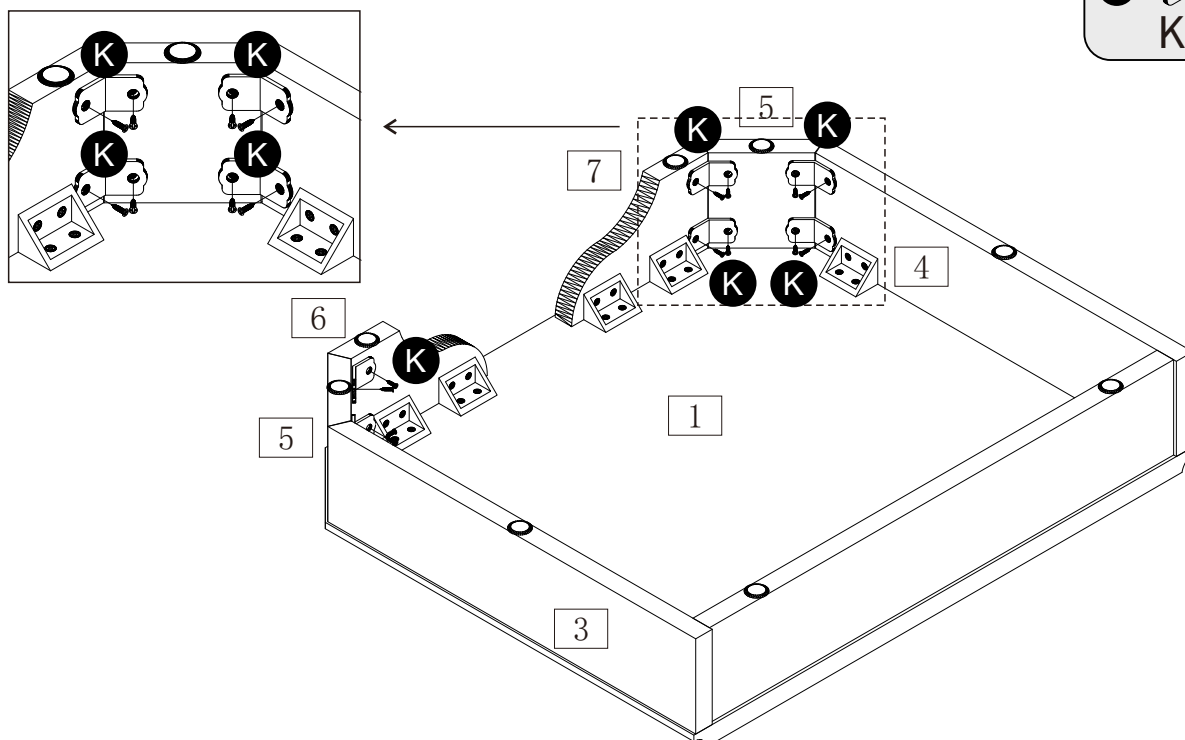

Install part(K) in the location hole on part(3.4.5) and part (6.7)


Step 8

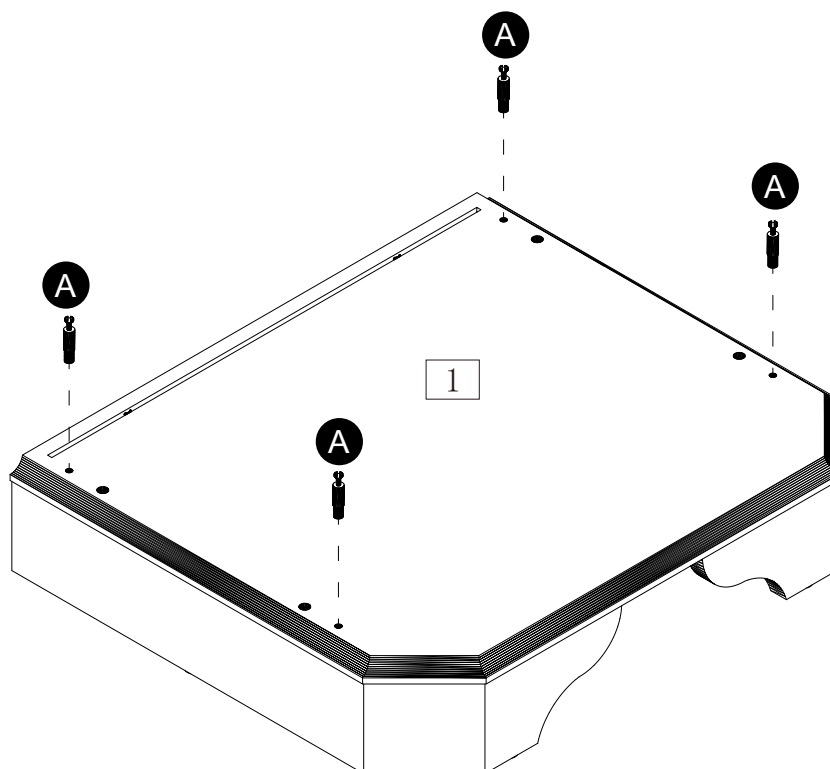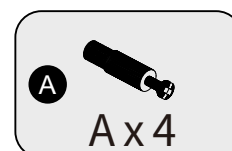

Install Cam bolt(A) on connected part(1)


Assembly instructions

Step 9

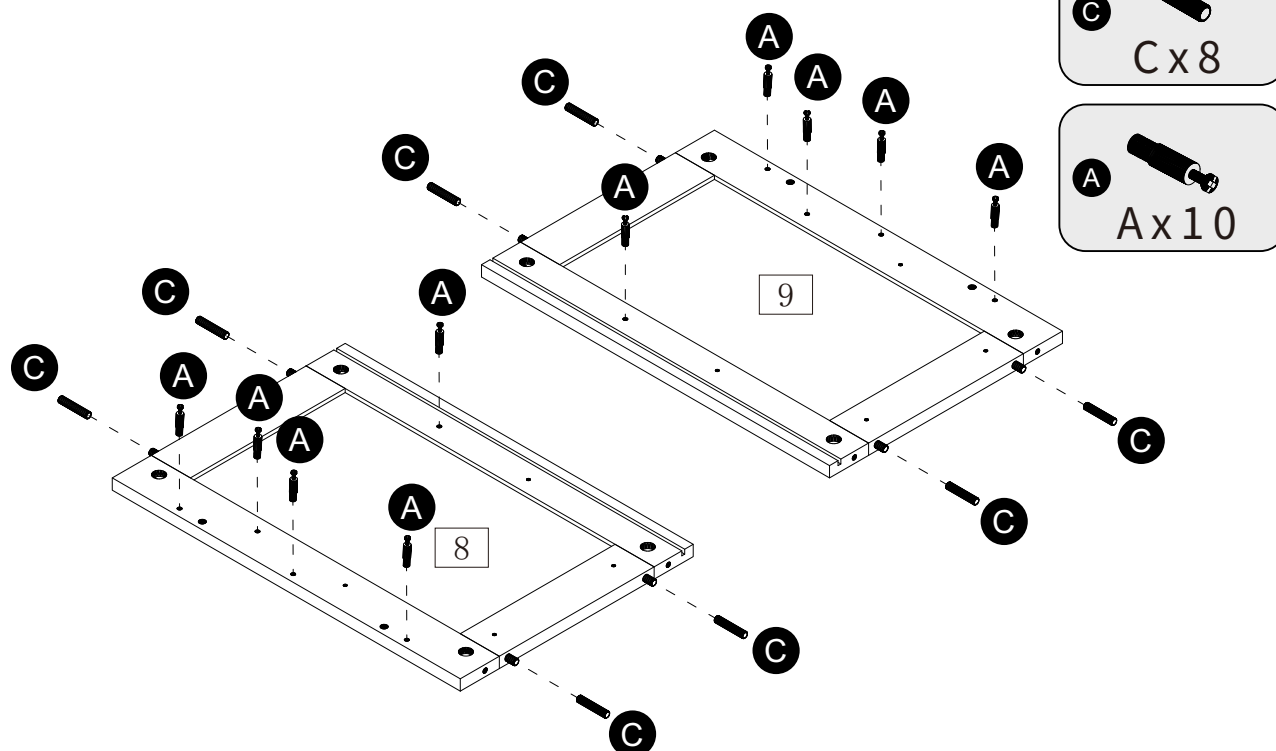

Install Cam bolt(A)and wooden Dowel (C) on part (8.9)




Step 10

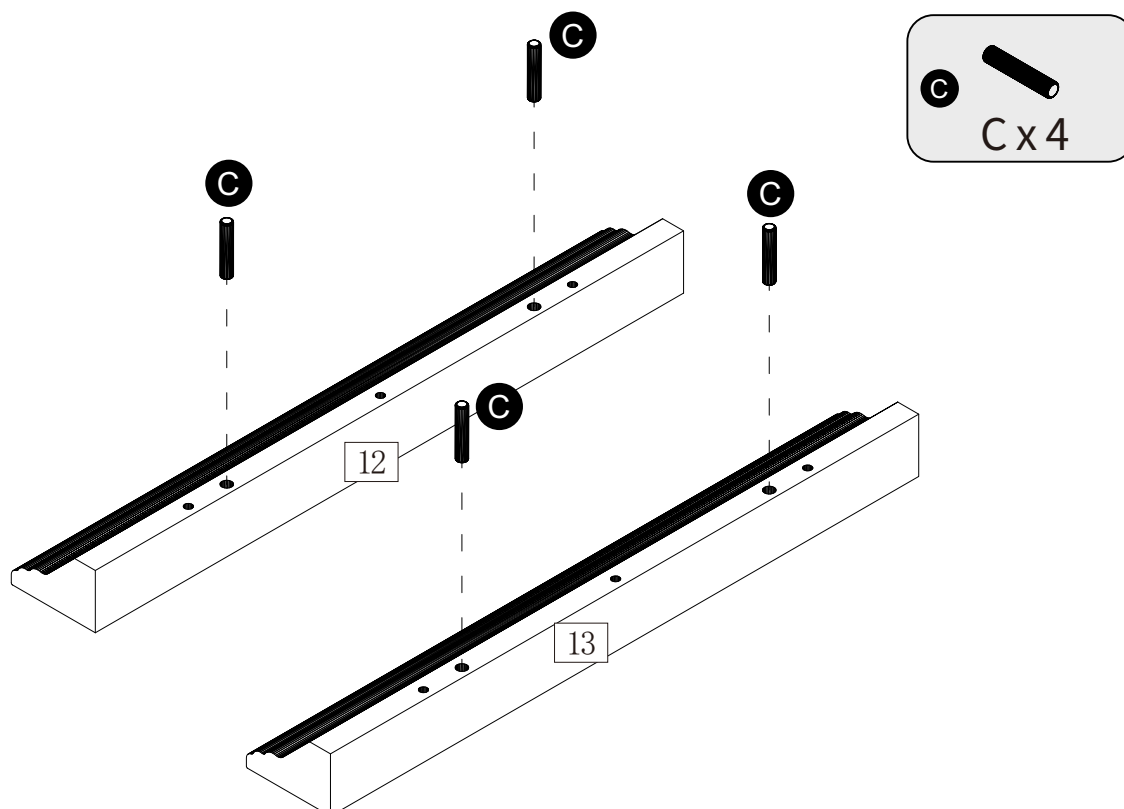

Insert Wooden dowel (C) to part (12.13)



Assembly instructions

Step 11

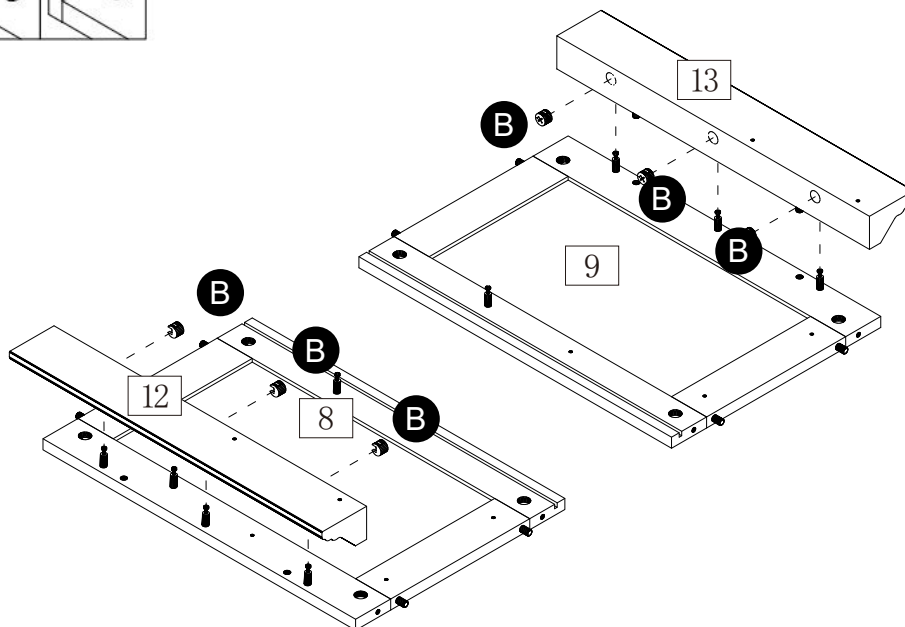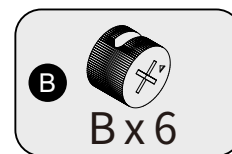

Use Cam lock(B)to lock part(12.13) with part(8.9)




Step 12

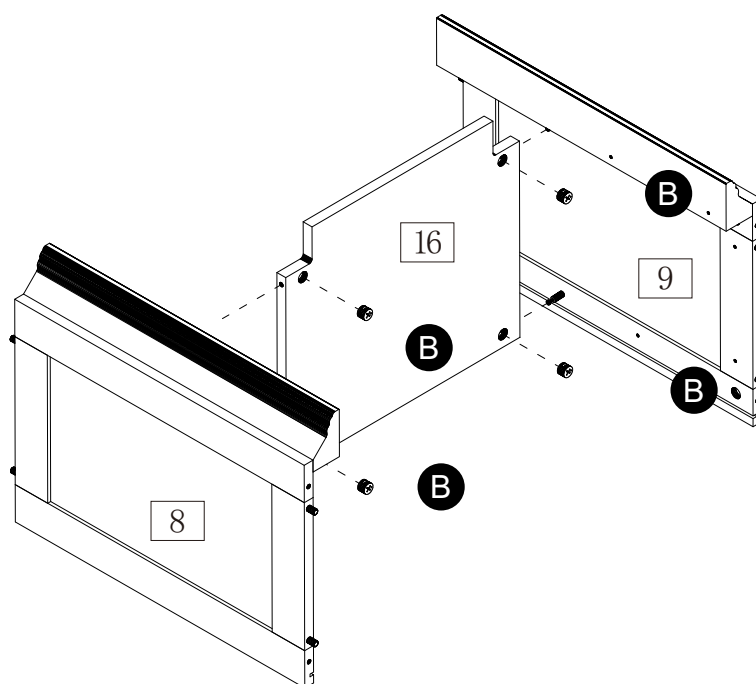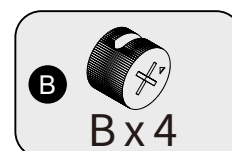

Use Cam Lock (B) to connect part (16) and part (8.9) , then lock it.
Please note that the lock hole faces to the direction of the position holes.

Assembly instructions





Step 13

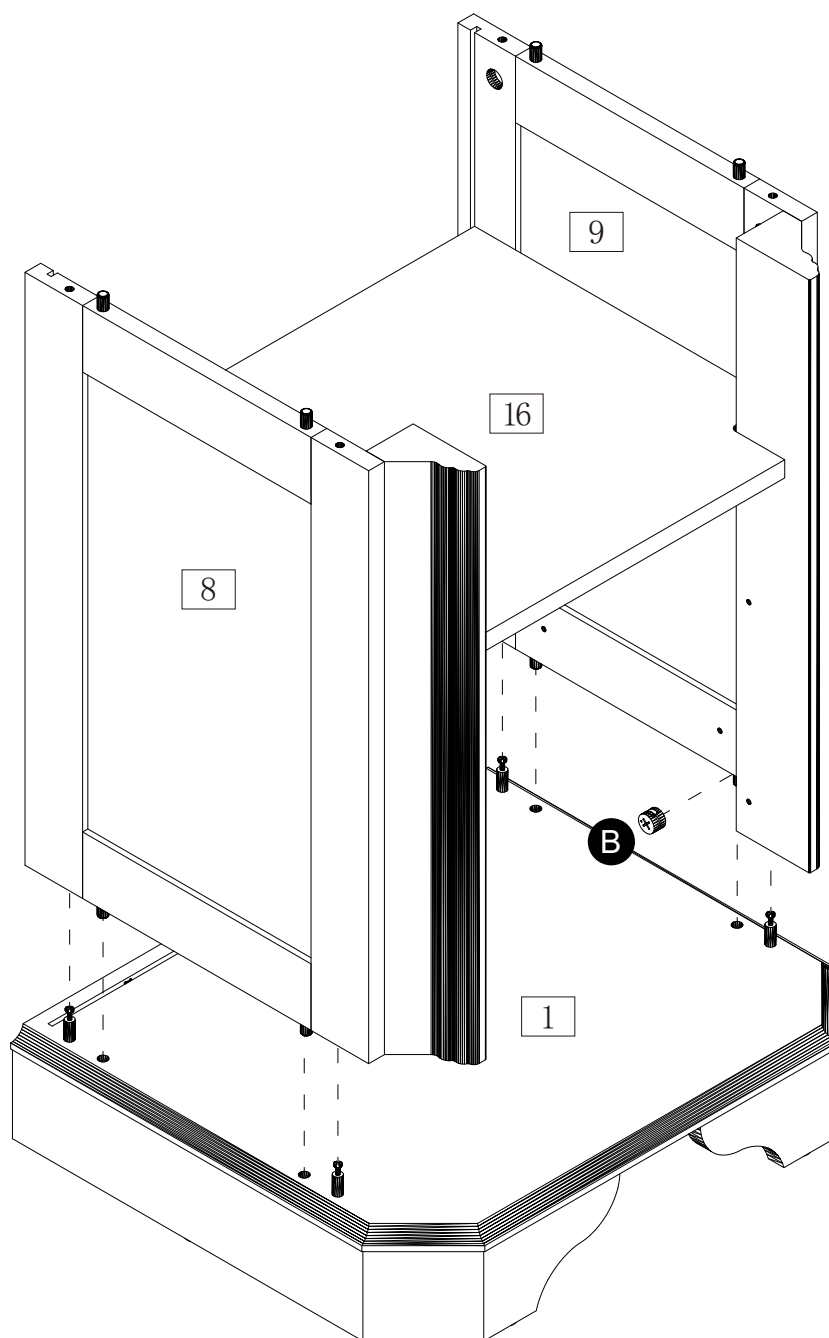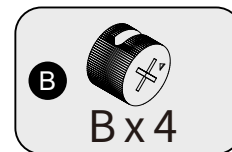

Use Cam Lock (B) to attach connected part(8.9) and part(16) ,
then lock with connected part(1)

Assembly instructions






Step 14

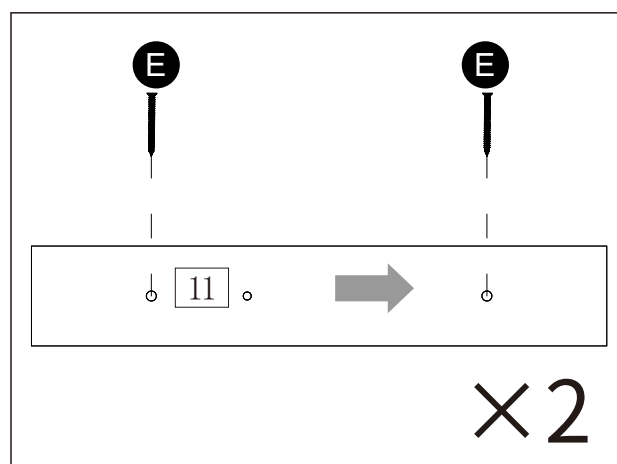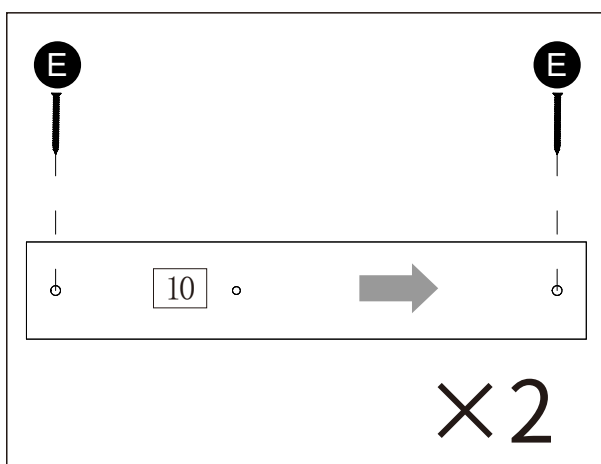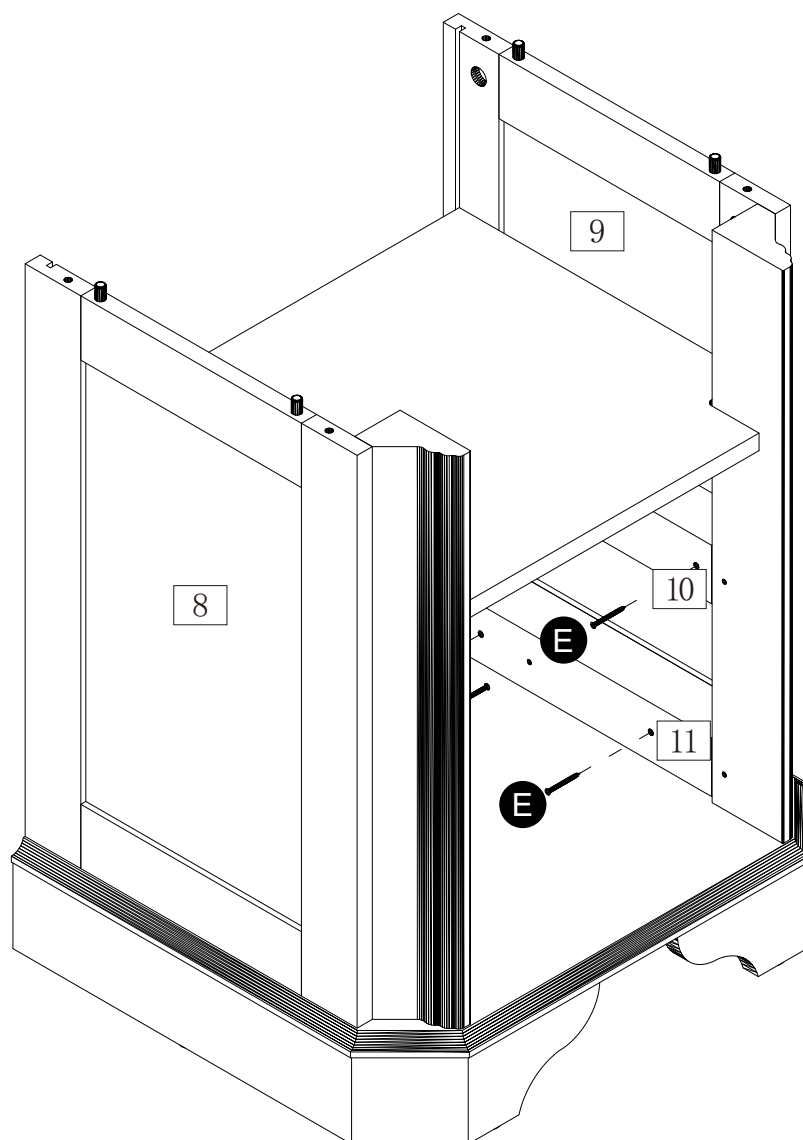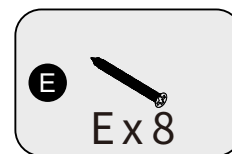

Use Screw(E) to install the part(10.11) on the part(8.9), need align the holes

Assembly instructions




Step 15

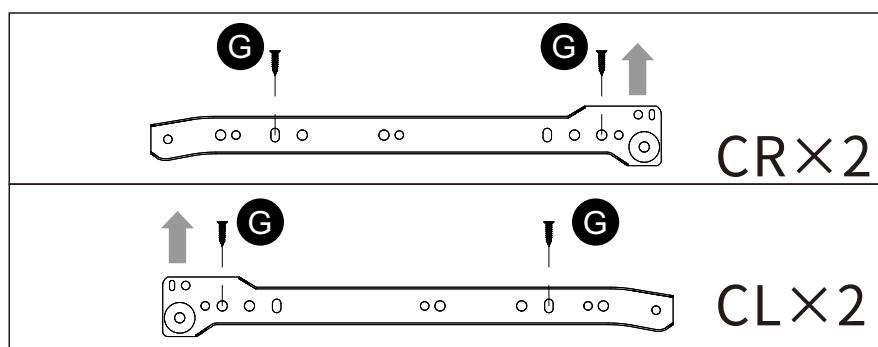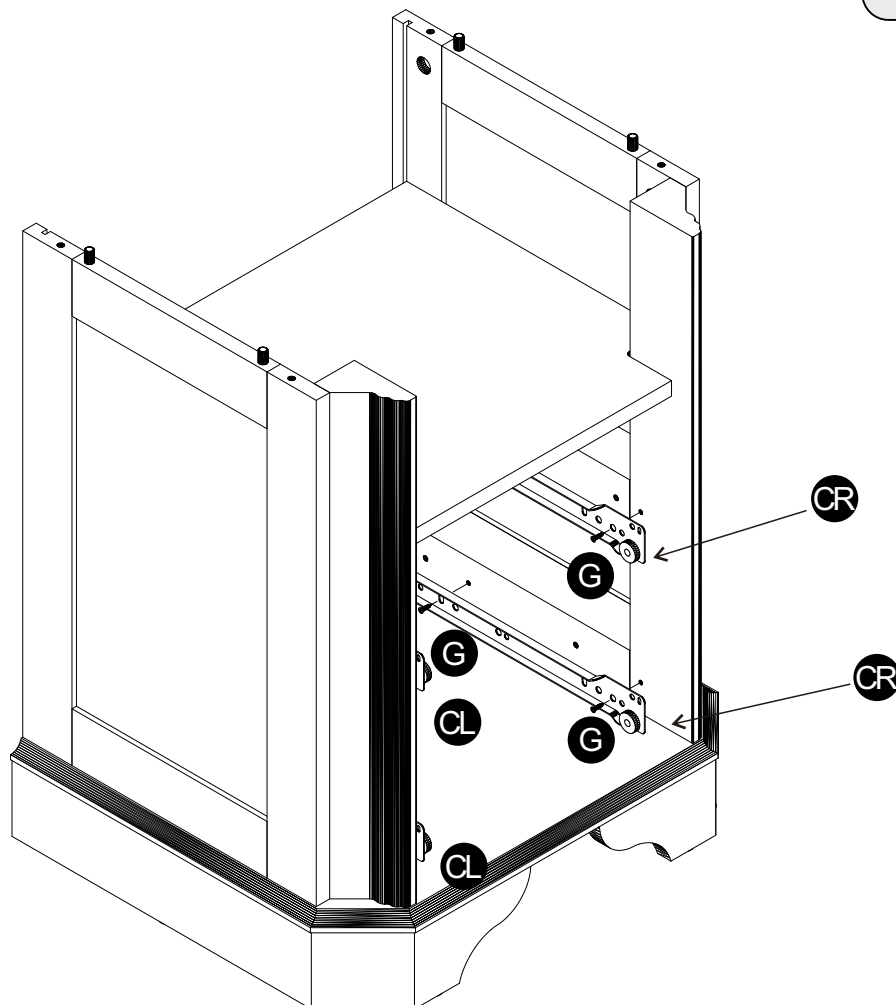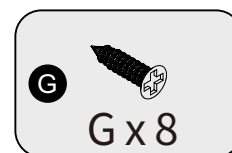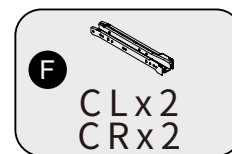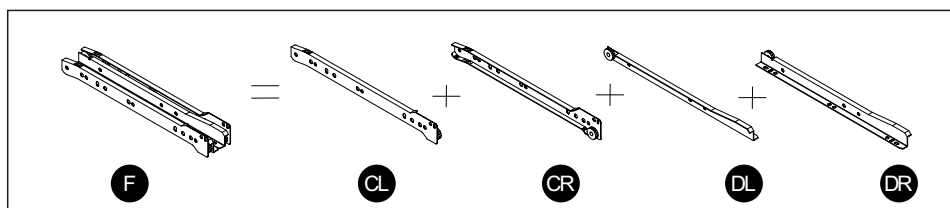

Use screw (G) to install the left part of rail (CL) on the left panel (10.11)
Use screw (G) to install the right part of rail (CR) on the right panel (10.11)

Assembly instructions



Step 16

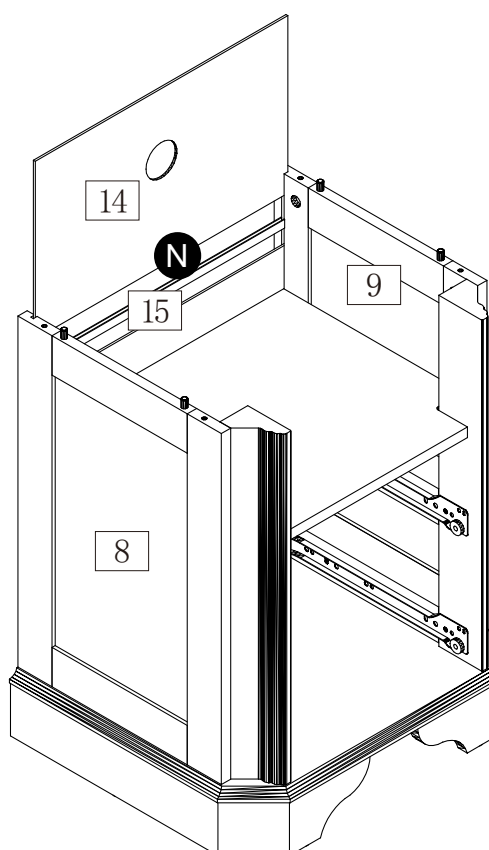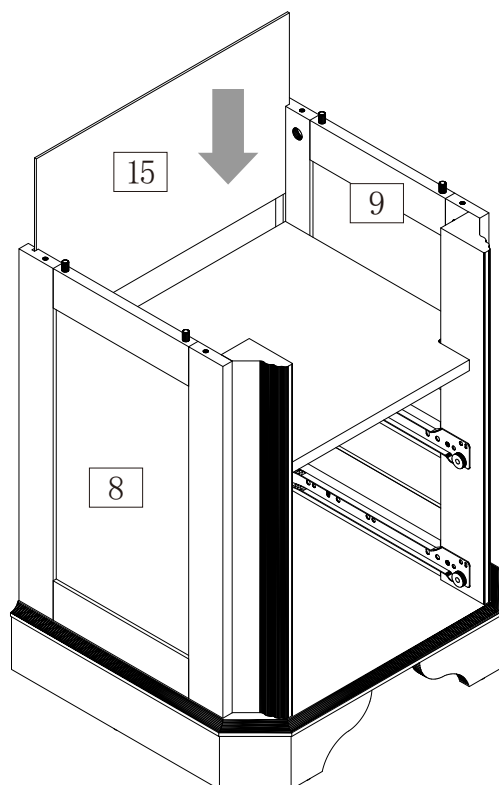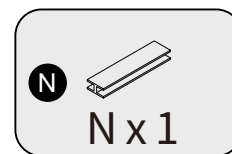

Slide part (15) in part (8.9) .insert part (N) in part (15) .
Insert part (14) in part (8.9) , then slide it in part (N) .



Assembly instructions

Step 17

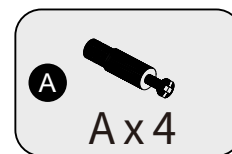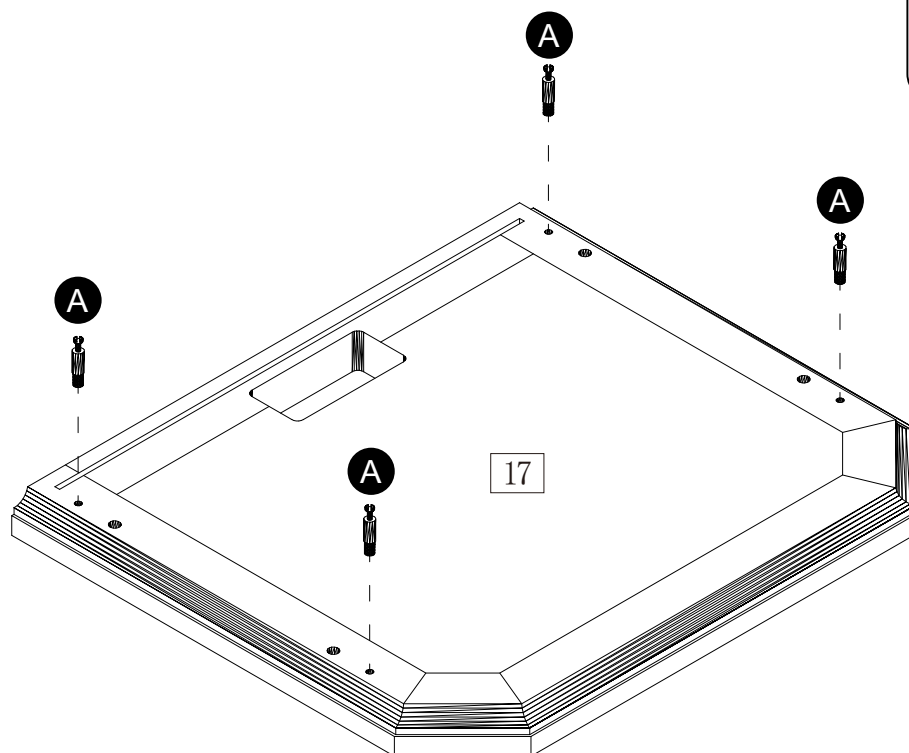

Insert Cam Bolt (A) in part (17)



Step 18

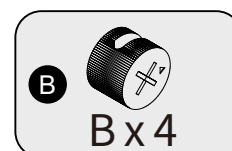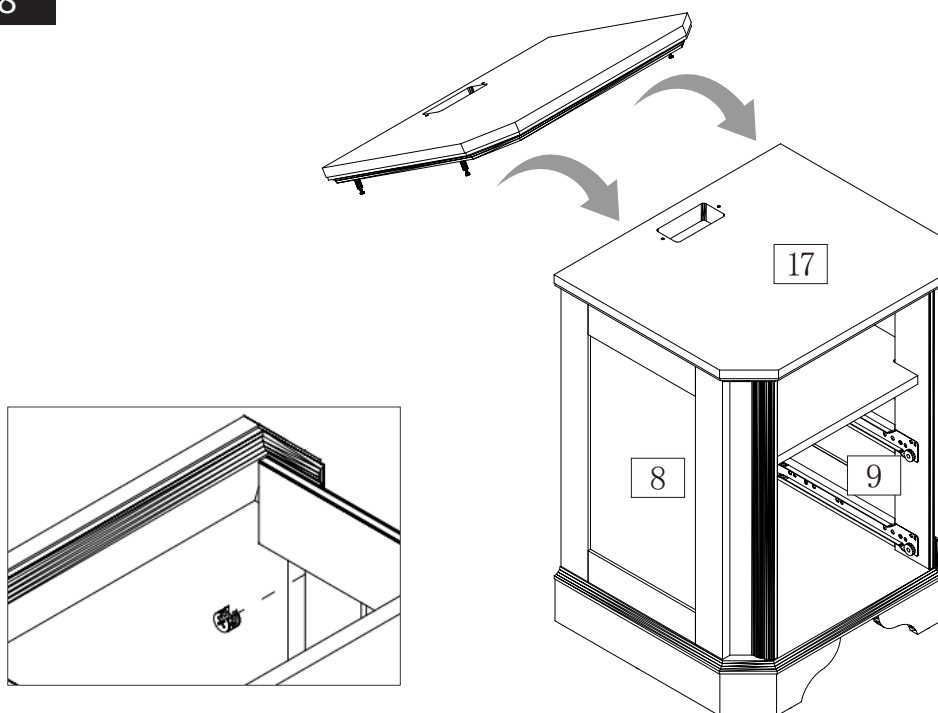

Turn over the panel (17) and attach it to the panel (8.9).
then insert Cam lock (B) to panel (8.9) to lock it.




Assembly instructions

Step 19

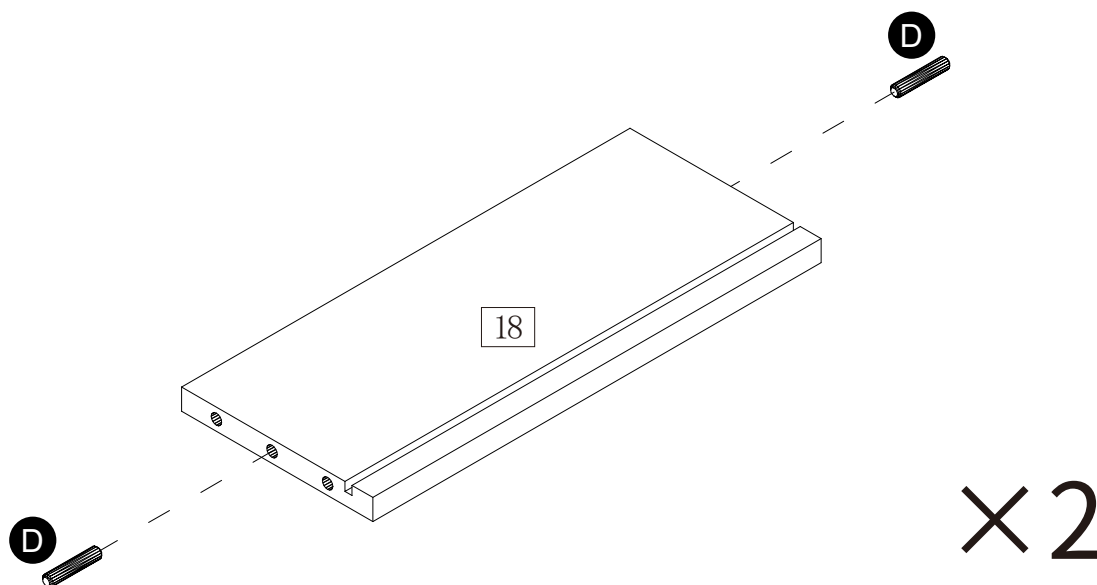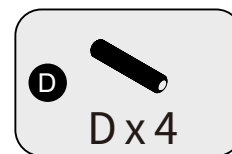

Insert Wooden Dowel (D) to part (18)


Step 20

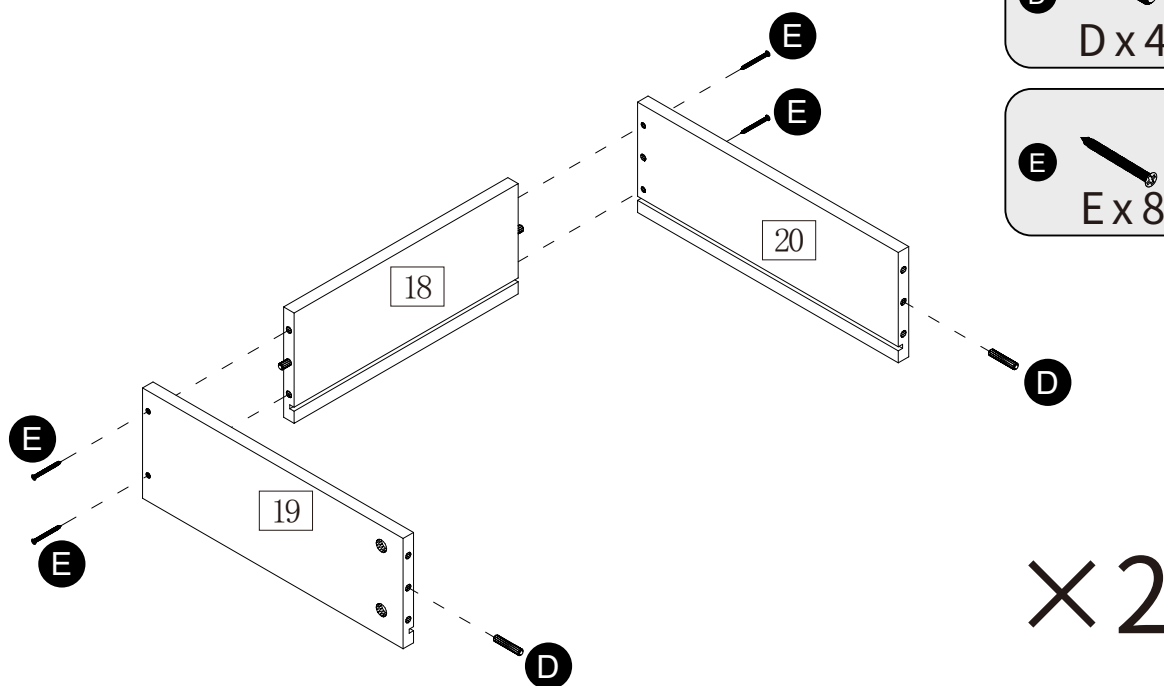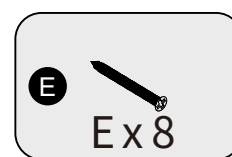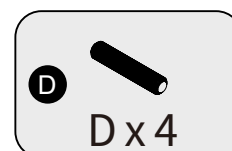

Attach Wooden Dowel(D) on part(19,20).
Use Screw (E) to attach part(19,20) with part(18).then lock it.

Assembly instructions




Step 21

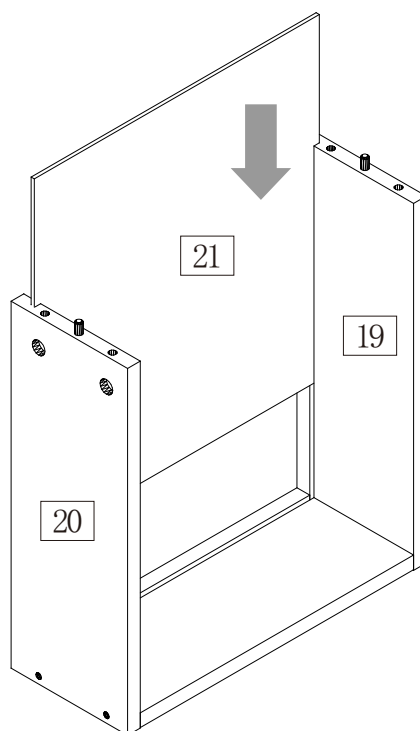

×2

Slide panel(21) into the grooves as per diagram.

Step 22

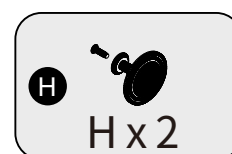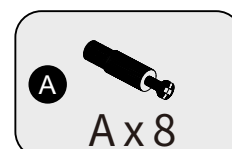
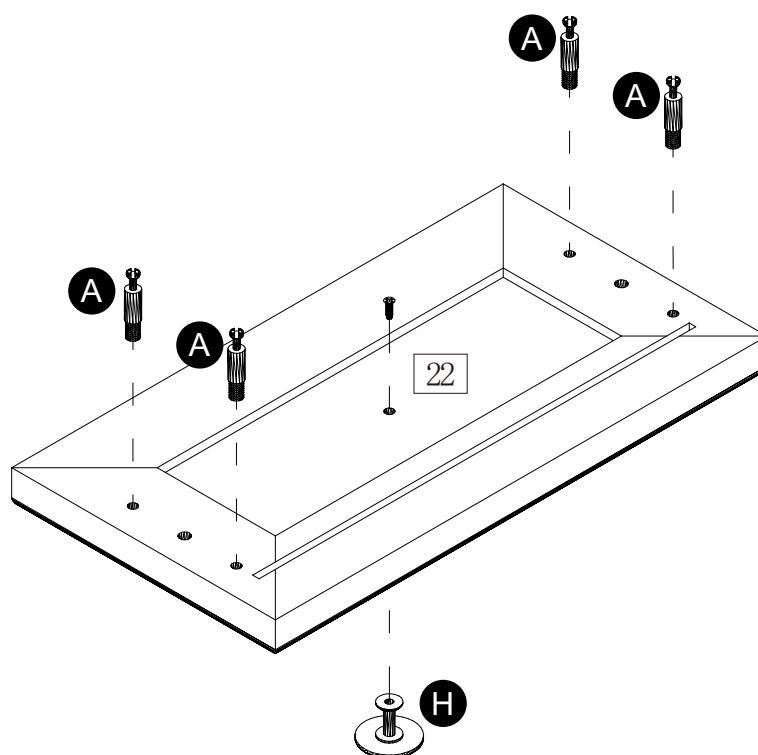


×2

Install the Cam bolt(A) and handle(H) on the part(22)

Assembly instructions

Step 23


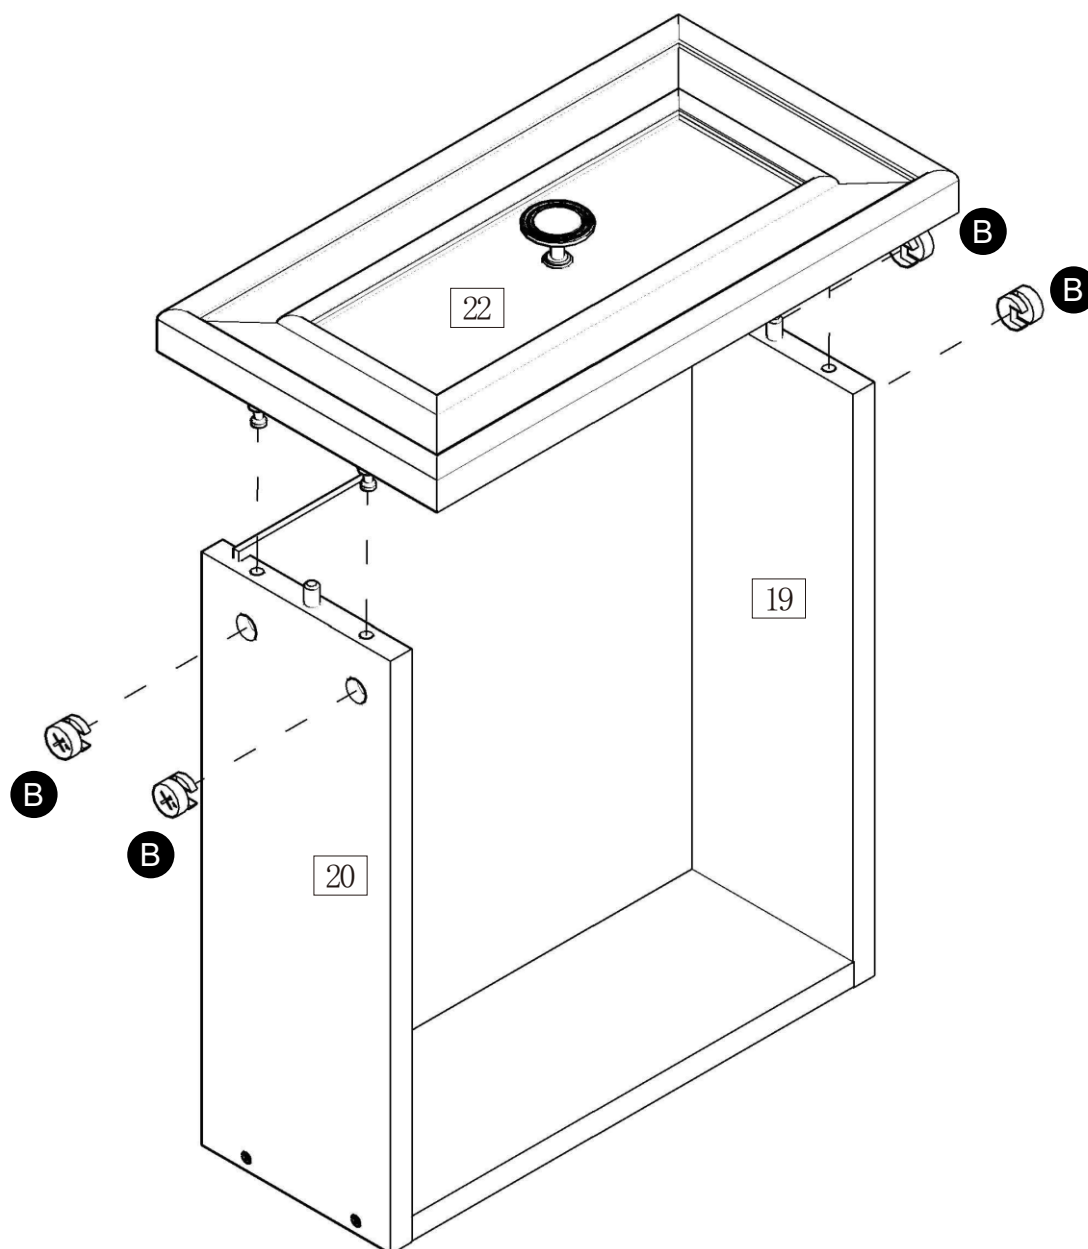
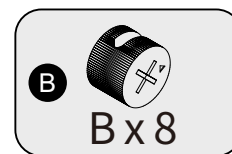


×2

Use Cam lock(B)to attach part(19.20)with part(22).then lock it

Assembly instructions





Step 24

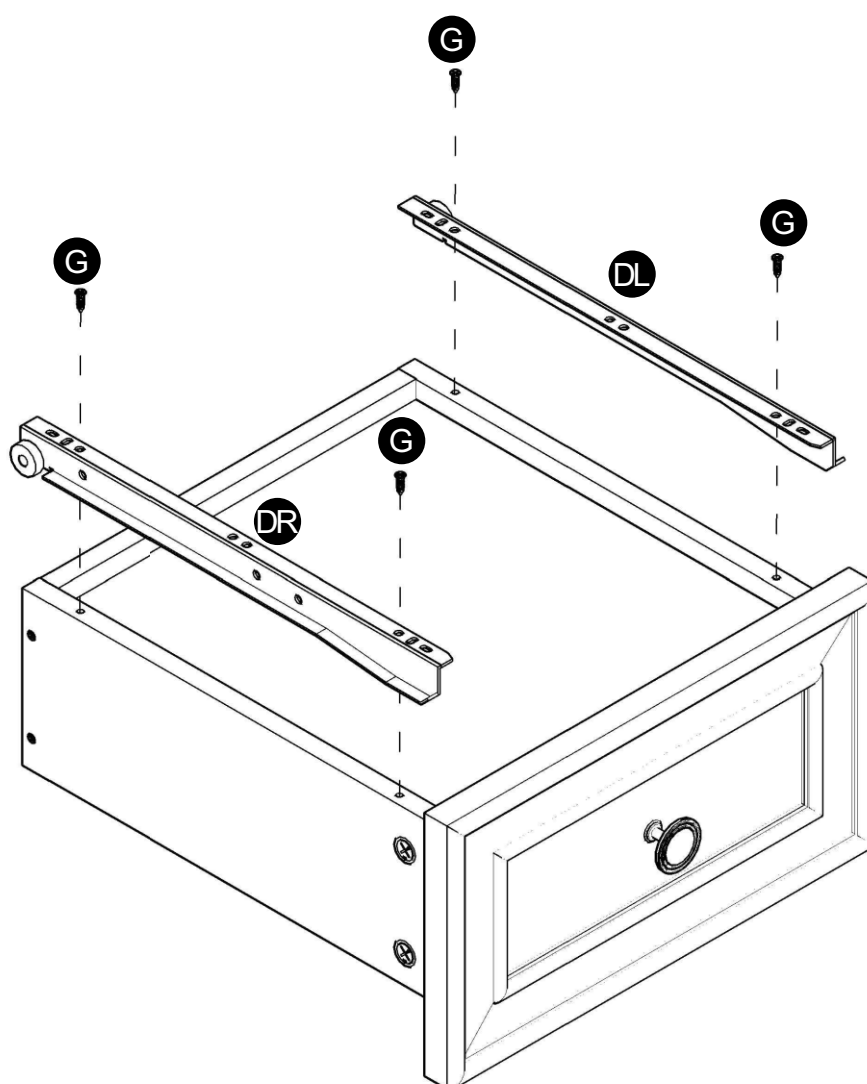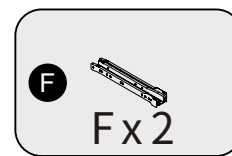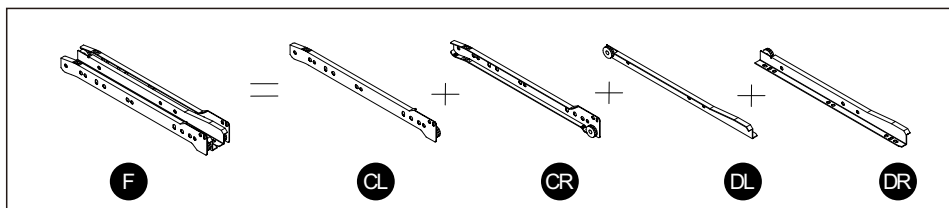


Use Screw(G) to install the part(DL,DR) on the assembled drawer, pay attention to the difference of right and left.

Assembly instructions


Step 25

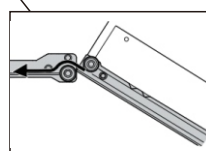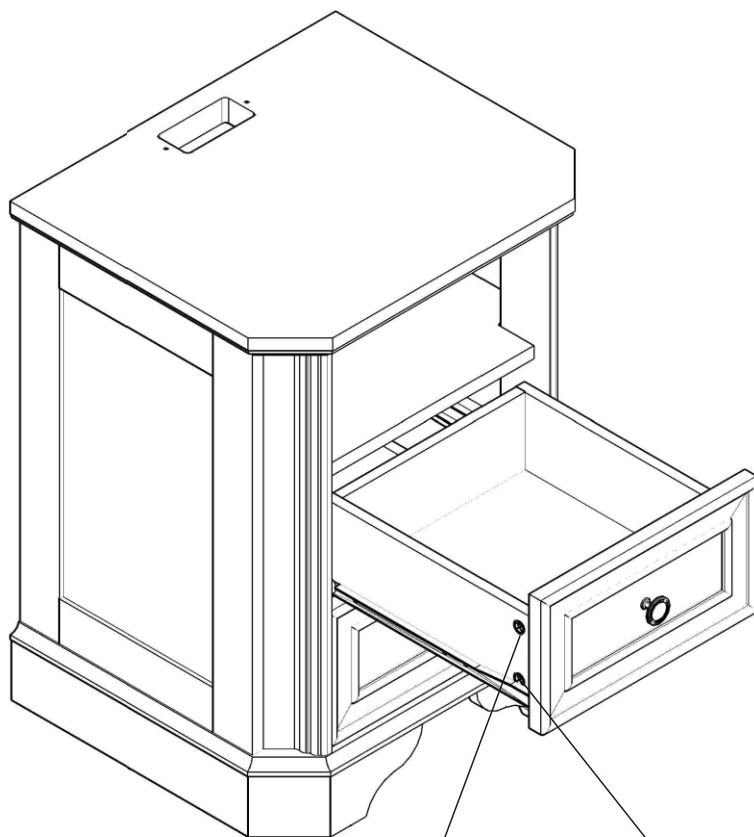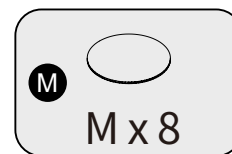


1. Please ensure that you have matched the wheels on BOTH sides of the drawer with the wheels on rails installed BEFORE push in the drawer.

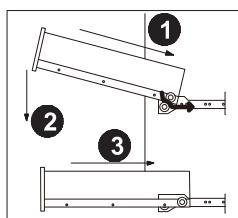

2. If the following occurs, redo the first two steps



(both wheel are off the rails)


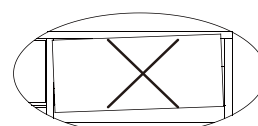


(one wheel is off the rail)

Use sticker(M) to cover screw holes. put on the drawer can be frustrating if you do it wrong. So. take your time and follow the steps above.

Assembly instructions



Step 26

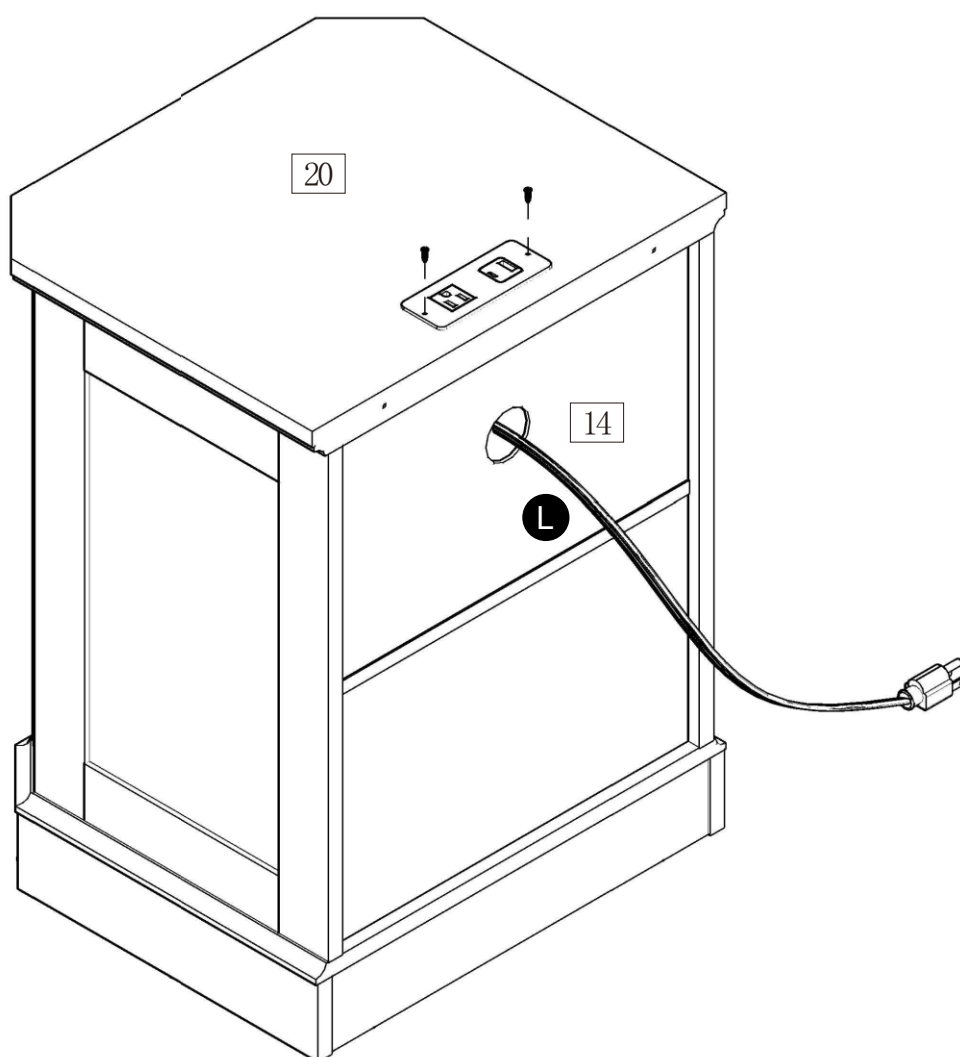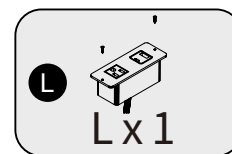

Install Socket(L).cross plug to part(22)and part(14).
Use screw to attach part(L)and part(22).then lock it

Assembly instructions

Step 27

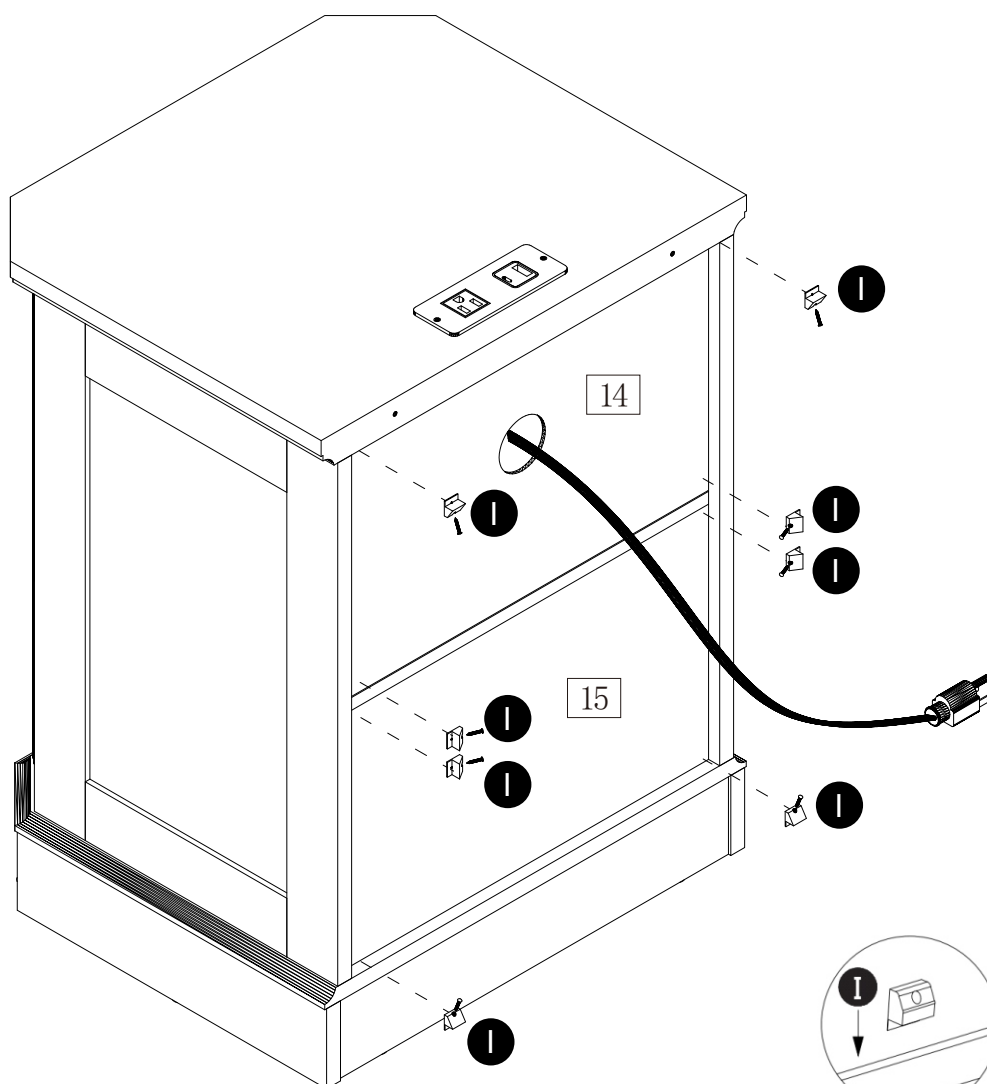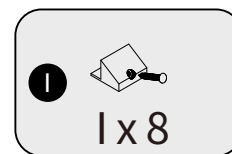

Assembly complete

Install the Back Panel Stiffener(1).then lock it

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



–these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit**. **Consult a qualified tradesperson if you are unsure.**


Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

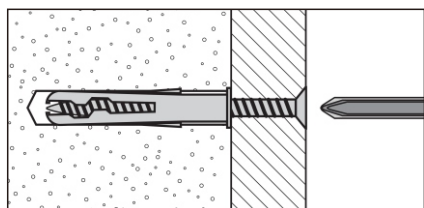


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

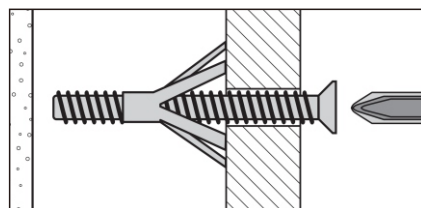


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

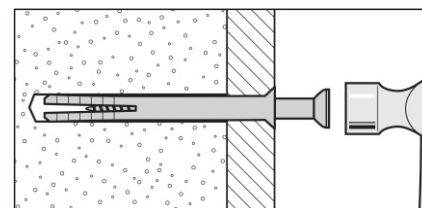


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

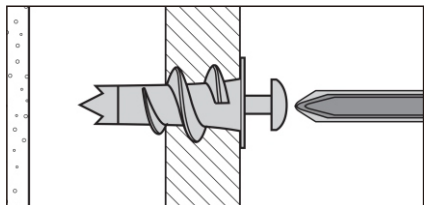


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing - Heavy Duty" wall plug

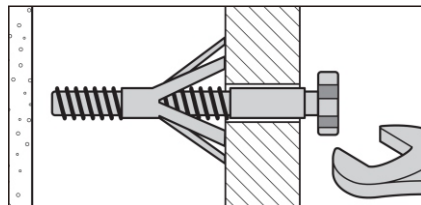

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug - heavy loads

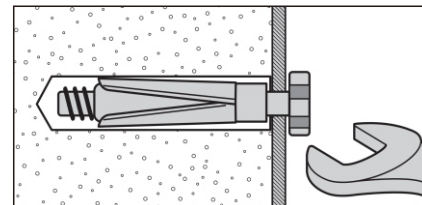

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose