


Assembly Instructions

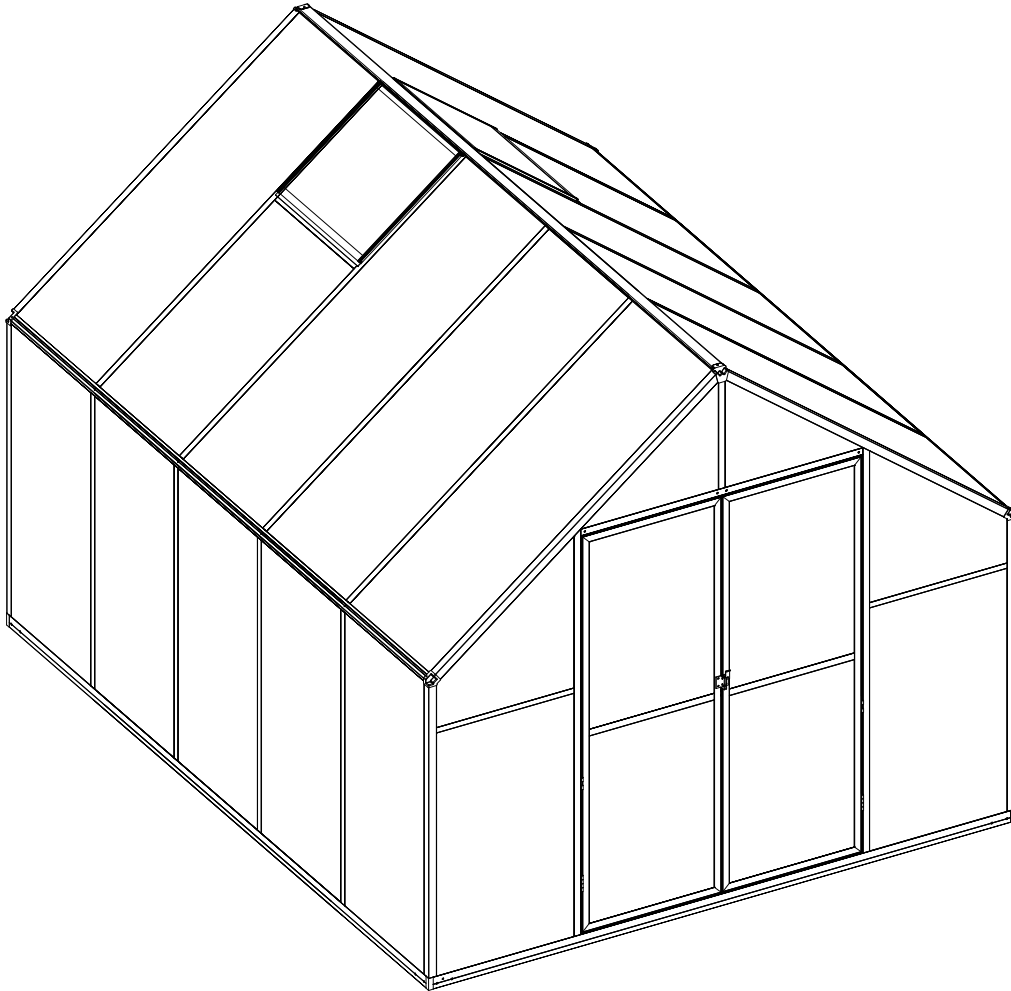

Greenhouse 8X9.6 FT Assembly Instruction

SKU:

YPG105-1B5A0

Email Address: support@wepatio.com

Service Time: 8 am - 5 pm (central time) Monday- Friday.

If no one picks up, please call several more time


Assembly Instructions

1. Assembly Advice	Page 1
2. Product Features	Page 2-3
3. Parts List	Page 4-7
4. Door Assembly	Page 8-14
5. Roof Vent Assembly	Page 15-16
6. Frame installation	Page 17-51




Assembly and Maintenance Advice

1. For safety purposes, we strongly recommend that this product is assembled by at least two people.
2. Some components have sharp metal edges. Please be careful when handling metal components. Please wear gloves, shoes and safety goggles during assembly.
3. Lay all of the components on a soft carpet or blanket to avoid any scratches or damages.
4. DO NOT climb or stand on the roof. Heavy articles should not be leaned against the greenhouse.
5. Keep the roof and gutter clear of snow, dirt & leaves. Allowing snow to build up on the roof may damage the product.
6. Unlike steel, if the paint finish is scratched this will not harm the aluminium underneath.
7. When your product needs cleaning, use a mild detergent solution and rinse with cold clean water. Do not use acetone, abrasive cleaners or strong detergents to clean the panels.

Tools Provided:

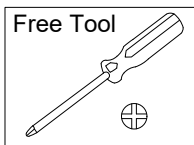

Tools Required when Assembly (Not Provided)

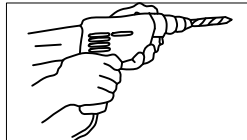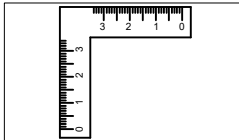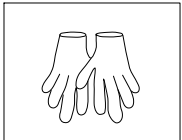


Assembly at least by two Persons




Functions and Features:

1. A new, elegant plastic manual window opener is included as standard with the roof vents.

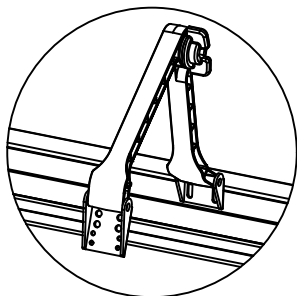


Manual Opener



2. Remove approximately 2 inches of film from all sheet edges before installing and remove all film immediately after the construction is completed. Please ensure that the side with the white film faces outwards.

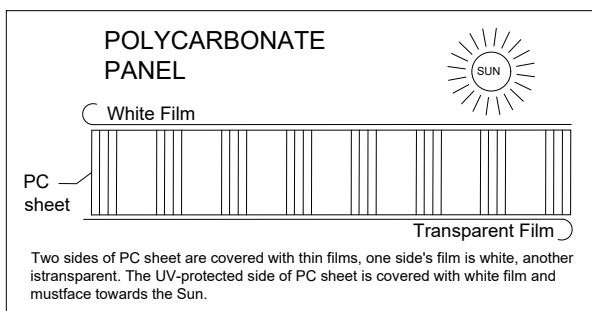


3. This quality greenhouse features self-tapping screws to provide strong joints. As the name suggests, the screws tap their own thread. Driving in self-tapping screws requires more force than conventional screws. A powered screwdriver is therefore recommended.
4. Nuts not to be tightened before the end of assembly! Unless otherwise stated, do not tighten the bolts/nuts/screws until the shed is finally erected!

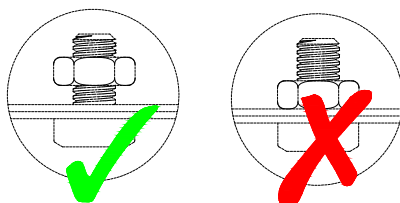






5. S86 and S15 and S88 are mostly installed on the profiles. Please remove S86 and S15 and S88 before installation.

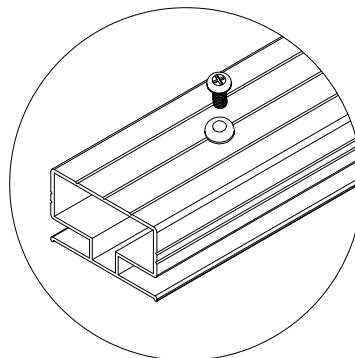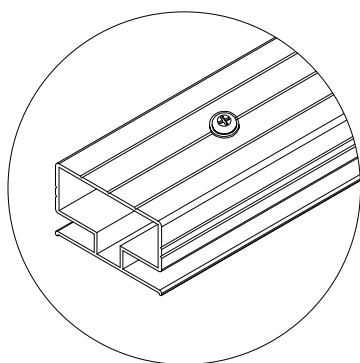


6. If the polycarbonate slot is deformed during transport, use a flat wooden or plastic block to straighten it (Avoid sharp objects to prevent damage to the aluminum).



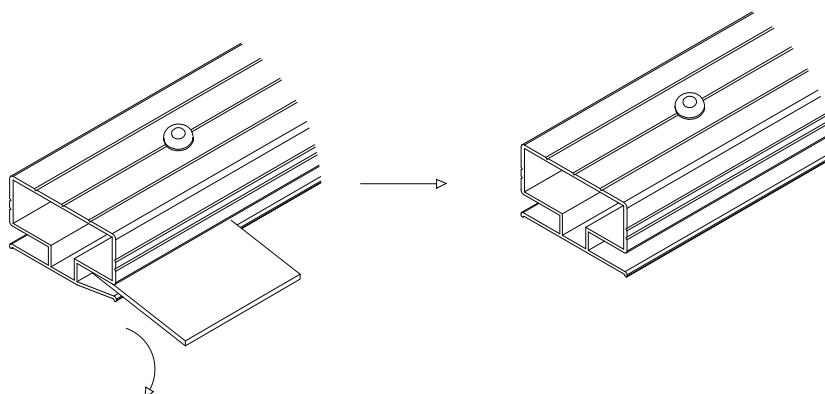


	PART	NO	QTY
1	 1172mm	L01A	2
2	 1172mm	L01B	2
3	 1437mm	L01M	2
4	 1437mm	L01N	2
5	 1172mm	L02A	4
6	 1172mm	L02B	4
7	 1437mm	L02E	4
8	 1437mm	L02F	4
9	 1170mm	L02H-1	1
	 451mm	L02H-2	1
	 1170mm	L02I-1	1
	 451mm	L02I-2	1
10	 1170mm	L02O-1	2
	 410mm	L02O-2	2
11	 1170mm	L02P-1	1
	 410mm	L02P-2	1
12	 555mm	L02S	4

	PART	NO	QTY
13	 500mm	L02T	2
	 431mm	L02U	1
14	 1430mm	L02W-1	1
	 621mm	L02W-2	1
15	 1170mm	L03A-1	1
	 462mm	L03A-2	1
	 1170mm	L03C-1	1
	 462mm	L03C-2	1
16	 1127mm	L03H	1
	 1170mm	L03O-1	1
	 410mm	L03O-2	1
17	 577mm	L04A	6
18	 577mm	L04B	2
19	 808mm	L05A	8
20	 577mm	L06A	1
	 1154mm	L06B	2
21	 577mm	L07A	2


	PART	NO	QTY
22	 1154mm	L07B	4
23	 577mm	L08A	2
24	 1154mm	L08B	8
25	 577mm	L09O	2
26	 1154mm	L09P	4
27	 700mm	L19B	4
28	 570mm	L20A	2
	 570mm	L21A	2

4

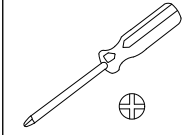PART			PART		
PART	NO	QTY	PART	NO	QTY
	A116	4		H113	4
	A117	4		S28 M4X10	4
	A118	9		S86 M4X10	6
	A119	2		S87 M4X25	40
	A120	4		M02 M4	44
	A121	4		Z03 Ø4X12	16
	D472	6		Z08 Ø4.2X16	2
	D475	18		Z13 ST5X40	18
	J156	18		Z44 Ø4X20	40
	J243L	2		D474	2
	J243R	2		D473	1
	J244	2	Tools Provided: 		
	J245	4			
	J246	8			
	H181	1			
	A111	2			
	J248	4			

PART	NO	QTY
	Y1	10
1190*568mm		
	Y2	6
990*568mm		
	Y3	2
634*568mm		
	Y4	2
634*568mm		
	Y5	1
457*568mm		
	Y6	1
457*568mm		
	Y7	8
1454*568mm		
	Y8	2
726*568mm		
	Y9	2
674*568mm		
	Y11	1
1085*568mm		
	Y12	1
1085*568mm		
	Y13	4
768*519mm		

Panel Exploded View

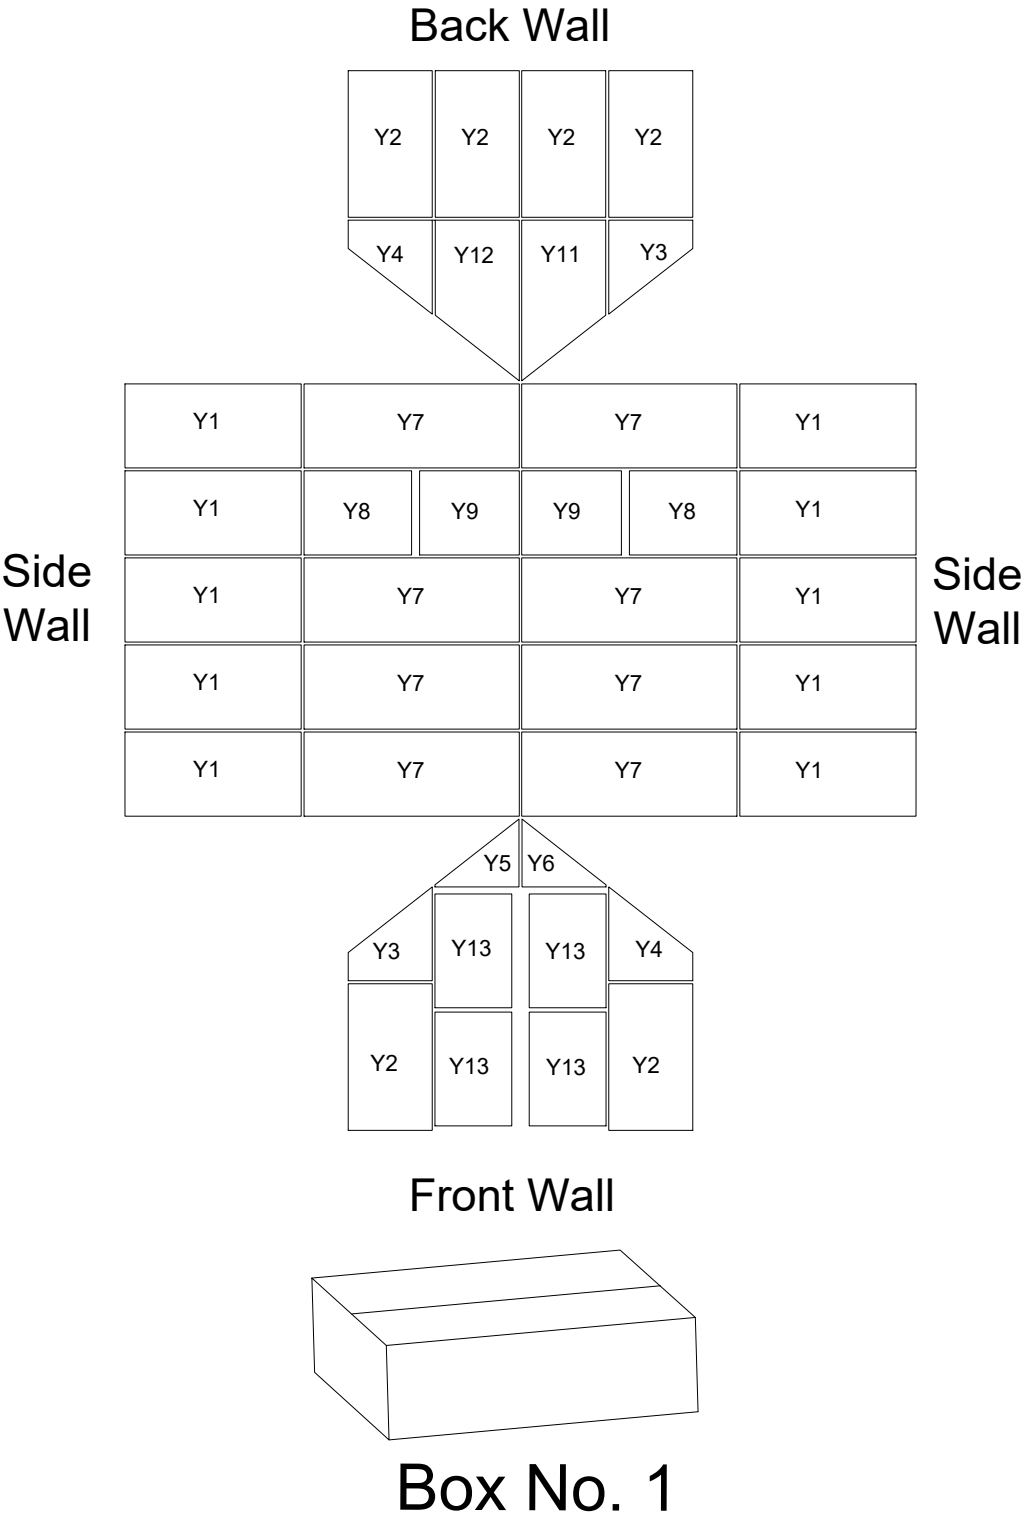

Customer Service Guide

Thank you for choosing our product! If you encounter missing parts, damaged packaging, or product damage upon receiving all parcels, please follow the steps below to contact our service team. We are here to assist you.

Missing Parts

Check the Parts

Compare with the included "Parts List" (refer to page [specific page/section] of the manual) and verify the missing item's name, specification, and quantity.

Please provide a clear photo of the parts list, highlighting the missing part(s) and its details, e.g., "Missing 5 pcs of M6×30mm screws."

Contact Us

Phone:

Call our customer service hotline at [901-347-2181] during working hours (8 am - 5 pm central time). Please provide order details (order number, purchase platform, purchase date) and a clear description of the missing parts.

Email:

Send an email to [support@wepatio.com] with the subject "Missing Parts Issue." Describe the missing part(s) in the email body and attach the parts list photo and order details.

Damaged Product or Packaging

If it affects normal use

Steps:

1. Take photos or videos clearly showing the damaged part and the extent of the damage (multi-angle shots are recommended).
2. Send the photos/videos along with your order details to [support@wepatio.com] with the subject "Damaged Product Issue."

Resolution:

We will arrange for a replacement or refund after verifying the issue.

If it does not affect normal use

Steps:

Contact our customer service team (Phone: [901-347-2181] or Email: [support@wepatio.com]) with a description of the damage and attach photos or videos.

Resolution:

We will provide repair guidance or appropriate compensation

Customer Service Email: [support@wepatio.com]

Friendly Reminder

To ensure efficient processing of your issue, please prepare relevant details (e.g., order number, purchase platform, purchase date) and clear photos or videos.

Regardless of the issue, our customer service team is dedicated to providing you with satisfactory solutions.


Thank you for your trust and support, and enjoy your product!

PART	NO	QTY
	L02T	2
	L02O-1	2
	L02O-2	2
	L03O-1	2
	L03O-2	2
	A117	4
	A118	4
	S86	12
	M4X10	
	Z44	8
	Ø4X20	
	L02S	4
	J246	8
	Y13	4

Exploded View




Left Door

Right Door




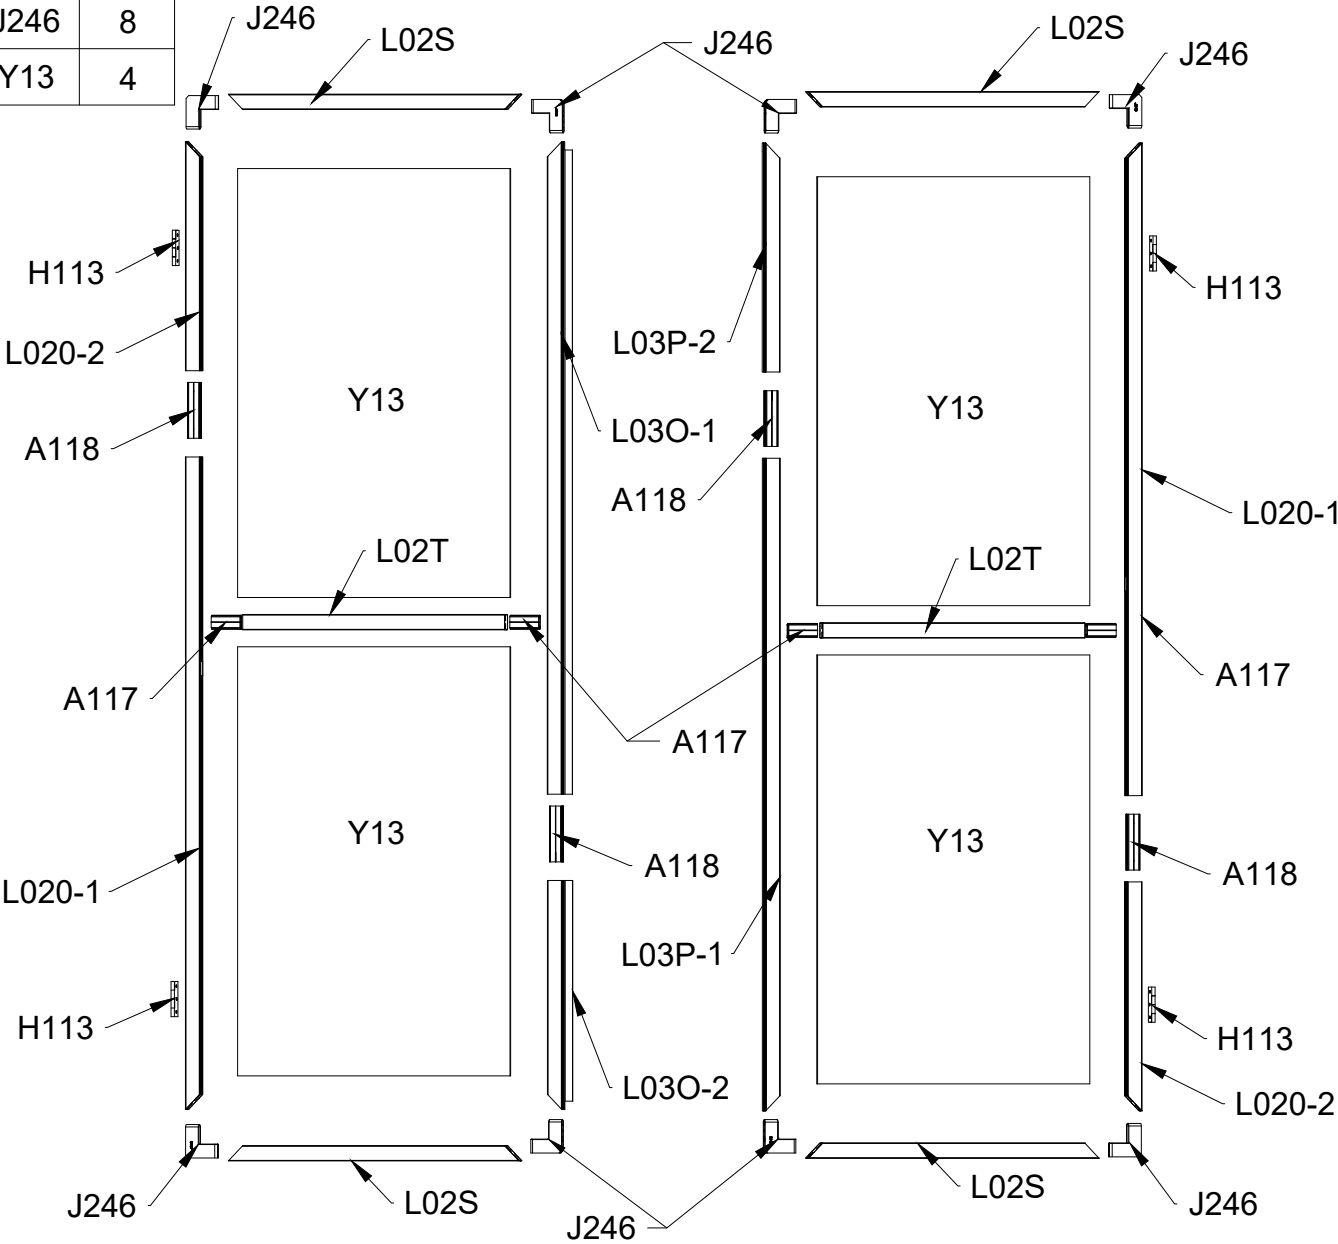


PART	NO	QTY
	L02T	1
	L02O-1	1
	L02O-2	1
	L03O-1	1
	L03O-2	1
	A117	2
	A118	2
	S86 M4X10	6
	Z44 Ø4X20	4

Left Door



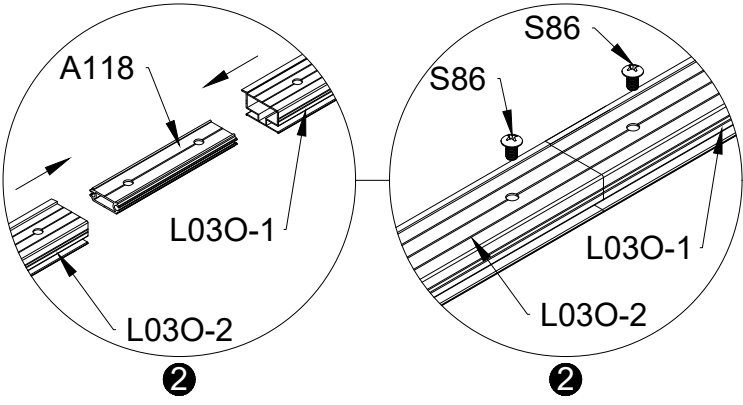
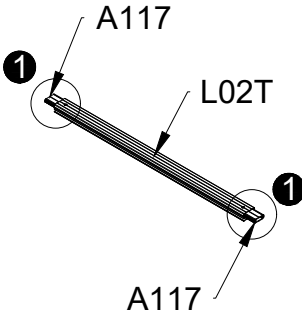
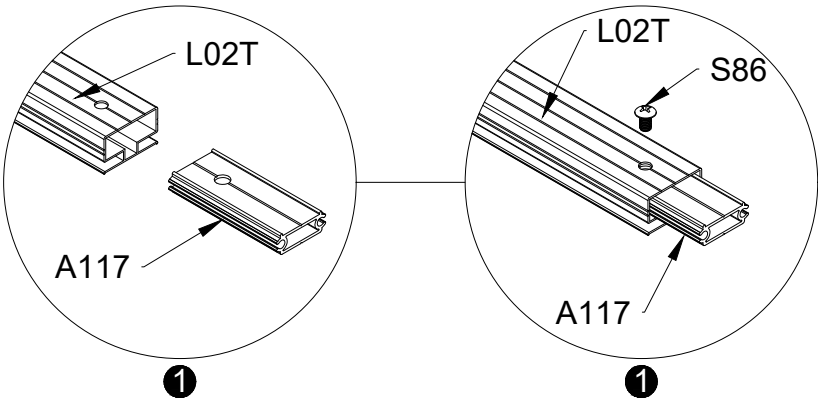


Note: Ensure all the holes are aligned before tightening the screws.

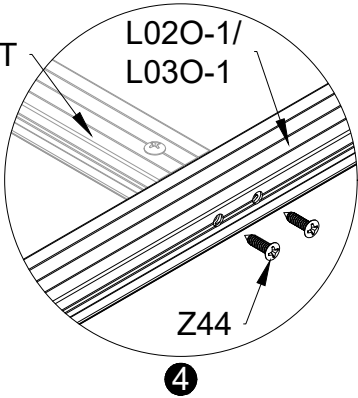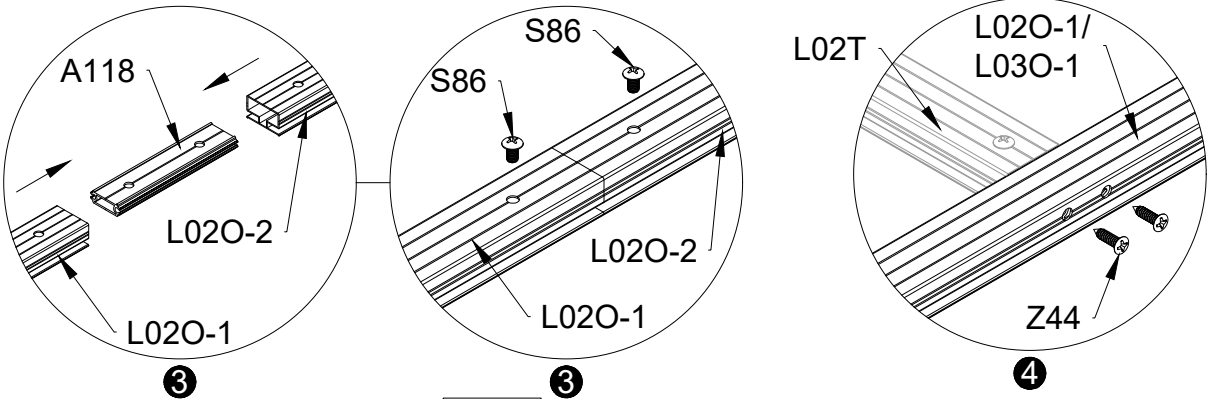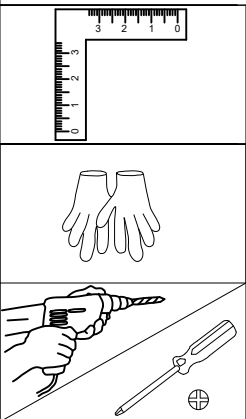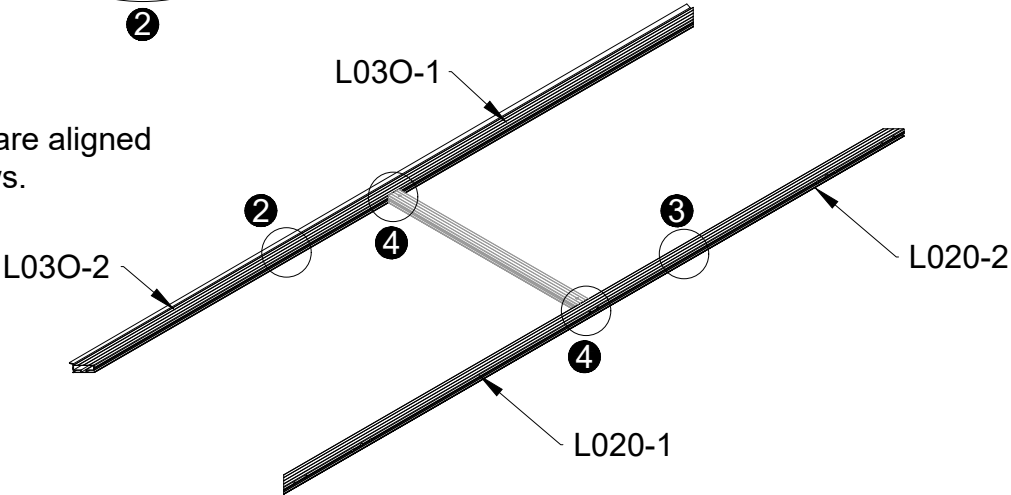





PART	NO	QTY
	L02S	2
	J246	4
	Y13	2

Left Door

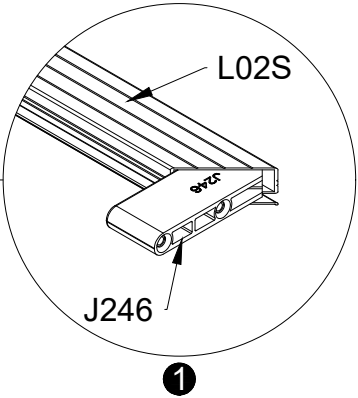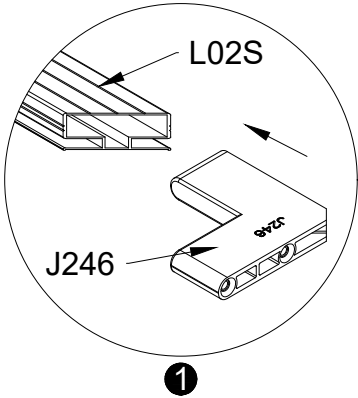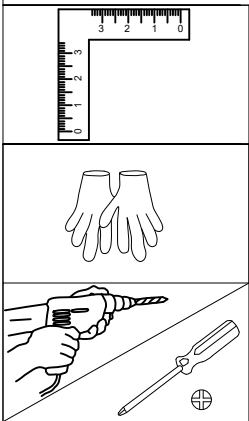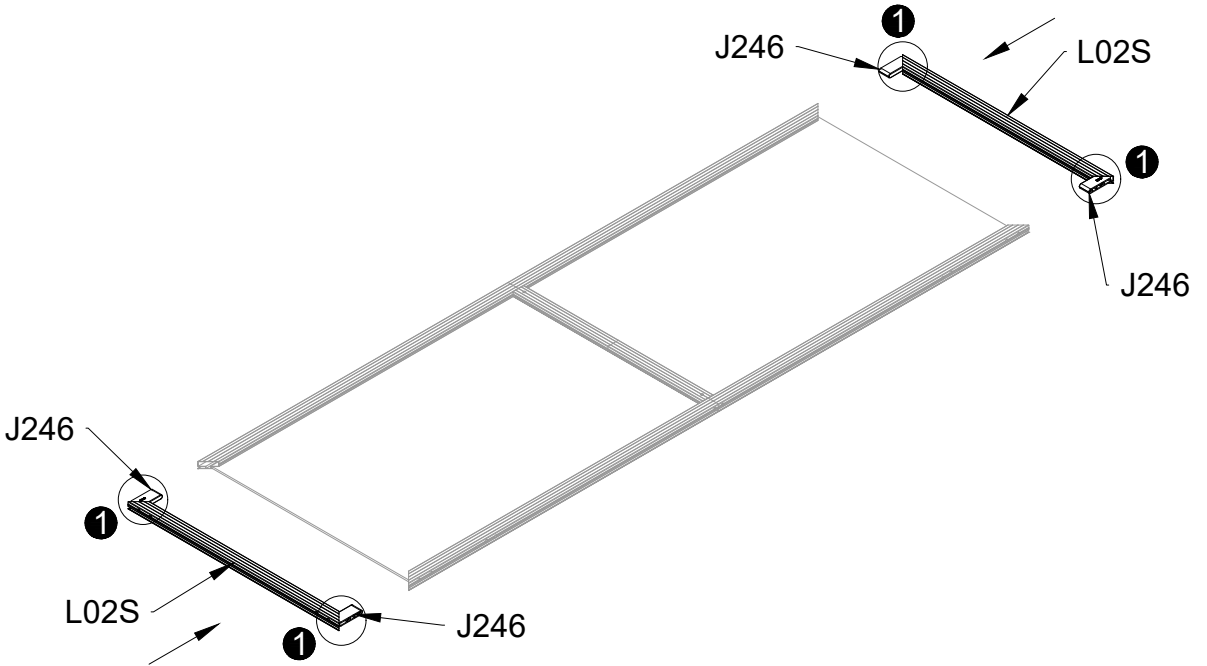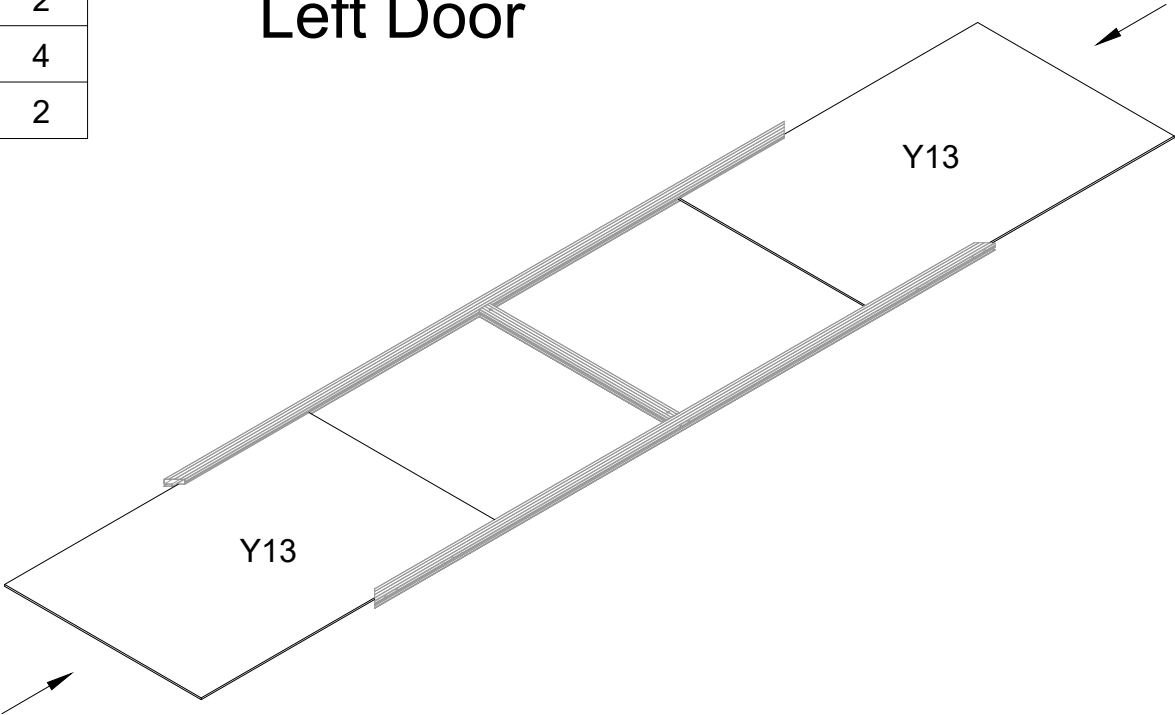




PART	NO	QTY
	H113	2
	S15 M4X10	6
	Z44 Ø4X20	16

Left Door

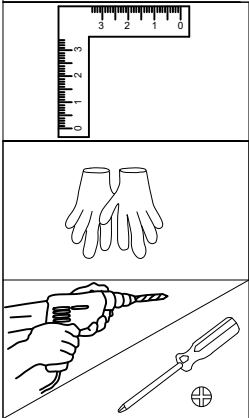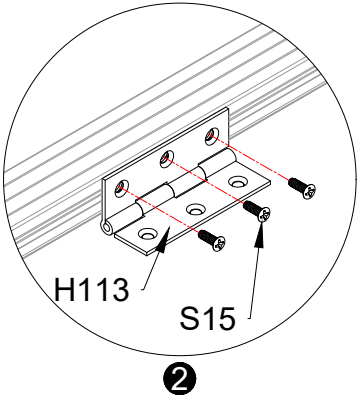
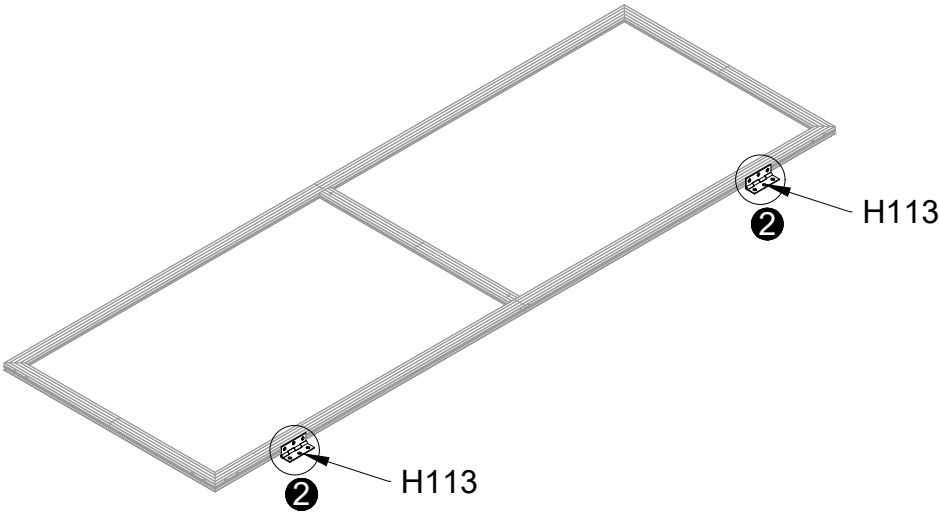
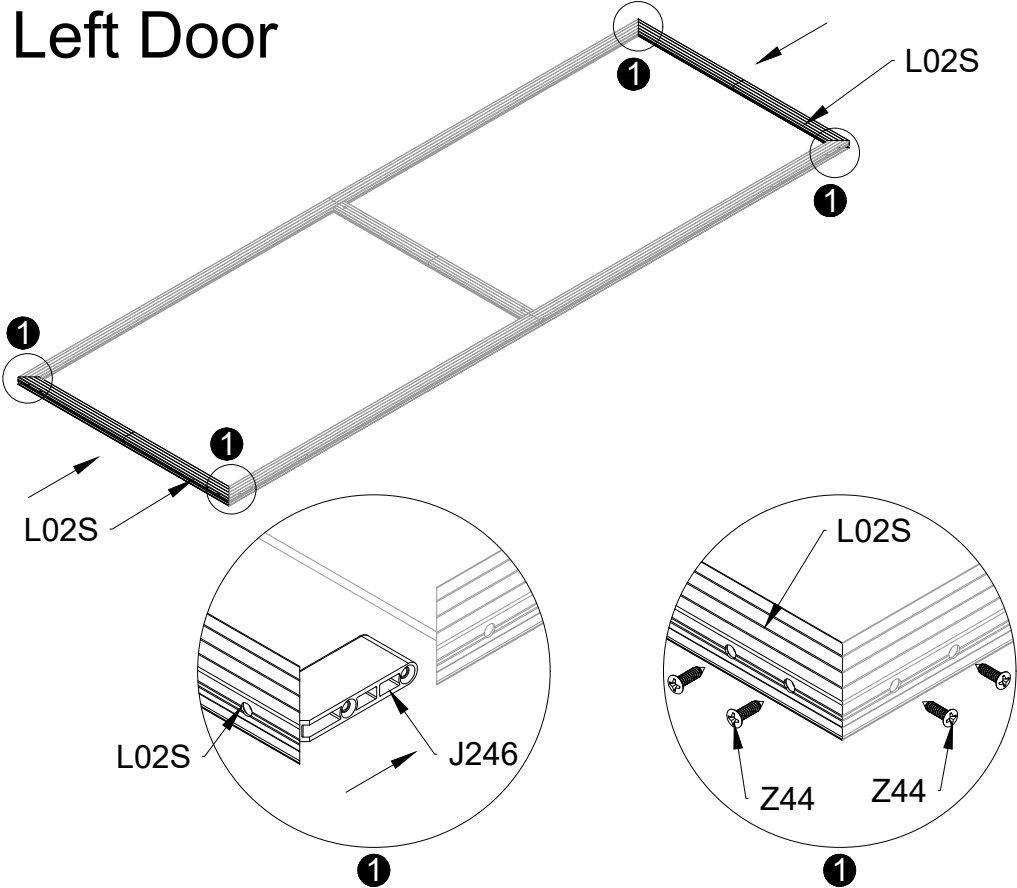


PART	NO	QTY
	L02T	1
	L02O-1	1
	L02O-2	1
	L02P-1	1
	L02P-2	1
	A117	2
	A118	2
	S86	6
	M4X10	
	Z44	4
	Ø4X20	

Right Door



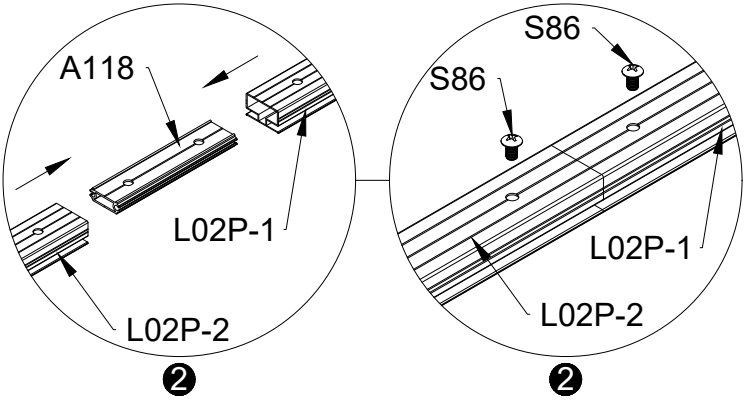
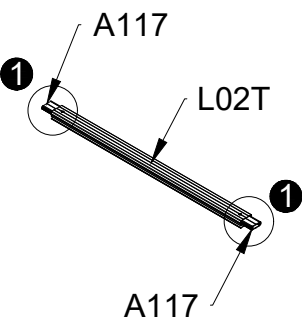
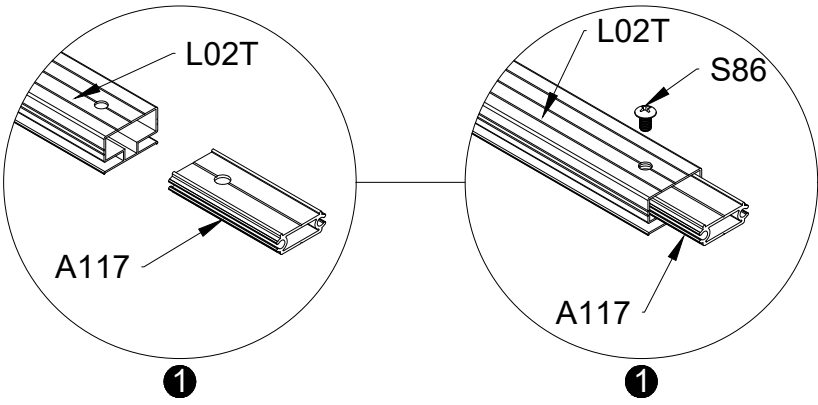


Note: Ensure all the holes are aligned before tightening the screws.

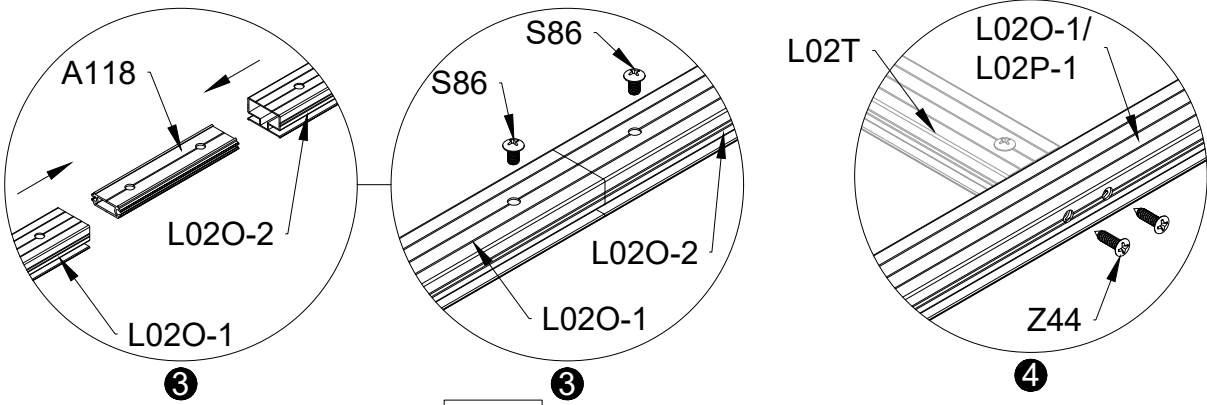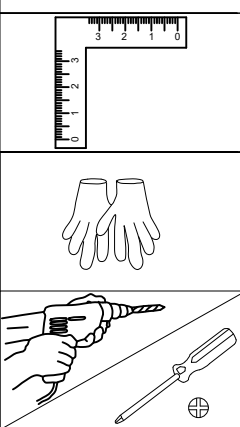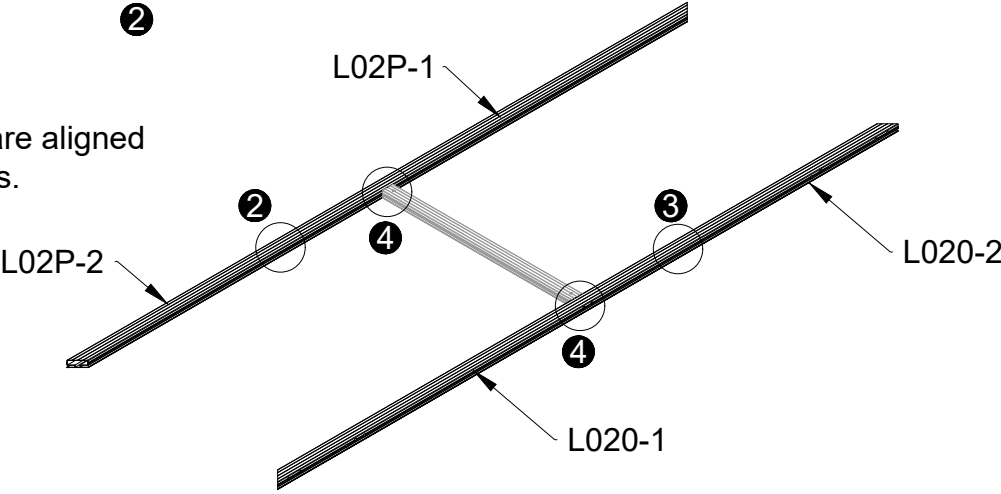




PART	NO	QTY
	L02S	2
	J246	4
	Y13	2

Right Door

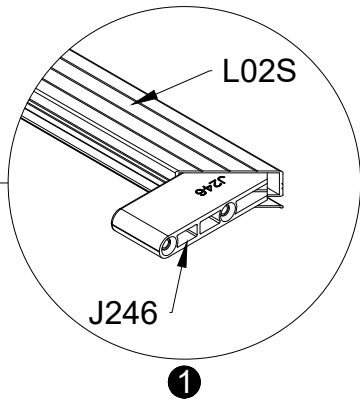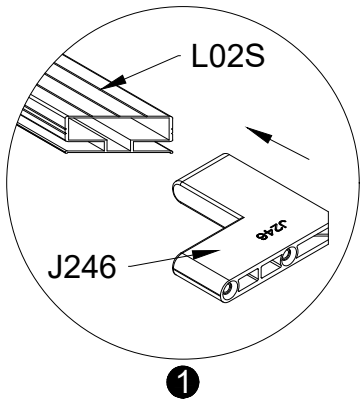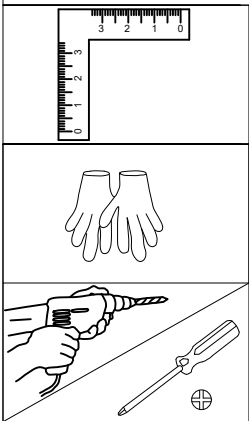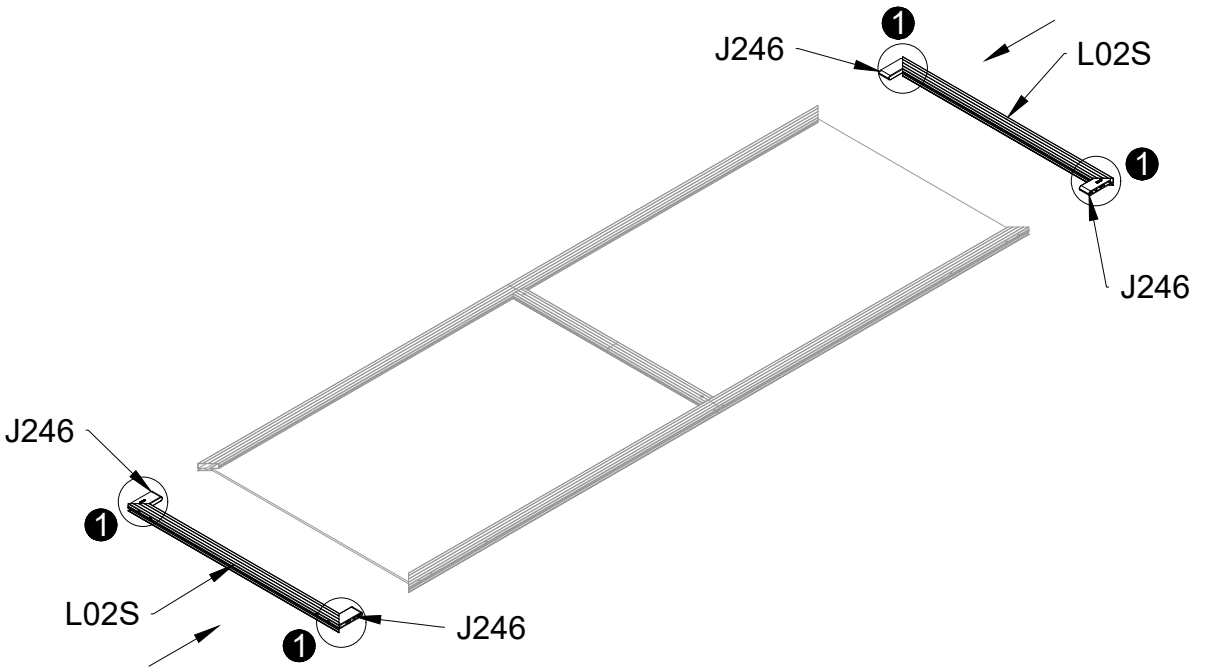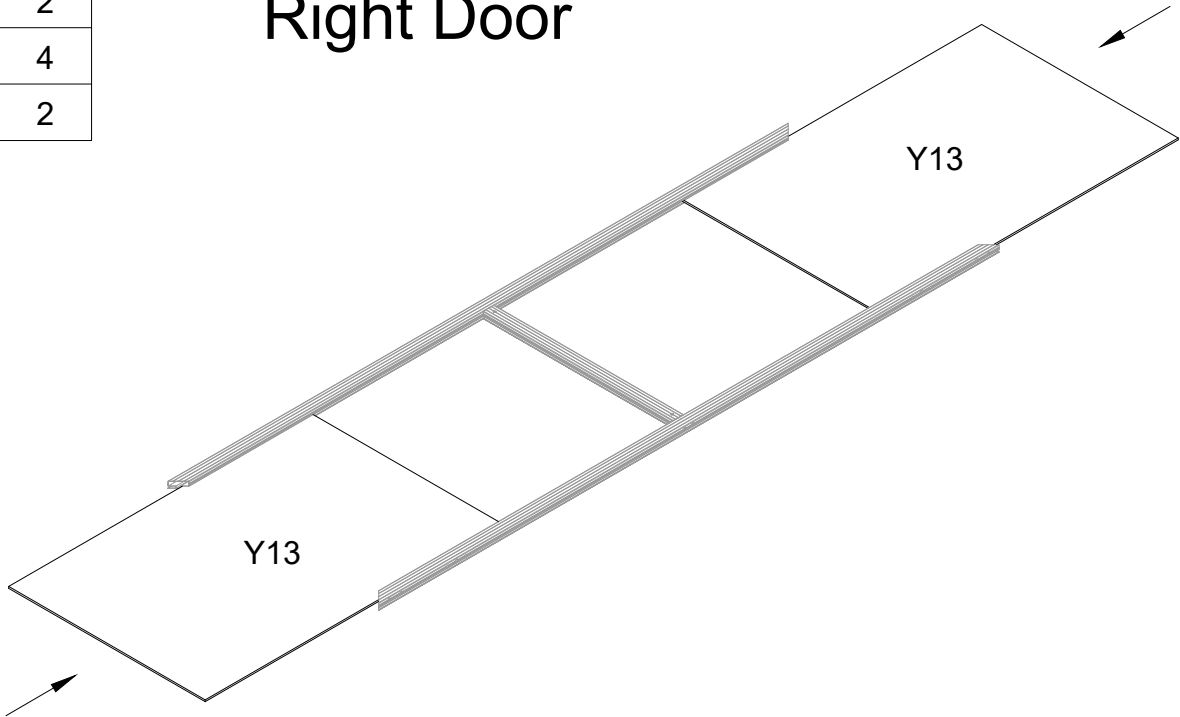

PART	NO	QTY
	H113	2
	S15 M4X10	6
	Z44 Ø4X20	16


Right Door

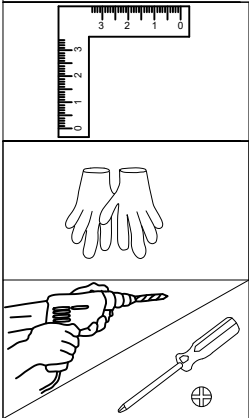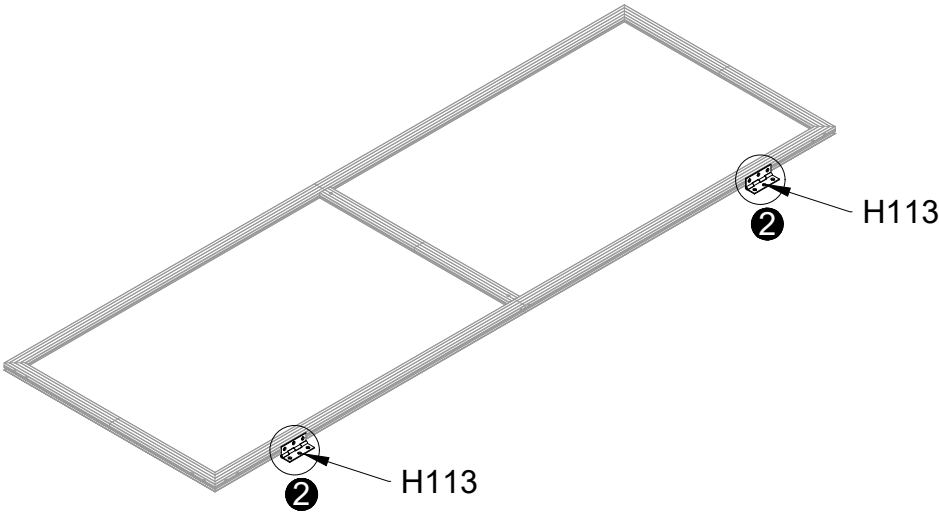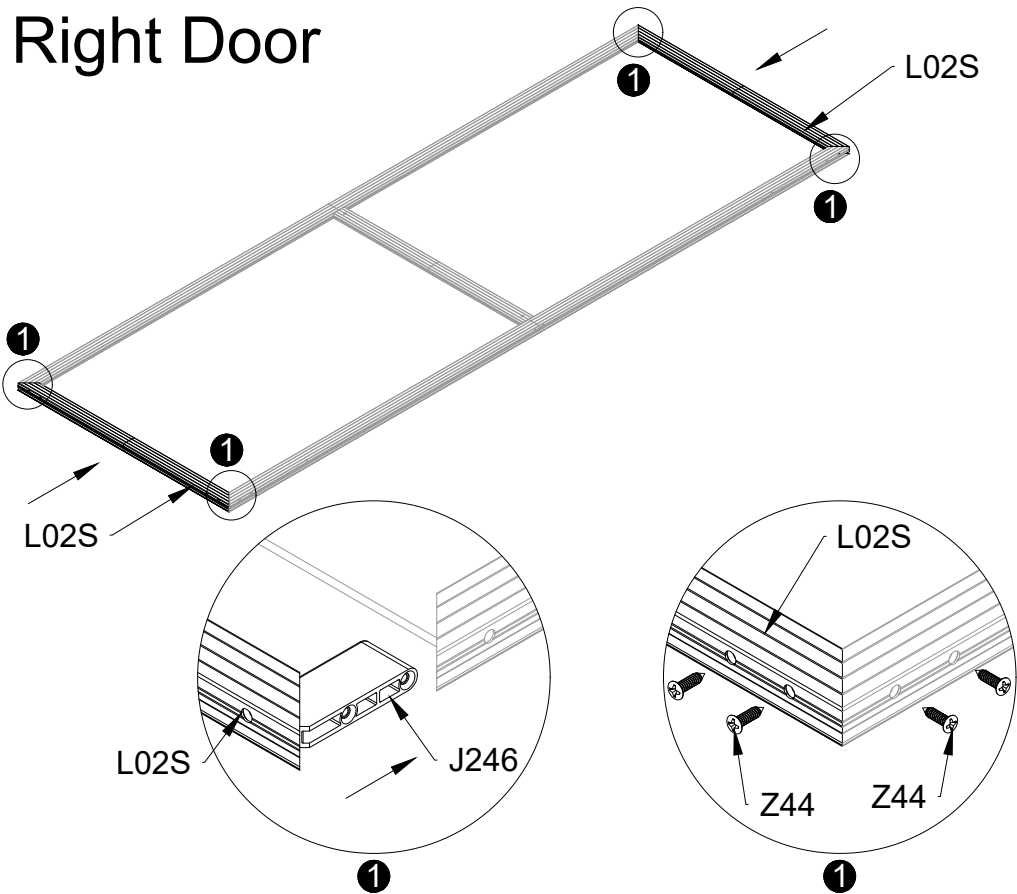


PART	NO	QTY
	L19B	4
	L20A	2
	L21A	2
	Y9	2
	S28 M4X10	4
	Z03 Ø4X12	8
	A111	2
	M02 M4	4



Exploded View

WindowsX2


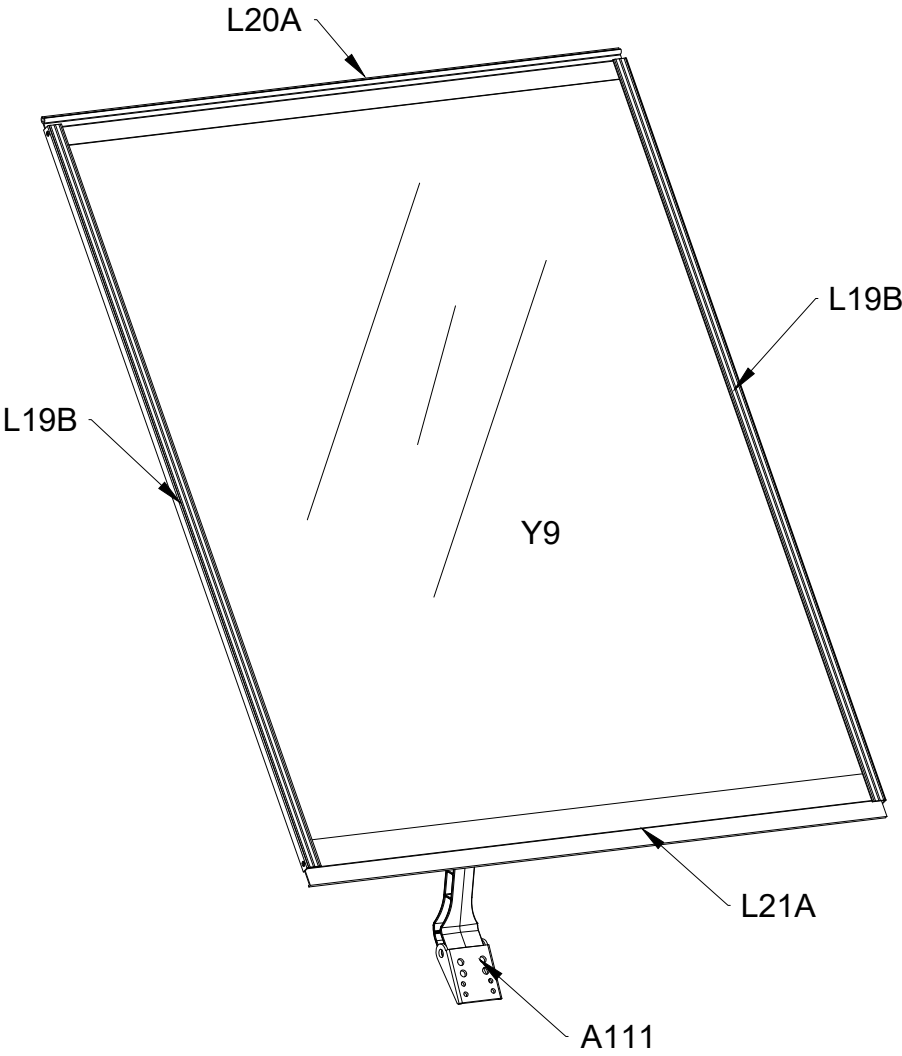


PART	NO	QTY
	L19B	2
	L20A	1
	L21A	1
	Y9	1
	S28 M4X10	2
	Z03 Ø4X12	4
	A111	1
	M02 M4	2

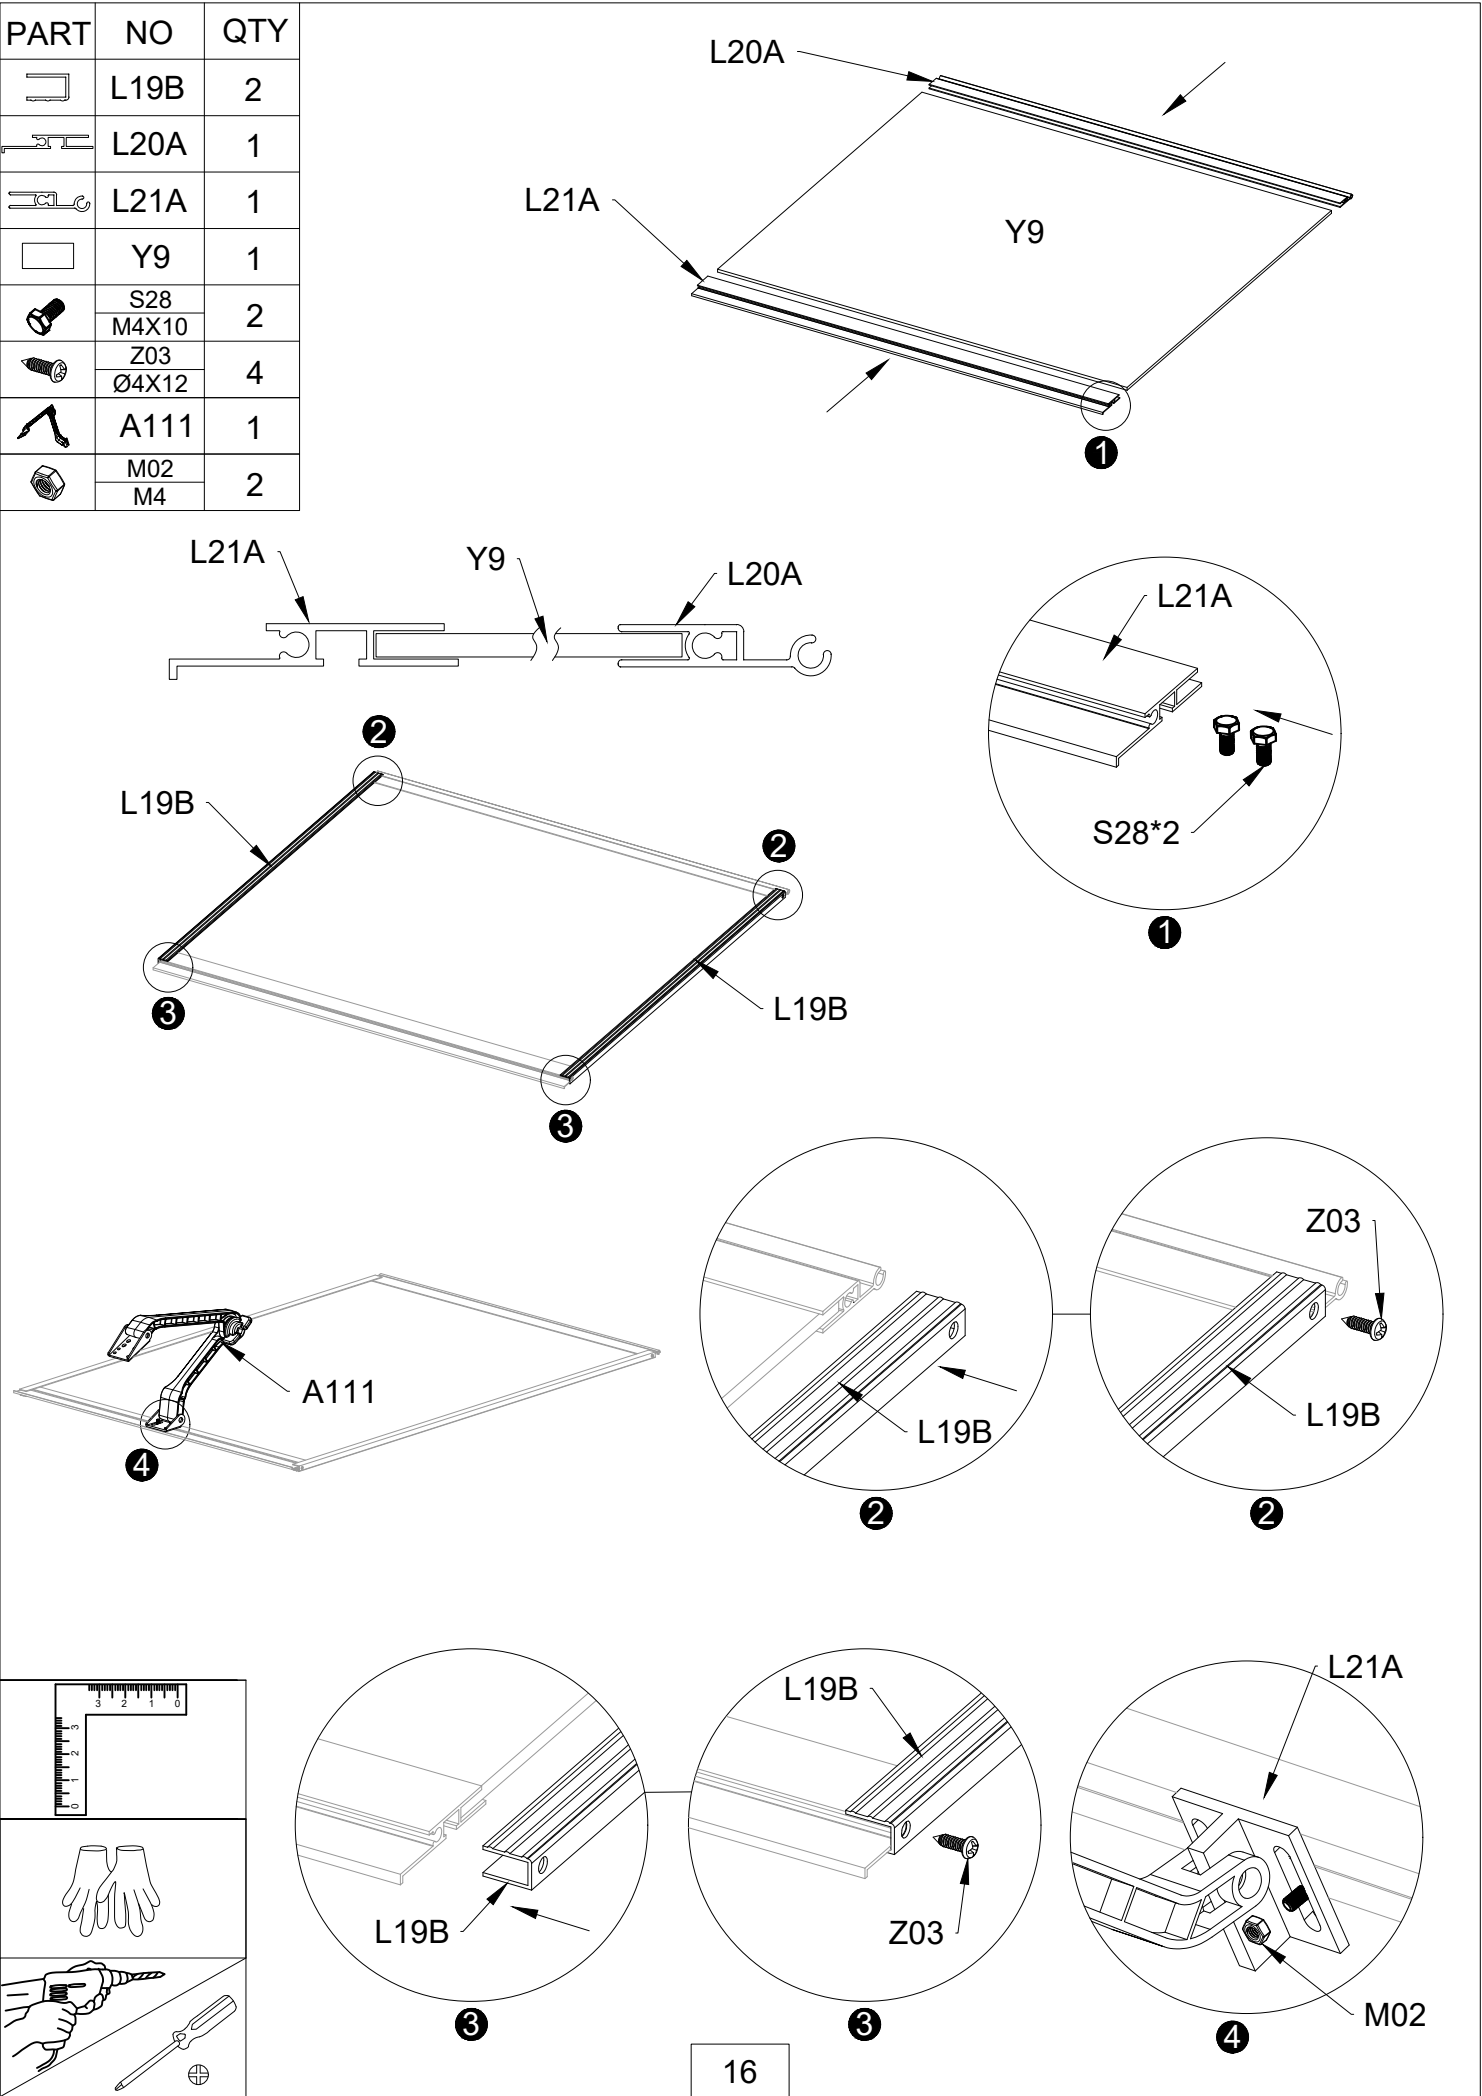

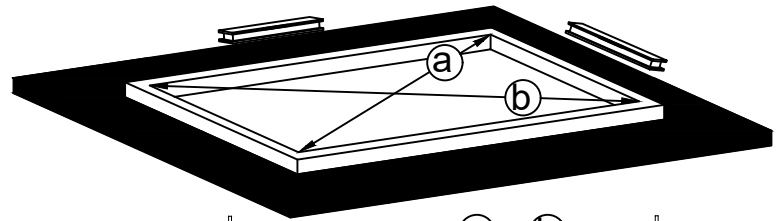
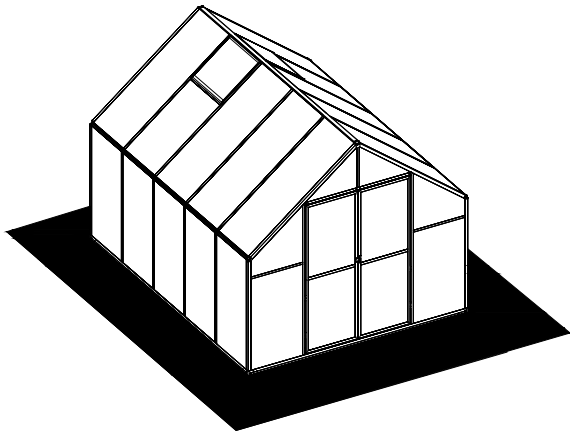


$a = b$

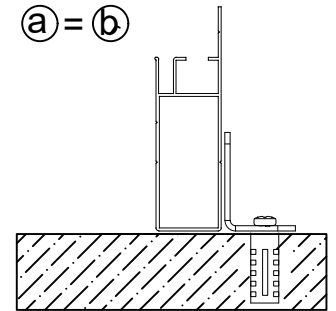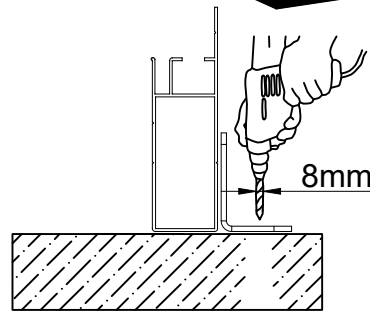


Expansion
screw/Concrete
ground


It is essential the dimensions $a + b$ are the same to ensure the base is square.

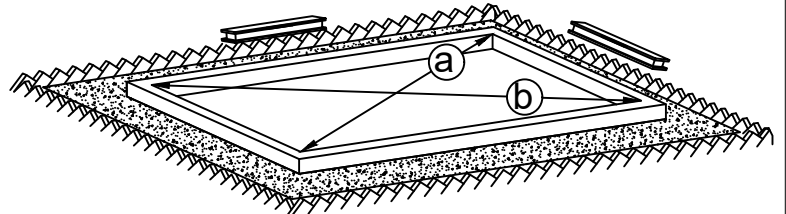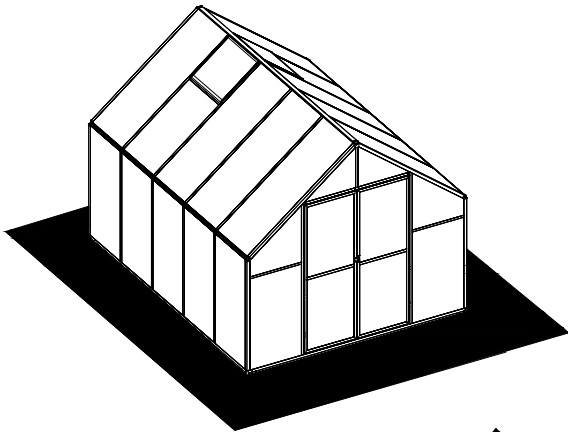

$a = b$

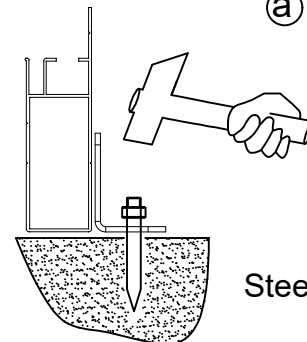


Steel pegs in soil

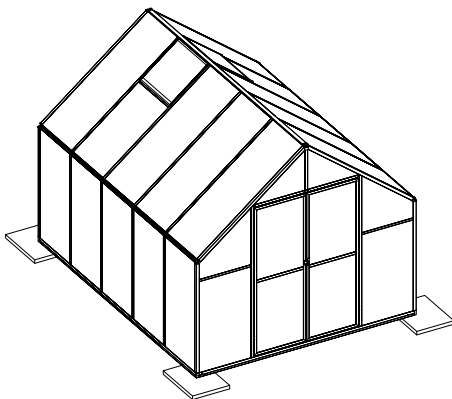

Support at the corners only is inadequate.


PART	NO	QTY
	D475	18
	J156	18
	Z13 ST5X40	18
	S86 M4X10	18

Note! After the foundation is installed, be sure to pull the diagonal lines to ensure that the foundation is square.



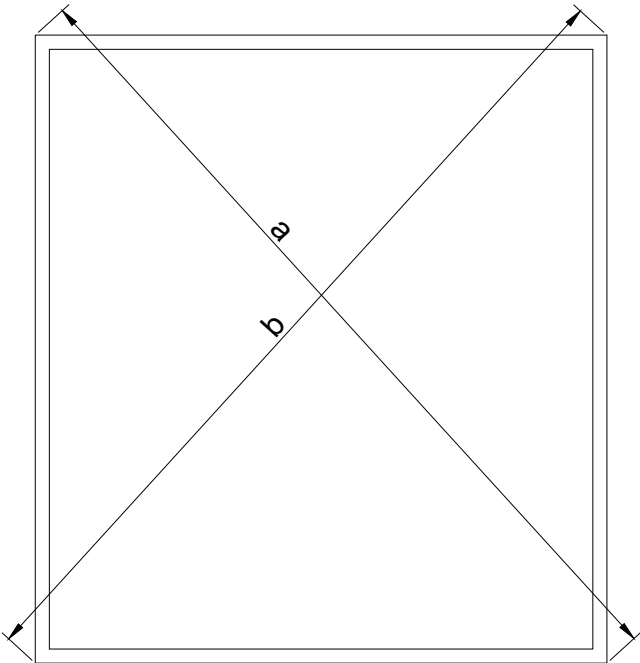


a = b

Front




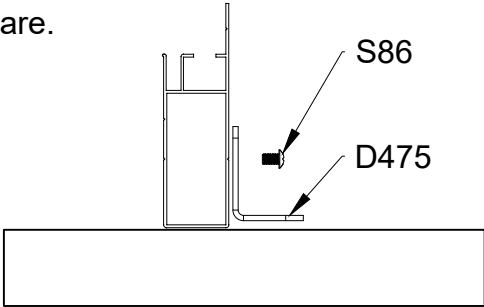


Expansion bolts assembly

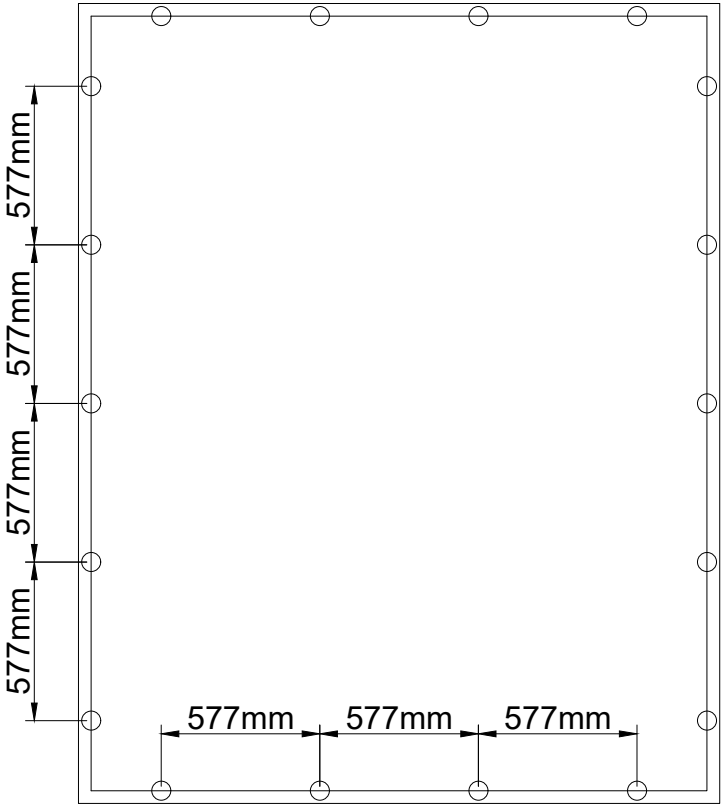
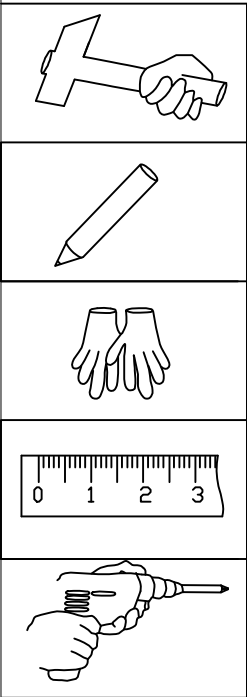
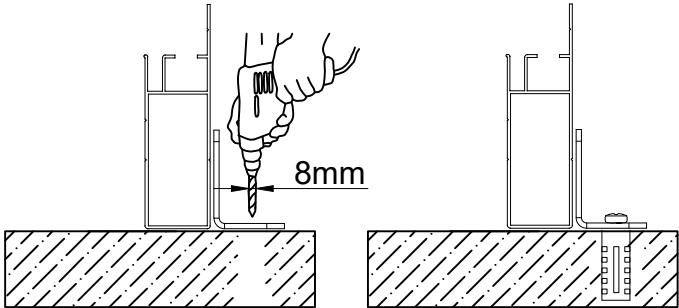


* This shows a layout for D475's positions where it is placed in the middle of the glazing panel for each section.






PART	NO	QTY
	L08A	2
	L08B	8
	D472	6
	J245	4
	S87 M4X25	32
	M02 M4	32

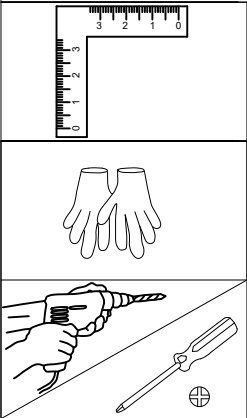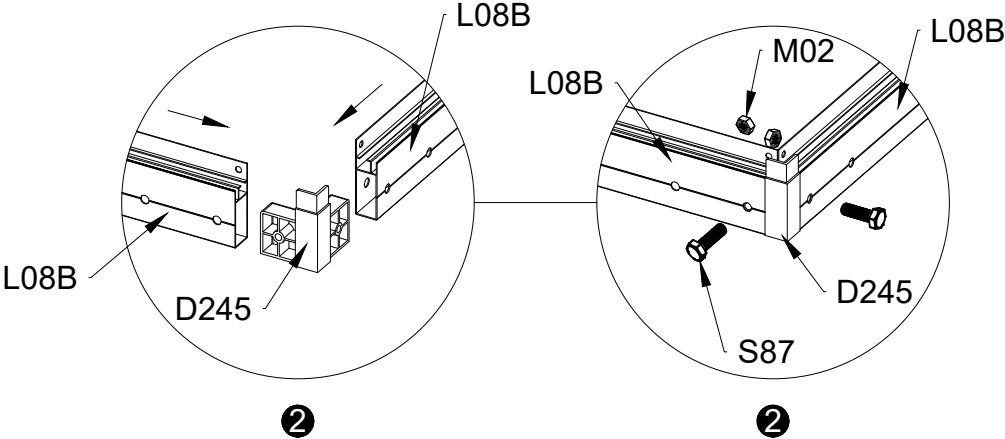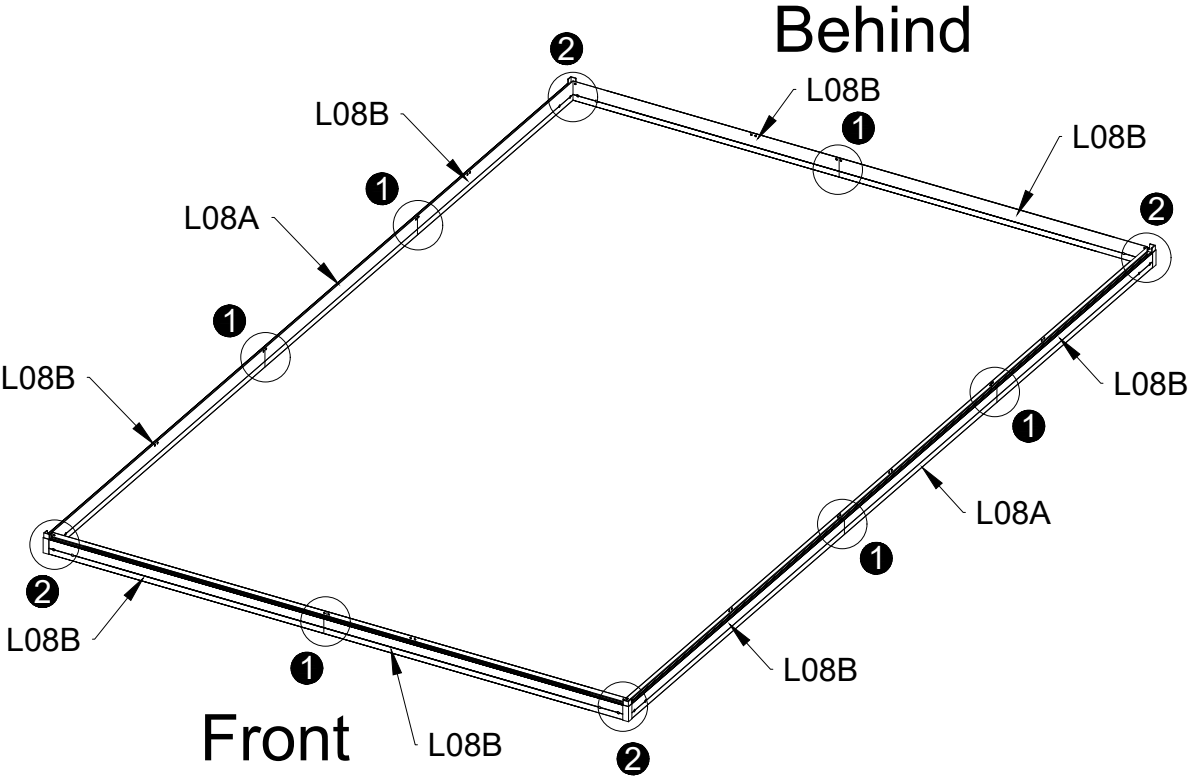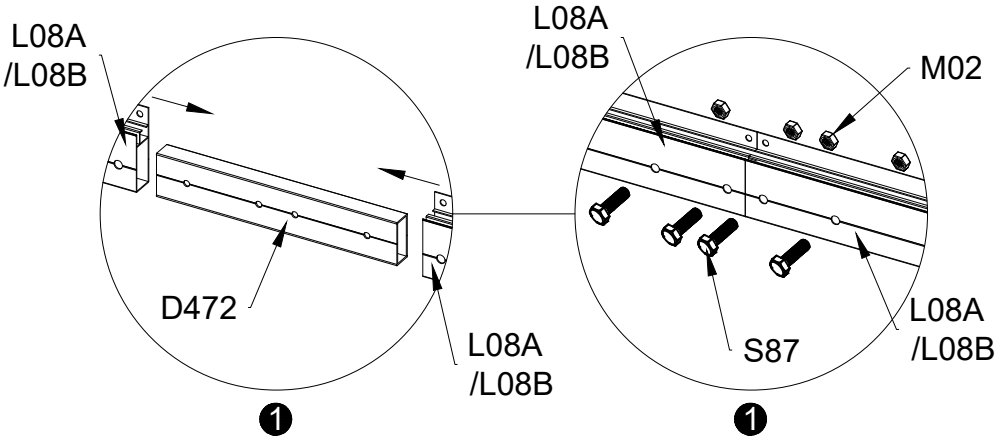


PART	NO	QTY
	L01B	1
	Y1	1
	S86	2
	M4X10	

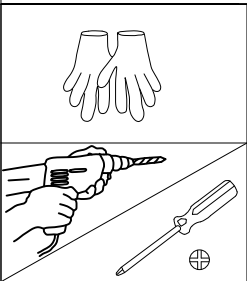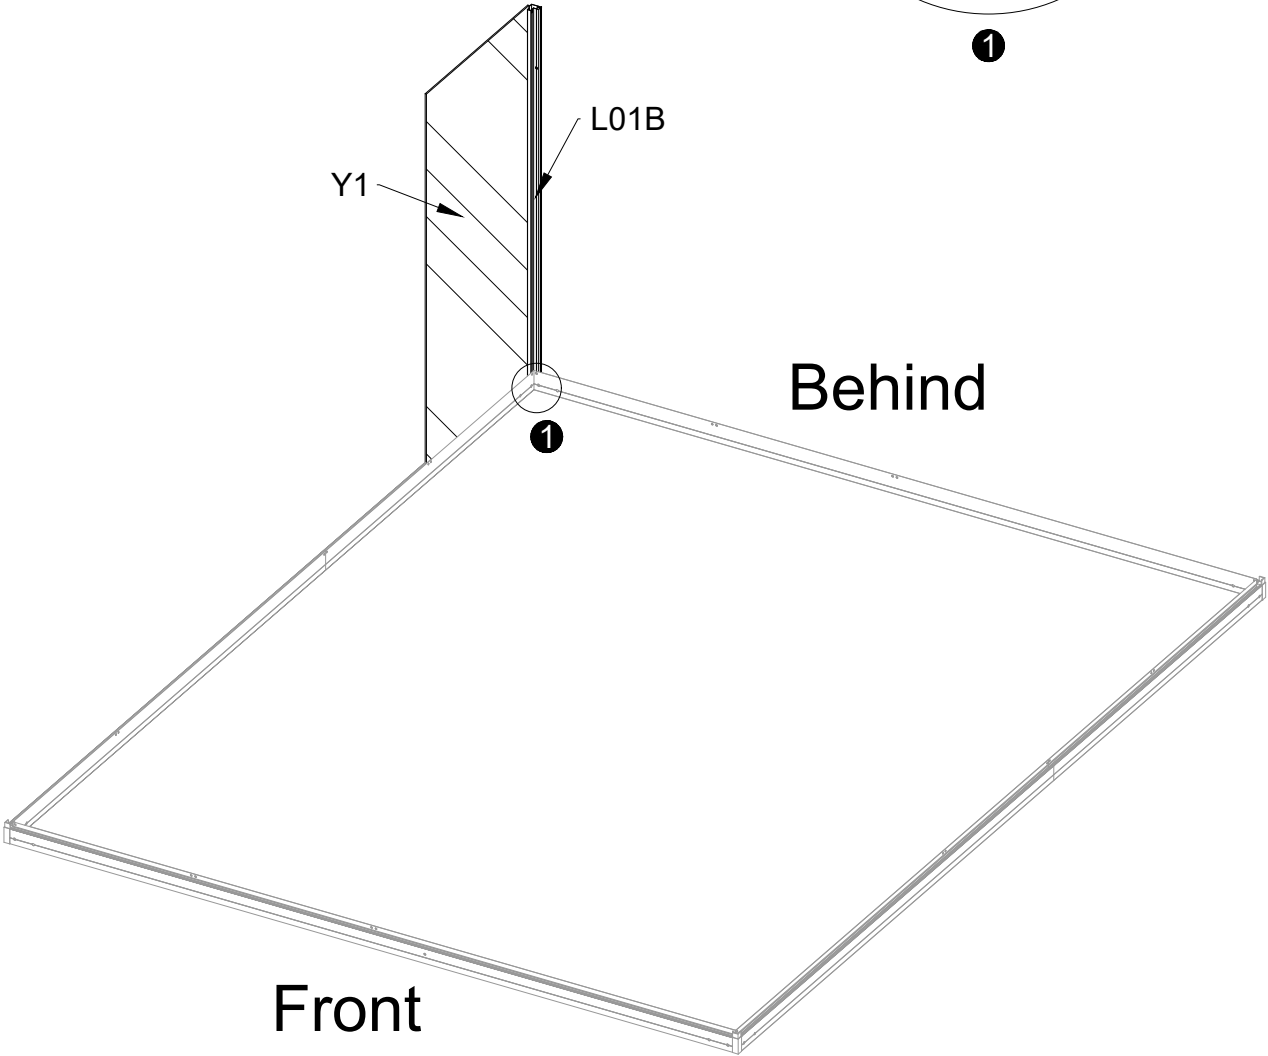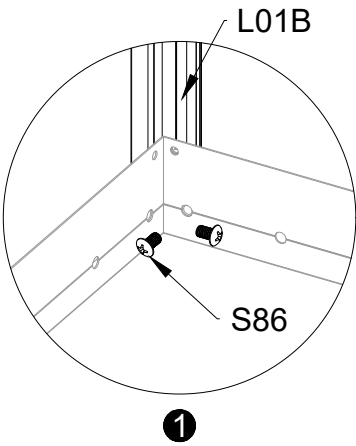






PART	NO	QTY
	L02A	1
	L05A	1
	Y2	1
	S86	3
	M4X10	
	S87	1
	M4X25	
	M02	1
	M4	

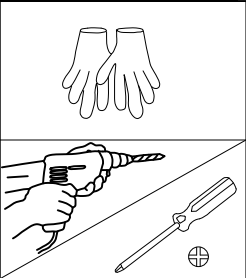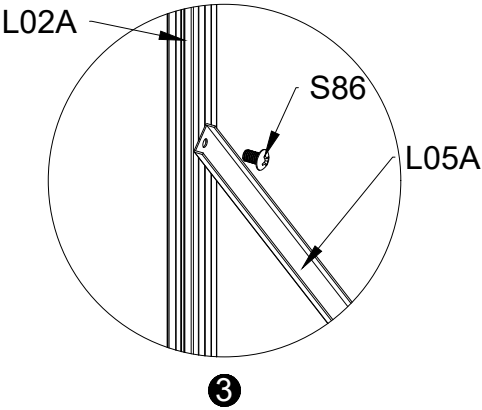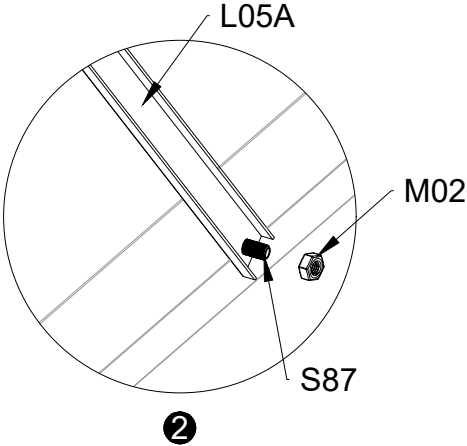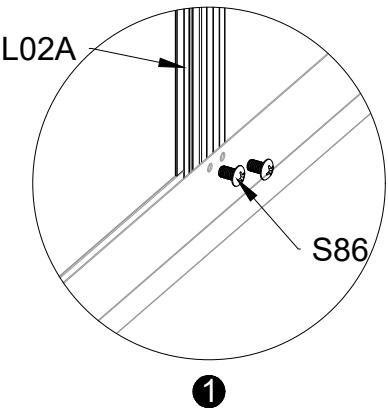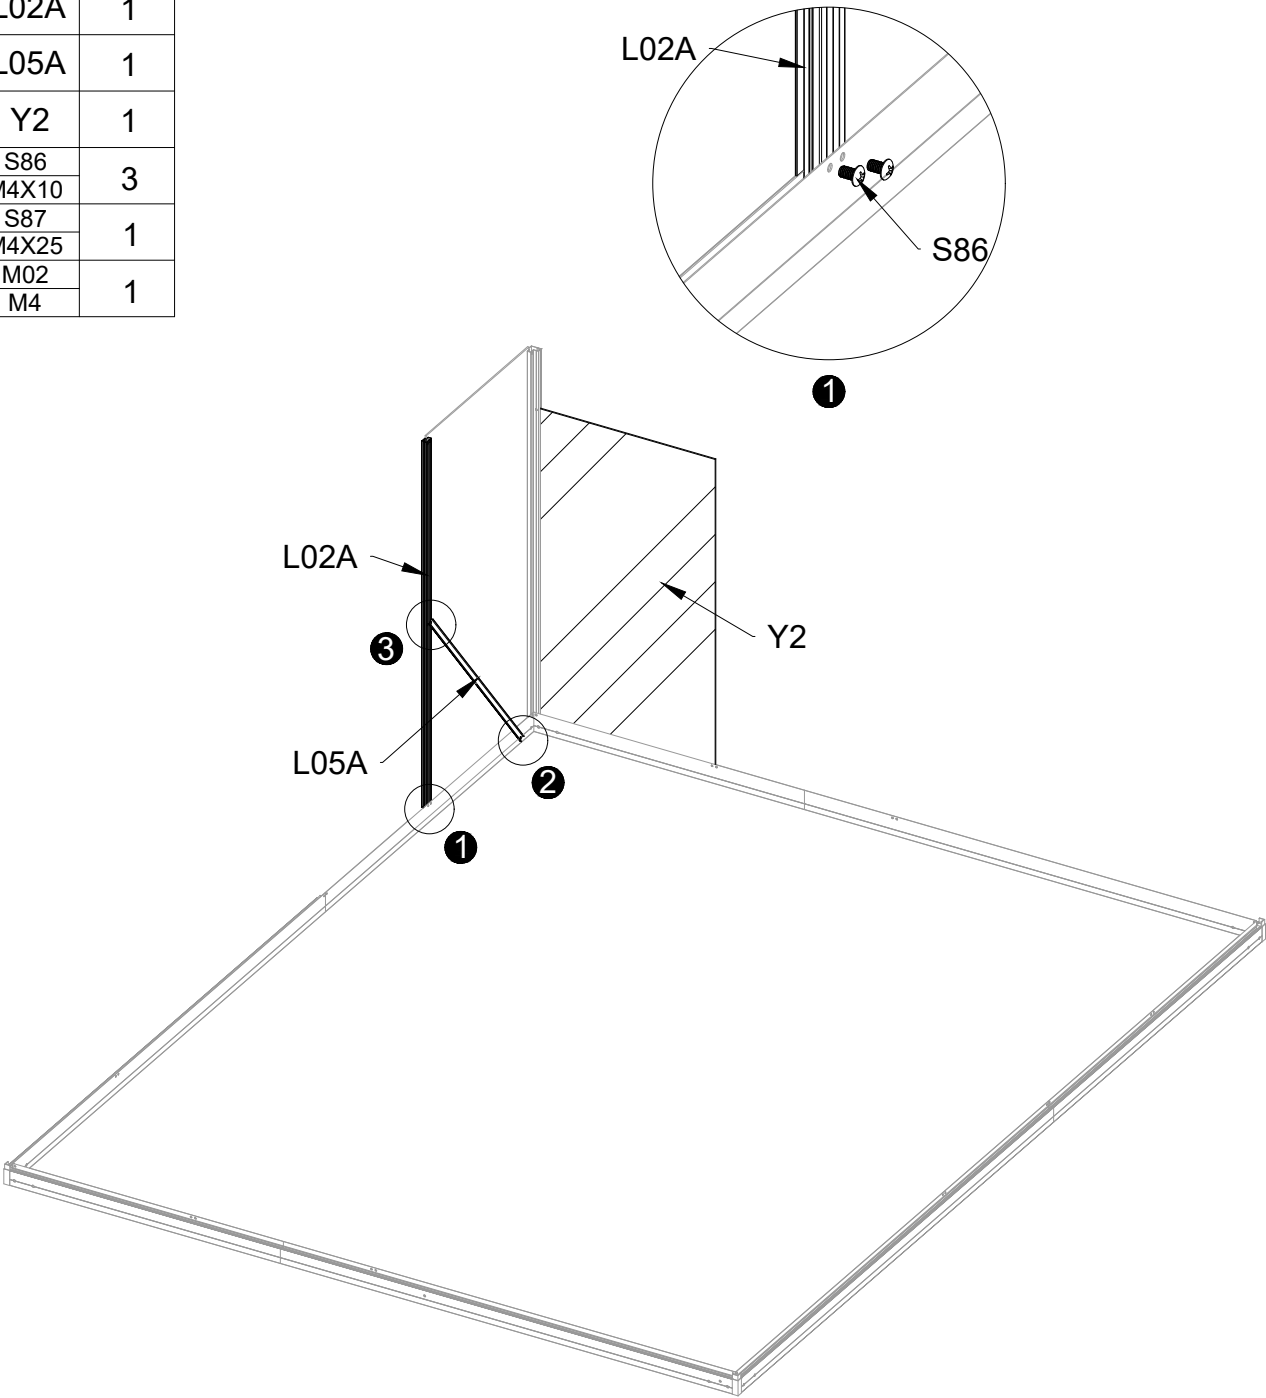







PART	NO	QTY
	L02H-1	1
	L02H-2	1
	A116	1
	A118	1
	S86 M4X10	3

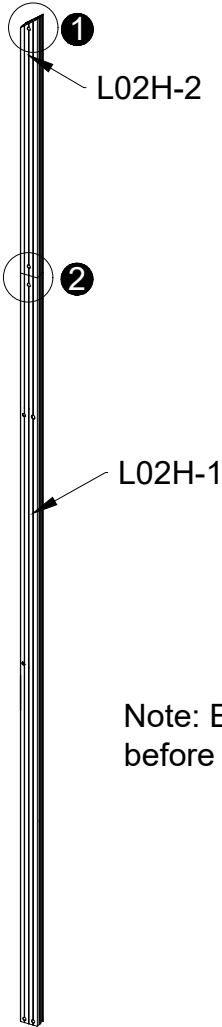




Note: Ensure all the holes are aligned before tightening the screws.

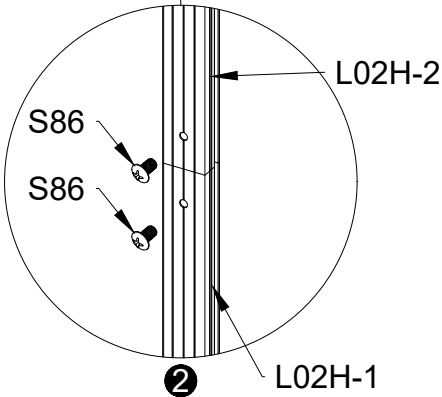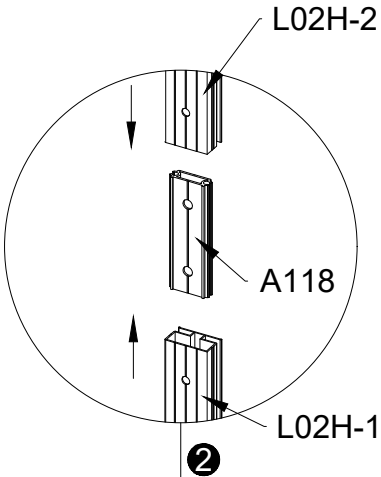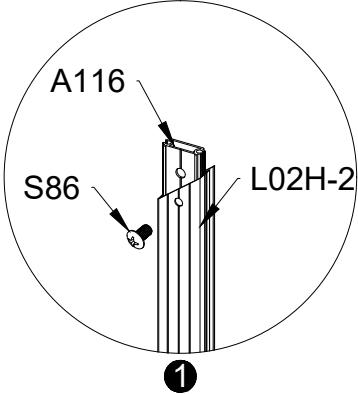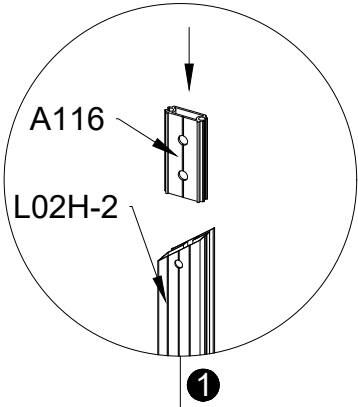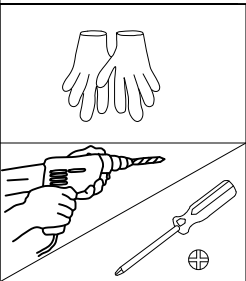






PART	NO	QTY
	L04A	1
	L05A	1
	S86	5
	M4X10	
	S87	1
	M4X25	
	M02	1
	M4	

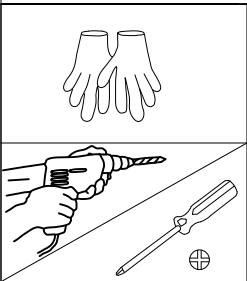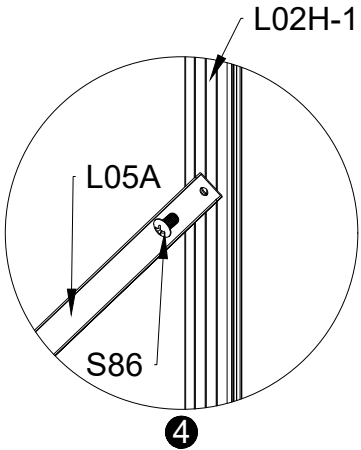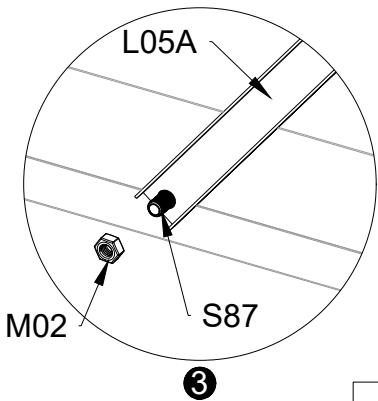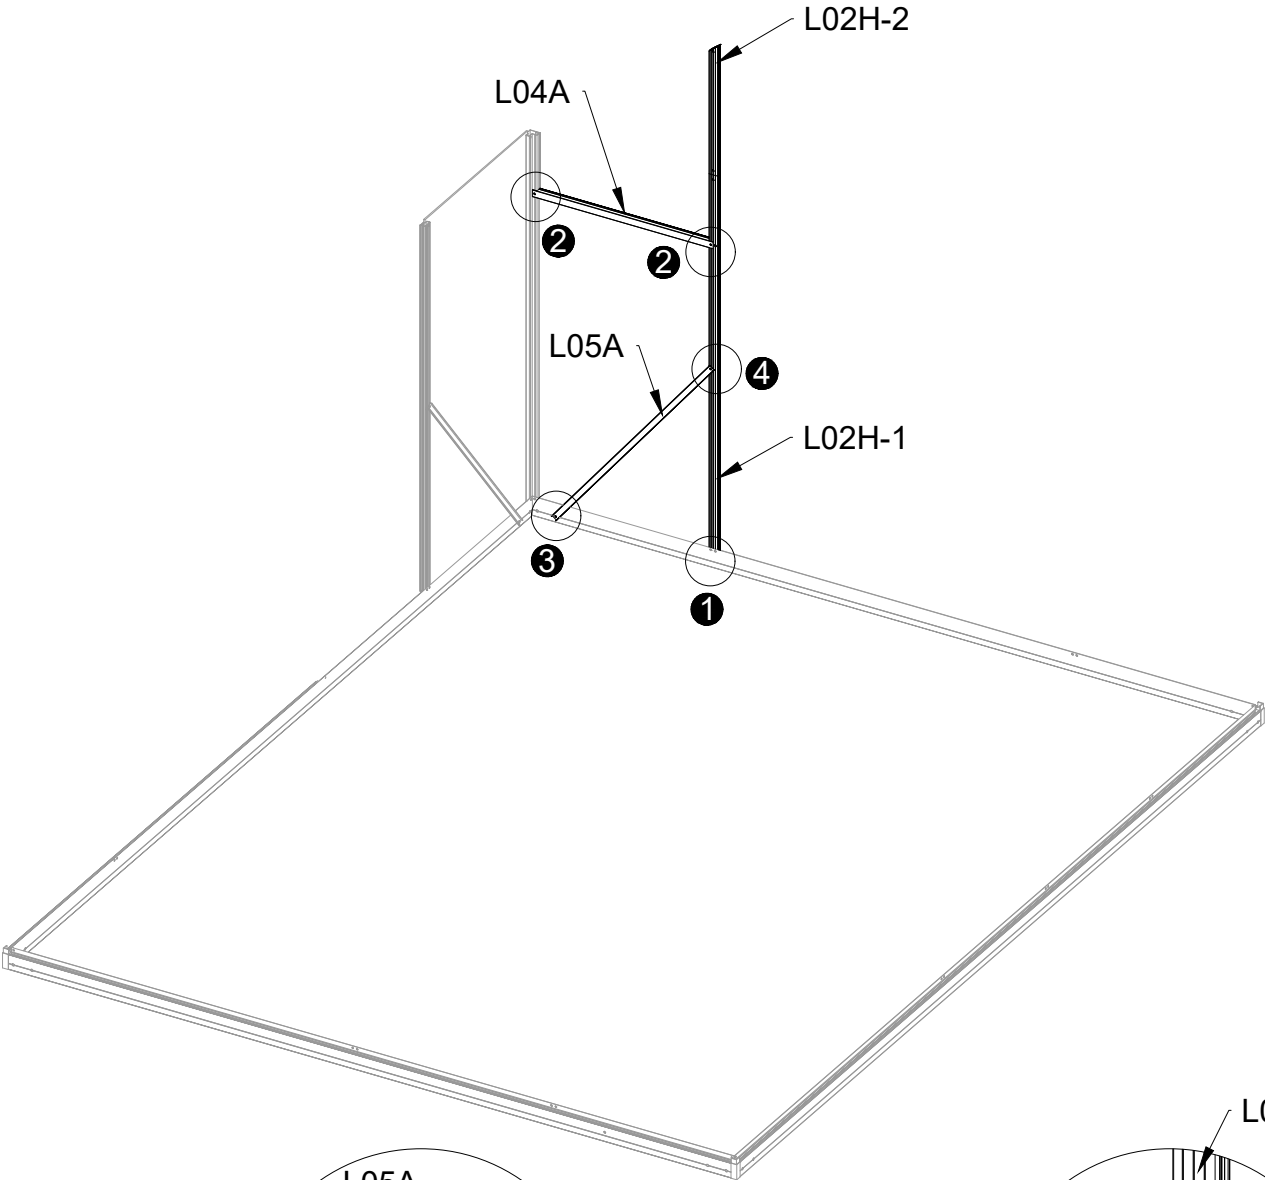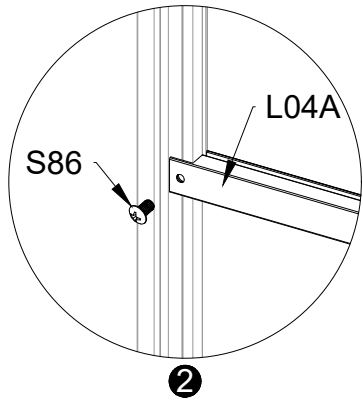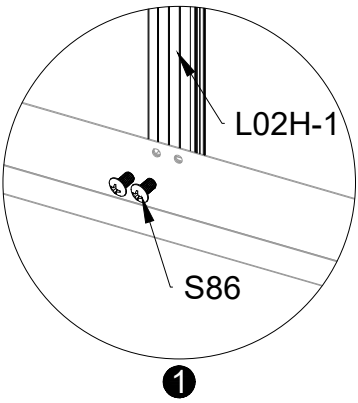



PART	NO	QTY
	L01A	1
	Y1	1
	S86 M4X10	2

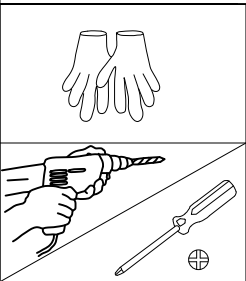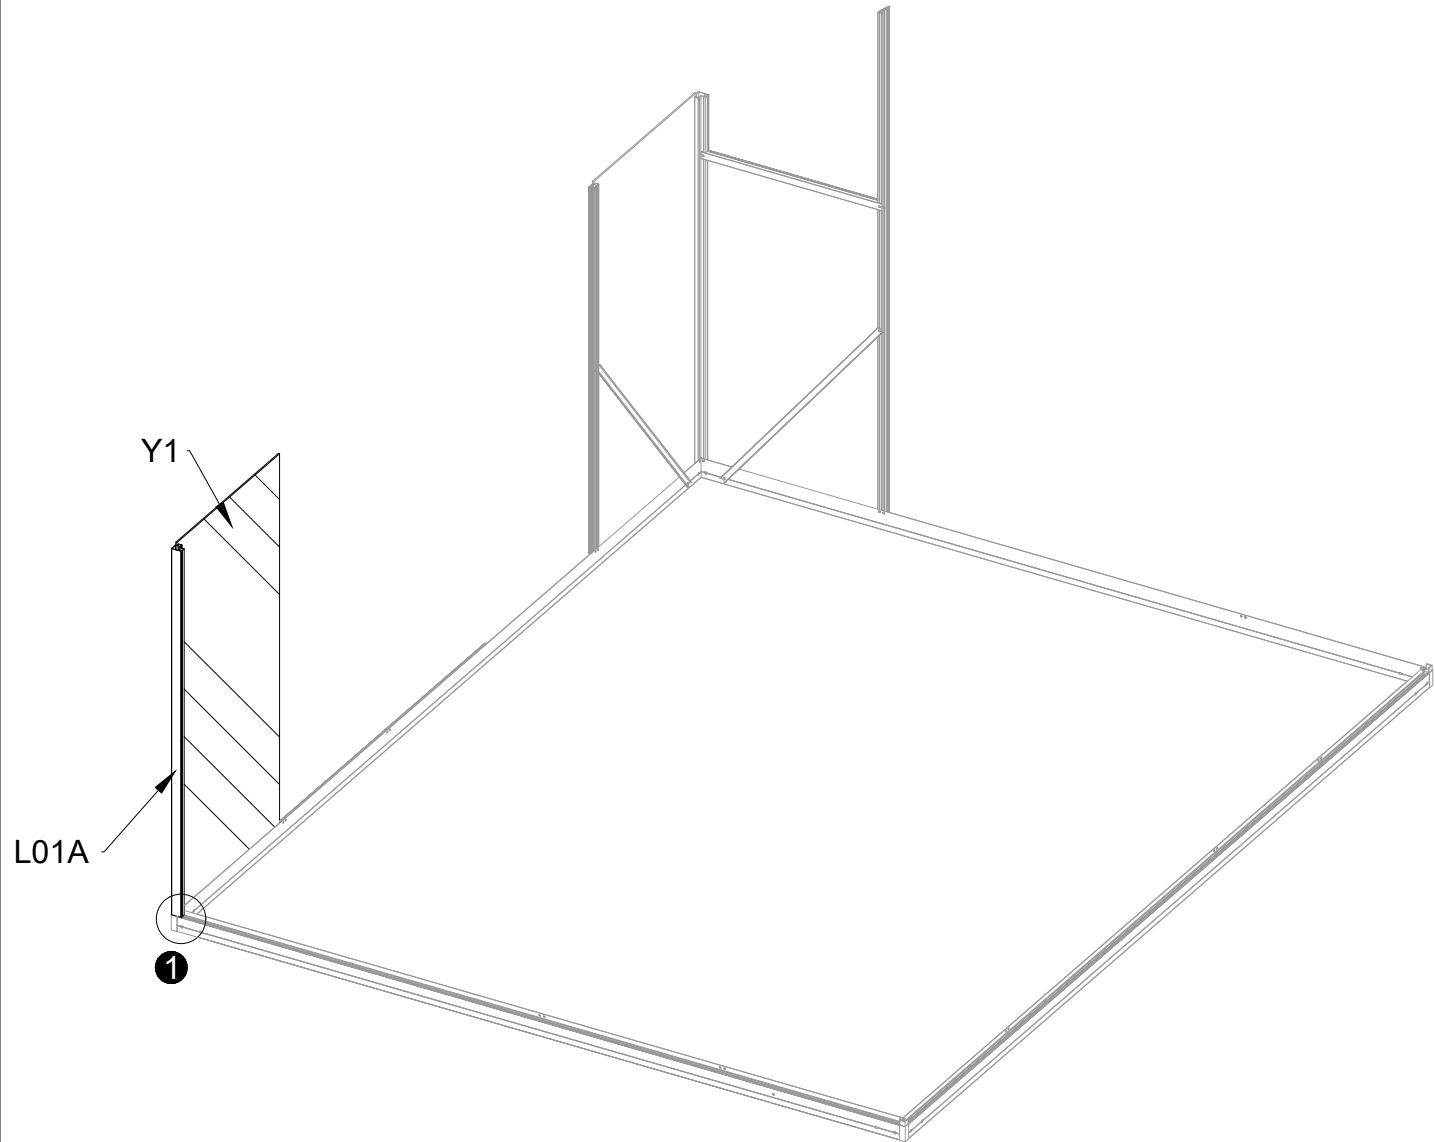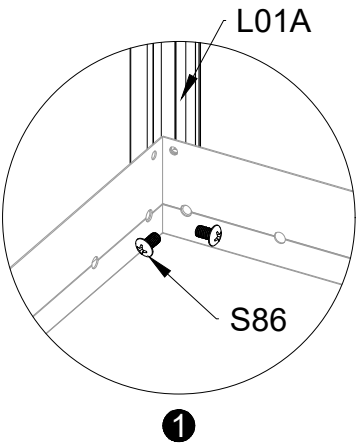



PART	NO	QTY
	L02A	1
	L05A	1
	S86	3
	M4X10	
	S87	1
	M4X25	
	M02	1
	M4	

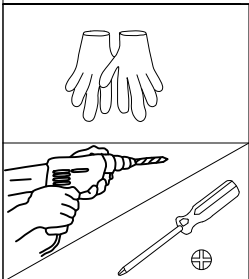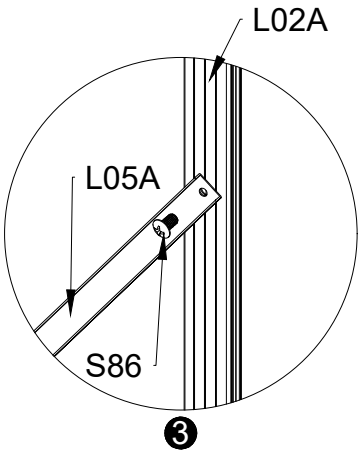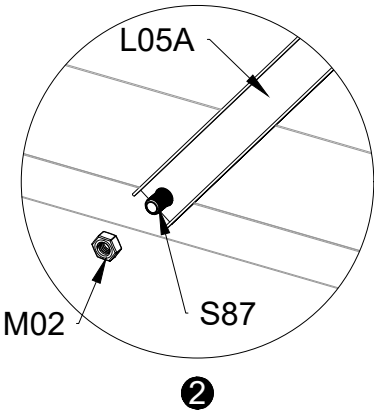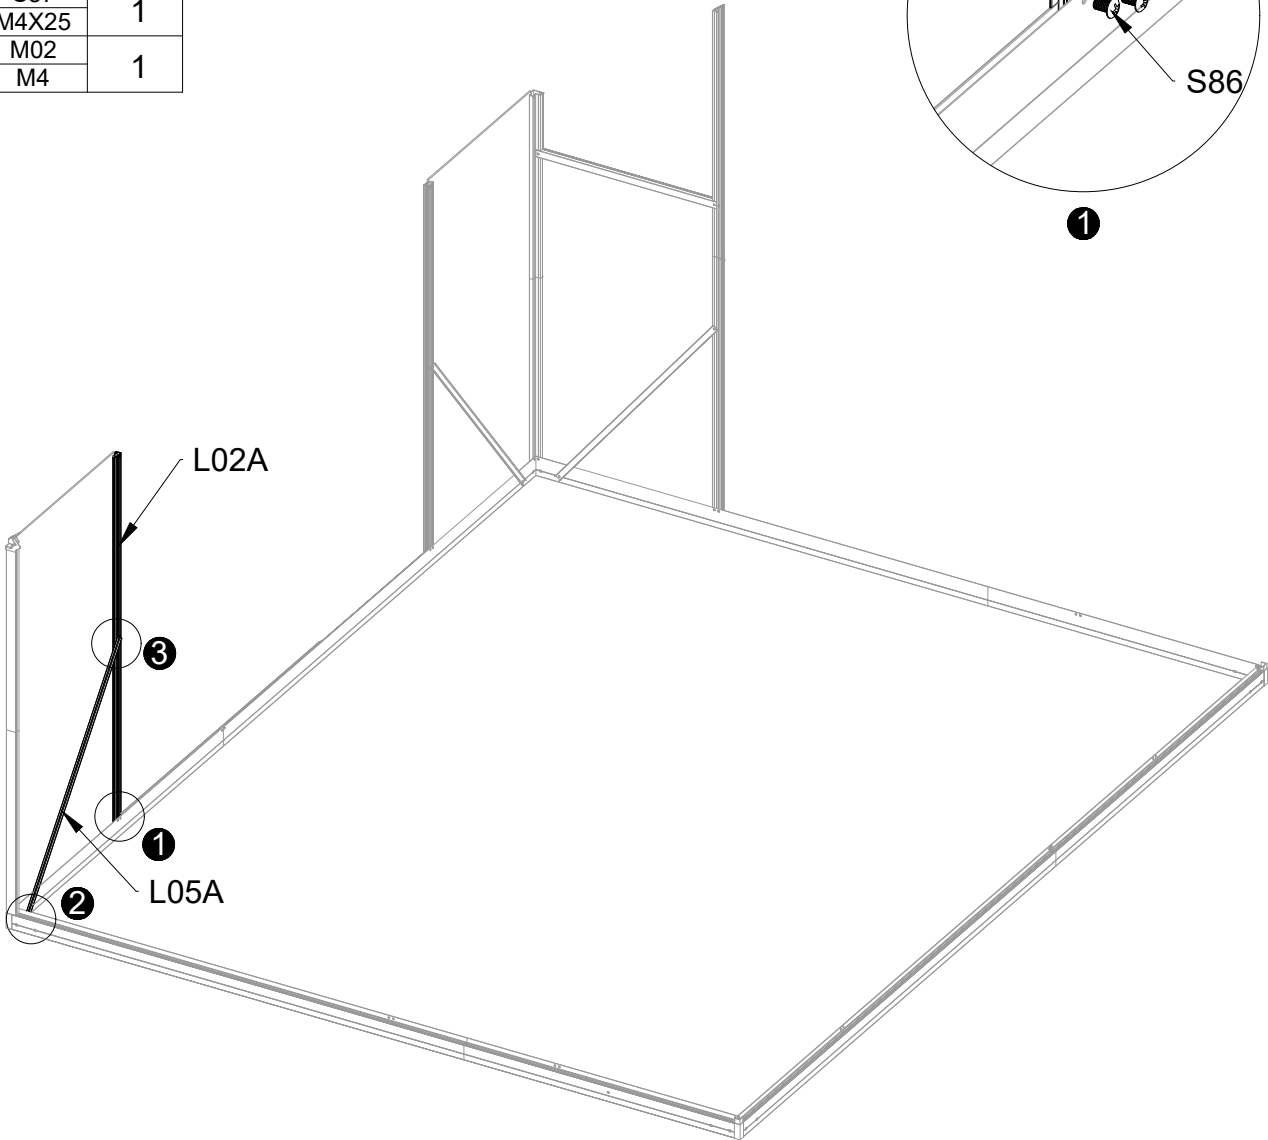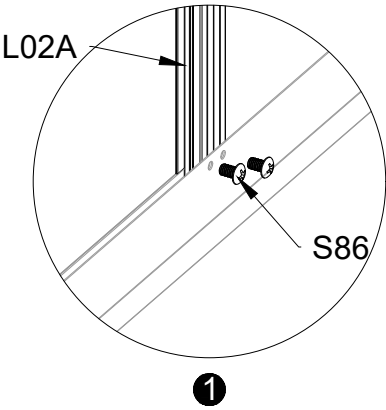


PART	NO	QTY
	L07A	1
	L07B	2
	A120	2
	A121	2
	S86 M4X10	6

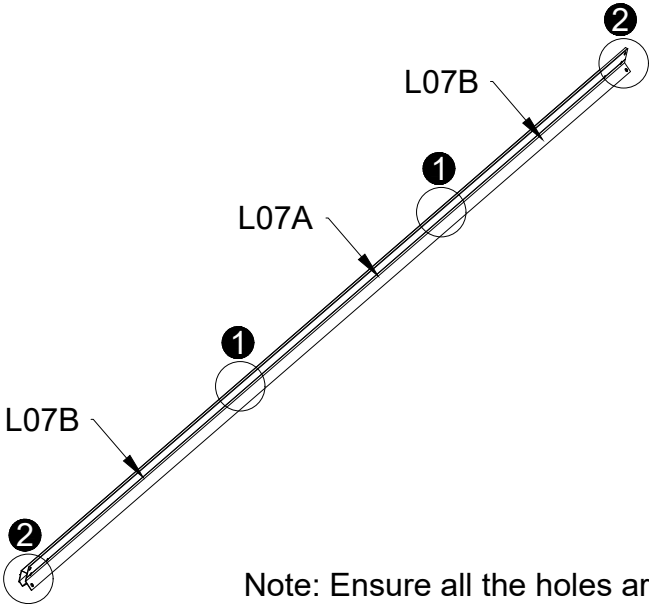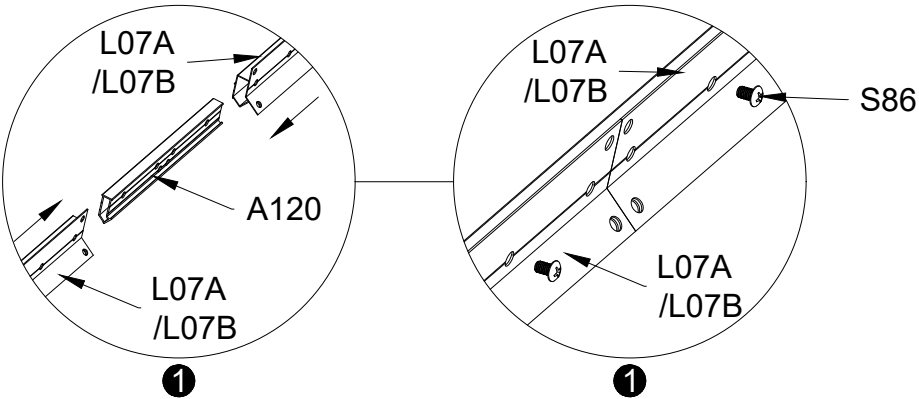





Note: Ensure all the holes are aligned before tightening the screws.

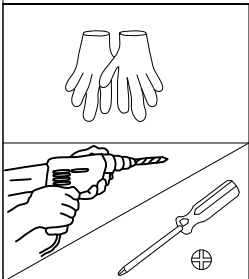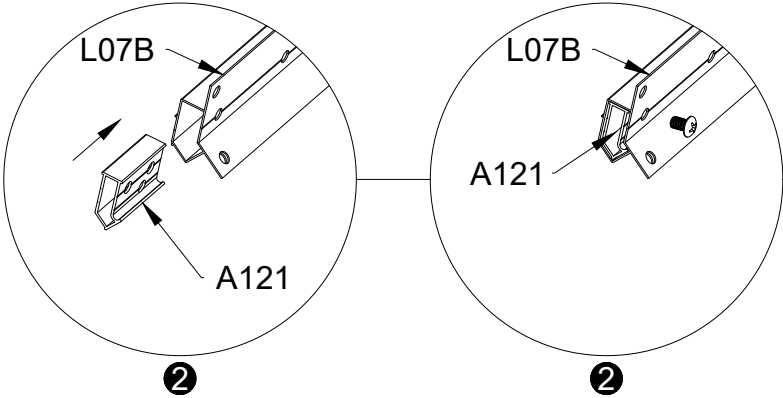

PART	NO	QTY
	Y2	1
	S86 M4X10	6



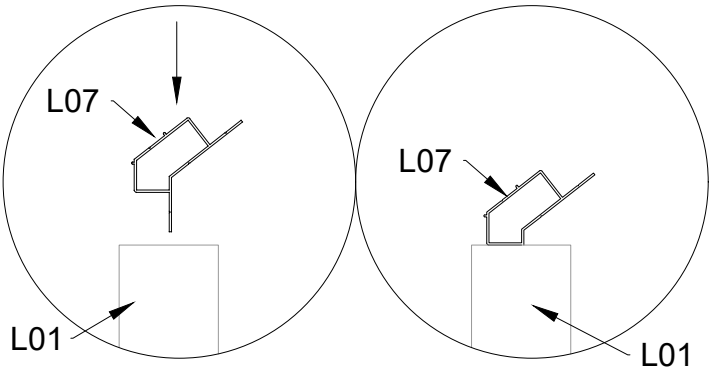


Note the placement direction of L07, with the concave side facing inward.

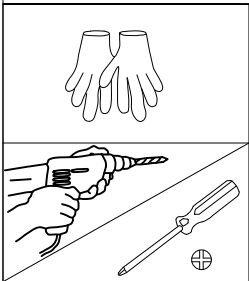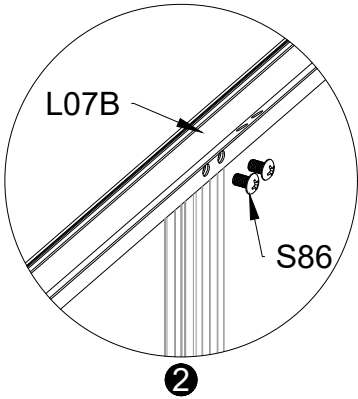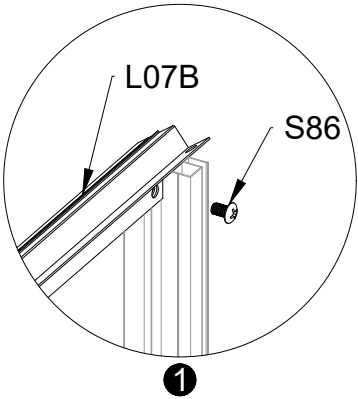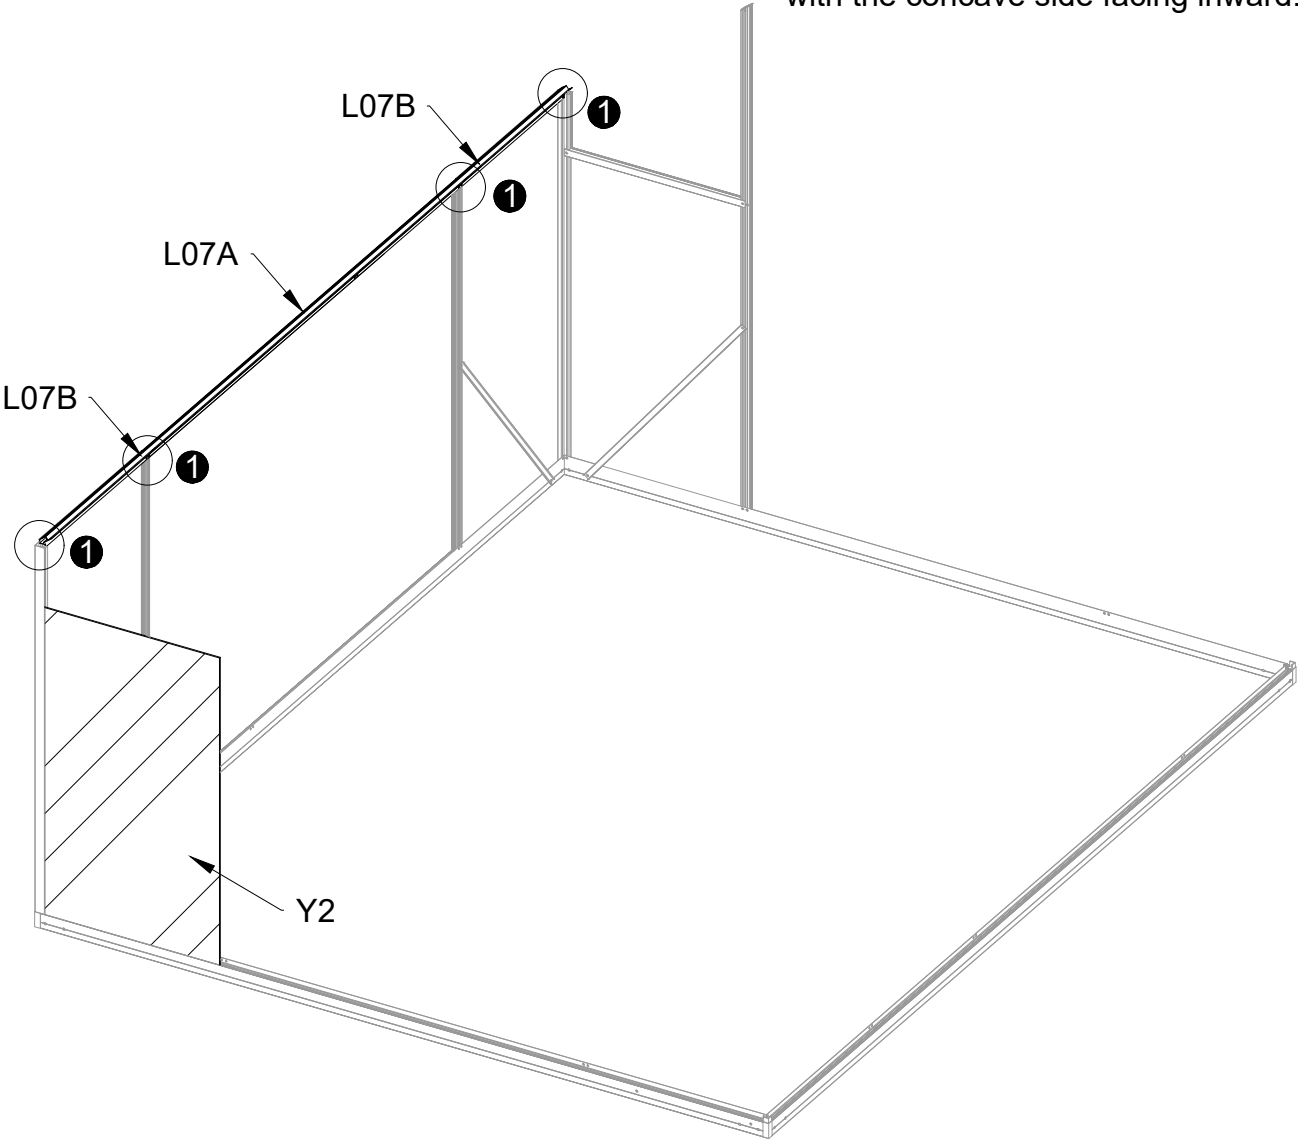


PART	NO	QTY
	L03C-1	1
	L03C-2	1
	A116	1
	A118	1
	S86 M4X10	3


Note: Ensure all the holes are aligned before tightening the screws.

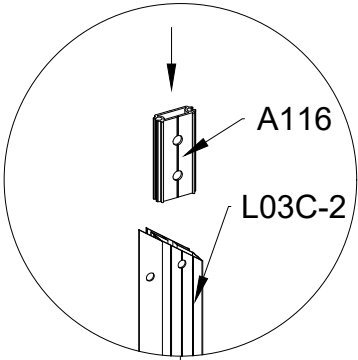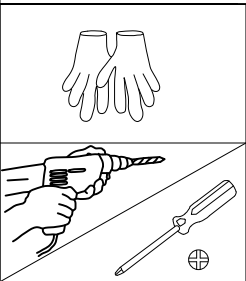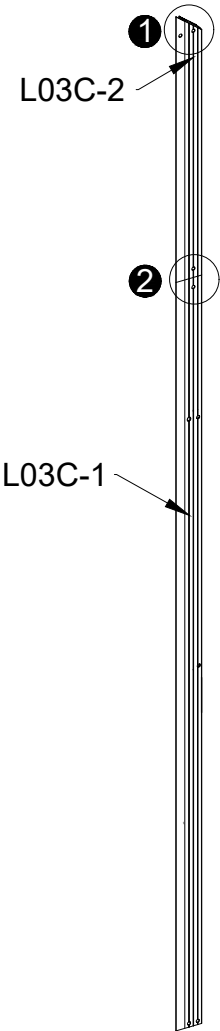


1

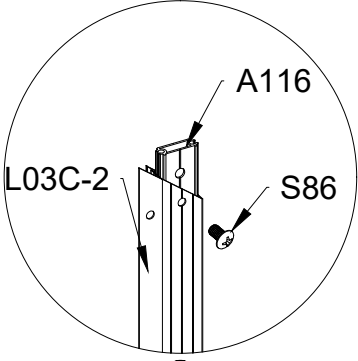

1






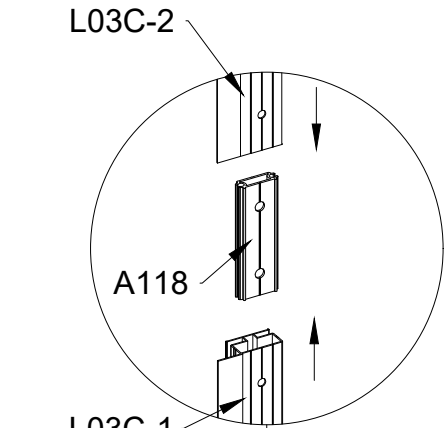


1

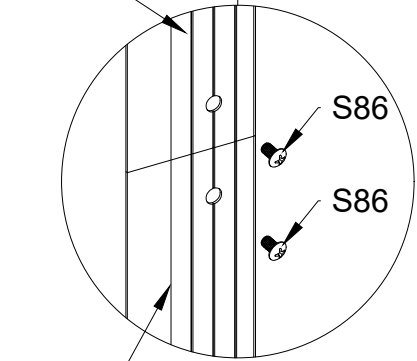


1



PART	NO	QTY
	L04A	1
	L05A	1
	Y2	1
	S86	5
	M4X10	
	S87	1
	M4X25	
	M02	1
	M4	

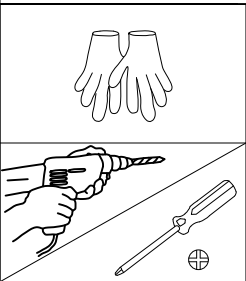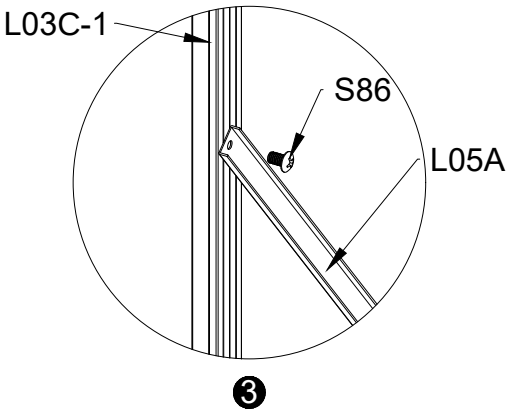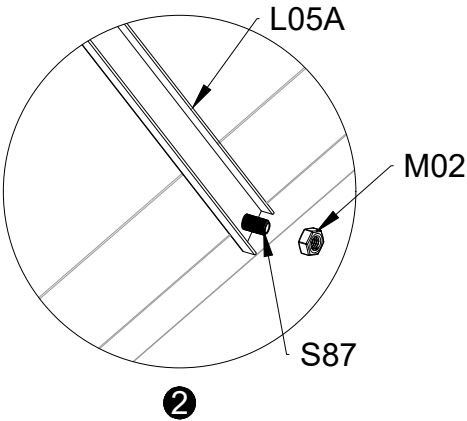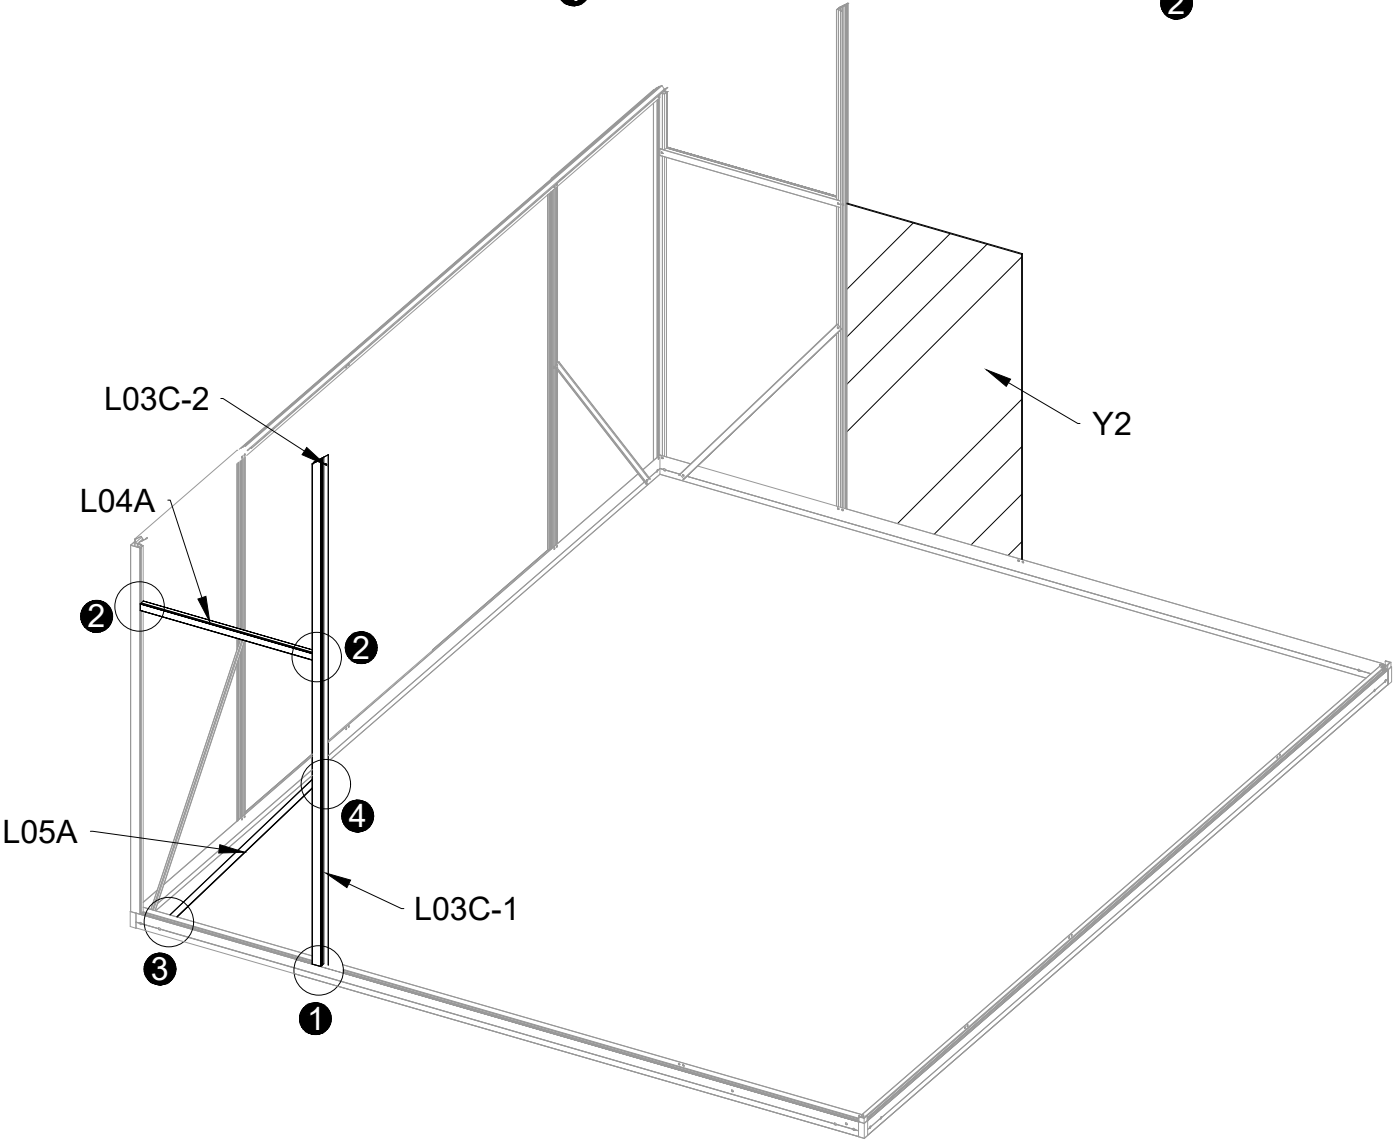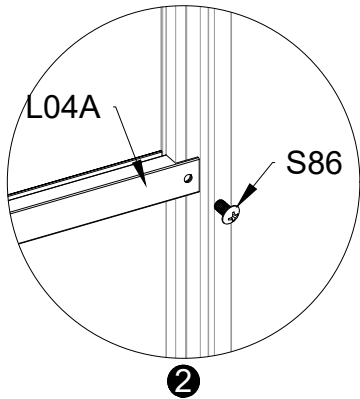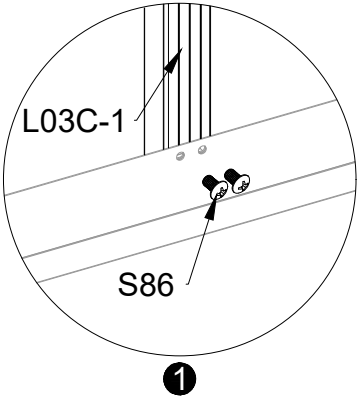







PART	NO	QTY
	L02W-1	1
	L02W-2	1
	L03A-1	1
	L03A-2	1
	A116	1
	A118	2
	S86 M4X10	5

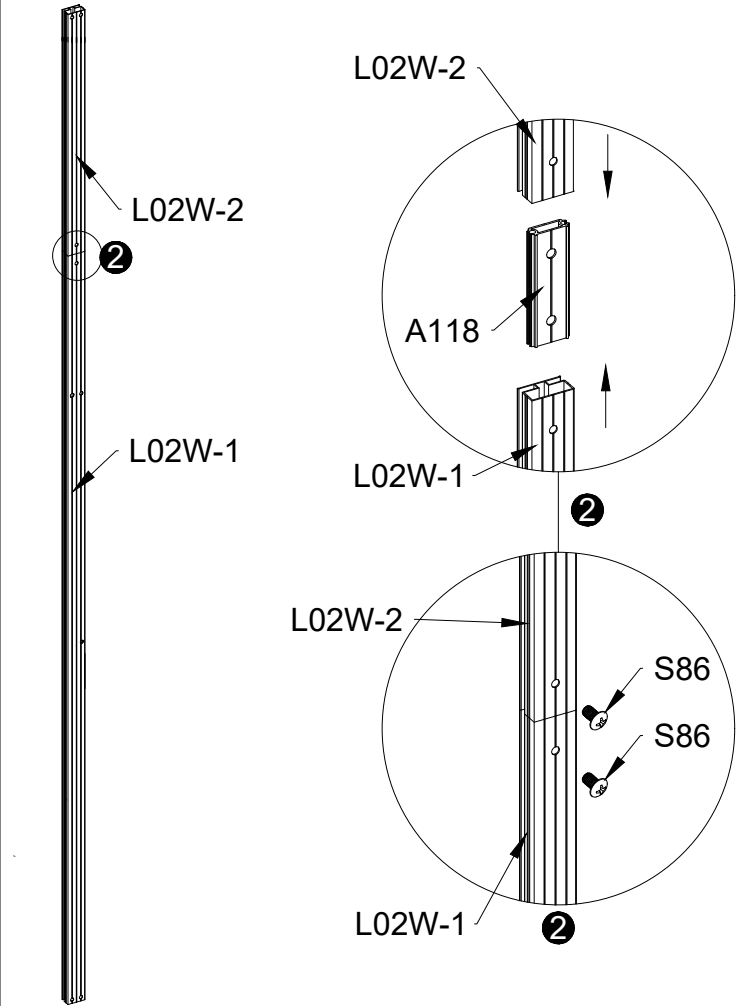

Note: Ensure all the holes are aligned before tightening the screws.





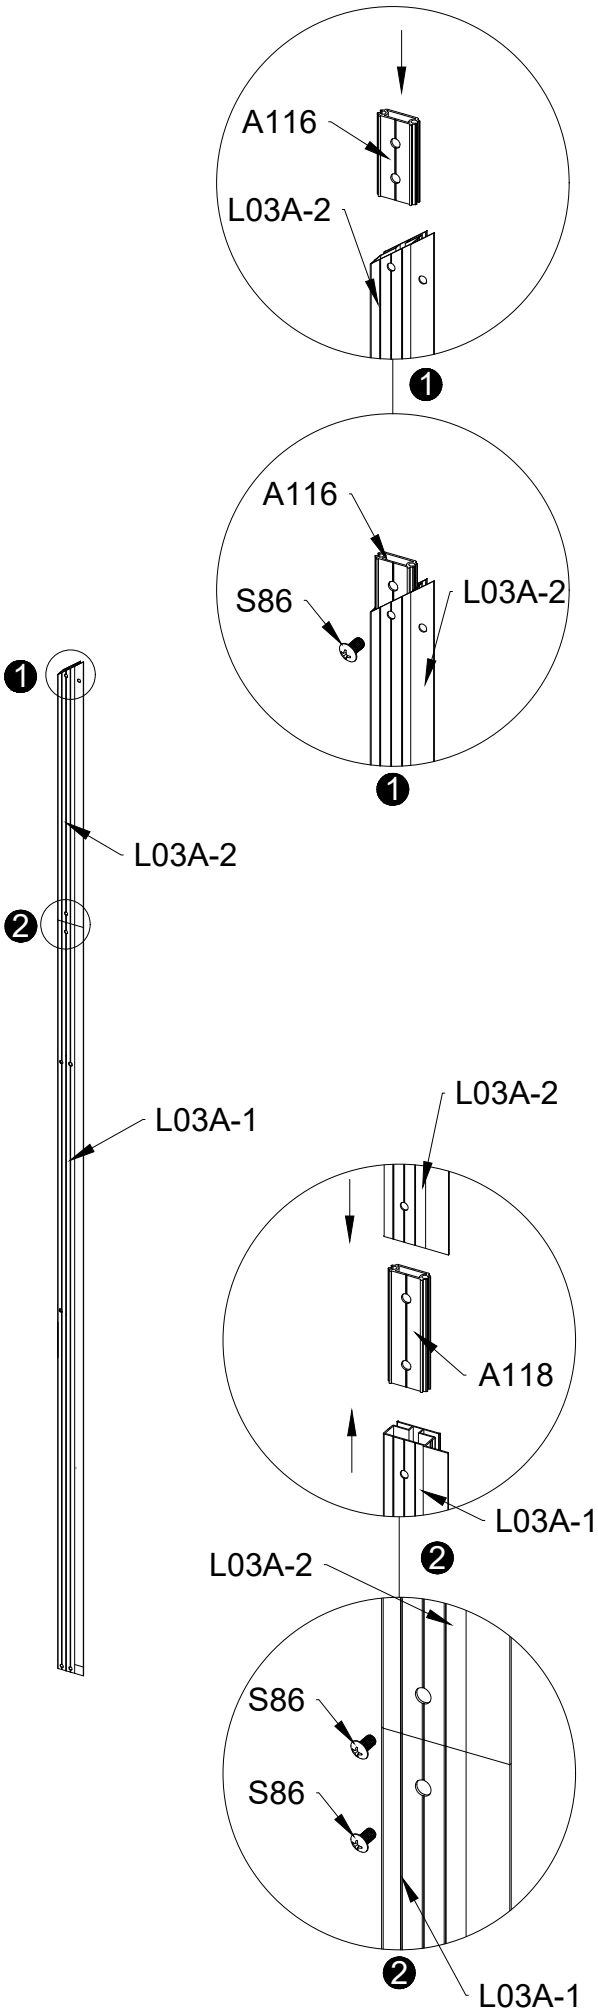
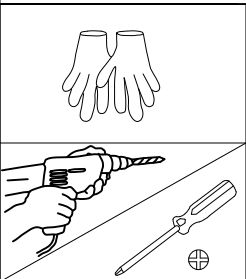


PART	NO	QTY
	L03H	1
	L04A	1
	S86 M4X10	8
	Y2	1

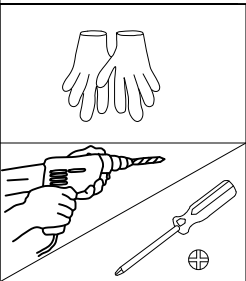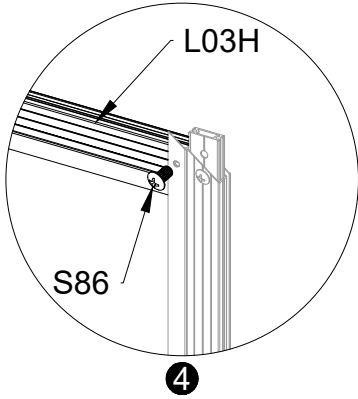
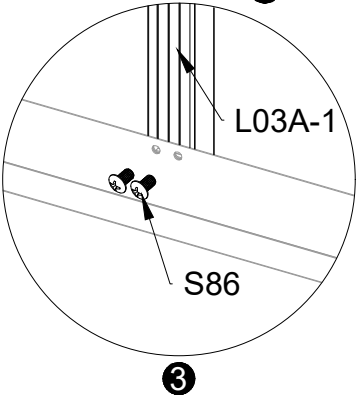
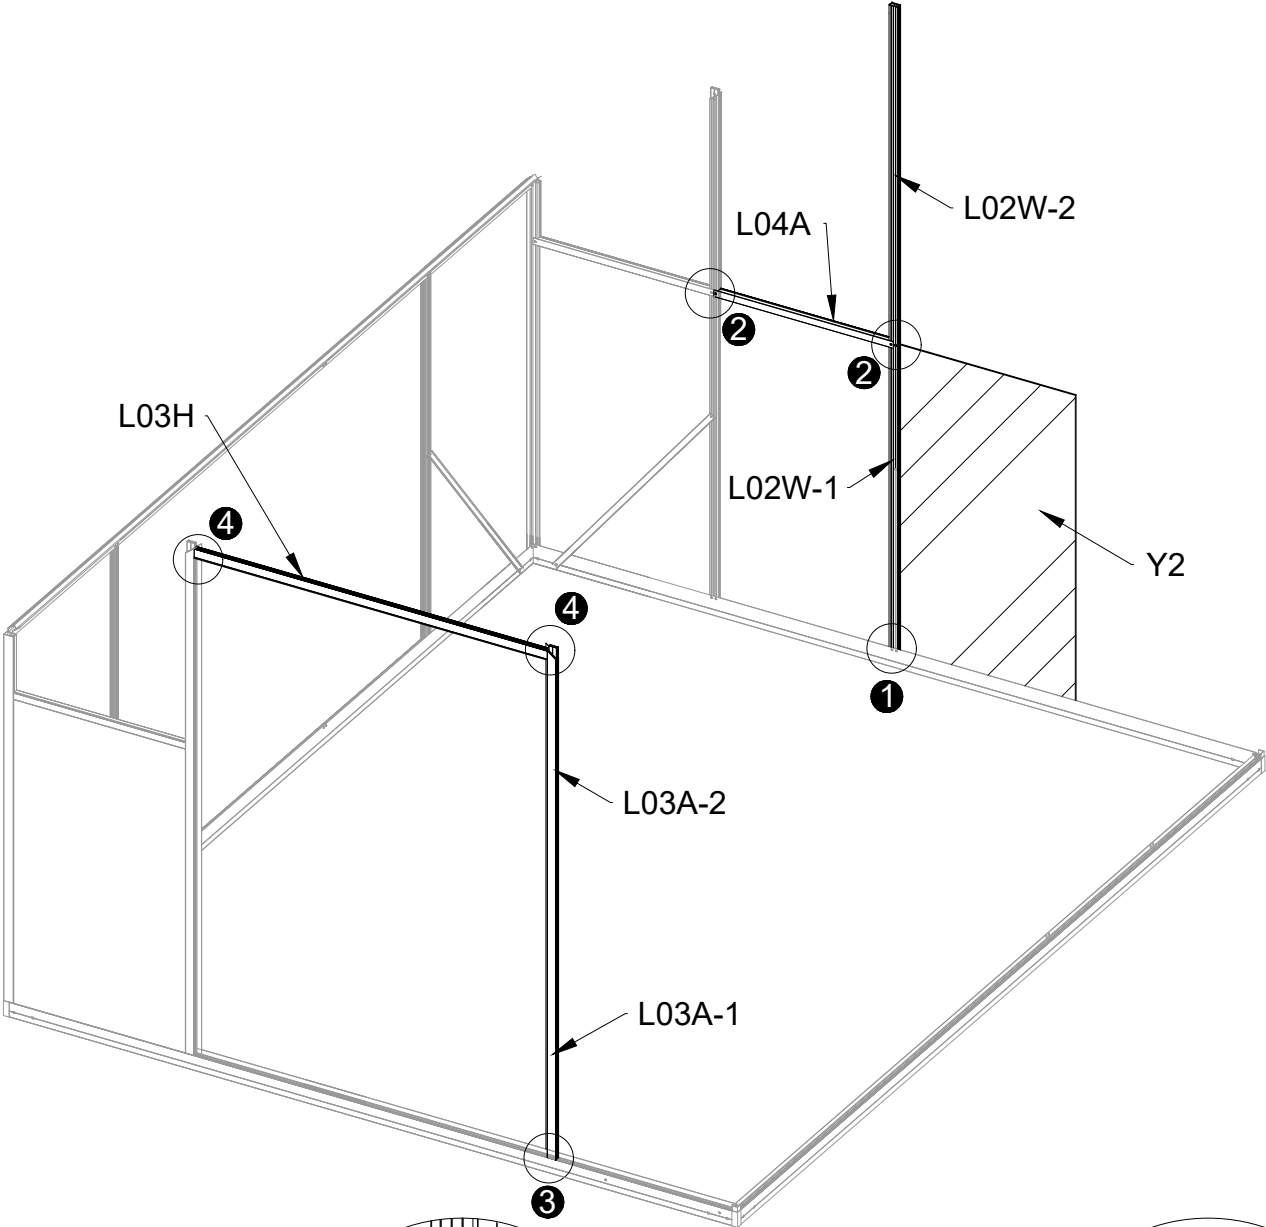
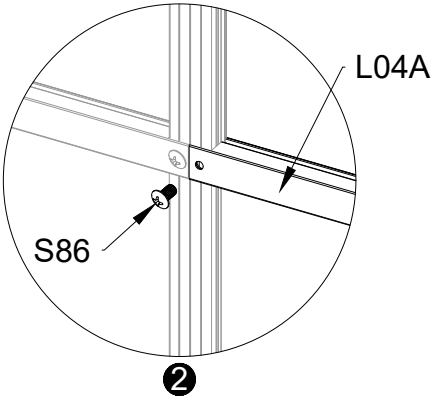
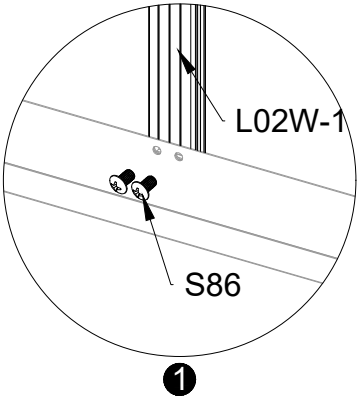


PART	NO	QTY
	L02I-1	1
	L02I-2	1
	A116	1
	A118	1
	S86 M4X10	3





Note: Ensure all the holes are aligned before tightening the screws.

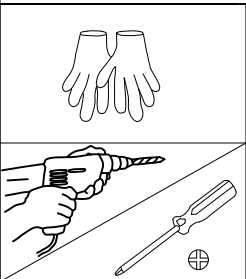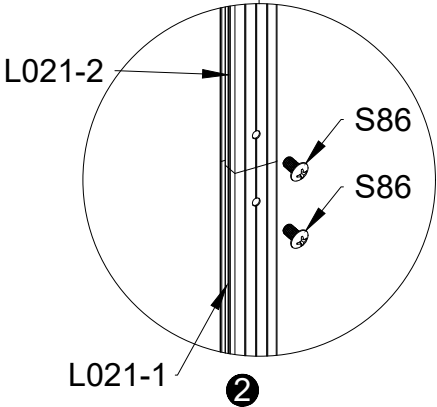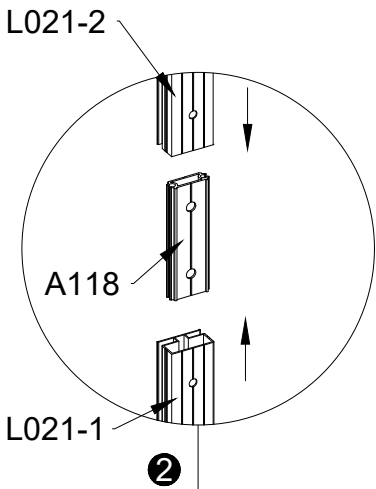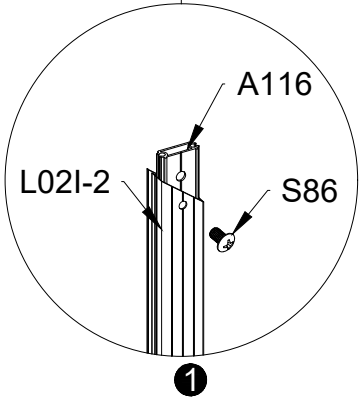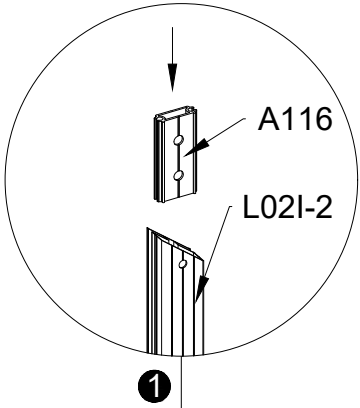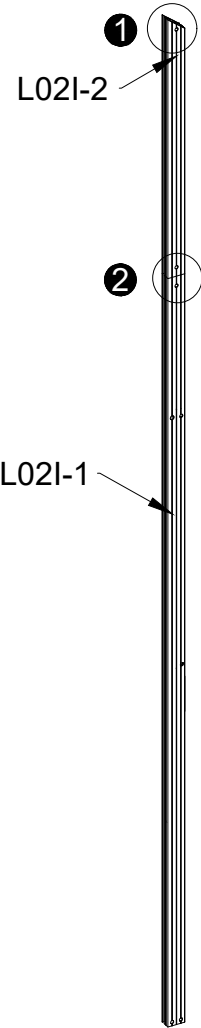






PART	NO	QTY
	L02U	1
	L04A	1
	S86 M4X10	8
	D473	1

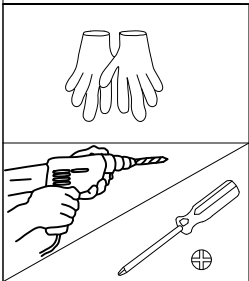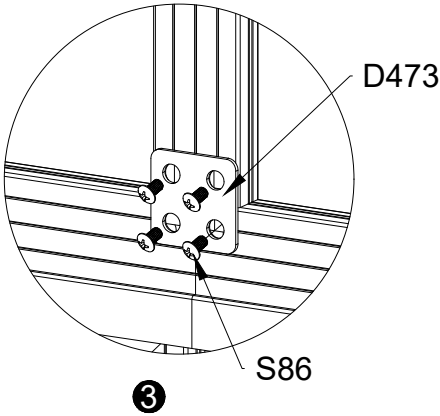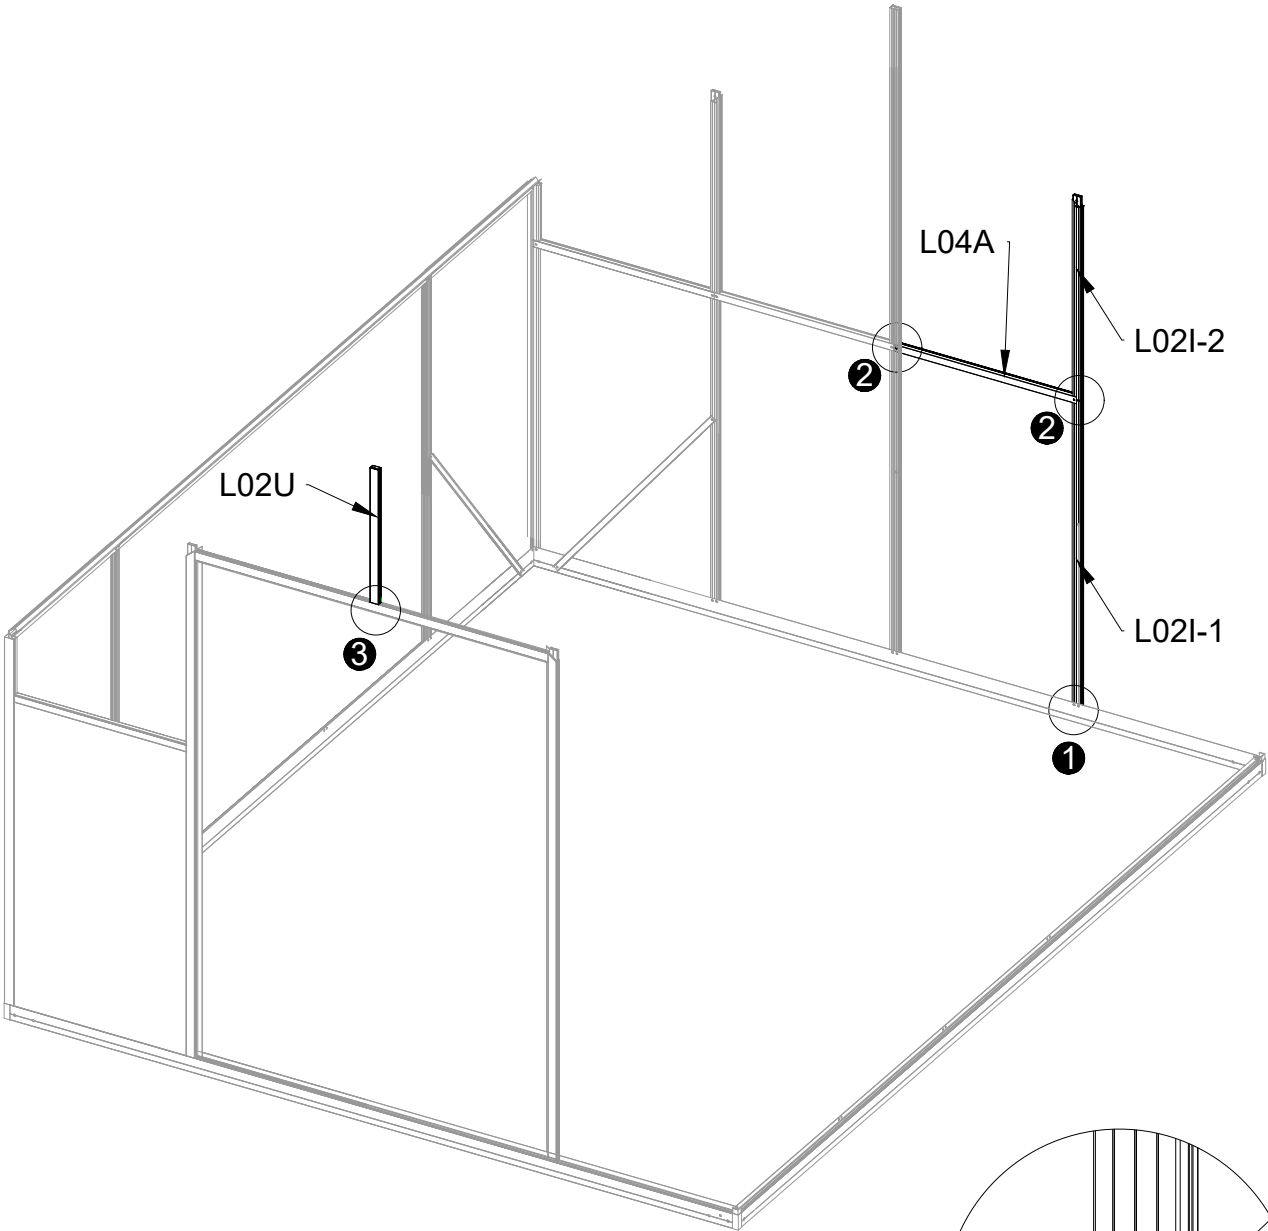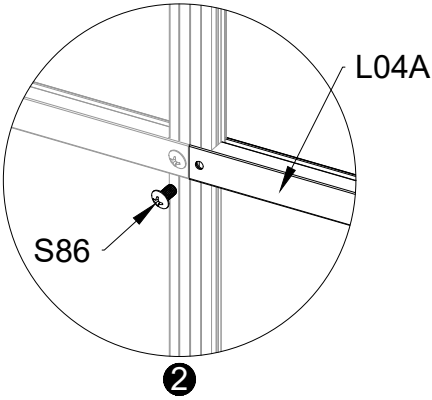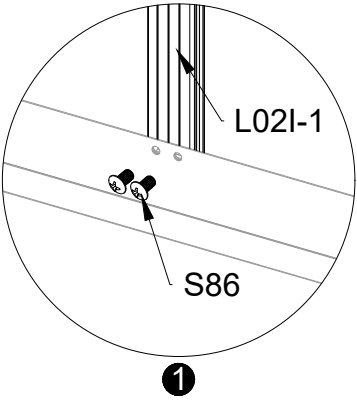


PART	NO	QTY
	L05A	2
	S86 M4X10	2
	S87 M4X25	2
	M02 M4	2

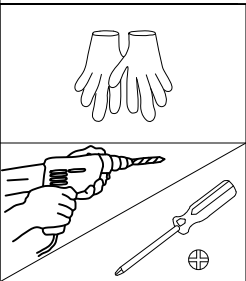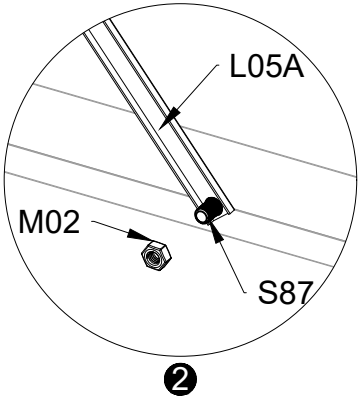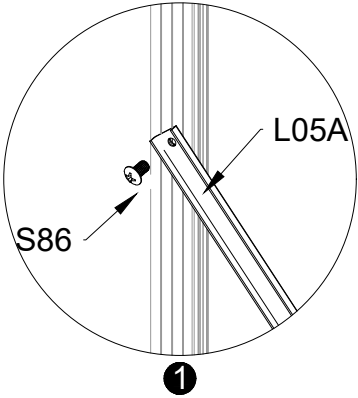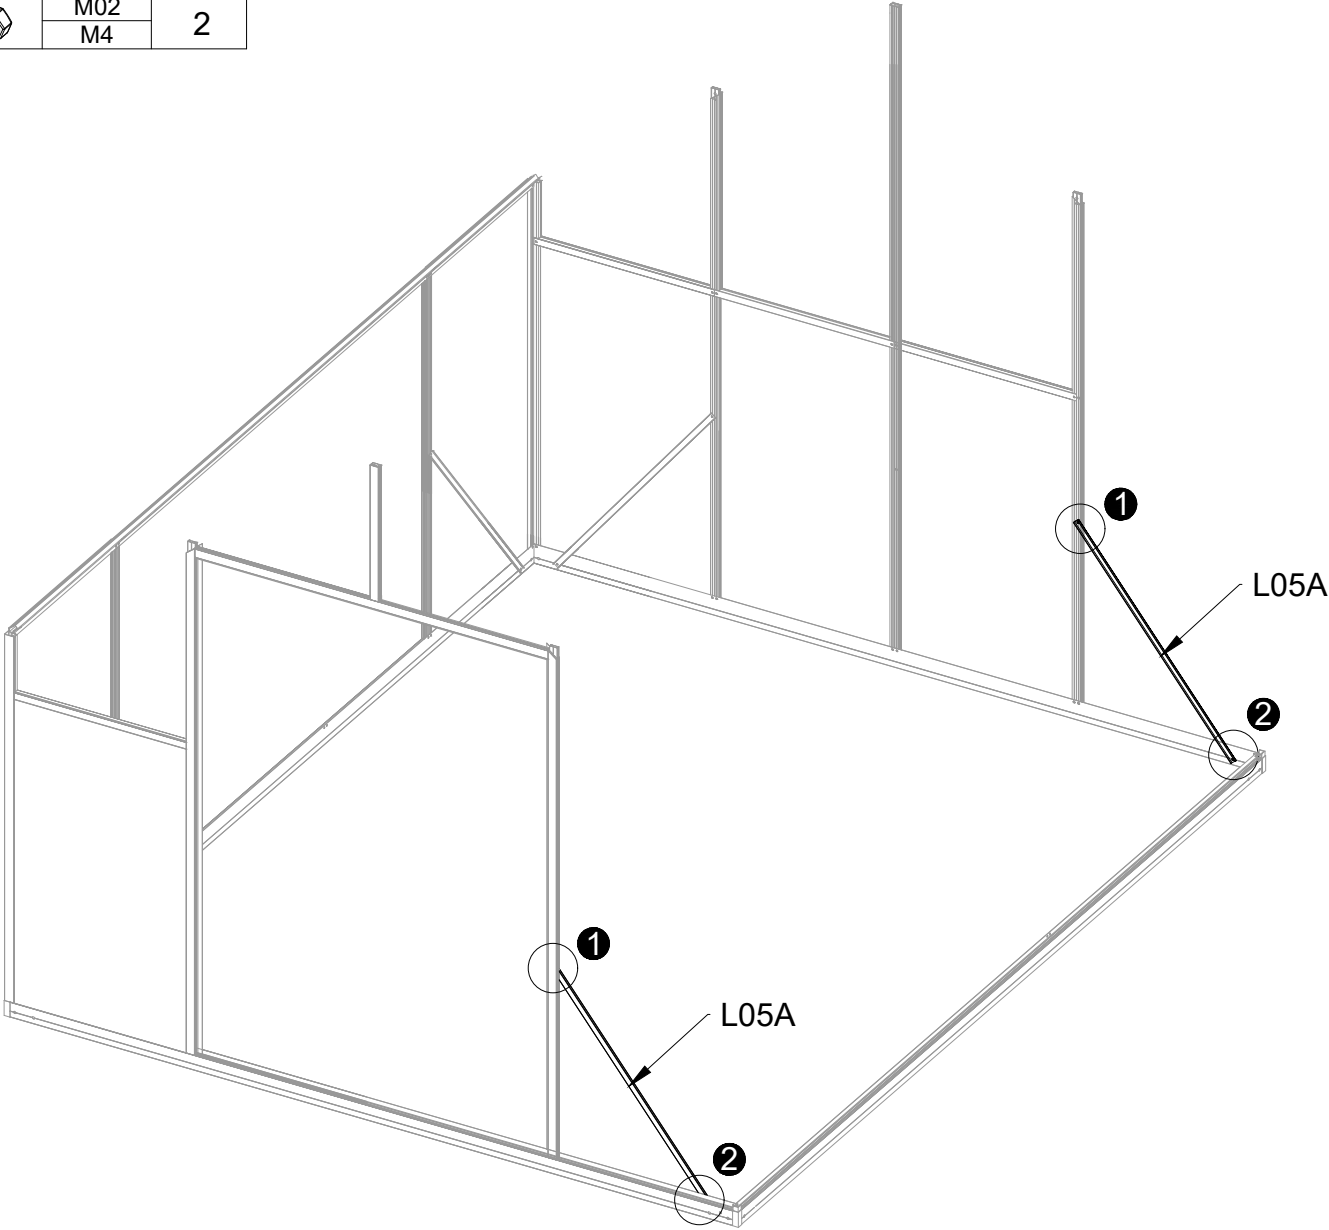



PART	NO	QTY
	L01A	1
	L01B	1
	L04A	2
	Y2	2
	S86 M4X10	8

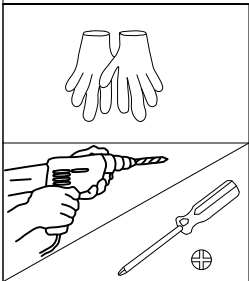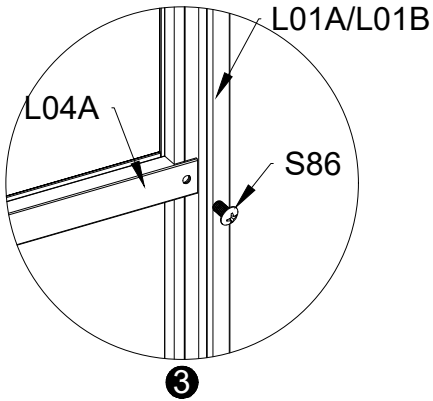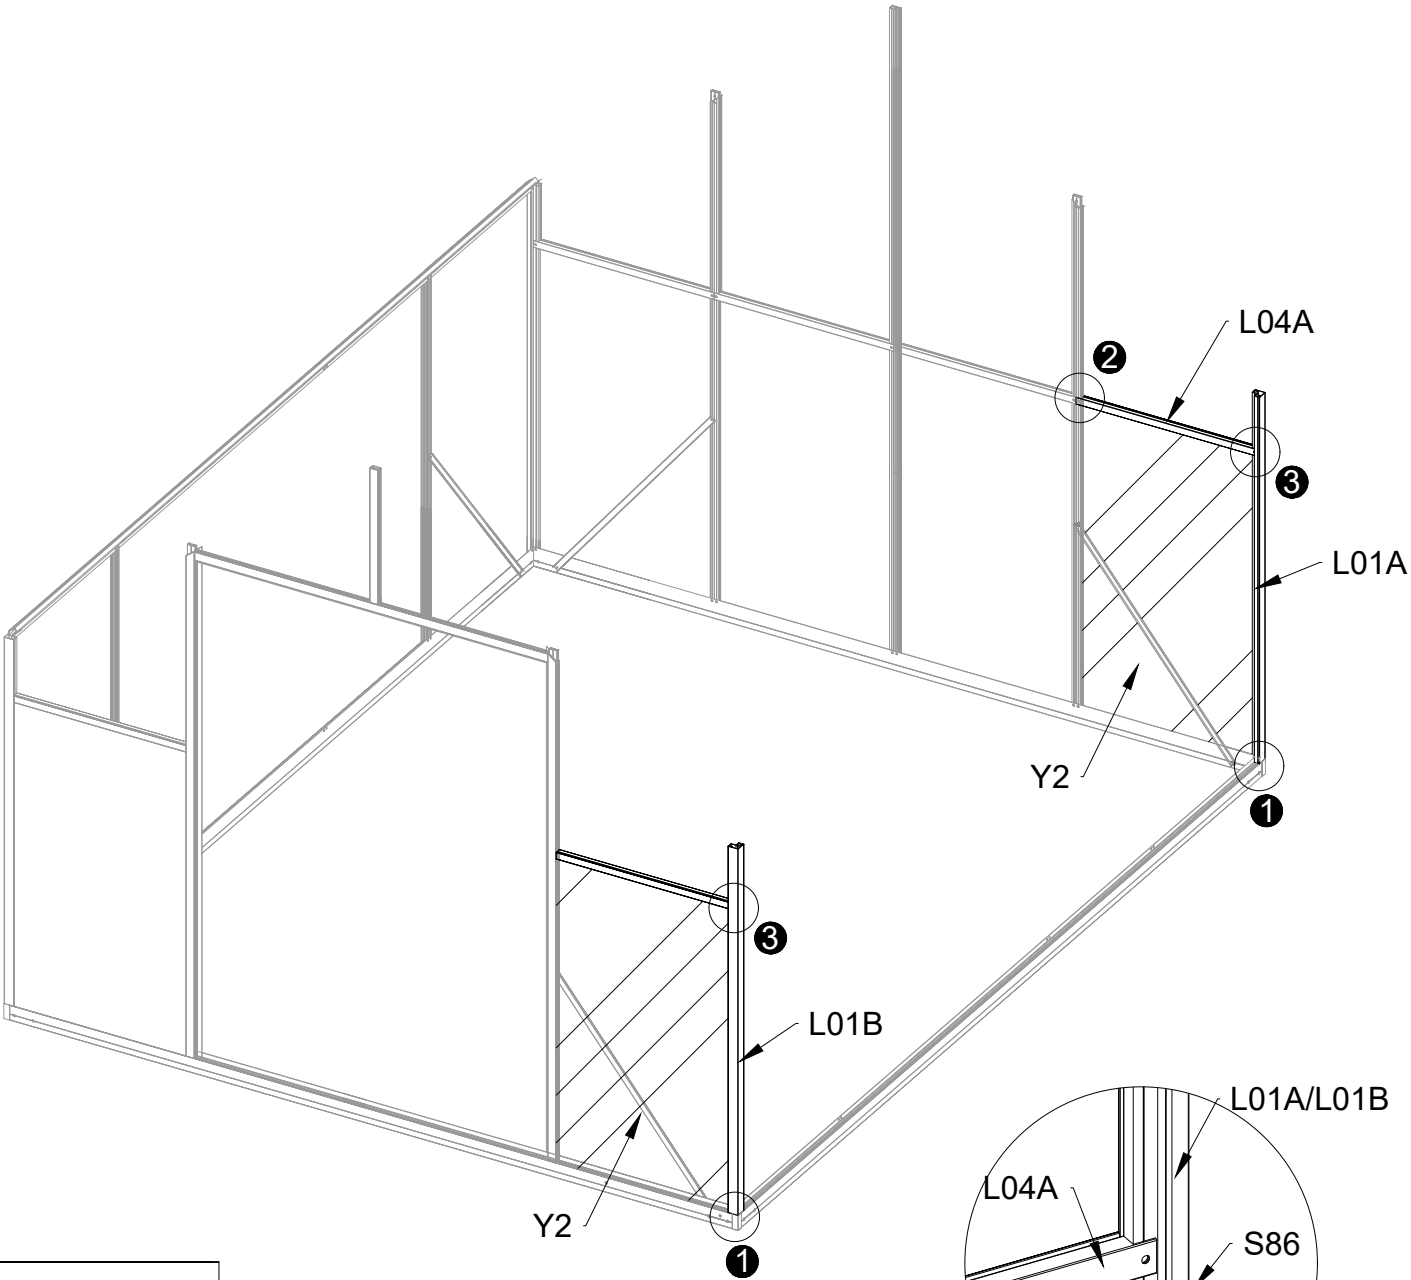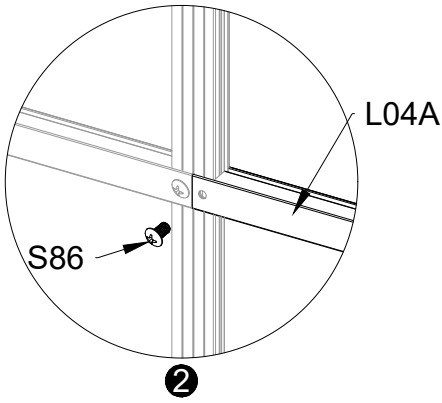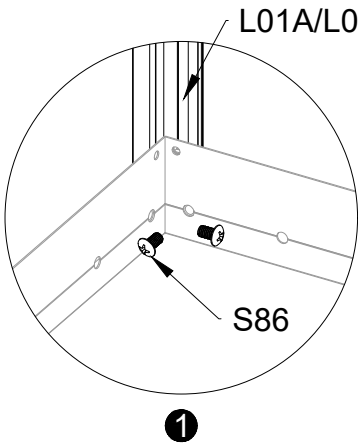


PART	NO	QTY
	L02A	2
	L05A	2
	Y1	2
	S86	6
	M4X10	
	S87	2
	M4X25	
	M02	2
	M4	

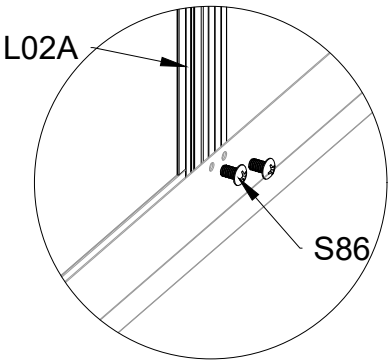


1

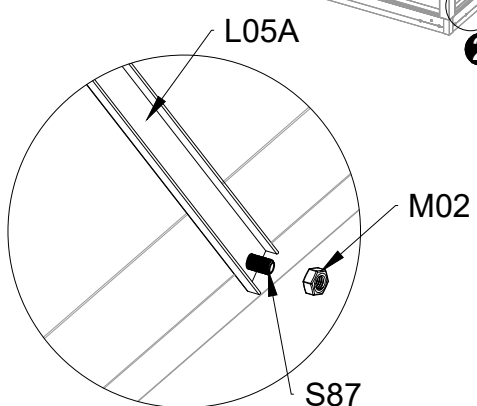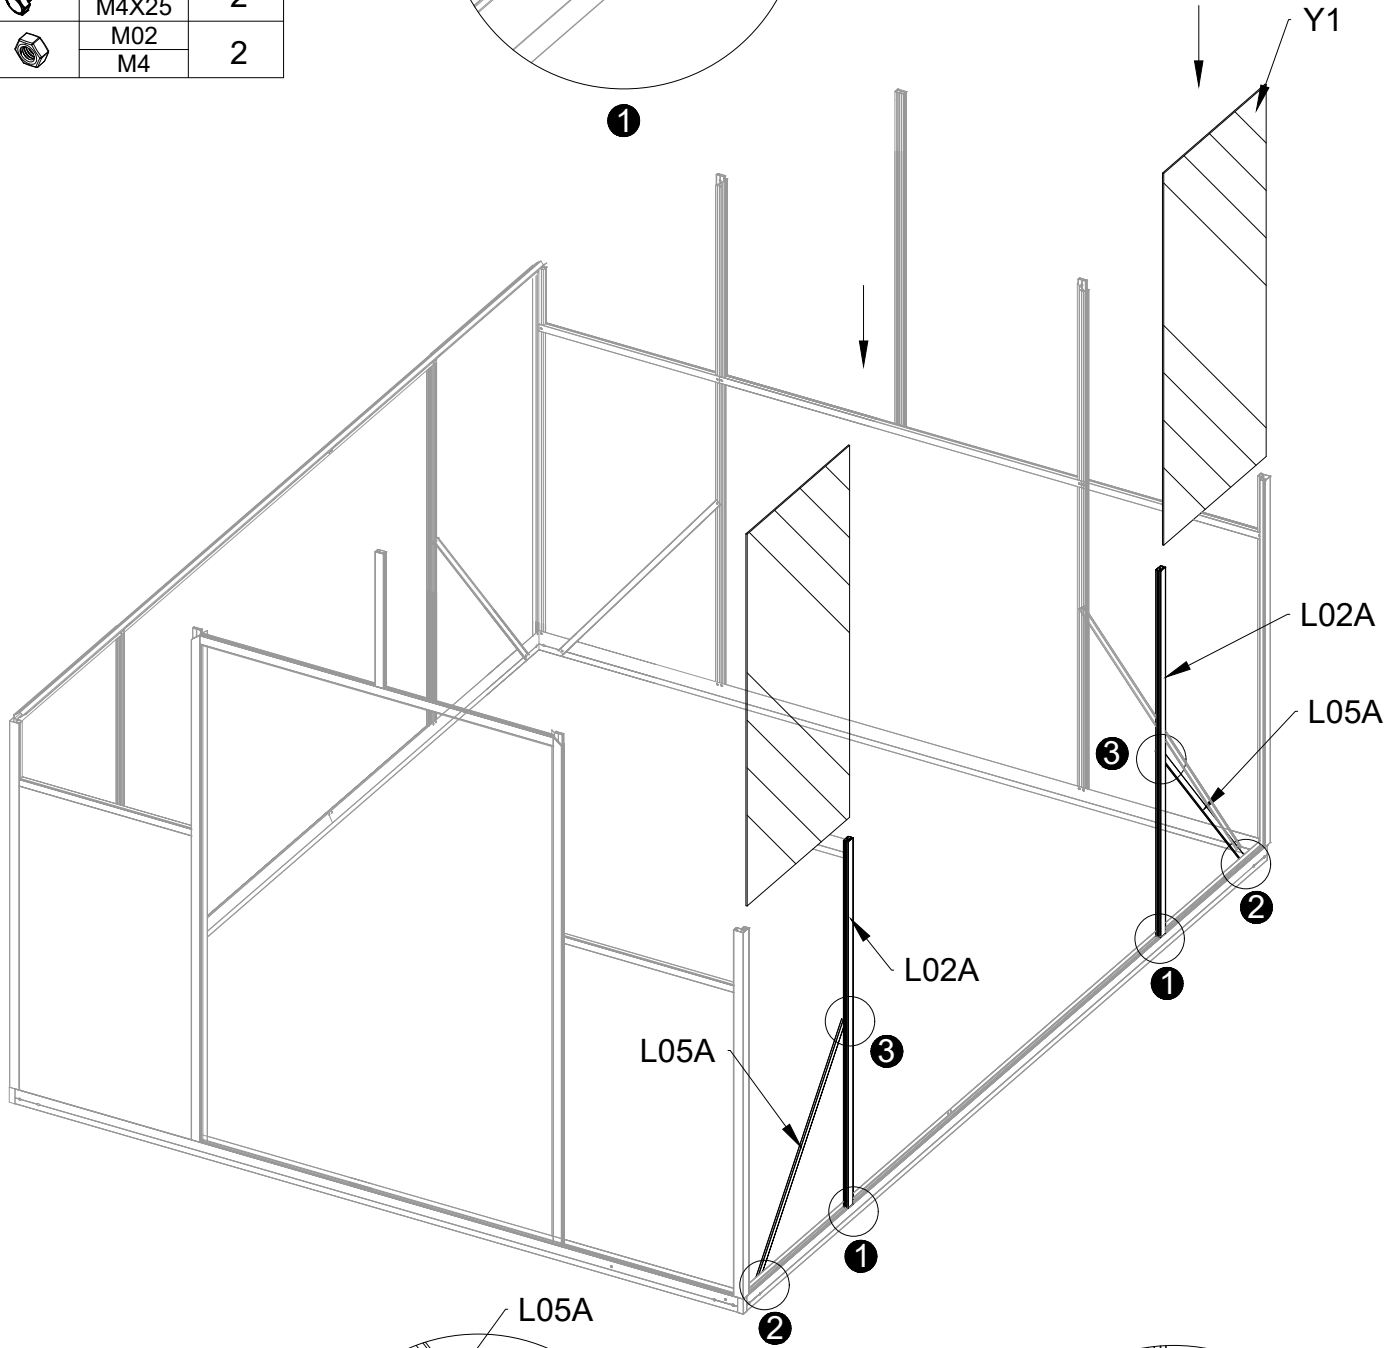



2

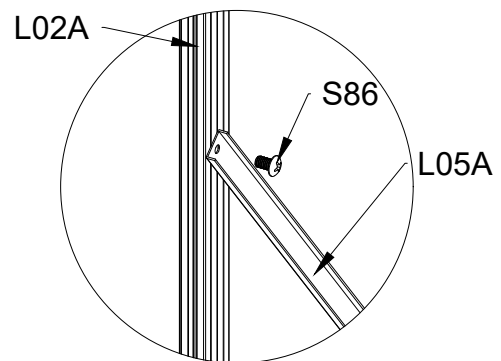



3

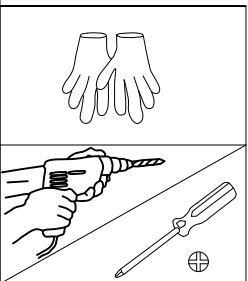


PART	NO	QTY
	L07A	1
	L07B	2
	A120	2
	A121	2
	S86 M4X10	6

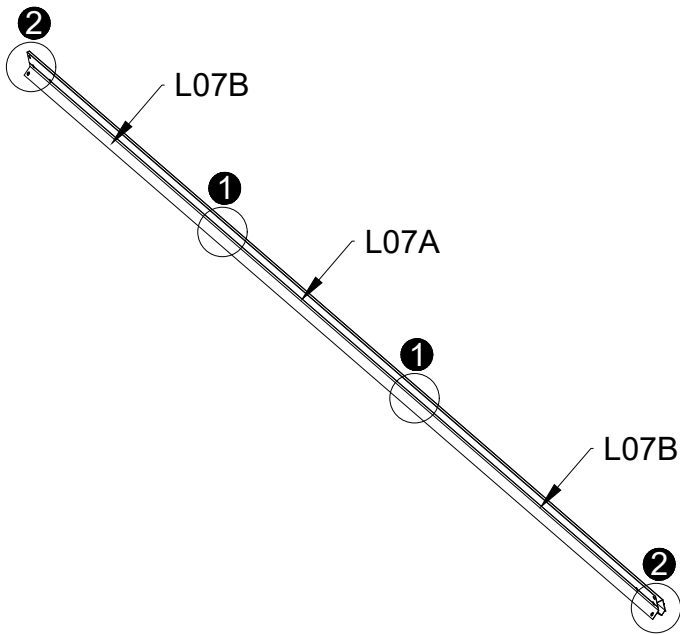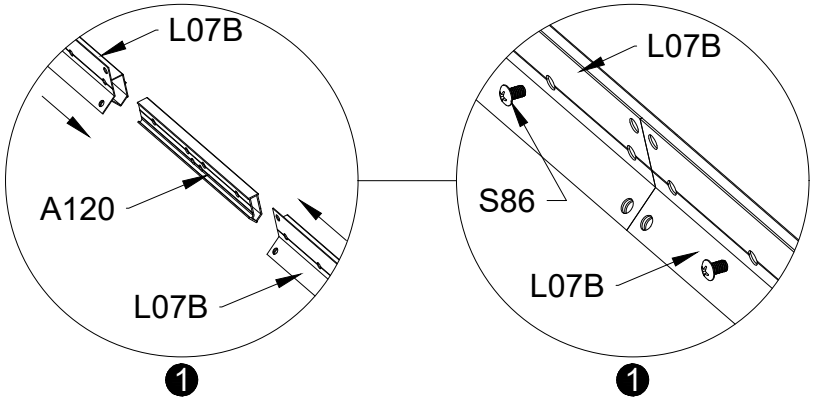





Note: Ensure all the holes are aligned before tightening the screws.

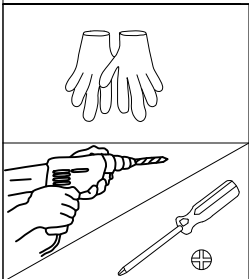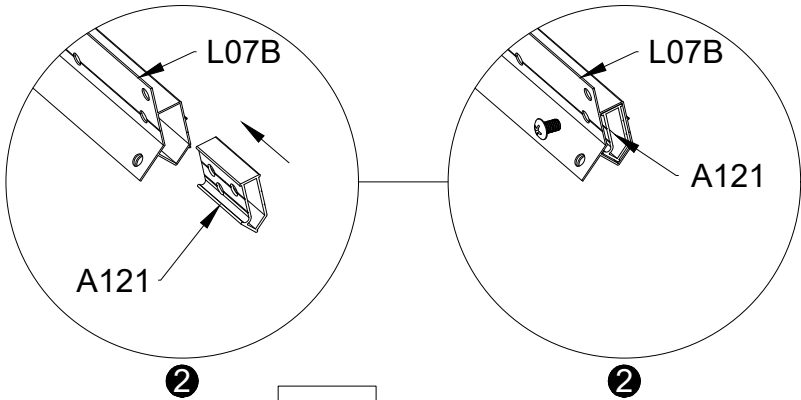





PART	NO	QTY
	S86	6
	M4X10	

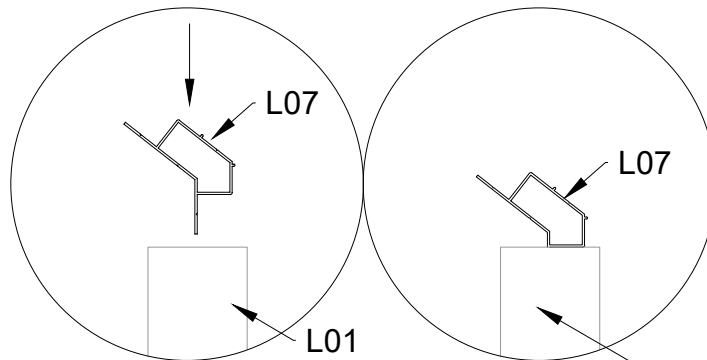



Note the placement direction of L07, with the concave side facing inward.

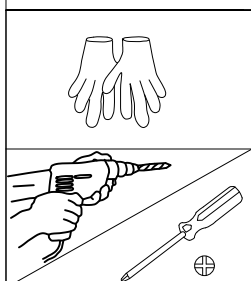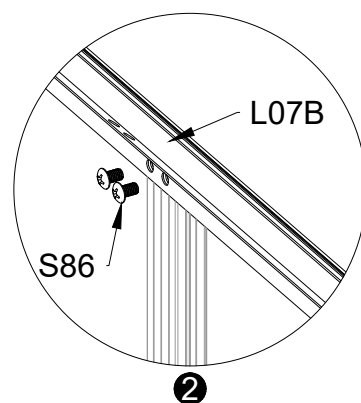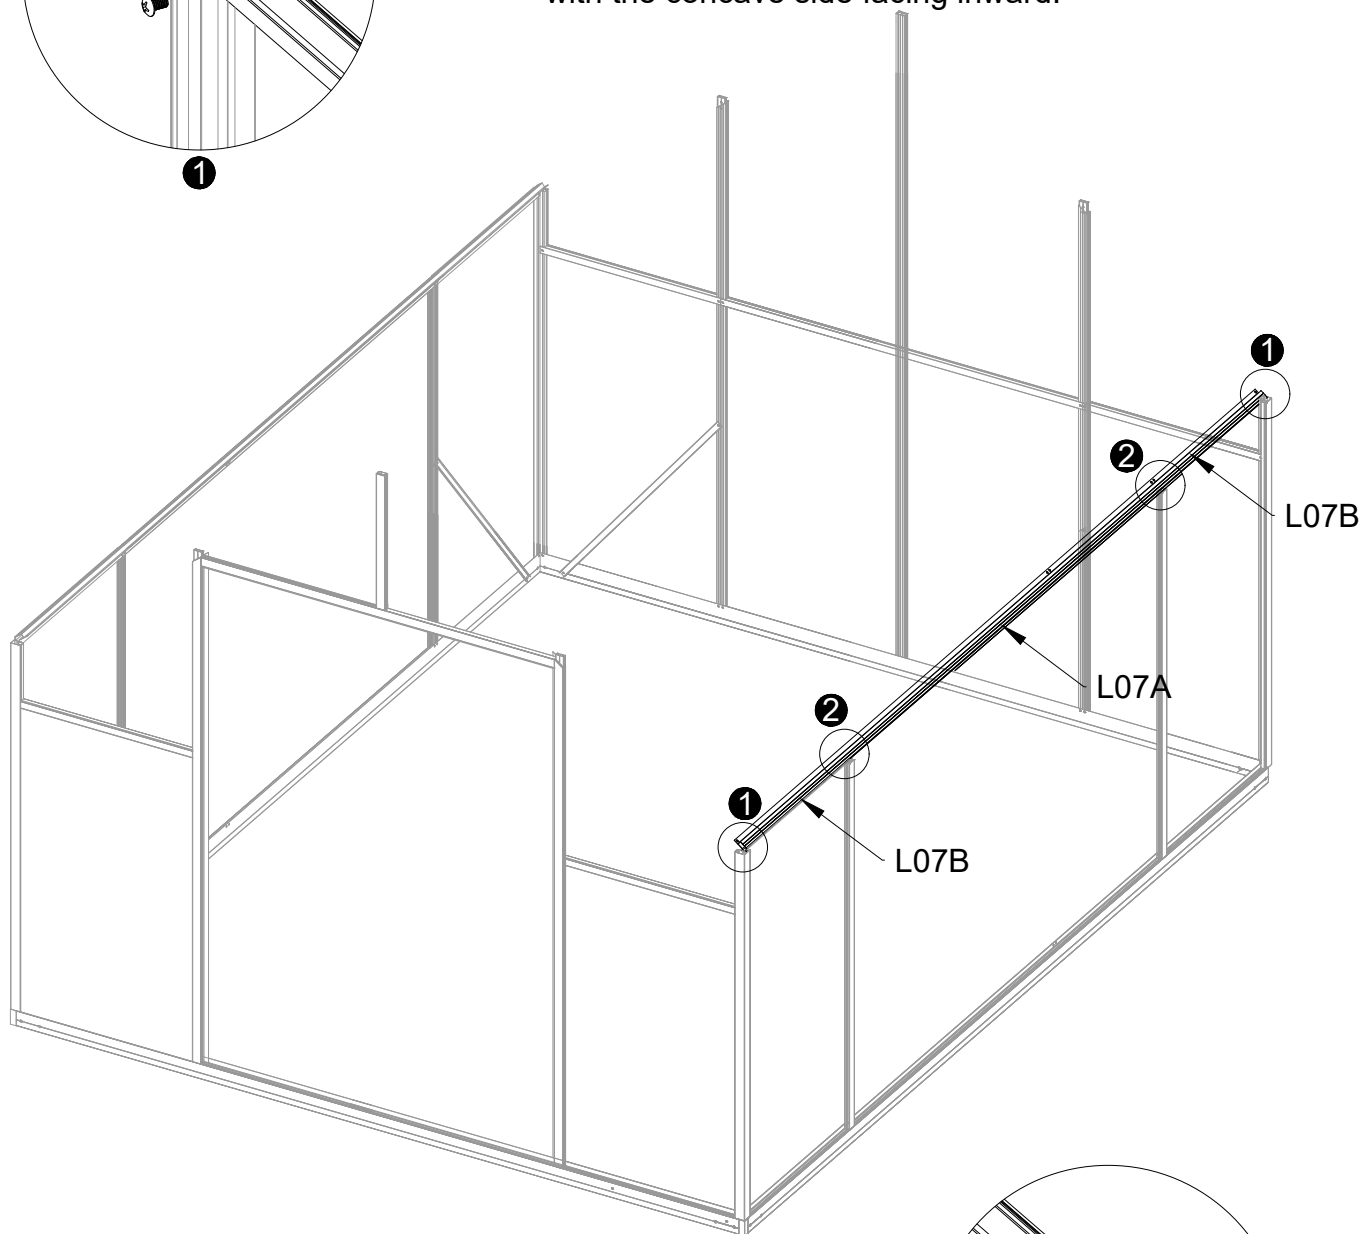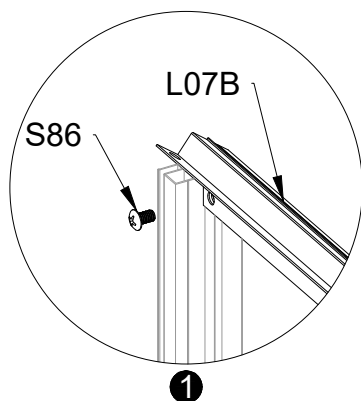


PART	NO	QTY
	L02B	4
	Y1	6
	S86 M4X10	16

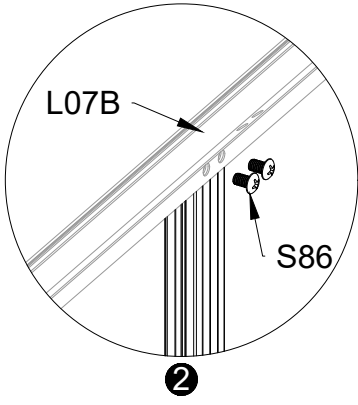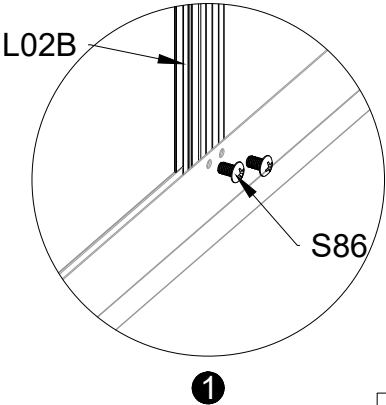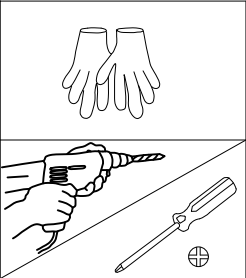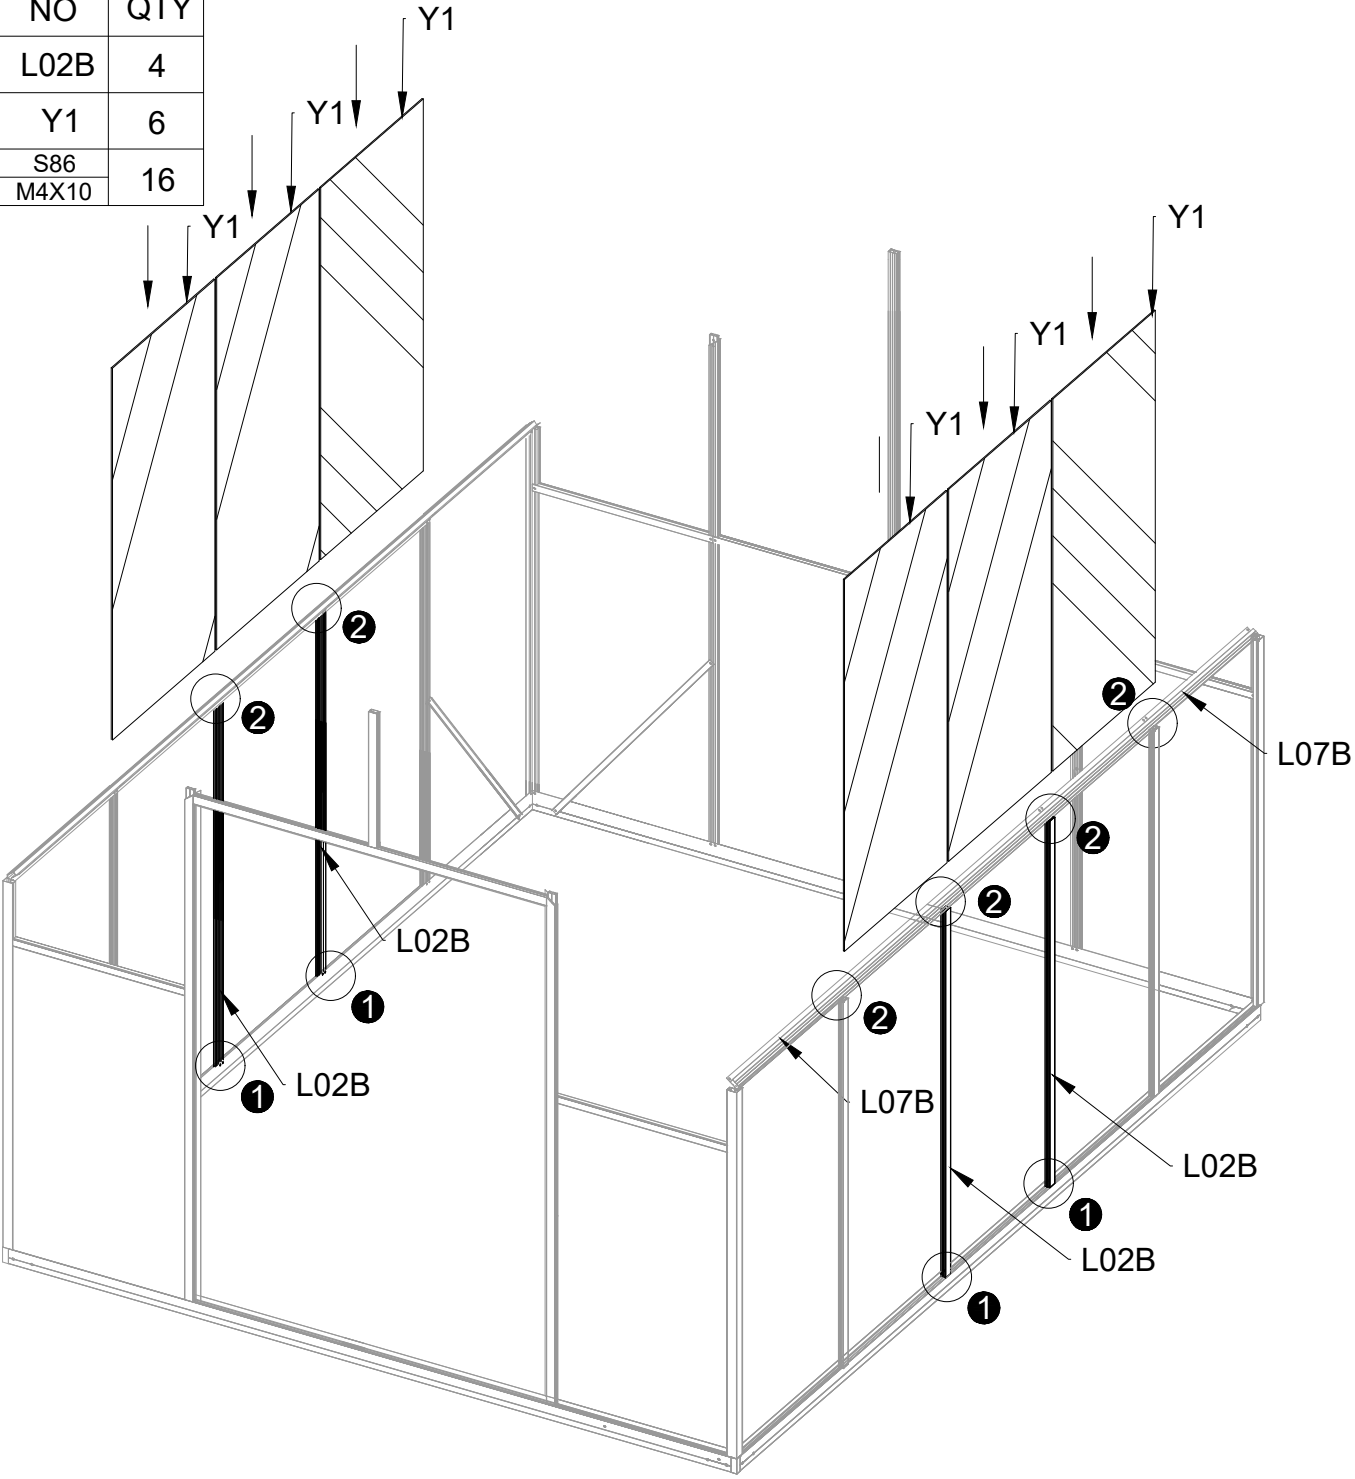


PART	NO	QTY
	Y3	2
	Y4	2
	Y5	1
	Y6	1
	Y11	1
	Y12	1

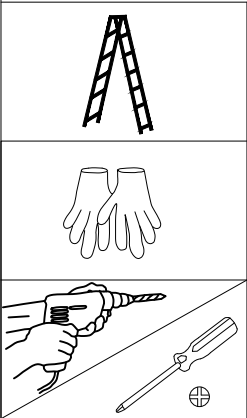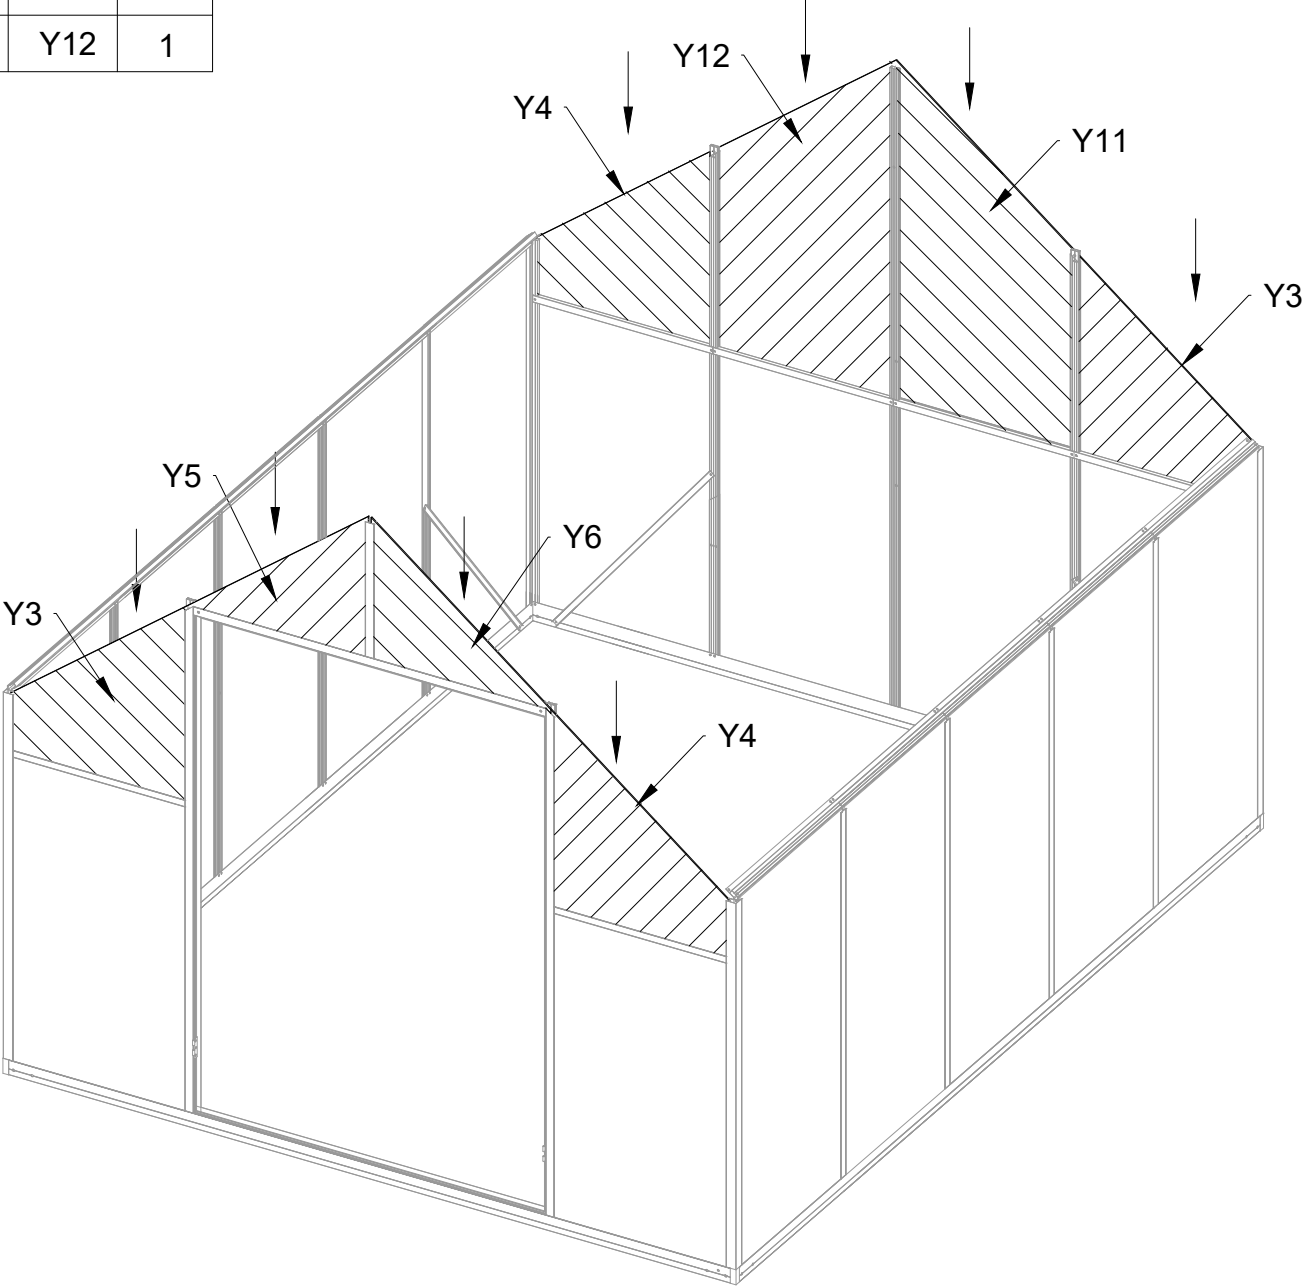



PART	NO	QTY
	L01M	2
	L01N	2
	S86 M4X10	16
	D474	2

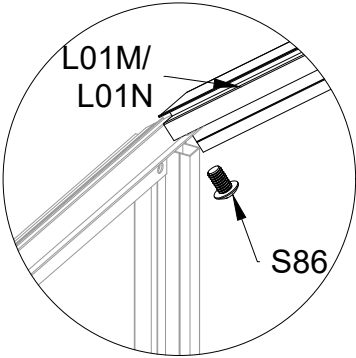


1

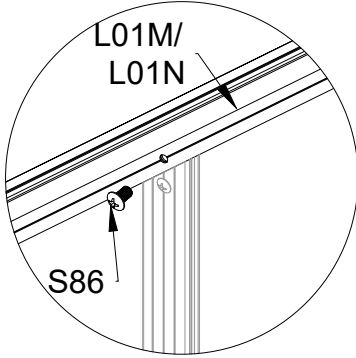

2




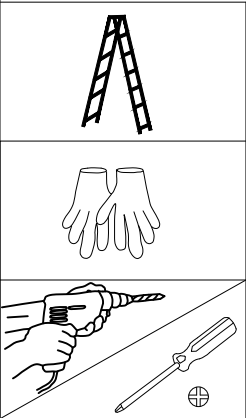
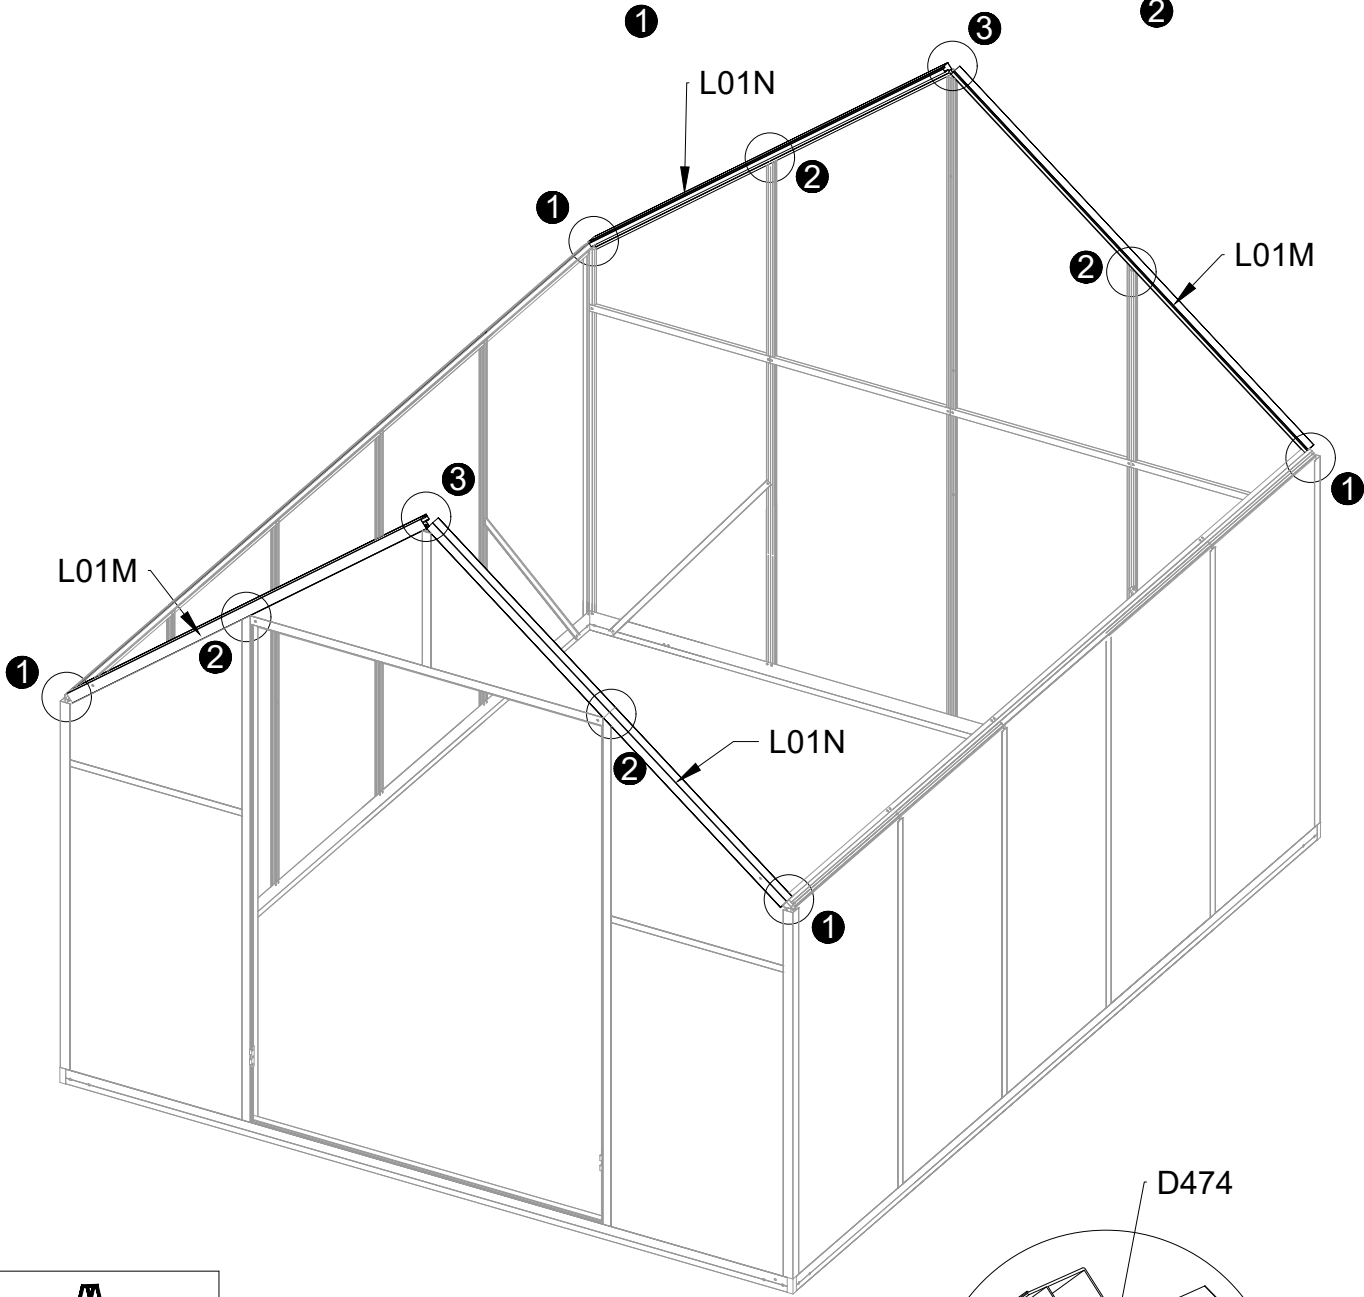


Make sure to align all the holes before tightening the screws.



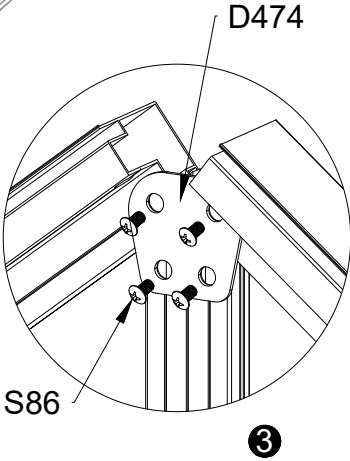


3



PART	NO	QTY
	L06A	1
	L06B	2
	A119	2
	S86 M4X10	12

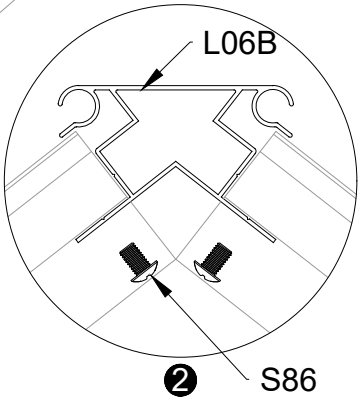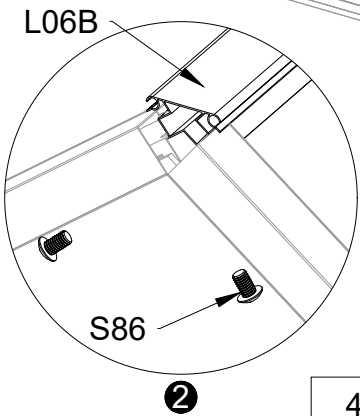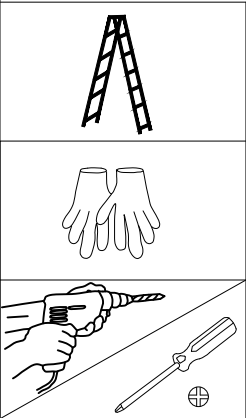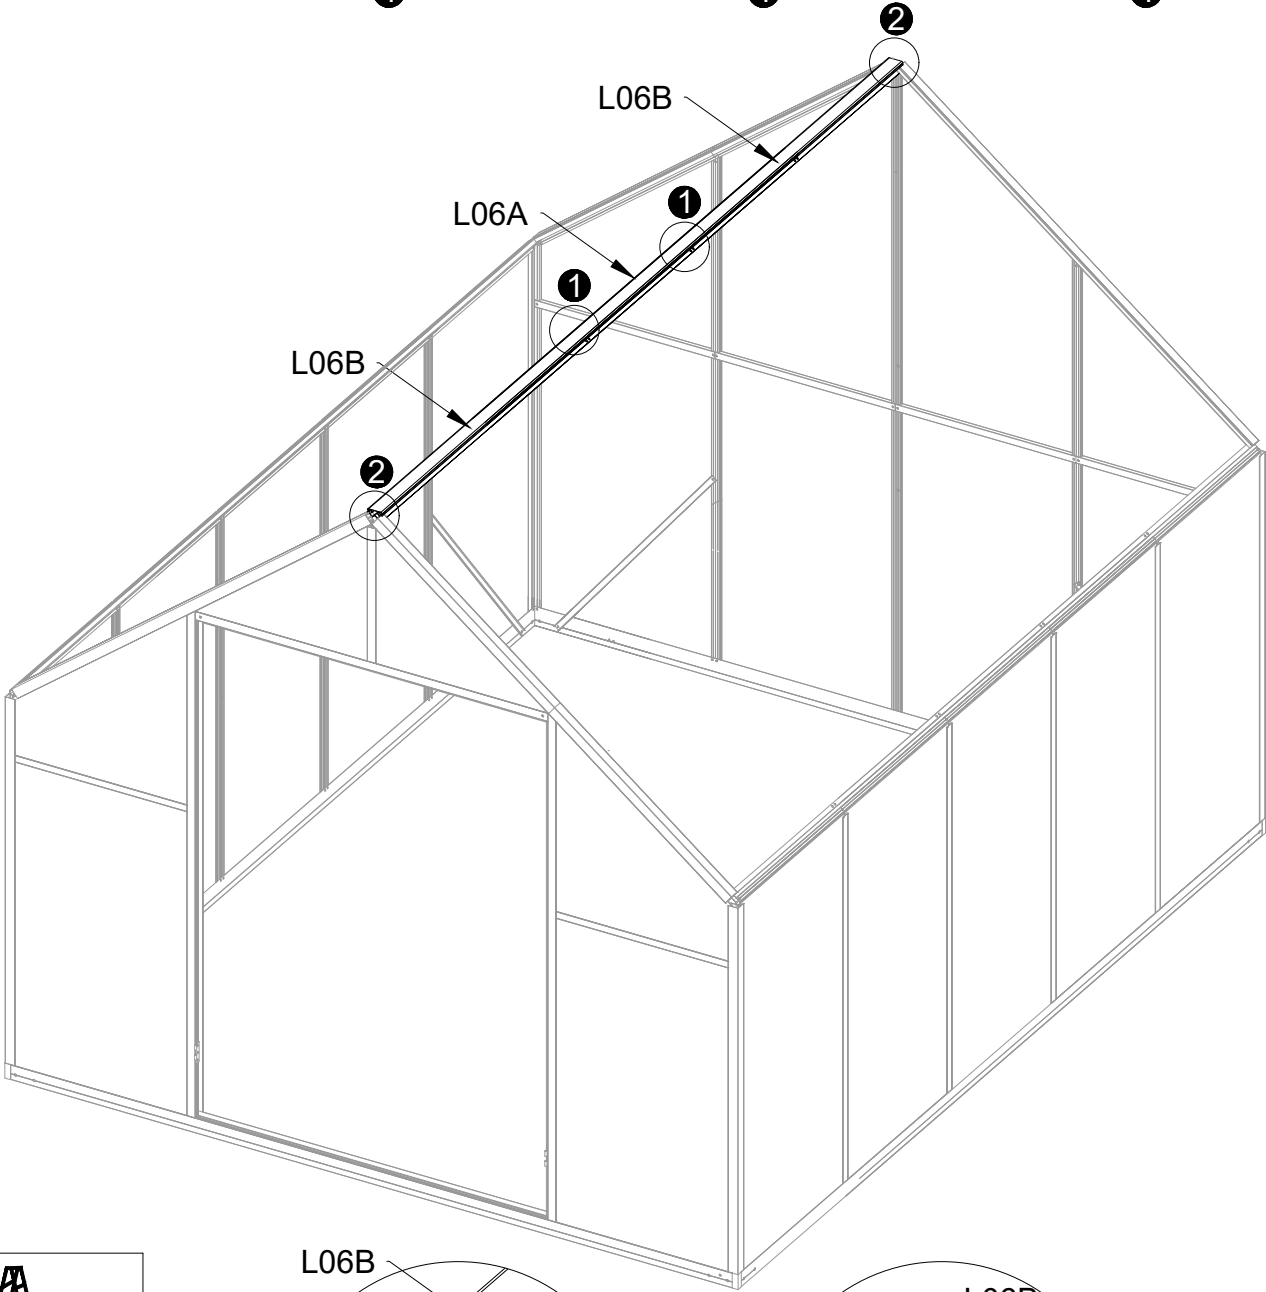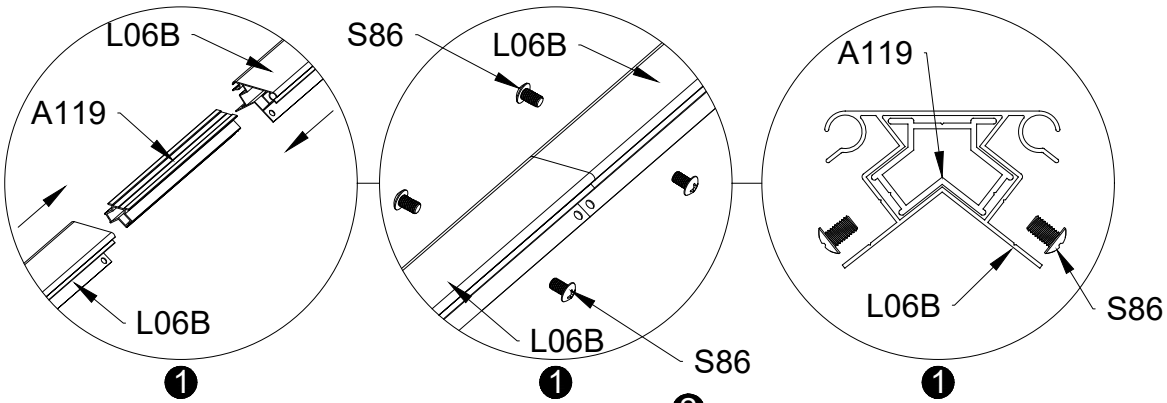


PART	NO	QTY
	L02E	4
	L02F	4
	S86 M4X10	32

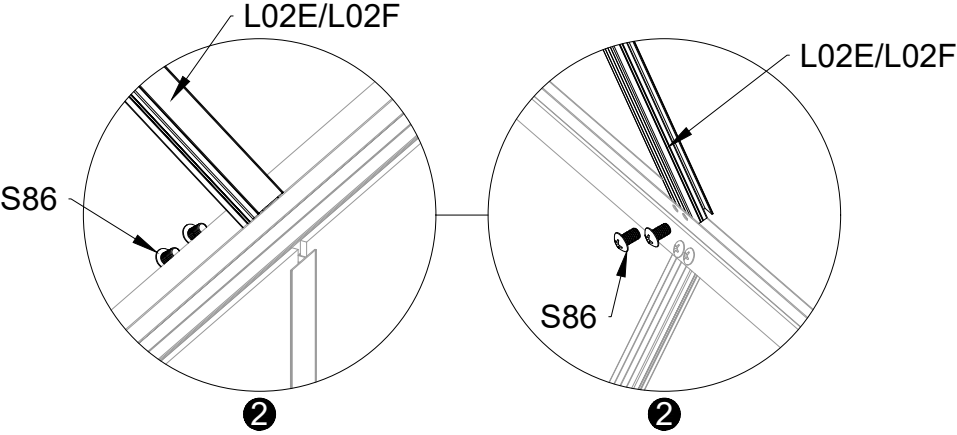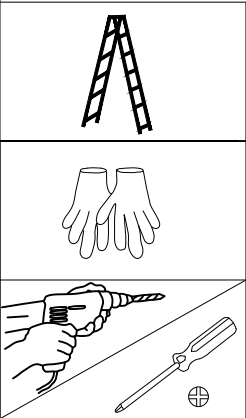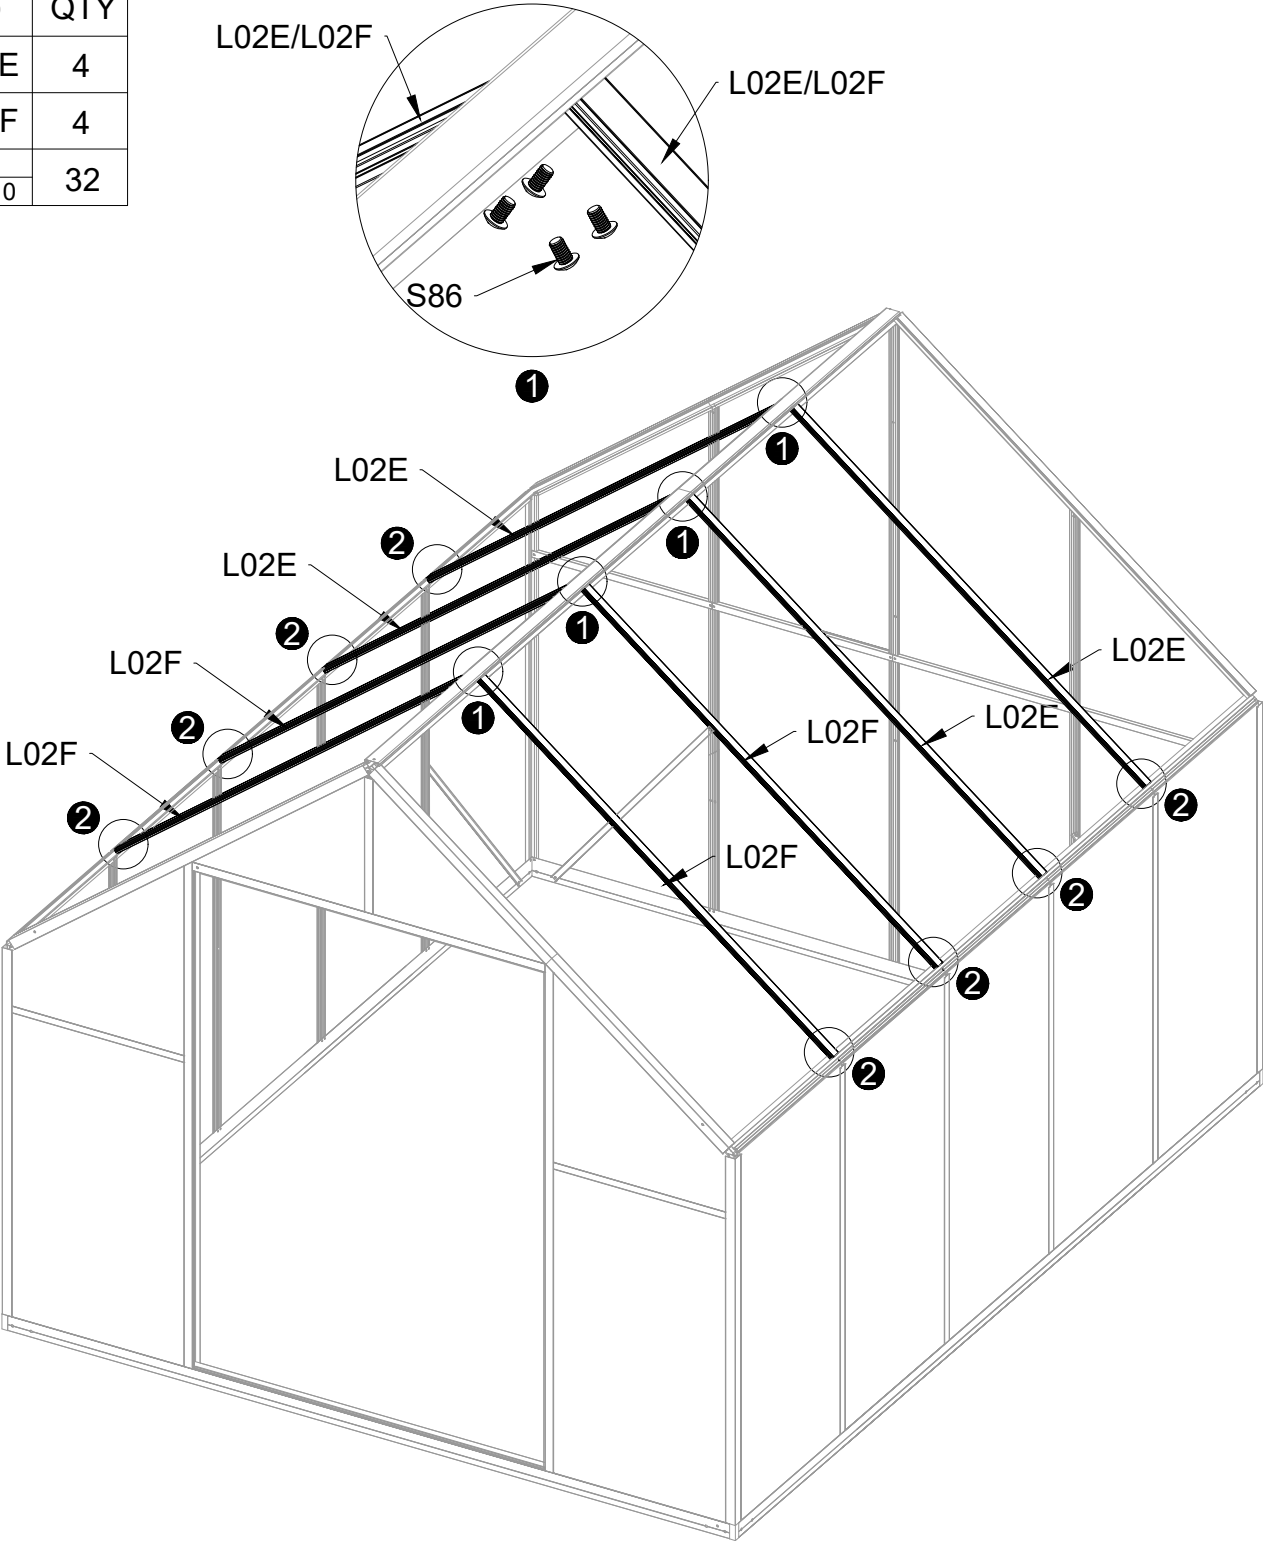





PART	NO	QTY
	L04B	2
	S86 M4X10	4

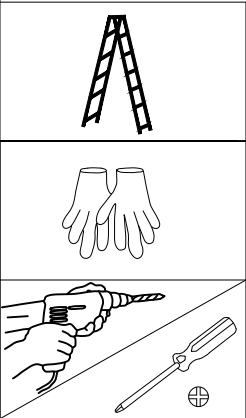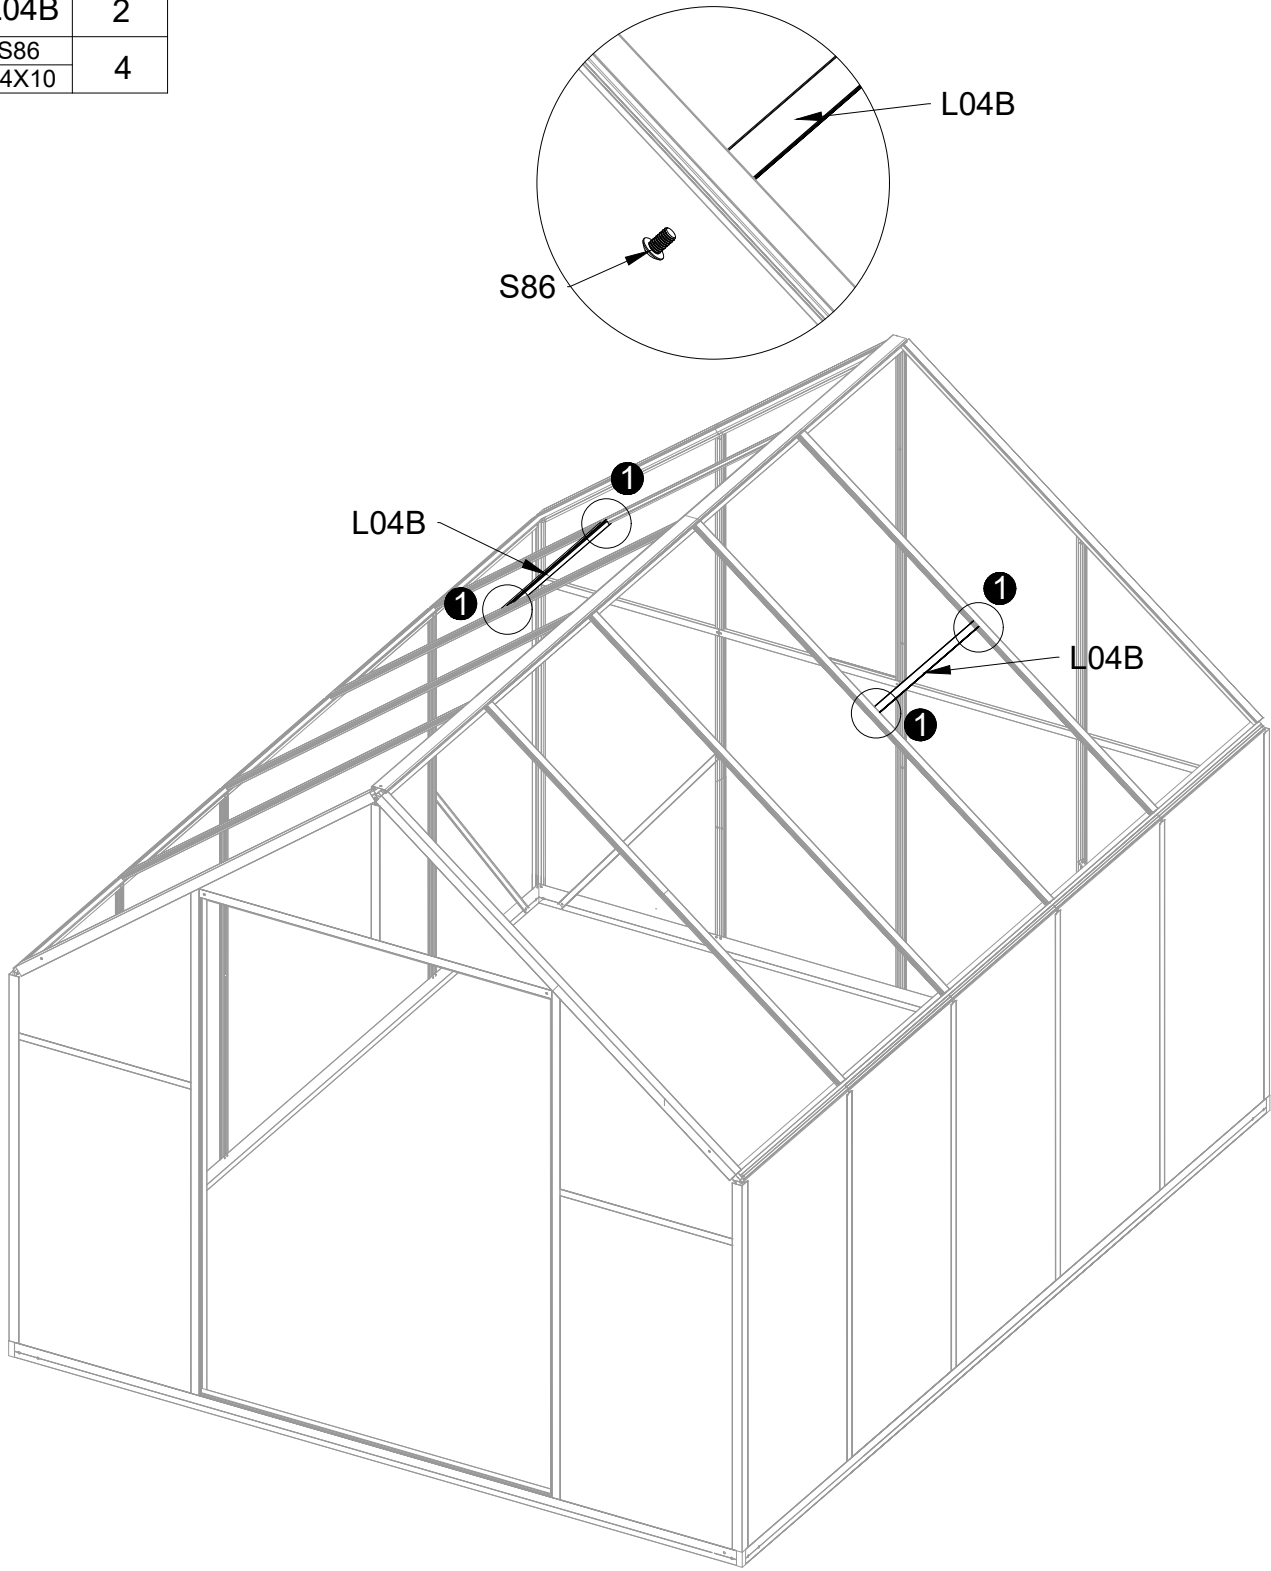



PART	NO	QTY
	J248	4
	Z03	4

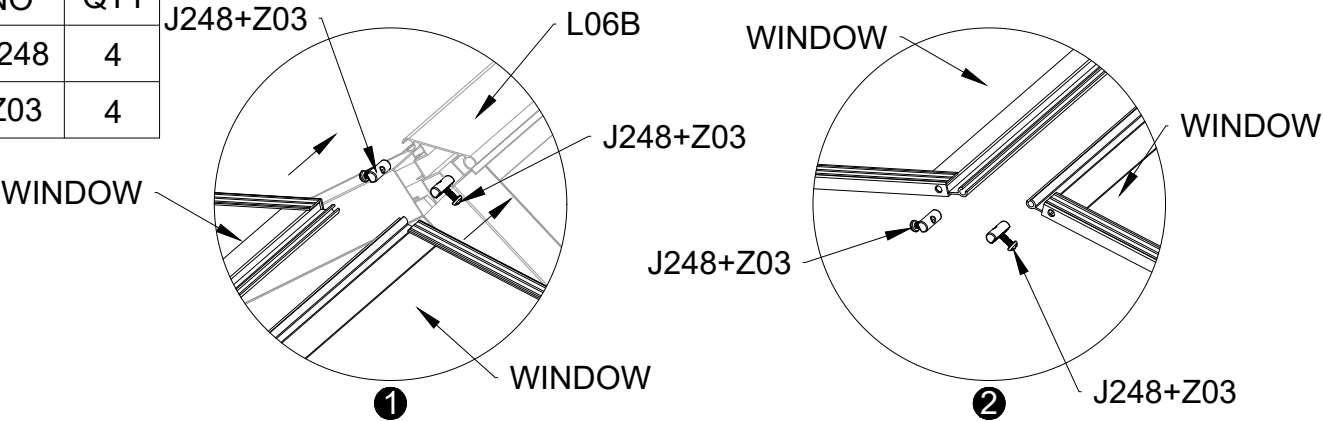




Insert J28+Z03, and the window into the slot of L06B

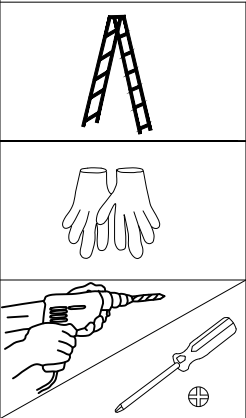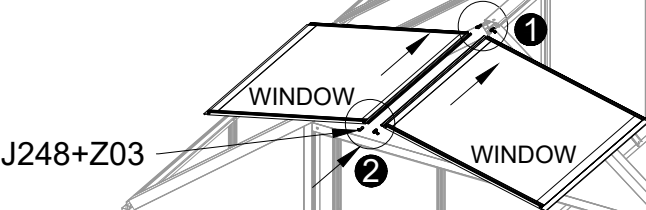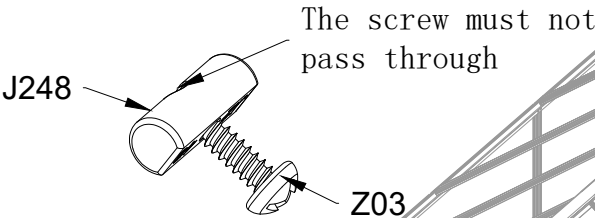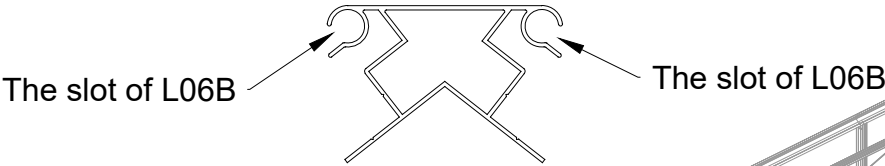

PART	NO	QTY
	S86	4
	M4X10	

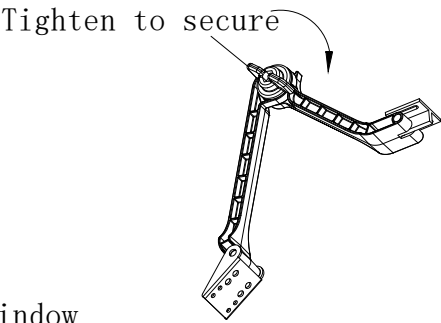
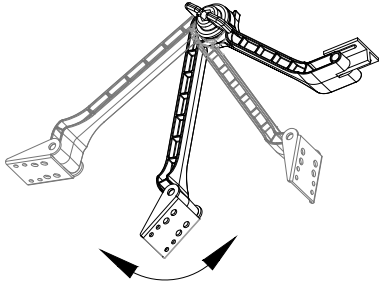


Adjust the angle as needed to set the window opening distance. Once in position, tighten to secure

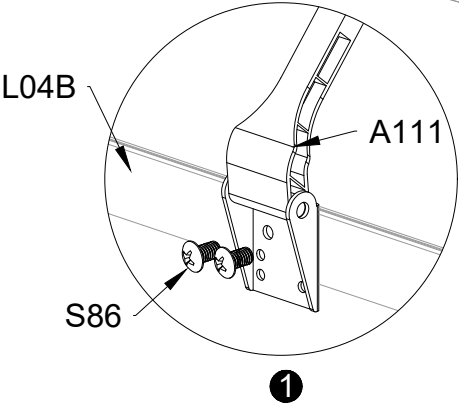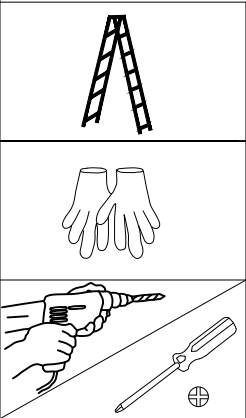
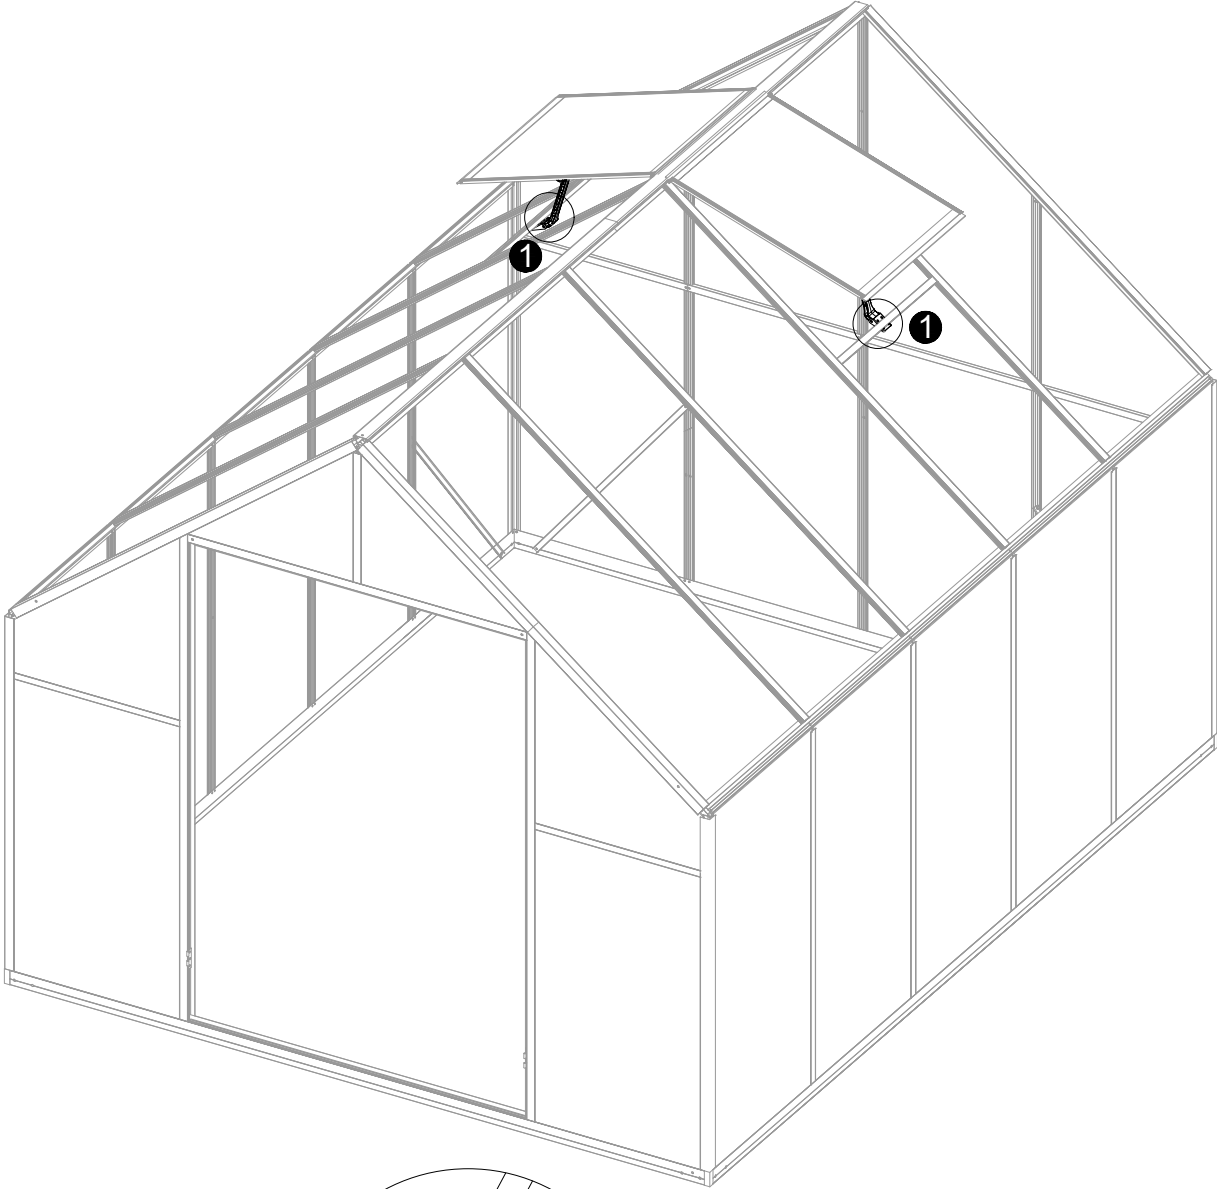


PART	NO	QTY
	Y7	8
	Y8	2




J248+Z03

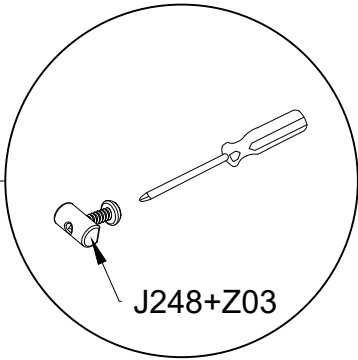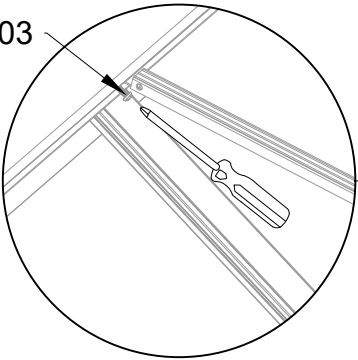




Tighten the J248+Z03 screws to secure the window.
Once the window is fixed, proceed to install the other panels.

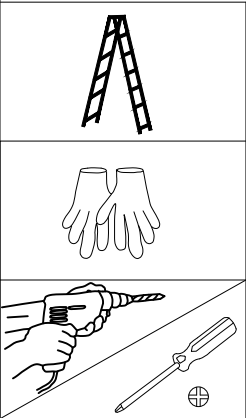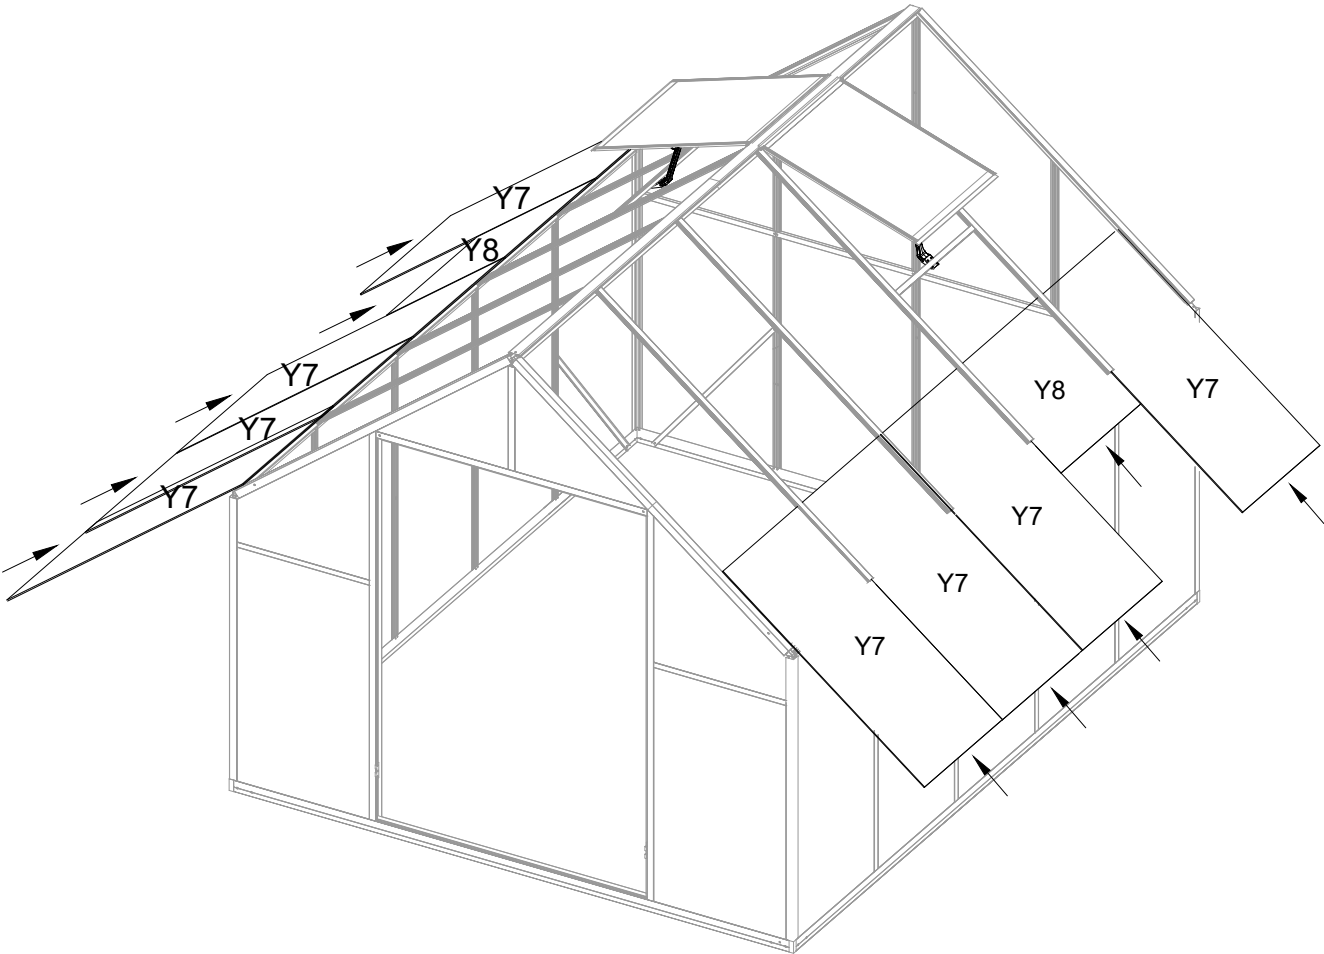




PART	NO	QTY
	S15	12
	M4X10	

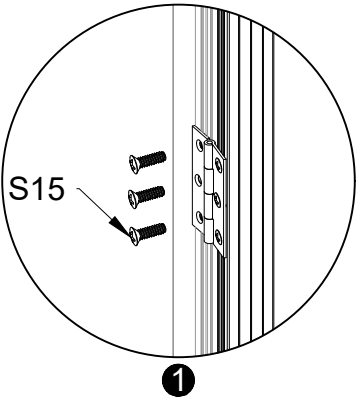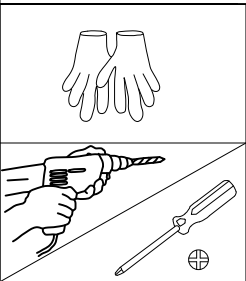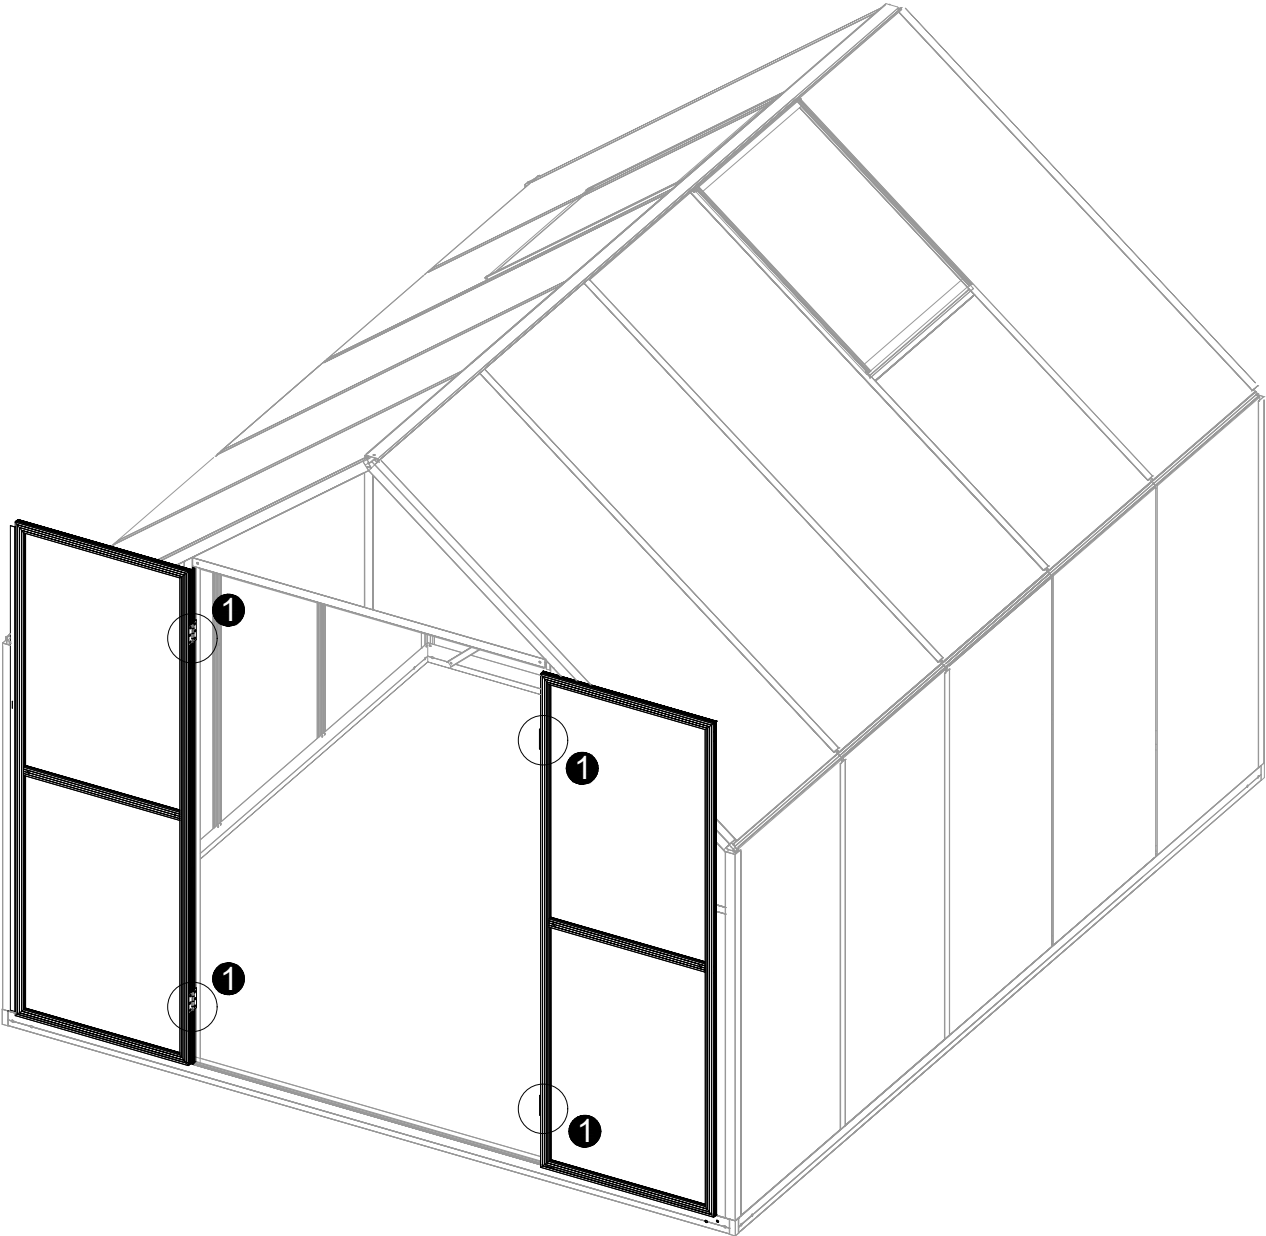


PART	NO	QTY
	H181	1
	S86 M4X10	4

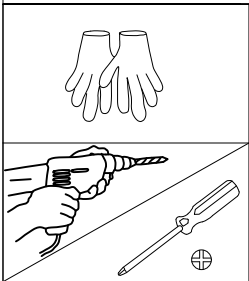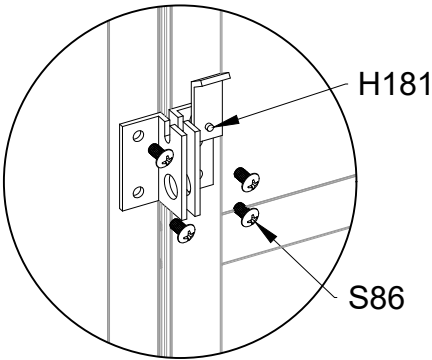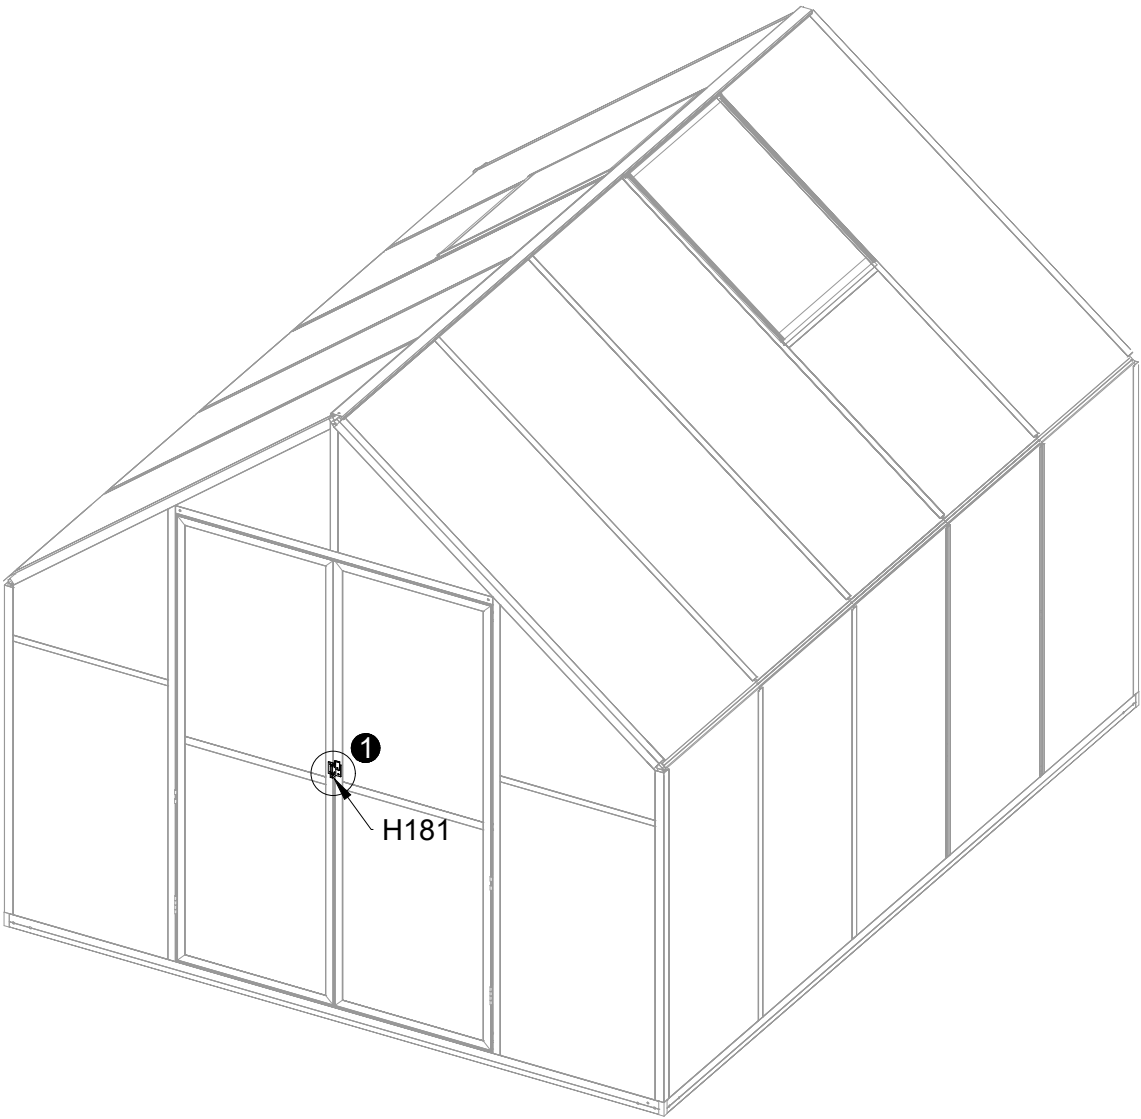

PART	NO	QTY
	L09O	2
	L09P	4
	S86 M4X10	16

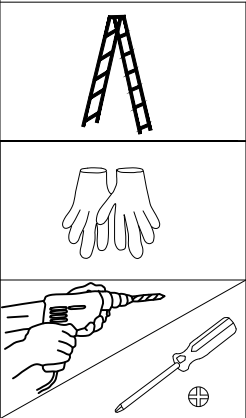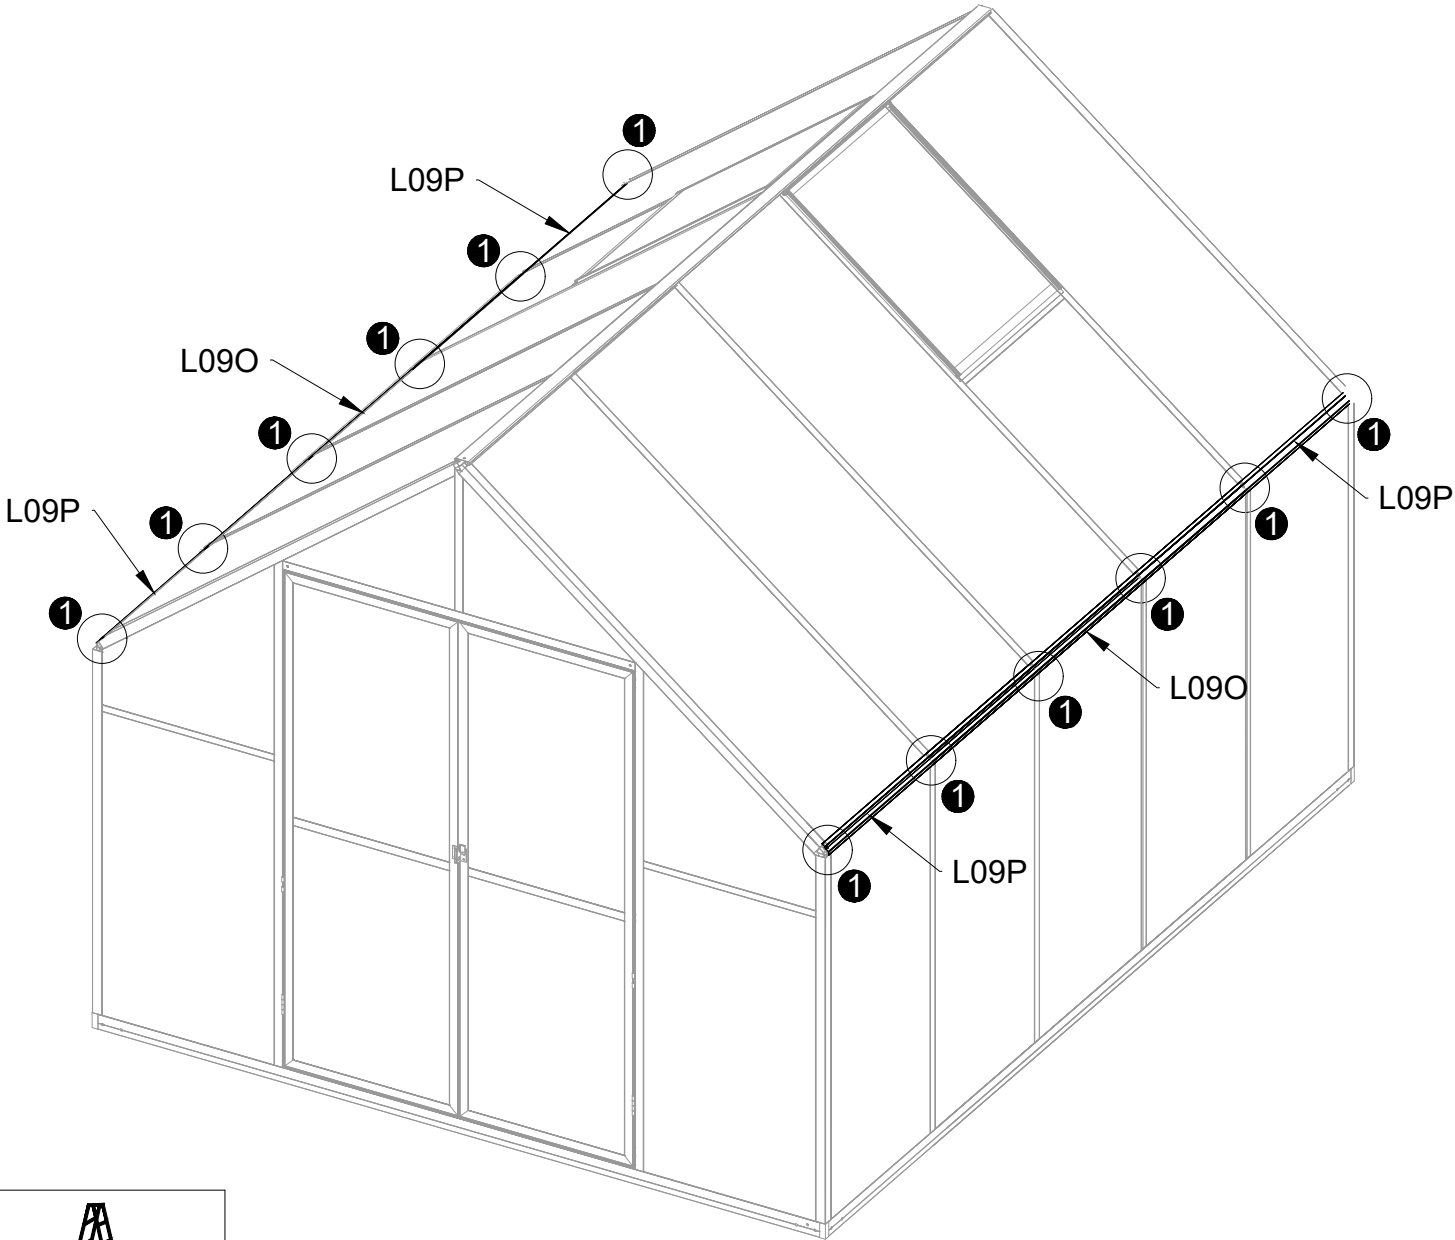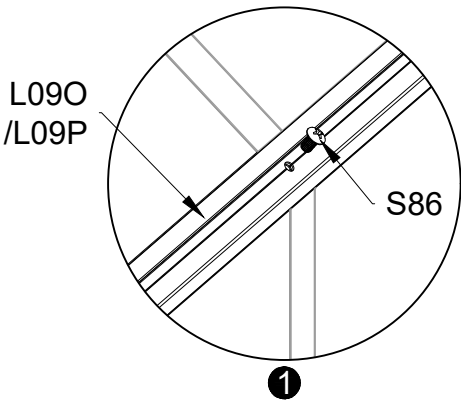

PART	NO	QTY
	J243L	2
	J243R	2
	J244	2
	S88 M4X16	4
	Z08 Ø4.2X16	2

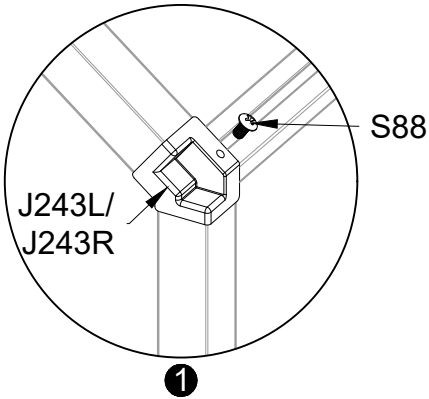

J243R 1

2 J244

J243L 1

J243L 1

J243R 1

