
Assembly Instructions

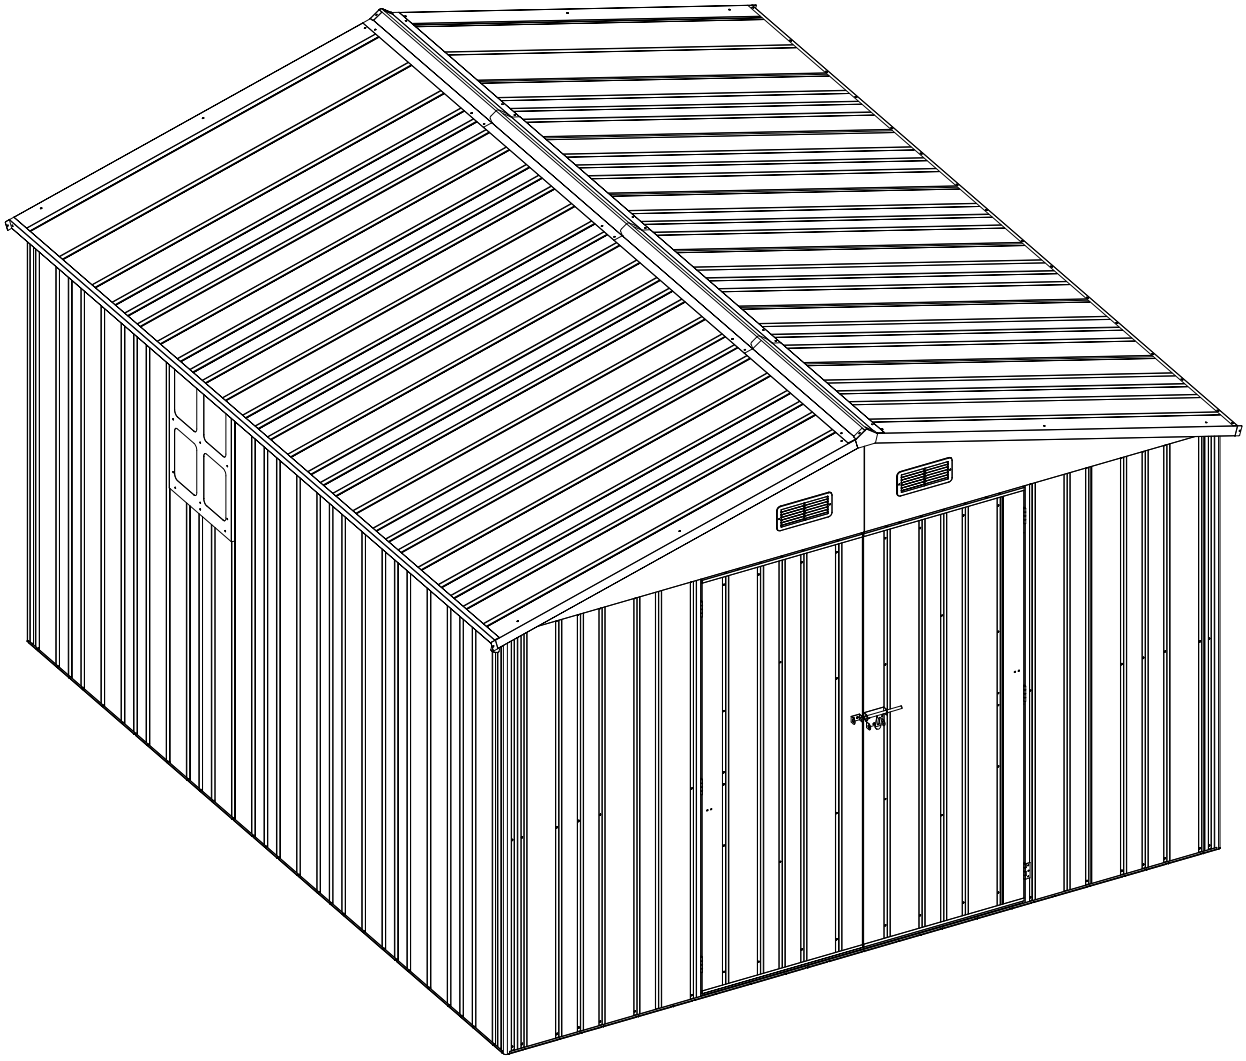

Metal Shed 11.3X9.8FT Assembly Instruction
SKU:
AJ1213-1A1A1(BOX1)
AJ1213-1A1A2(BOX2)
AJ1213-1A1A3(BOX3)
Arrive in 2 separate boxes and may not be part of the same shipment; Please install the product after receiving all the packages.
Email Address:support@wepatio.com
Tel: 901-347-2181
Service Time: 8 am - 5 pm（central time） Monday- Friday.
If no one picks up, please call several more times


Assembly Instructions

1. Assembly Advice .....Page 1
2. Parts List .....Page 2
3. Door panel installation .....Page 3- 9
4. Frame installation .....Page 10- 50


Assembly and Maintenance Advice

1. For safety purposes, we strongly recommend that this product is assembled by at least two people.
2. Some components have sharp metal edges. Please be careful when handling metal components. Please wear gloves, shoes and safety goggles during assembly.
3. Lay all of the components on a soft carpet or blanket to avoid any scratches or damages.
4. DO NOT climb or stand on the roof. Heavy articles should not be leaned against the greenhouse.
5. Keep the roof and gutter clear of snow, dirt & leaves. Allowing snow to build up on the roof may damage the product.
6. Unlike steel, if the paint finish is scratched this will not harm the aluminium underneath.
7. When your product needs cleaning, use a mild detergent solution and rinse with cold clean water. Do not use acetone, abrasive cleaners or strong detergents to clean the panels.


Tools Provided:

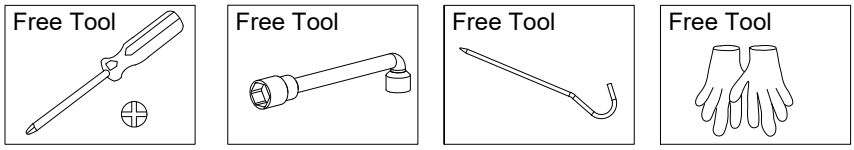

Tools Required when Assembly (Not Provided)

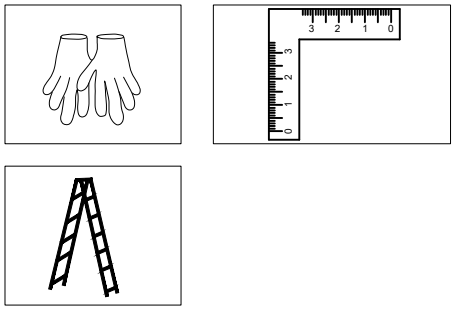

Assembly at least by two Persons

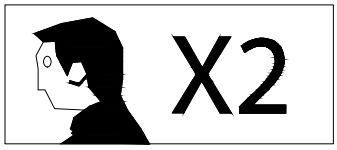

PART	NO	QTY
	1A002	11
	1G002	2
	1C002	2
	1E004	12
	1B002	2

PART	NO	QTY
	D358	2
	D359	2
	Y1	2



AJ1213-1A1A1(BOX1)


PART	NO	QTY
	1A002	9
	3A007	2
	3A008	2
	Y4	2





AJ1213-1A1A1(BOX2)


PART	NO	QTY
	D353	2
	D354	12
	D355	8
	D356	2
	D438	4
	D490	1
	H170	6
	H127	127
	H145	1
	H147	2
	S63 M4X12	20
	S74 M4X8	670
	M08 M5	2
	M25 M4	698
	S75 M4X10	36
	J156	30
	Z40 M5X40	30
	J211	4


Tools Provided:

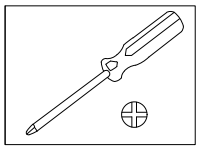

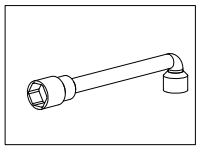

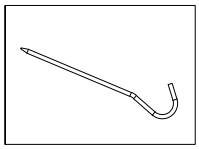

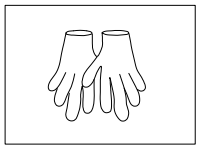





AJ1213-1A1A1(BOX3)


	PART	NO	QTY
1		2A002	4
2		2A008	2
		2A011	2
3		2B002	1
4		2B002	1
5		2B002	1
6		2B002	1
7		2C003	1
		2C004	1
8		2D006	2
		2D007	2
		2H003	1
8		2L006	2
		2L007	2
		2L010	2
9		2M007	2
		2M008	3
10		2M009	1
		2M013	4
11		2M020	1
		2Q005	2
		2Q006	2


	PART	NO	QTY
12		2M021	1
		2R002	4
13		3G007	2
		3G008	2
14		3H004	1
		3H005	2
		3H006	1
15		3J006	2
		3J009	2
16		4A004	1
		4A005	2
		4A006	1
		4C002	1
17		4B001	2
18		4B001	2
19		5A004	1
		5A005	1
		5B008	1
20		5E003	2
21		5H002	2
		5J004	1
		5K004	2


PART	NO	QTY
	4A005	1
	4B001	2
	D354	3
	H170	3
	H147	2
	S75 M4X10	9
	M08 M5	2
	M25 M4	9

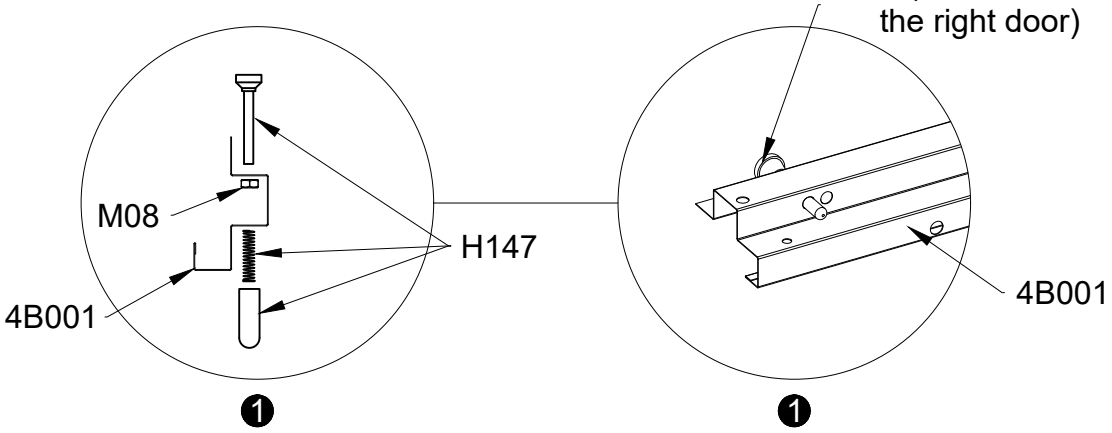

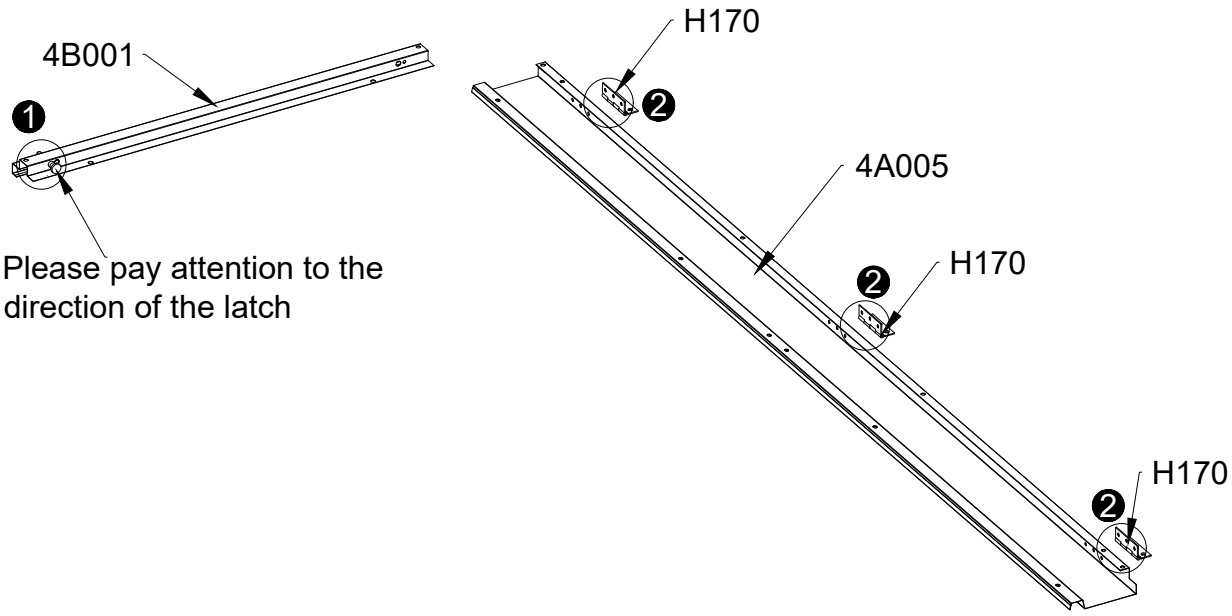

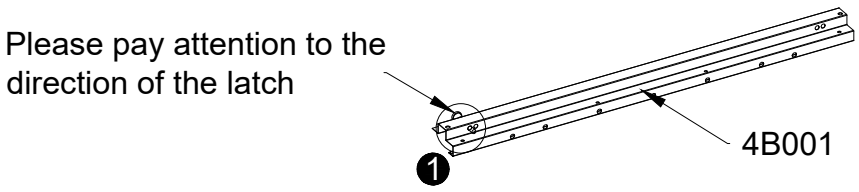


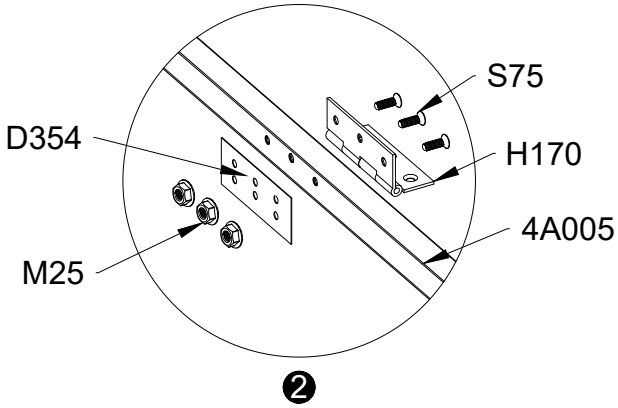

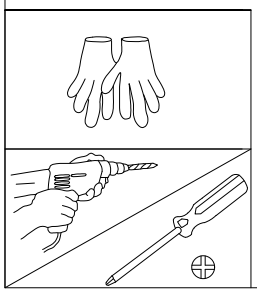



PART	NO	QTY
	1G002	1
	4A006	1
	S74 M4X8	4
	M25 M4	4


Left Door

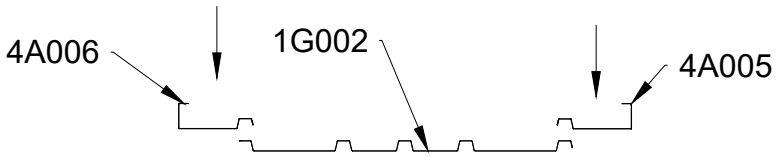

Please stack the door frames of the door panels according to the instructions above.

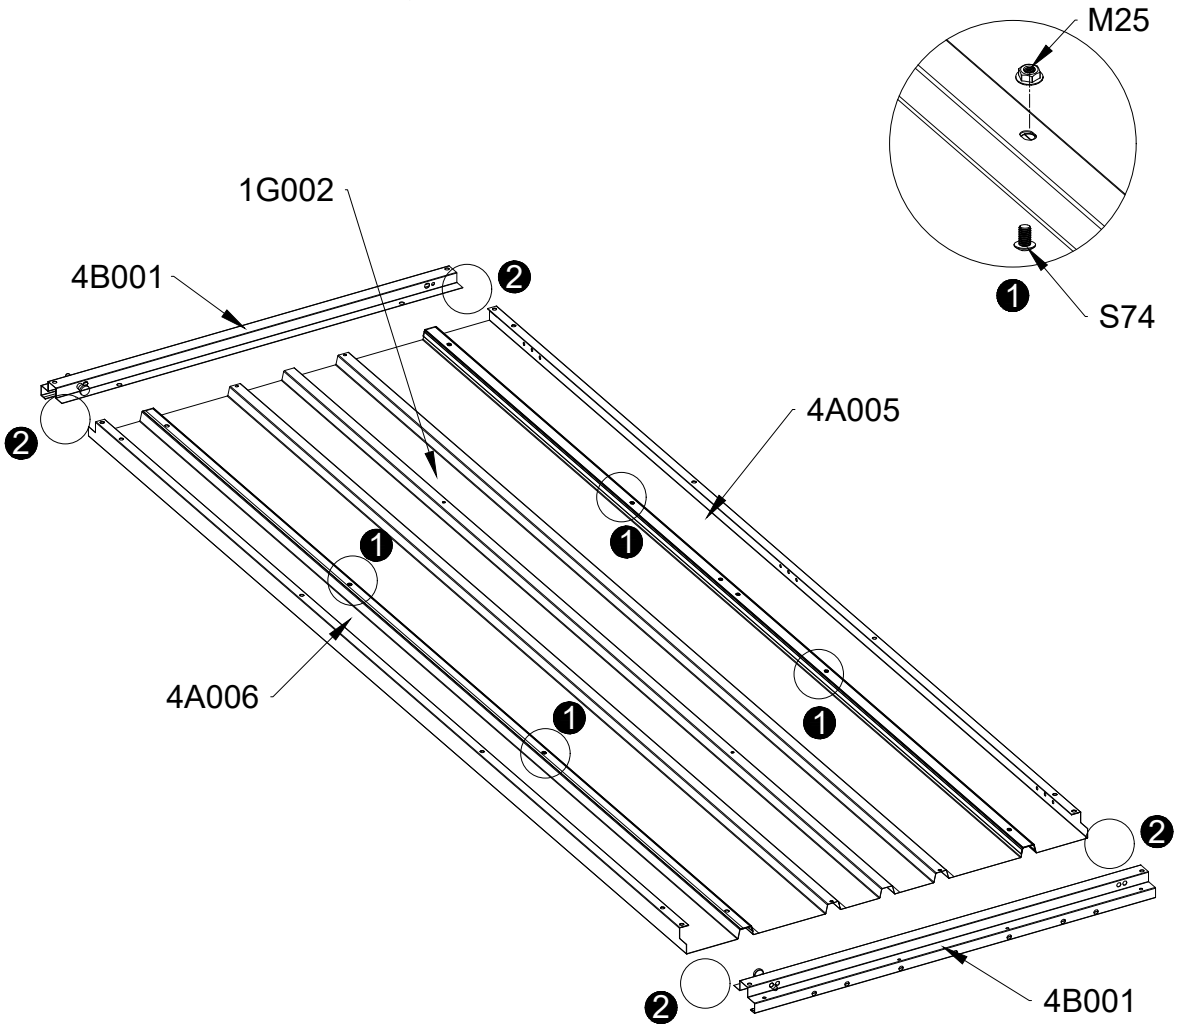

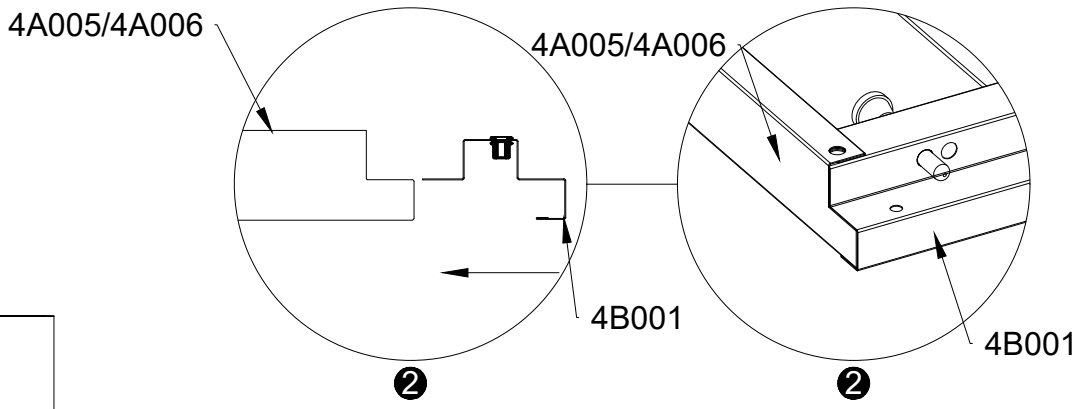


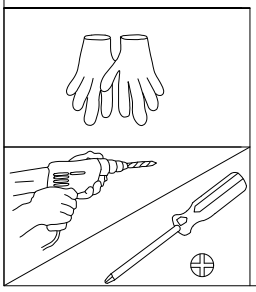



Pay attention to the connection method between 4A005/4A006 and 4B001.


PART	NO	QTY
	2R002	2
	S74 M4X8	16
	M25 M4	12


Left Door

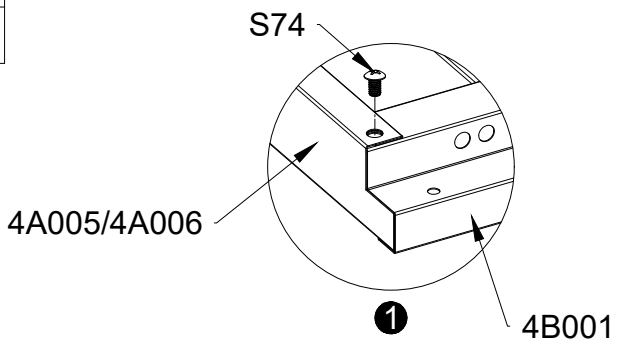

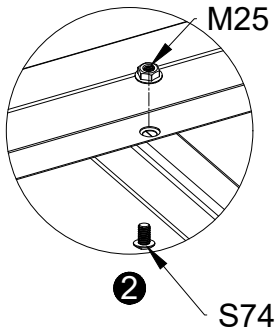

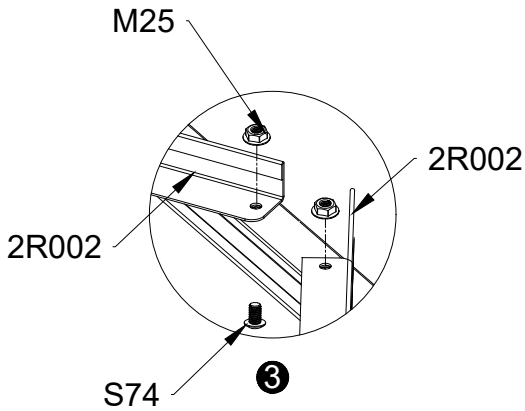


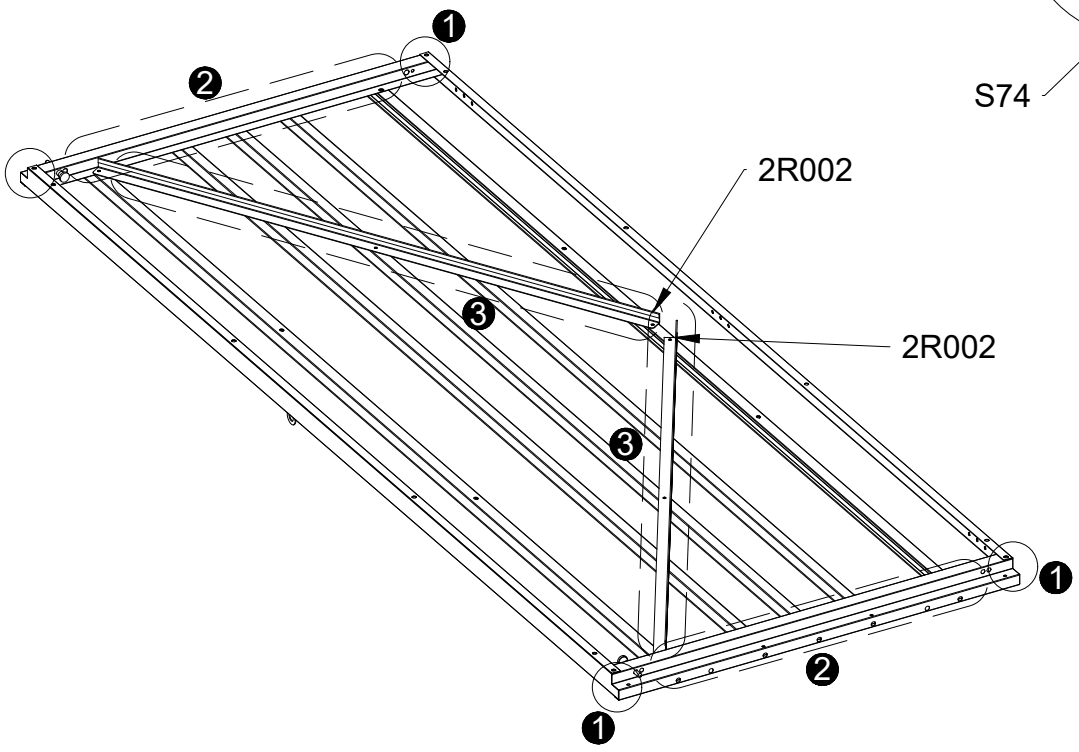


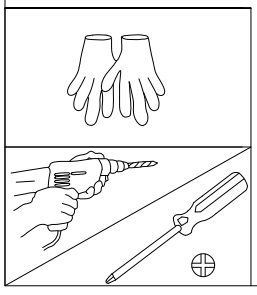


PART	NO	QTY
	4C002	1
	S74 M4X8	4
	M25 M4	4

Left Door

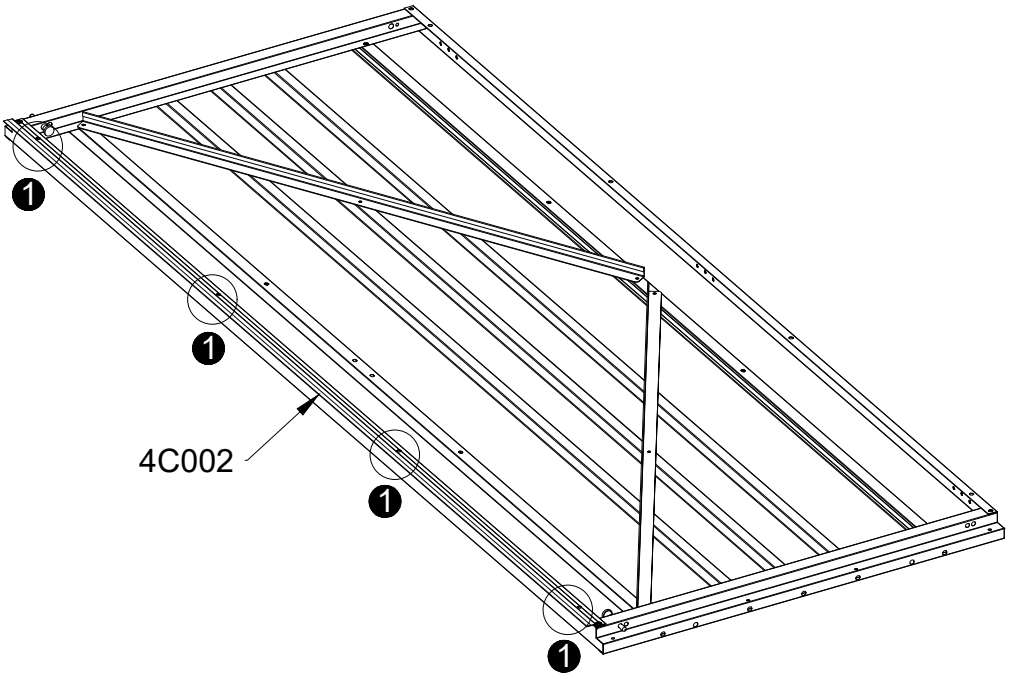


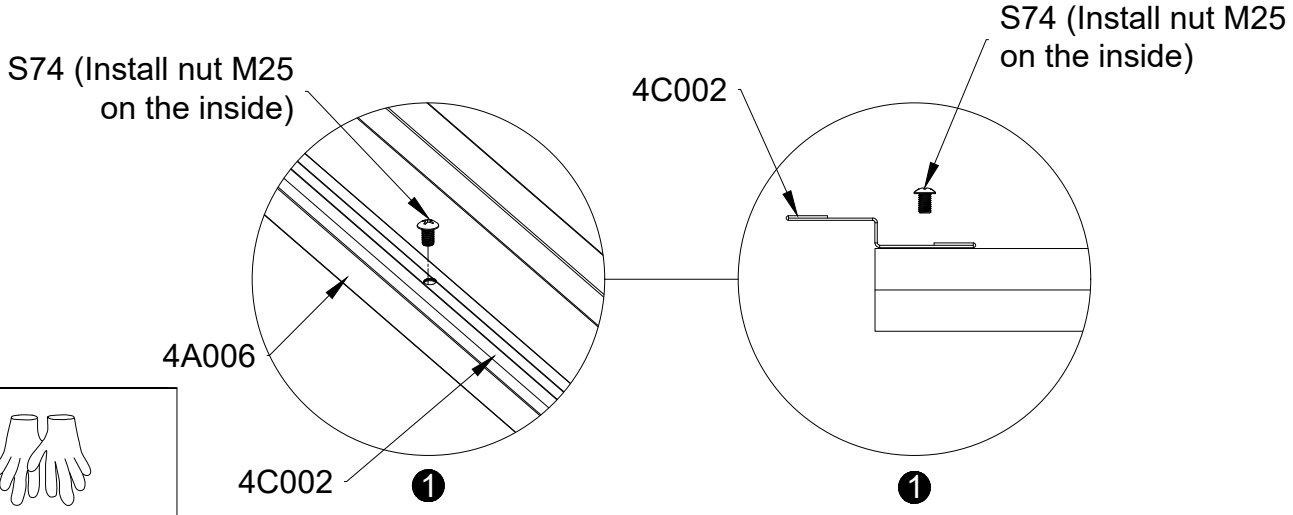

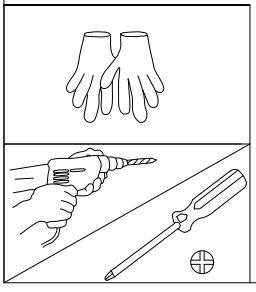



PART	NO	QTY
	1G002	1
	4A004	1
	4A005	1
	4B001	2
	S74 M4X8	4
	M25 M4	4


Right Door

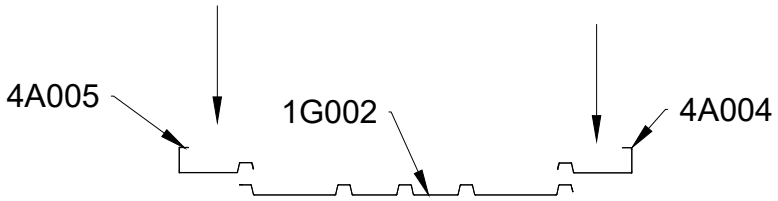

Please stack the door frames of the door panels according to the instructions above.

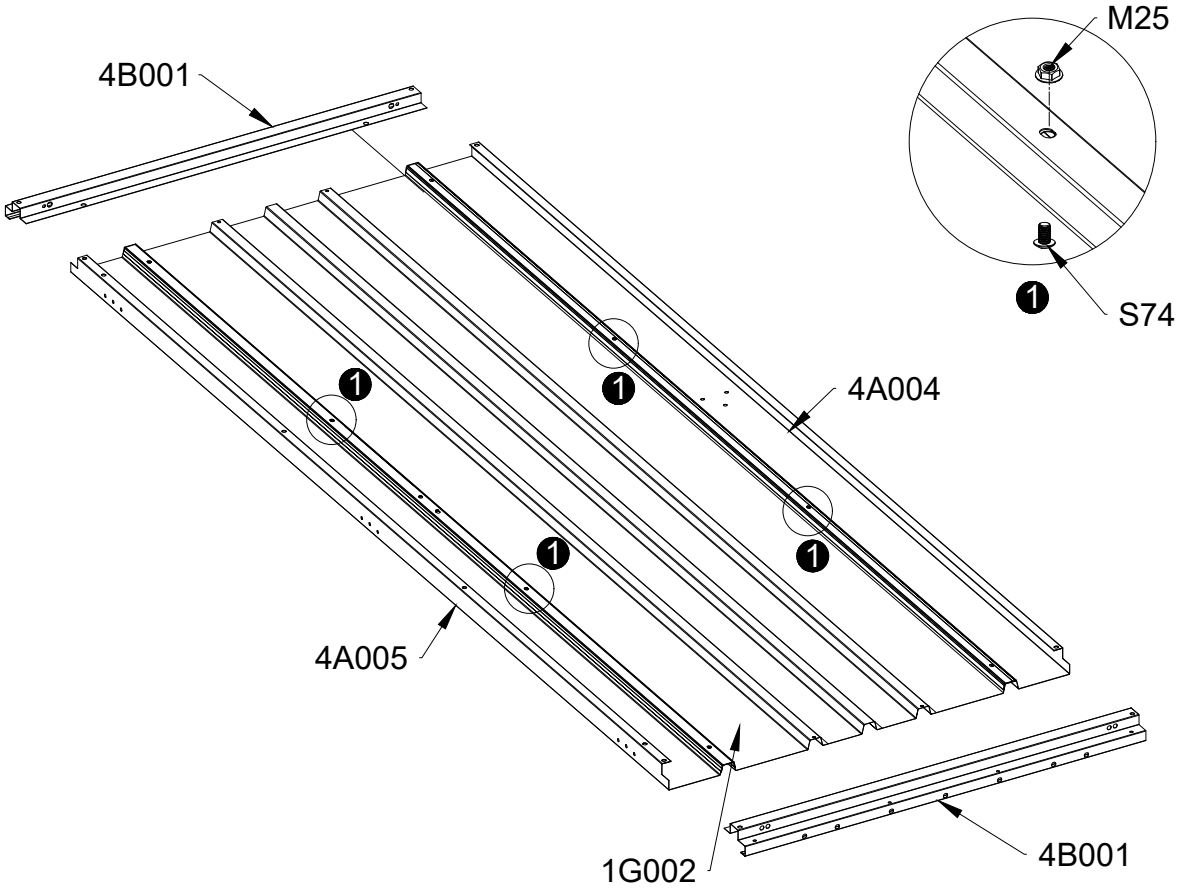

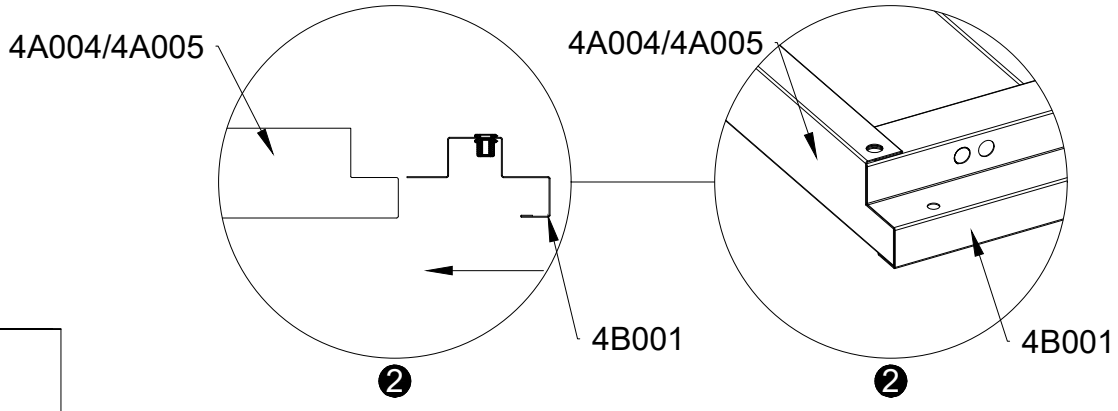


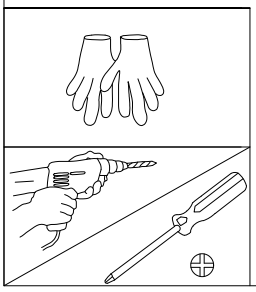



Pay attention to the connection method between 4A004/4A005 and 4B001.


Right Door

PART	NO	QTY
	D354	3
	H170	3
	S74 M4X8	4
	S75 M4X10	9
	M25 M4	9

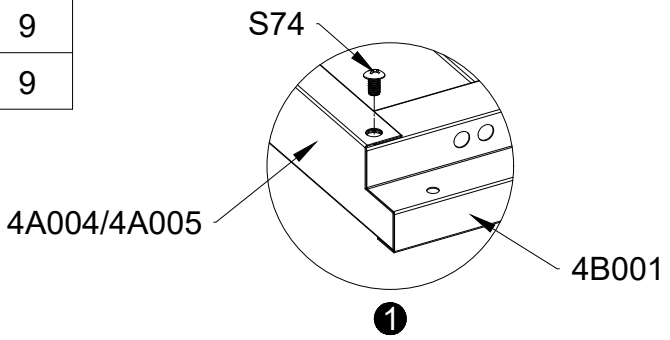

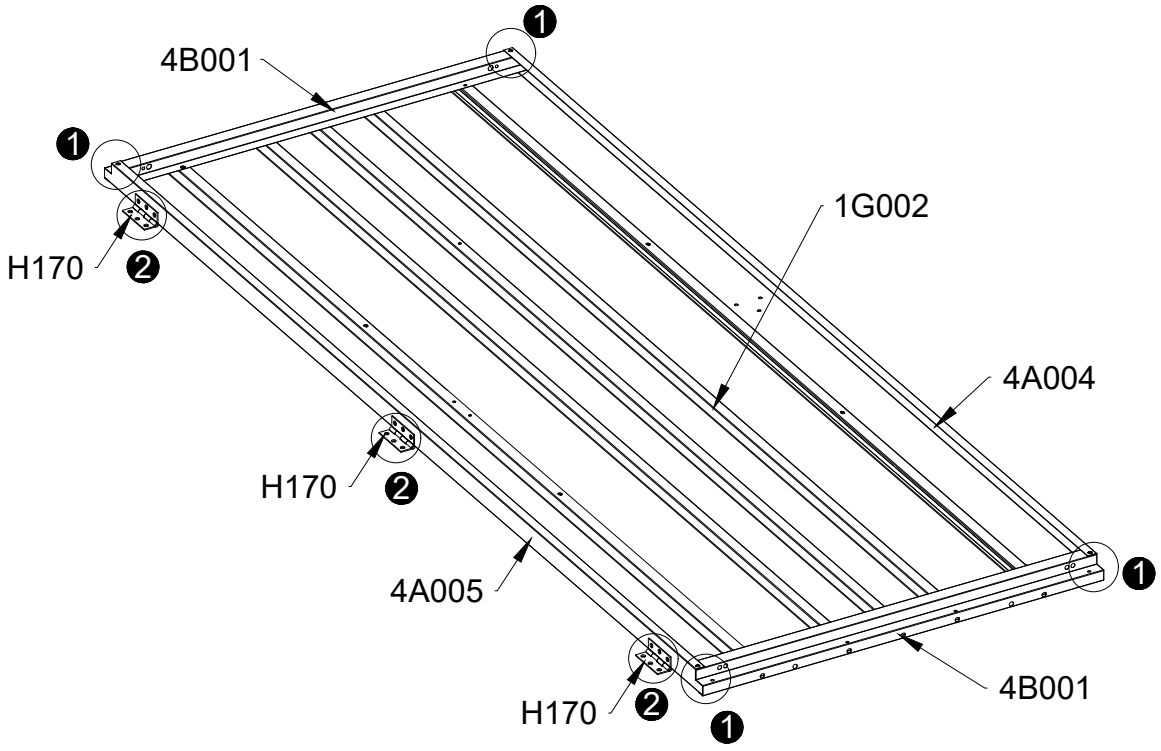


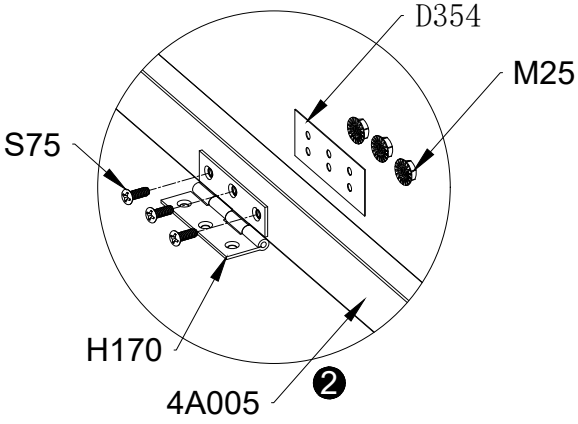


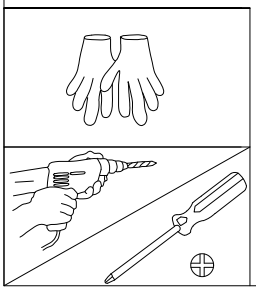



Right Door

PART	NO	QTY
	2R002	2
	S74 M4X8	12
	M25 M4	12

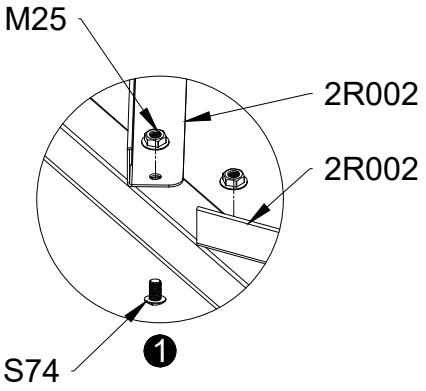

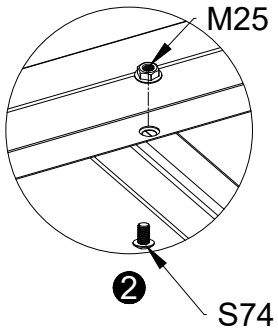


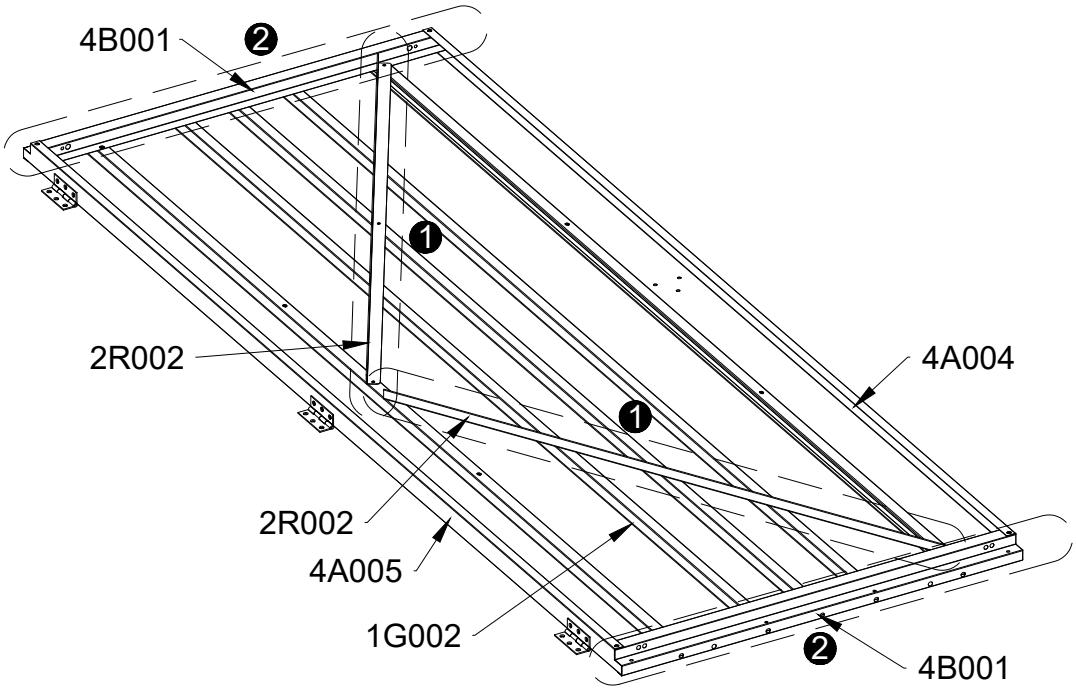


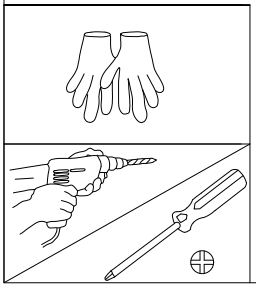



PART	NO	QTY
	2A002	4
	2A008	2
	2A011	2
	D355	8
	D438	4
	S74 M4X8	32
	M25 M4	32

There is a semicircle mark here, please pay attention to the direction of the gap.

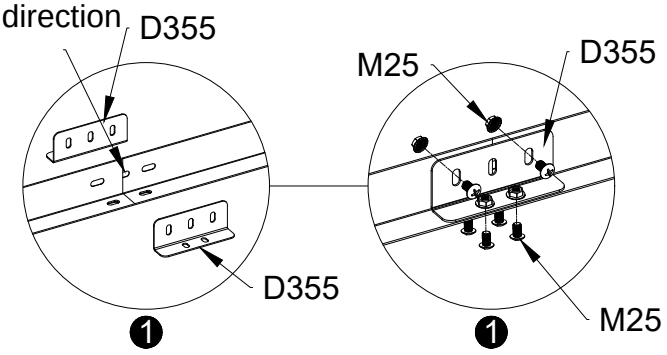


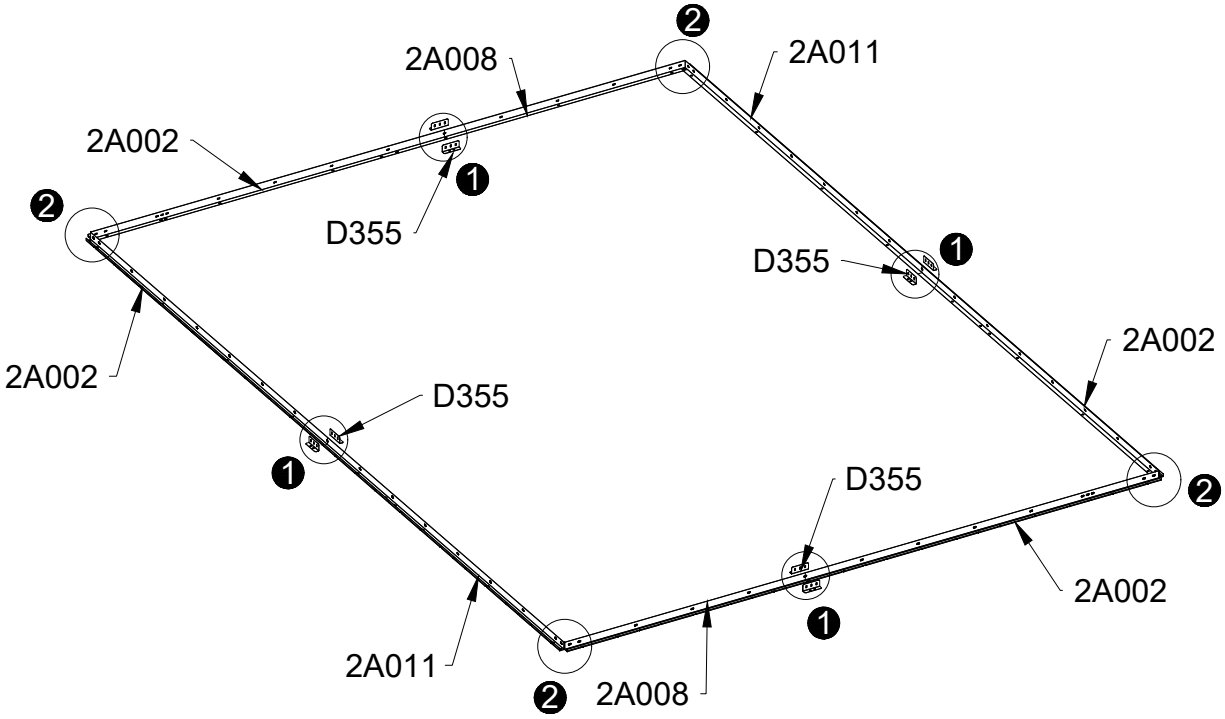

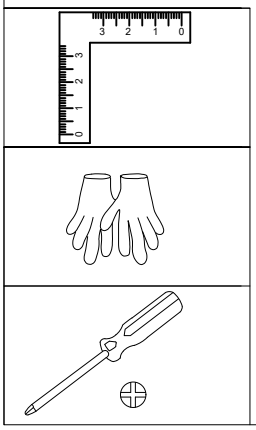

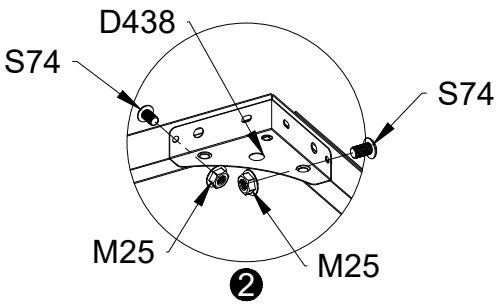



PART	NO	QTY
	J156	30
	Z40 M5X40	30

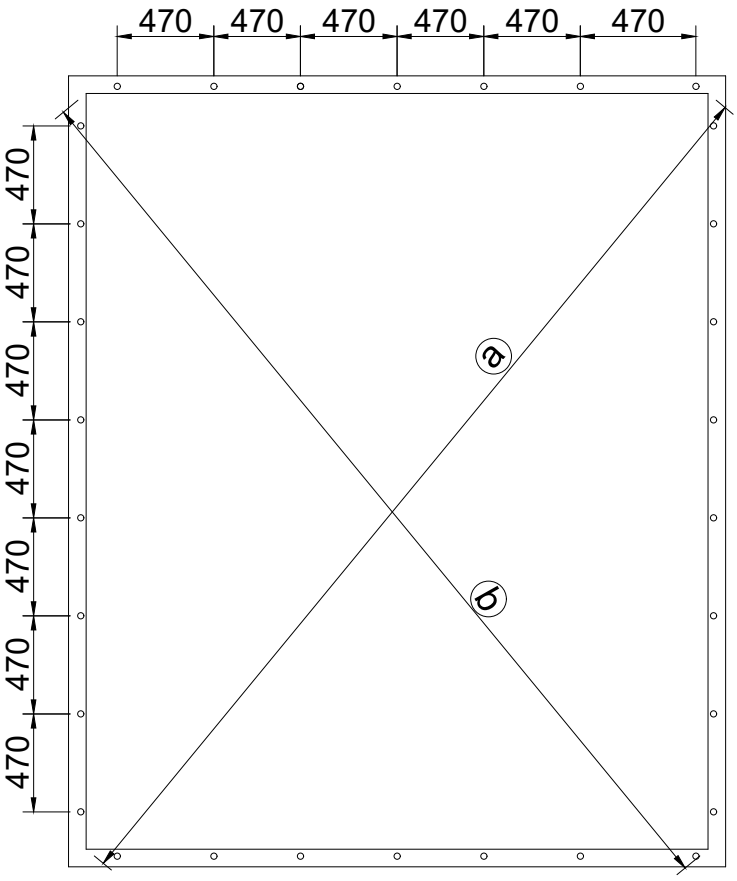



The position of the door

ⓐ = ⓑ

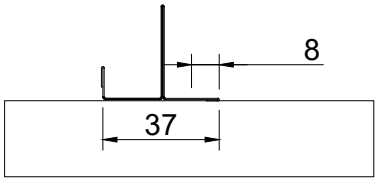

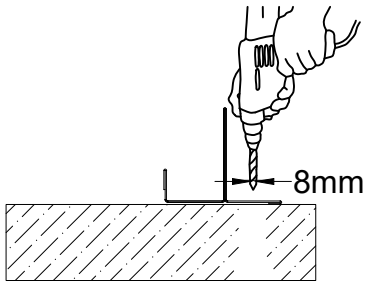


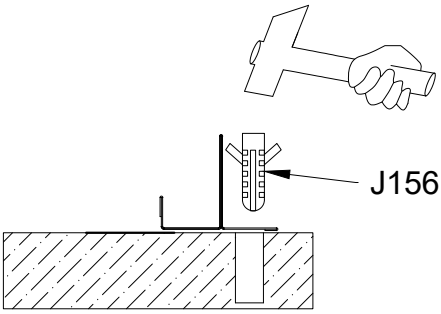


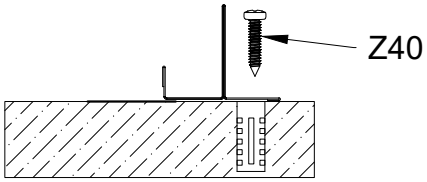



Expansion bolt installatior

PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

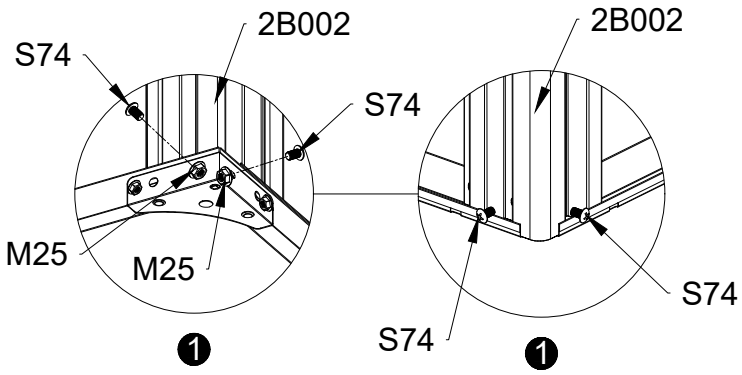


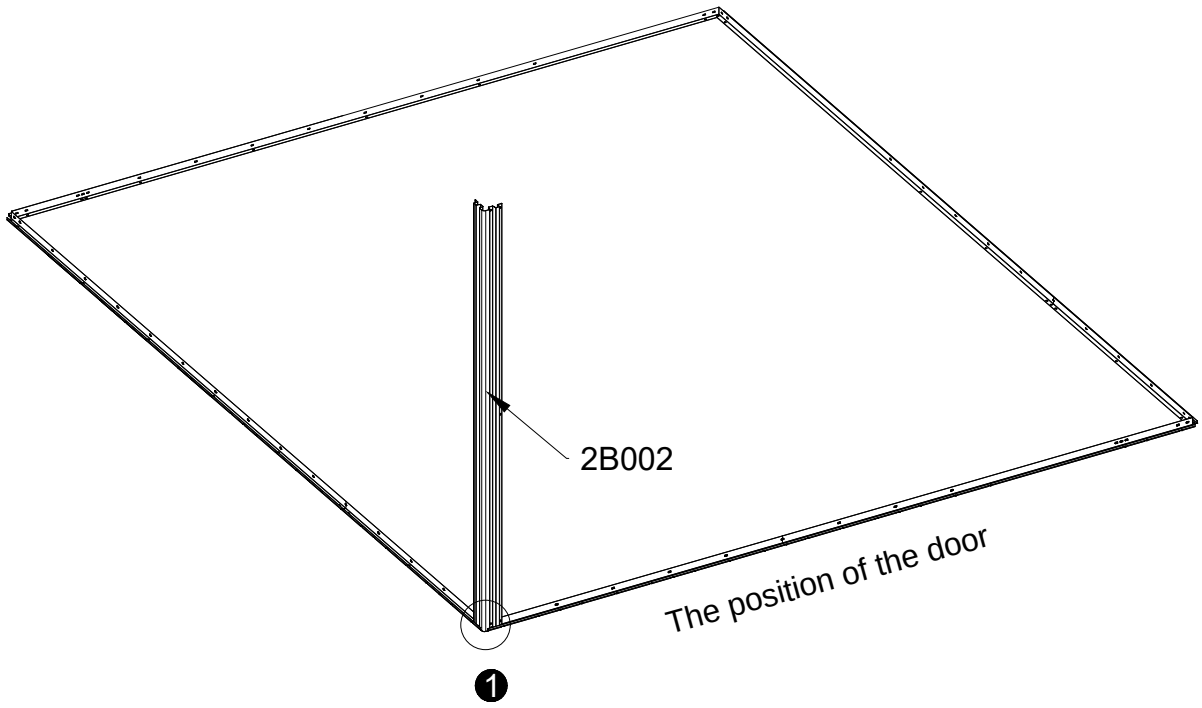


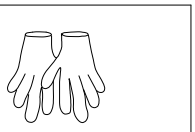


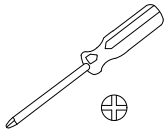


PART	NO	QTY
	1A002	2
	S74 M4X8	6
	M25 M4	6

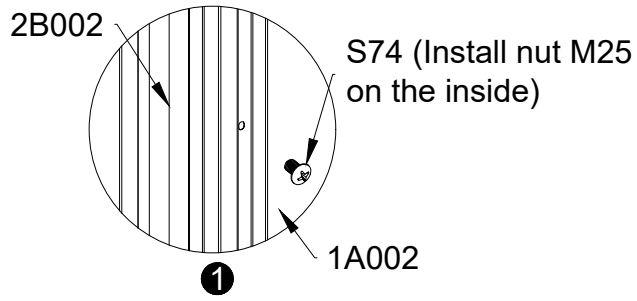


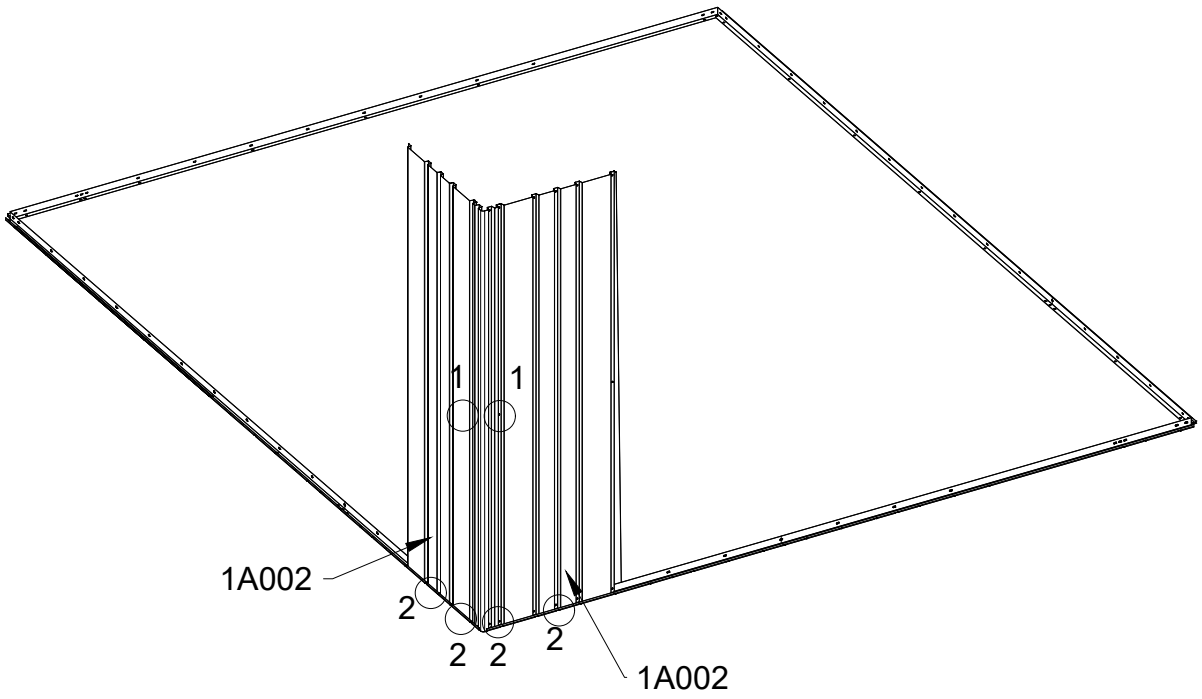


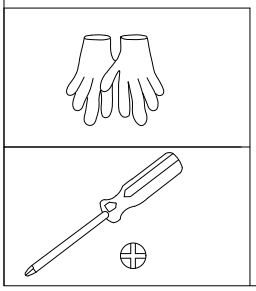


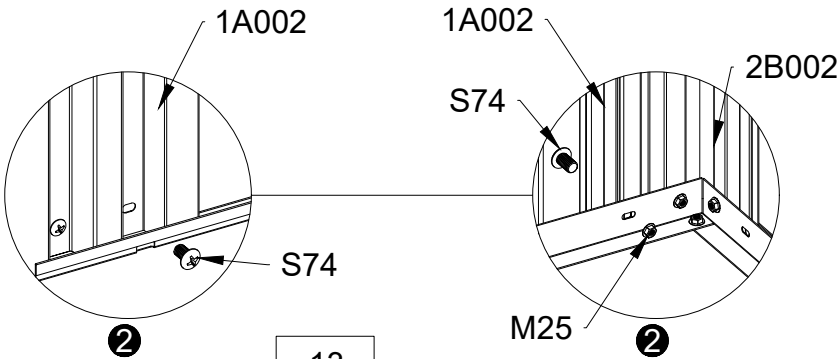


PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

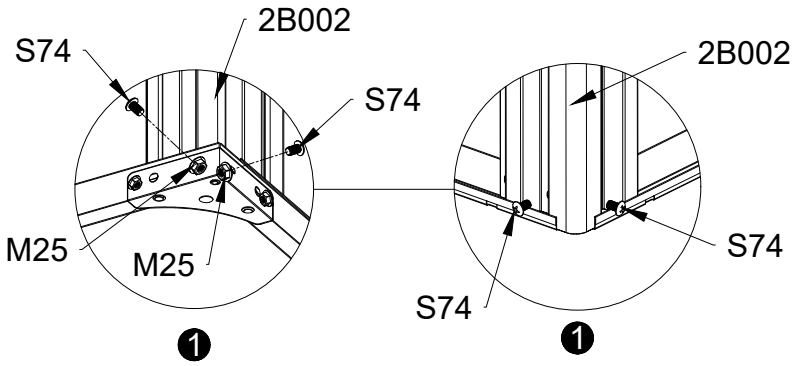


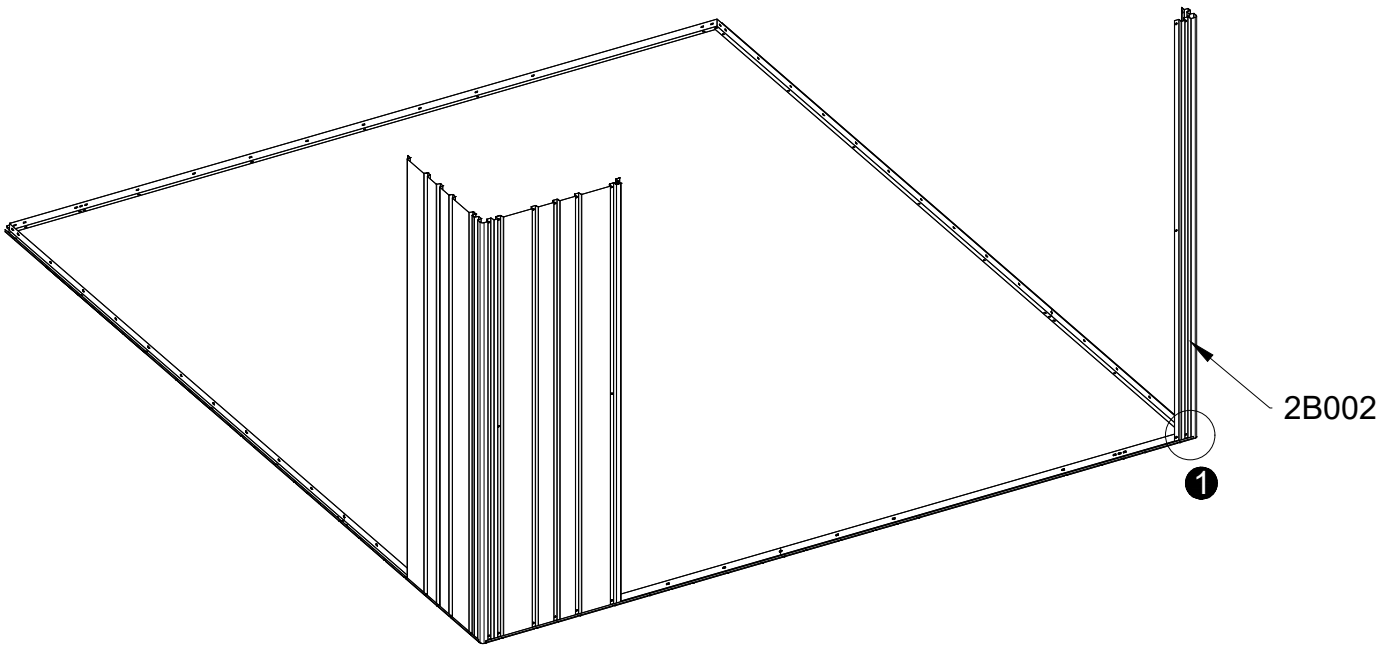


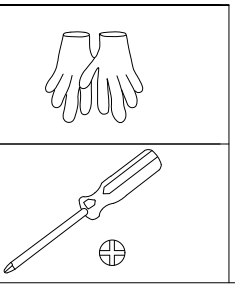


PART	NO	QTY
	1A002	2
	S74 M4X8	6
	M25 M4	6

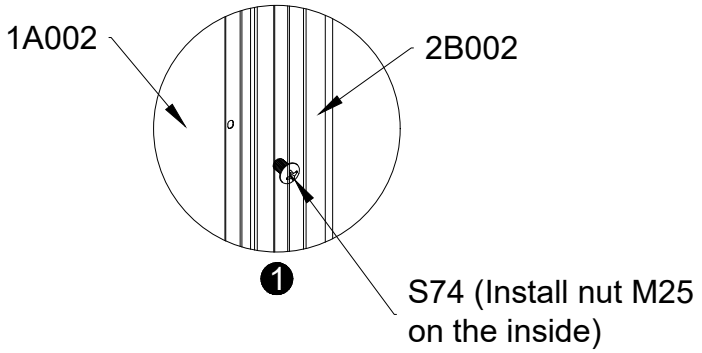


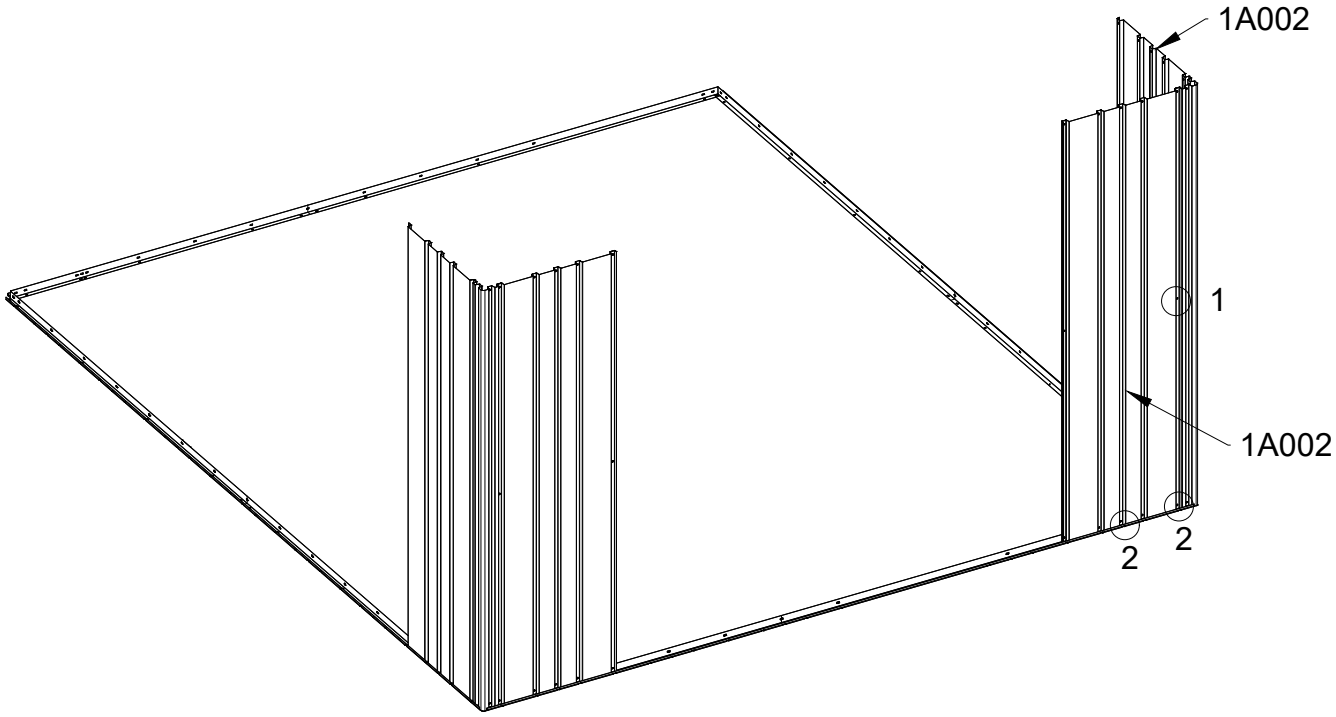


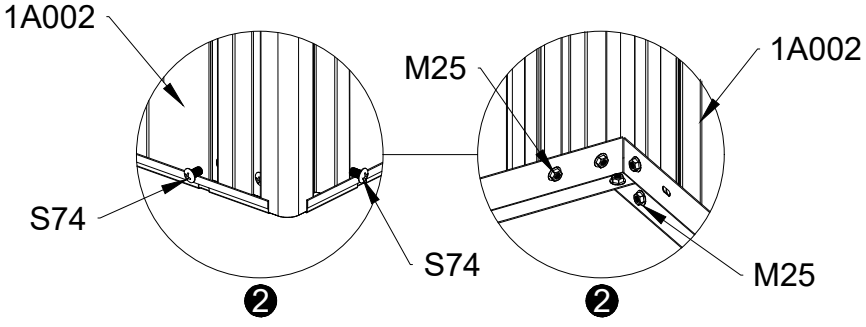

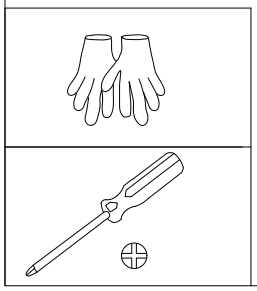


PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

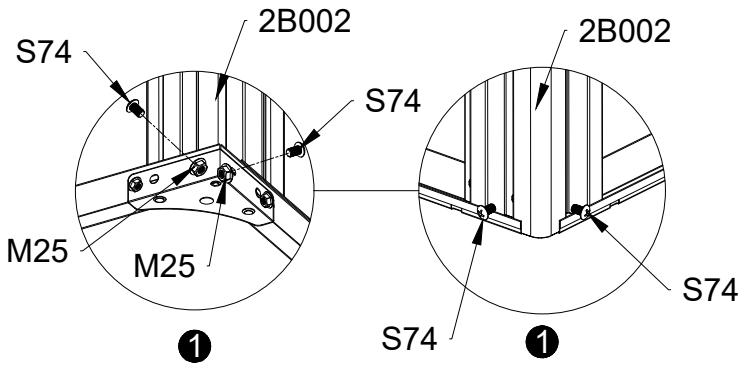


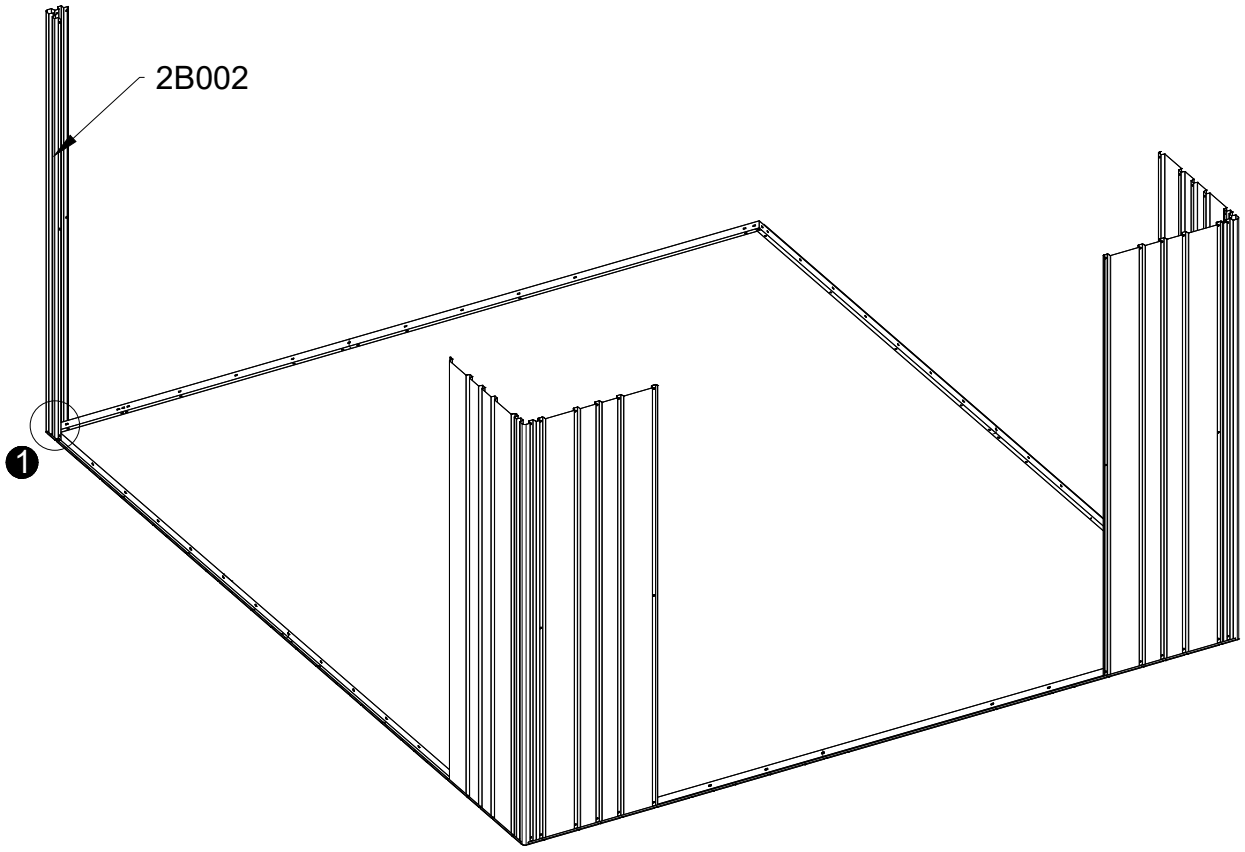





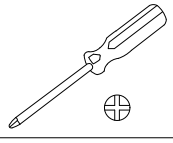


PART	NO	QTY
	1A002	2
	S74 M4X8	6
	M25 M4	6

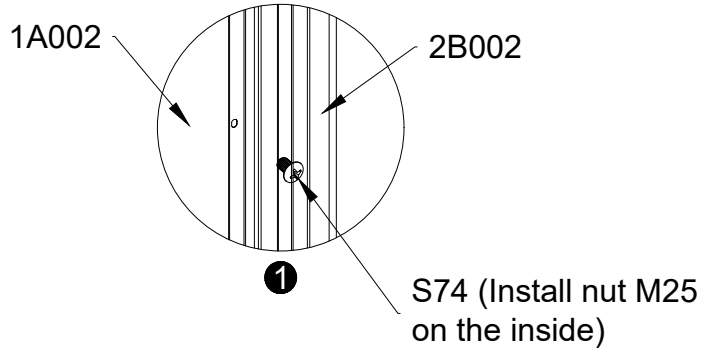


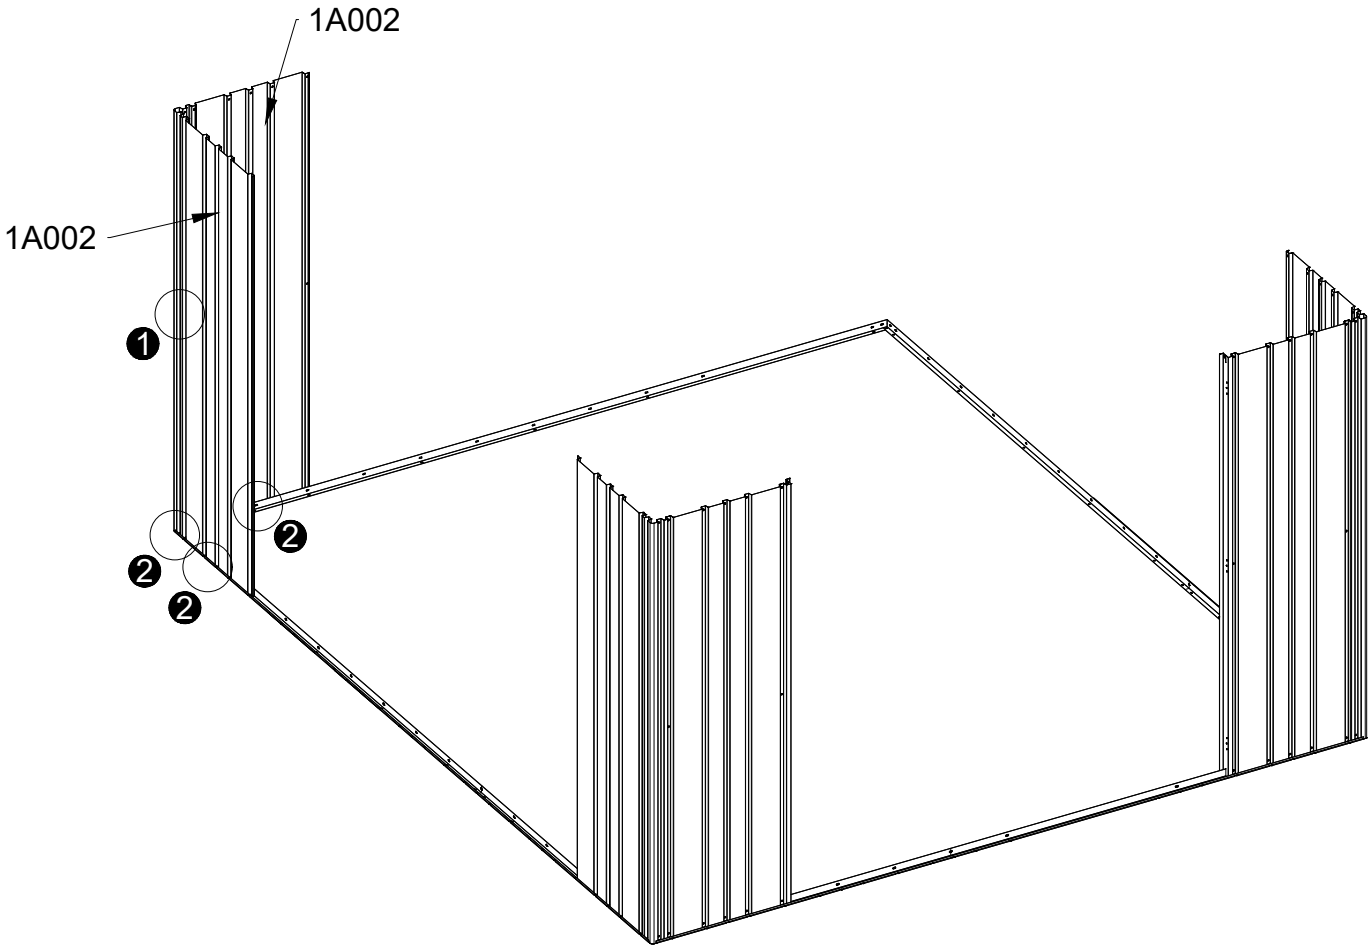


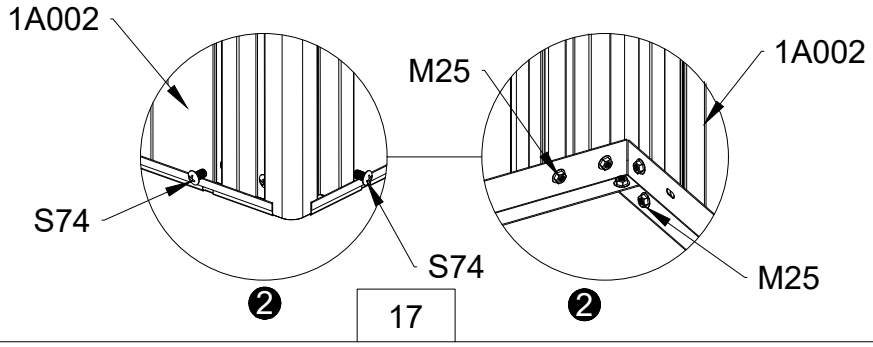


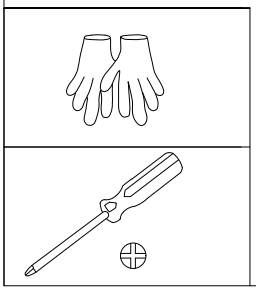


PART	NO	QTY
	2B002	1
	S74 M4X8	2
	M25 M4	2

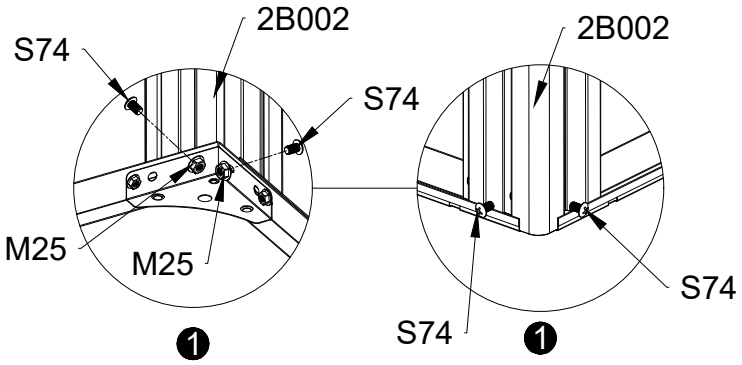


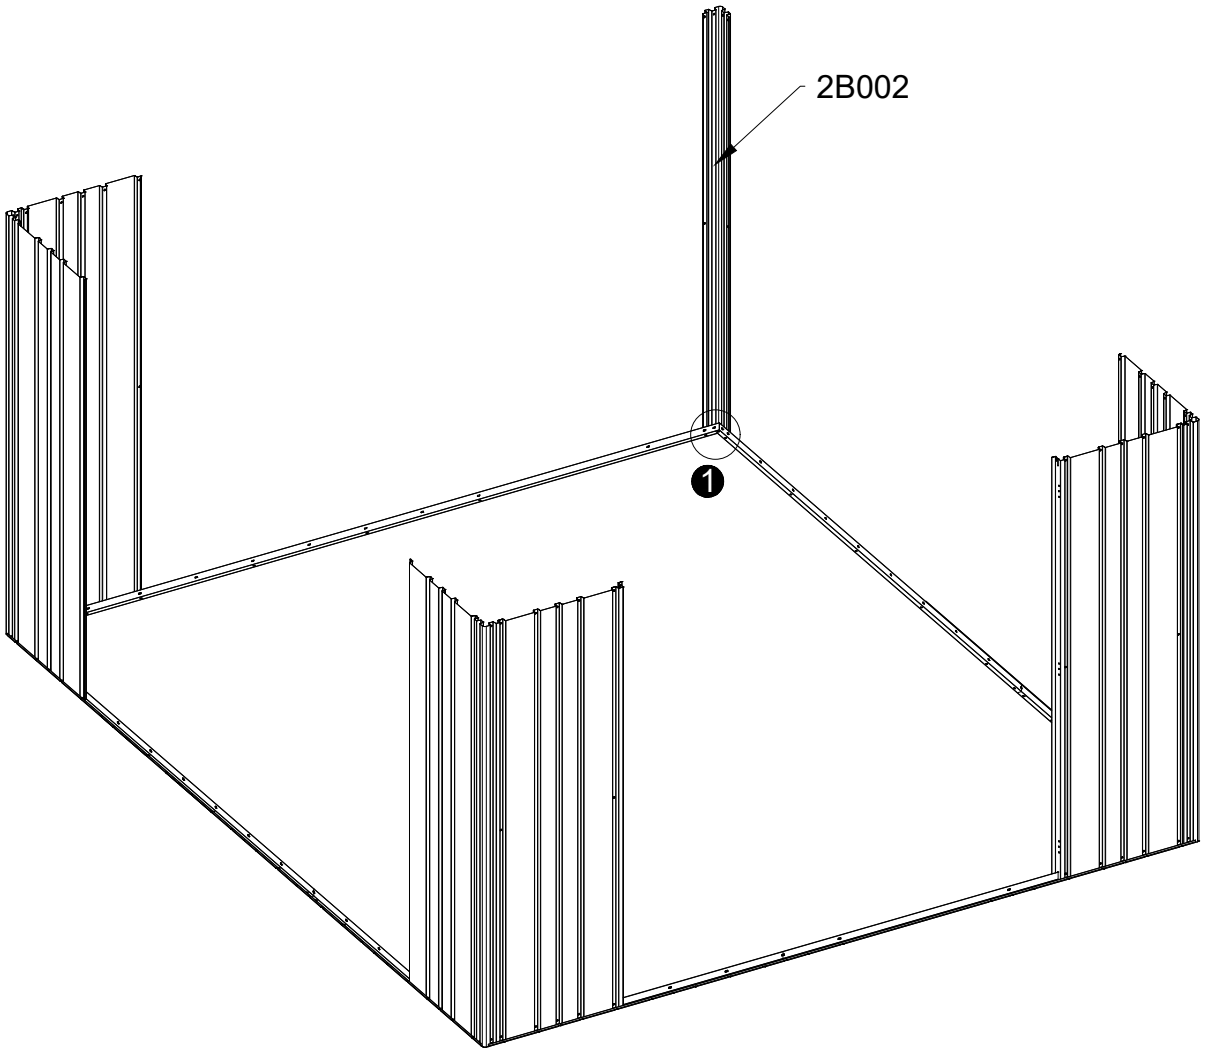


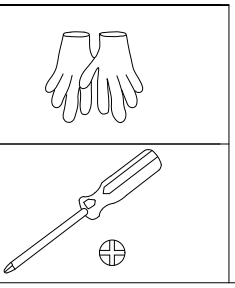


PART	NO	QTY
	1A002	2
	S74 M4X8	6
	M25 M4	6

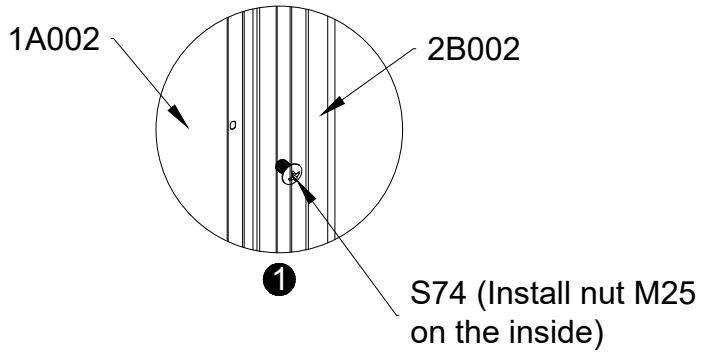


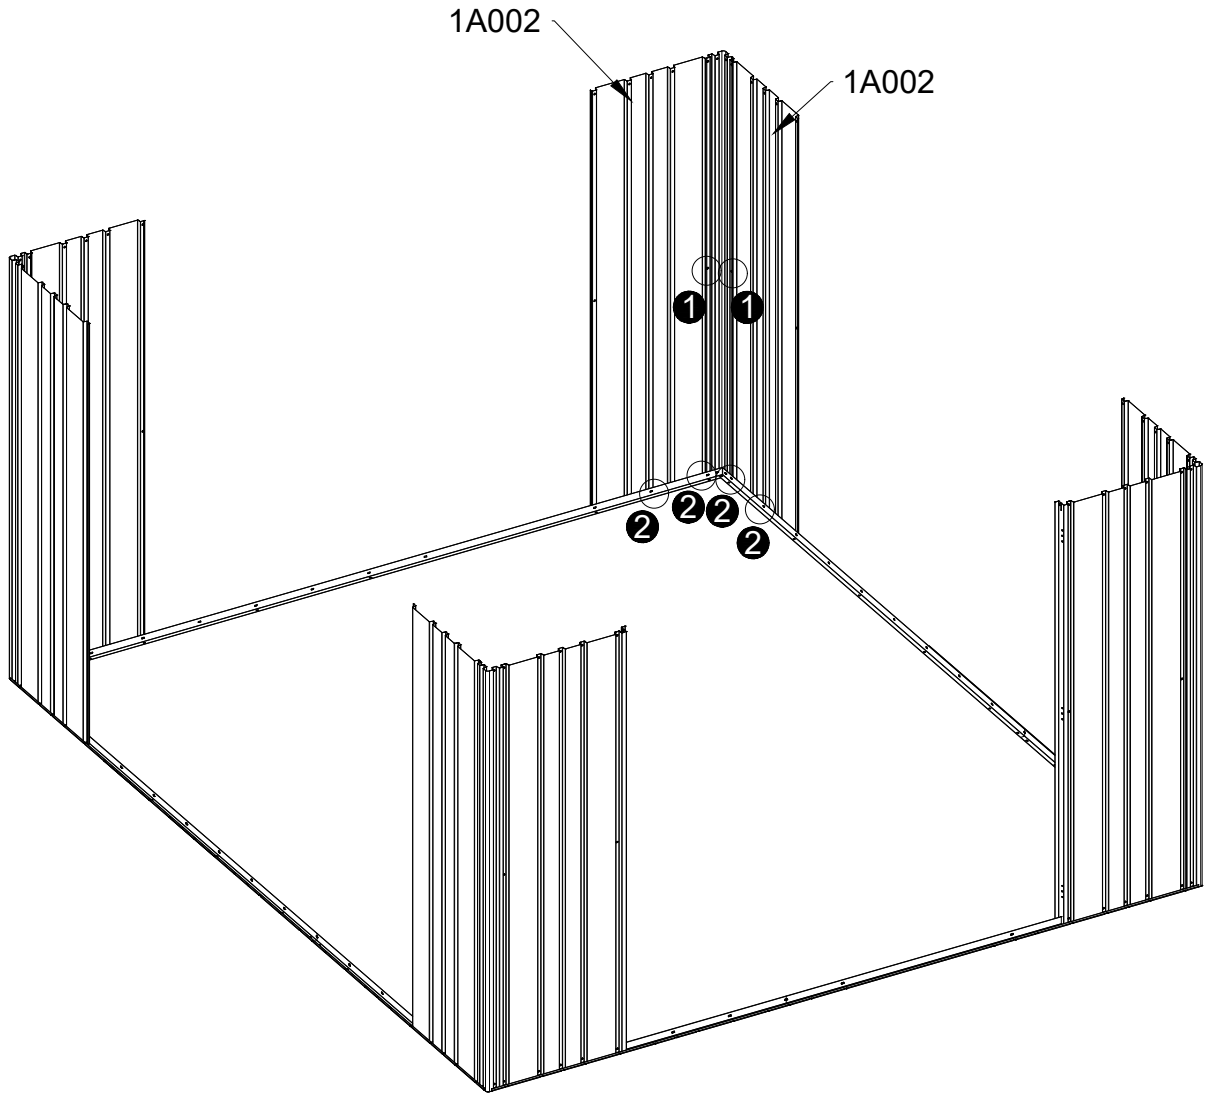


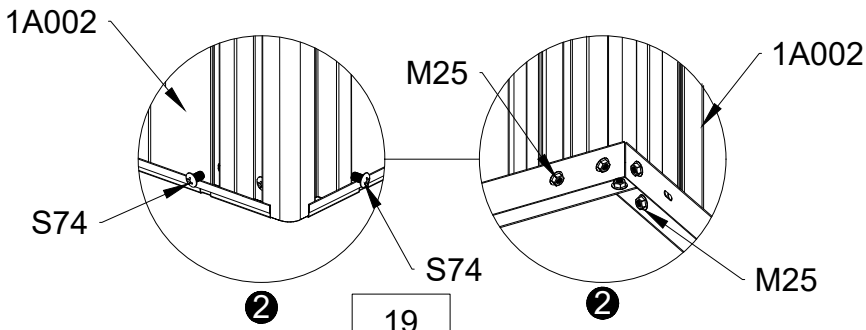


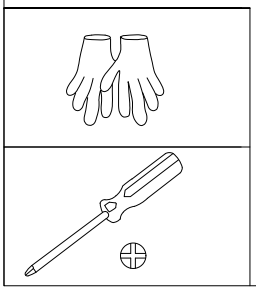


PART	NO	QTY
	1C002	2
	2C003	1
	2C004	1

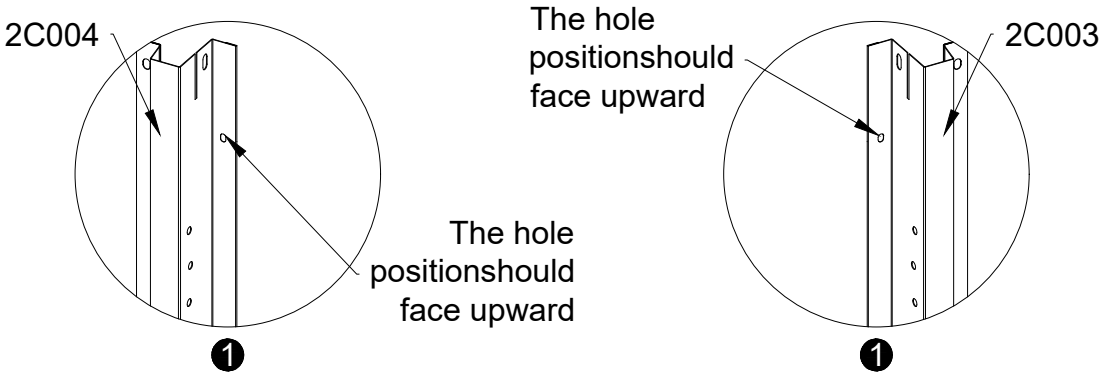


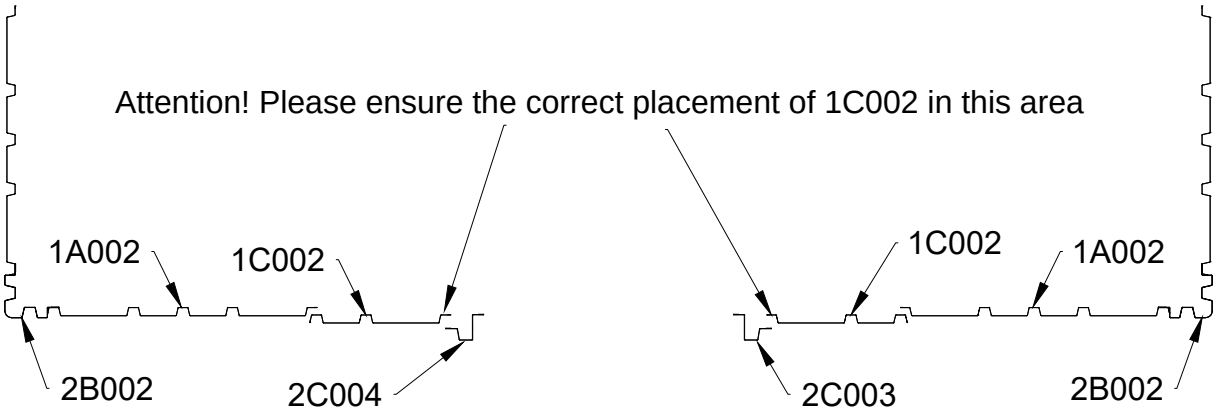


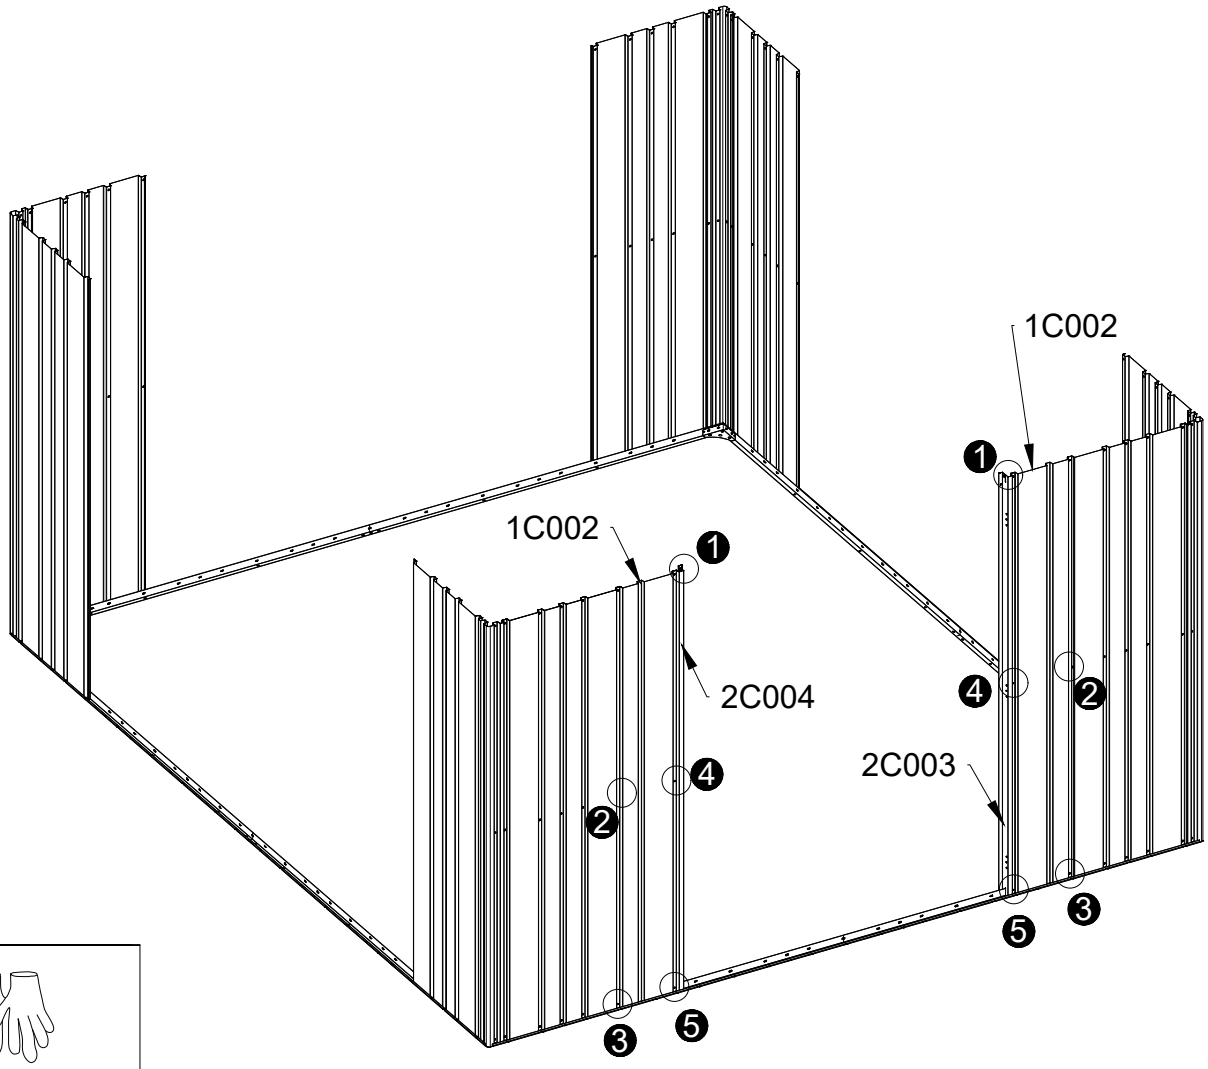


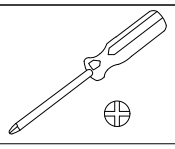



PART	NO	QTY
	S74 M4X8	8
	M25 M4	8

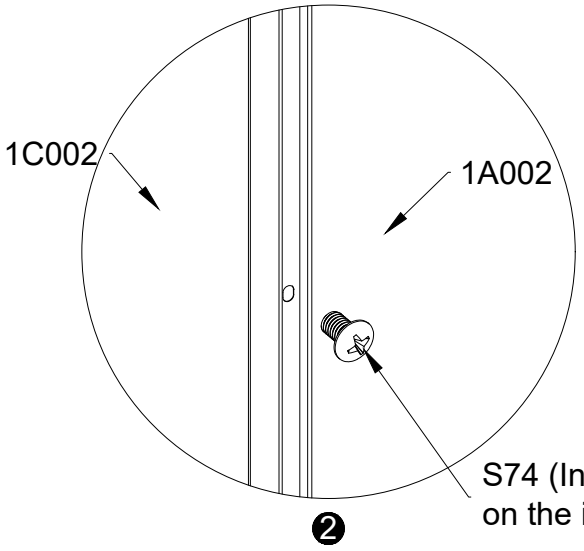


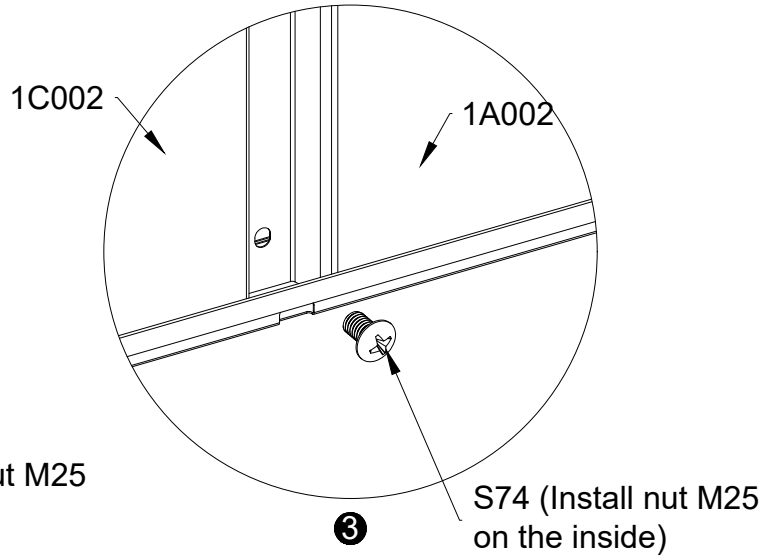

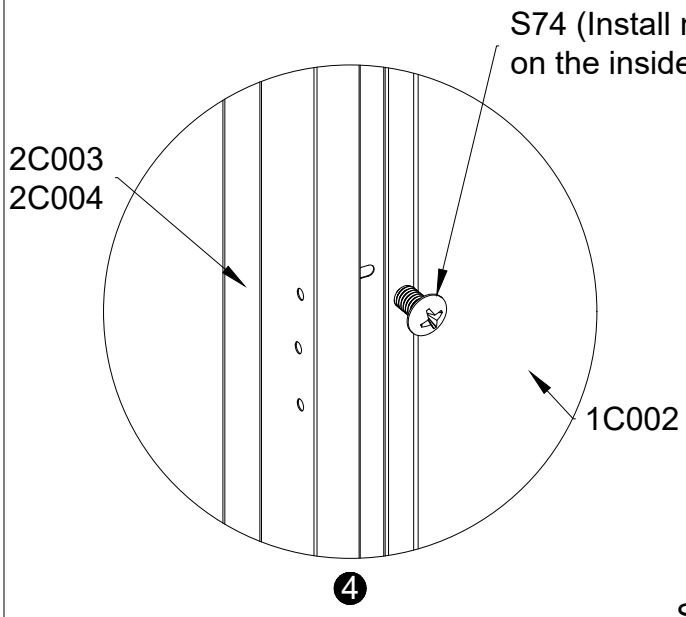


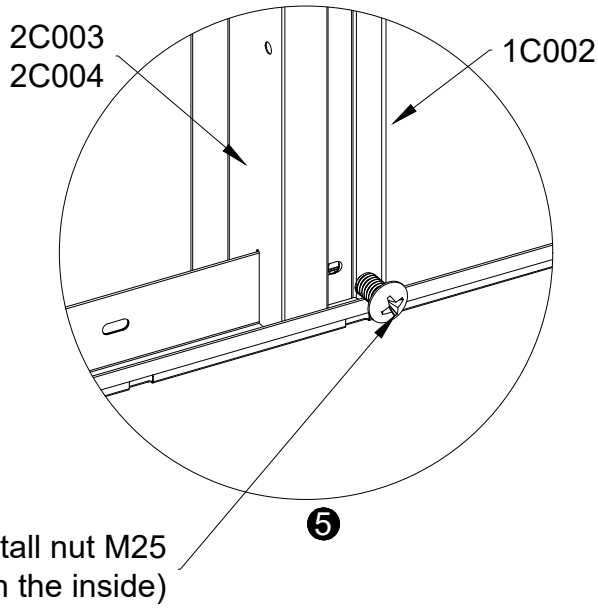


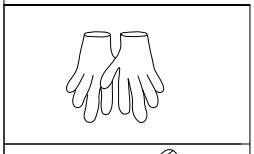


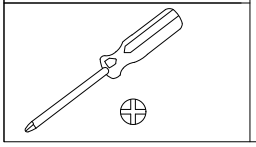


PART	NO	QTY
	2D006	1
	2D007	1
	S74 M4X8	10
	M25 M4	10

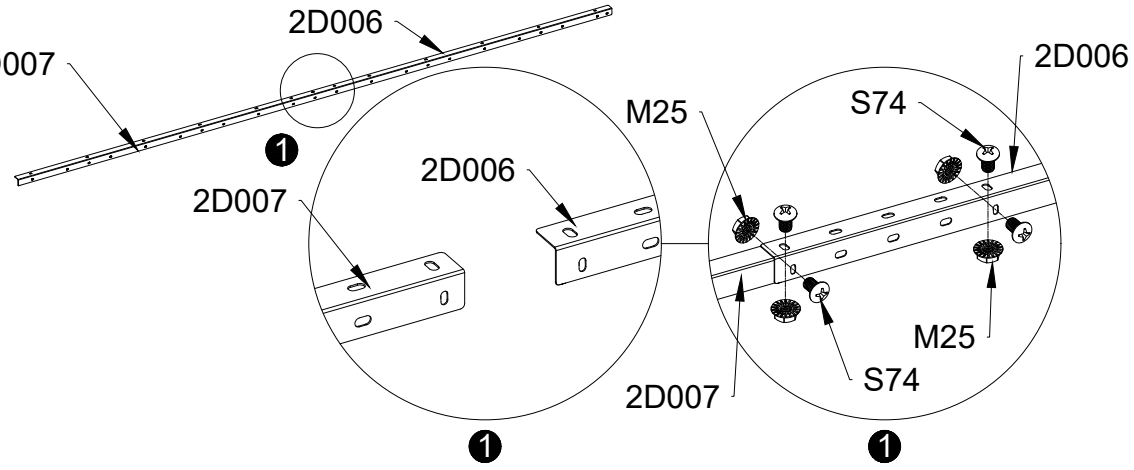


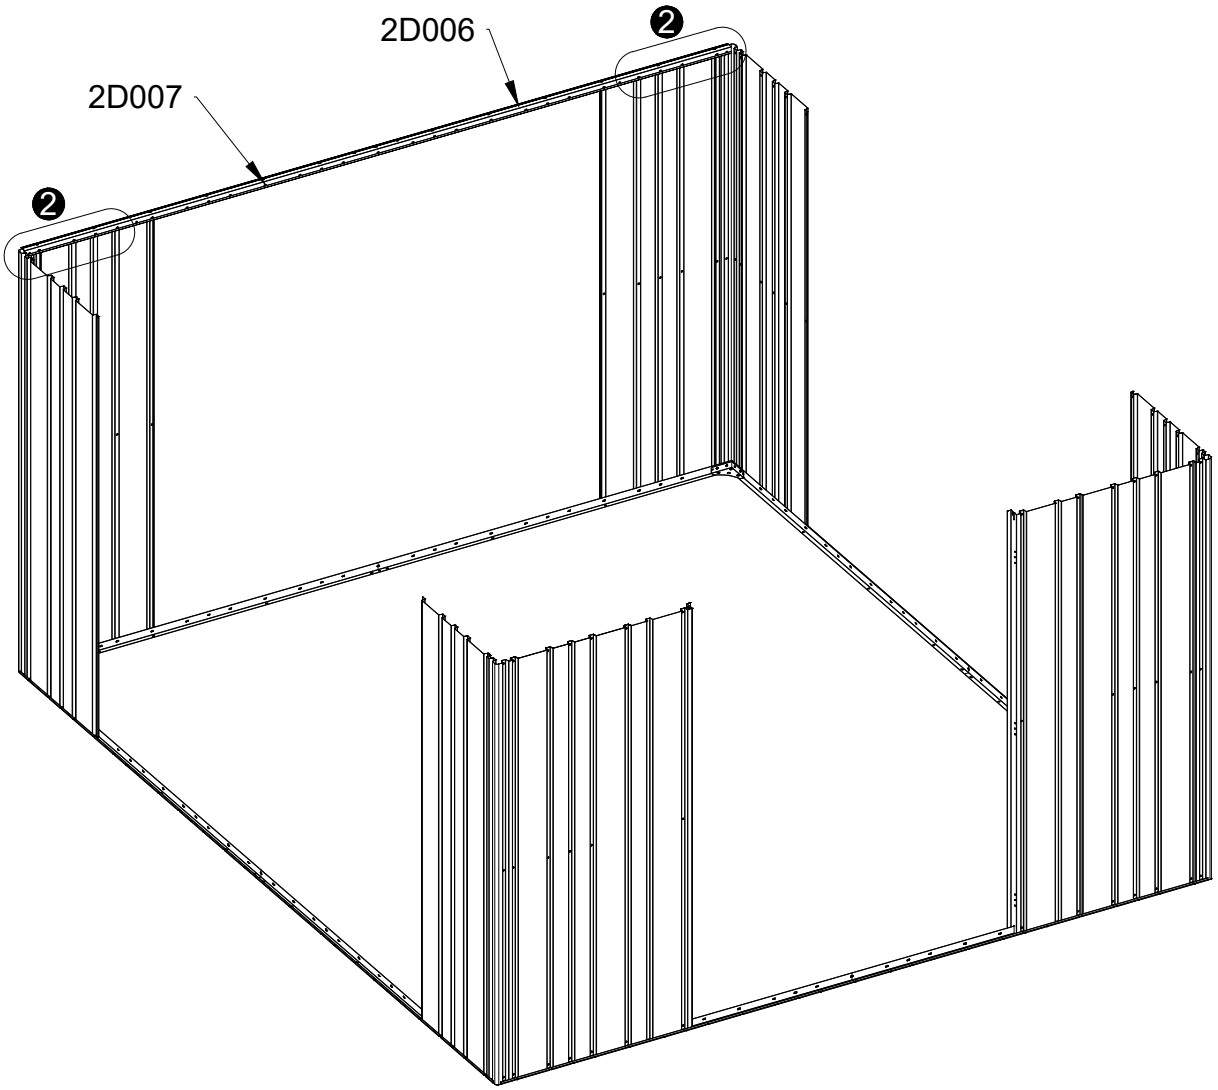


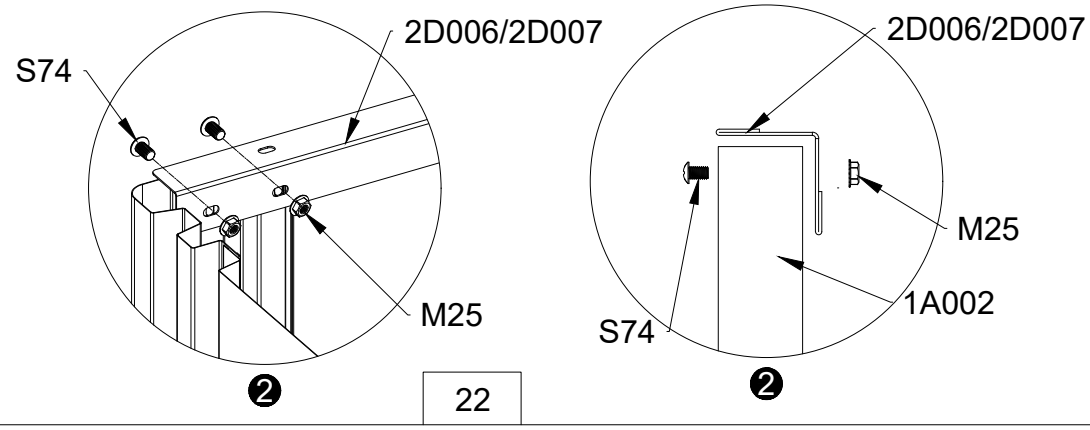


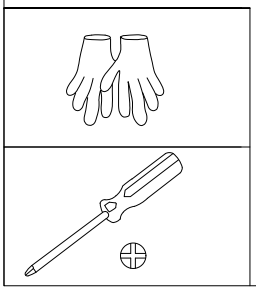



PART	NO	QTY
	2D006	1
	2D007	1
	2H003	1
	S74 M4X8	9
	M25 M4	9

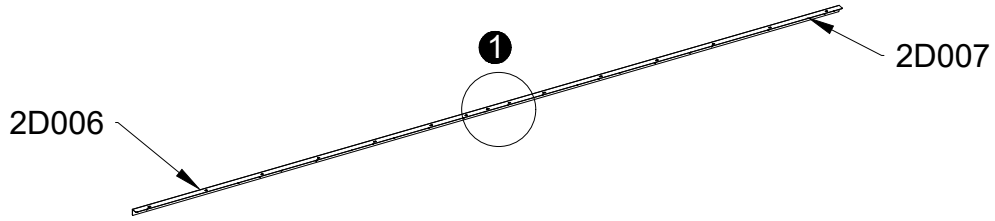


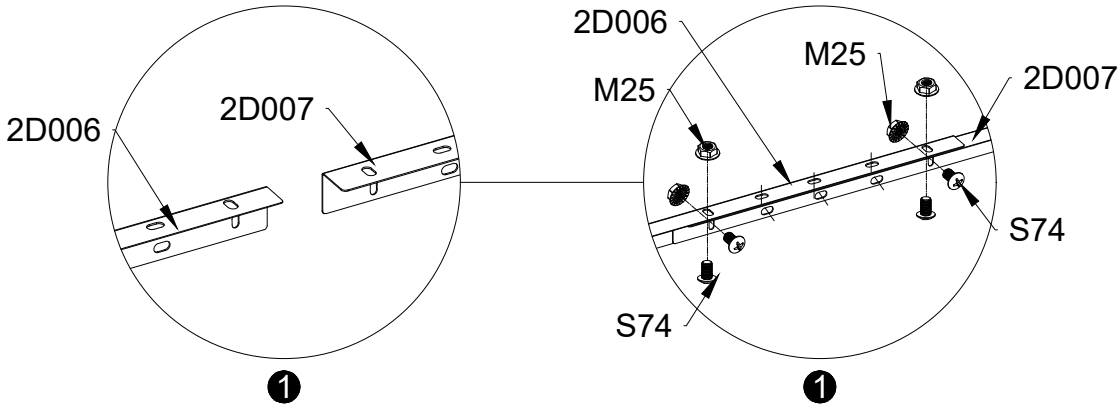

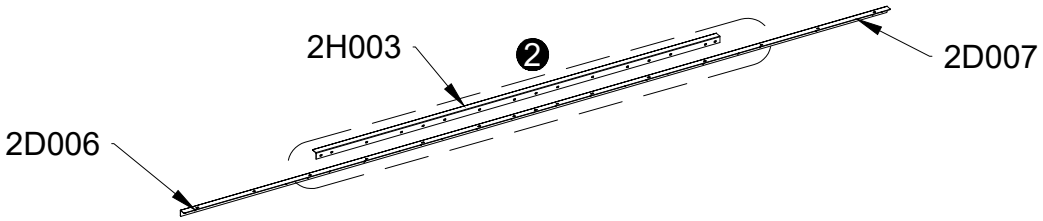


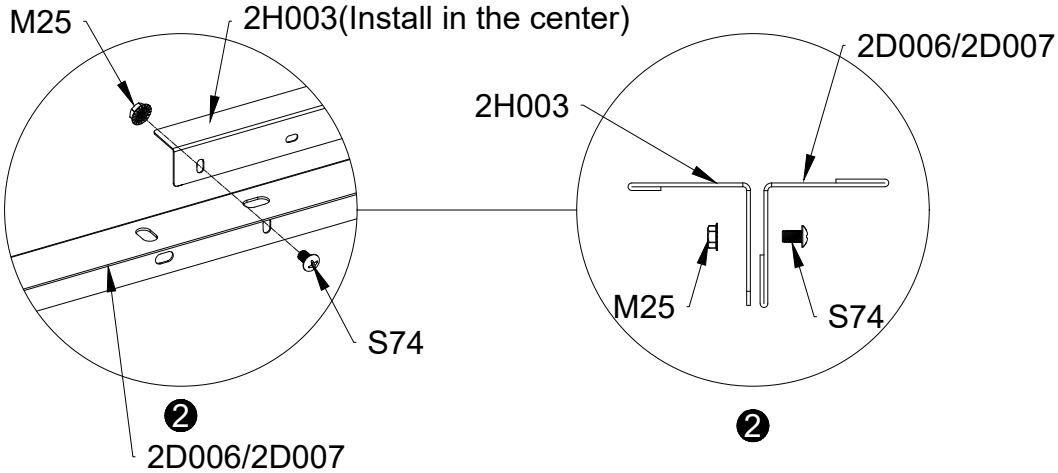


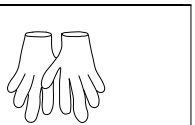


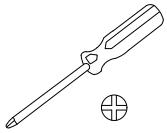


PART	NO	QTY
	S74 M4X8	10
	M25 M4	10

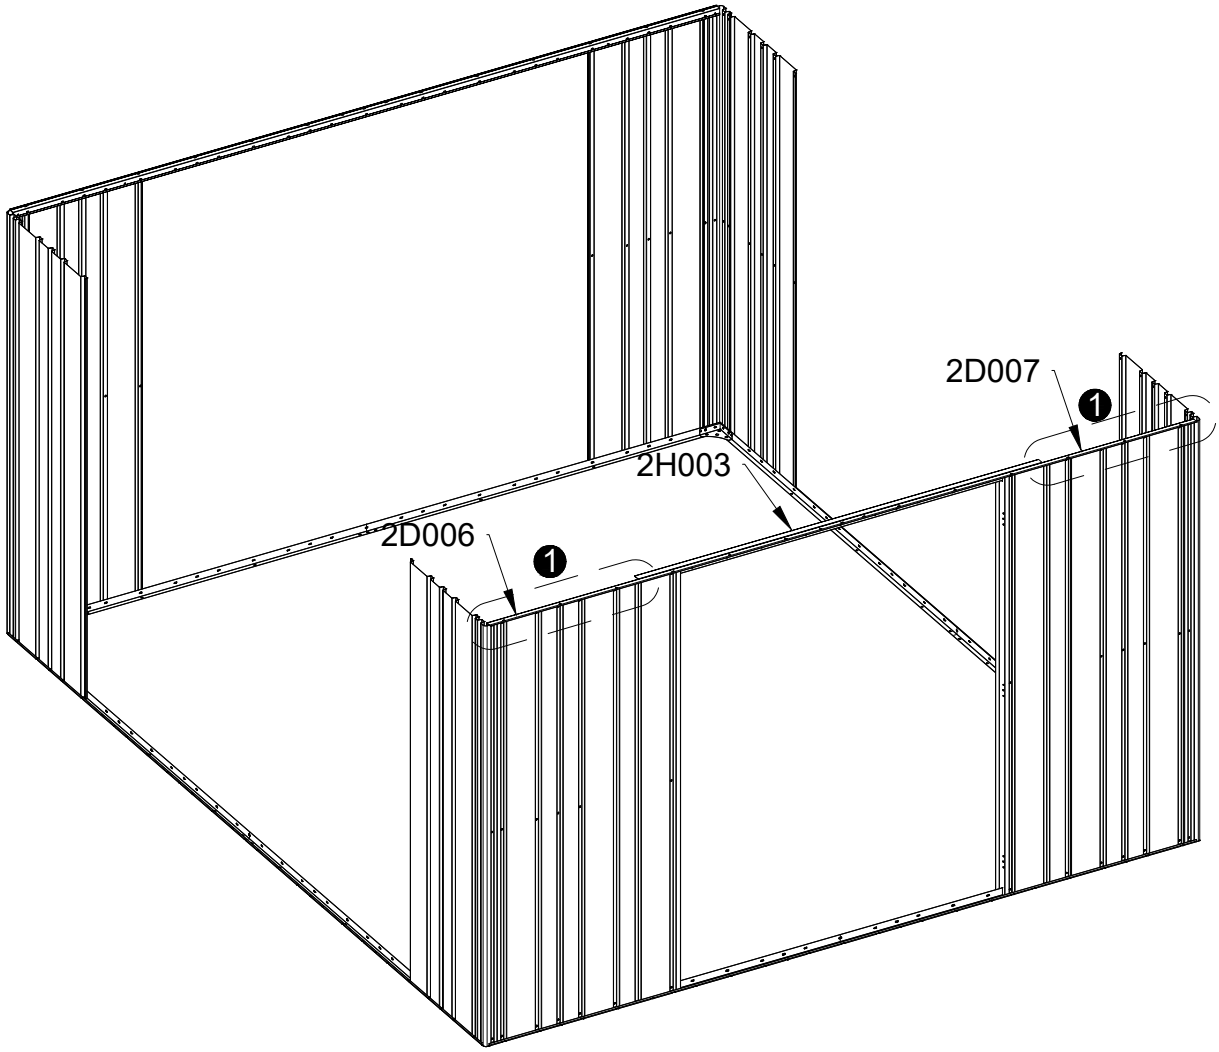


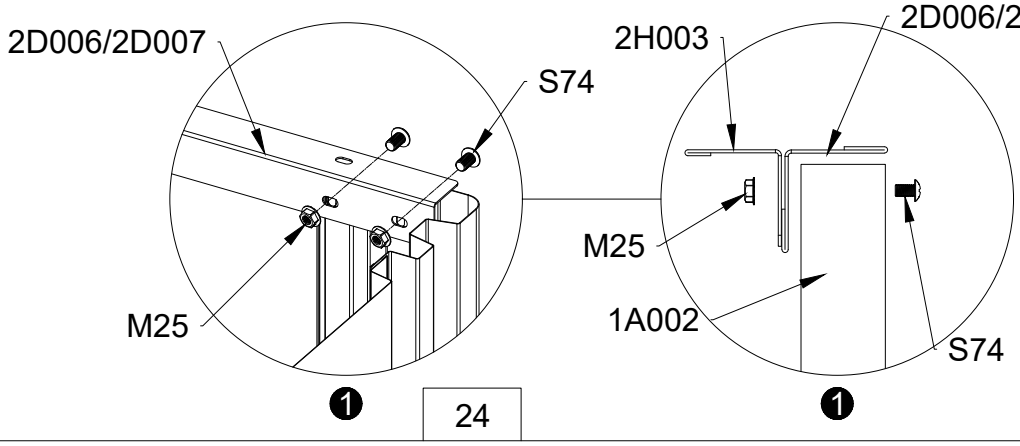


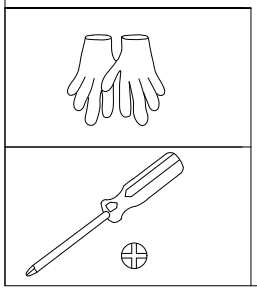


PART	NO	QTY
	2L006	2
	2L007	2
	2L010	2
	S74 M4X8	28
	M25 M4	28

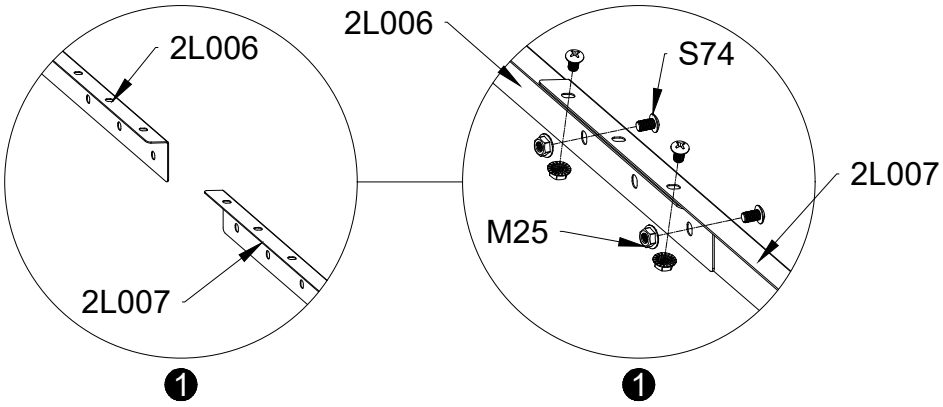


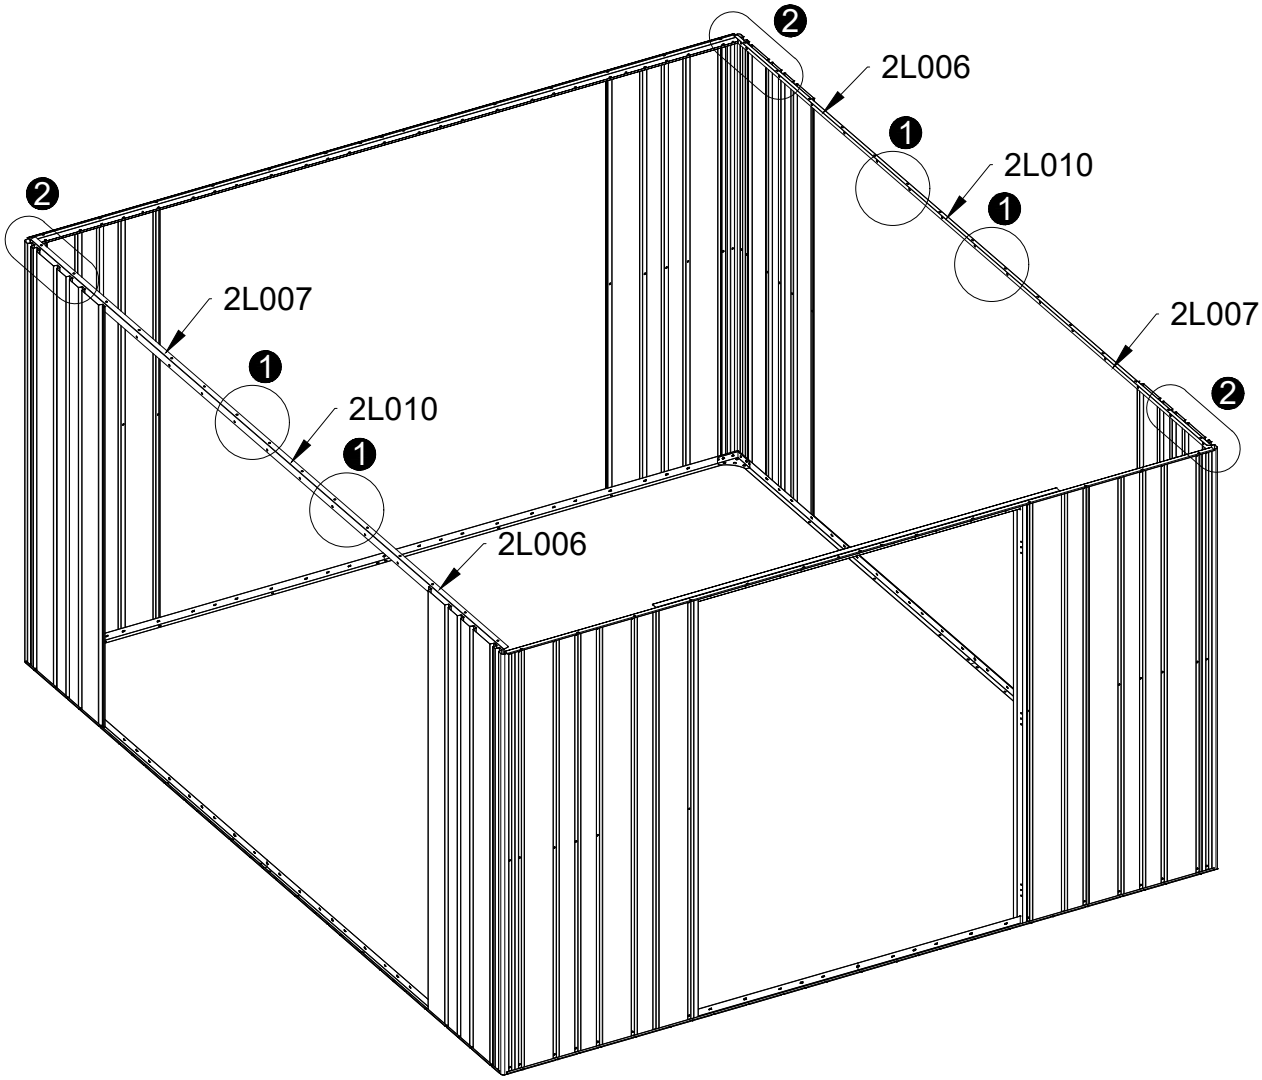


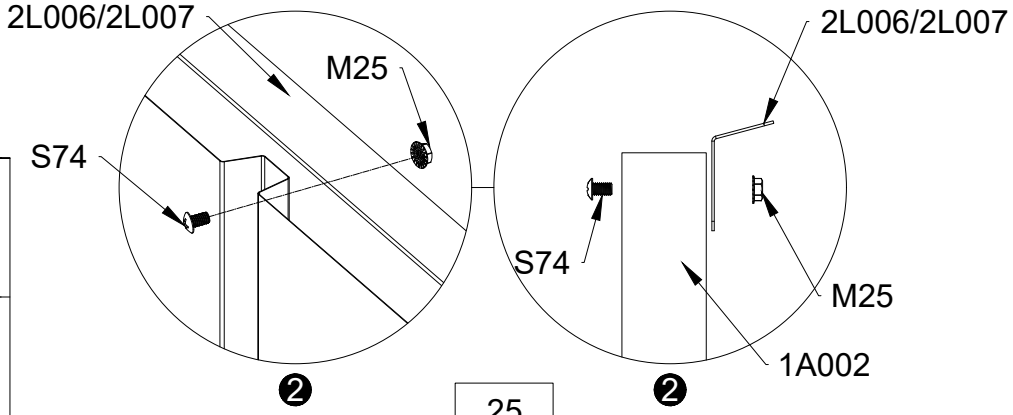


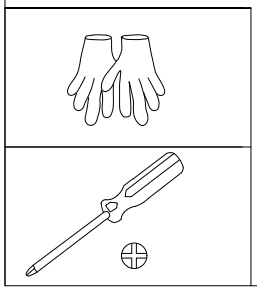


PART	NO	QTY
	2M008	1
	2M009	1
	S74 M4X8	8
	M25 M4	8

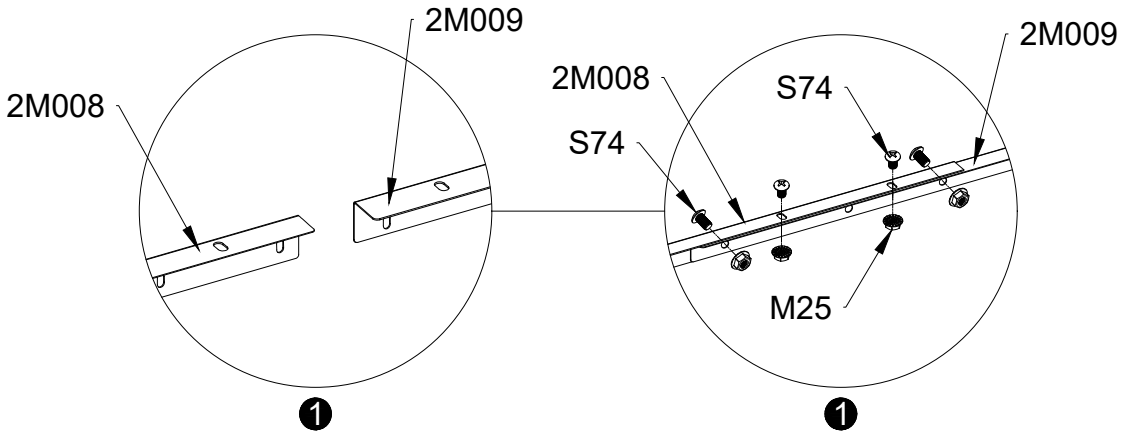


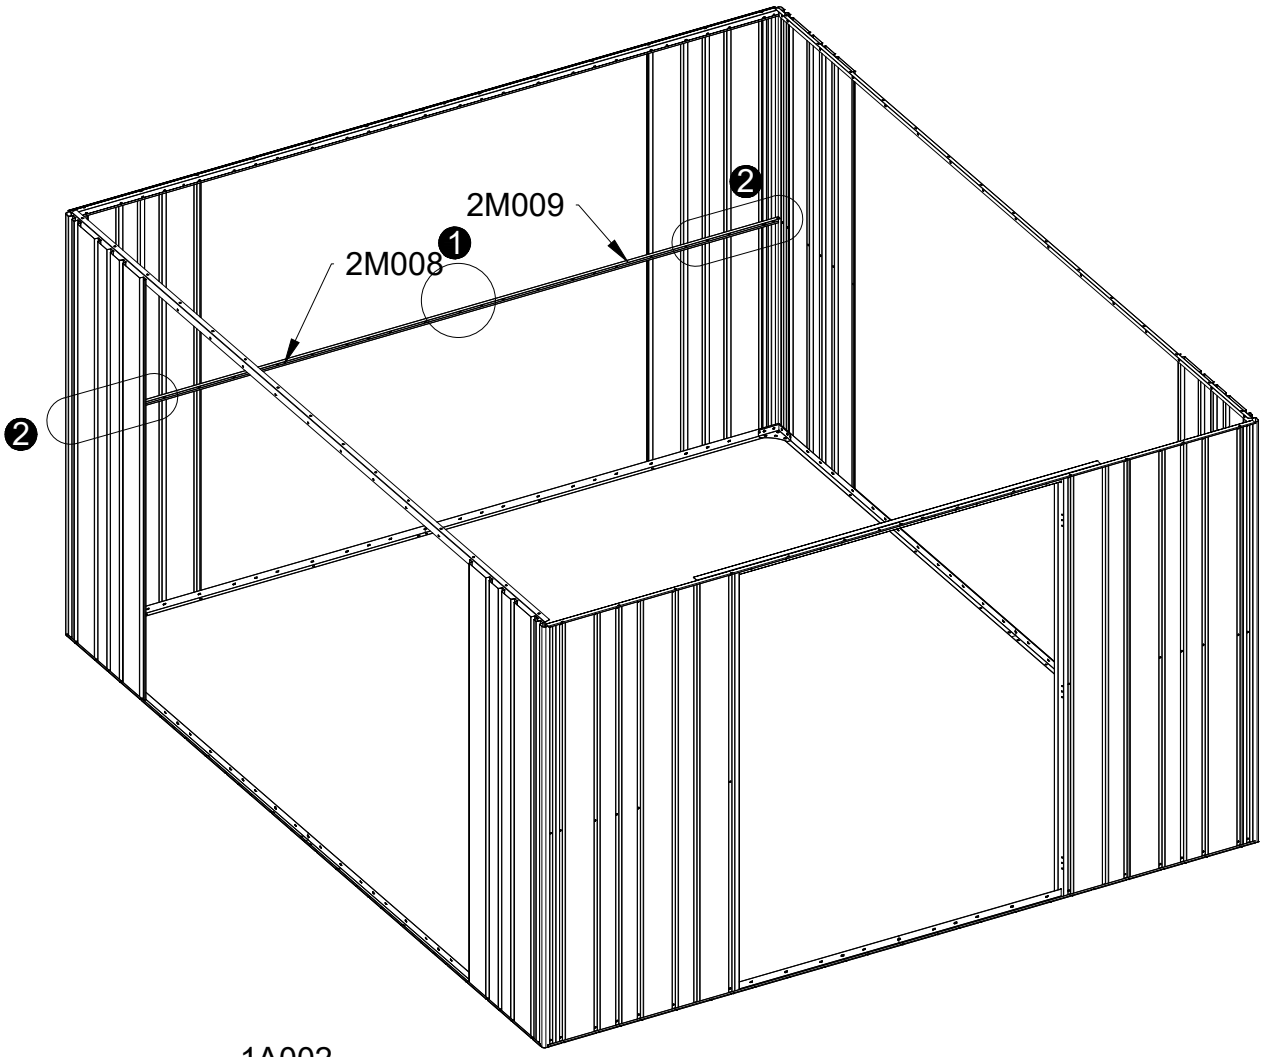


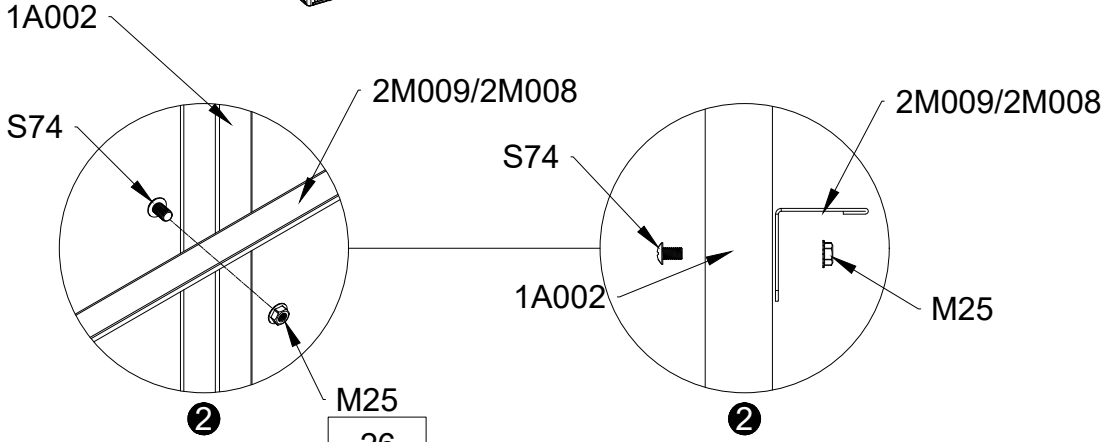


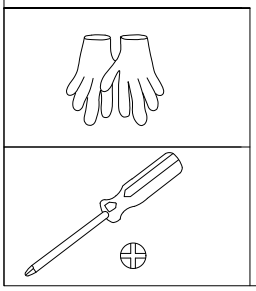


PART	NO	QTY
	2M008	2
	2M007	2
	2M013	2
	S74 M4X8	24
	M25 M4	24

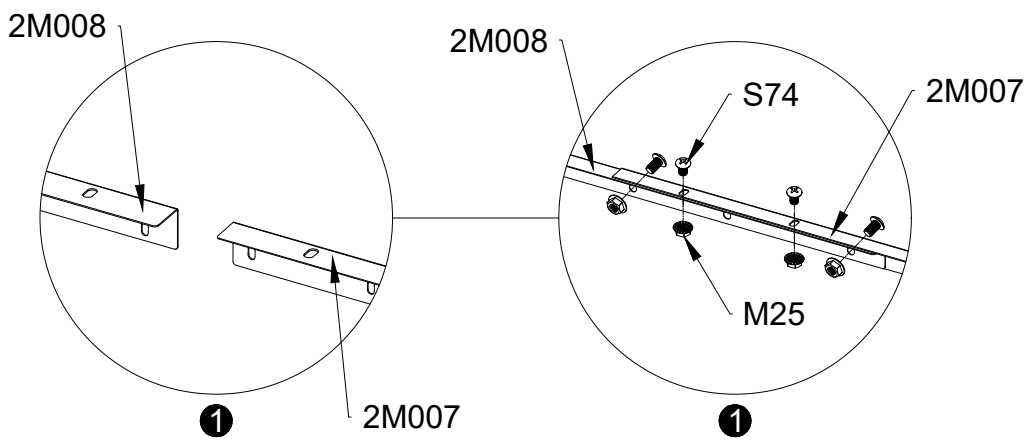


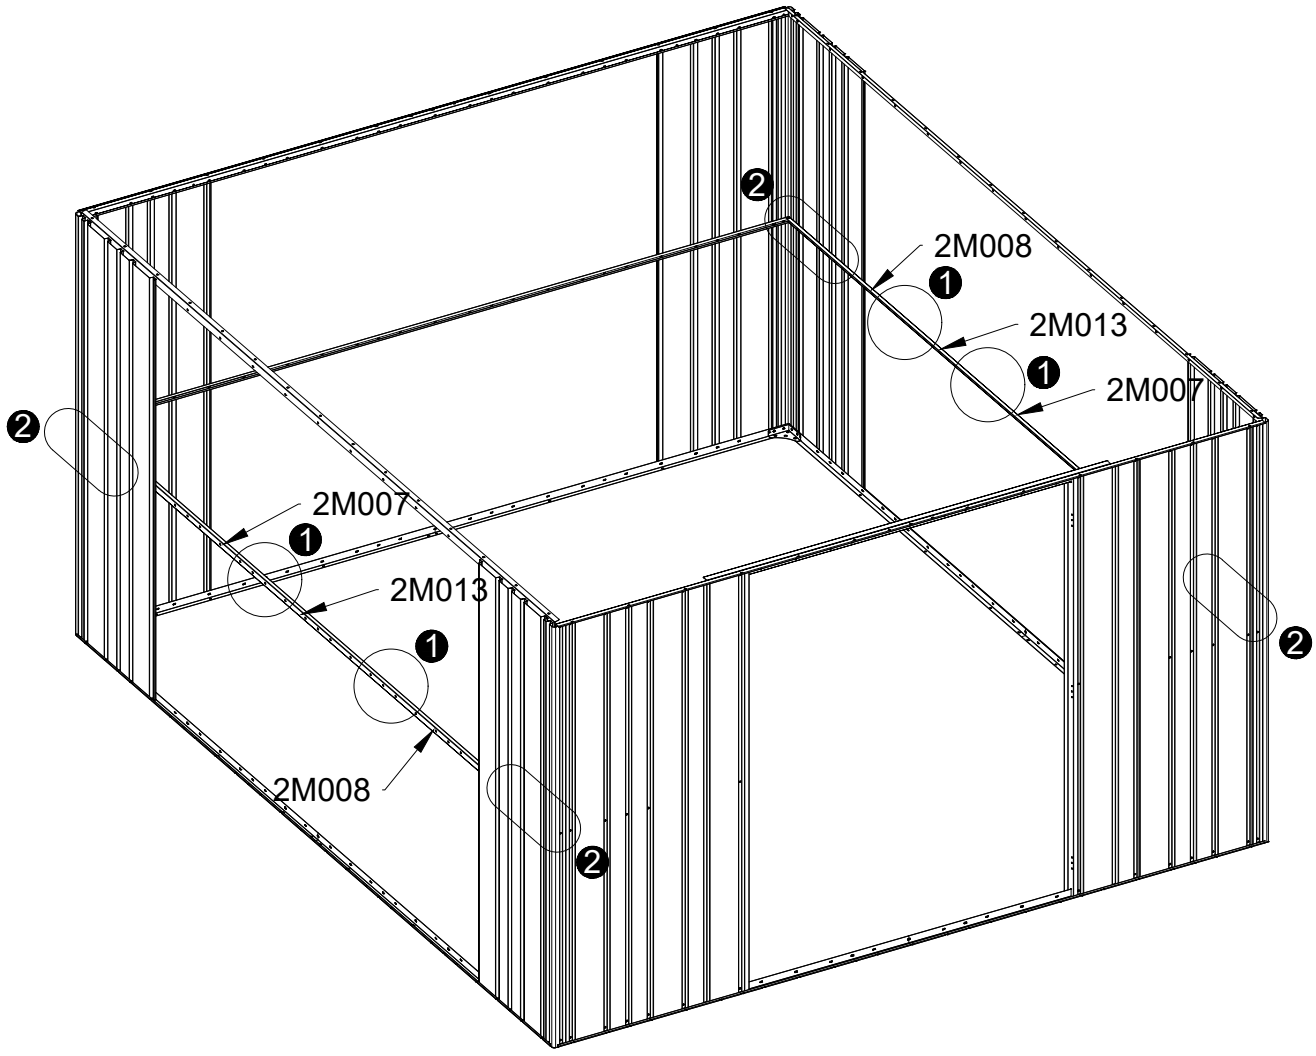


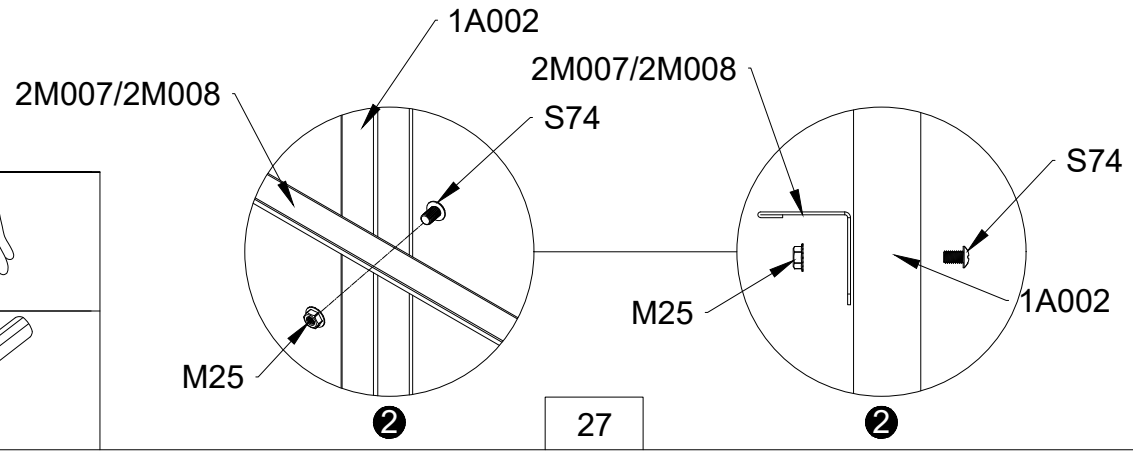

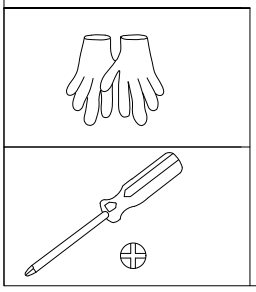



PART	NO	QTY
	2M020	1
	2M021	1
	S74 M4X8	8
	M25 M4	8

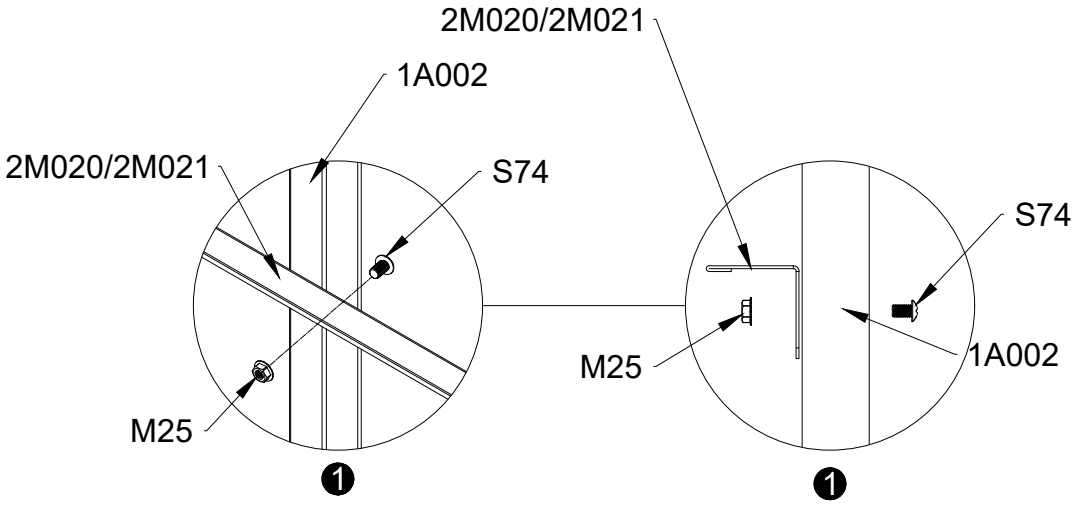

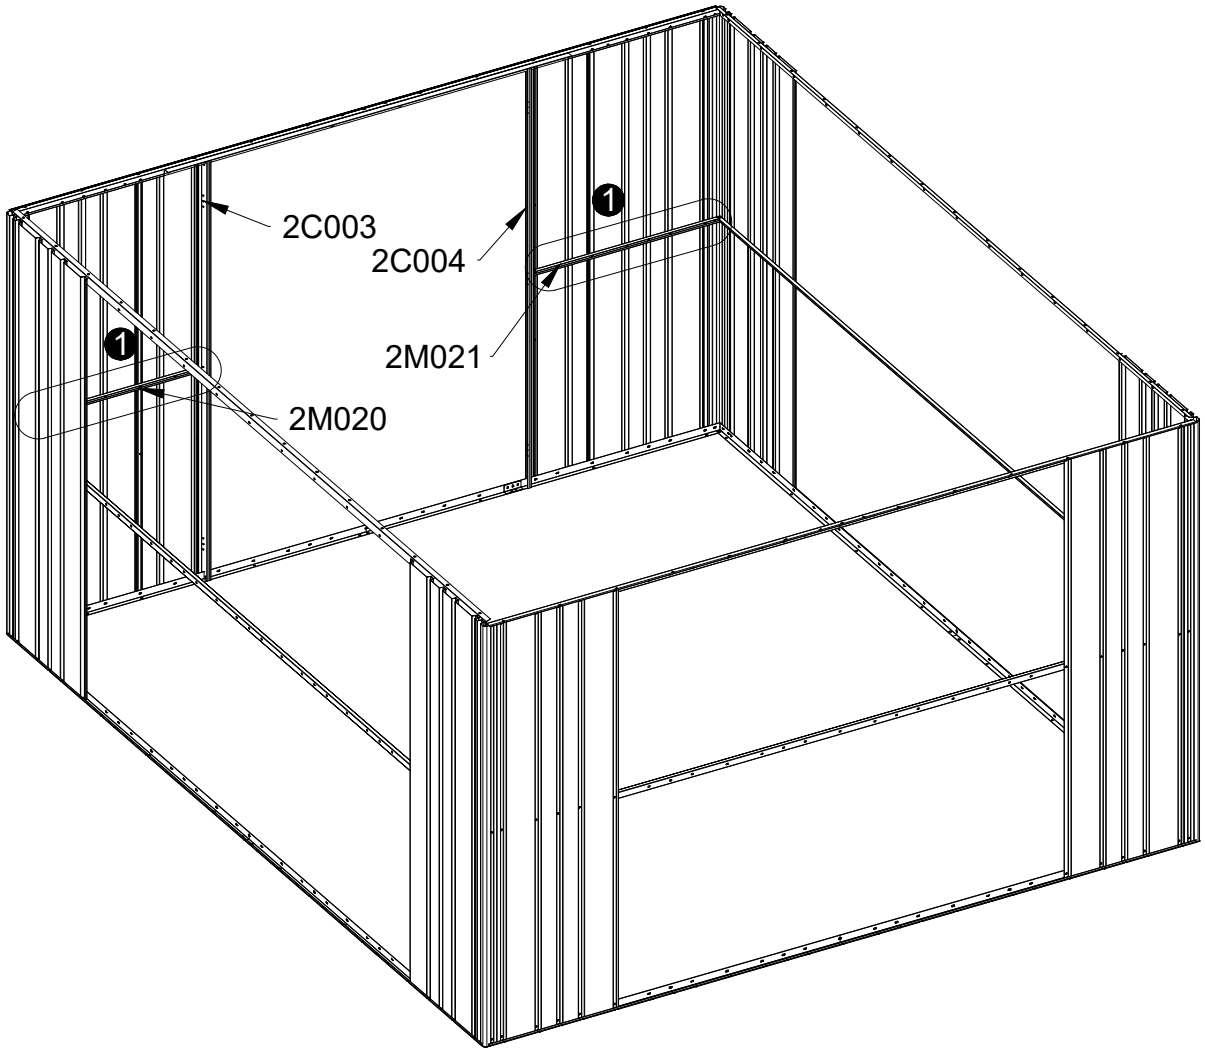



To facilitate installation, adjust the orientation of the view.

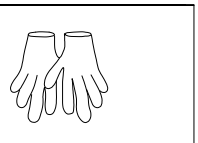


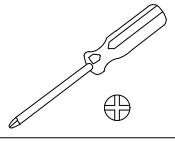



PART	NO	QTY
	5H002	2
	5J004	1
	5K004	2
	D490	1
	S74 M4X8	32
	M25 M4	32

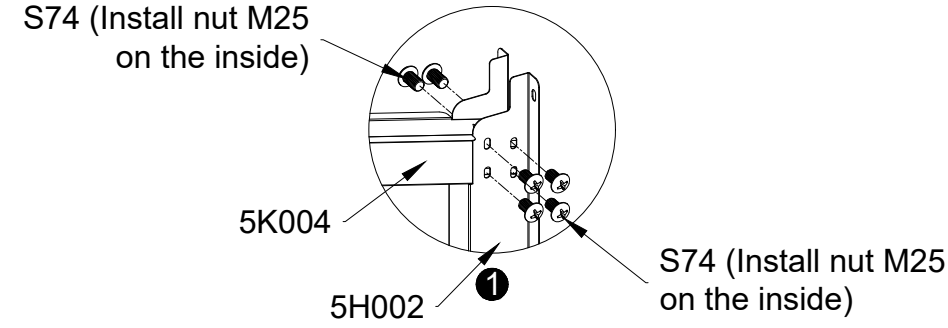

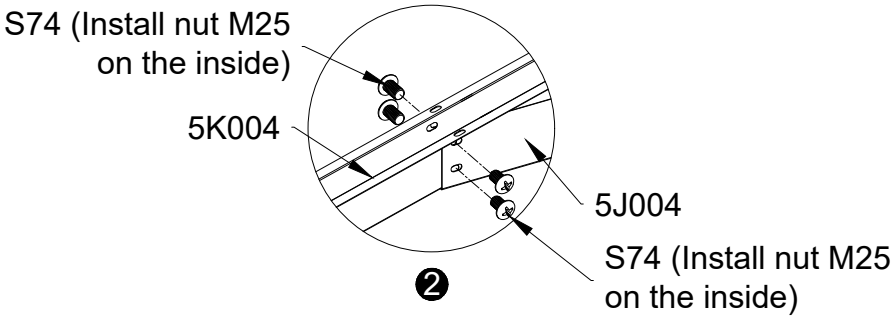


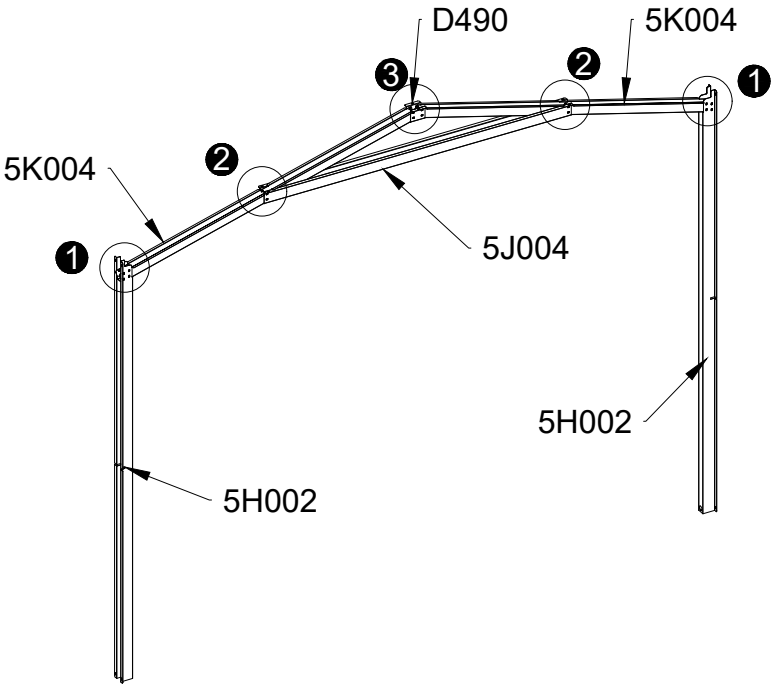

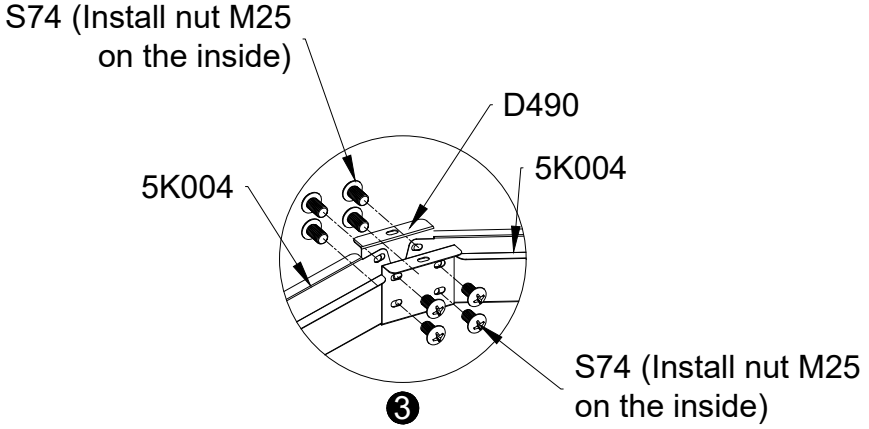


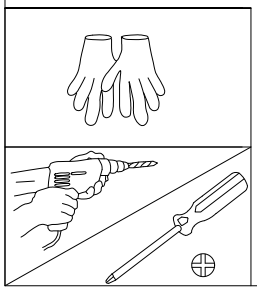


PART	NO	QTY
	S74 M4X8	8
	M25 M4	8

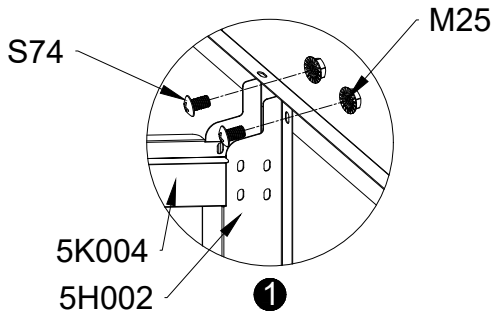


a=b+163
（MM）

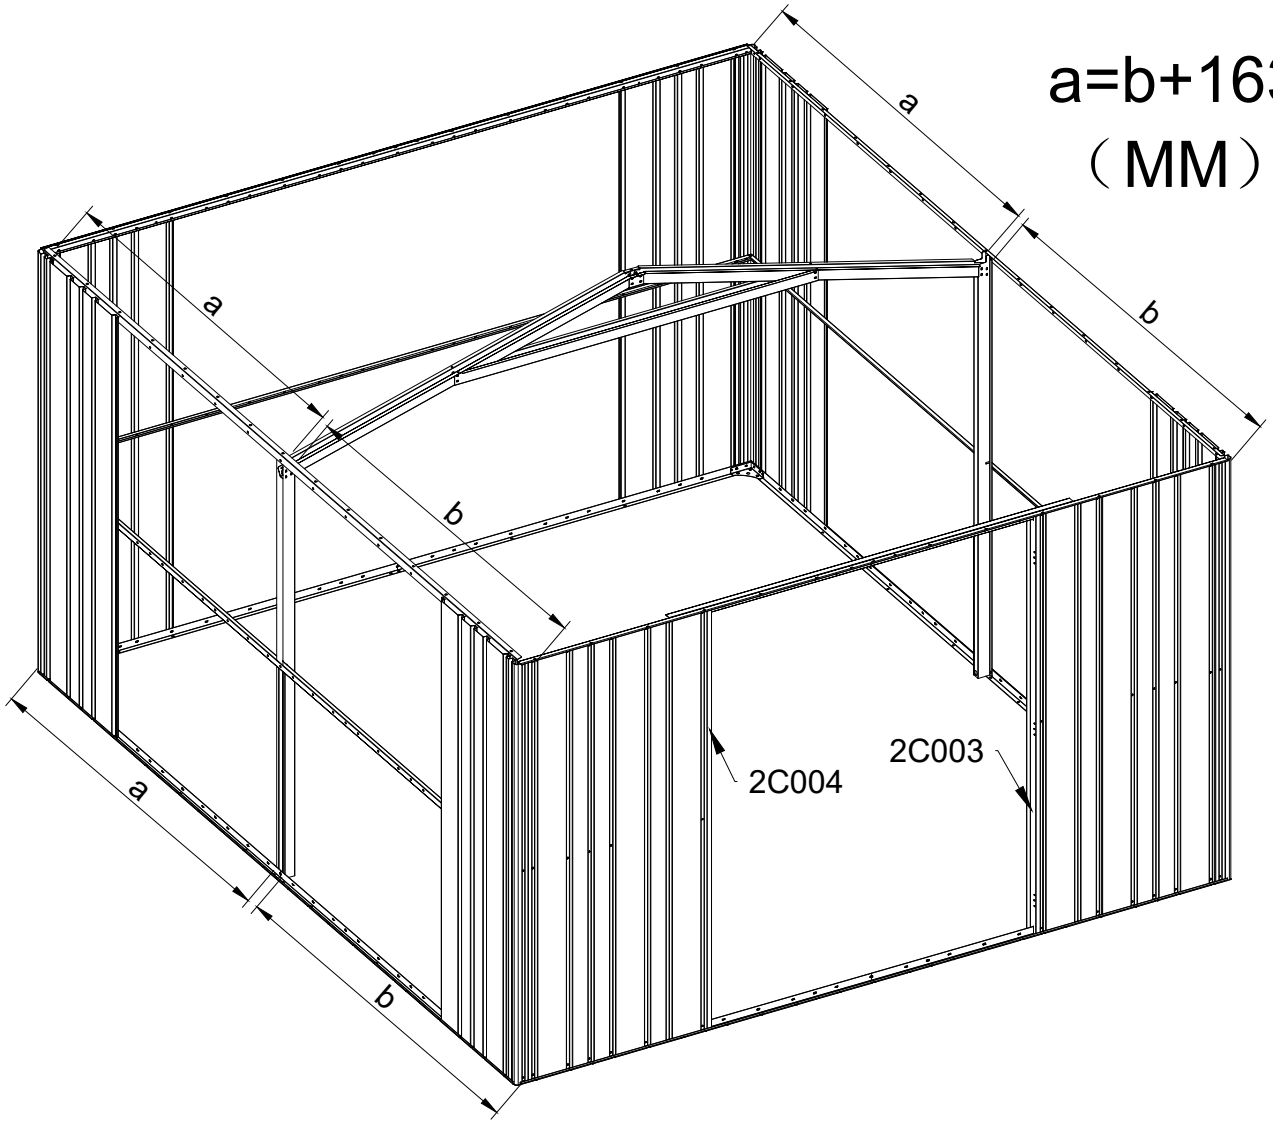


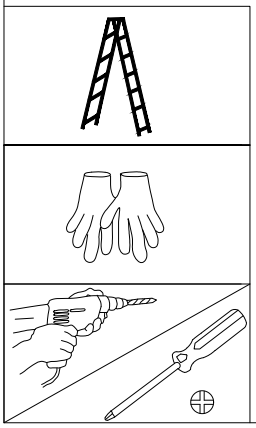



To facilitate installation, adjust the orientation of the view.

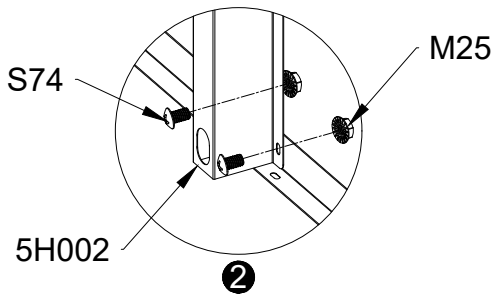


PART	NO	QTY
	1A002	12
	1B002	2
	S74 M4X8	89
	M25 M4	89

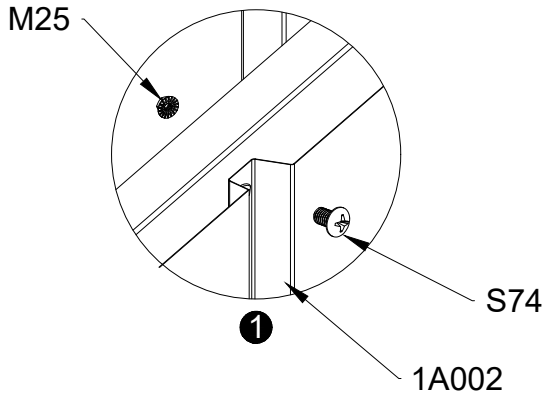

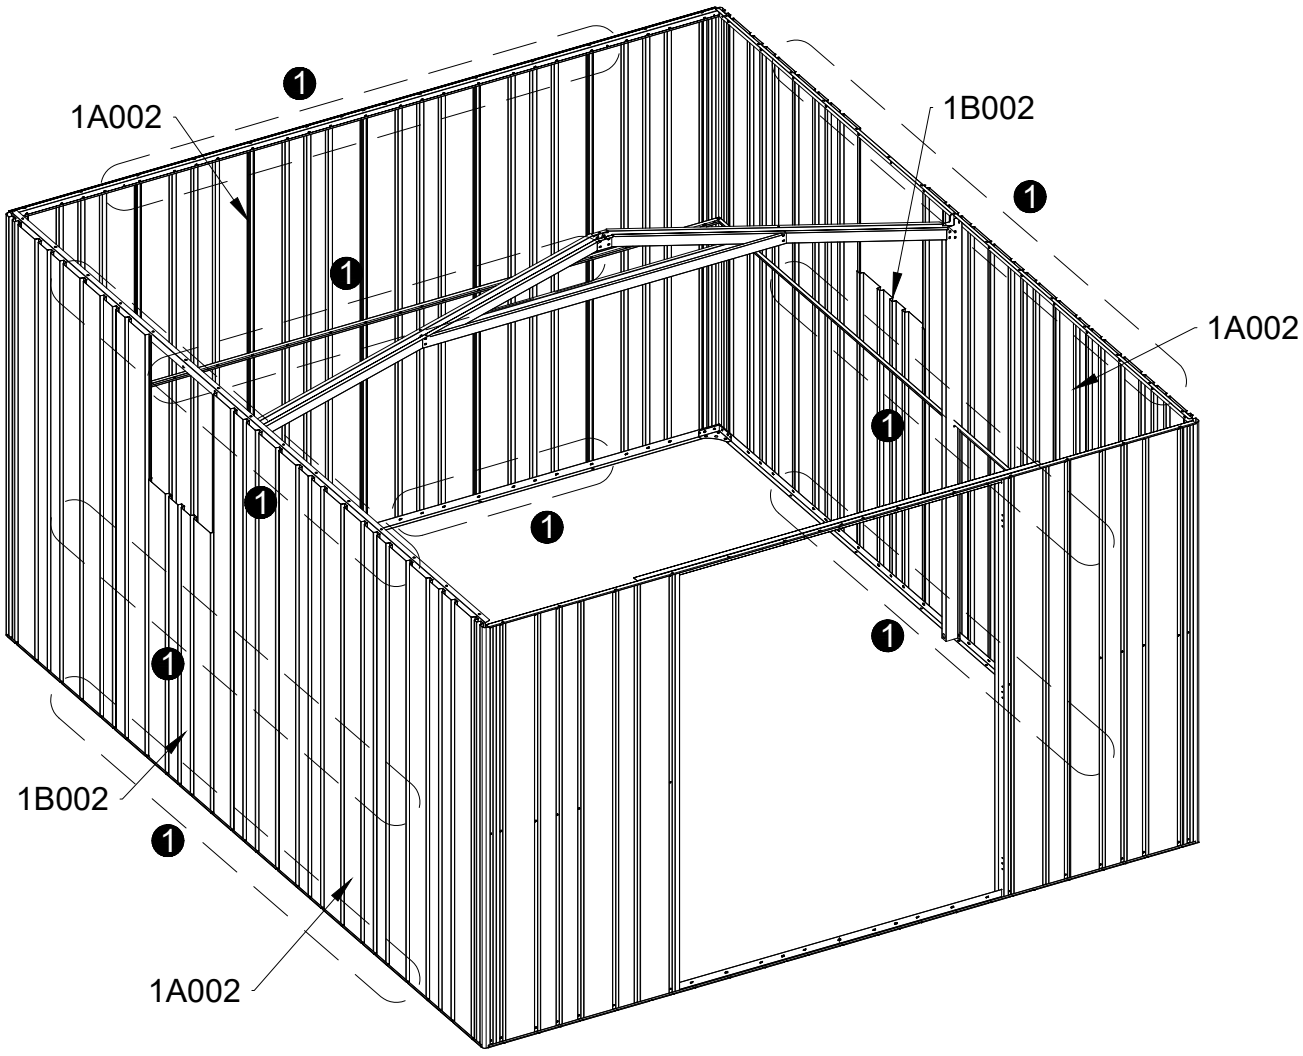


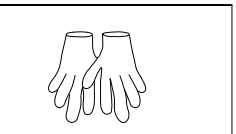


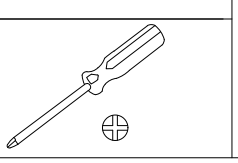



1B002 above is the installation of the
window position can be adjusted according to theactual situation
of the individual position


PART	NO	QTY
	D358	2
	D359	2
	Y1	2
	S74 M4X8	30
	M25 M4	30

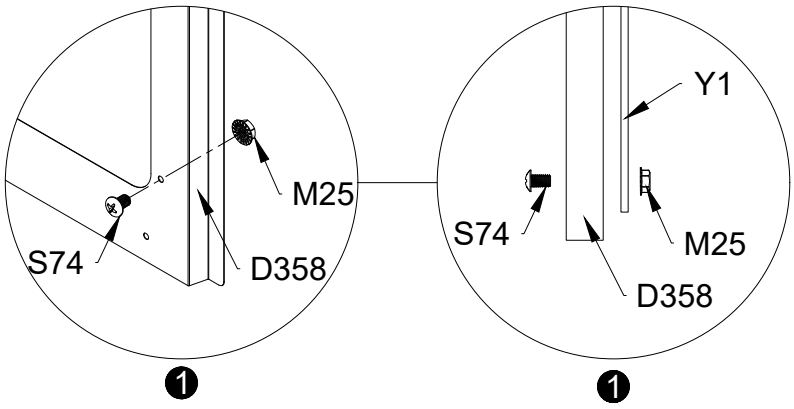


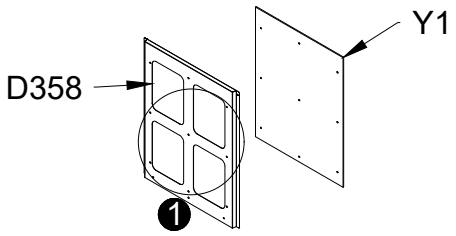

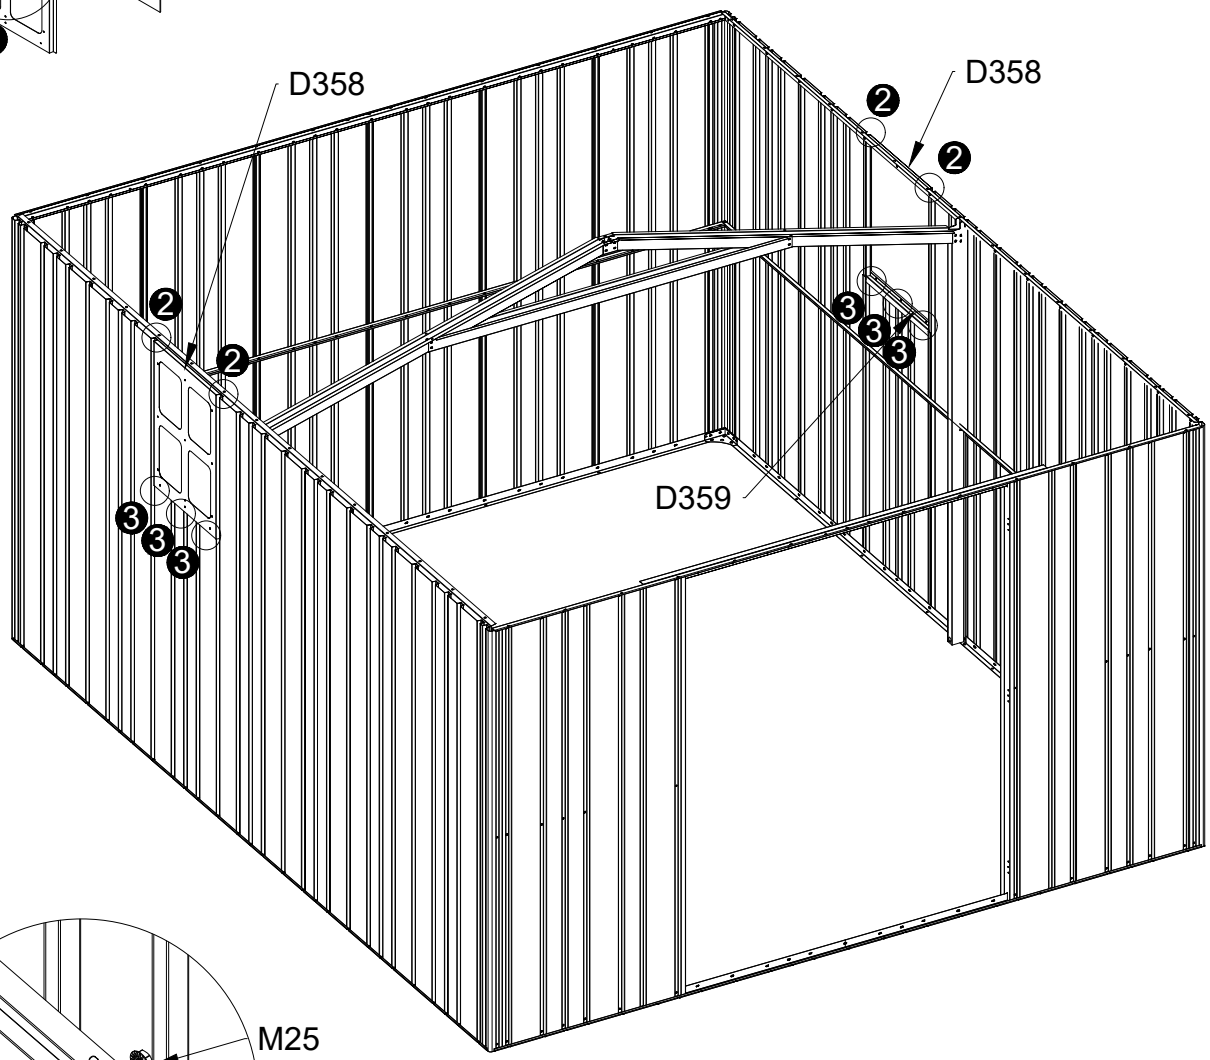


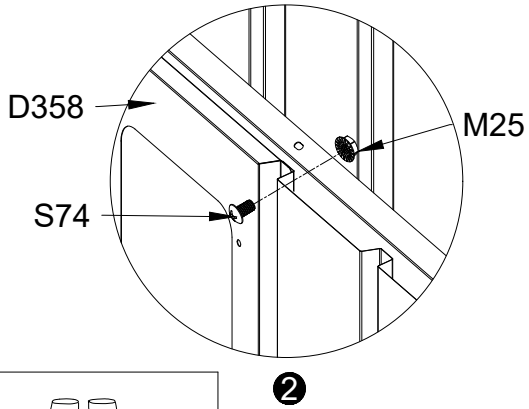


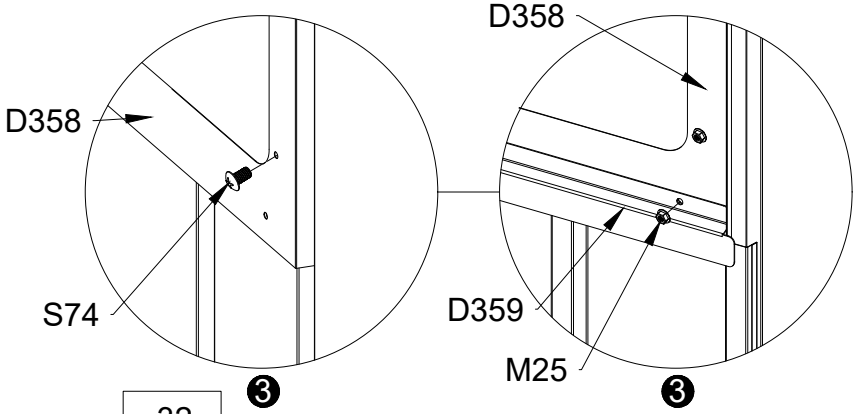


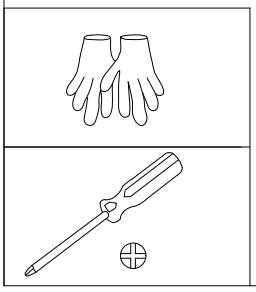



PART	NO	QTY
	3A007	2
	3A008	2
	D353	2
	J211	4
	S74 M4X8	18
	M25 M4	18

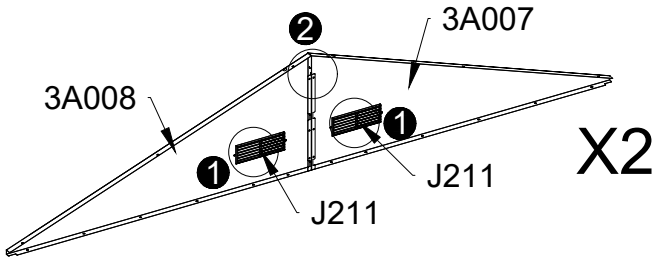


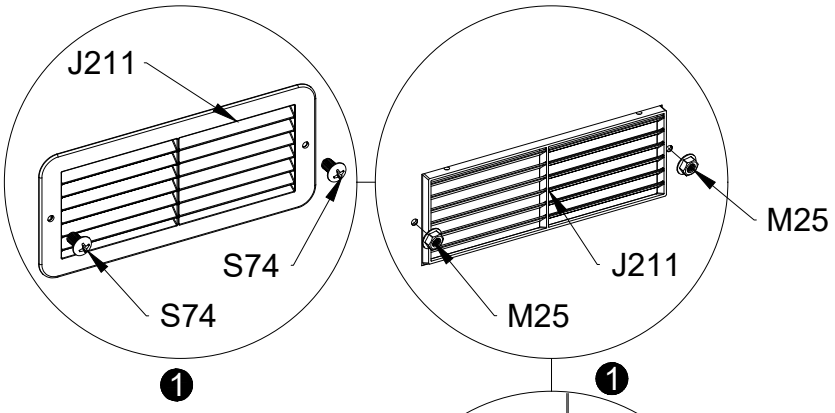

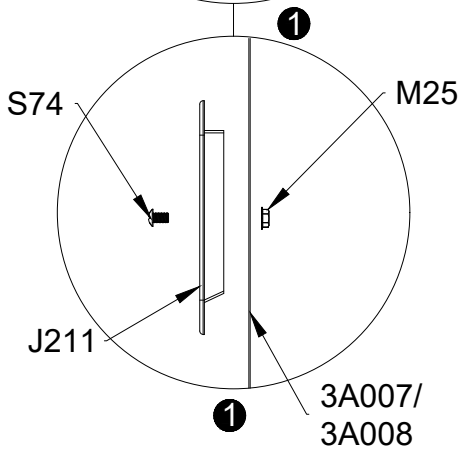


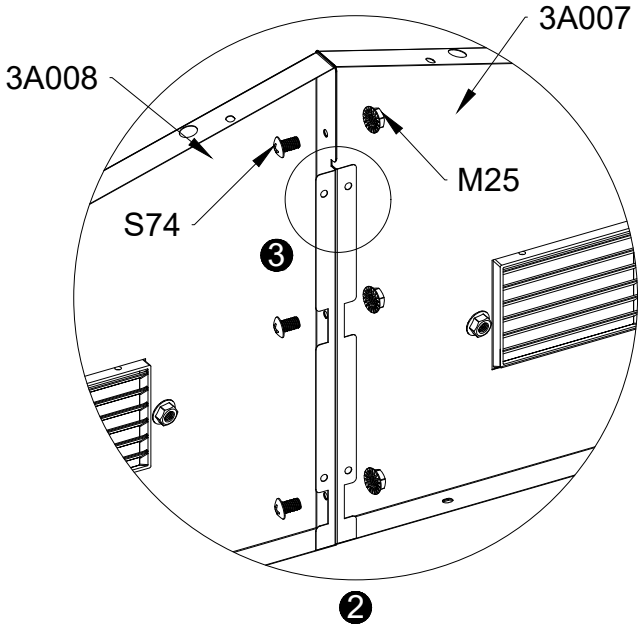


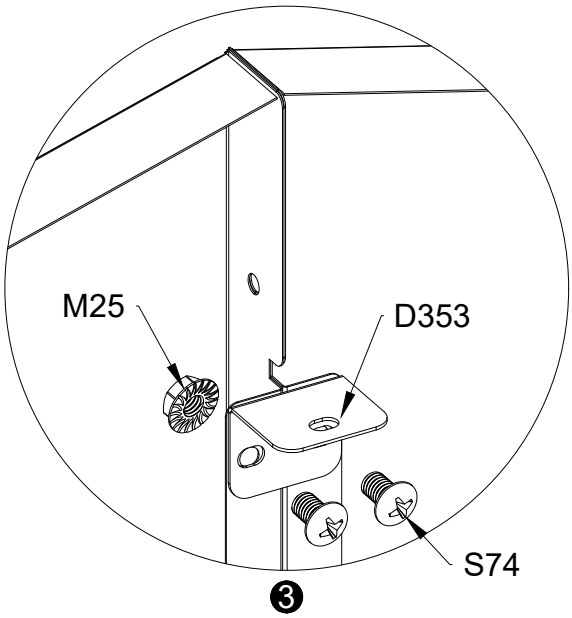


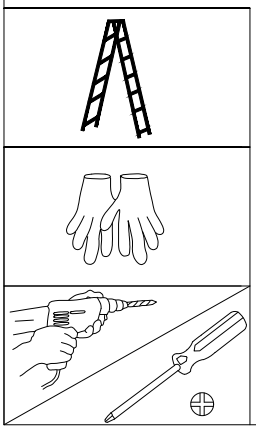


PART	NO	QTY
	S74 M4X8	28
	M25 M4	28

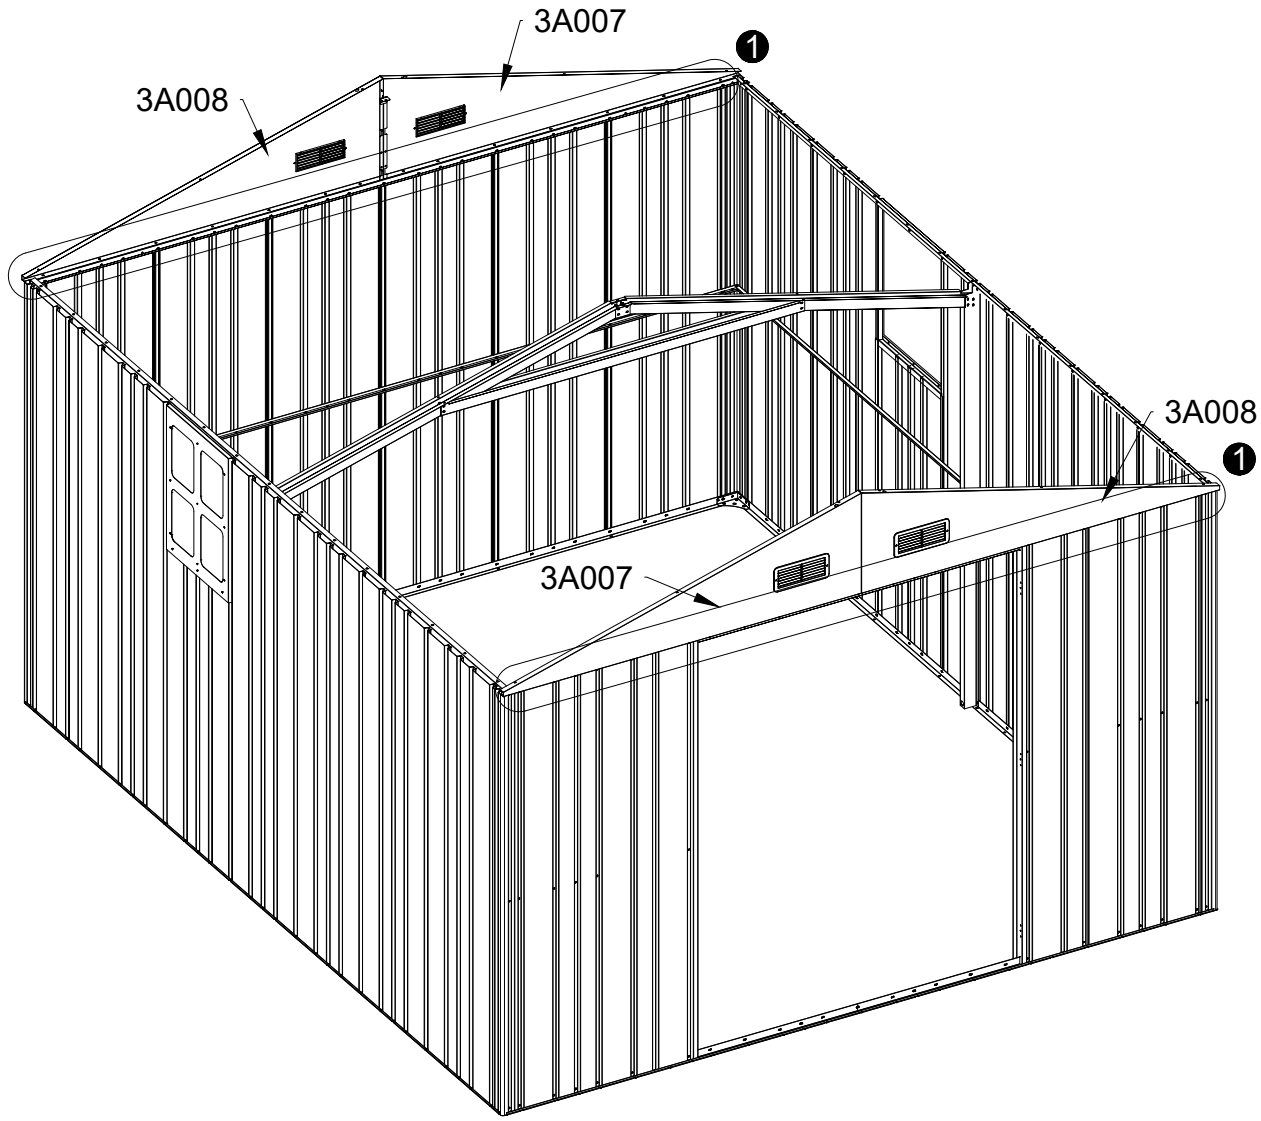


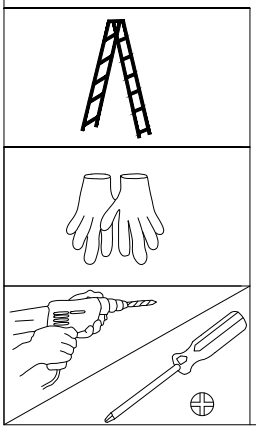

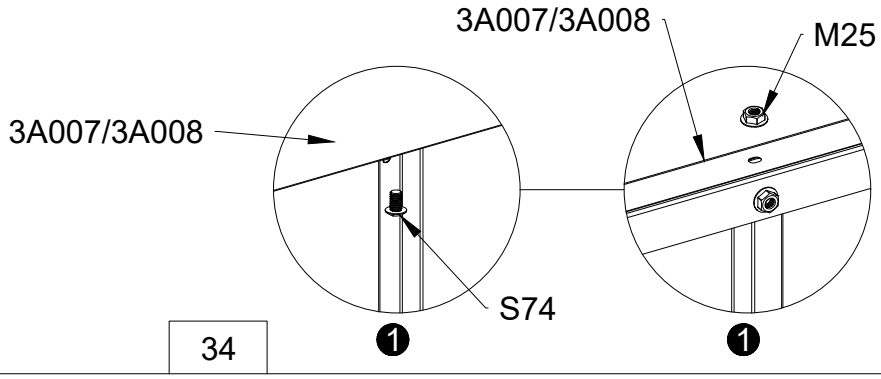



PART	NO	QTY
	5A004	1
	5A005	1
	5B008	1
	S74 M4X8	8
	M25 M4	8

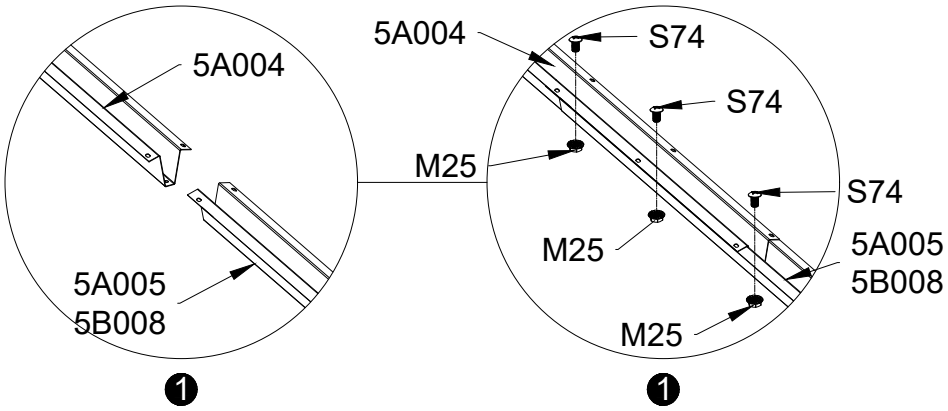


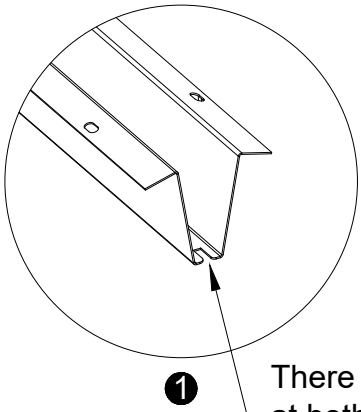


There are slots at both ends; there are no slots at the connection

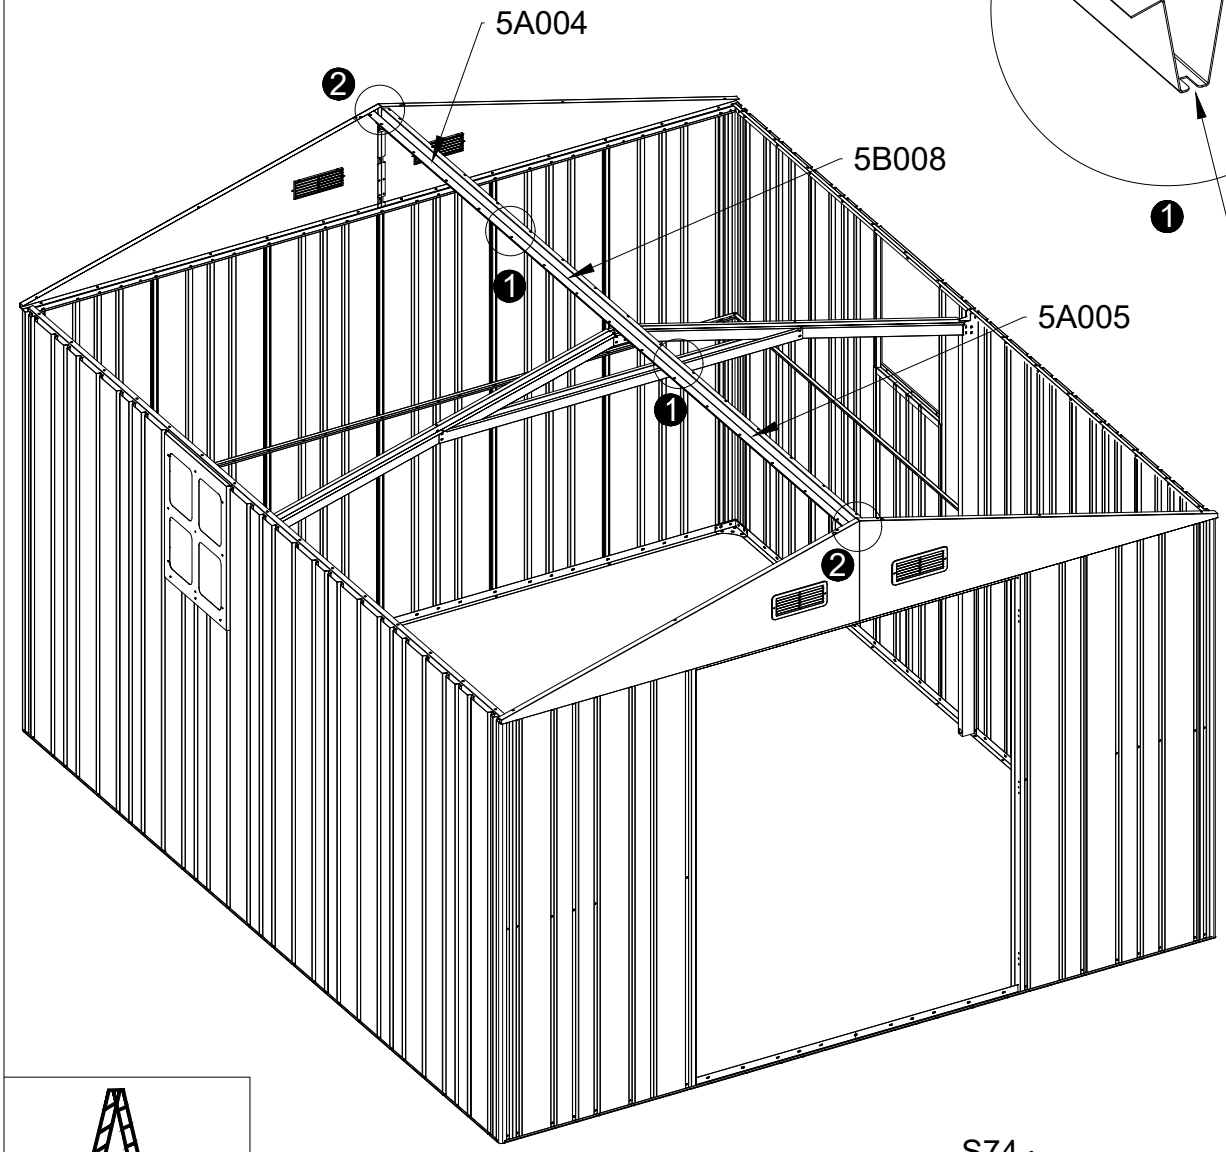


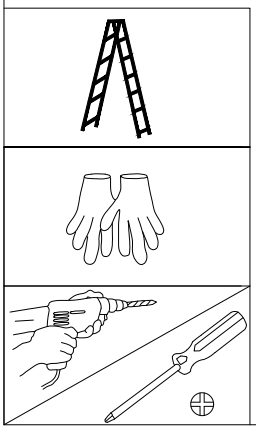


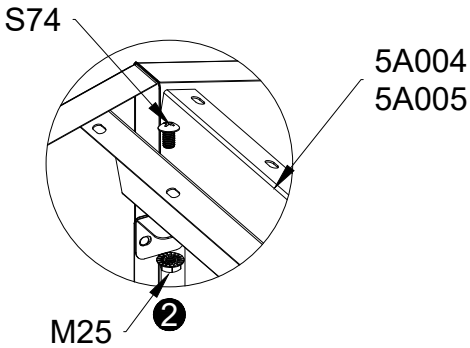


PART	NO	QTY
	5E003	2
	S74 M4X8	6
	M25 M4	6

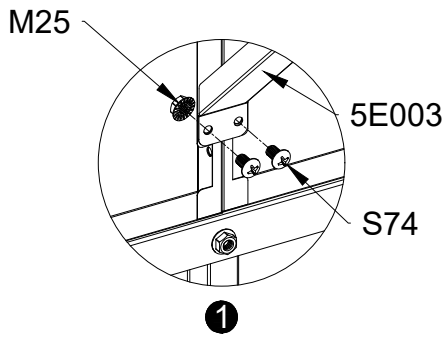


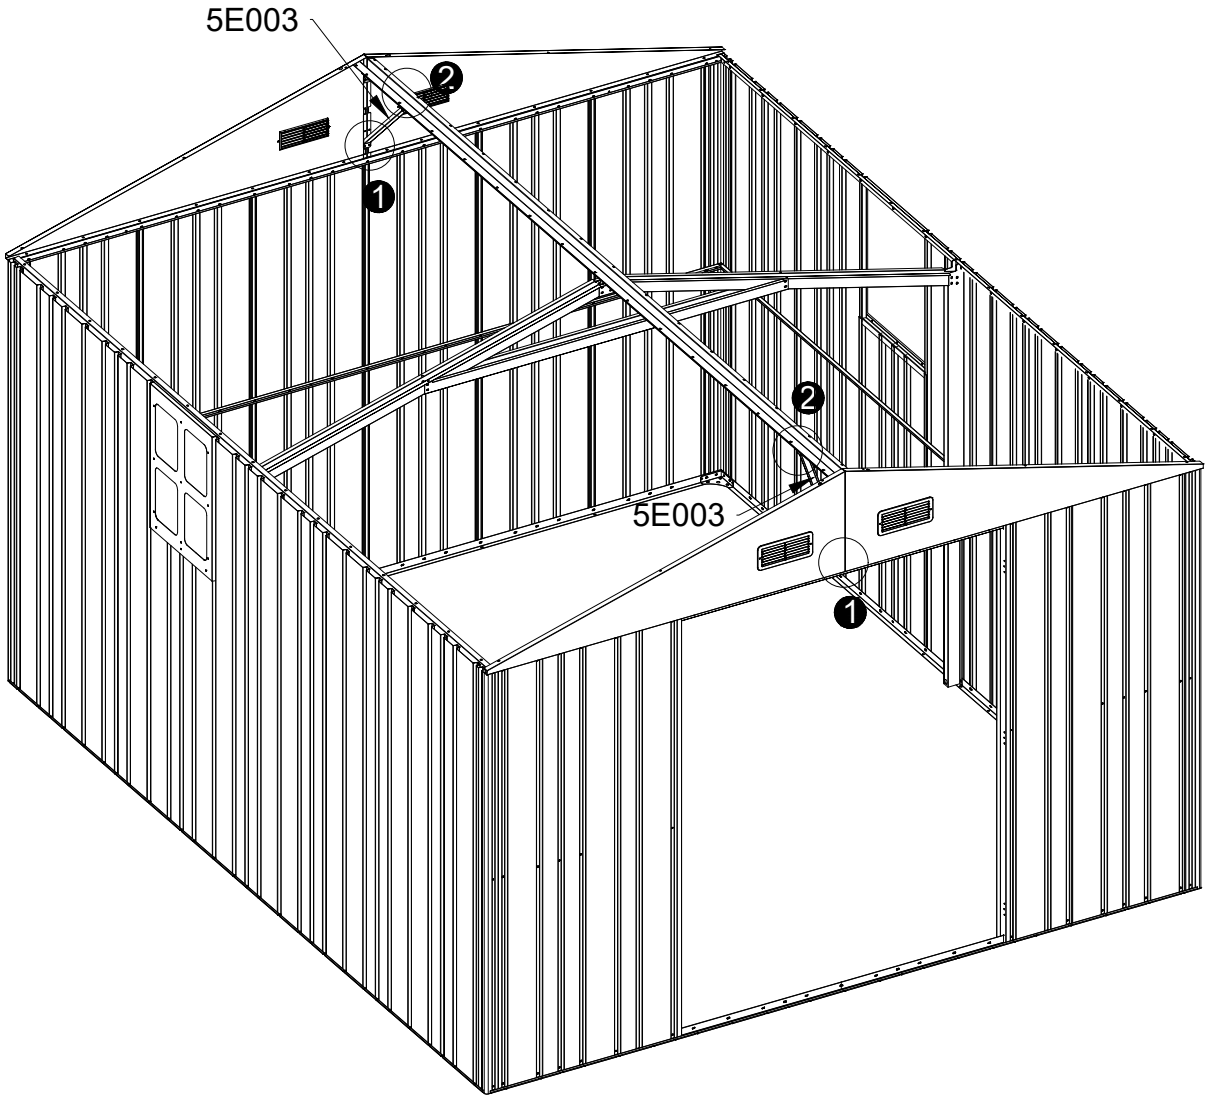


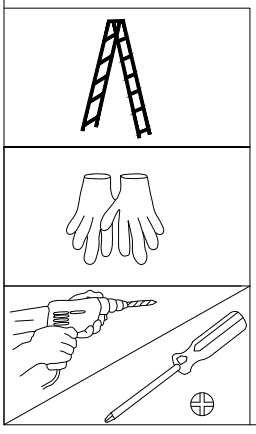


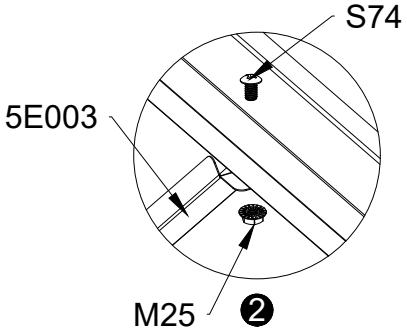


PART	NO	QTY
	3G007	2
	3G008	2
	S74 M4X8	12
	M25 M4	12
	H127	12

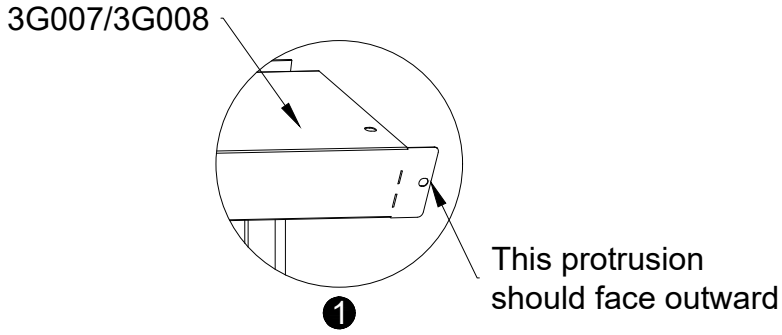


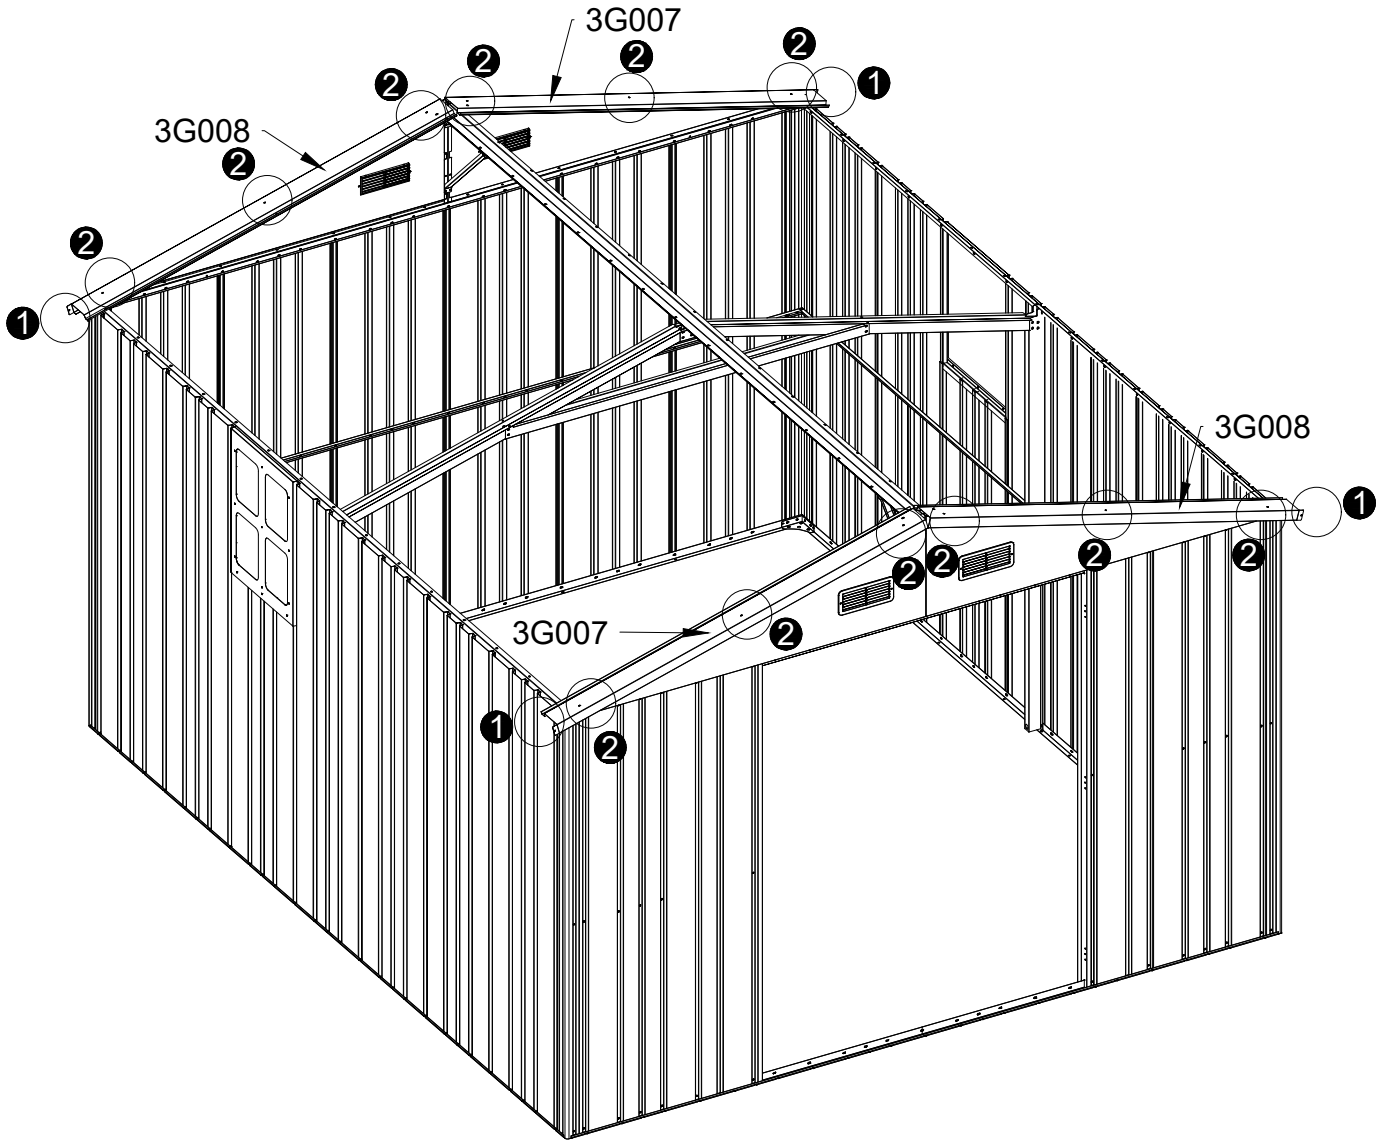


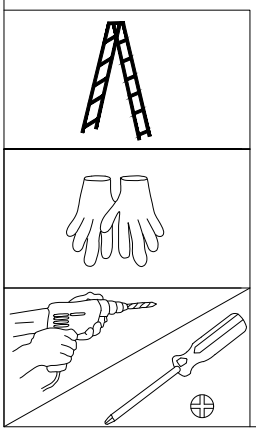


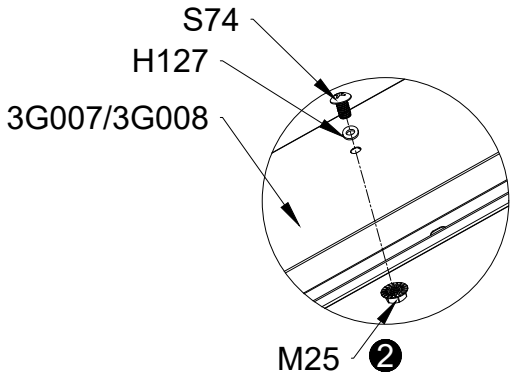



PART	NO	QTY
	1E004	2
	Y4	2
	S74 M4X8	16
	M25 M4	16
	H127	16

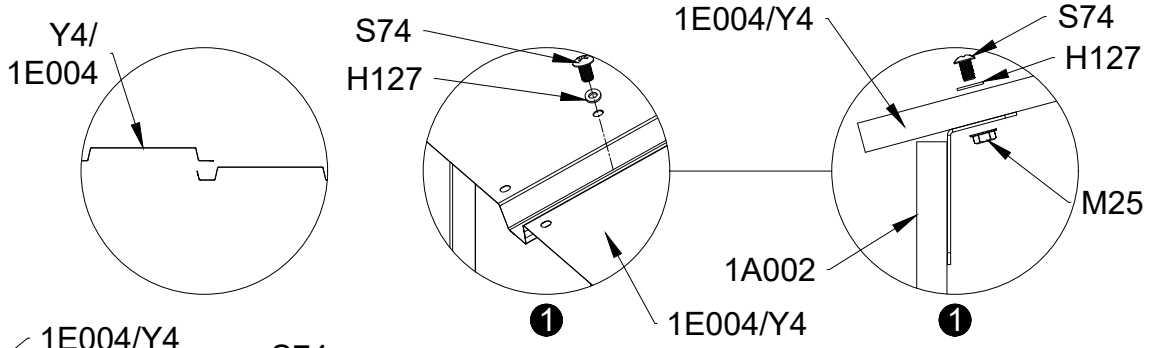

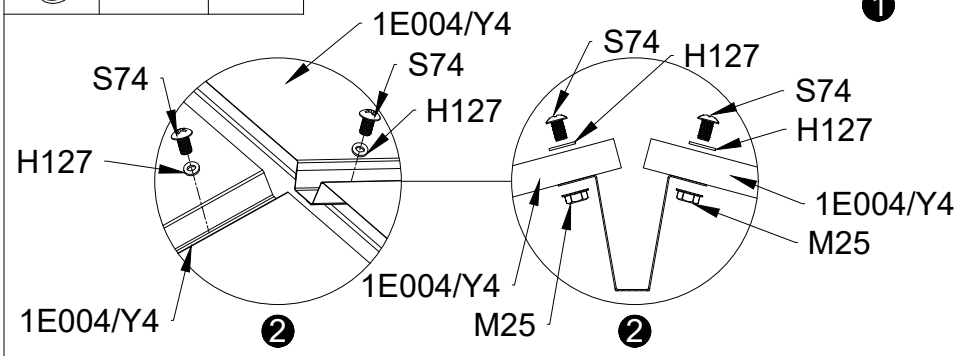


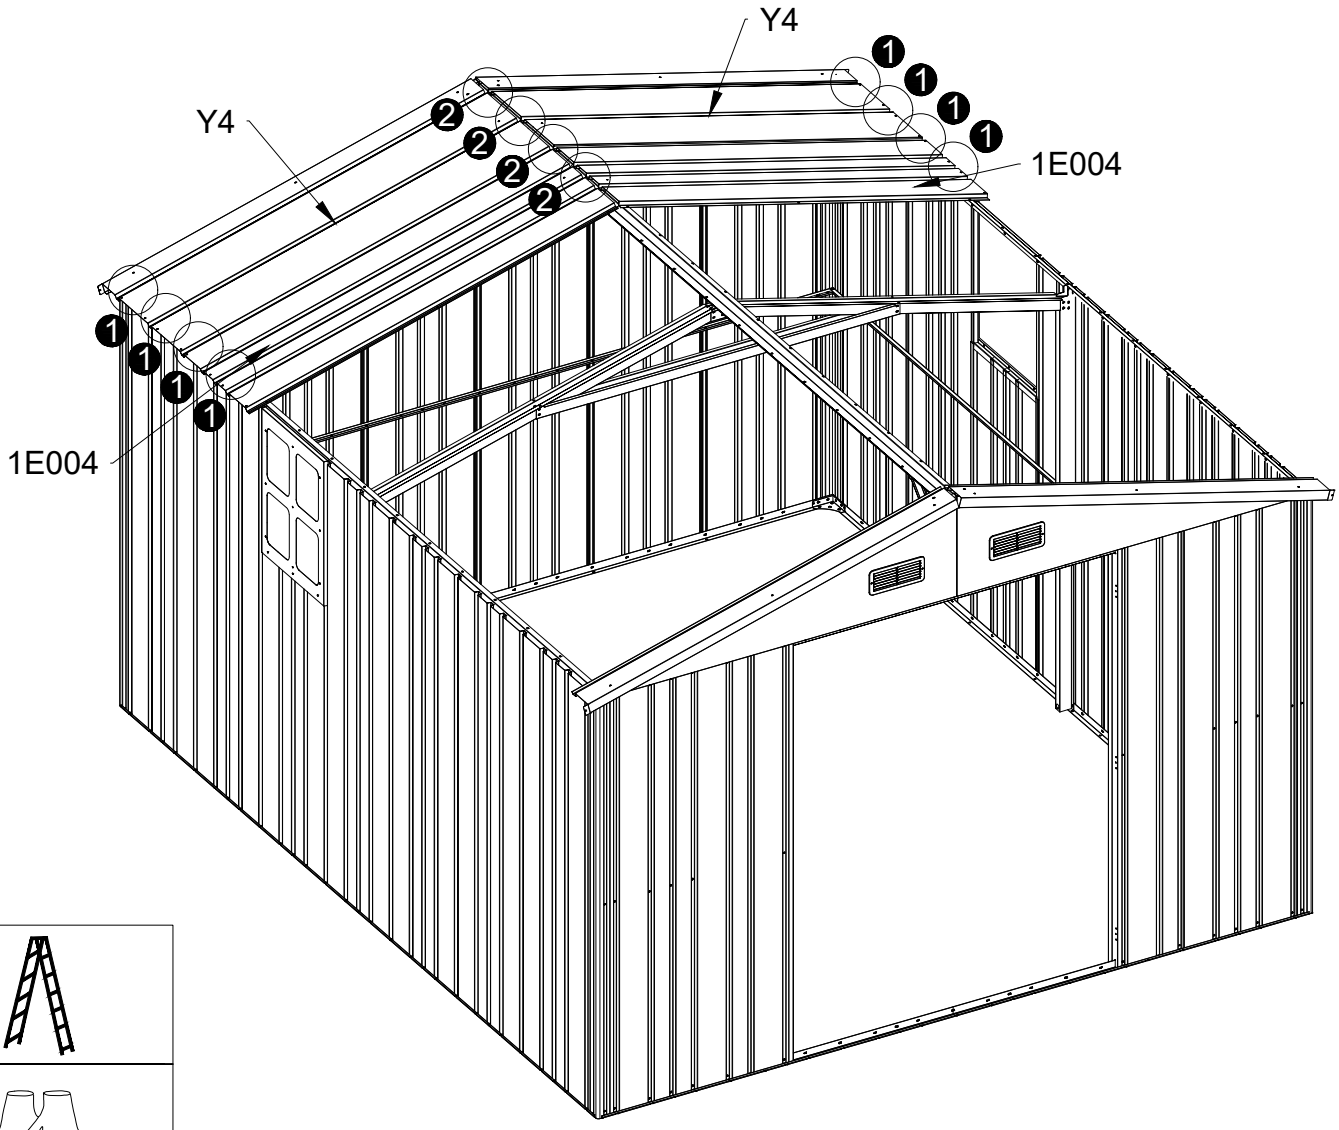


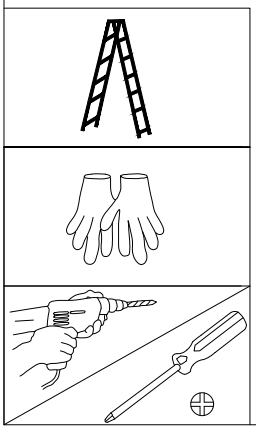


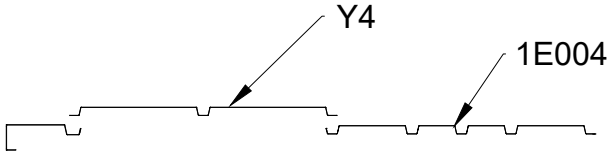



PART	NO	QTY
	2Q005	2
	2Q006	2
	2M013	2
	S74 M4X8	24
	M25 M4	24
	H127	8

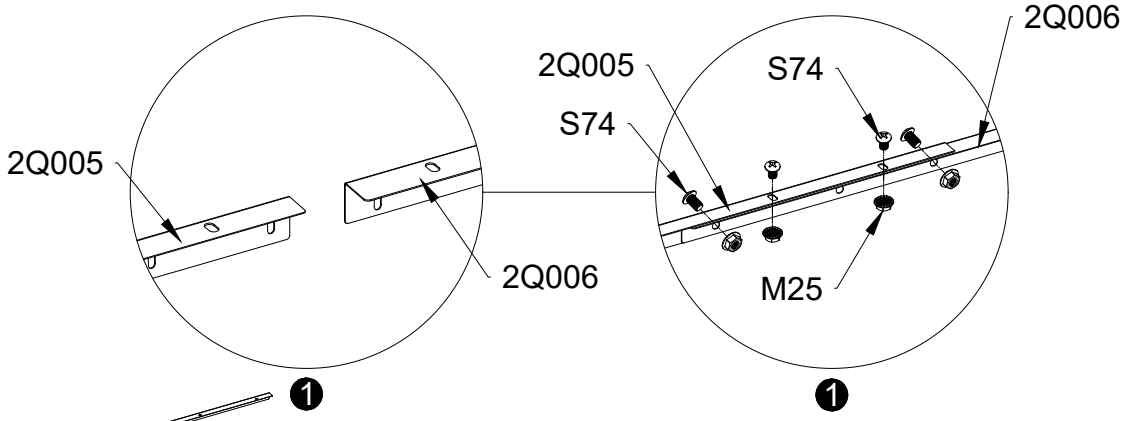

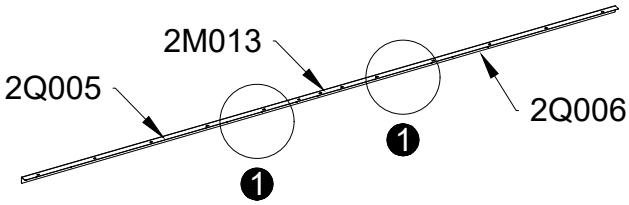


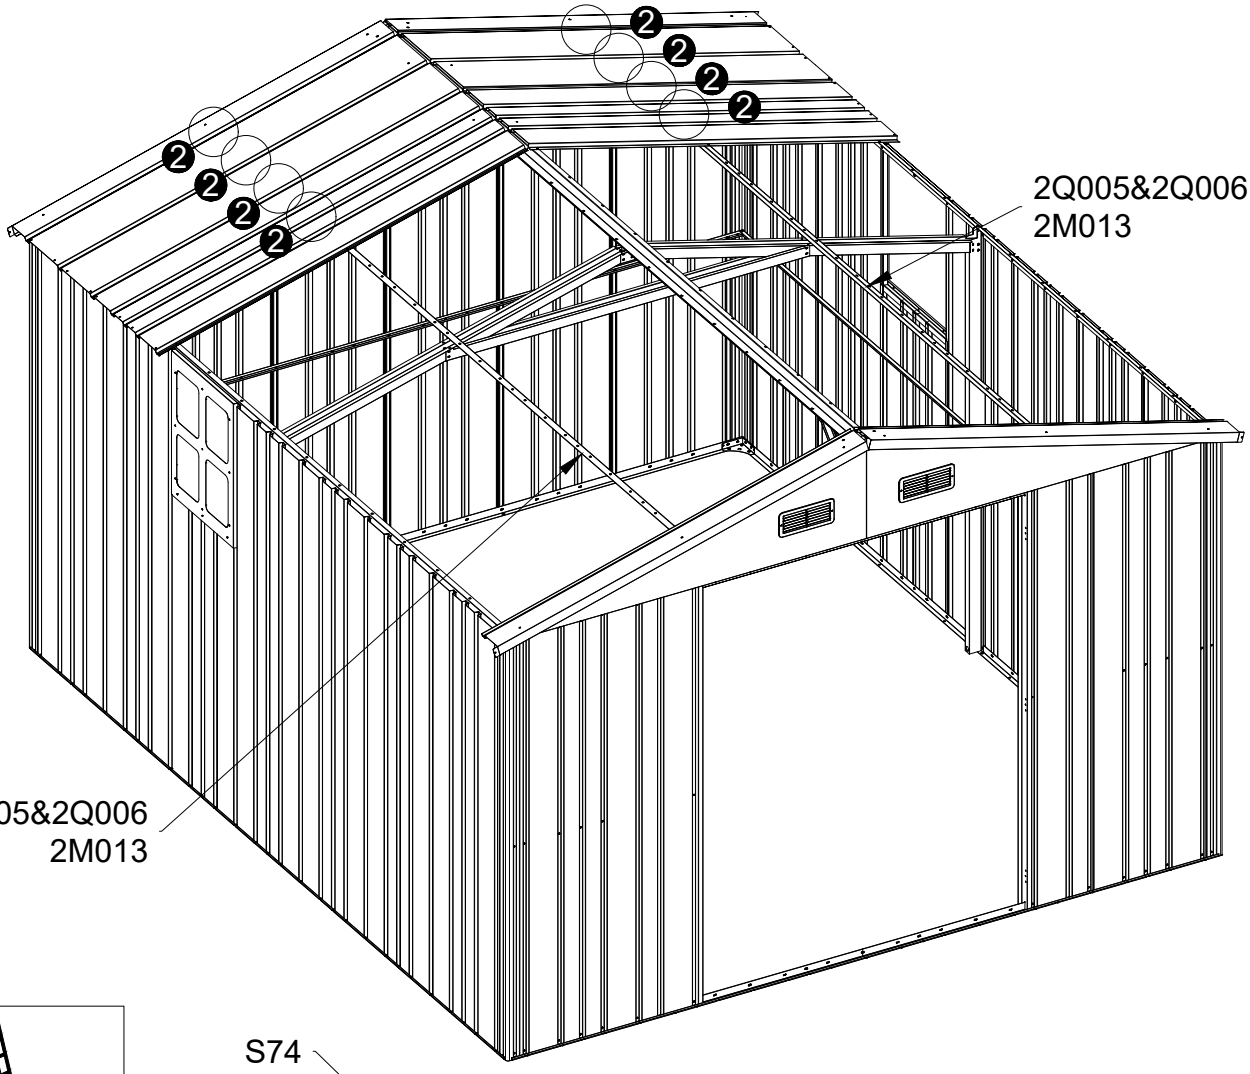


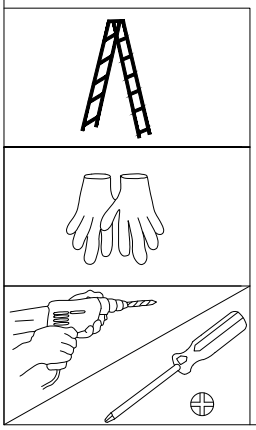


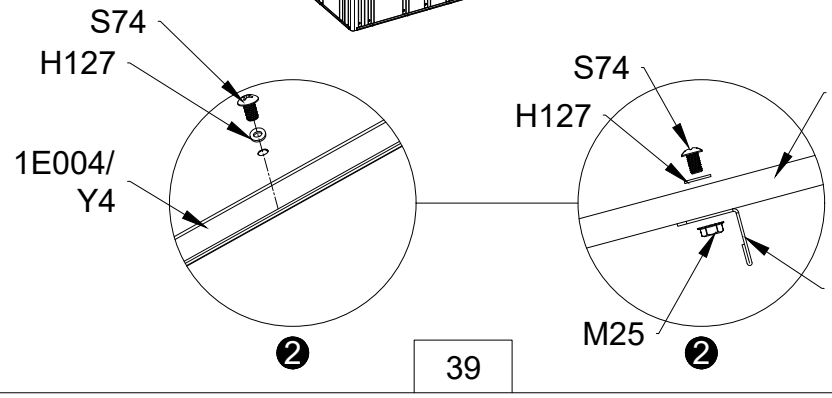



PART	NO	QTY
	3H004	1
	D356	1
	S74 M4X8	6
	M25 M4	6
	H127	6

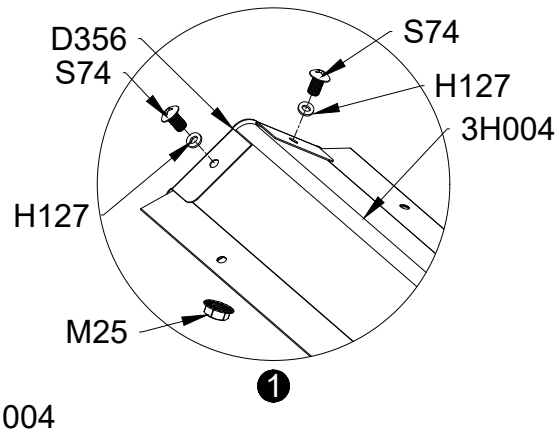


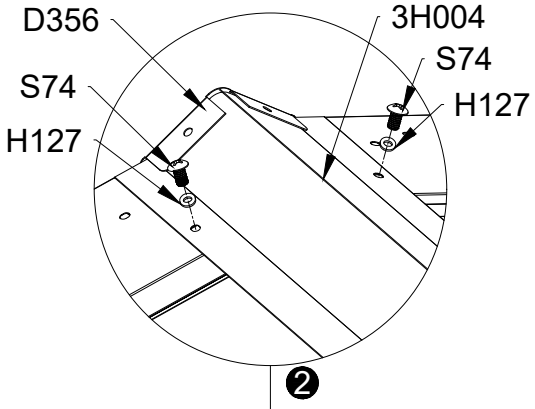


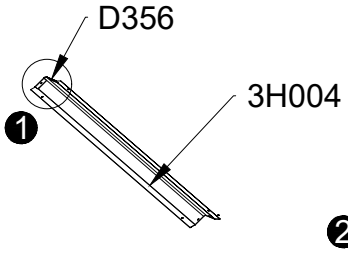


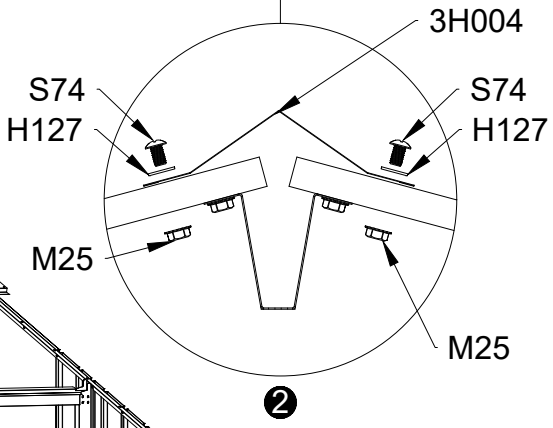

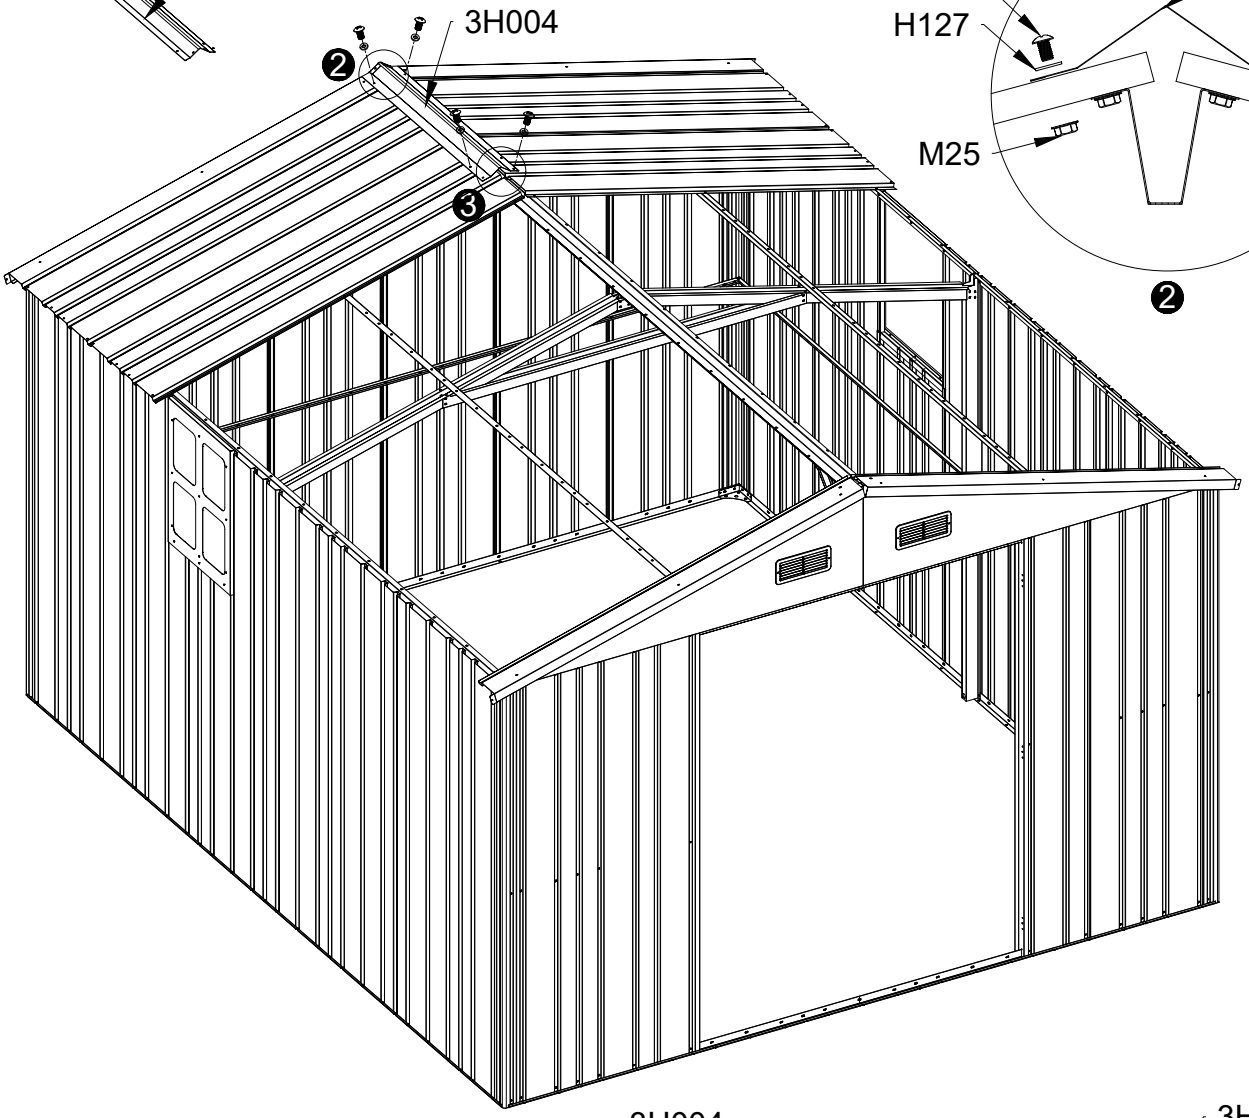


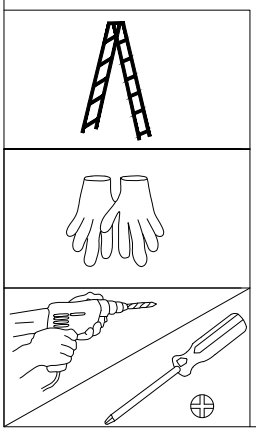


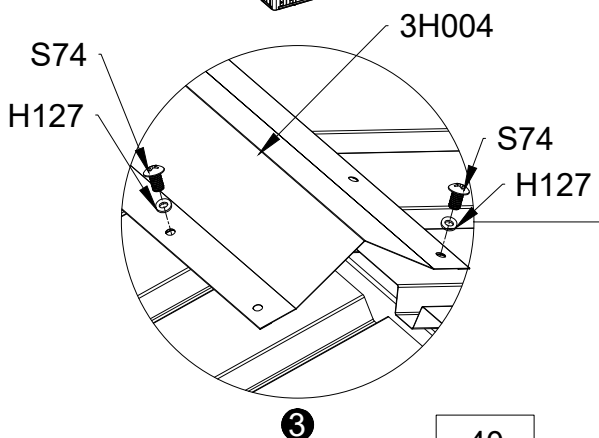


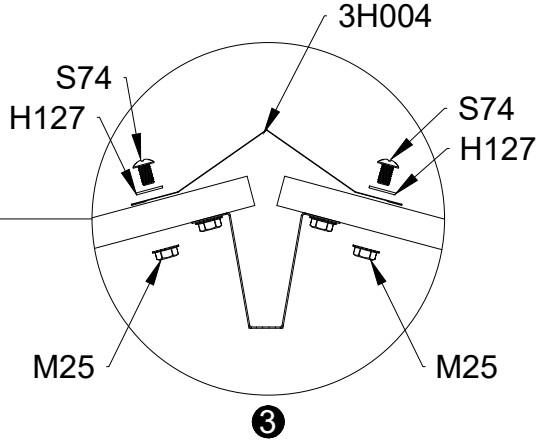



PART	NO	QTY
	1E004	4
	S74 M4X8	24
	M25 M4	24
	H127	24

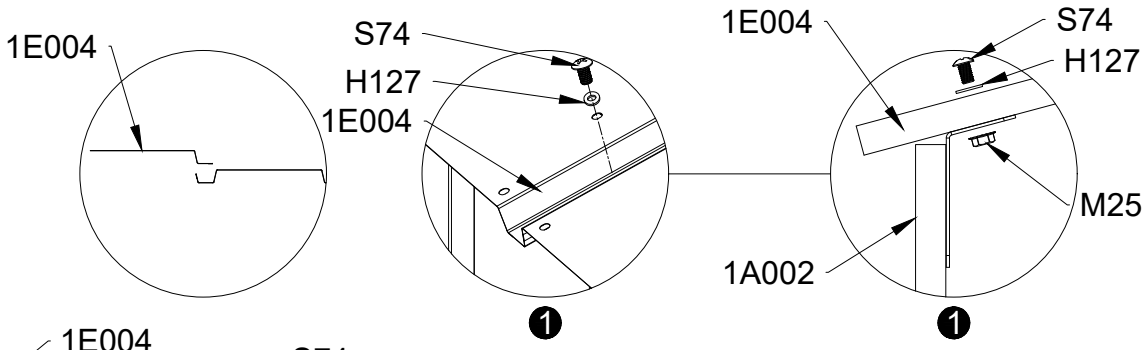

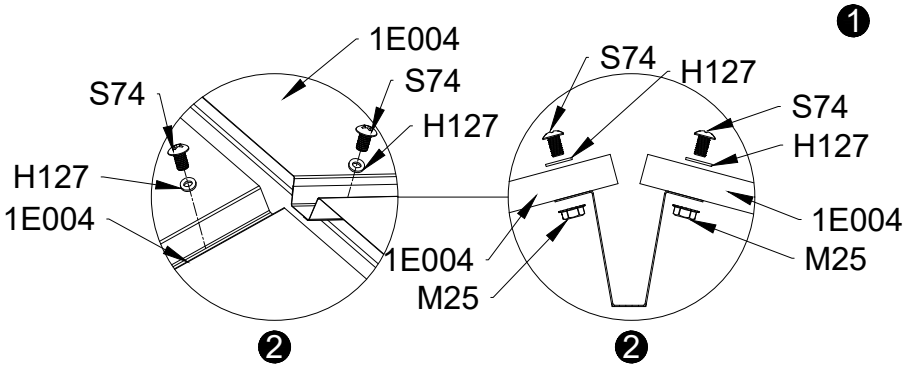


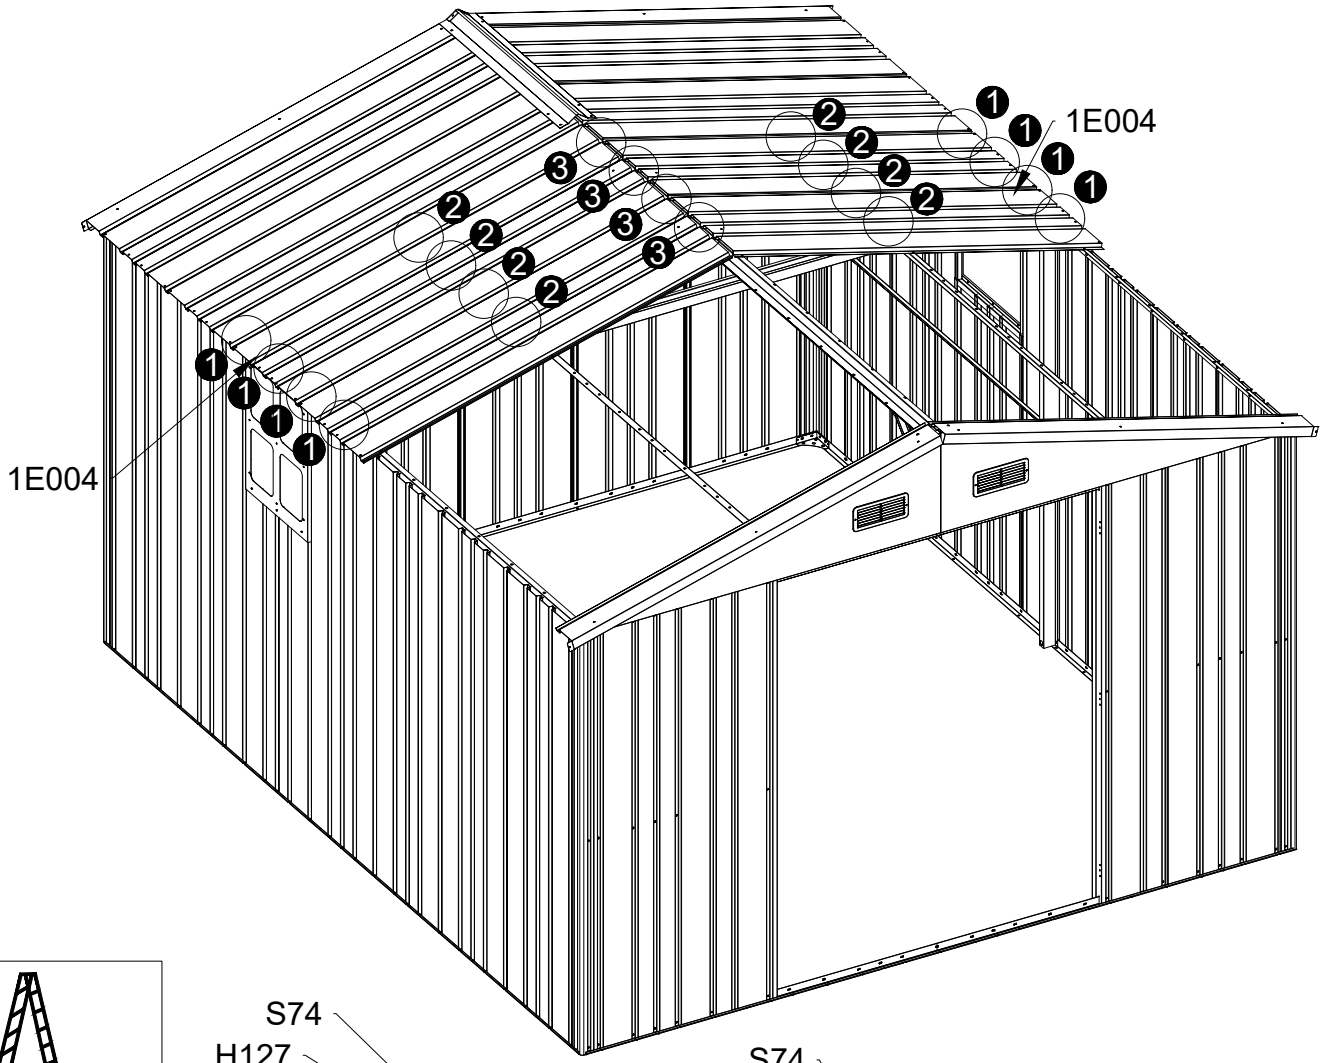


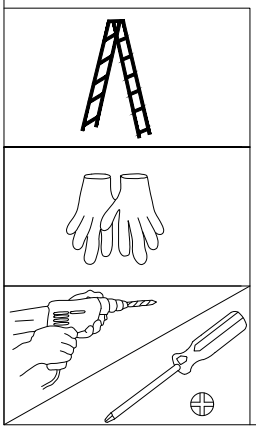


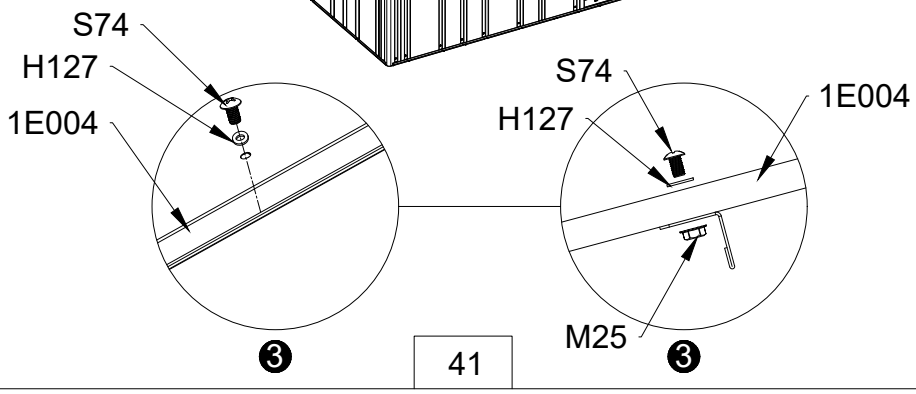


PART	NO	QTY
	3H005	1
	S74 M4X8	2
	M25 M4	2
	H127	2

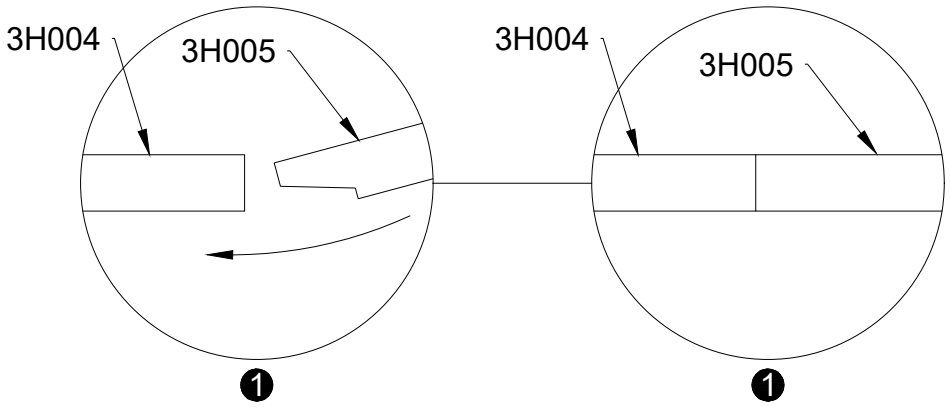


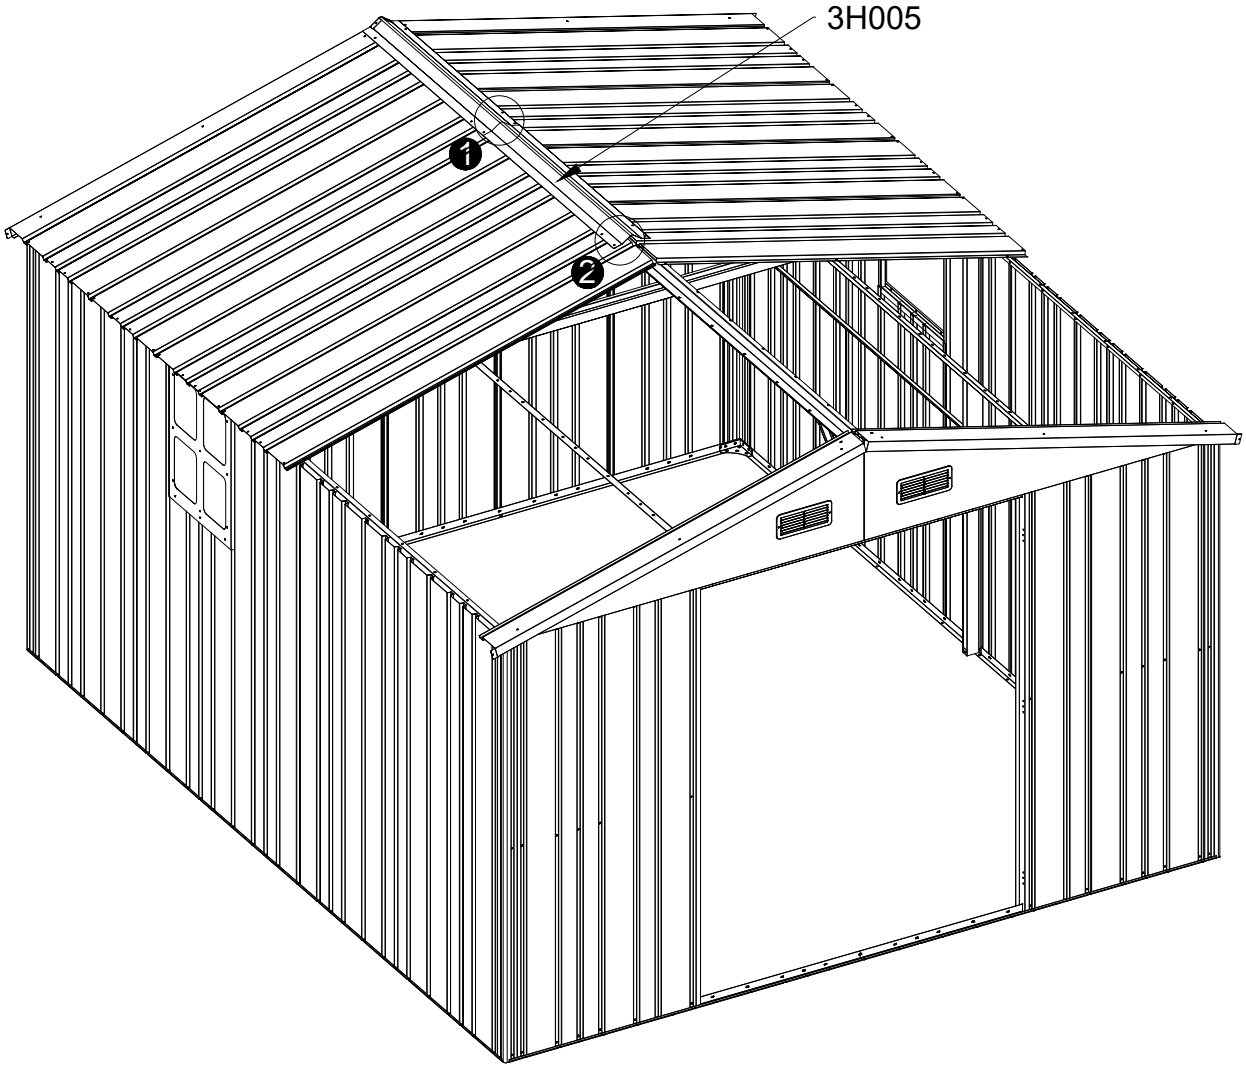


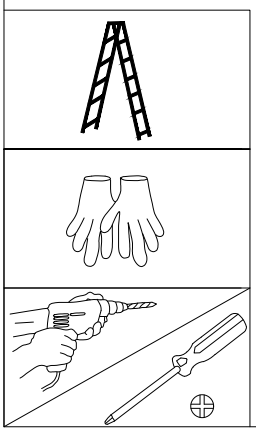


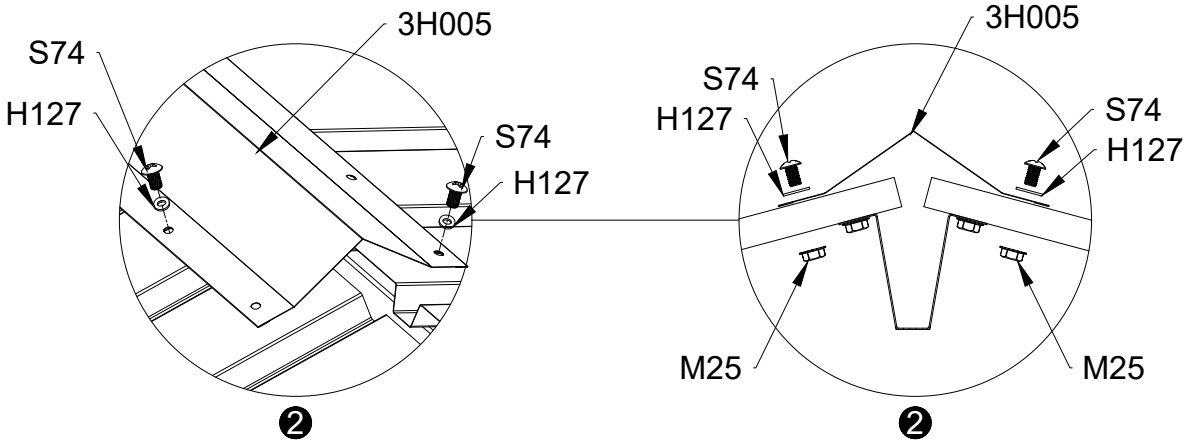



PART	NO	QTY
	1E004	4
	S74 M4X8	24
	M25 M4	24
	H127	24

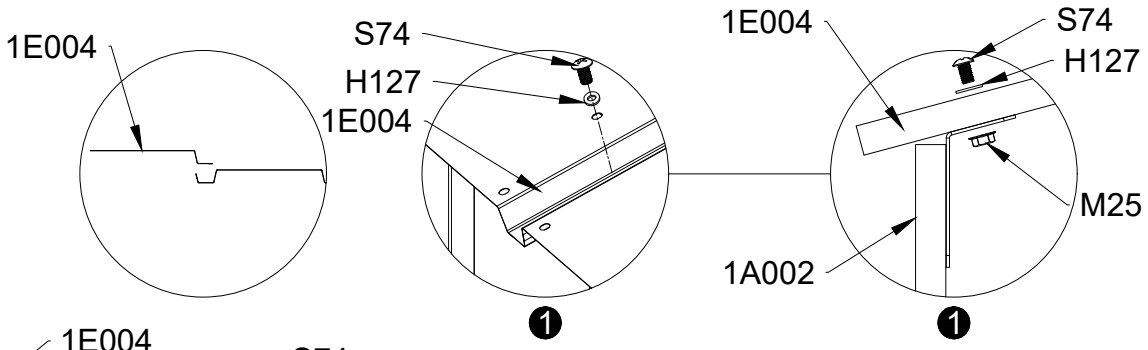

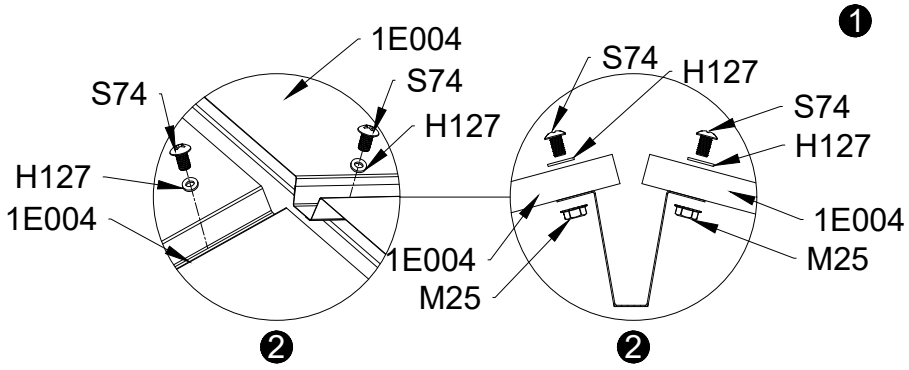


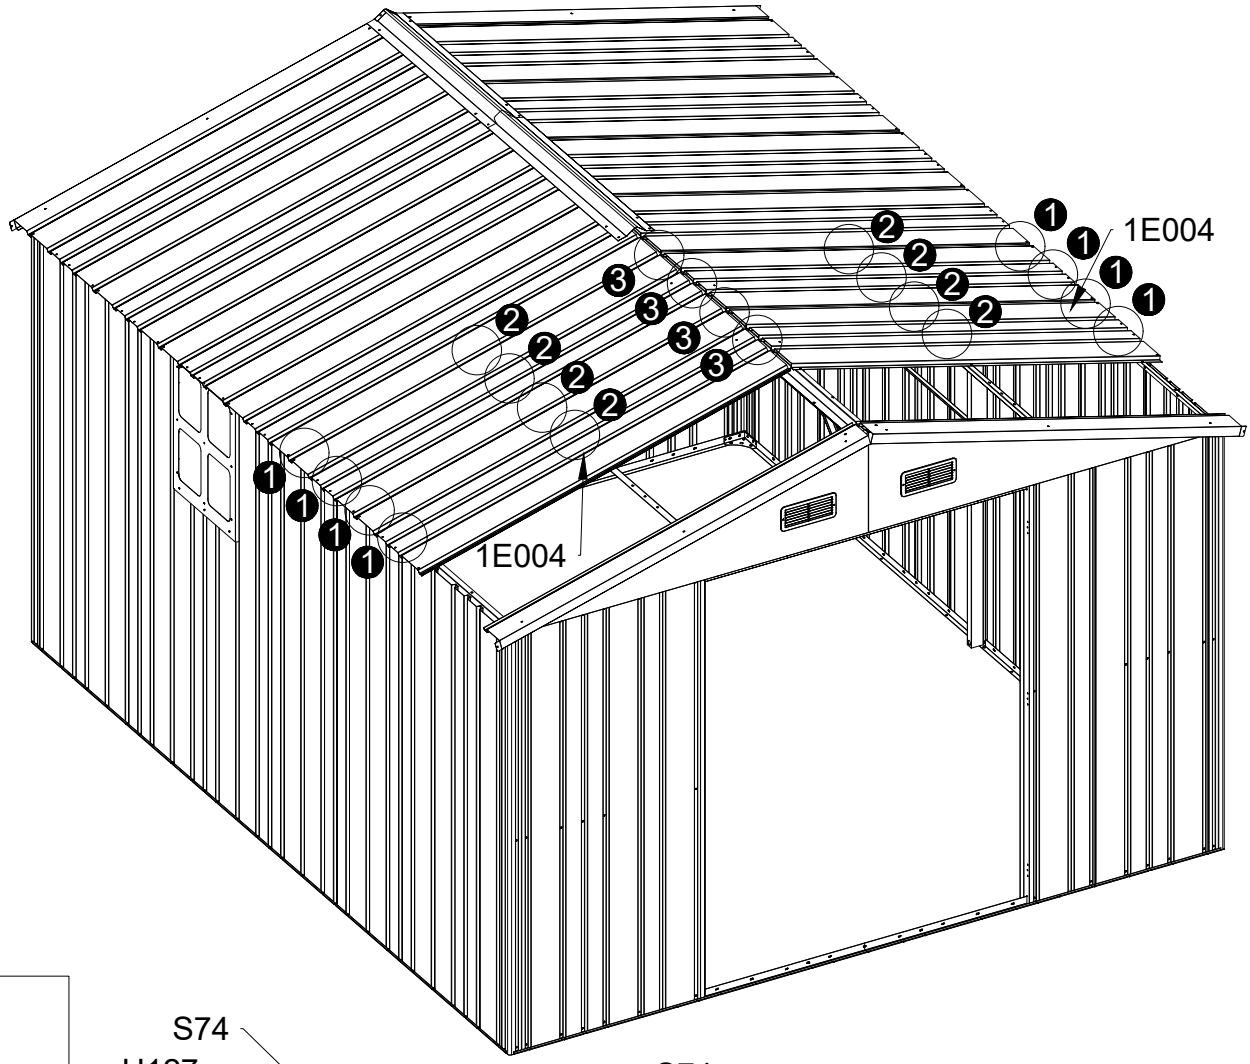


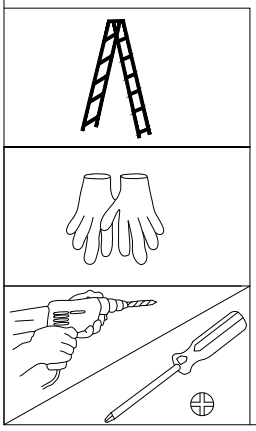


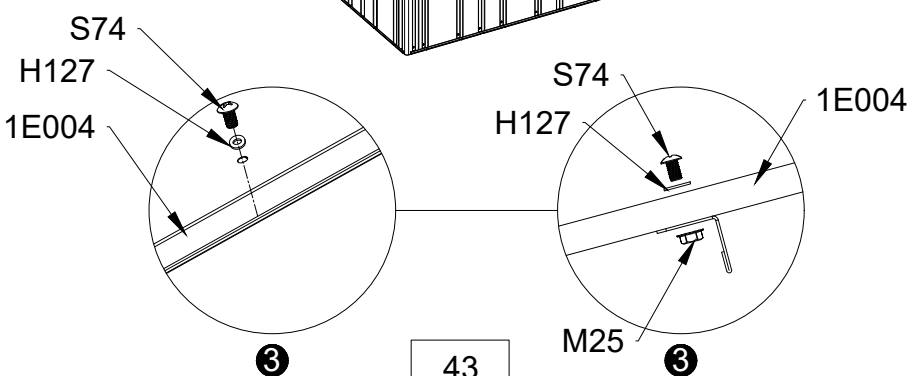


PART	NO	QTY
	3H005	1
	S74 M4X8	2
	M25 M4	2
	H127	2

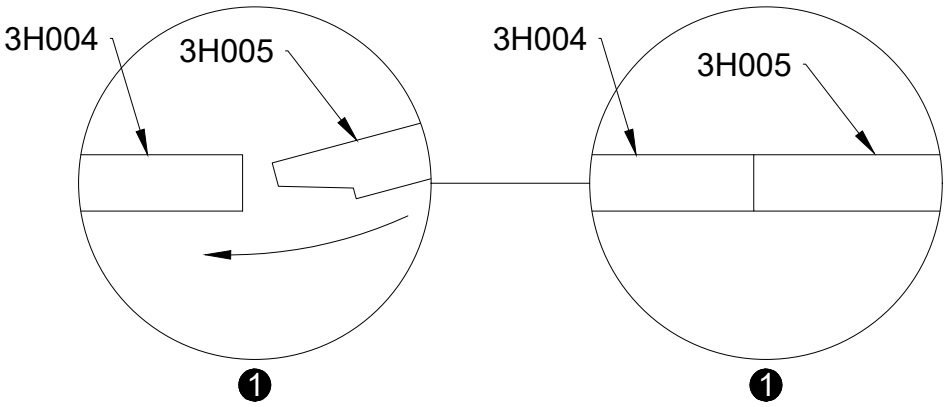


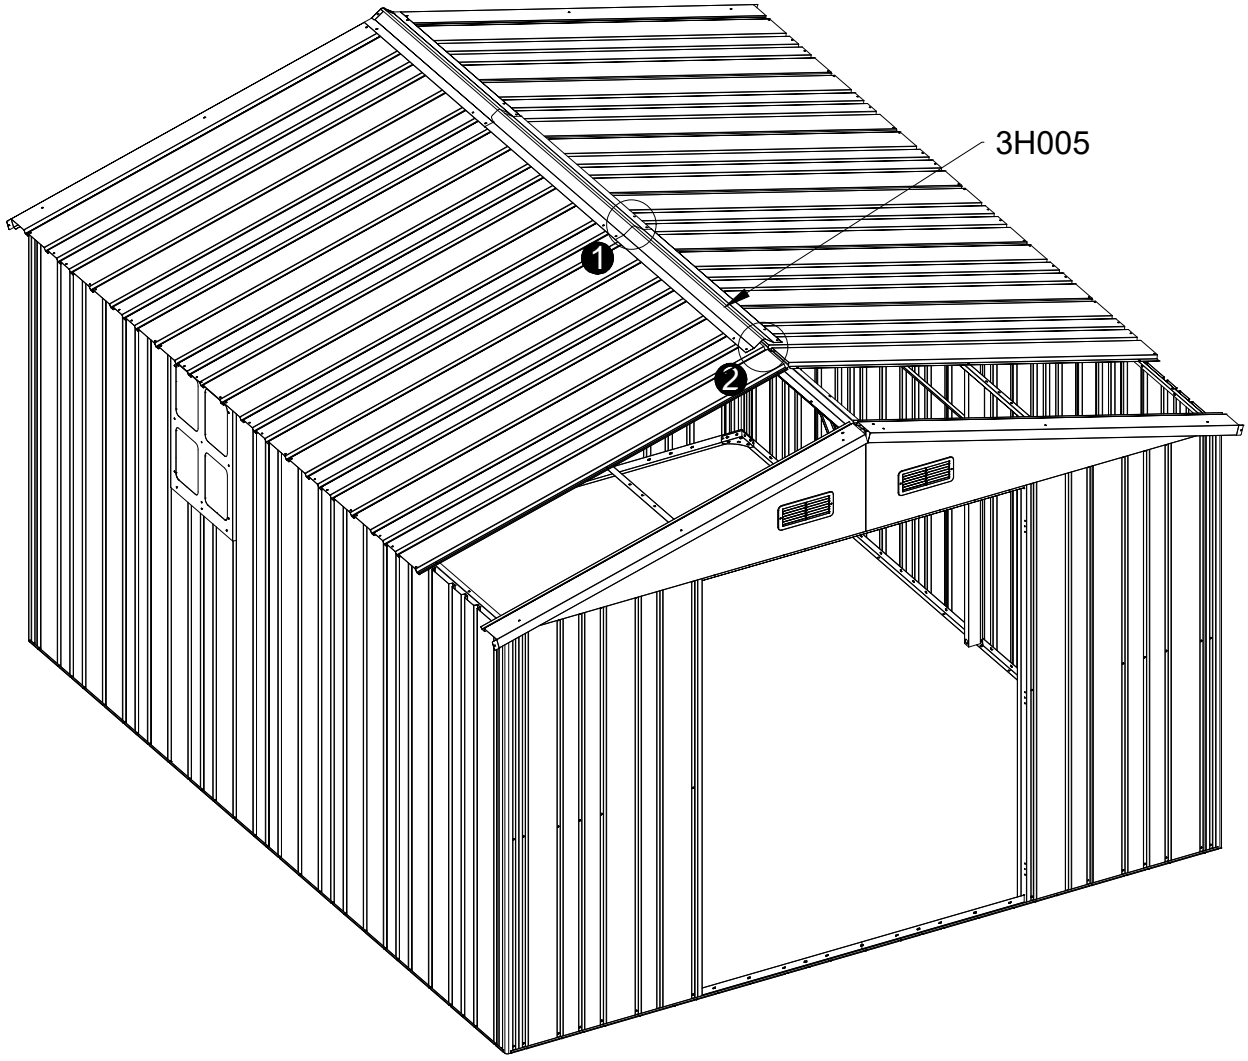


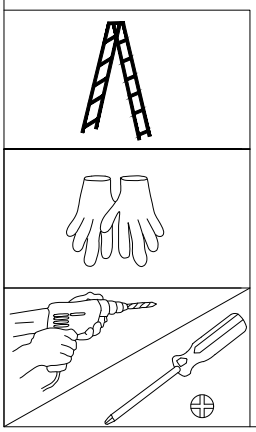


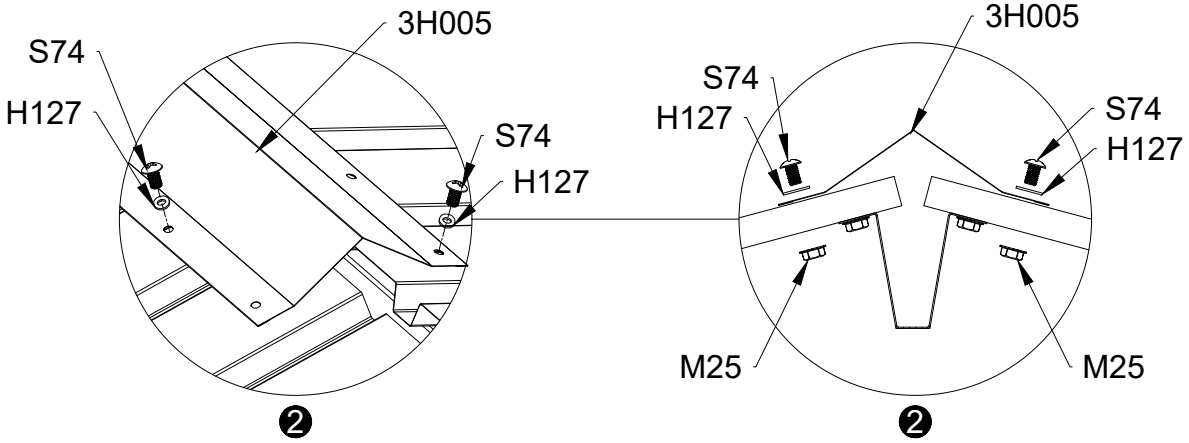



PART	NO	QTY
	1E004	2
	S74 M4X8	18
	M25 M4	18
	H127	18

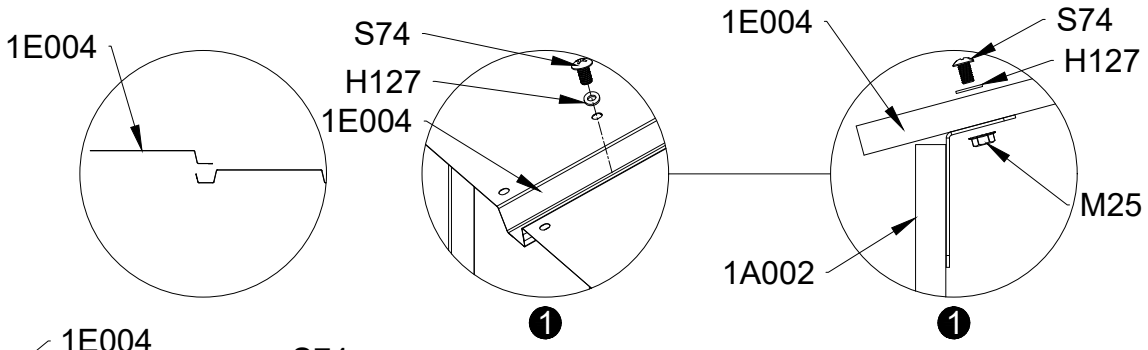

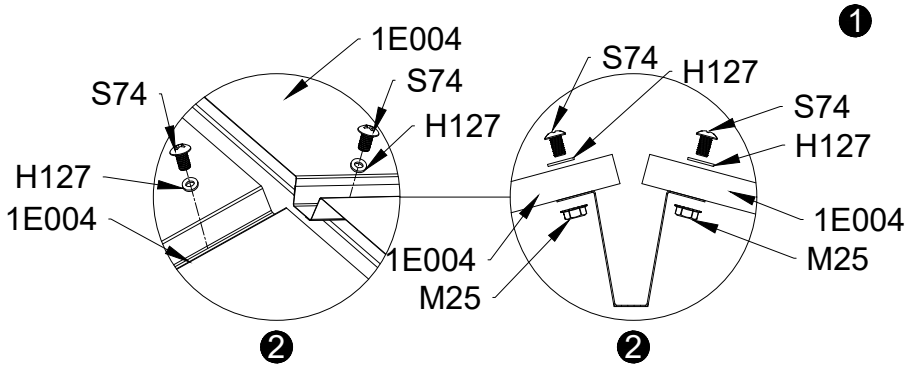


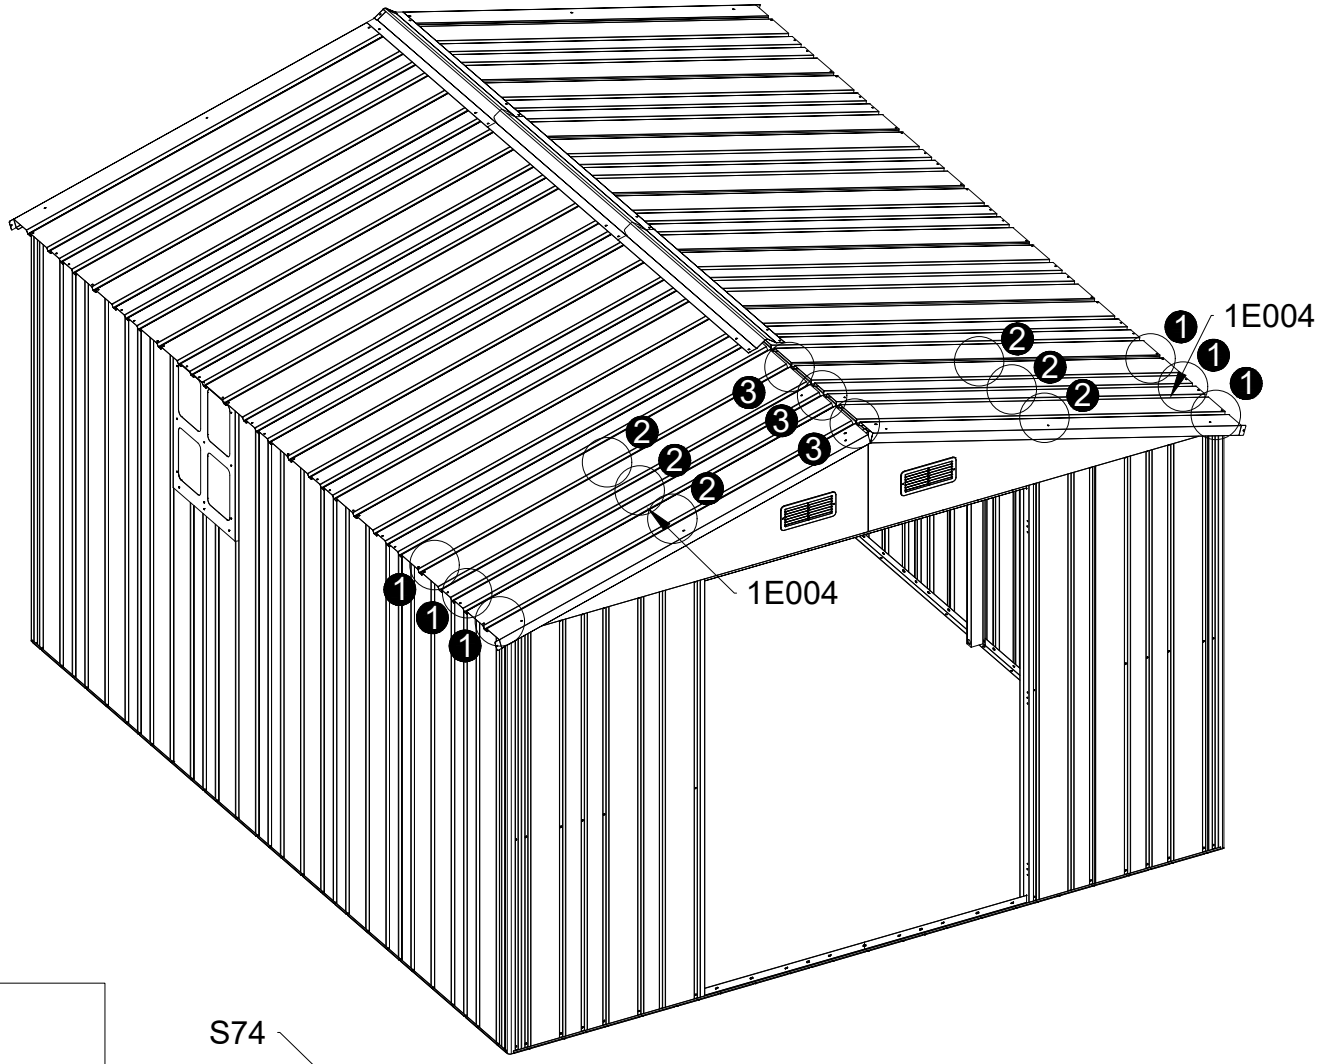


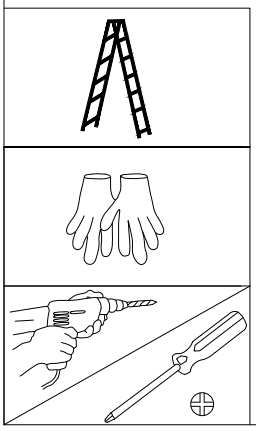


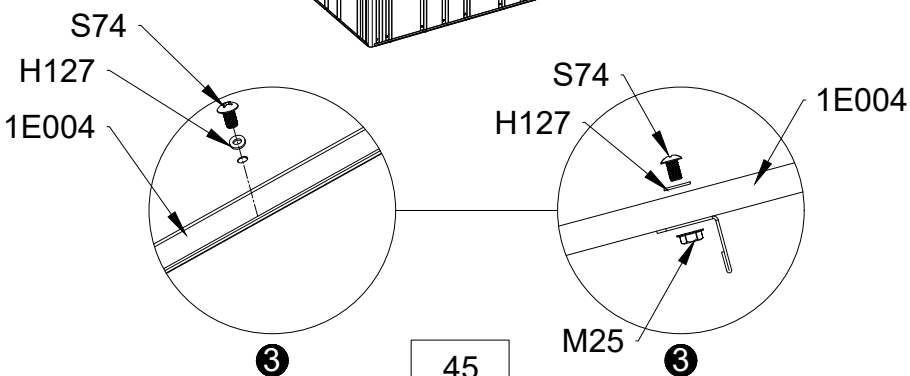



PART	NO	QTY
	3H006	1
	D356	1
	S74 M4X8	4
	M25 M4	4
	H127	4

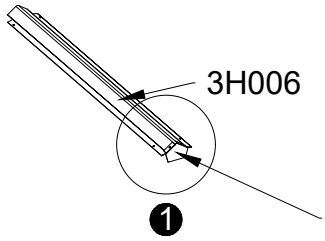


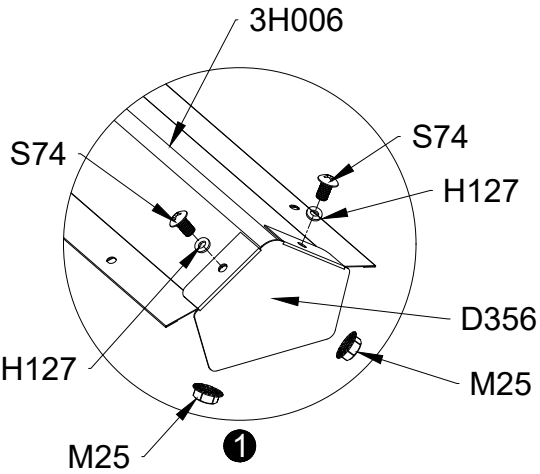


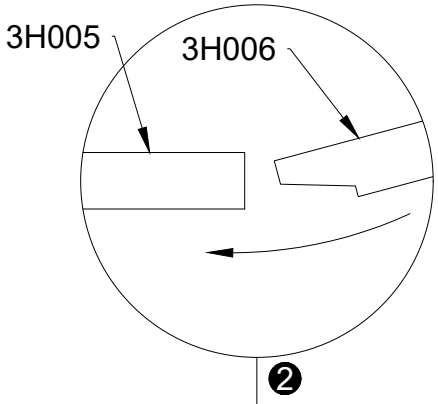

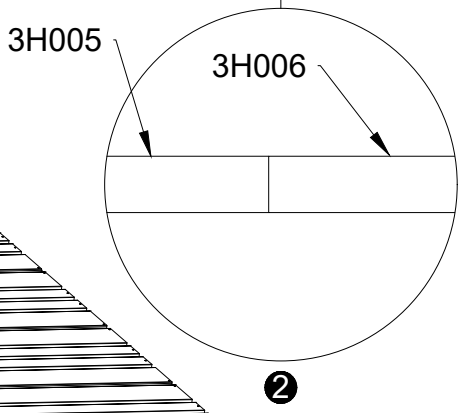


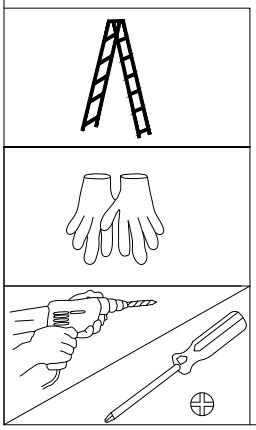


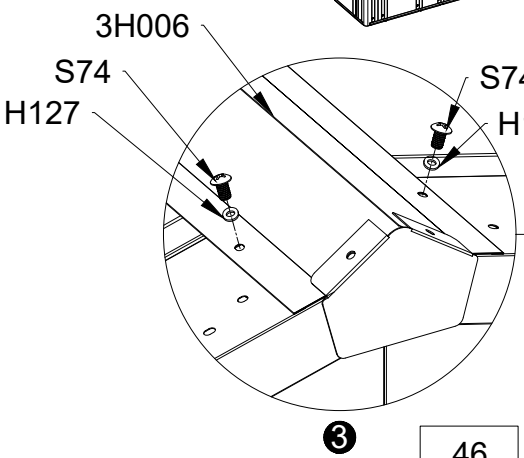


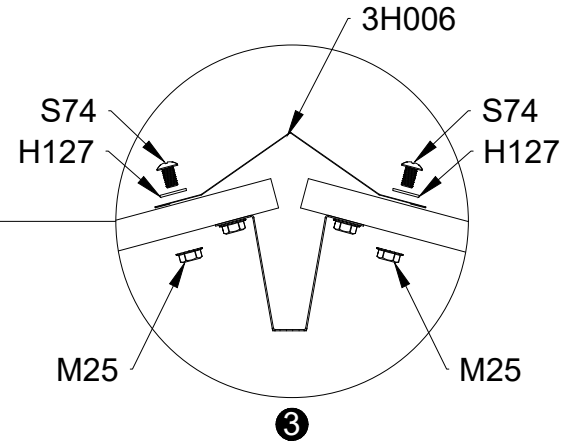


PART	NO	QTY
	3J006	2
	3J009	2
	S74 M4X8	40
	M25 M4	40

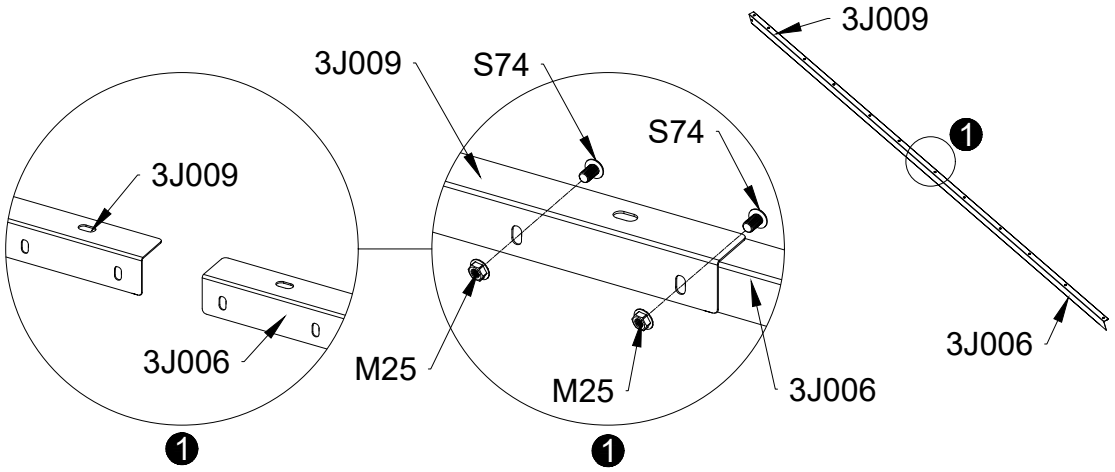


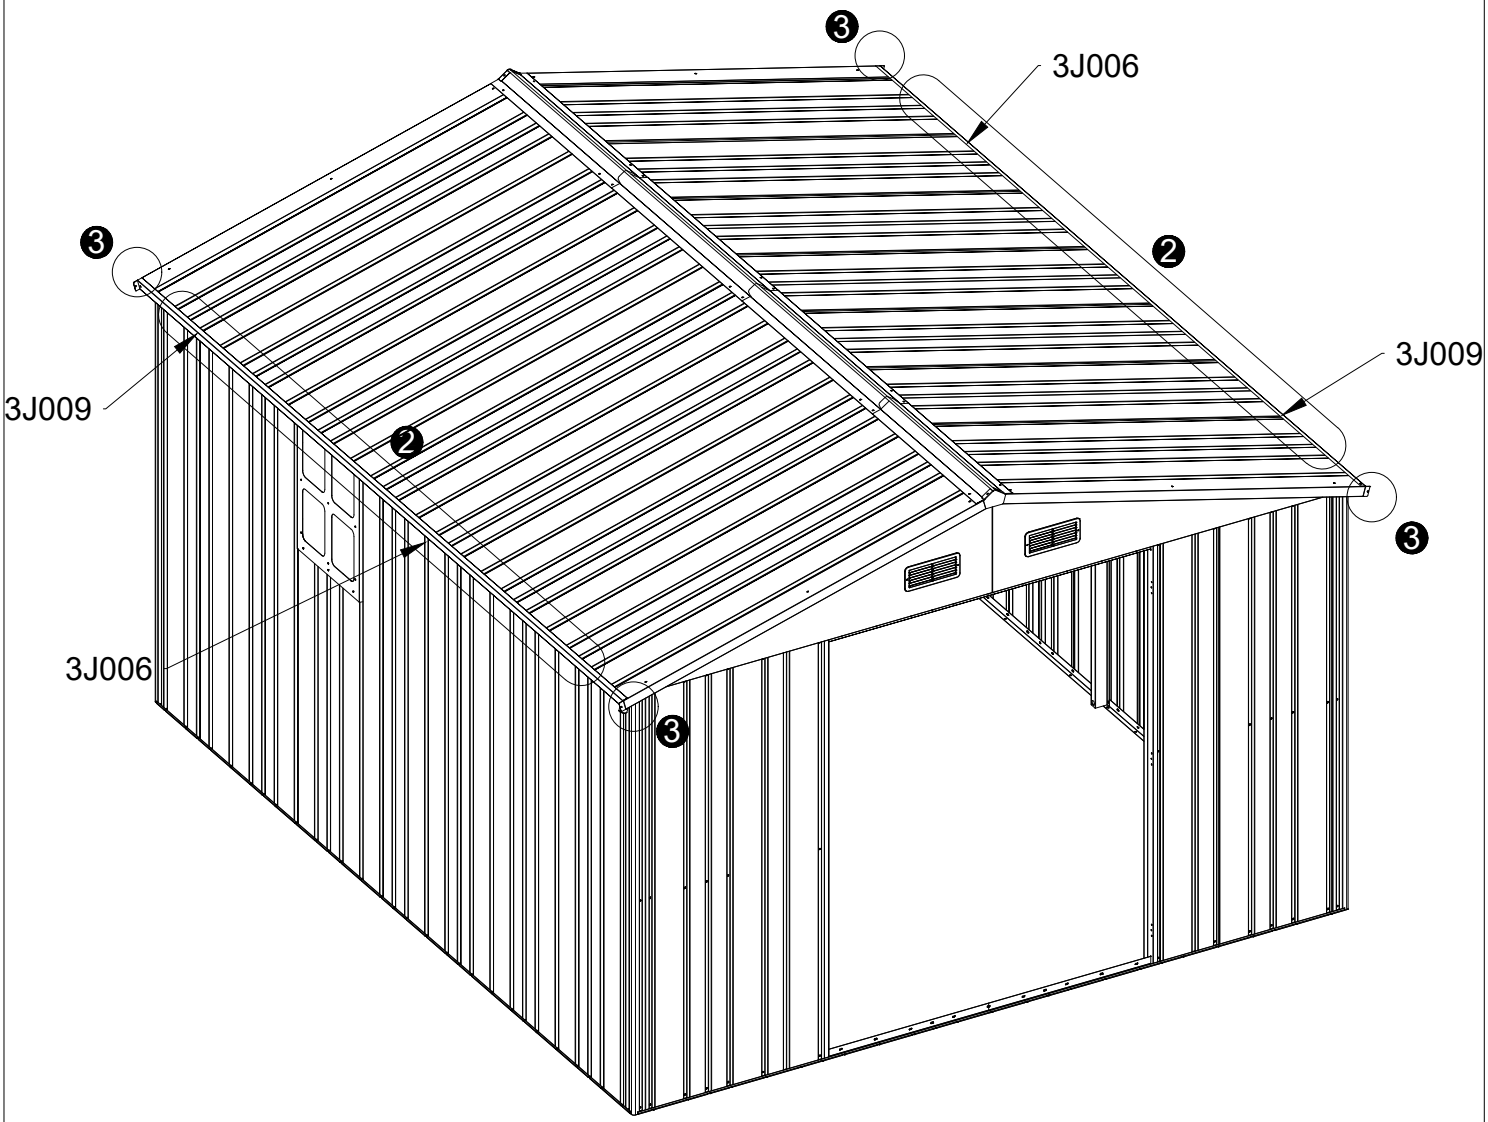

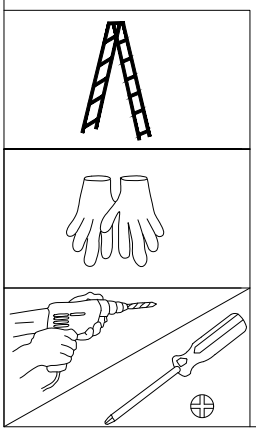


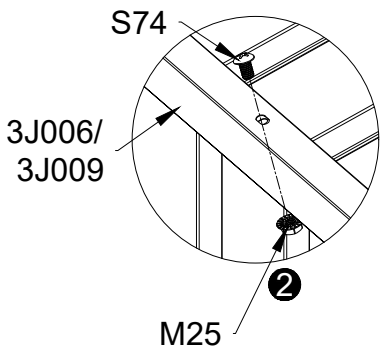



Fold the edges of 3G007/3G008 over and wrap them around 3J006/3J009

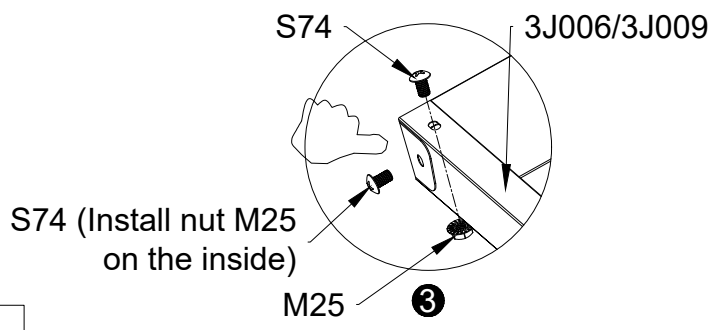


PART	NO	QTY
	D354	6
	S75 M4X10	18
	M25 M4	18

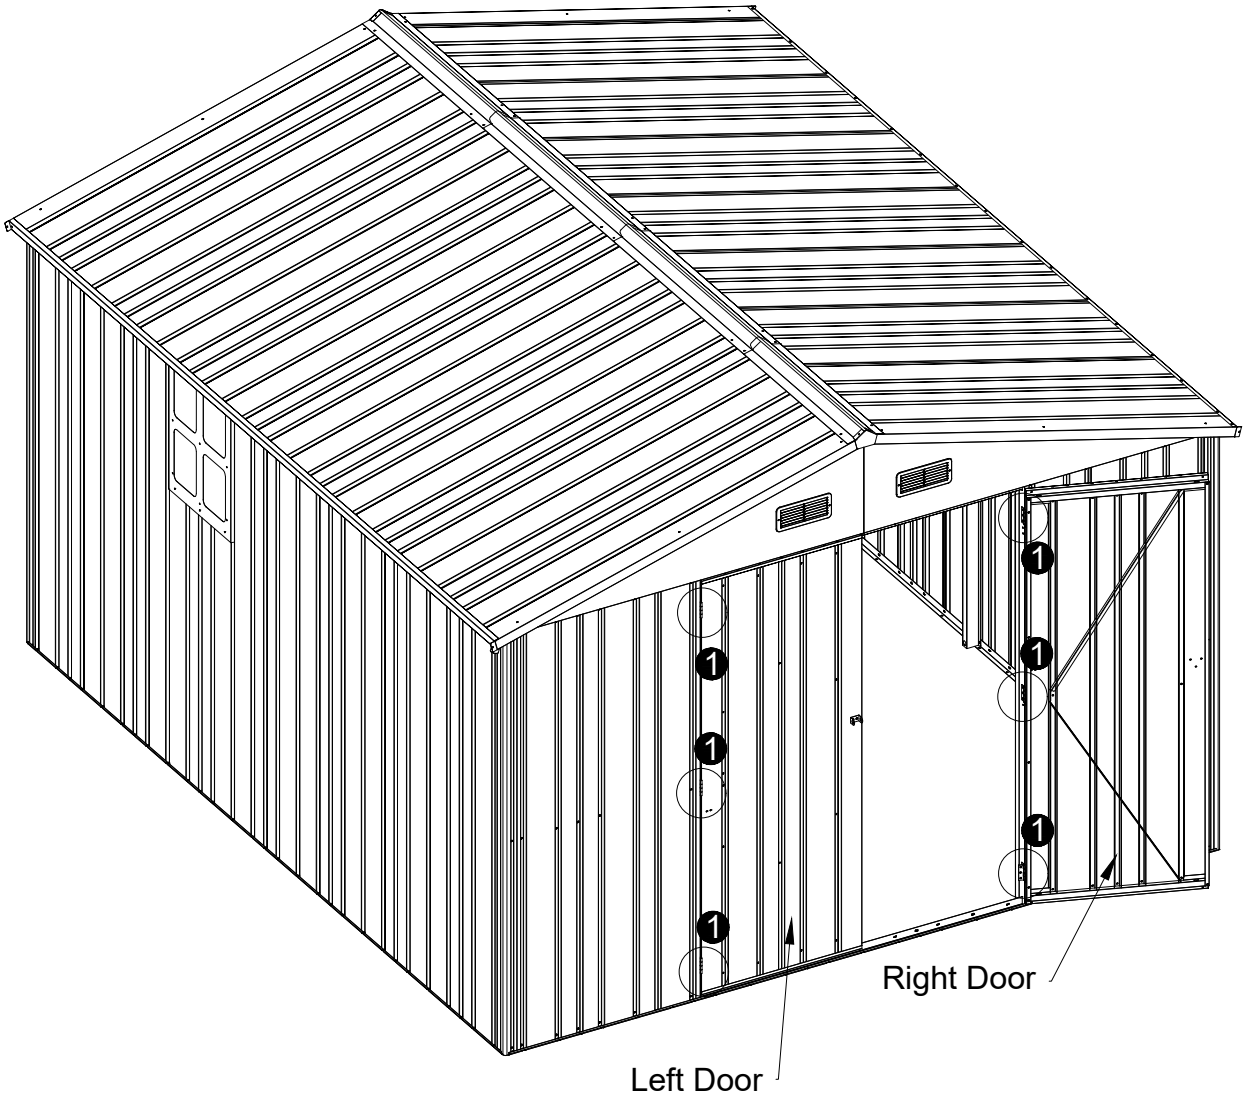


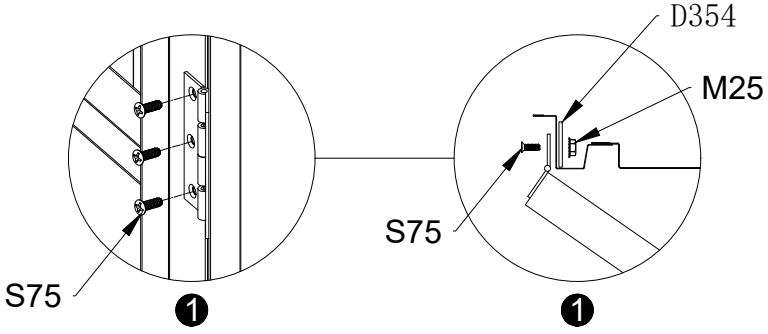


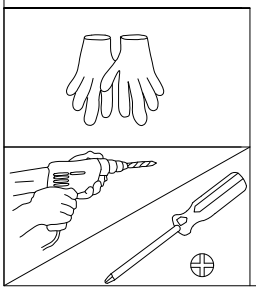



PART	NO	QTY
	H145	1
	S74 M4X8	5
	M25 M4	5

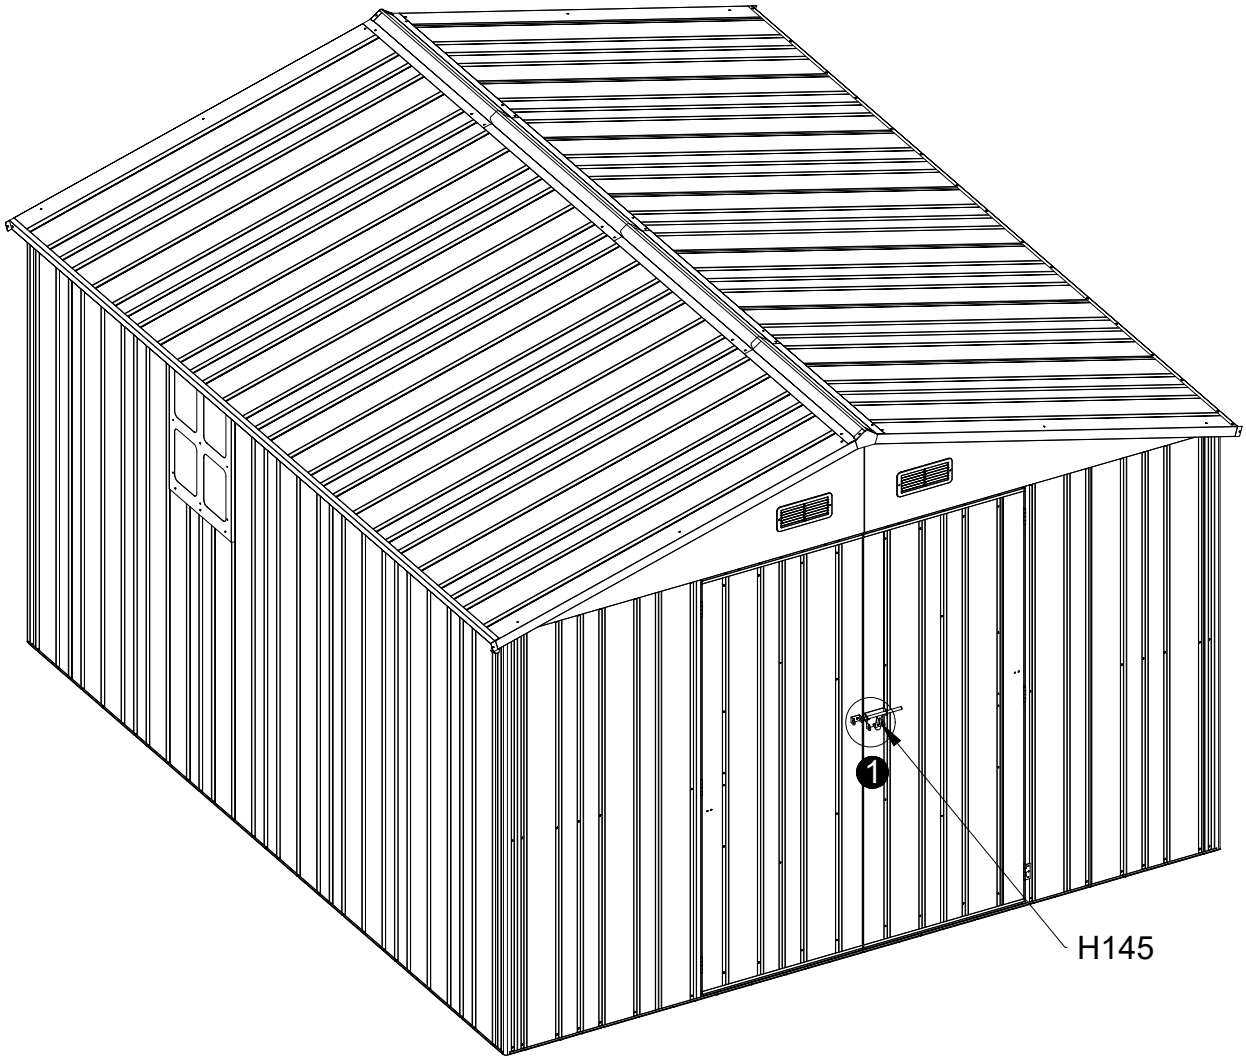


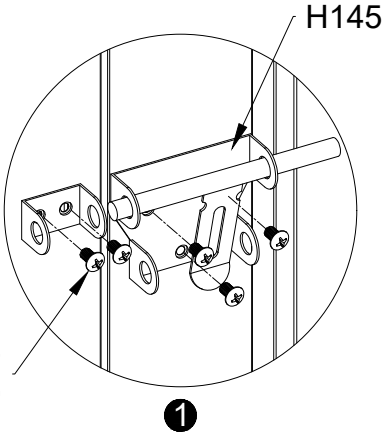

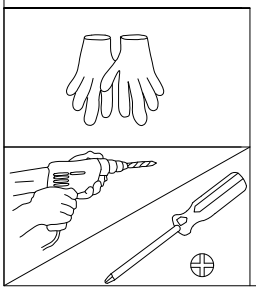

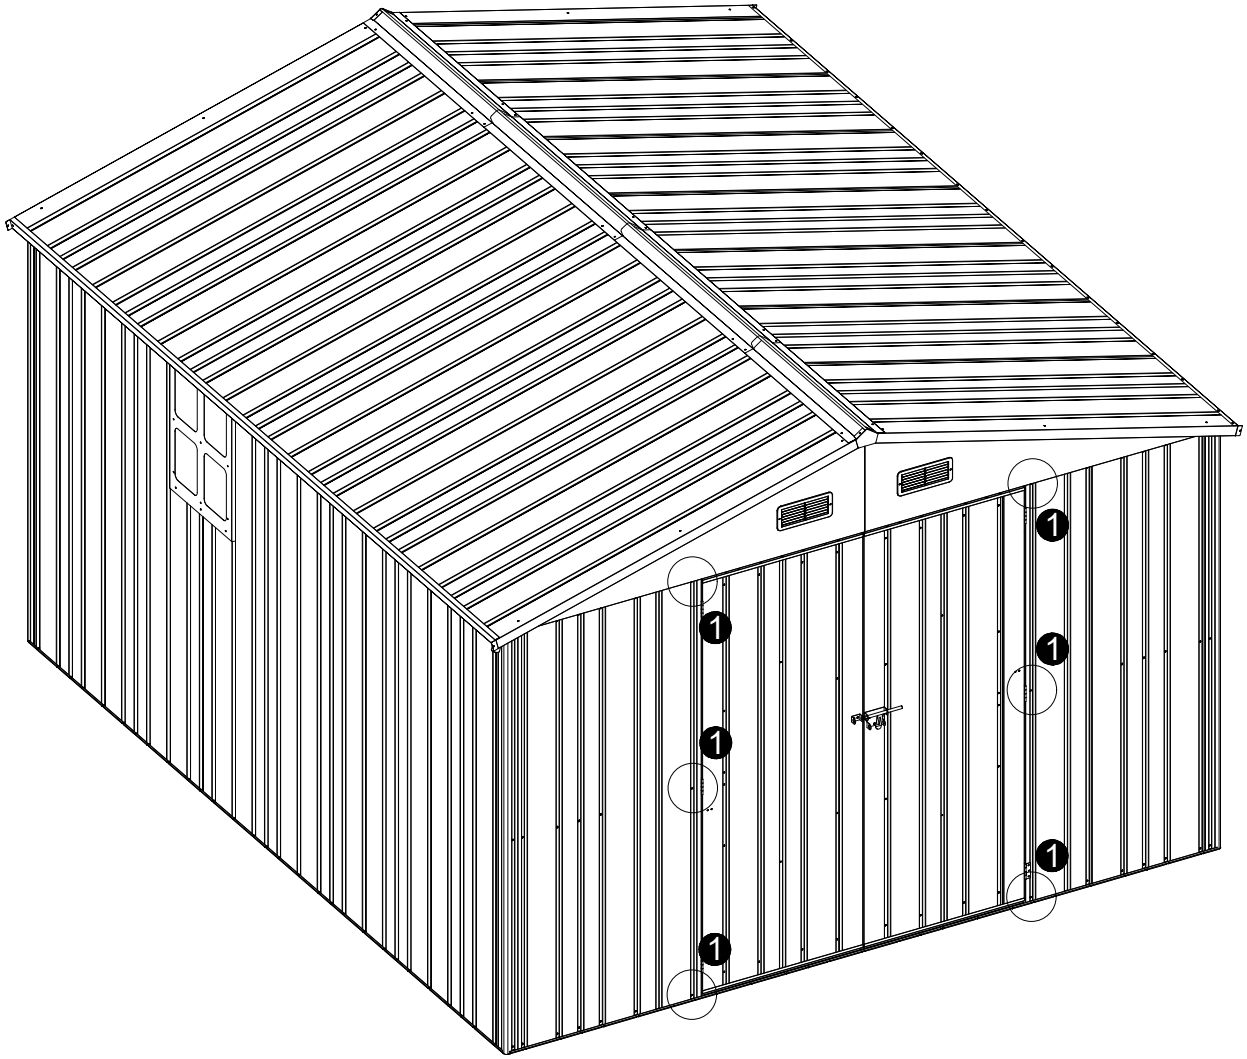

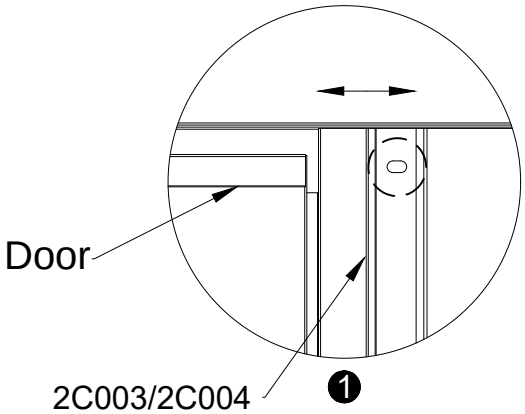

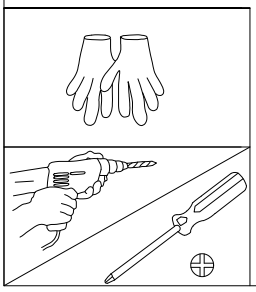

You can adjust the parallelism of the door by moving 2C003/2C004 left or right using these six screws.