

ASSEMBLY INSTRUCTIONS

Wood Platform Bed (BSW013-K)

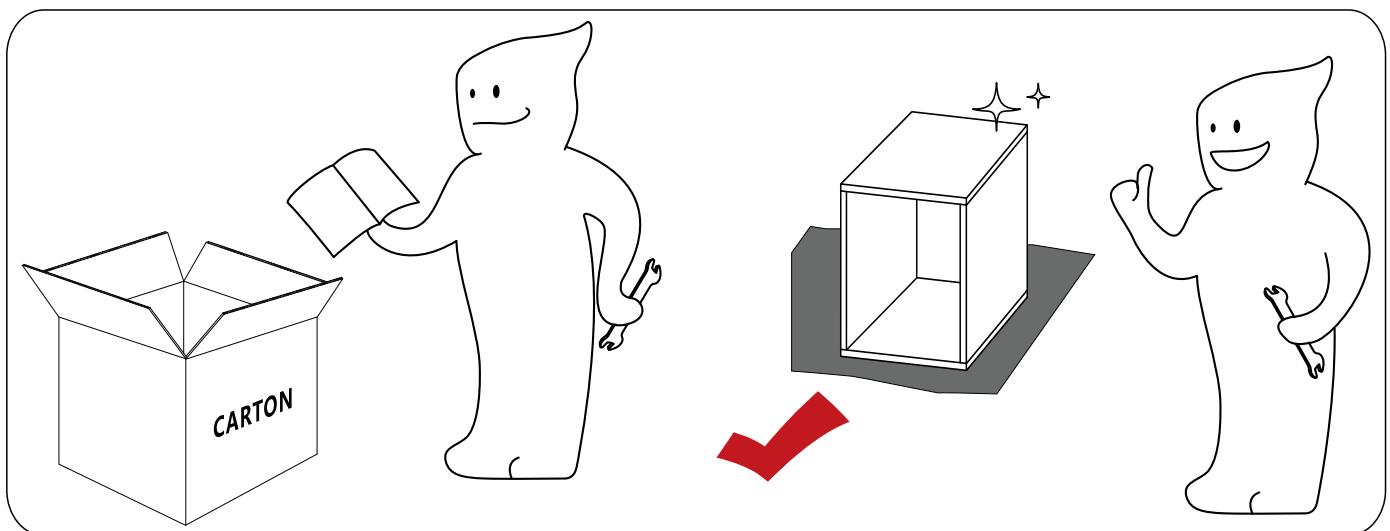
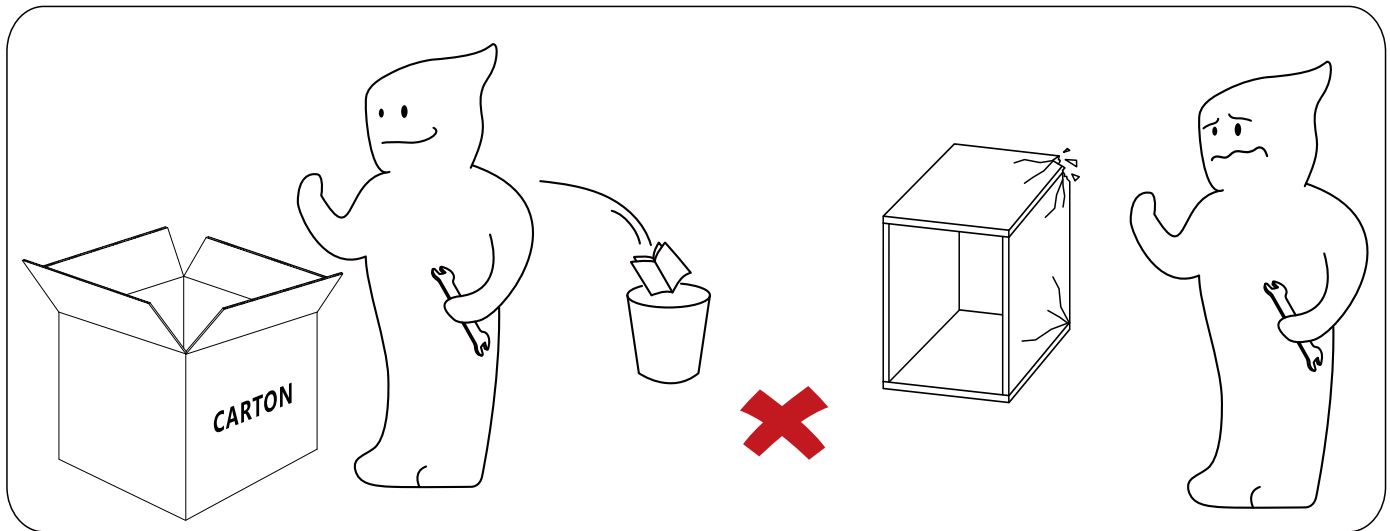


Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.



Please follow the instruction manuals and use a pad to protect the product during your assembly.




Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.
3. **Finally, tighten all the screws manually.**















For easier and better assembly, **2** or more adults are required.

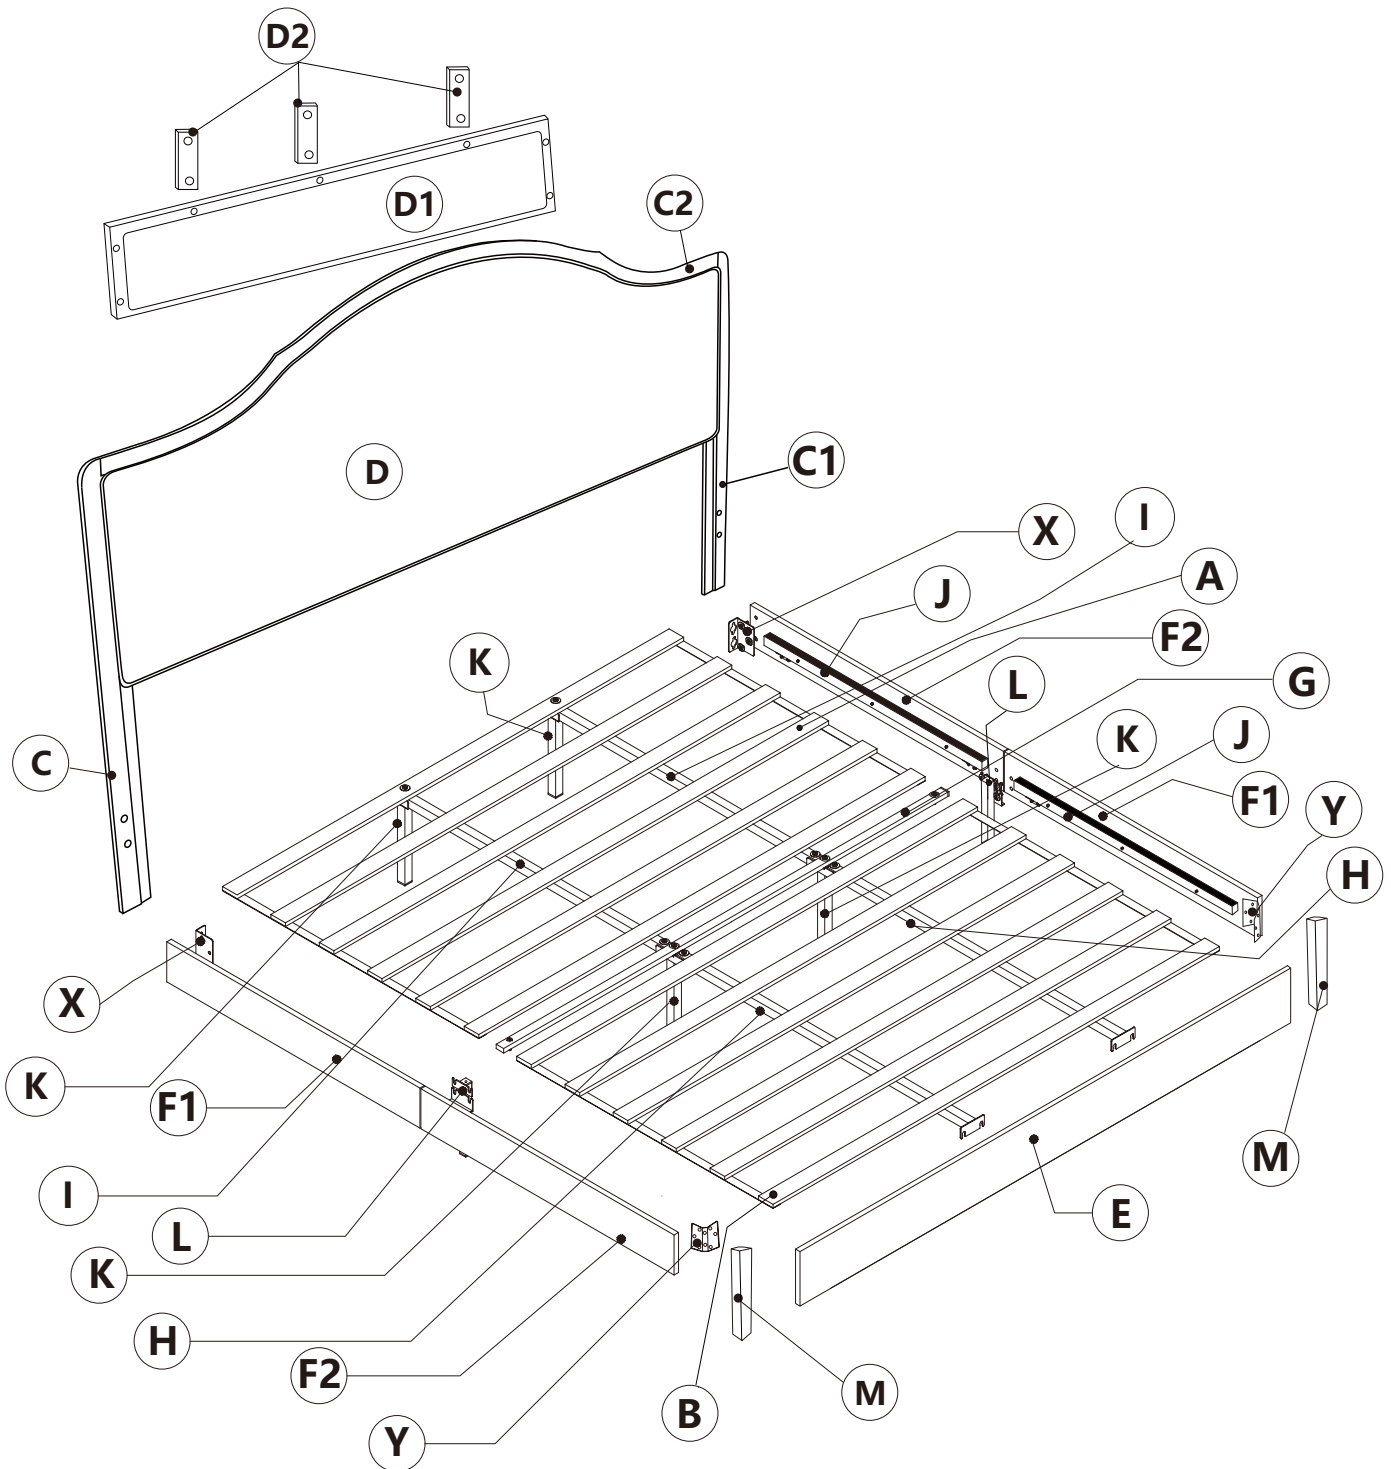ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

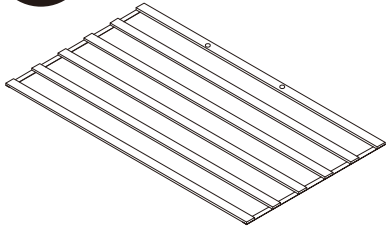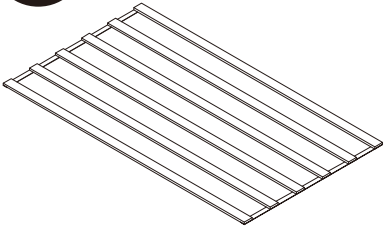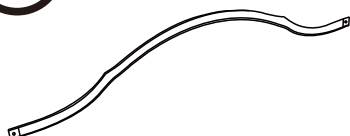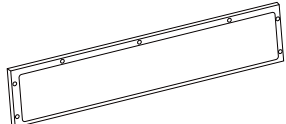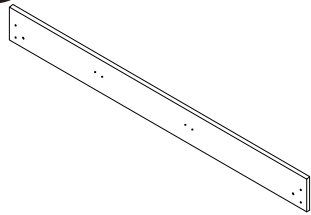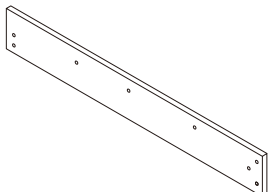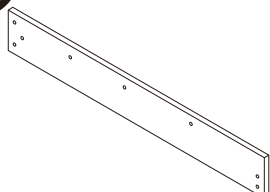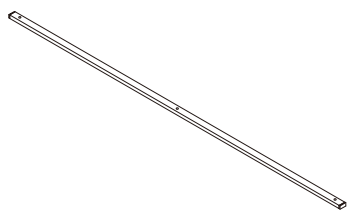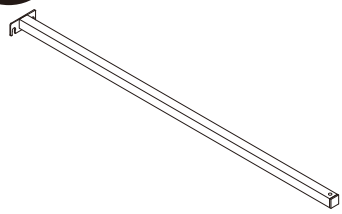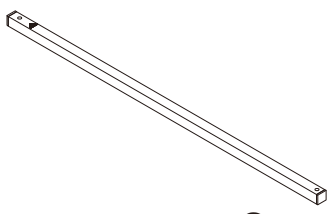(A)  1pc	(B)  1pc	(C)  1pc
(C1)  1pc	(C2)  1pc	(D)  1pc
(D1)  1pc	(D2)  3pcs	(E)  1pc
(F1)  2pcs	(F2)  2pcs	(M)  2pcs
(G)  1pc	(H)  2pcs	(I)  2pcs


ASSEMBLY INSTRUCTIONS

J




4pcs

K













4pcs

L




2pcs

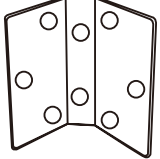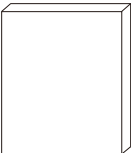
ASSEMBLY INSTRUCTIONS

(N)  M6 1pc	(O)  M8x50 mm 2pcs	(P)  M8x35 mm 8pcs
(Q)  φ 8x18x1.5 mm 60pcs+1pc	(R)  M8x30 mm 12pcs+1ps	(S)  M8x25 mm 4pcs
(W)  M8x14 mm 34pcs+1pc	(X)  100x2 mm 2pcs	(Y)  100x2 mm 2pcs
(U)  M6x30 mm 19pcs	(T)  M6x25 mm 2pcs	(Z)  φ 6x18x1.5 mm 21pcs+1pc
(V)  5pcs		

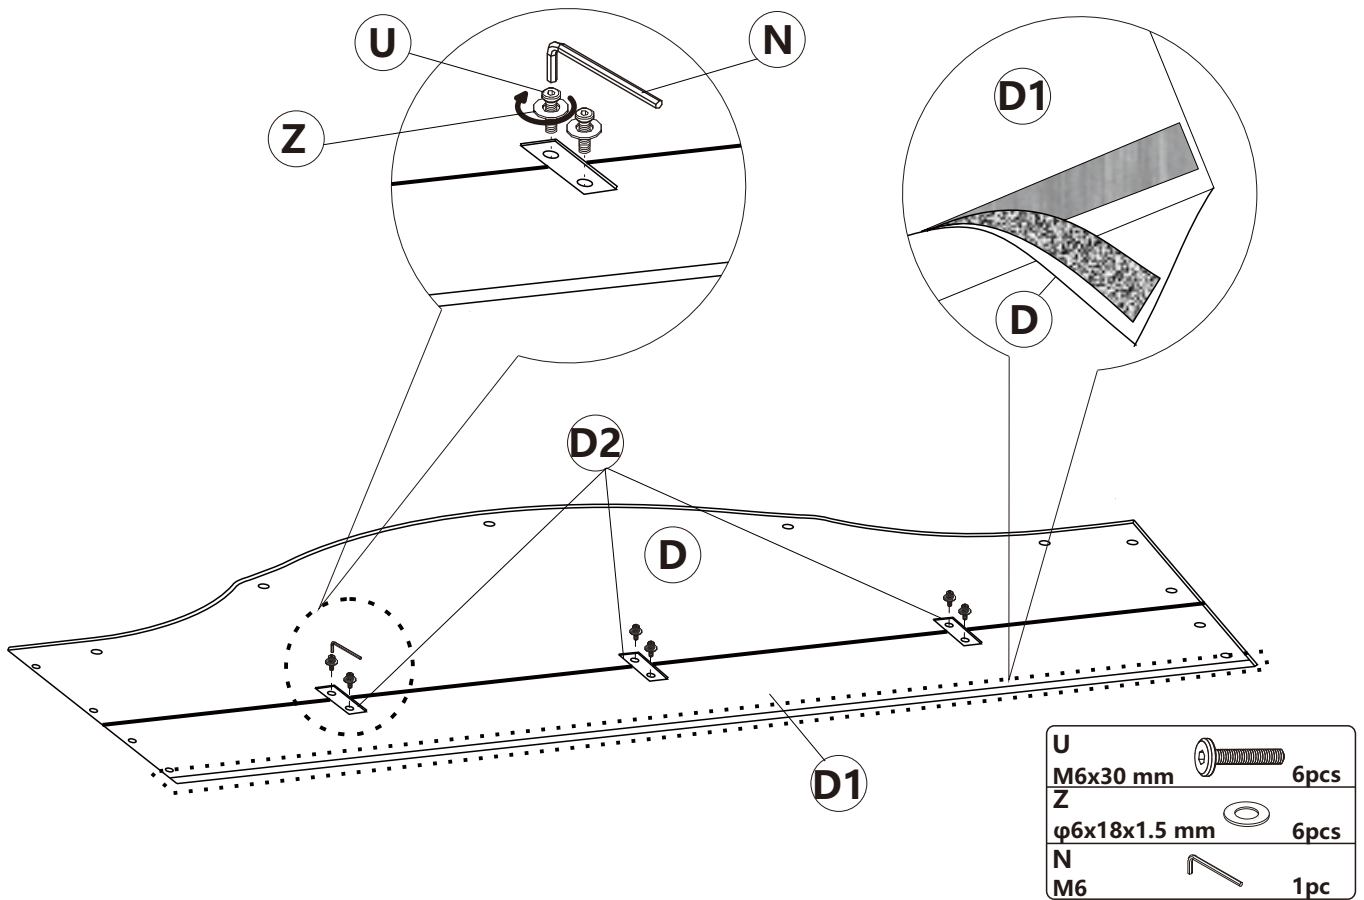
1 Tight all the inner screw after all holes are aligned.



2

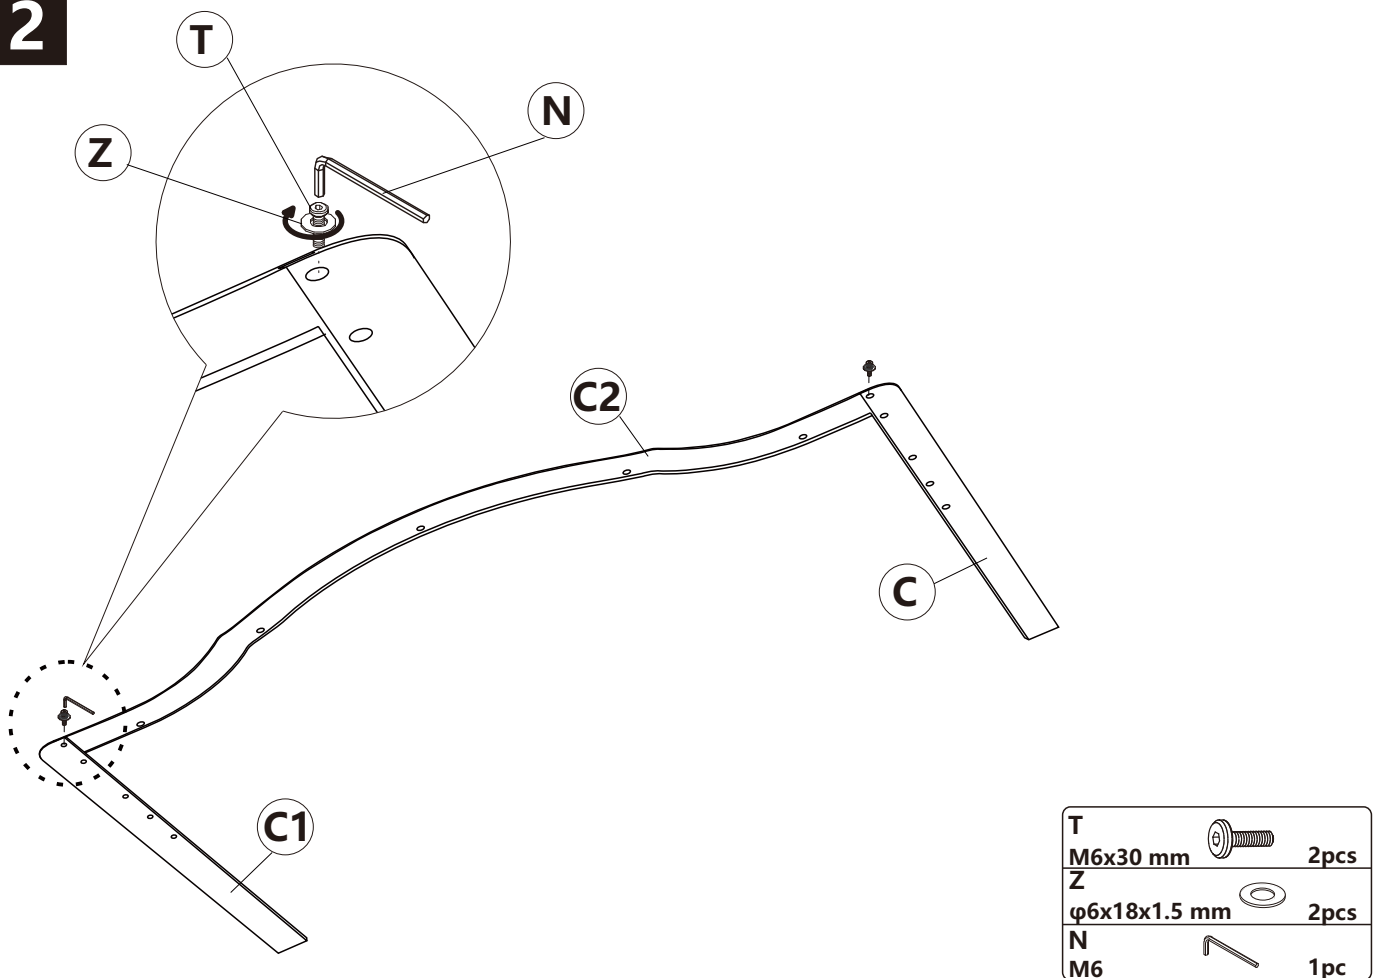


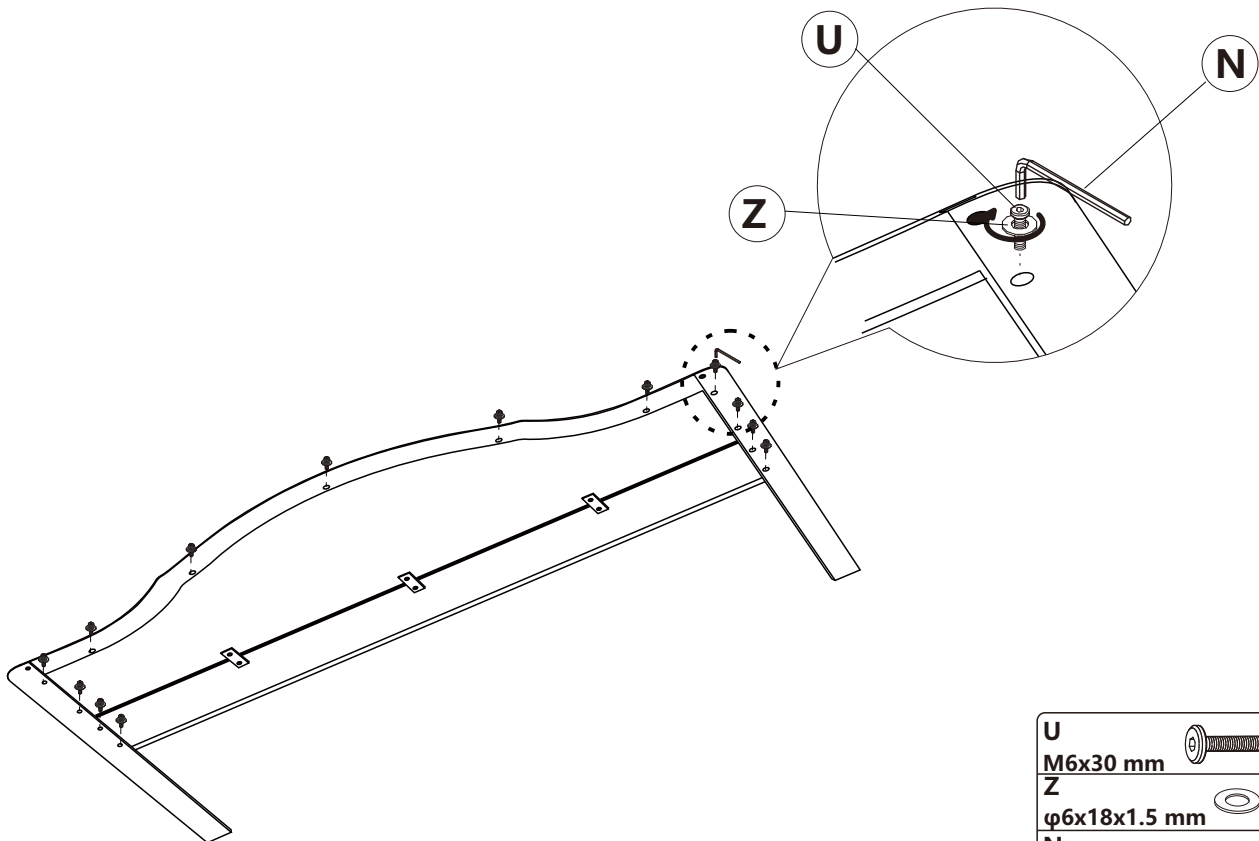3 Tight all the inner screw after all holes are aligned.




U		13pcs
M6x30 mm		
Z		13pcs
φ6x18x1.5 mm		
N		1pc
M6		

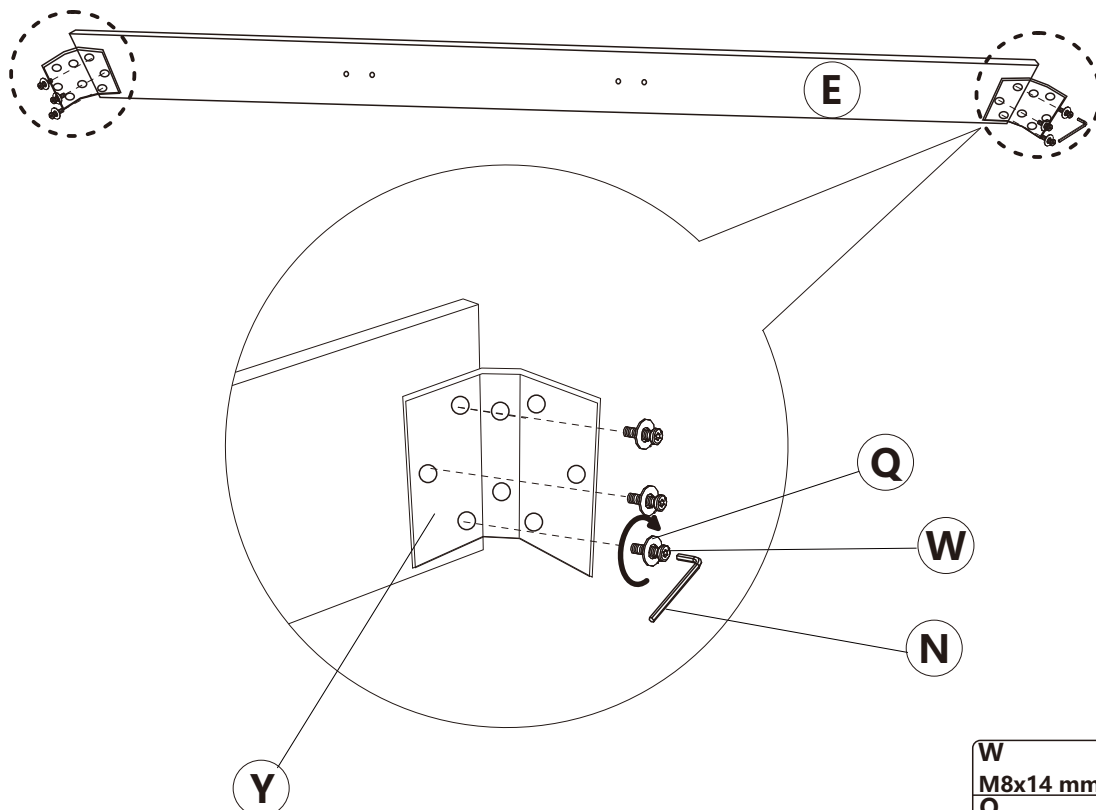4




W		6pcs
M8x14 mm		
Q		6pcs
φ8x18x1.5 mm		
N		1pc
M6		

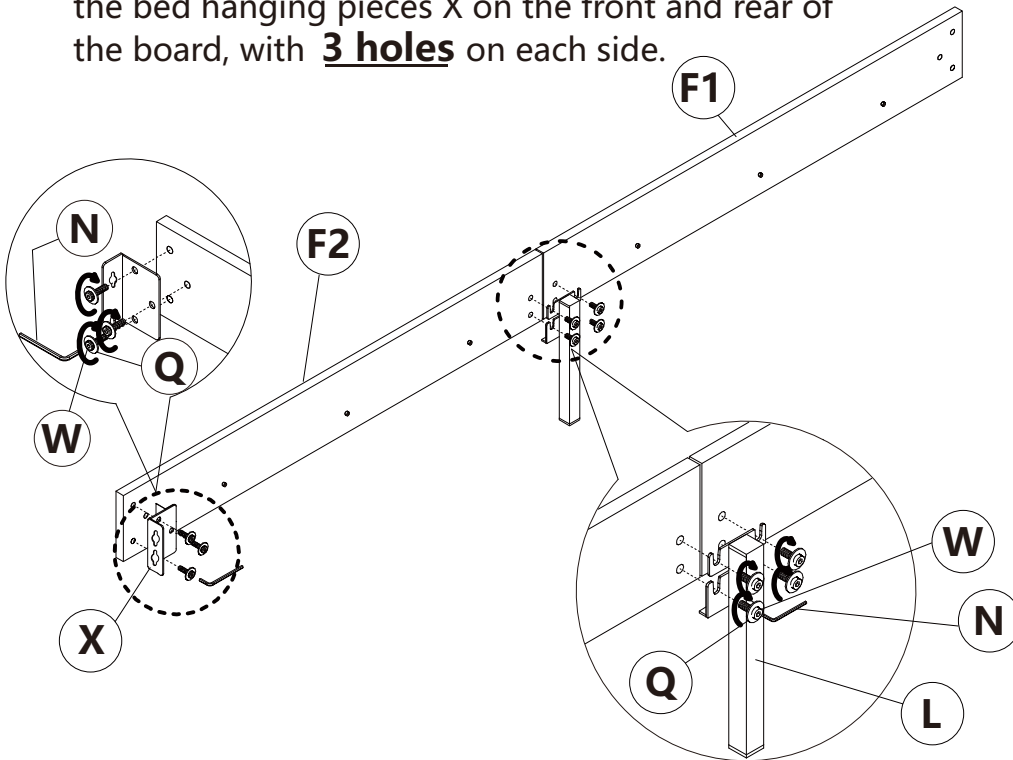- 5** Take out parts F1 and F2, and lock the iron frame foot L in the middle according to the figure. Note that there are **2 holes** located on the inner side of the board. Then lock the bed hanging pieces X on the front and rear of the board, with **3 holes** on each side.




X		1pc
100x2 mm		
W		7pcs
M8x14 mm		
Q		7pcs
φ8x18x1.5 mm		
N		1pc
M6		

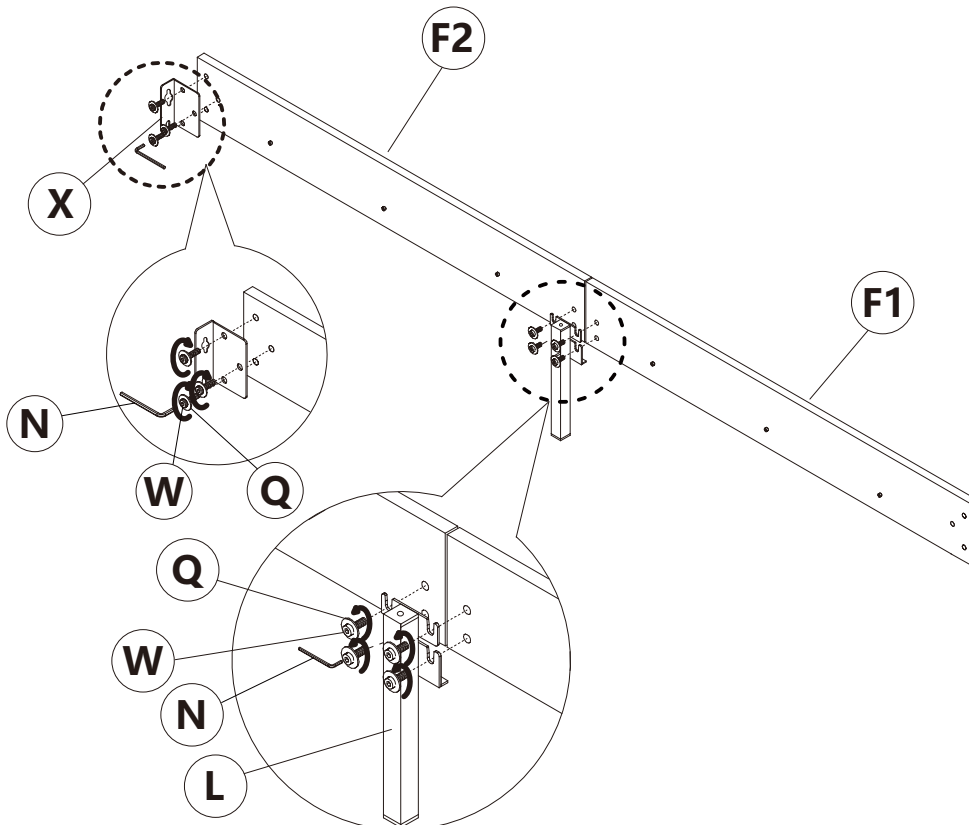- 6** Same as Step 5




X		1pc
100x2 mm		
W		7pcs
M8x14 mm		
Q		7pcs
φ8x18x1.5 mm		
N		1pc
M6		

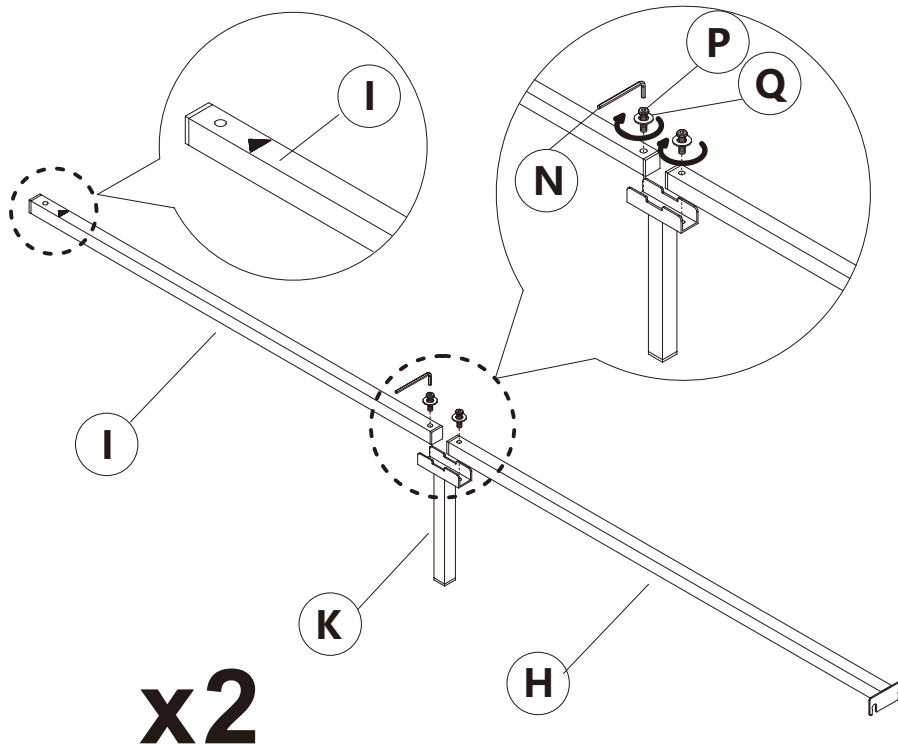- 7** Noted the direction of the arrow on the middle cross beam is pointing to the front.




P	M8x35 mm		4pcs
Q	φ8x18x1.5 mm		4pcs
N	M6		1pc

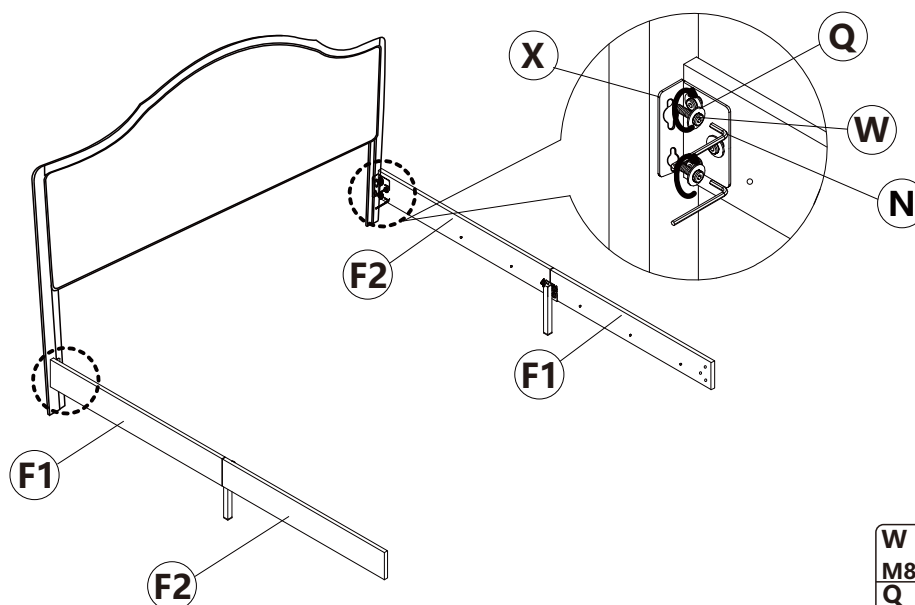- 8** Screw in screw W to about 50%, then hang the bracket on and tighten screw W.




W	M8x14 mm		4pcs
Q	φ8x18x1.5 mm		4pcs
N	M6		1pc

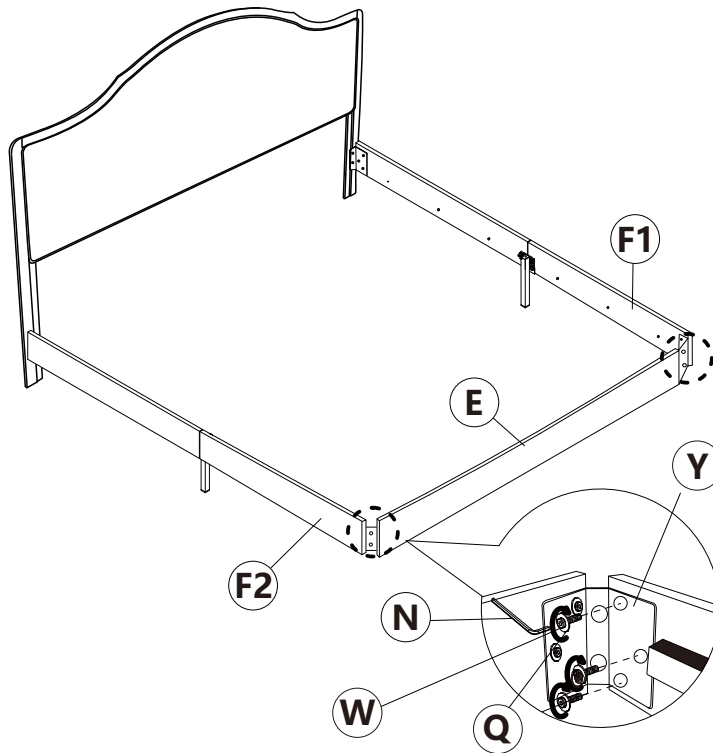9 Attach footboard E to side panel F1 and F2 using connector Y and screw W.




W		6pcs
M8x14 mm		
Q		6pcs
φ8x18x1.5 mm		
N		1pc
M6		

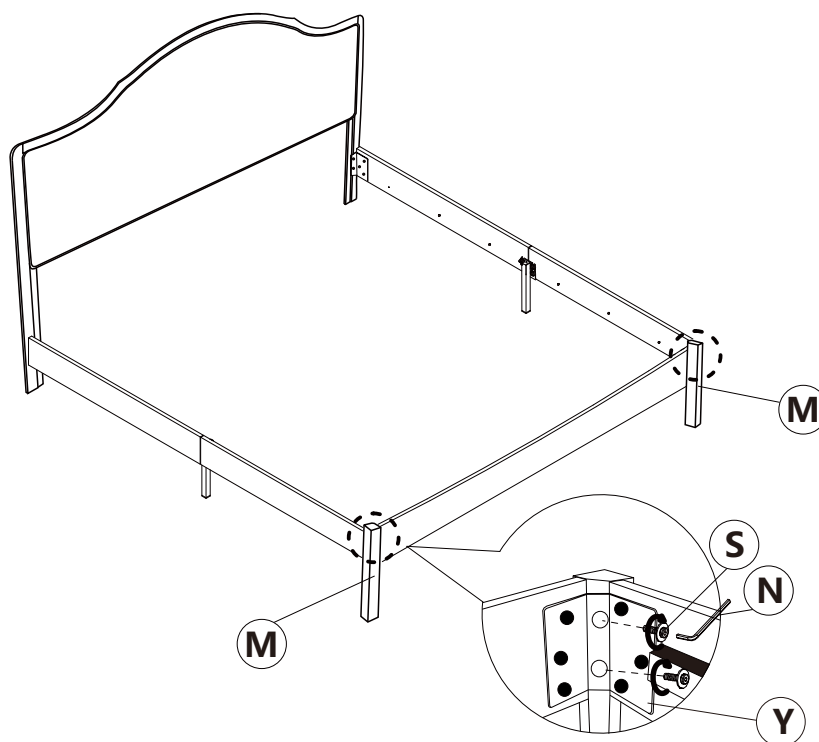10




S		4pcs
M8x25 mm		
Q		14pcs
φ8x18x1.5 mm		
N		1pc
M6		

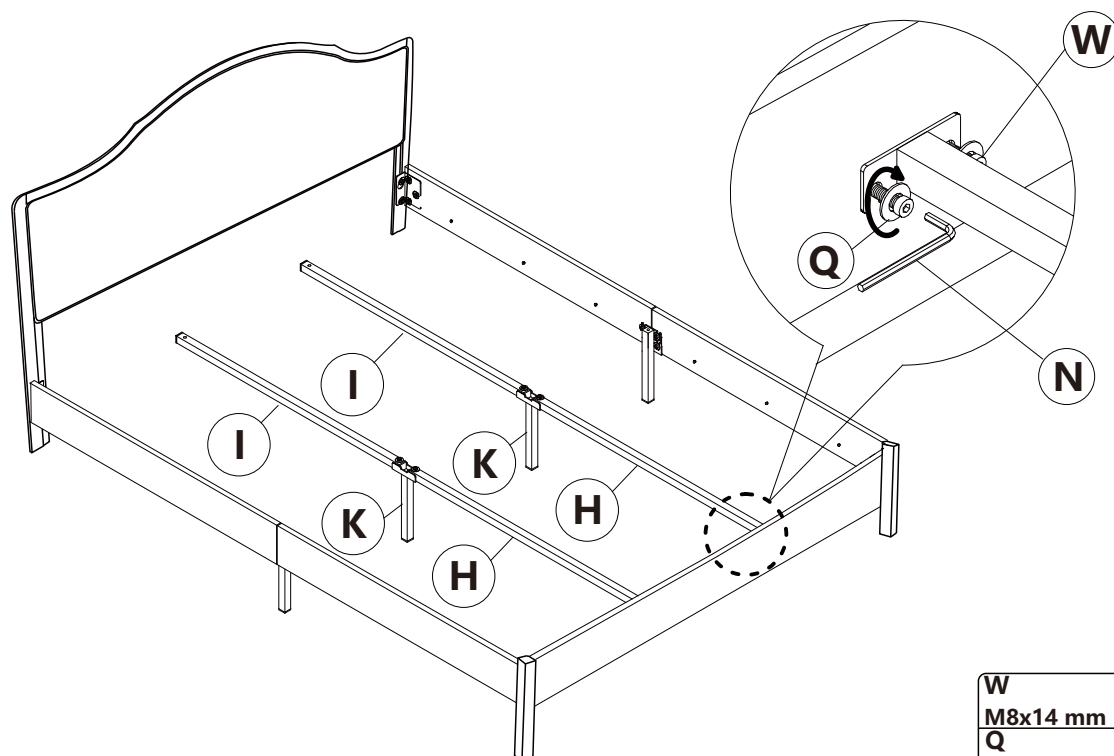11



W		4pcs
M8x14 mm		
Q		4pcs
φ8x18x1.5 mm		
N		1pc
M6		

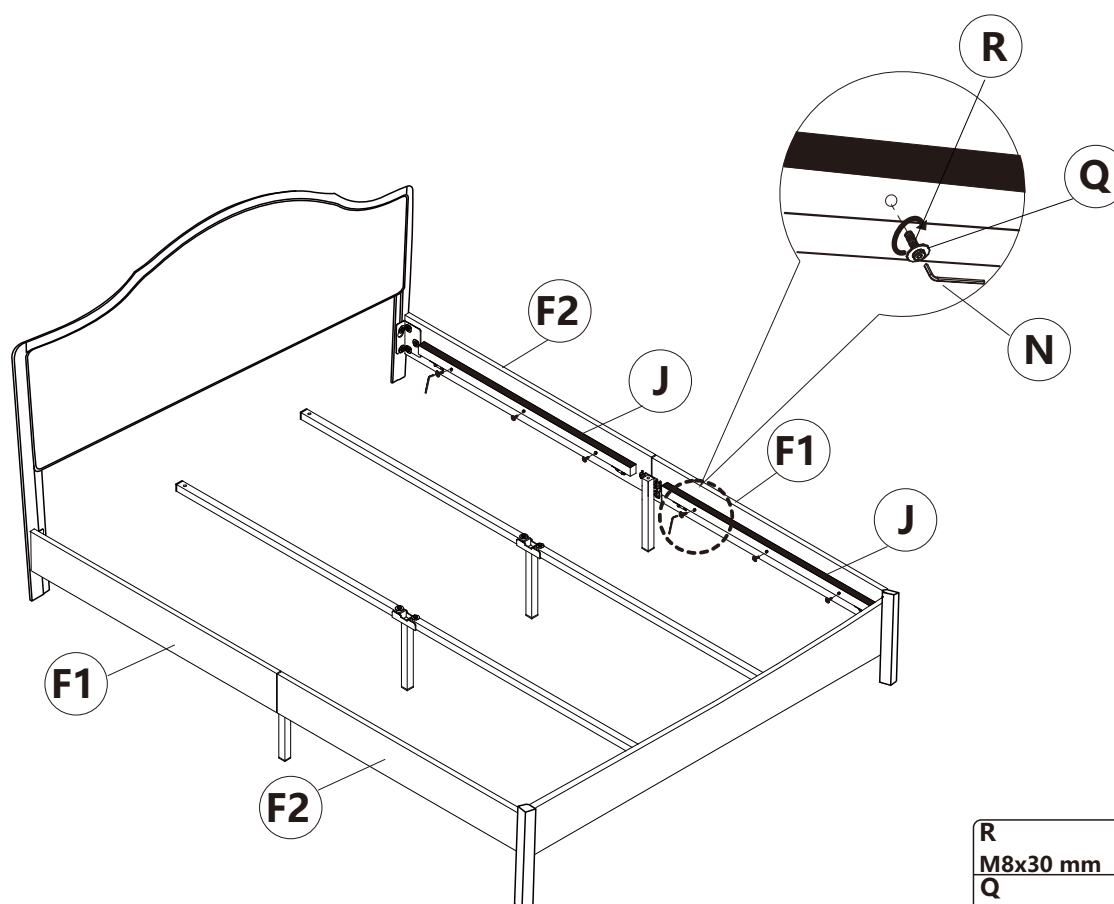
12



R		12pcs
M8x30 mm		
Q		12pcs
φ8x18x1.5 mm		
N		1pc
M6		


ASSEMBLY INSTRUCTIONS

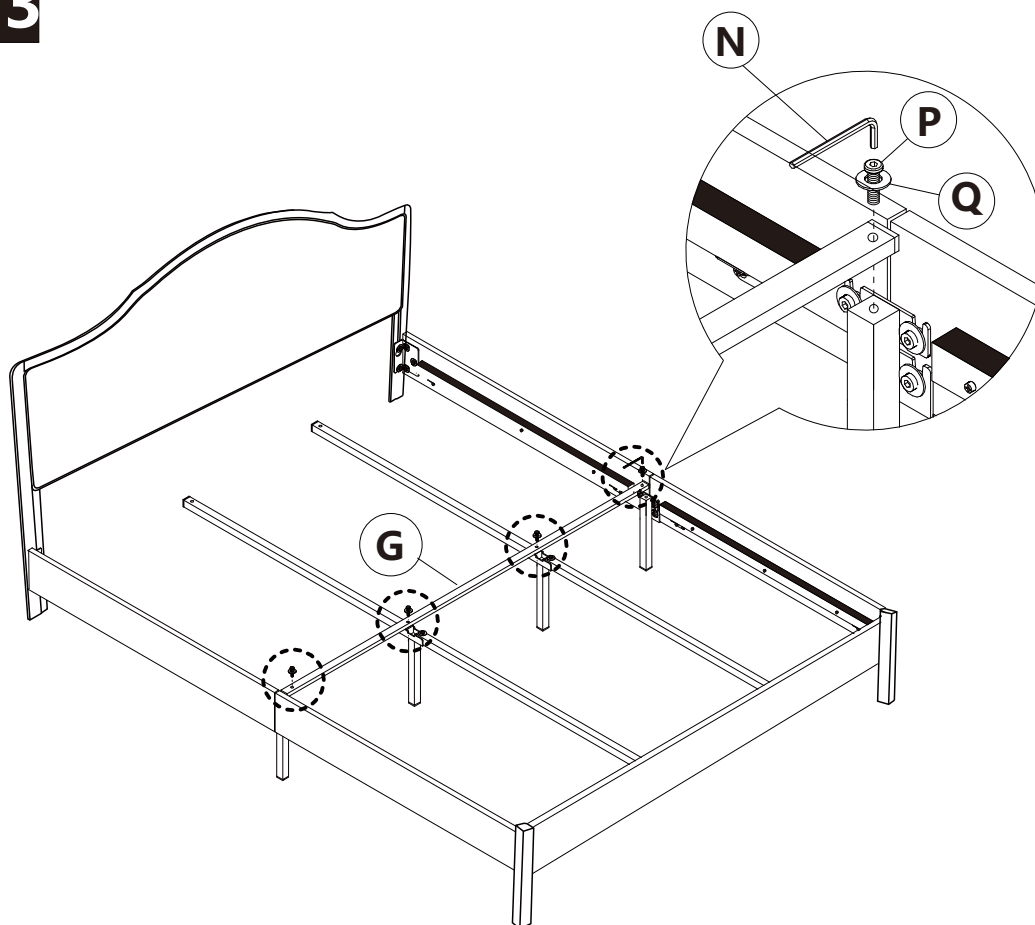13



P	M8x35 mm		4pcs
Q	φ8x18x1.5 mm		4pcs
N	M6		1pc

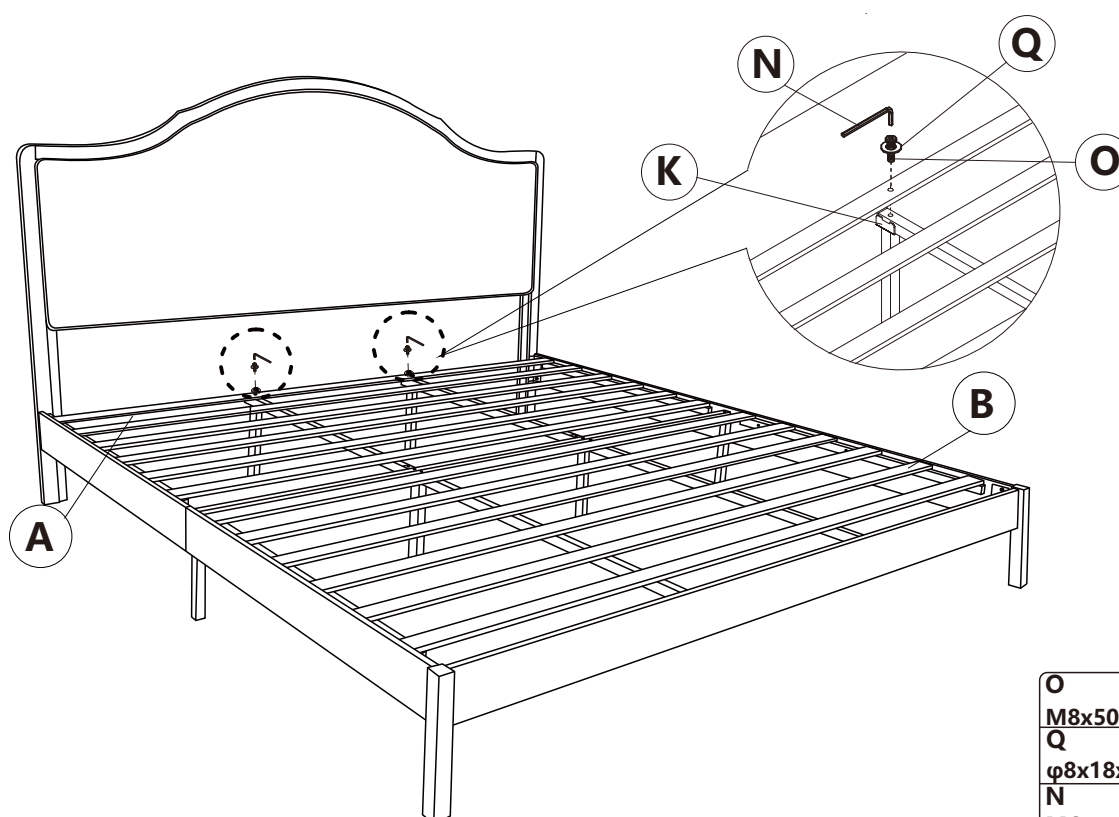14




O	M8x50 mm		2pcs
Q	φ8x18x1.5 mm		2pcs
N	M6		1pc

15



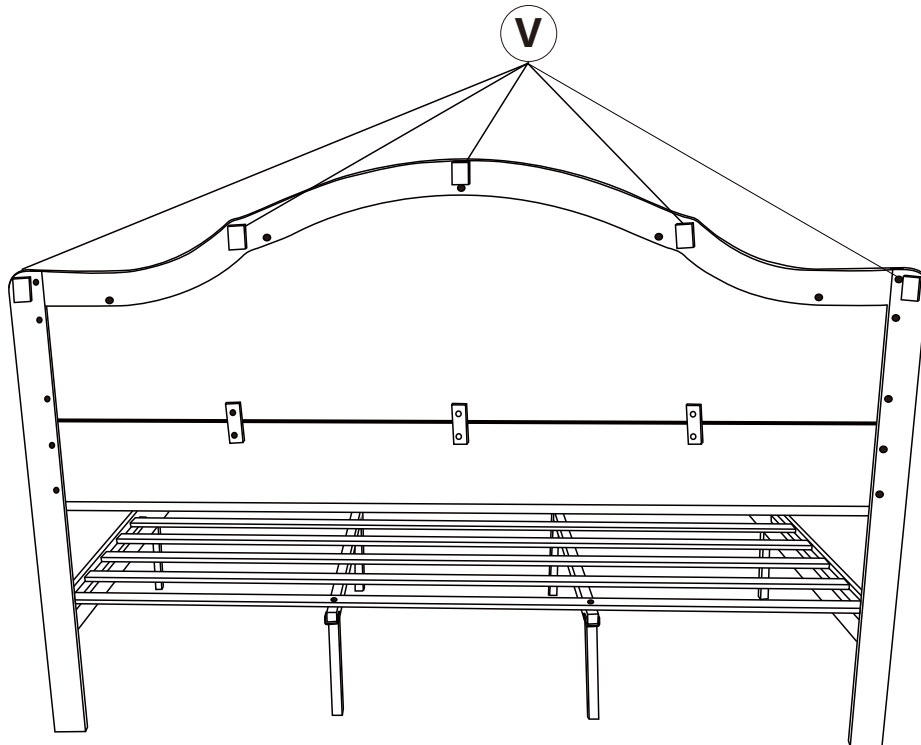16 Stick **V** on the back to avoid noise.



Installation Complete