




Assembly Instruction

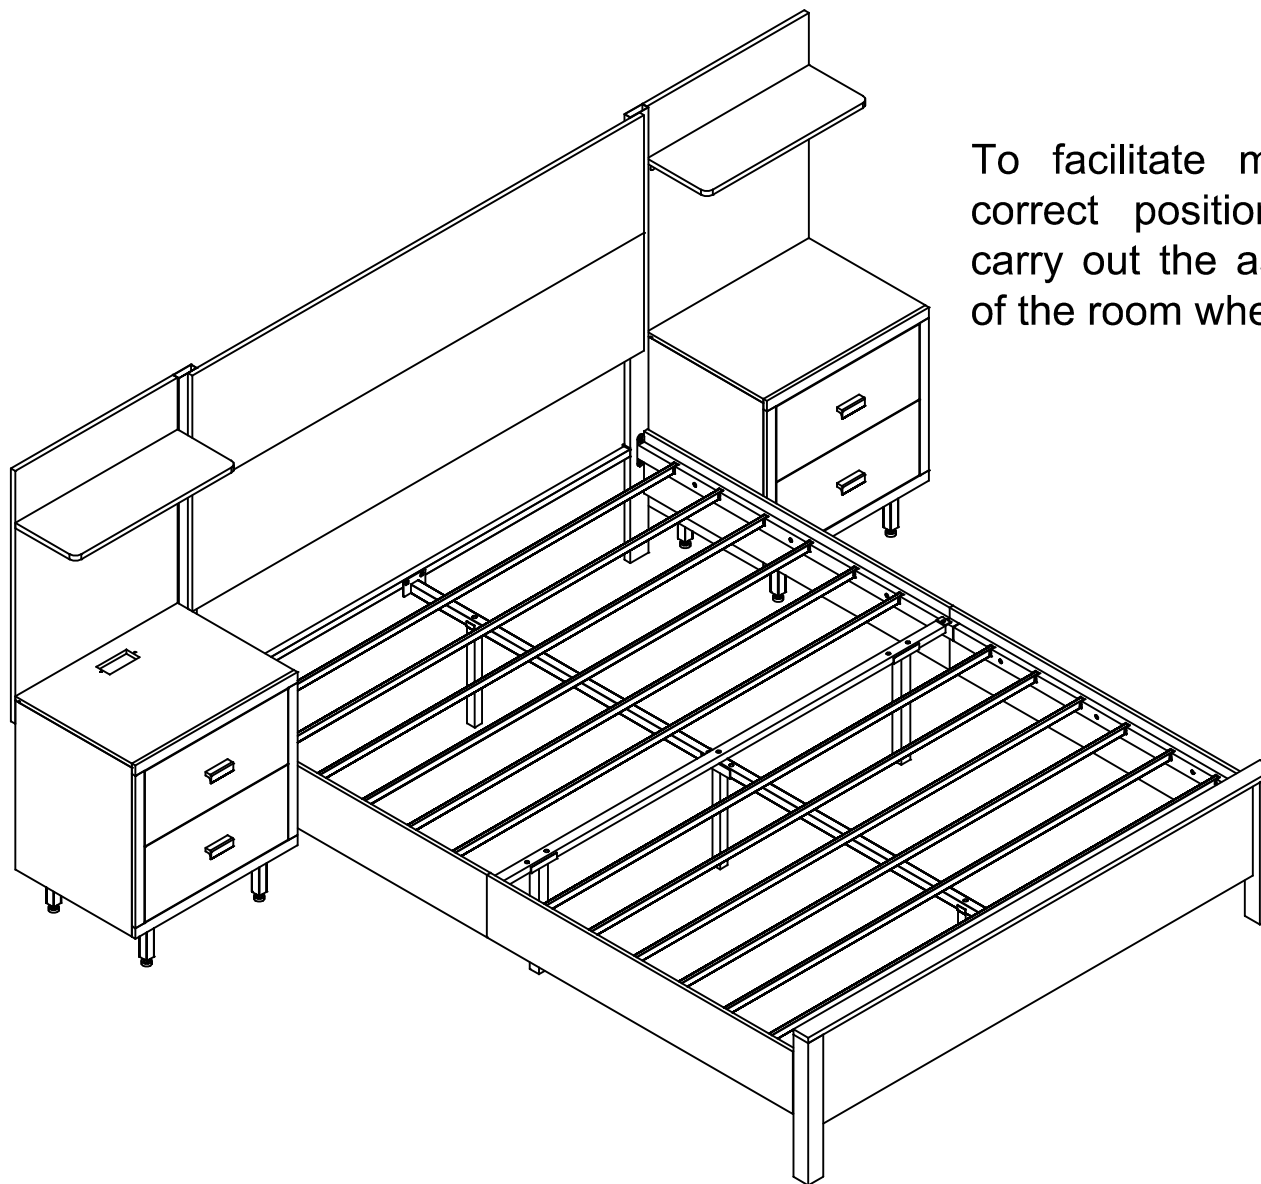

To facilitate moving this product to the correct position after installation, please carry out the assembly steps near the wall of the room where the product will be used.


BPB-010 Q/F

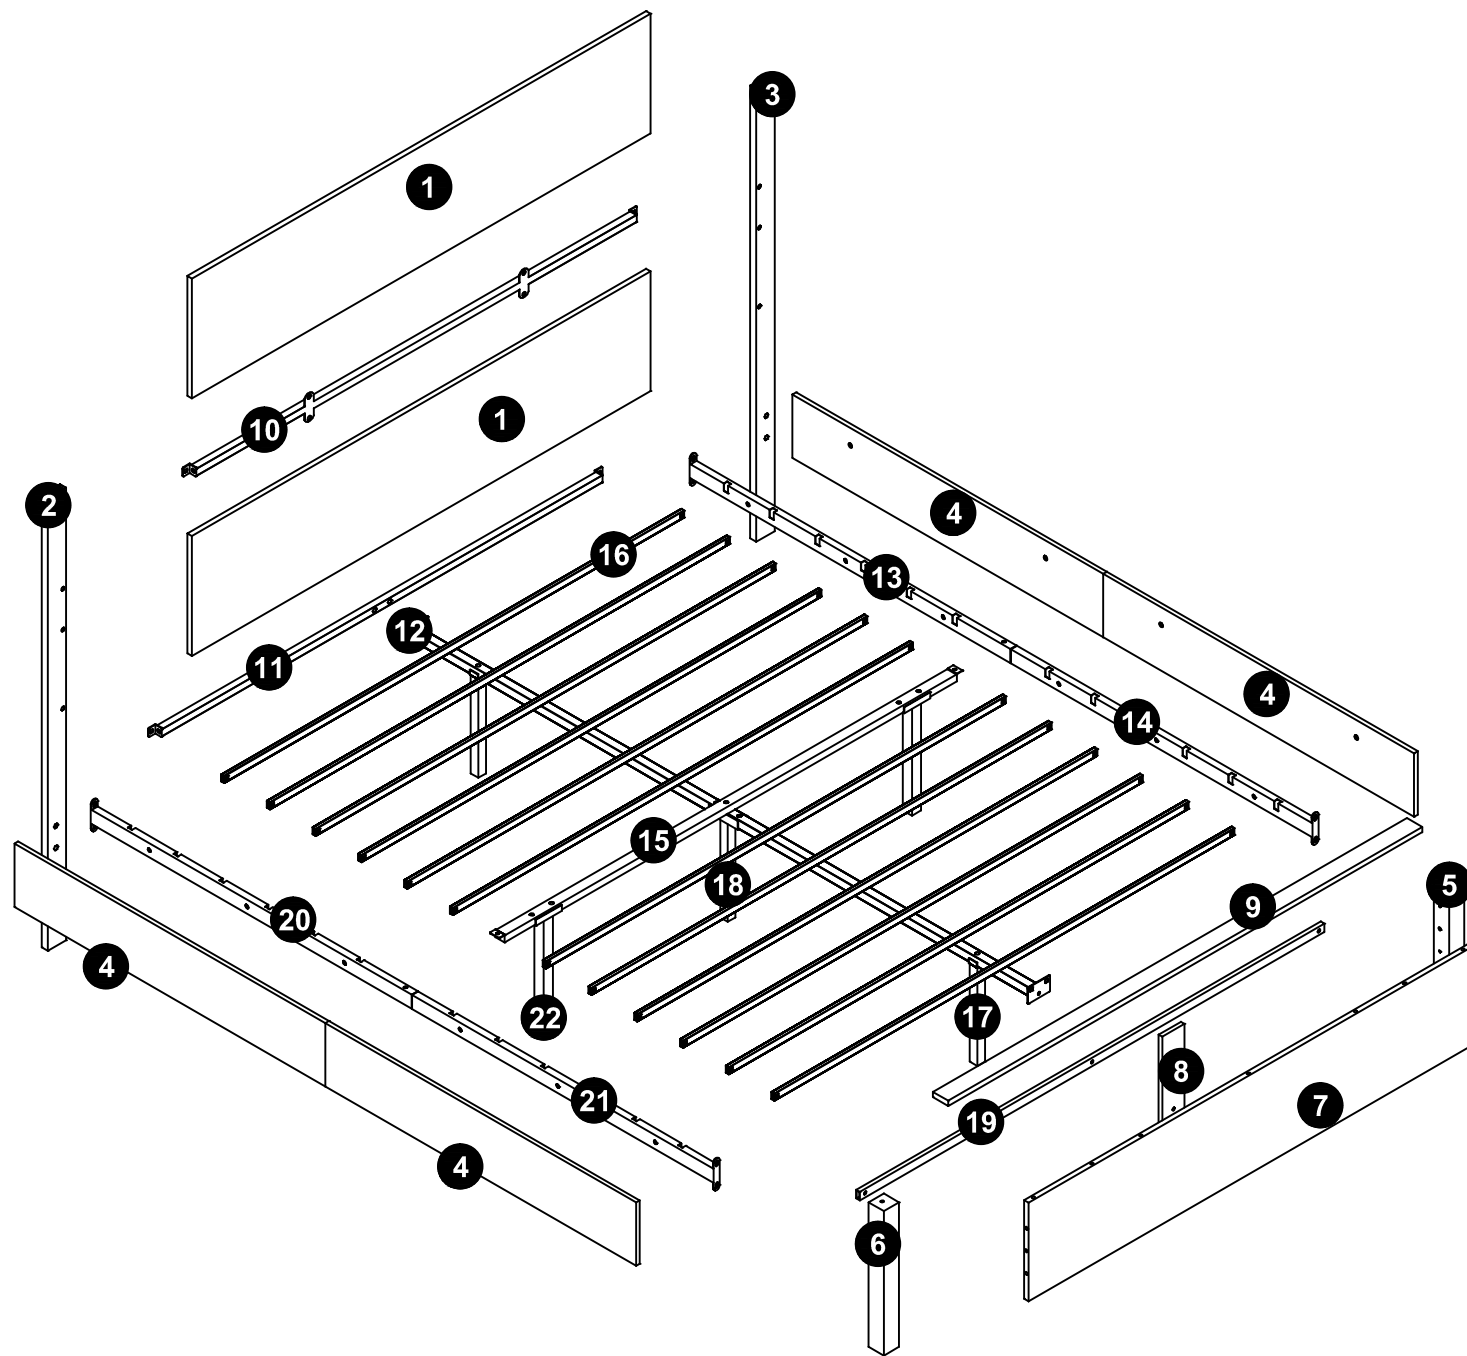

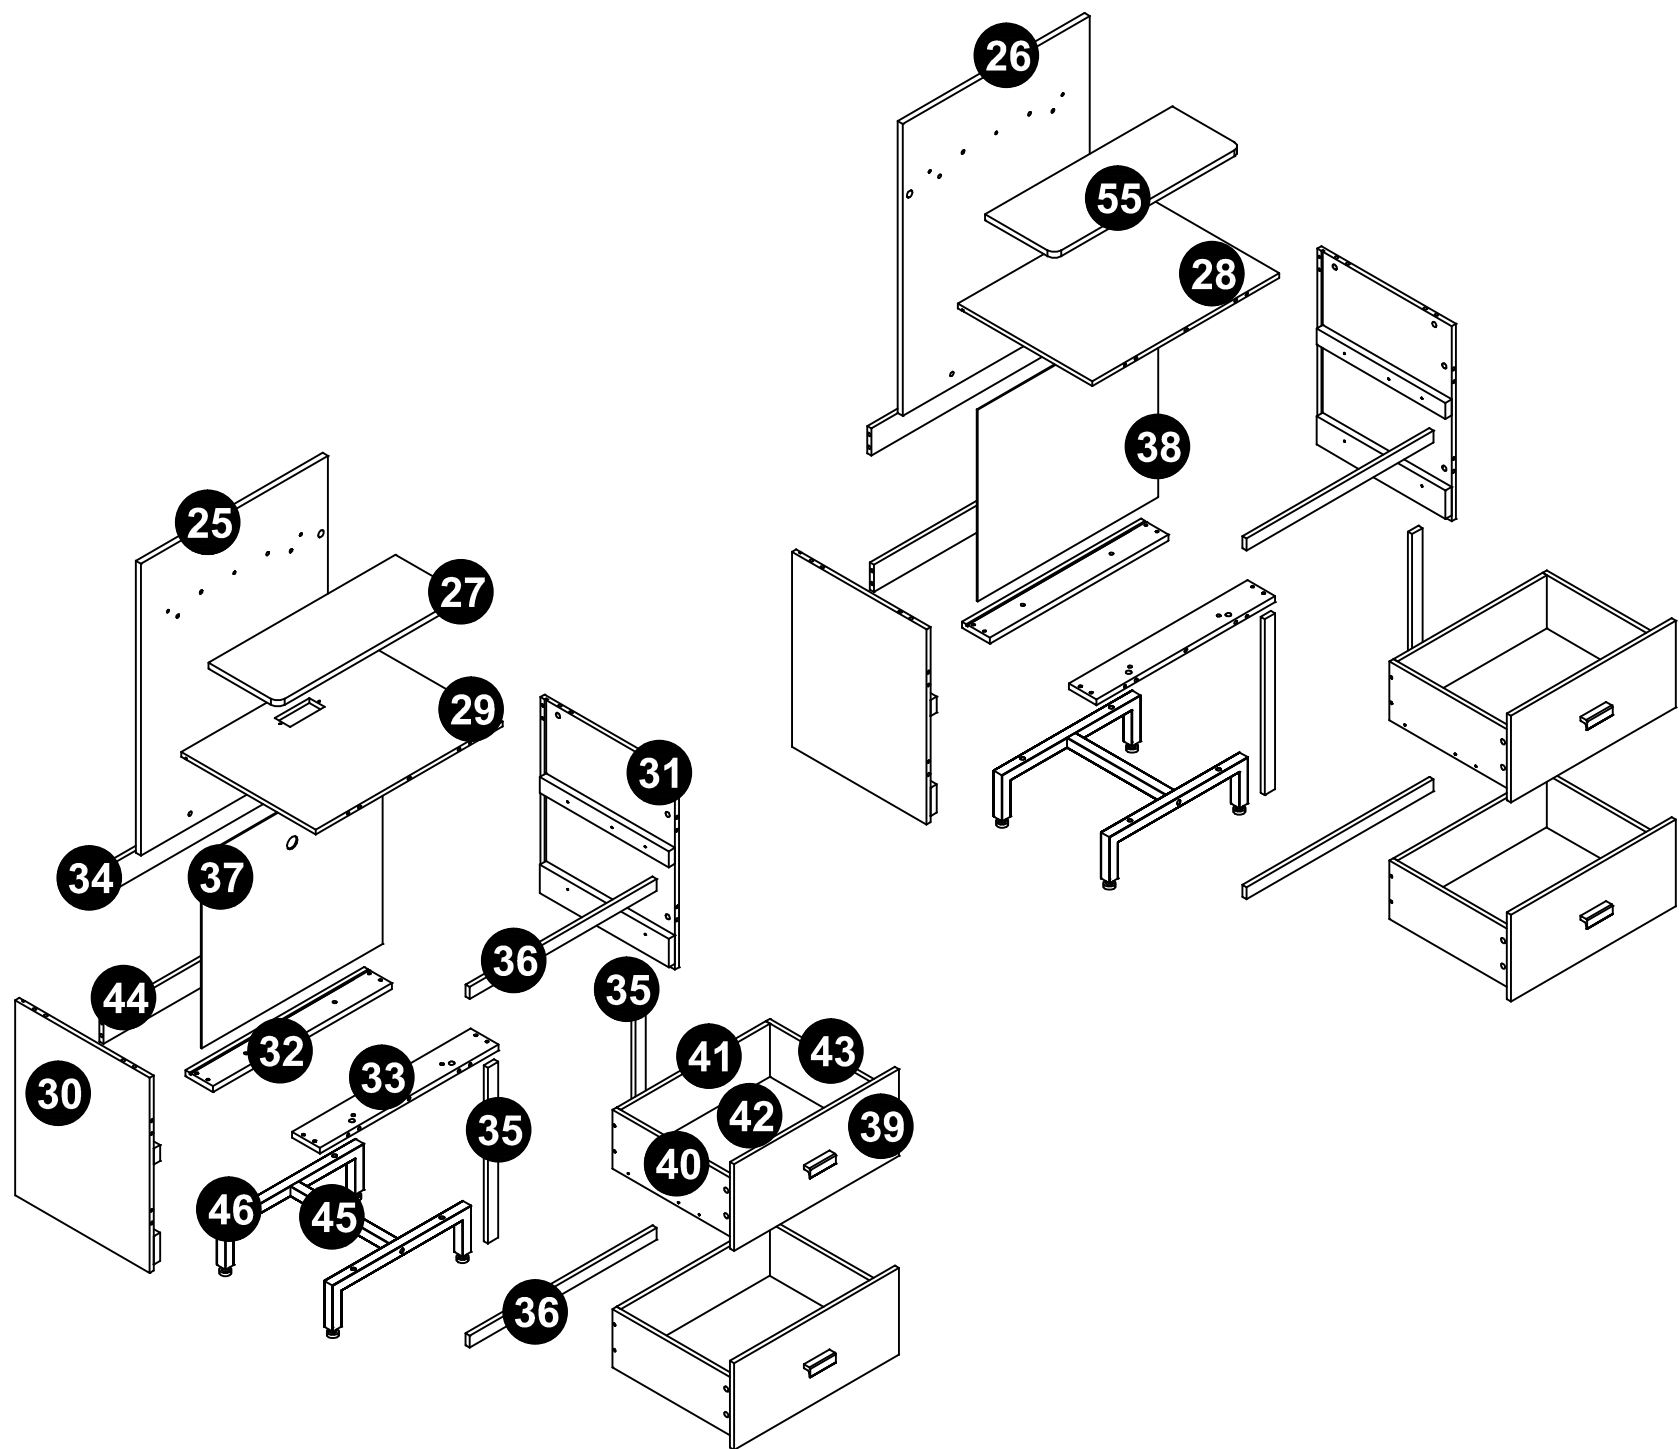

Assembly Instruction

Hardware parts of box 1




M6*28

A X 14




M8*10

B X 22




M8*20

C X 14




M8*25

D X 4




M8*30

E X 9




M8*35

F X 10




M8*50

G X 2




M8*55


H X 3




I X 3



J X 70




K X 70



Ø8

L X 40



M X 1




M6

N X 1



M8

O X 1

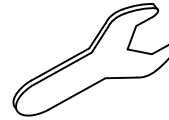

P X 1




M6*10

Q X 9




M6*25

R X 5




M6*45

S X 9



M8*45

T X 5




M5*35

U X 42



M3*12

V X 54




W X 9



40*40mm
Mute sticker

X X 2




M5

Y X 1




Mute sticker

Z X 5




100*20mm
Magic tape

52 X 5

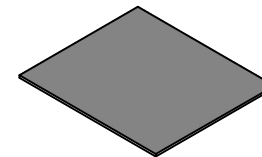

100*100mm
Magic tape


53 X 3

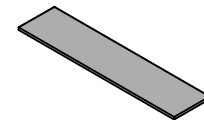

100*40mm
Magic tape

54 X 5





















Ruler-Use this ruler to help correctly identify the screws.



The length of the screw is measured from the rod part excluding the screw cap (30mm screw shown).





















Assembly Instruction

The box 2

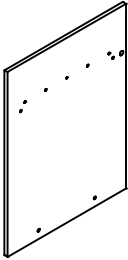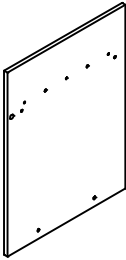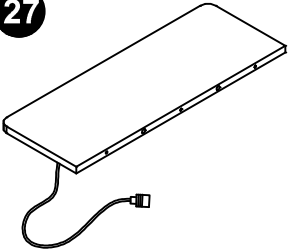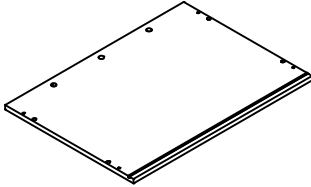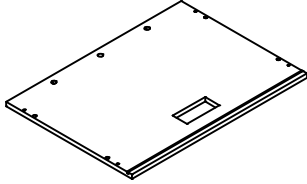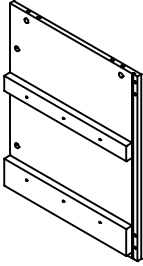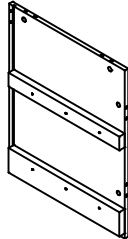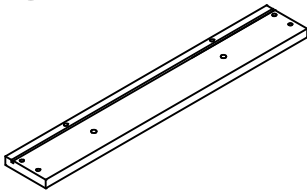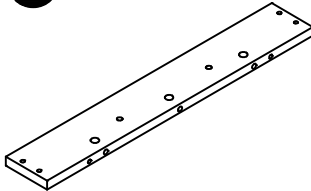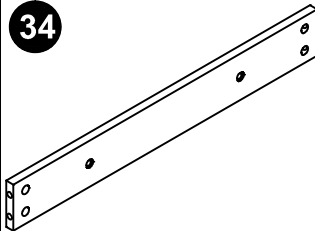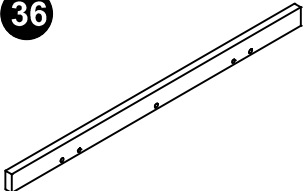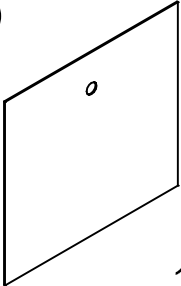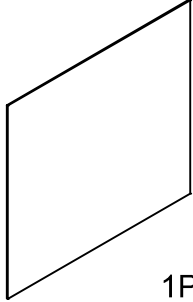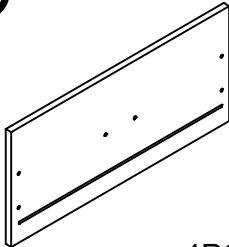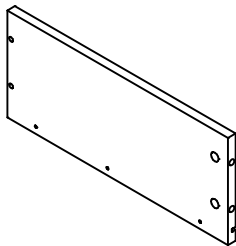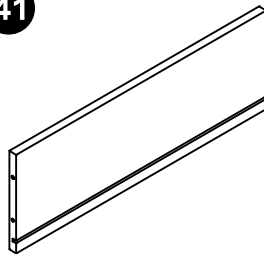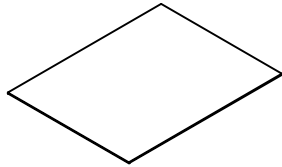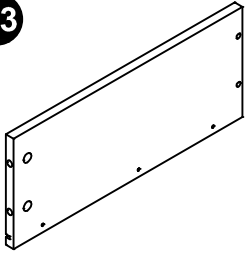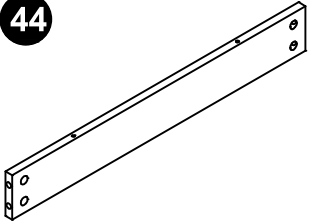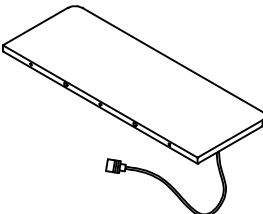25  1PC	26  1PC	27  1PC	28  1PC	29  1PC	30  2PCS
31  2PCS	32  2PCS	33  2PCS	34  2PCS	35  4PCS	36  4PCS
37  1PC	38  1PC	39  4PCS	40  4PCS	41  4PCS	42  4PCS
43  4PCS	44  2PCS	55  1PC			








Assembly Instruction

The box 1

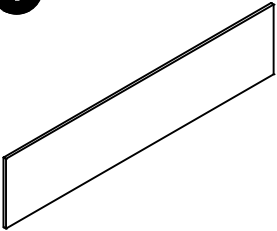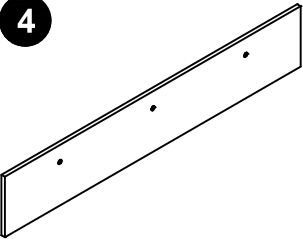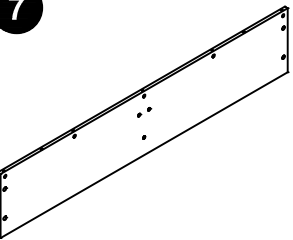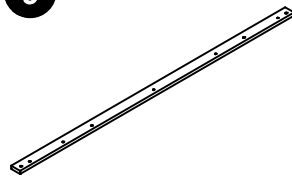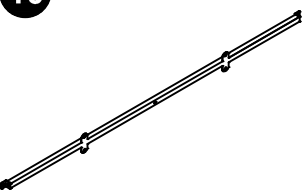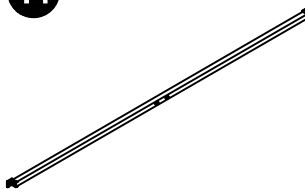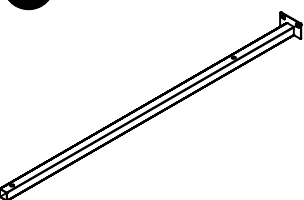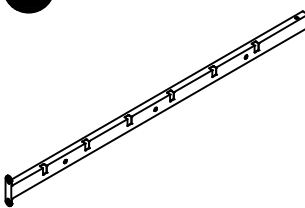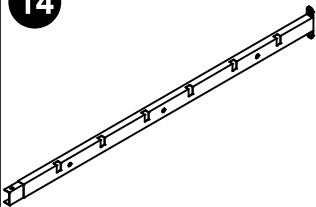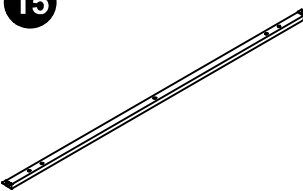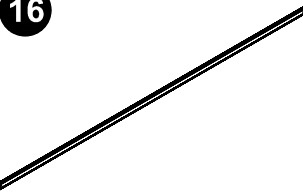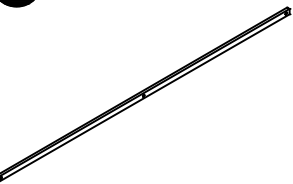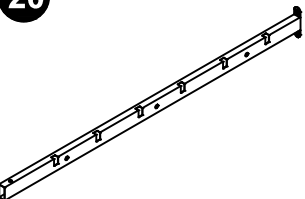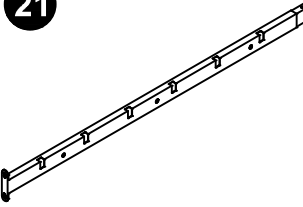1  2PCS	2  1PC	3  1PC	4  4PCS	5  1PC	6  1PC
7  1PC	8  1PC	9  1PC	10  1PC	11  1PC	12  2PCS
13  1PC	14  1PC	15  1PC	16  12PCS	17  2PCS	18  1PC
19  1PC	20  1PC	21  1PC	22  2PCS	23  3PCS	24  4PCS

Assembly Instruction


The box 1

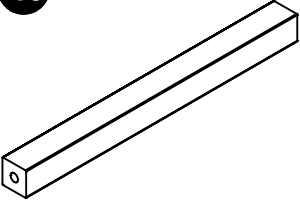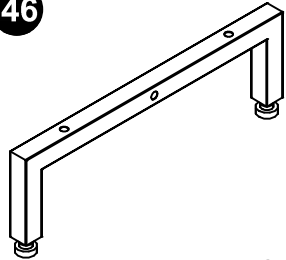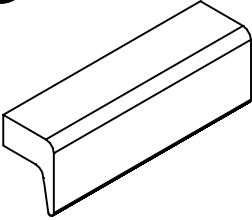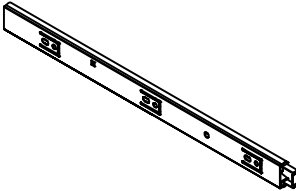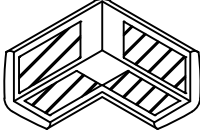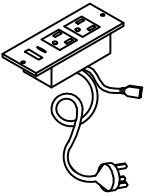45  2PCS	46  4PCS	47  4PCS	48  8PCS	49  6PCS	50  6PCS
51  1PC					

Assembly Instruction


step 1

Do not fully tighten the screws at the beginning. Wait until all the screws are inserted into their holes, then tighten them all

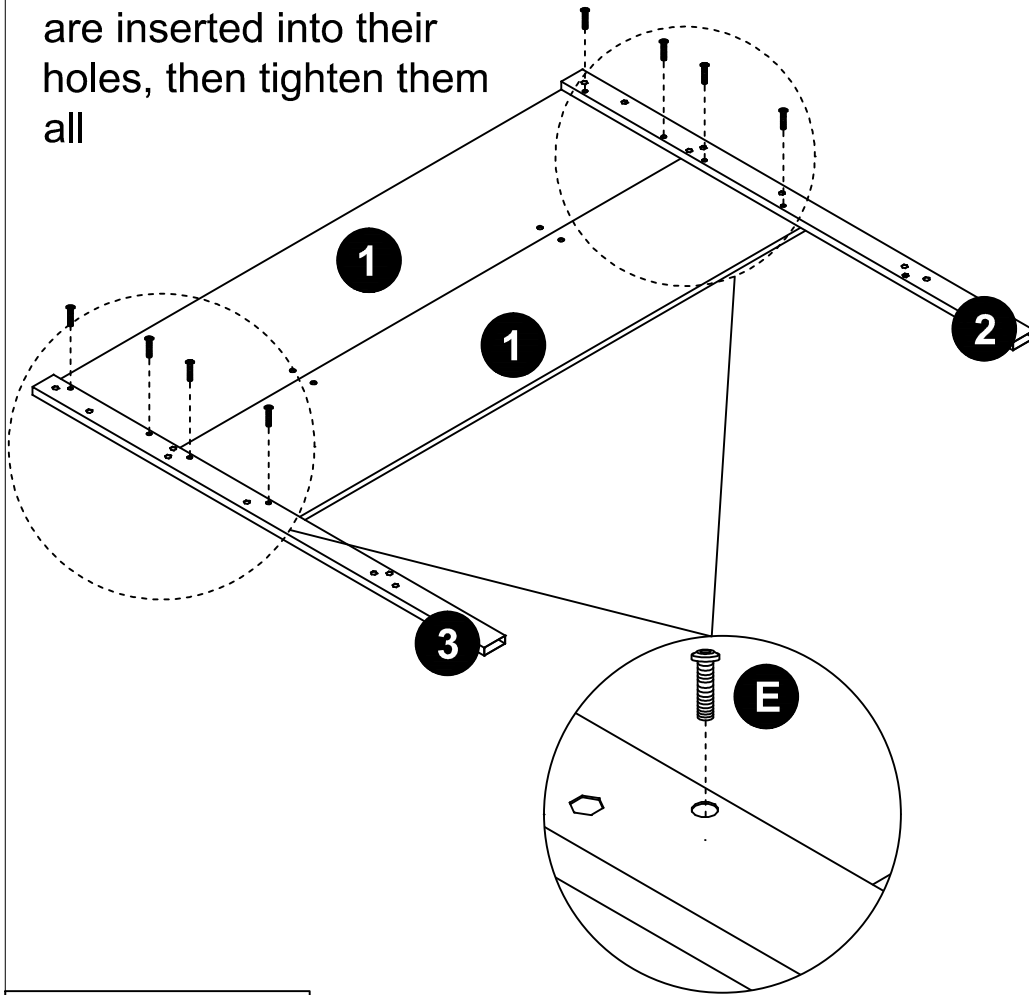

 **E** X 8
M8*30

step 2

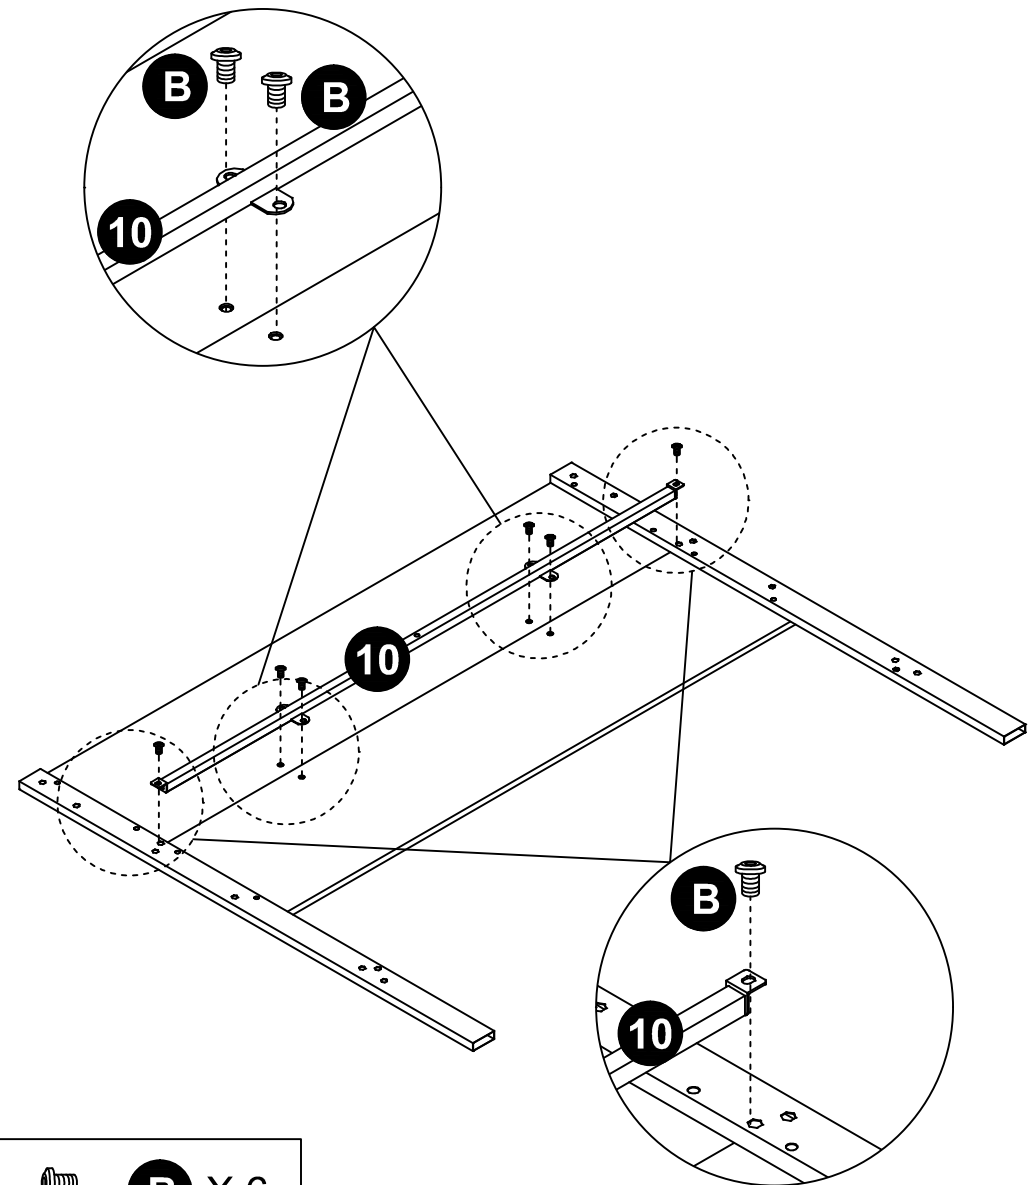


 **B** X 6
M8*10

Assembly Instruction


step 3

Please pay attention to the holes where part 23 is to be installed and tighten the screws manually

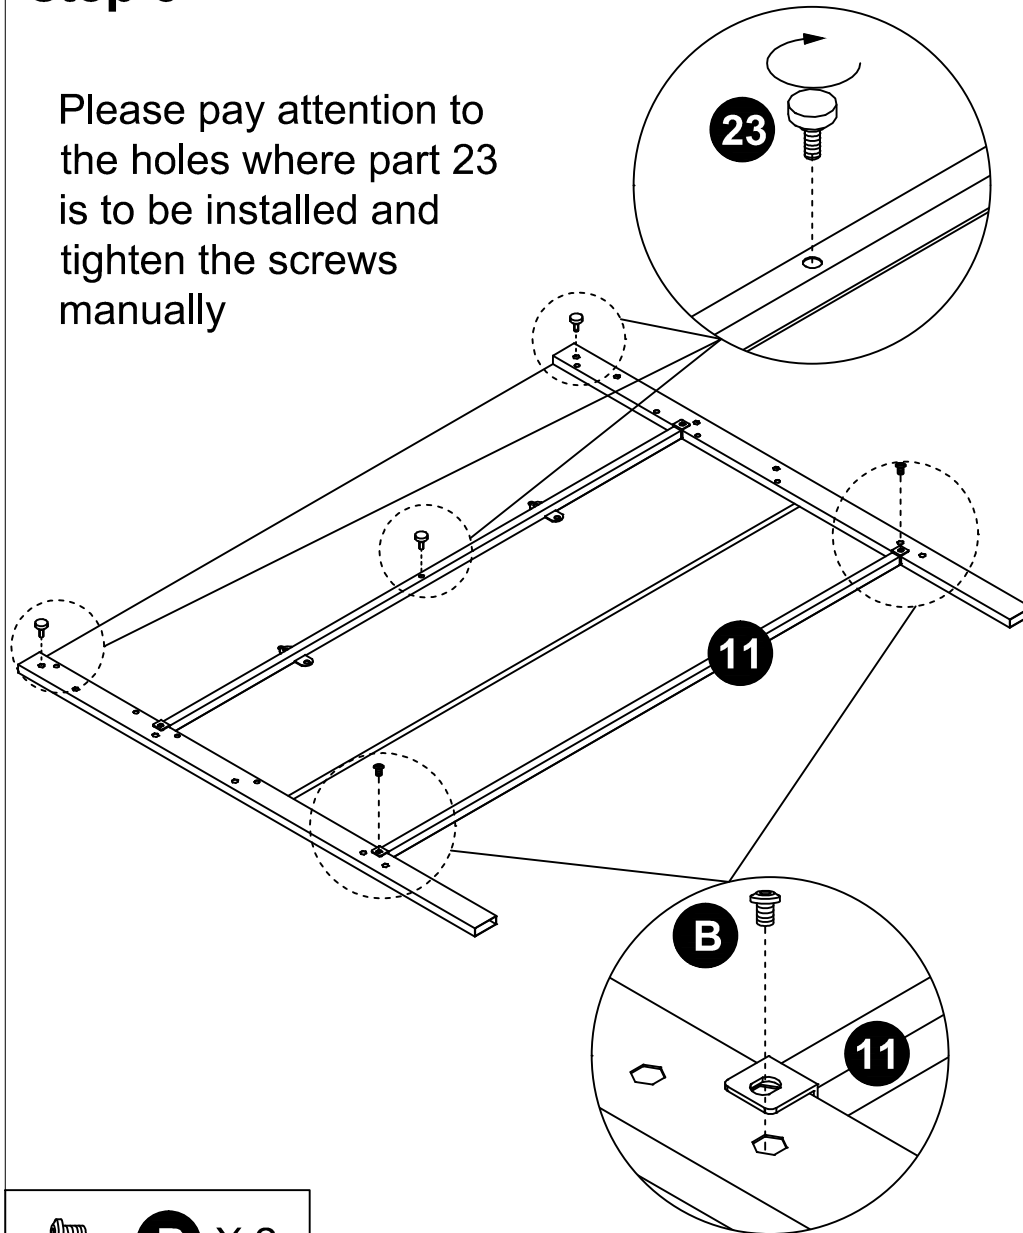

 **B** X 2
M8*10

step 4

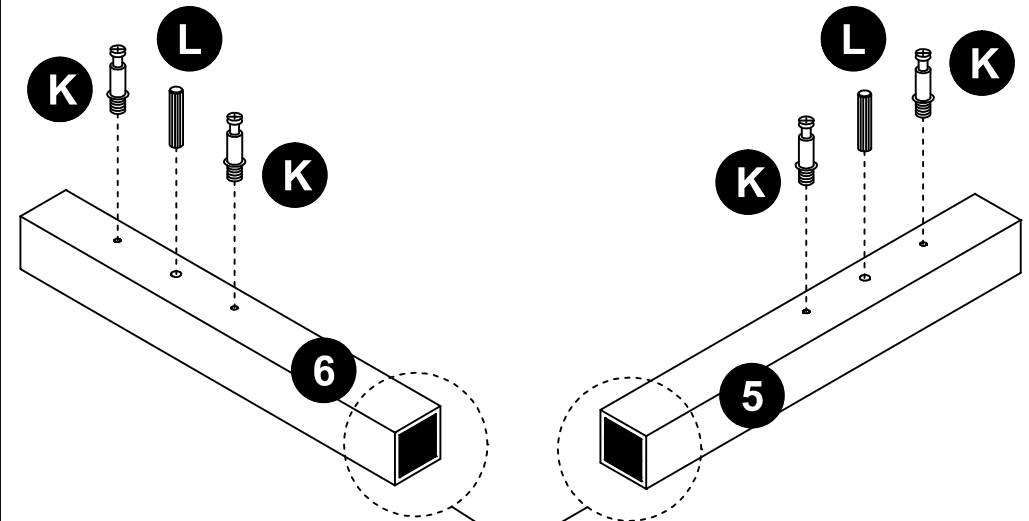

 **X** X 2
40*40mm
Mute sticker


 **K** X 4

 **L** X 2
Ø8


Pay attention to the orientation of parts 5 and 6, and then attach part X to the bottom of parts 5 and 6

Assembly Instruction

step 5

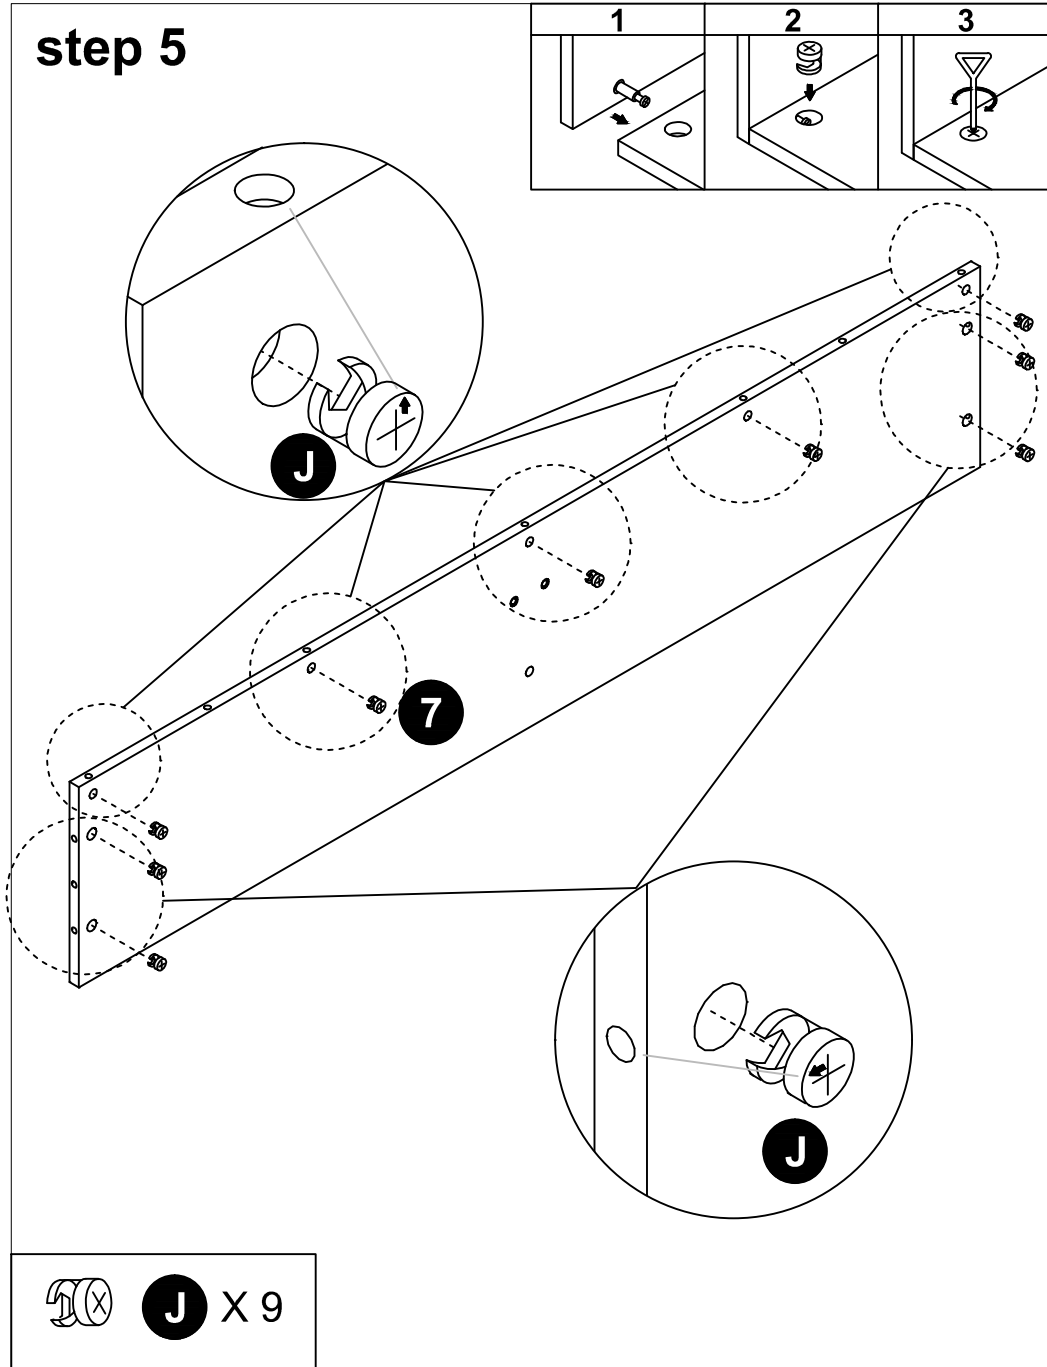



step 6

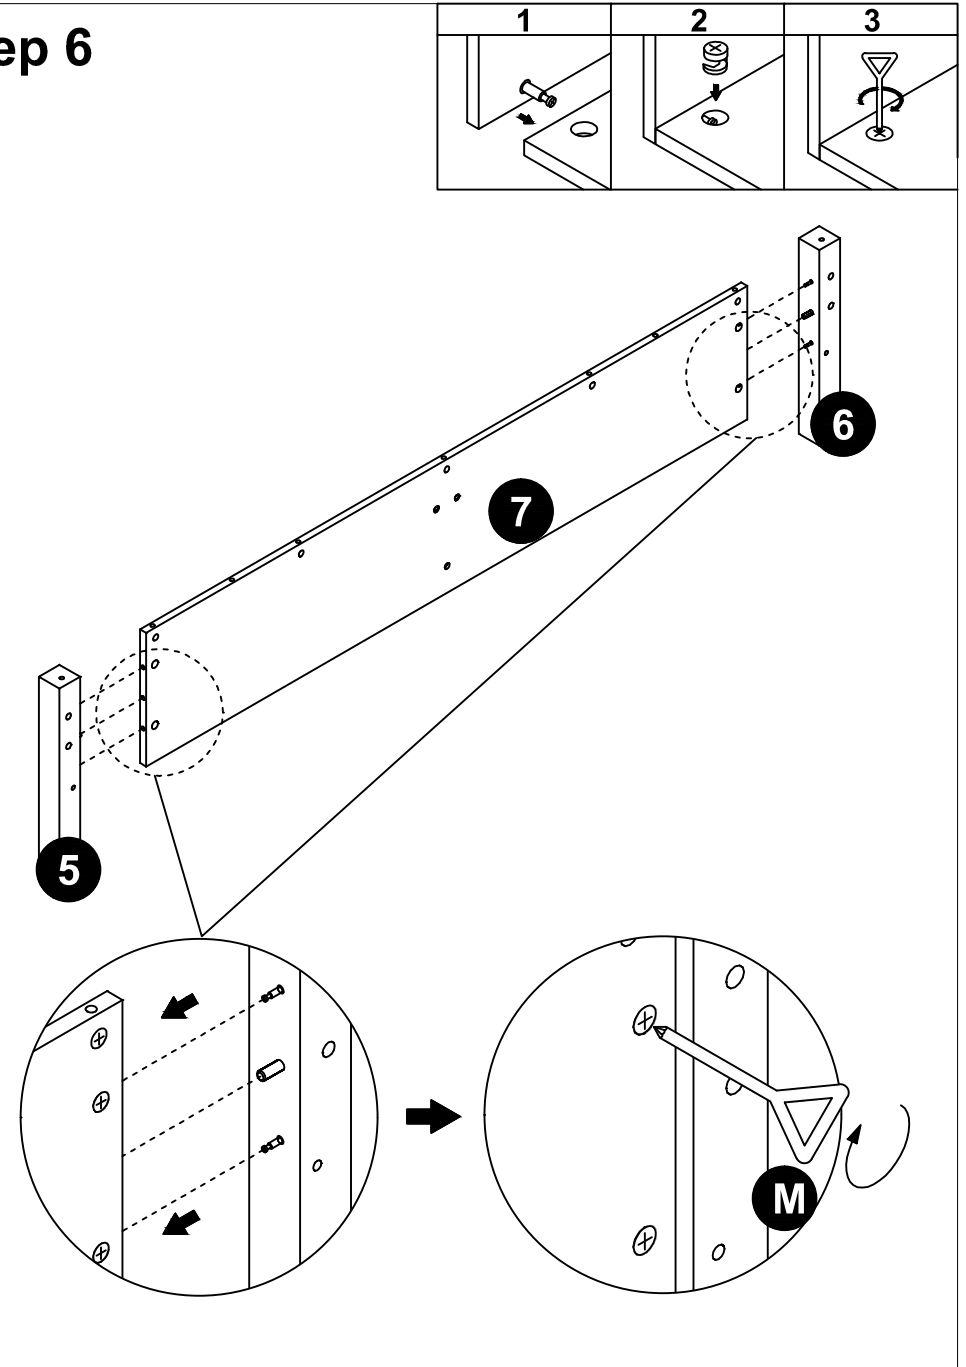

Assembly Instruction

step 7


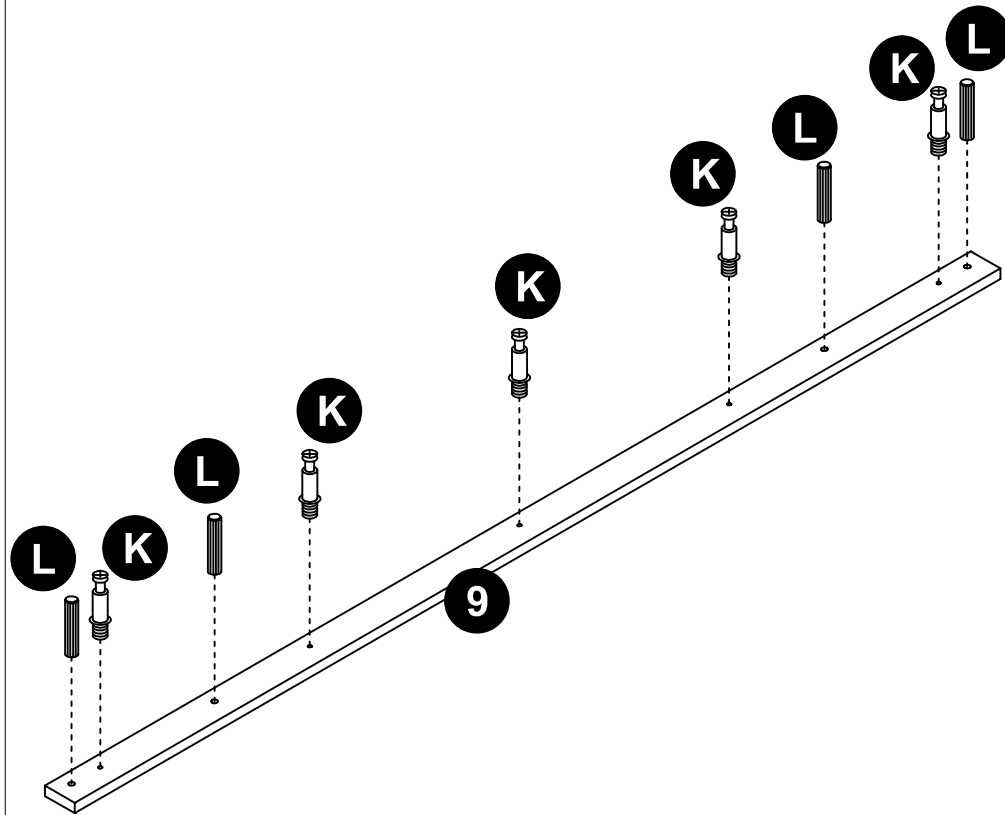


 **K** X 5

 **L** X 4
Ø8


step 8

Pay attention to the direction of part 9

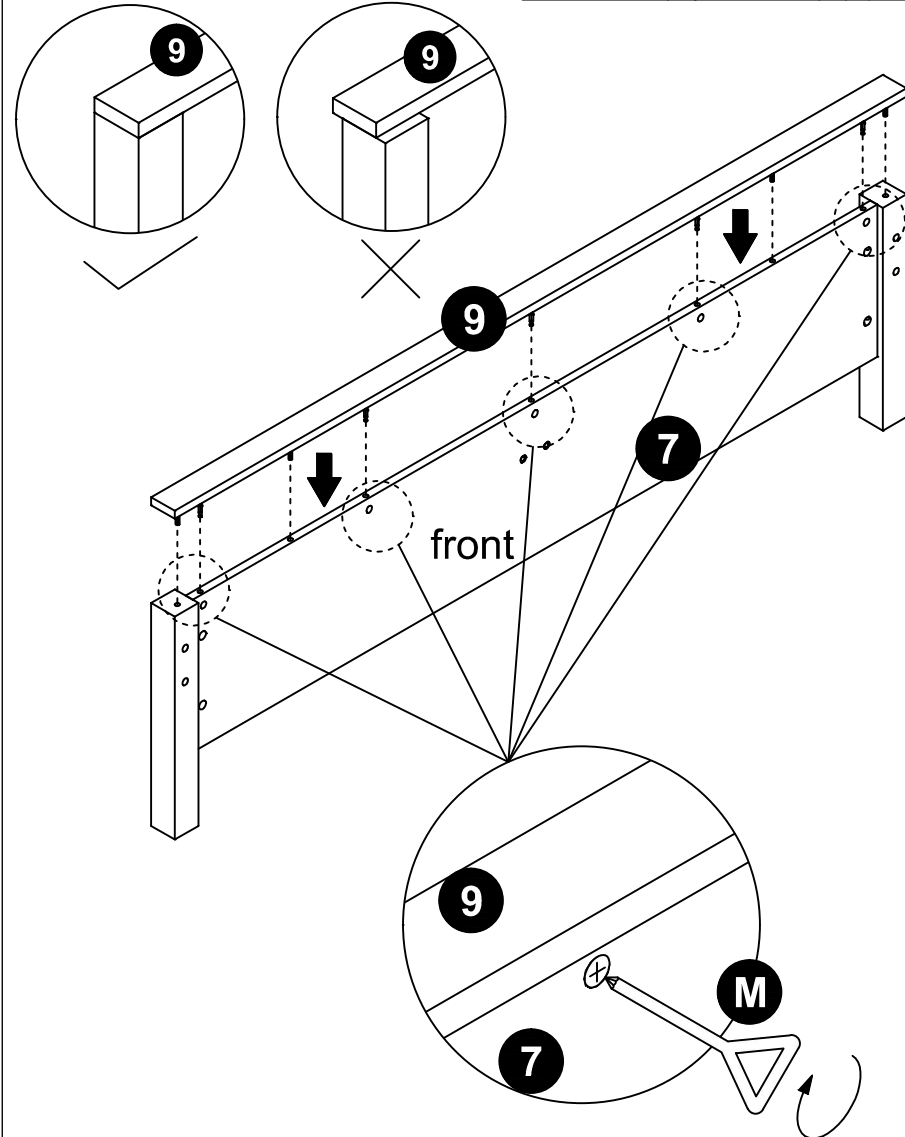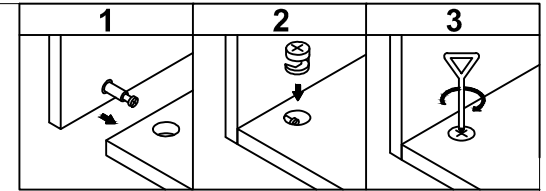


Assembly Instruction

step 9

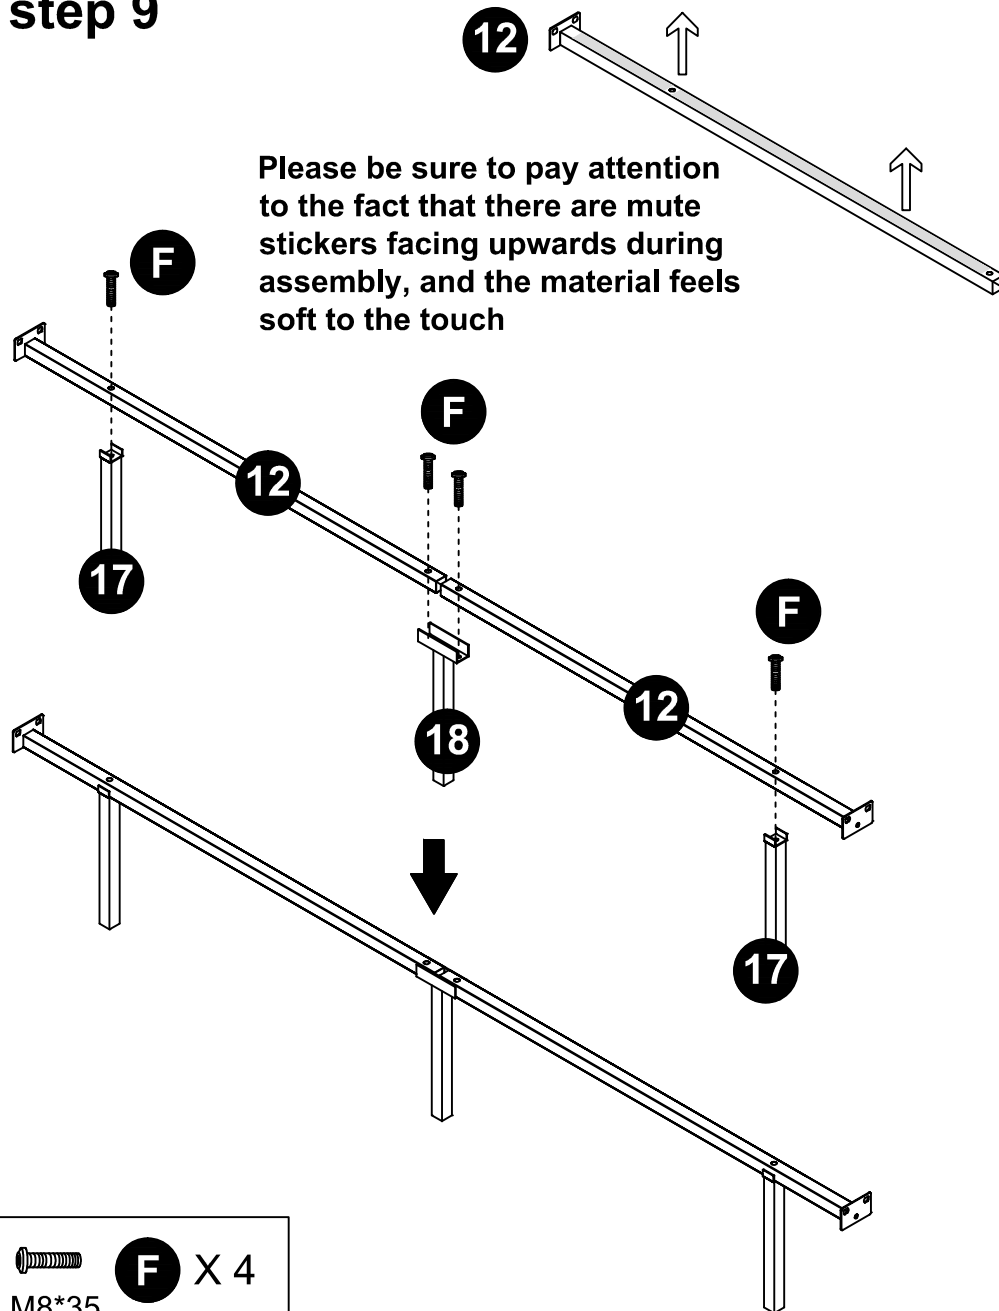

M8*35 **F** X 4


step 10

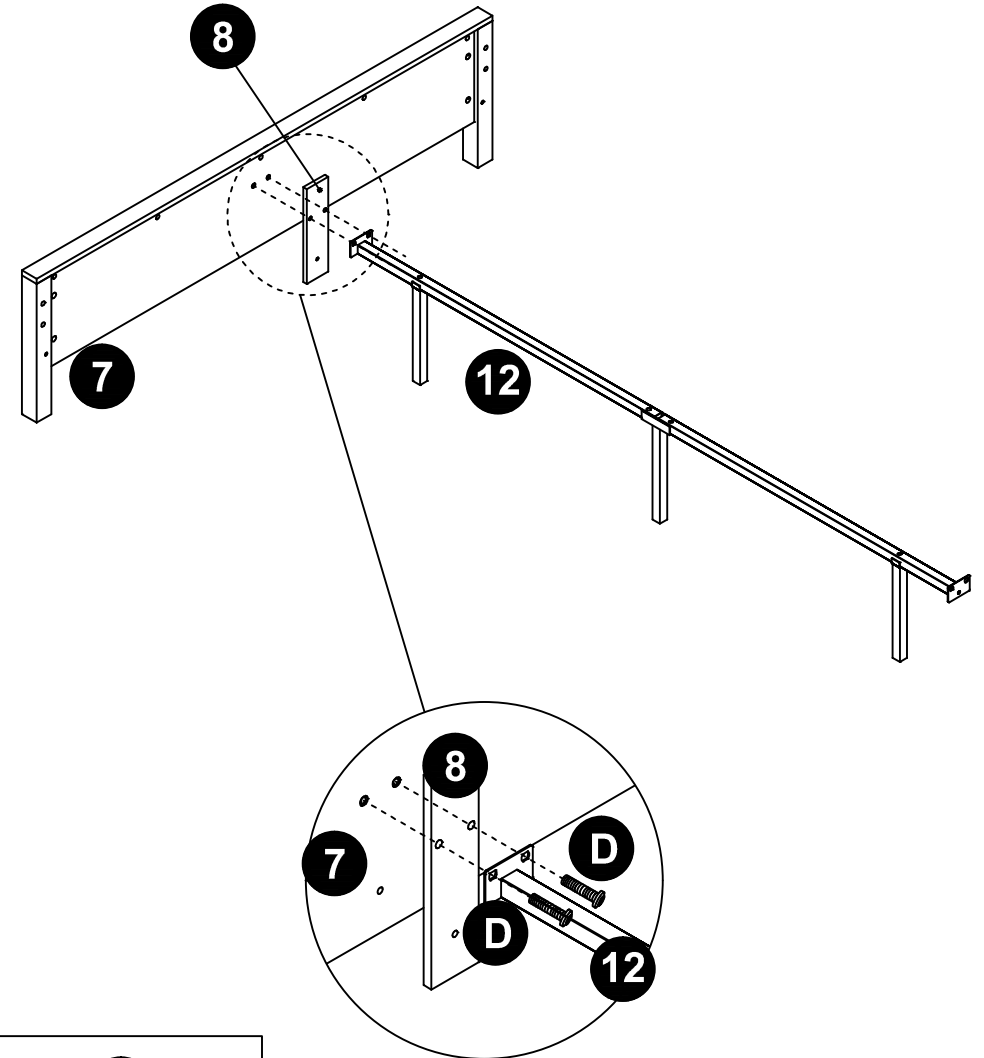

M8*25 **D** X 2

Assembly Instruction


step 11

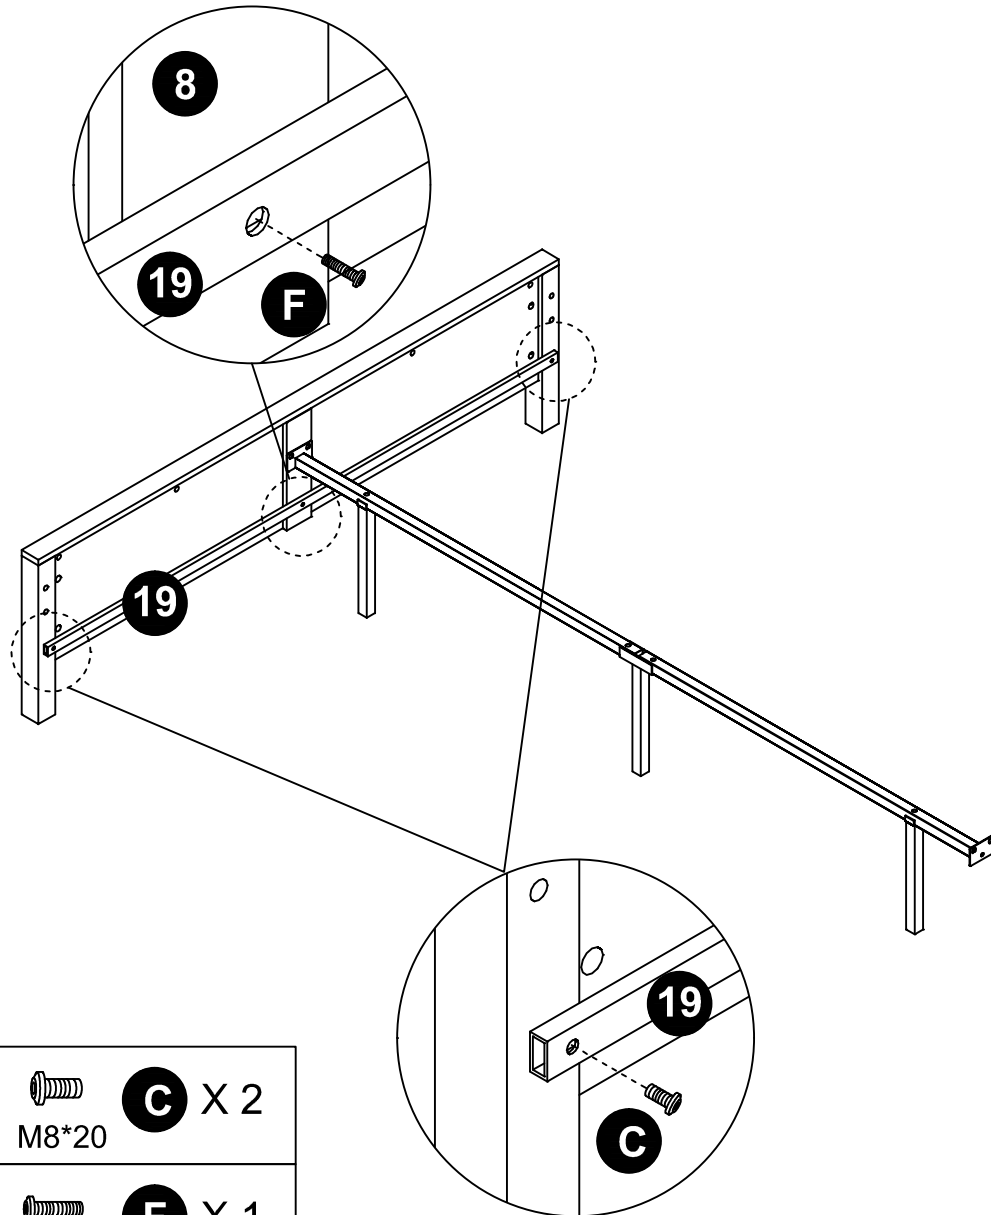

 **C** X 2
M8*20

 **F** X 1
M8*35


step 12

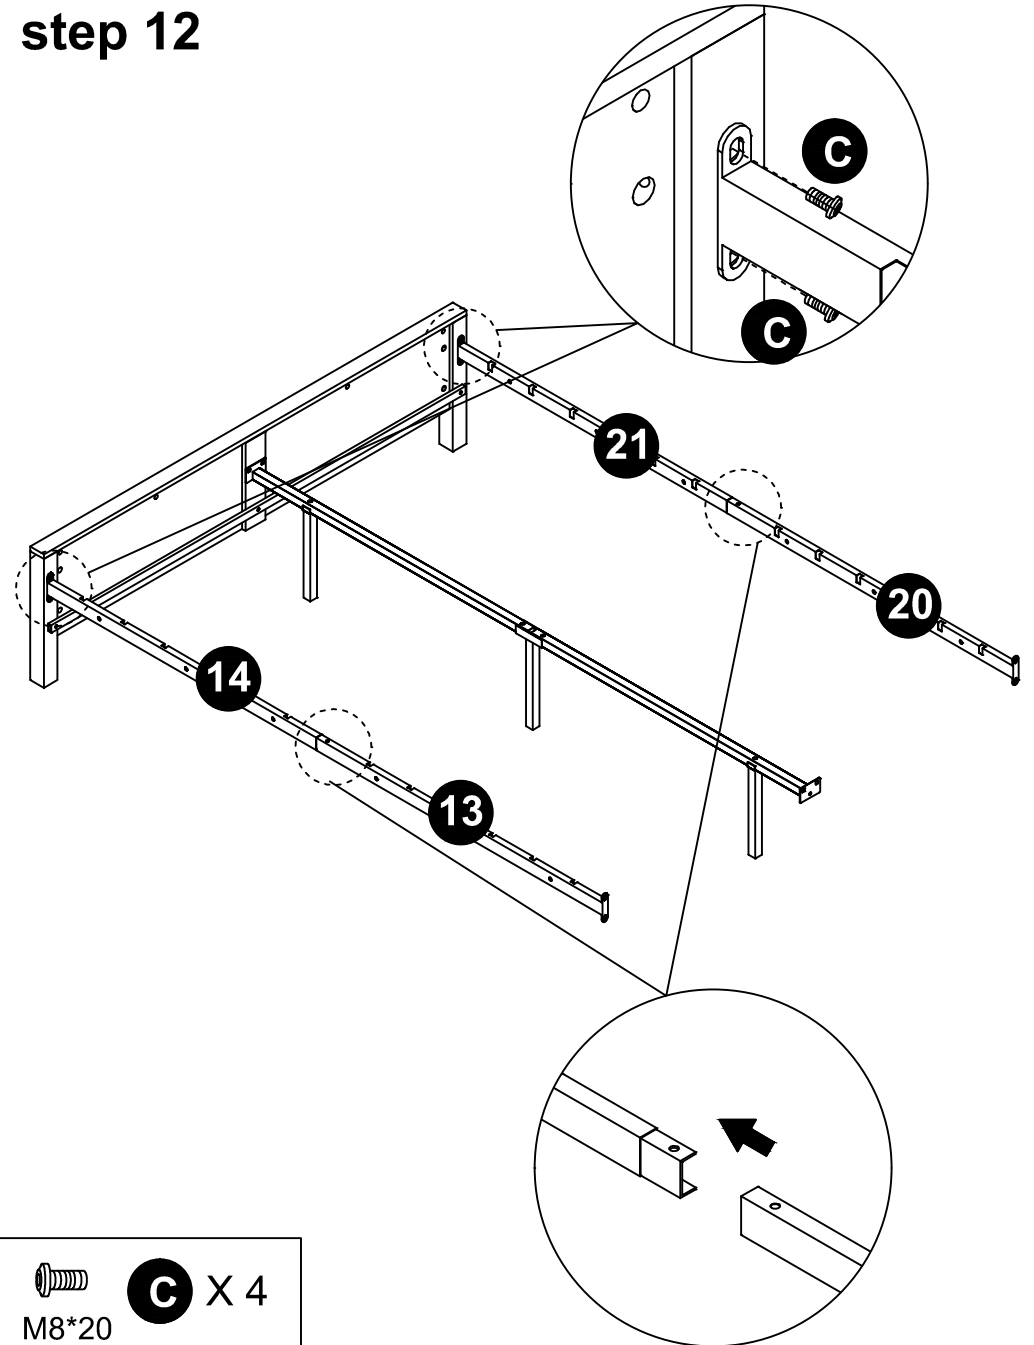

 **C** X 4
M8*20

Assembly Instruction

step 13

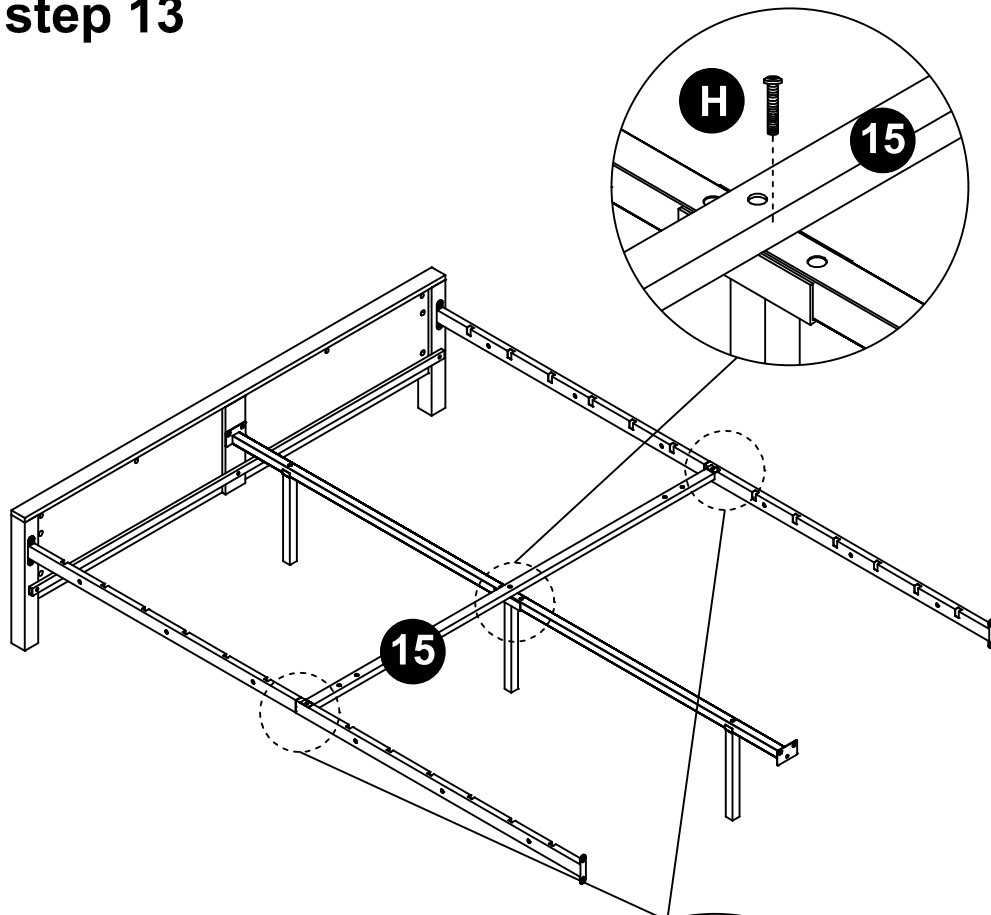


 **I** X 2

 **G** X 2
M8*50

 **H** X 1
M8*55


step 14

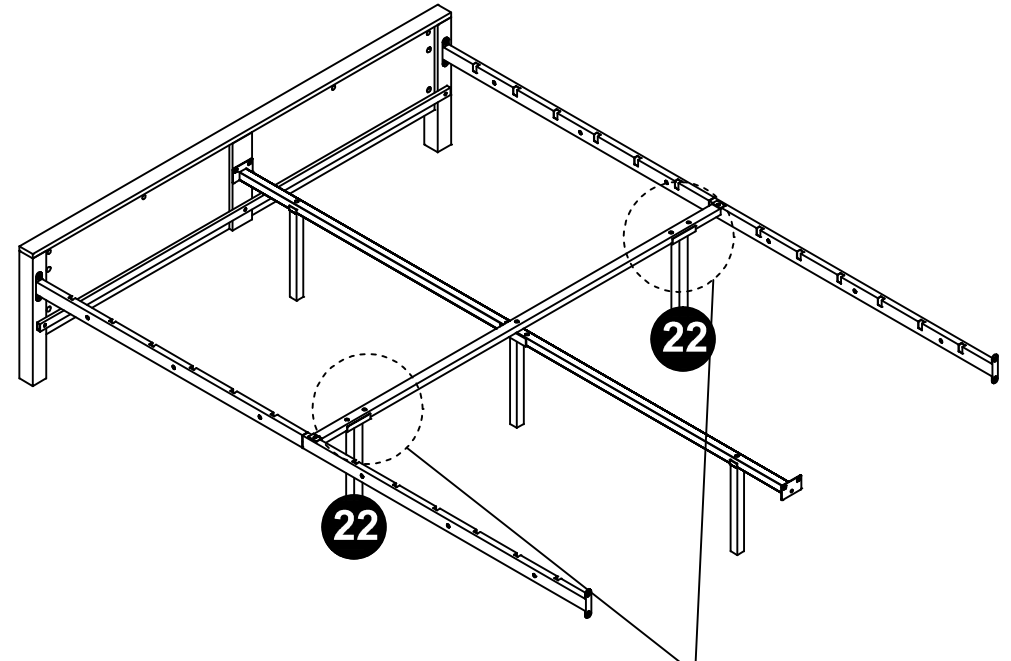

 **F** X 4
M8*35


Assembly Instruction

step 15

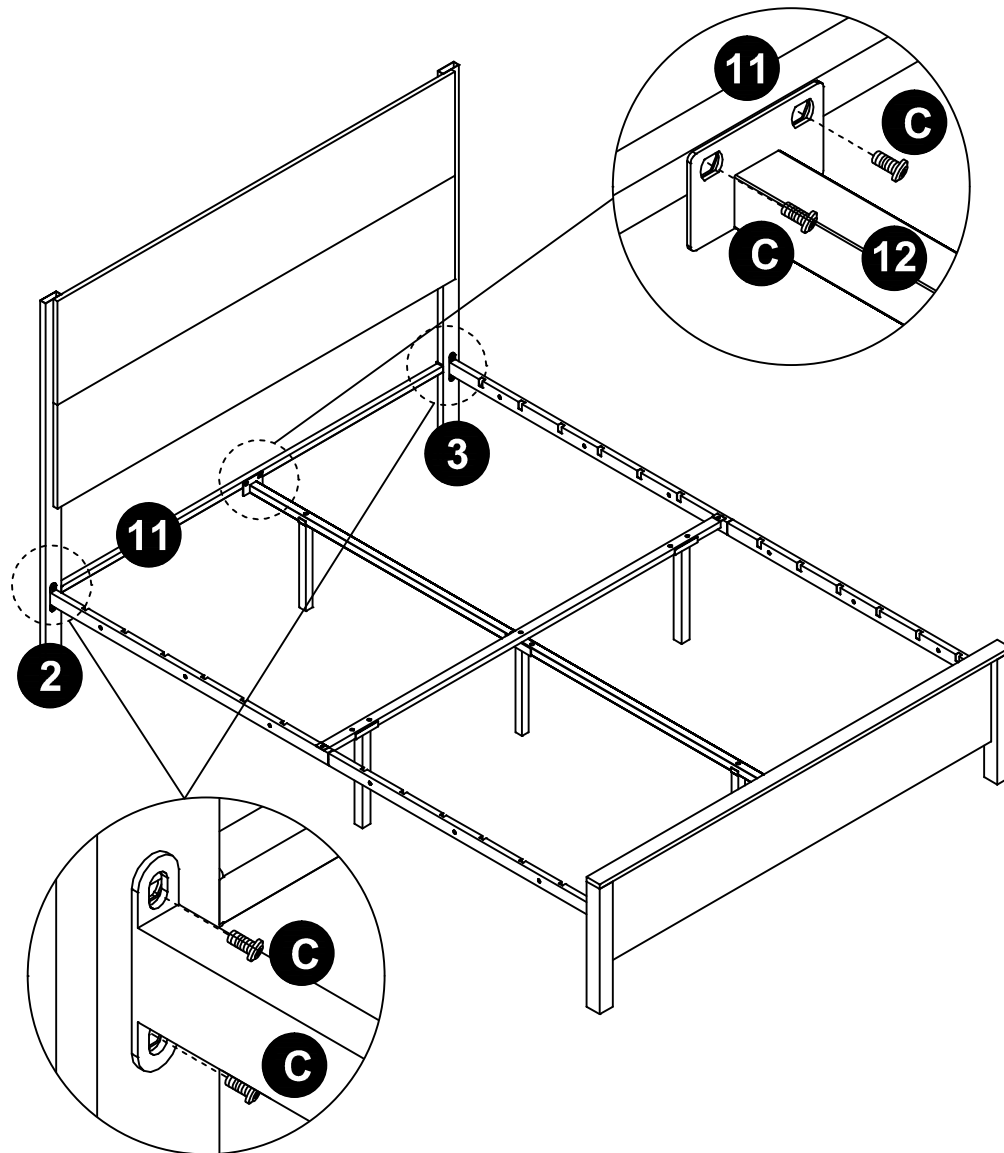

 **C** X 6
M8*20


step 16

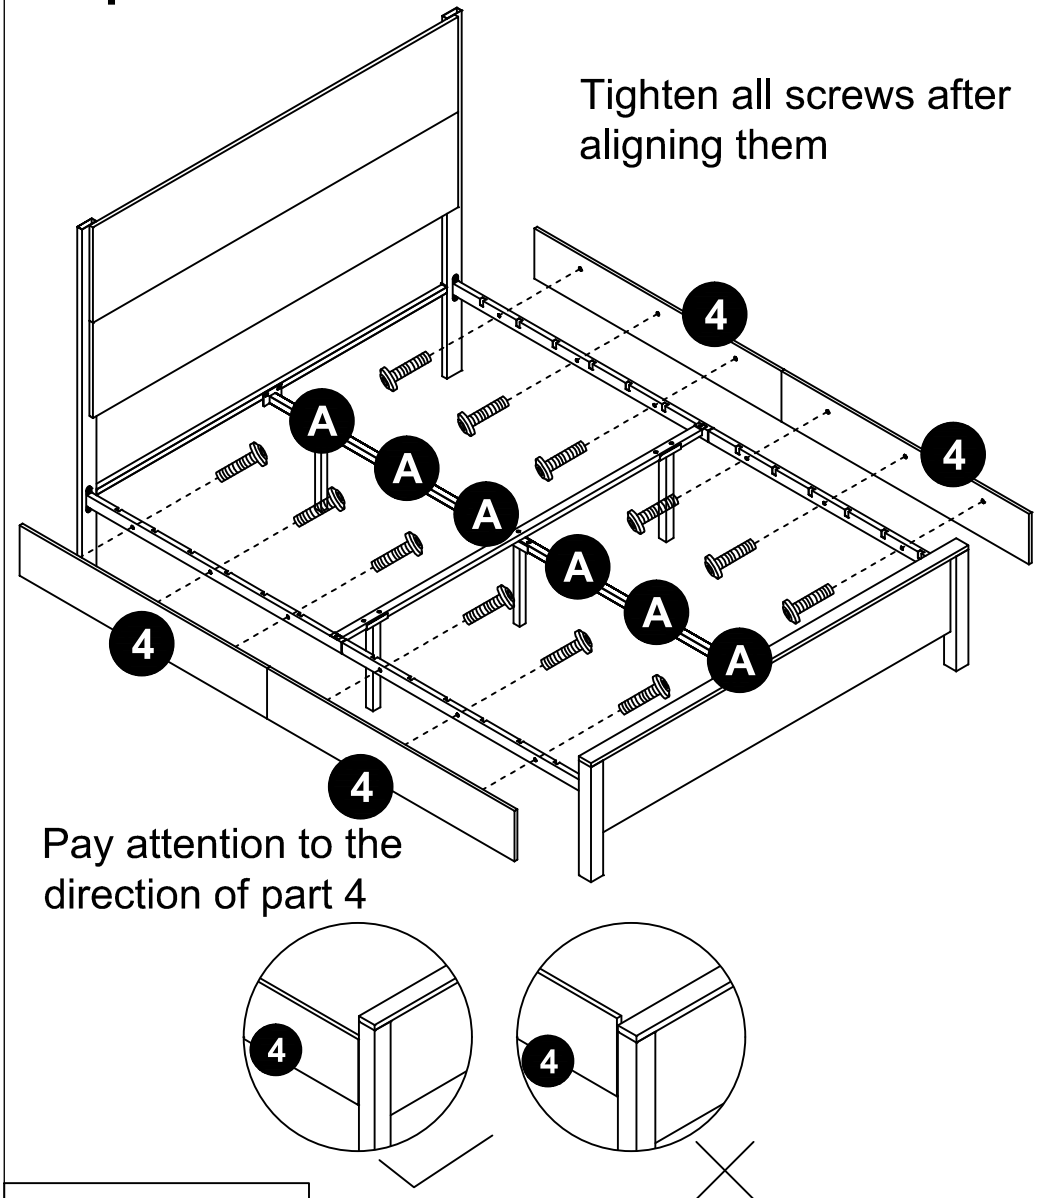


 **A** X 12
M6*28

Assembly Instruction

step 17

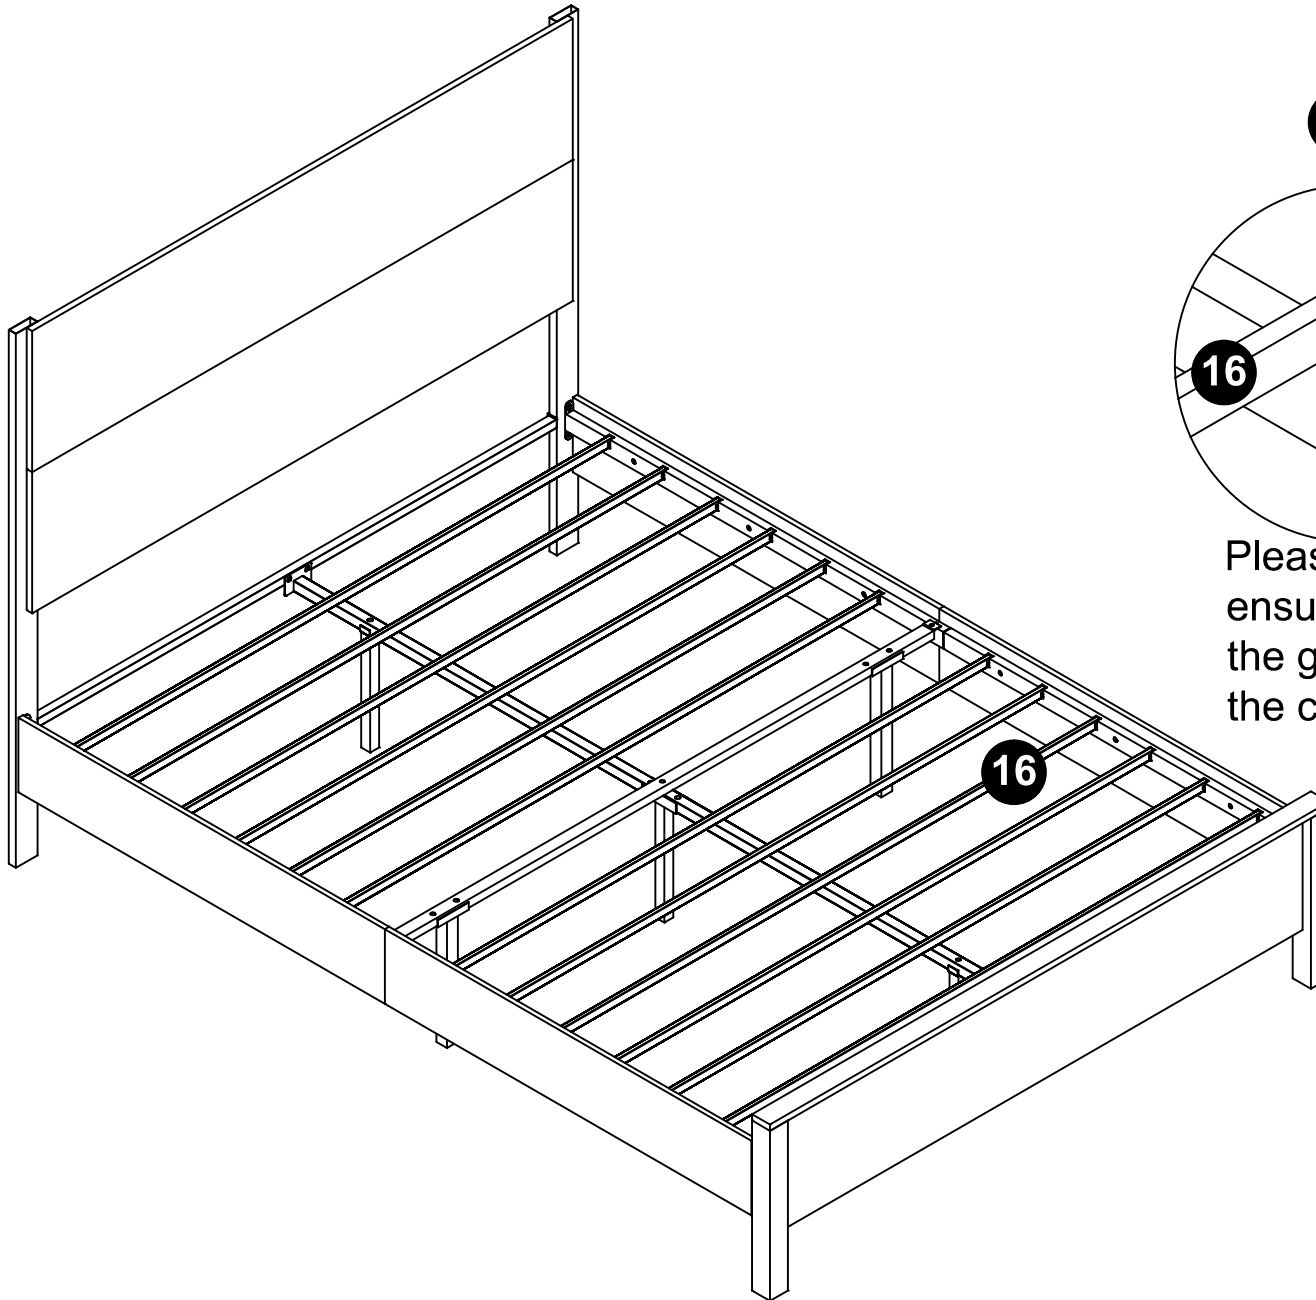


16 X 12

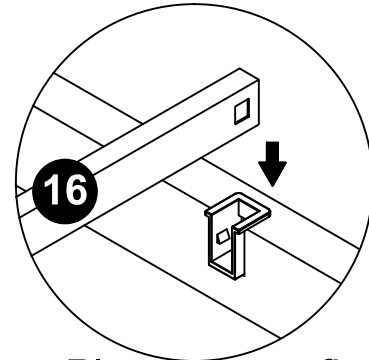

Please press firmly to ensure that the latch in the groove can snap into the catch on part 16

Assembly Instruction


step 18

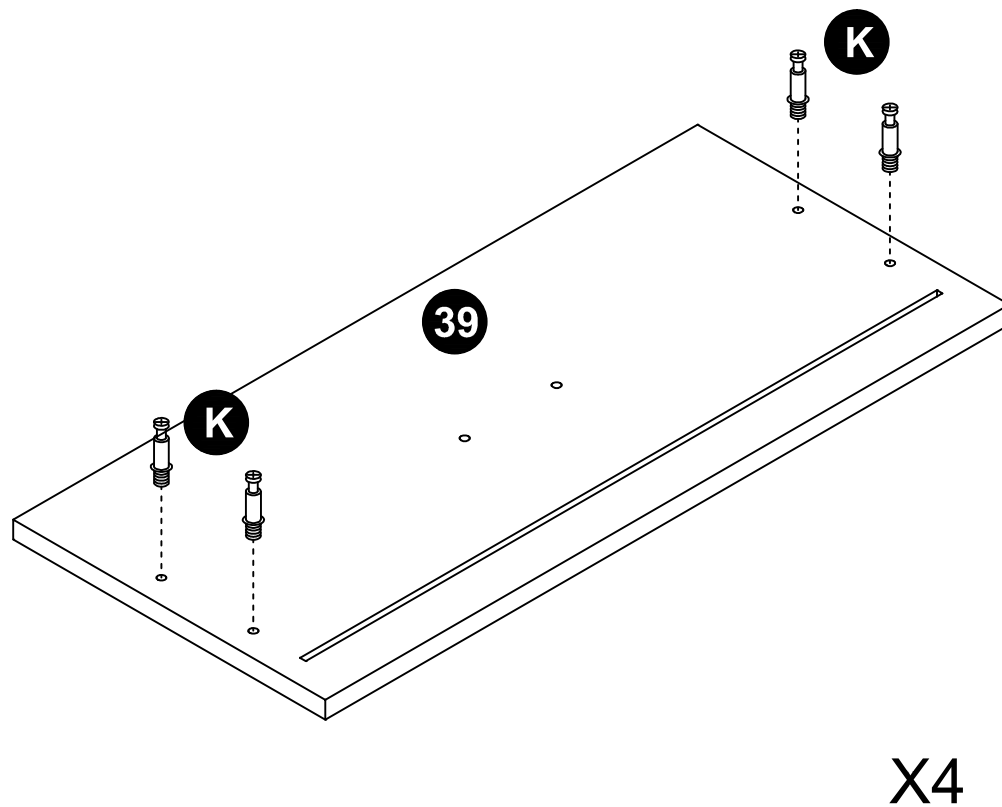

 **K** X 16

step 19

Please pay attention to
the installation direction
of part 47 on part 39

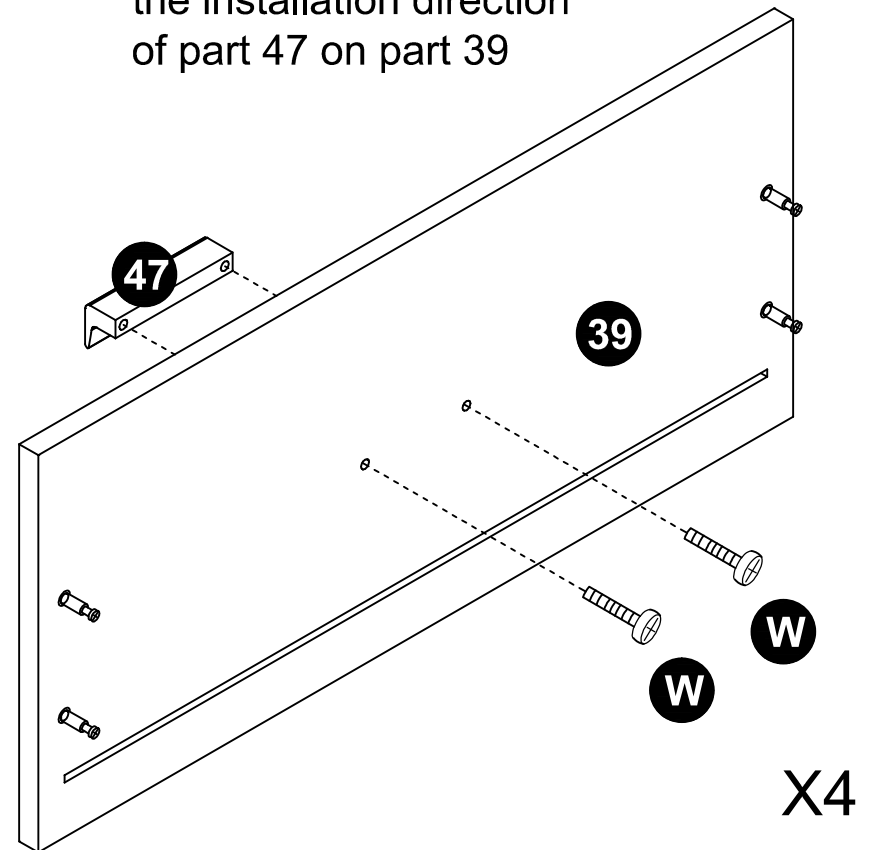


 **W** X 8

Assembly Instruction

step 20


X8

Unfold **48**

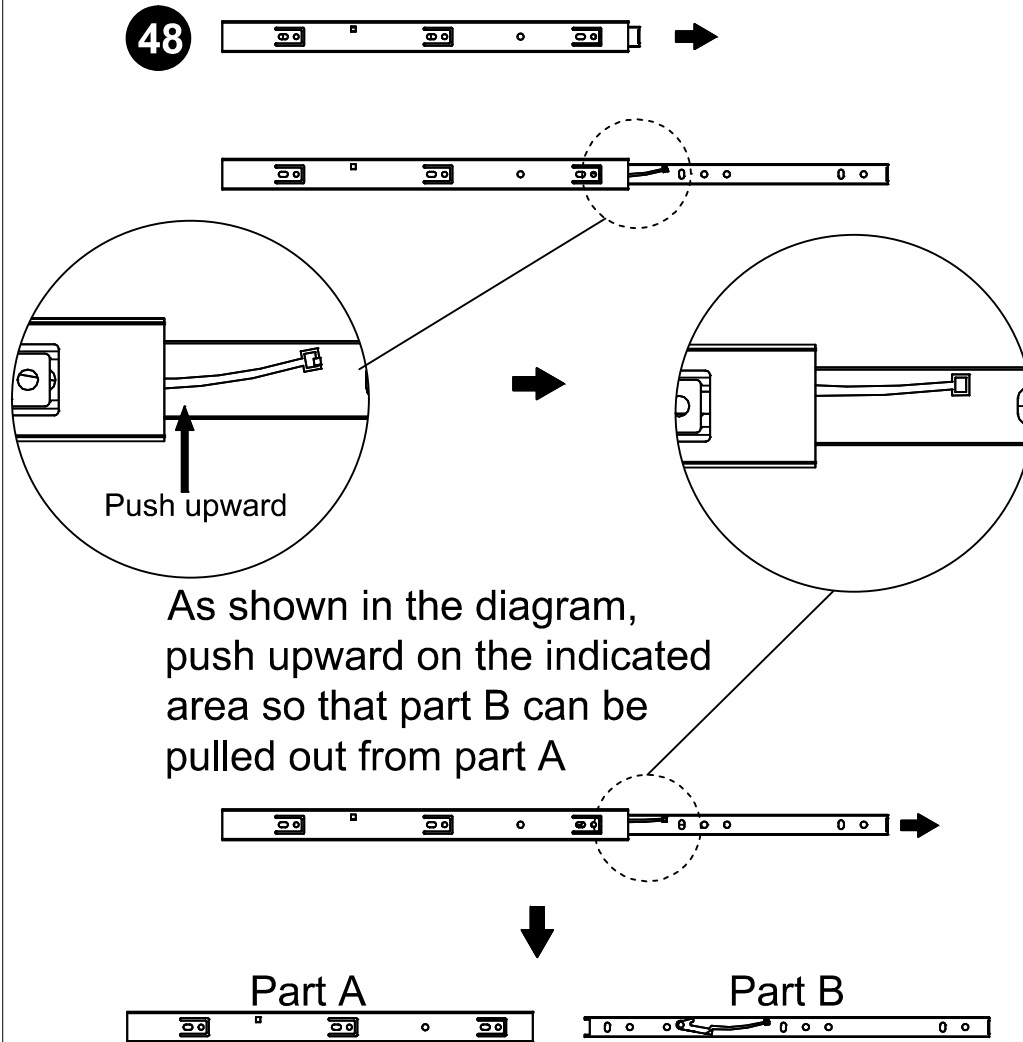

step 21

Part B of **48**

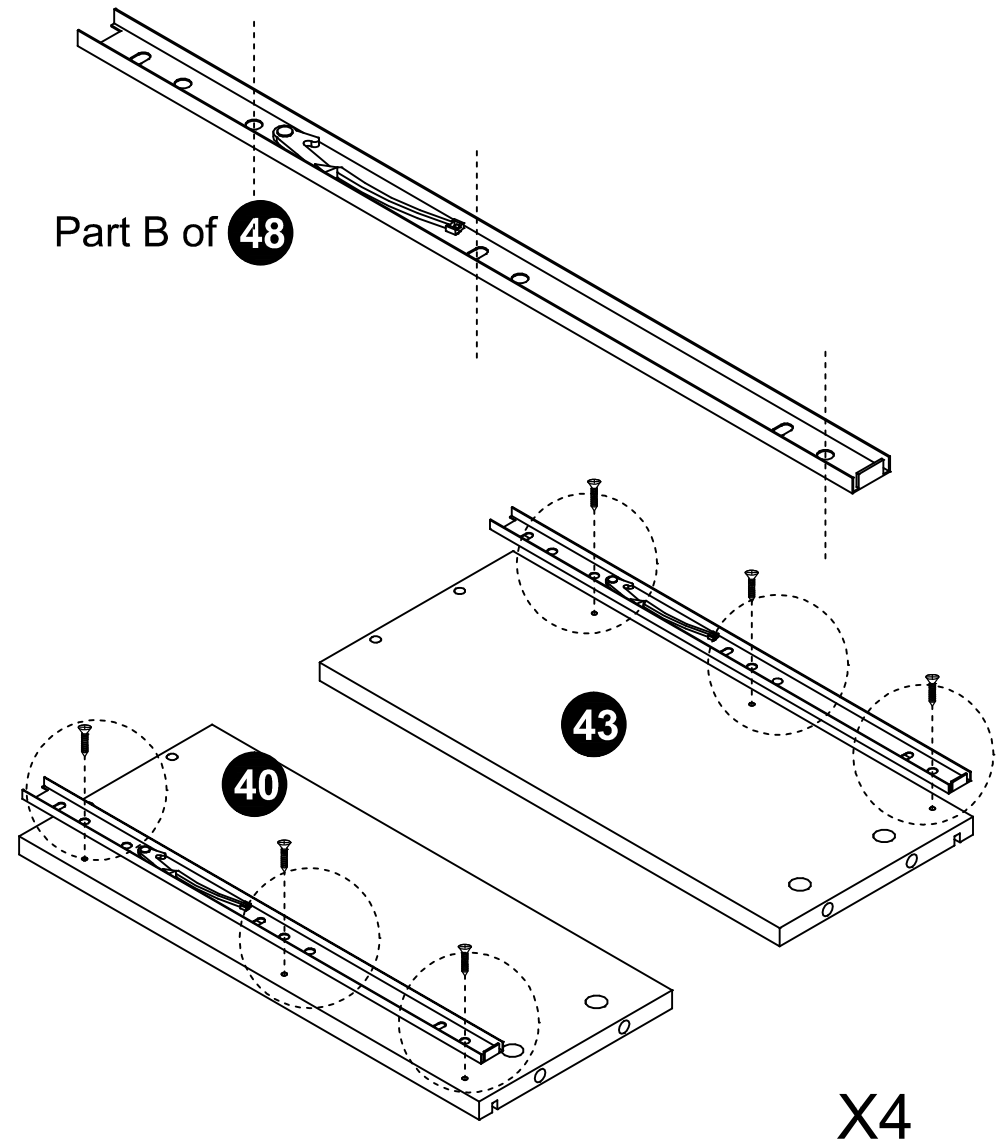



M3*12

V X 24


Assembly Instruction

step 22

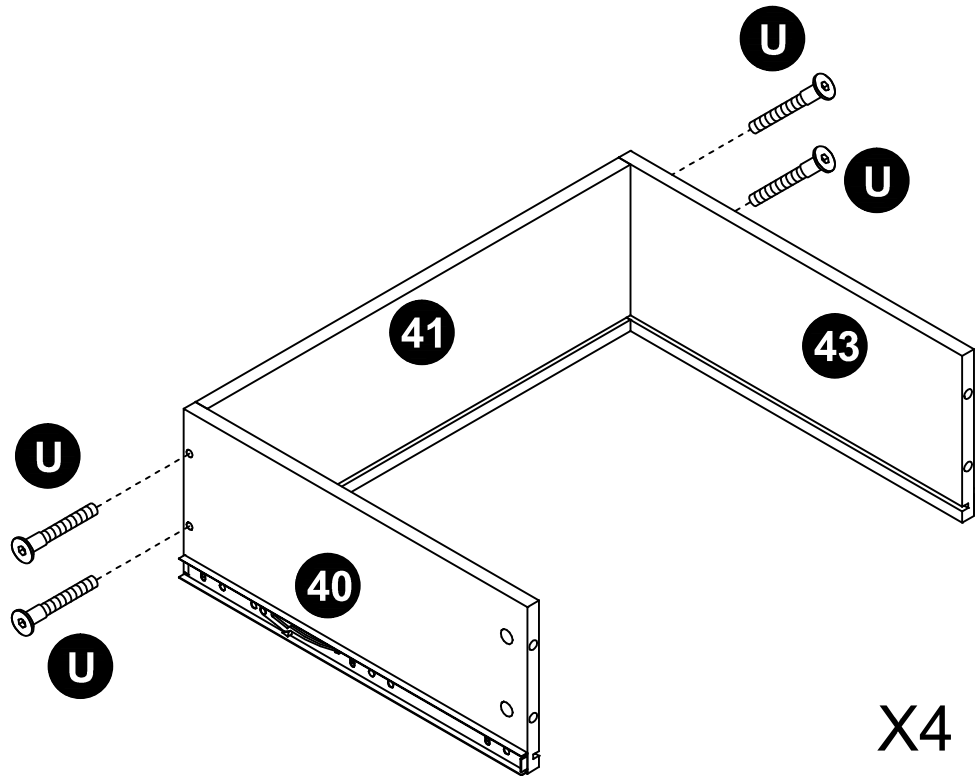



 **U** X 16
M5*35

step 23

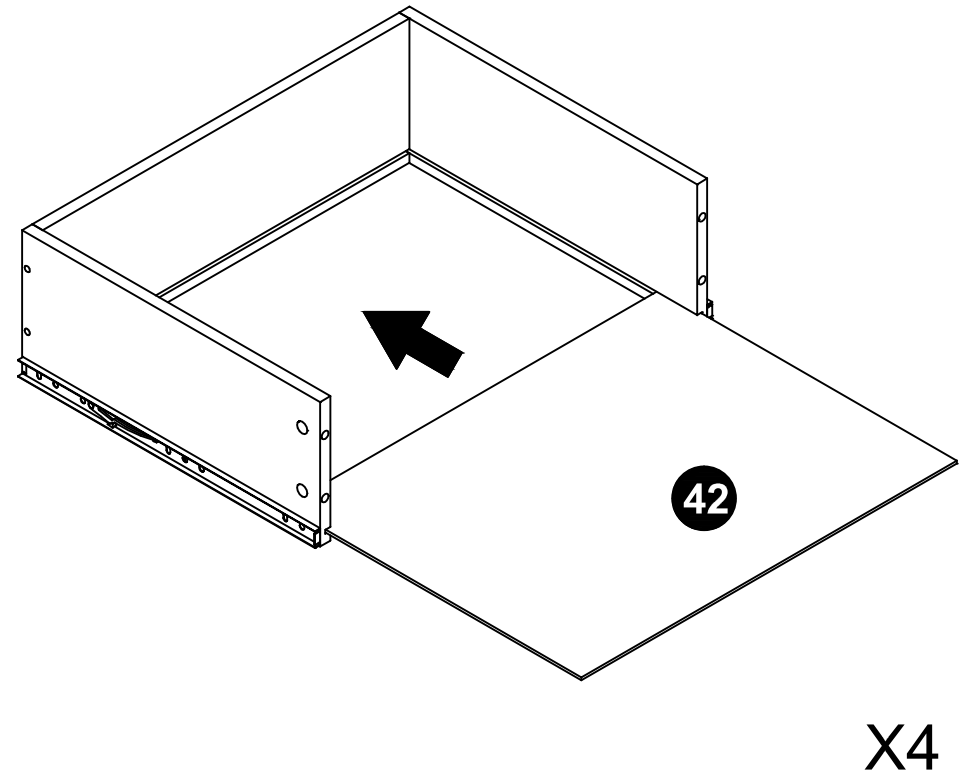


Assembly Instruction

step 24

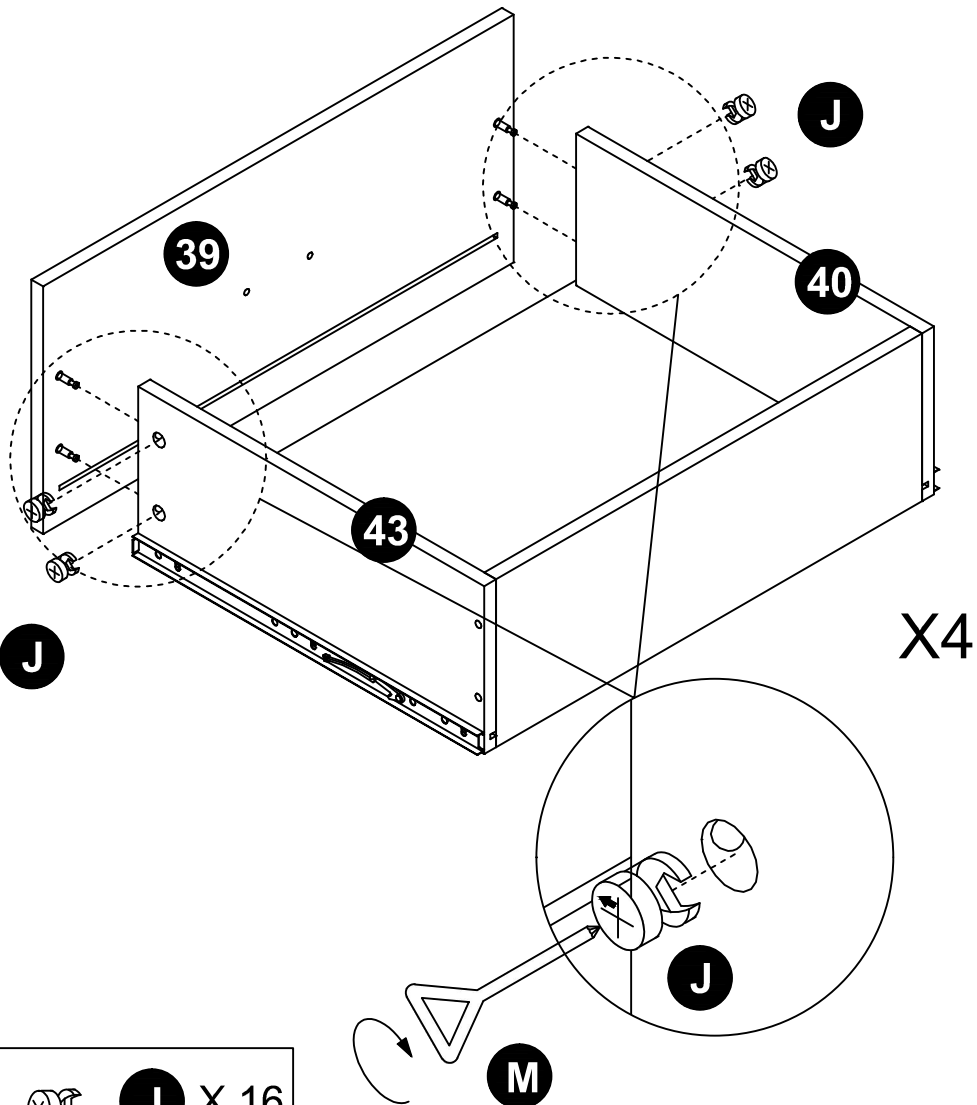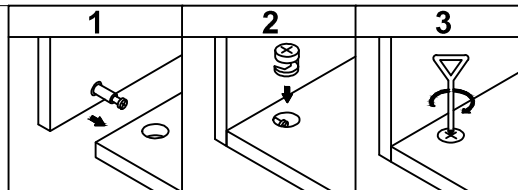


step 25

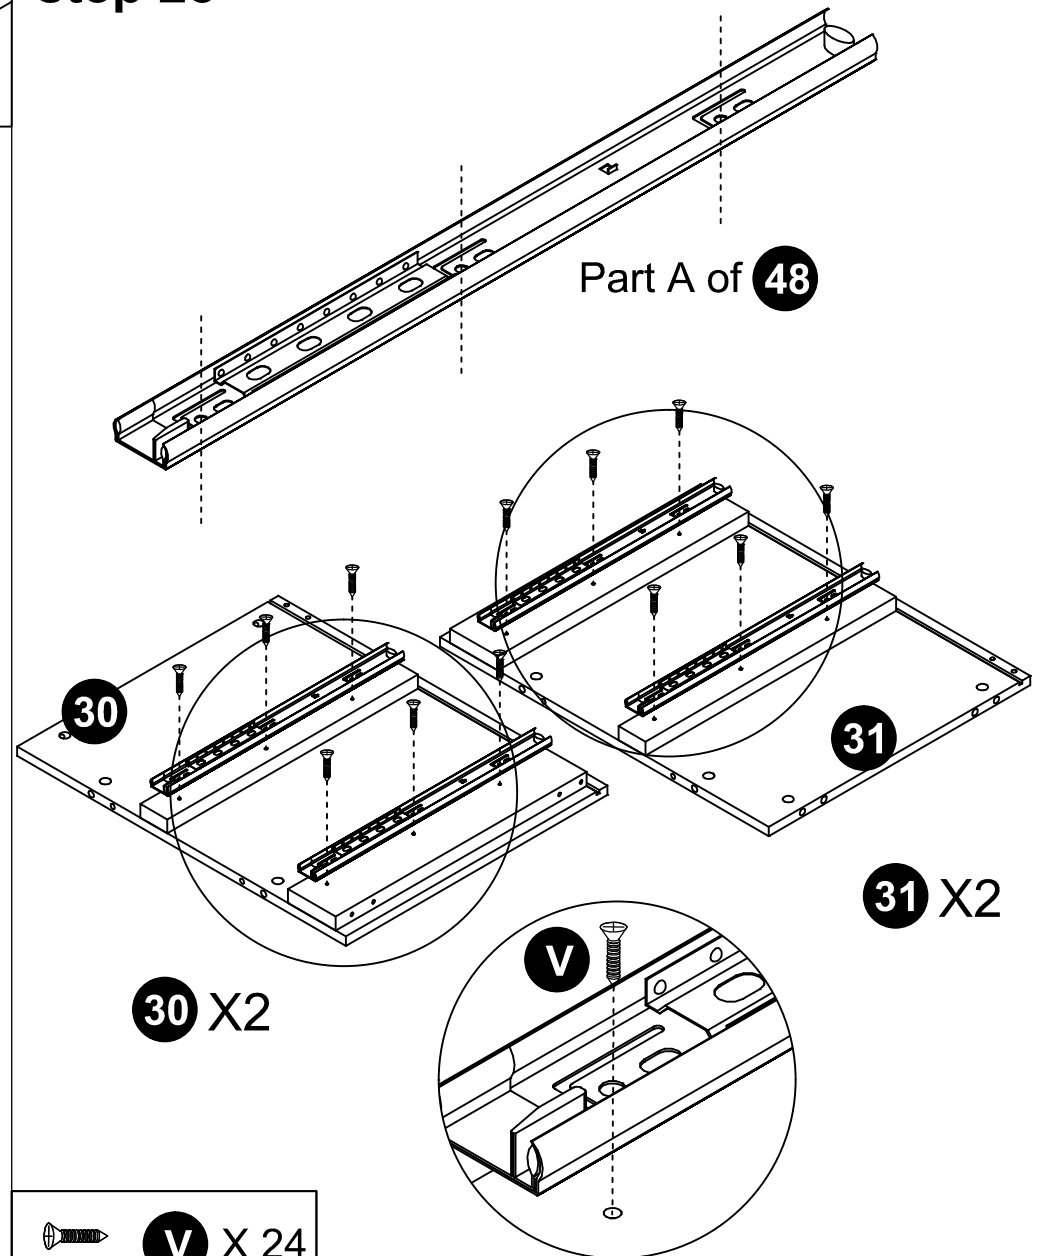

M3*12 V X 24

Assembly Instruction



step 26

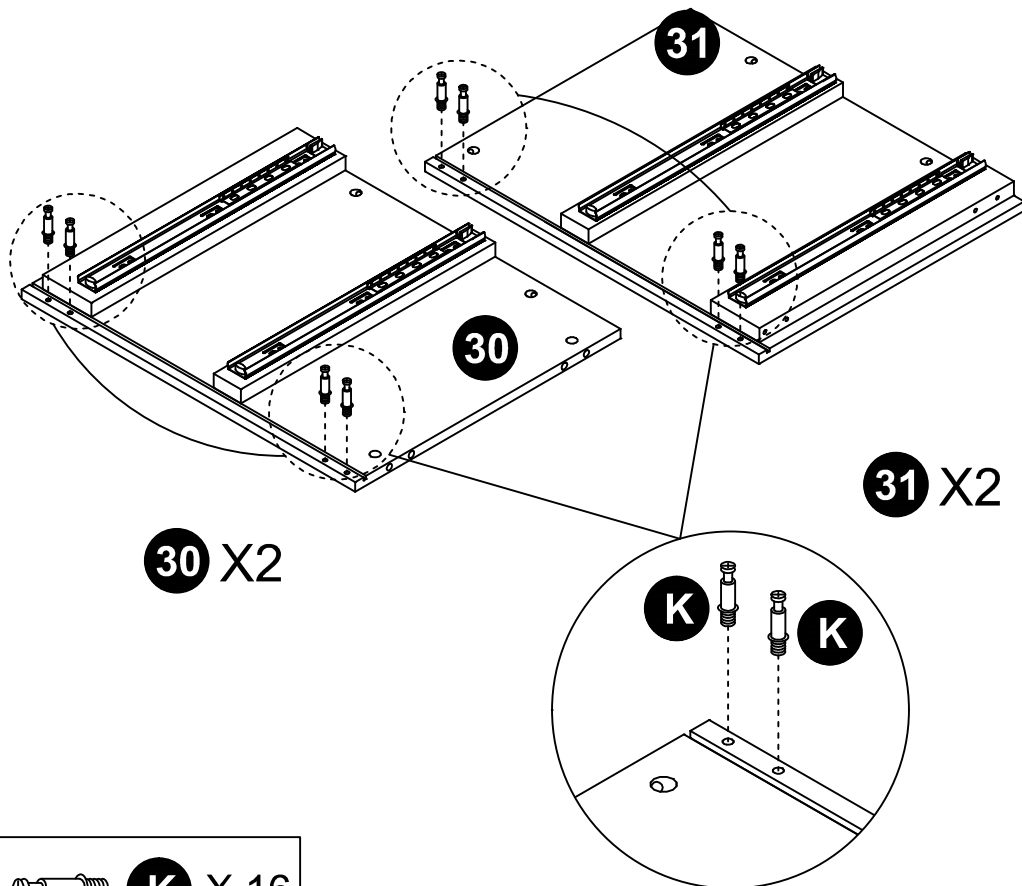

 **K** X 16

step 27


Note that parts 34 and 44 have unfinished edges facing each other after installation

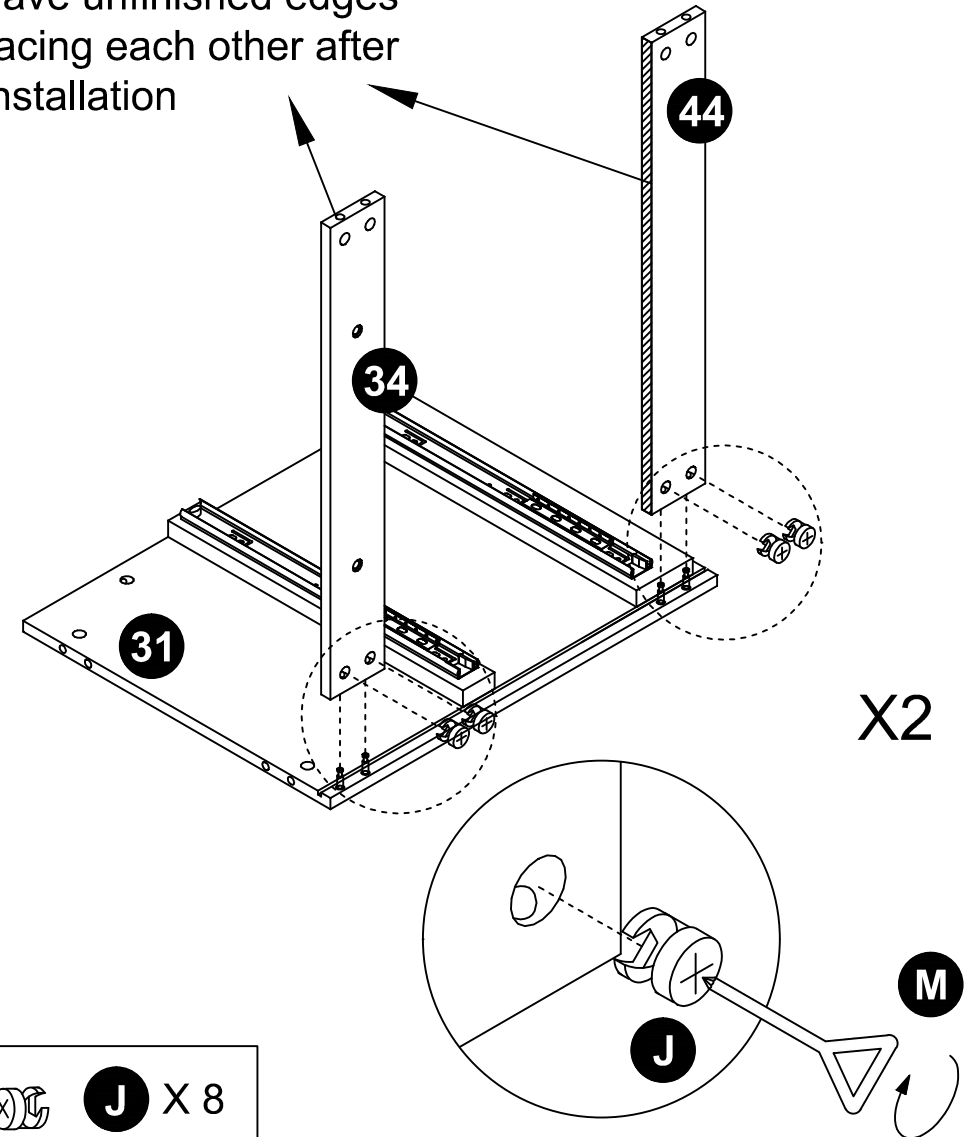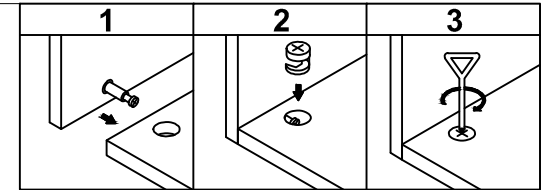


 **J** X 8

Assembly Instruction


step 28

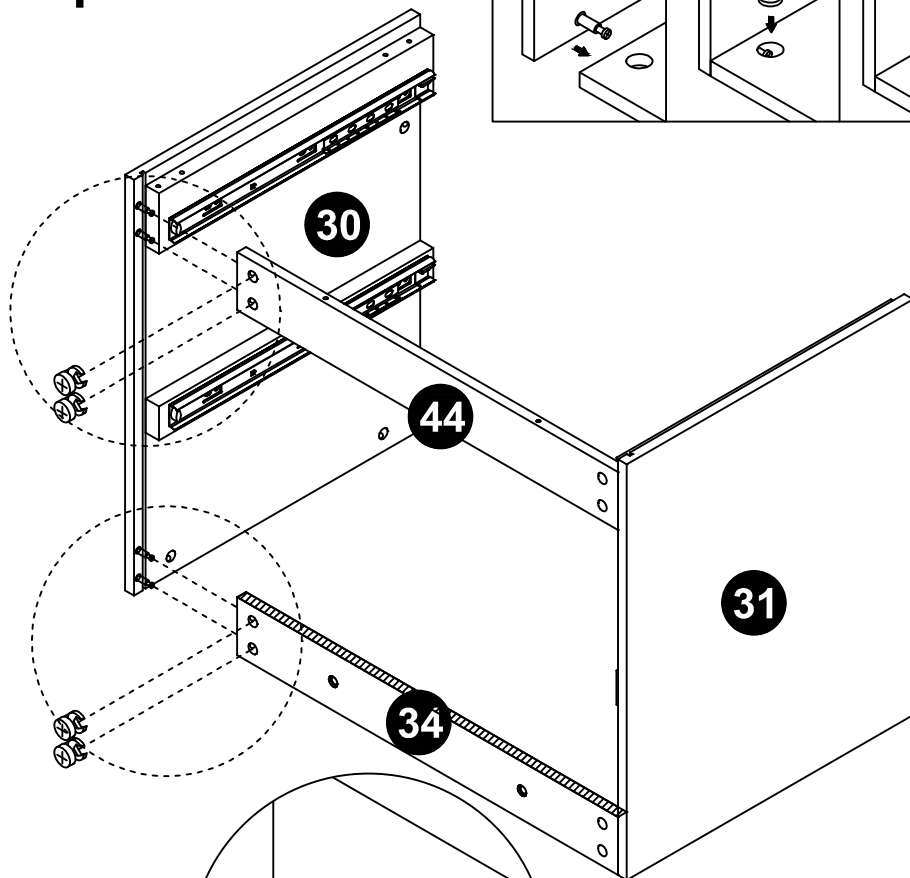



X2

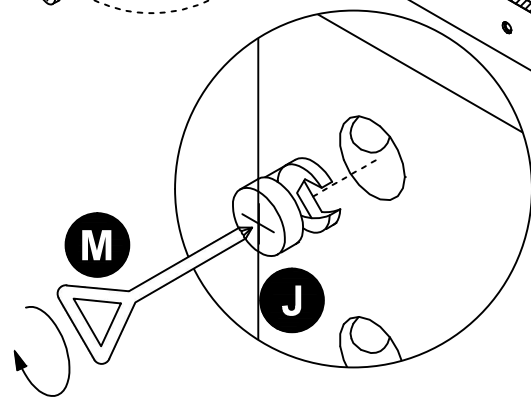



 **J** X 8

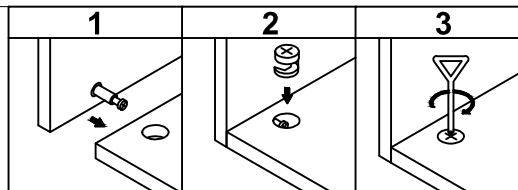

step 29

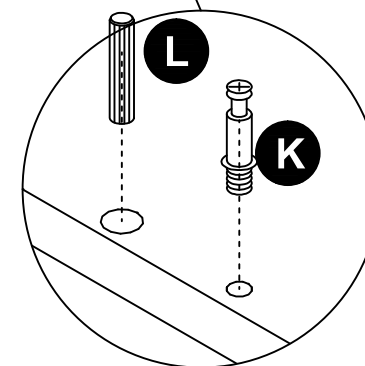
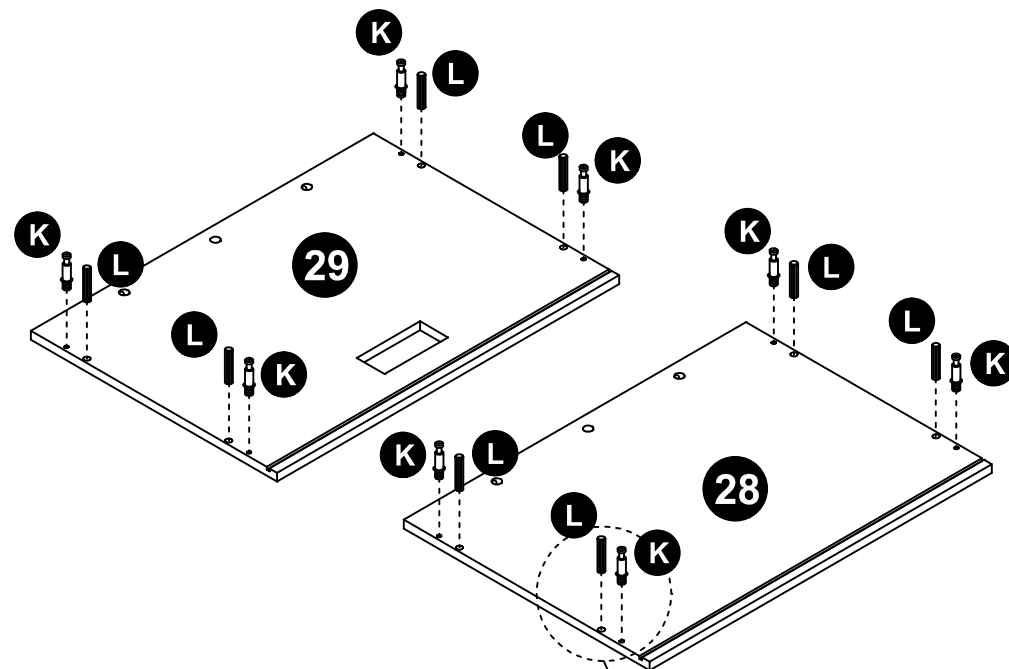


 **K** X 8

 **L** X 8
Ø8



Assembly Instruction

step 30

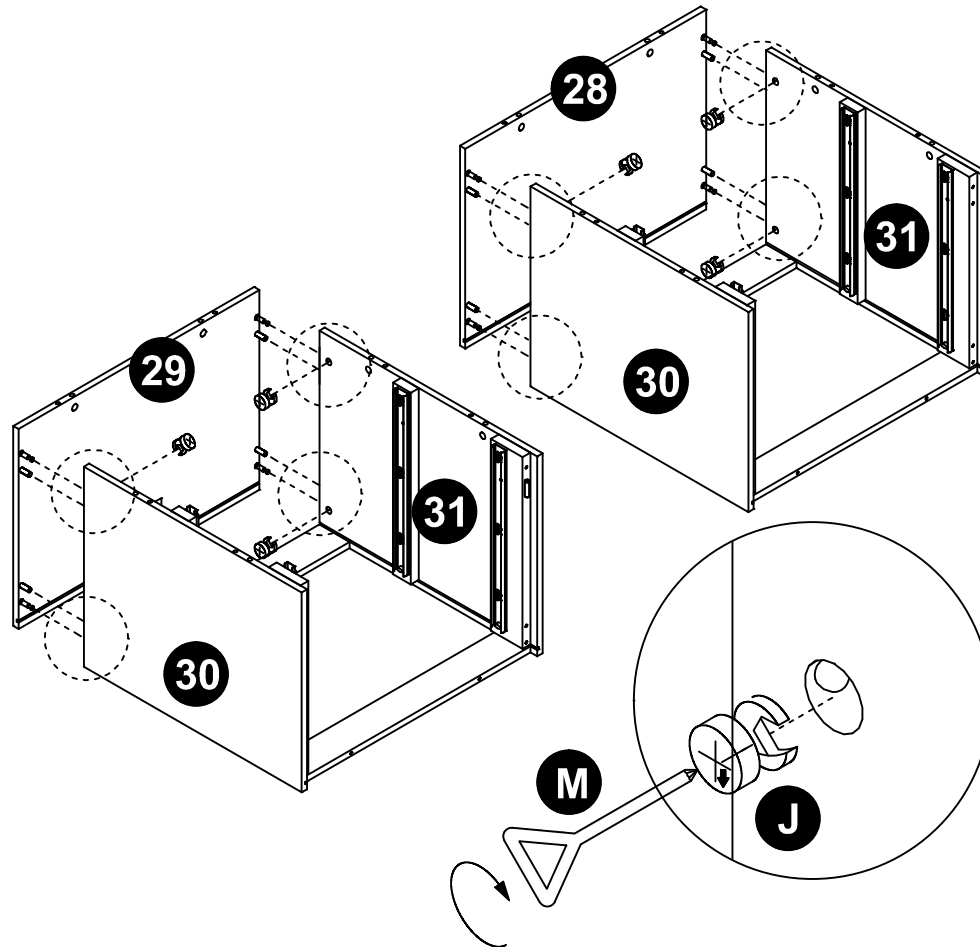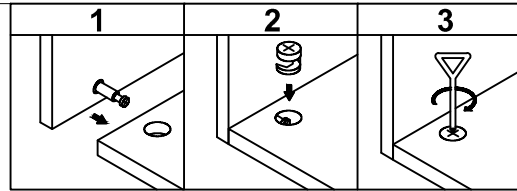

As shown in the diagram, please ensure that the grooves on parts 28 and 29 are facing inward

step 31

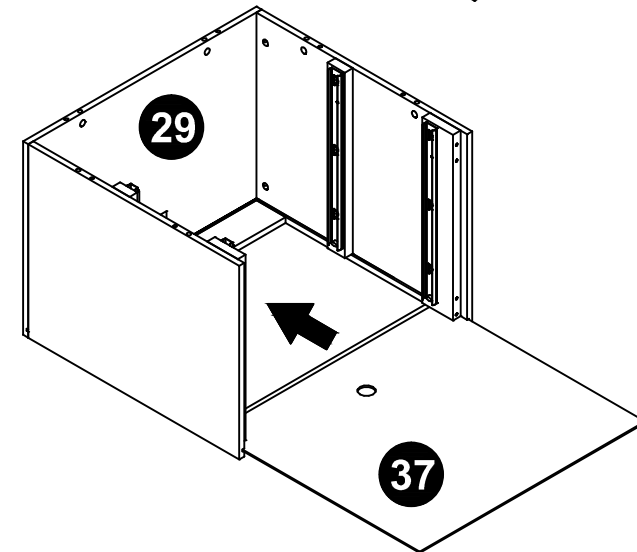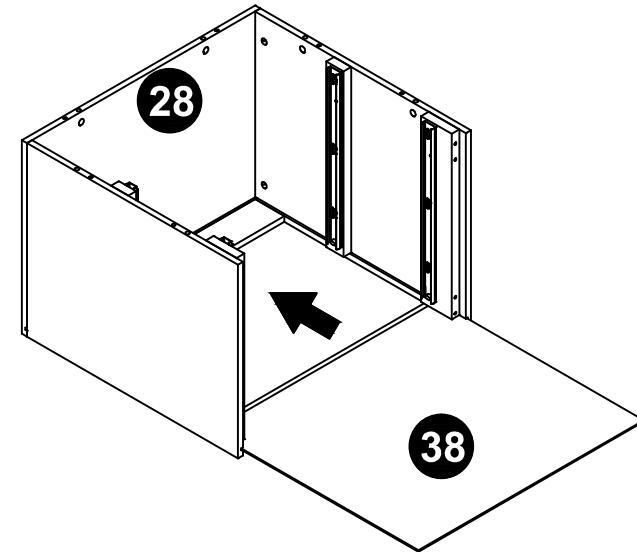


J X 8


Assembly Instruction

step 32

Note that the installation positions of parts 32 and 33 are as shown in the diagram.

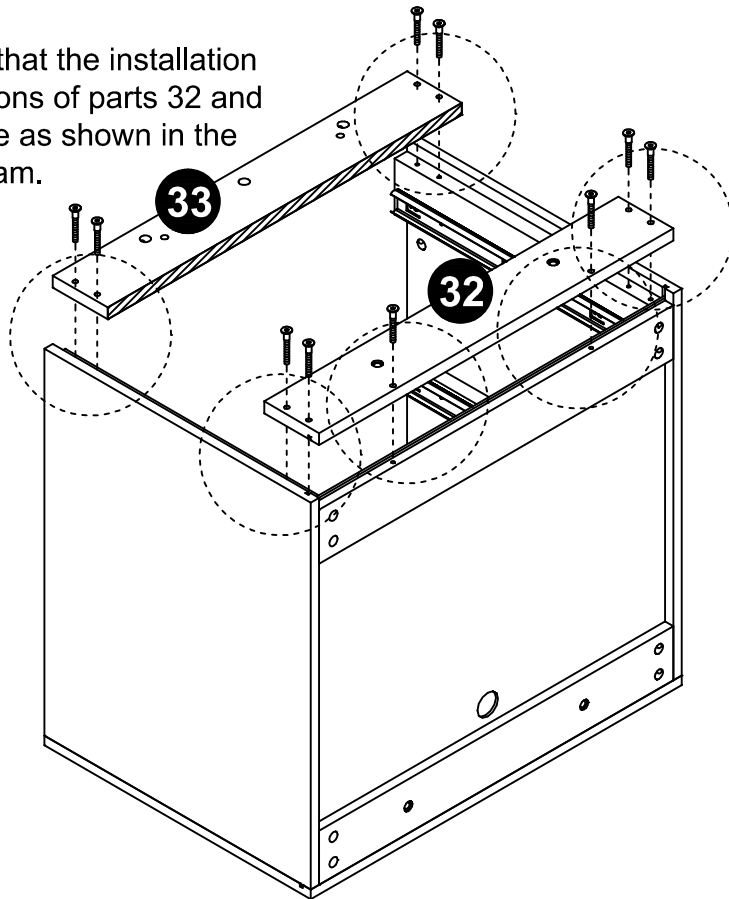


X2

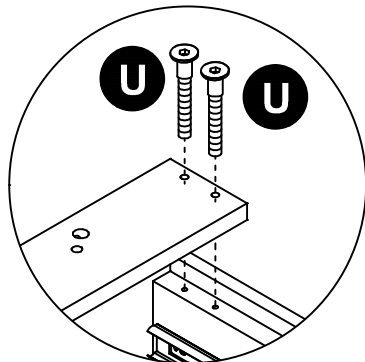


 **U** X 20
M5*35

step 33

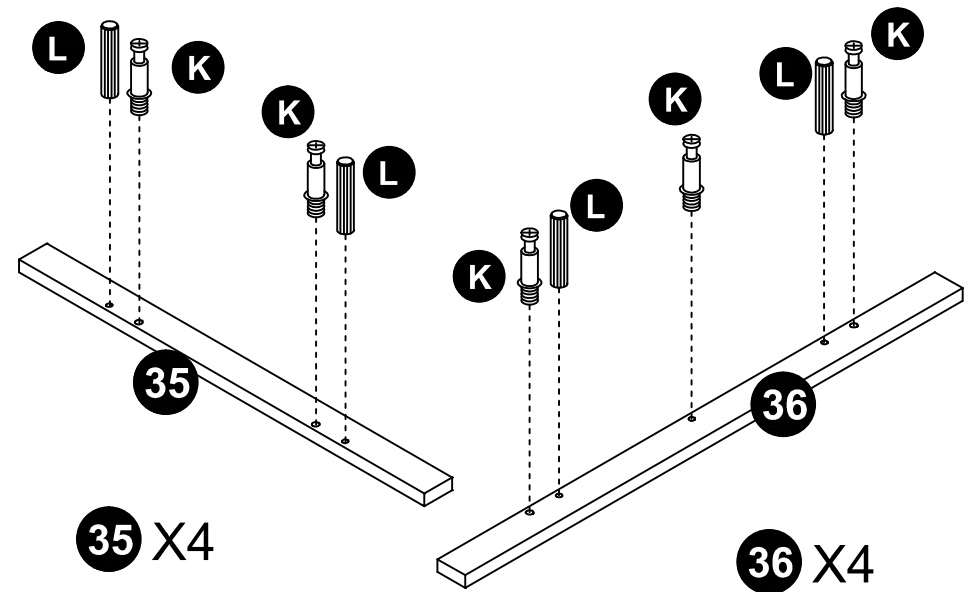

35 X4



36 X4

 **K** X 20


 **L** X 16
Ø8

Assembly Instruction

step 34

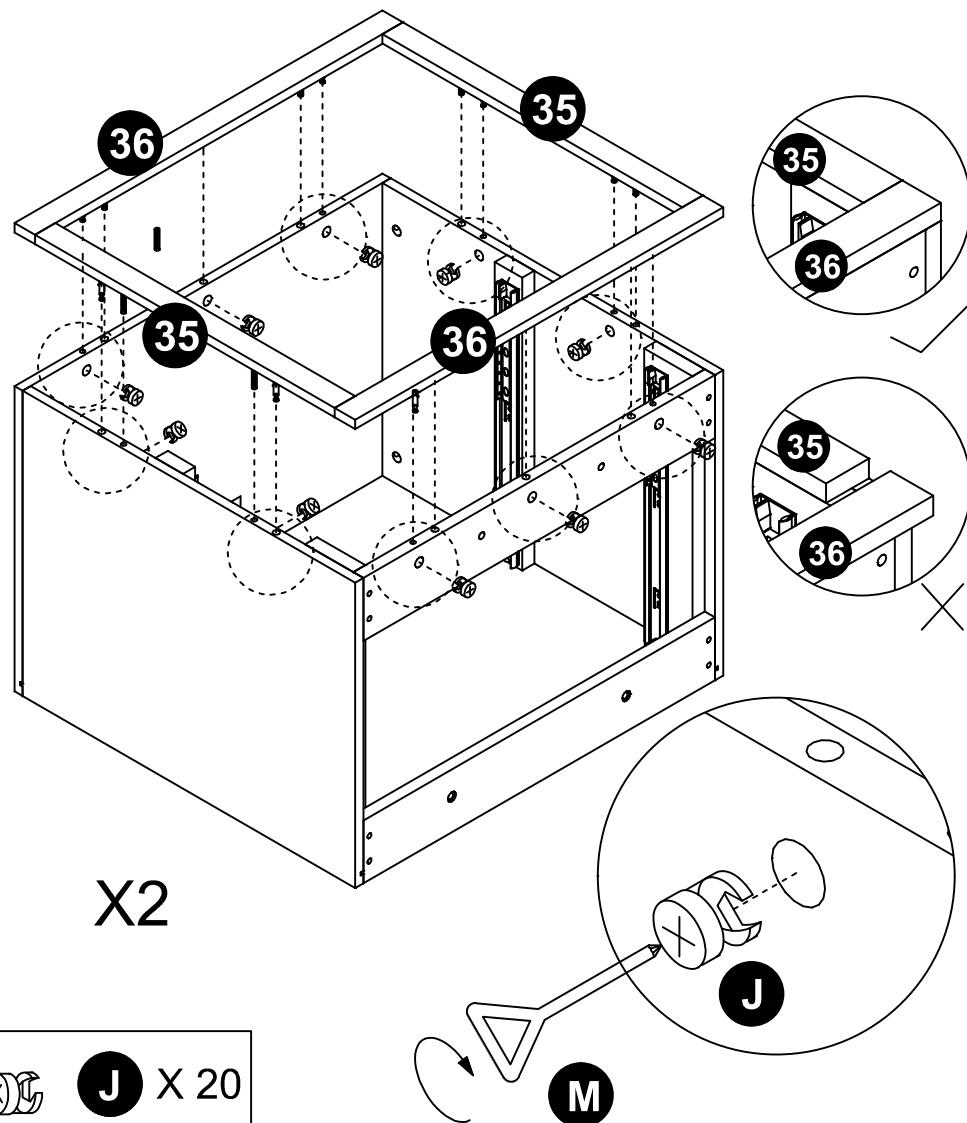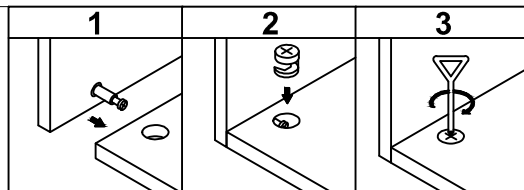


step 35

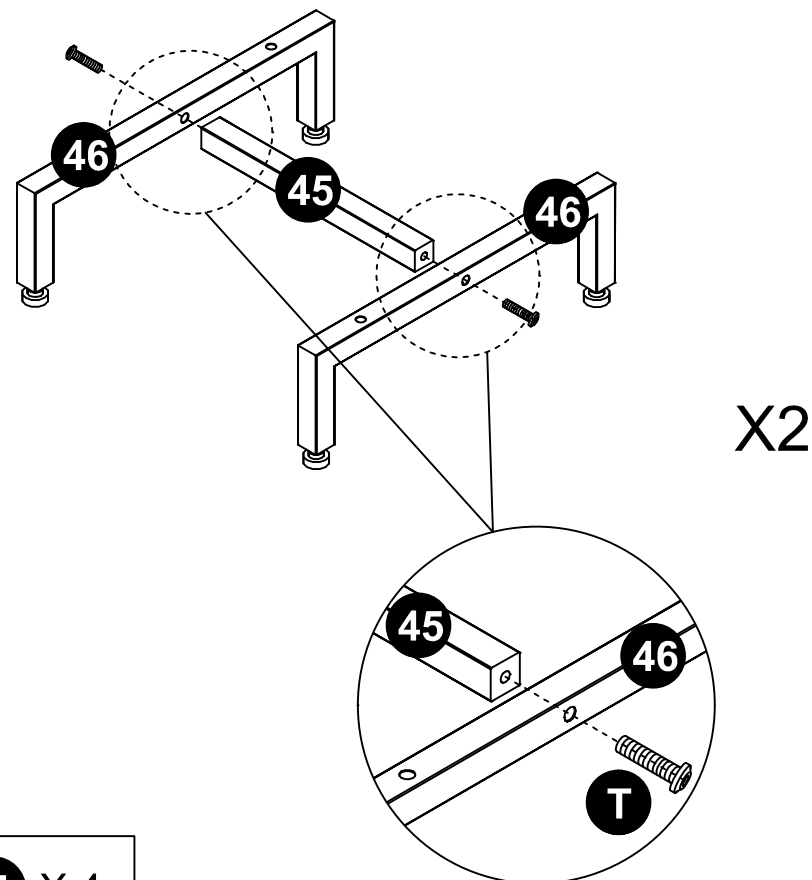


Assembly Instruction

step 36

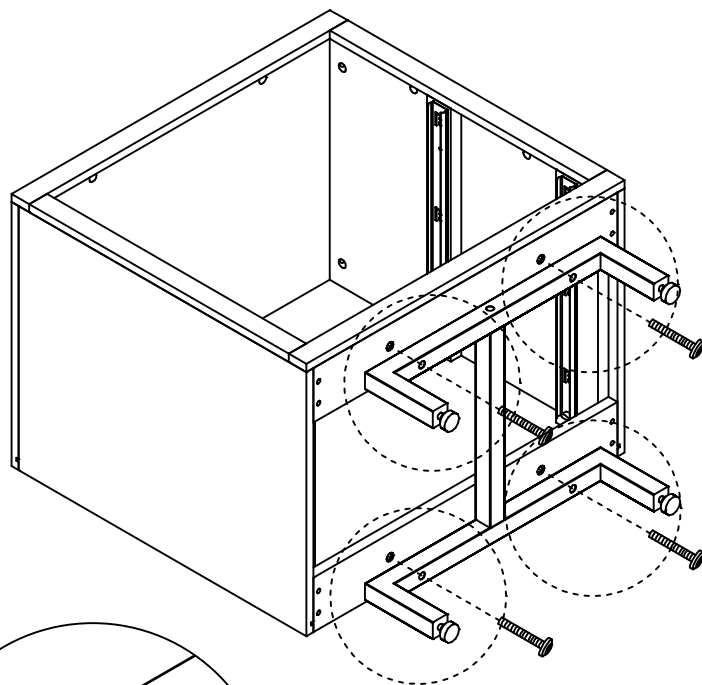


X2

 **S** X 8
M6*45

step 37


Install the socket and
thread the plug through the
hole of part 37

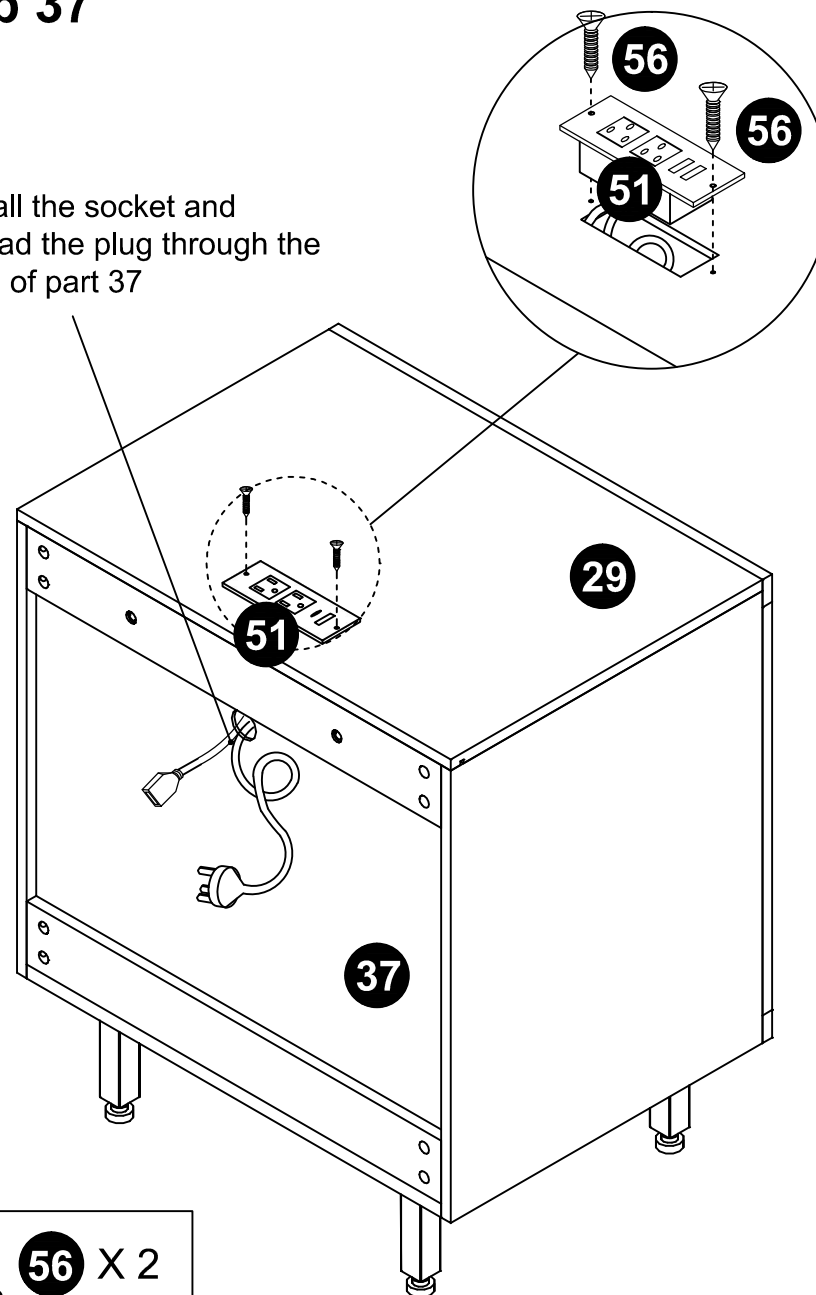


 **56** X 2
M3*12

Assembly Instruction



step 38

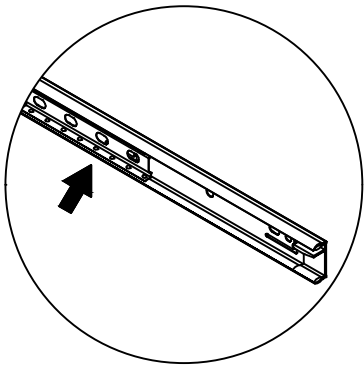


Pull out the sliding track before installation

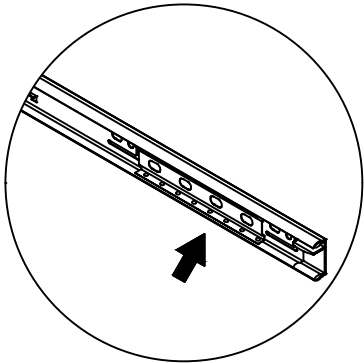

Align part B with the groove on part A to complete the drawer installation. To remove the drawer, simply follow step 20 to separate parts A and B from part 48

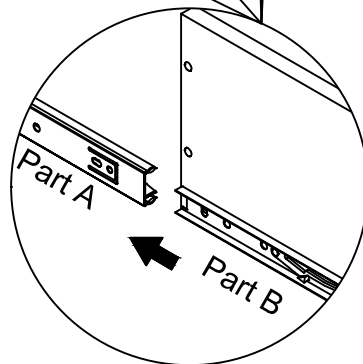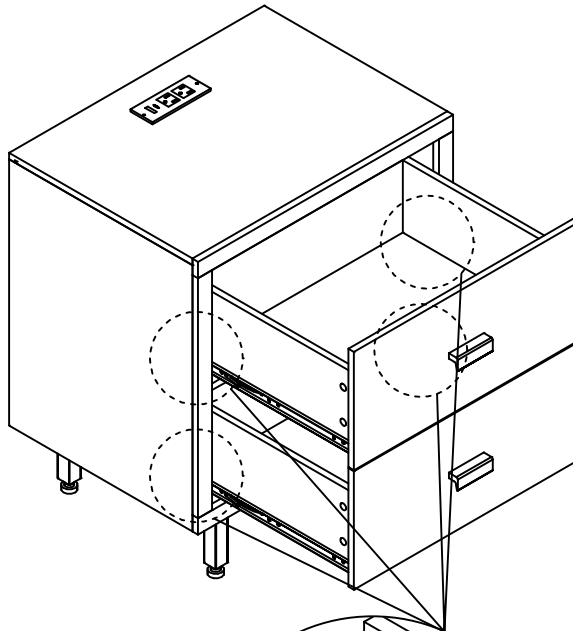


step 39

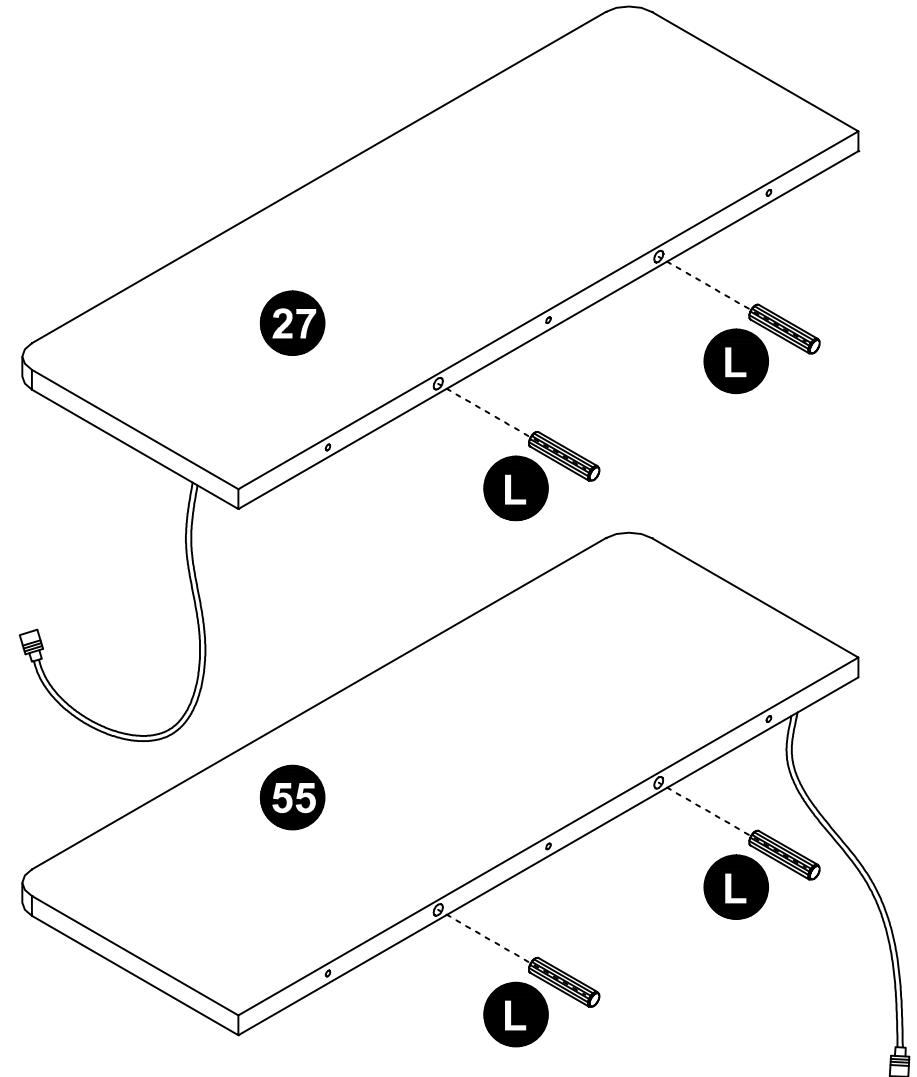

 **L** X 4
Ø8

Assembly Instruction


step 40

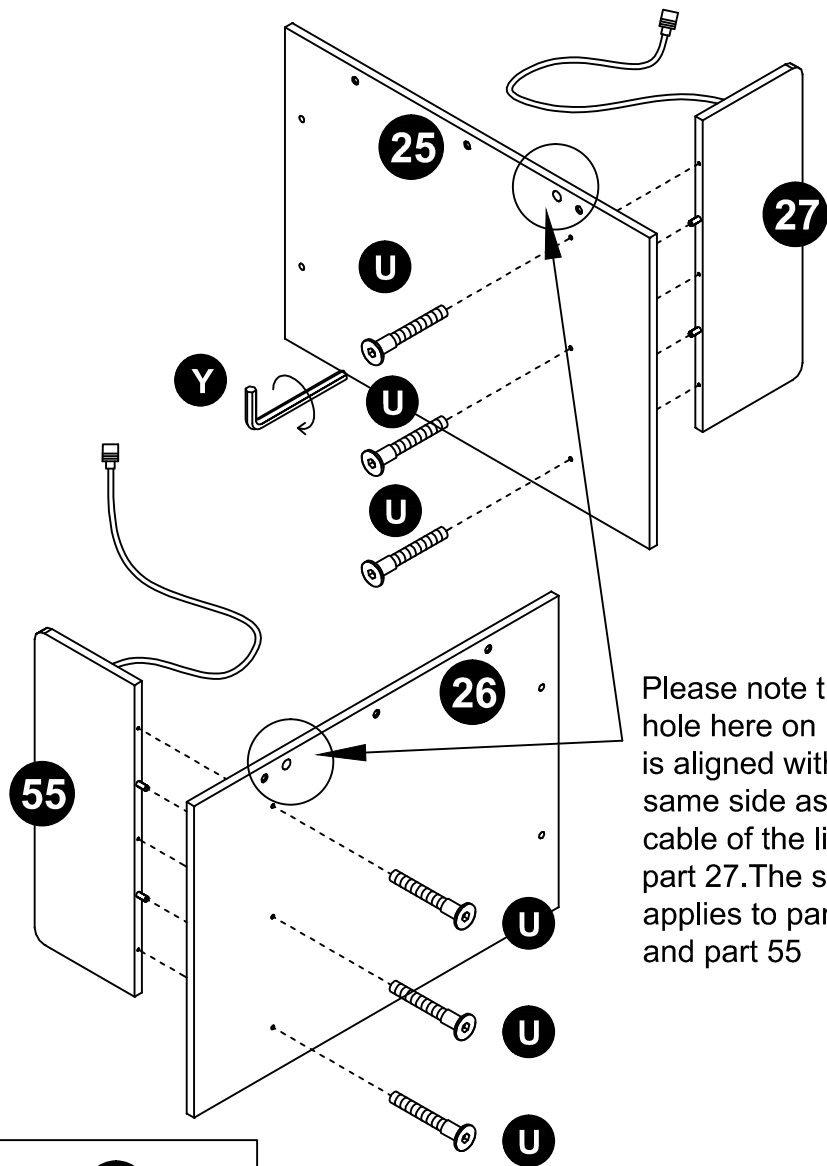

Please note that the hole here on part 25 is aligned with the same side as the cable of the light on part 27. The same applies to part 26 and part 55


 **U** X 6
M5*35

step 41

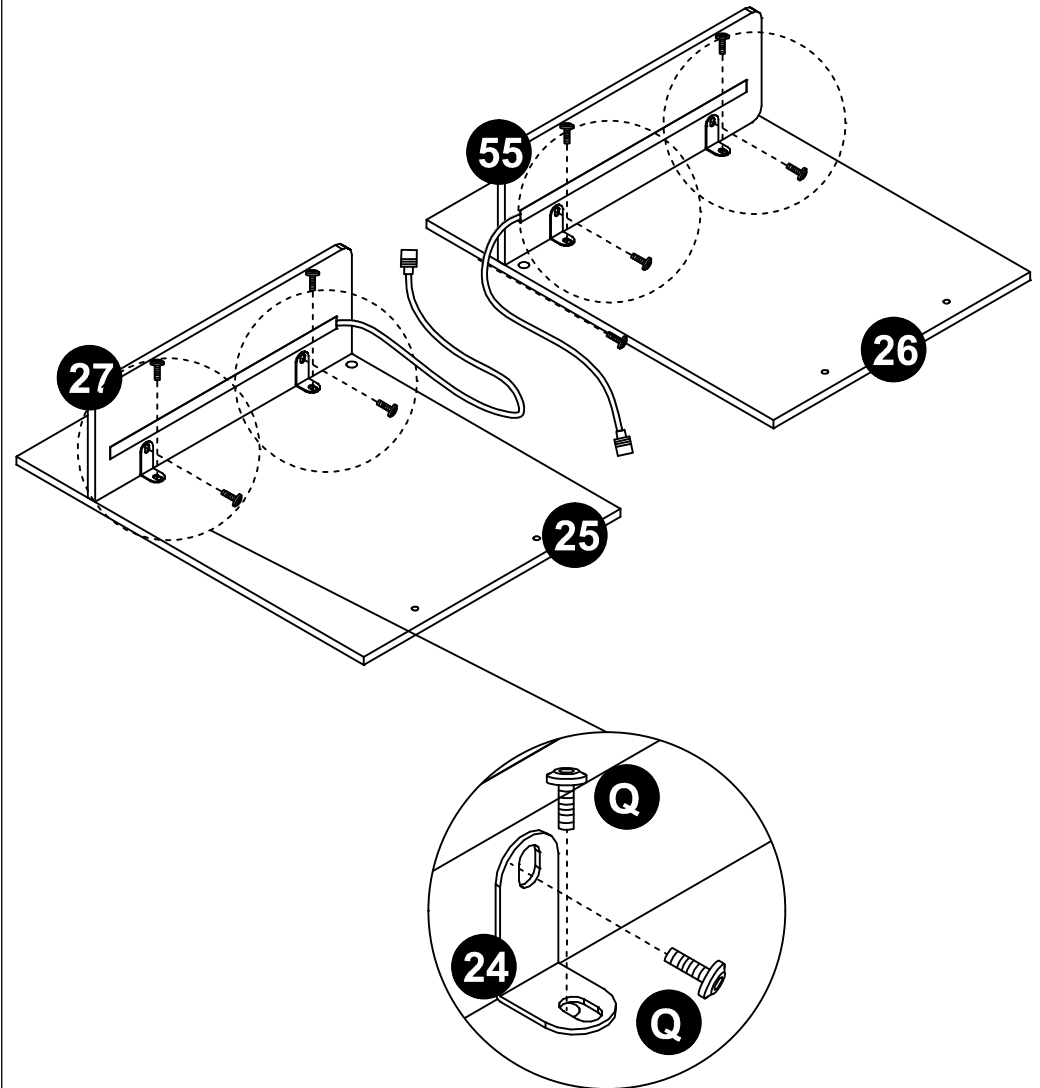

 **Q** X 8
M6*10


step 42

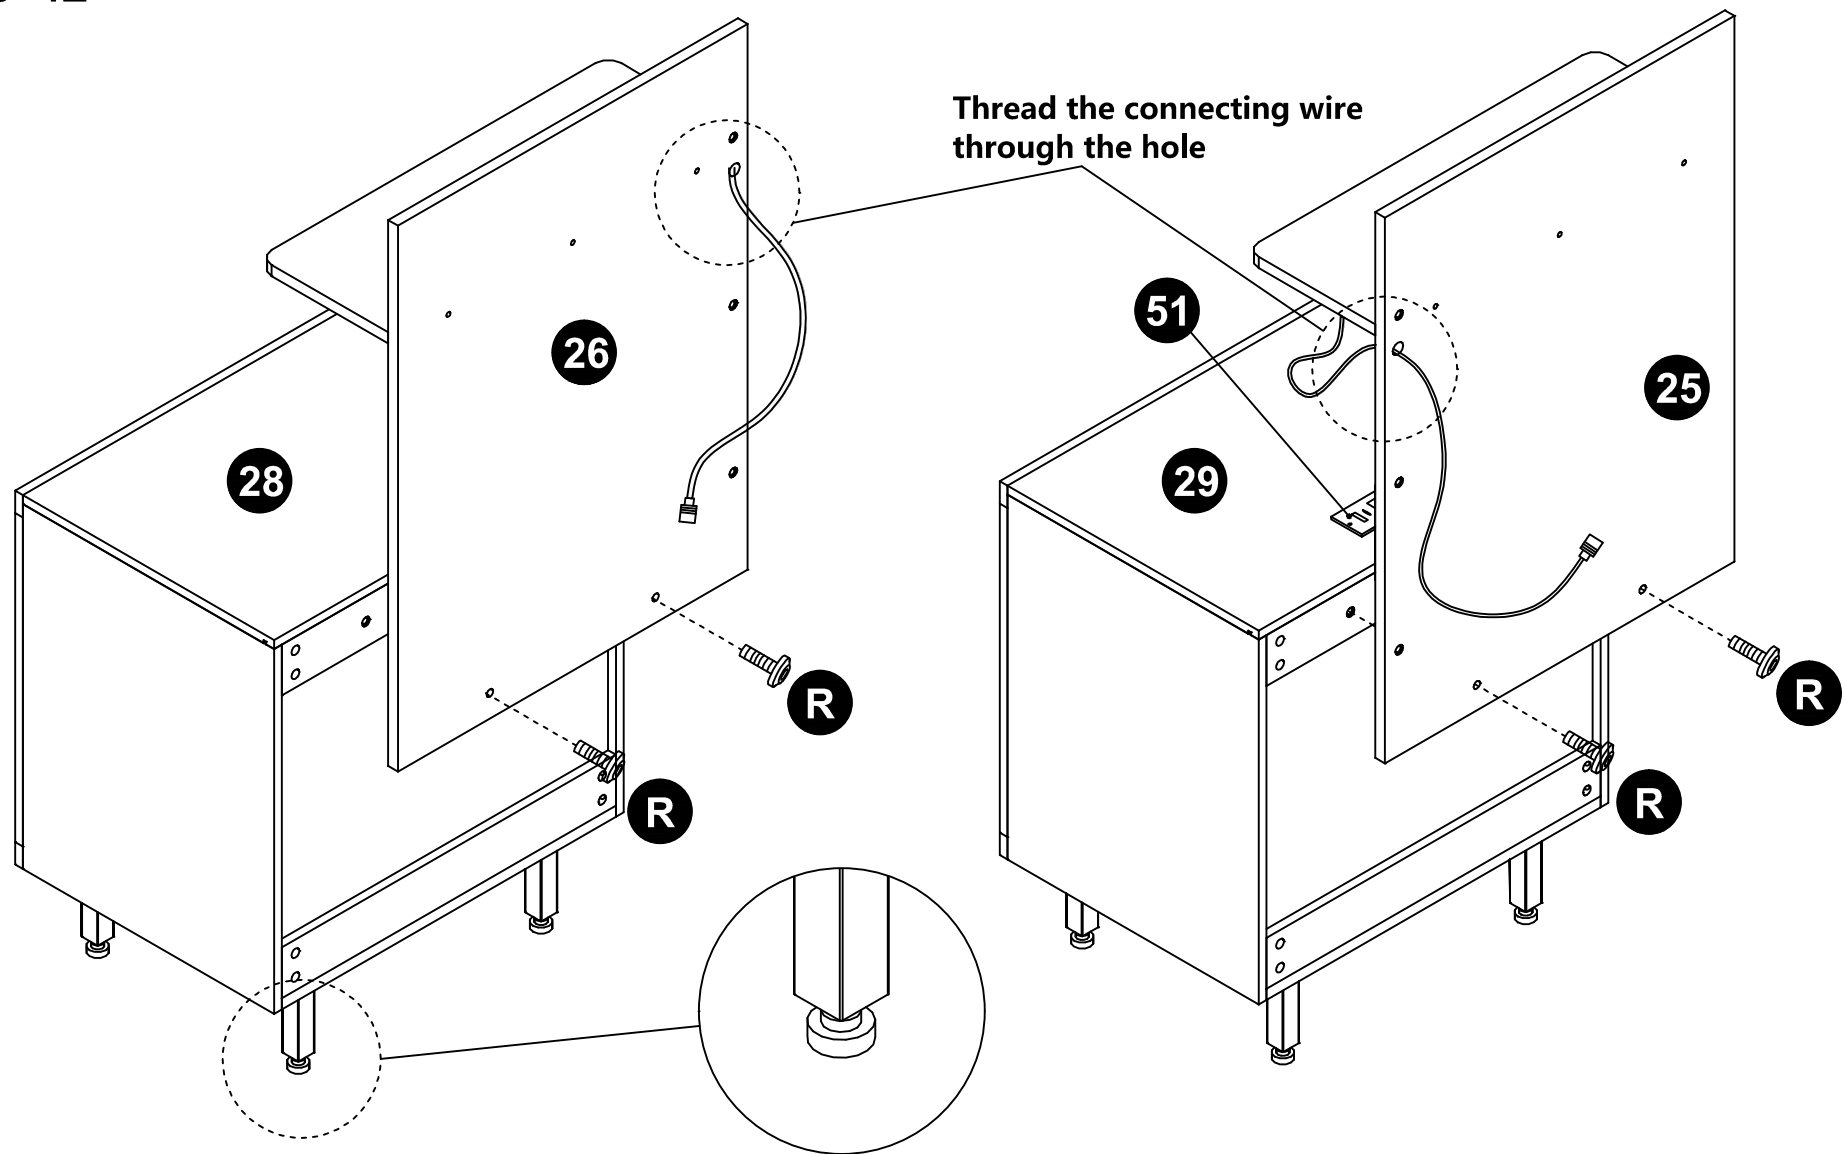

 **R** X 4
M6*25


Assembly Instruction

step 43

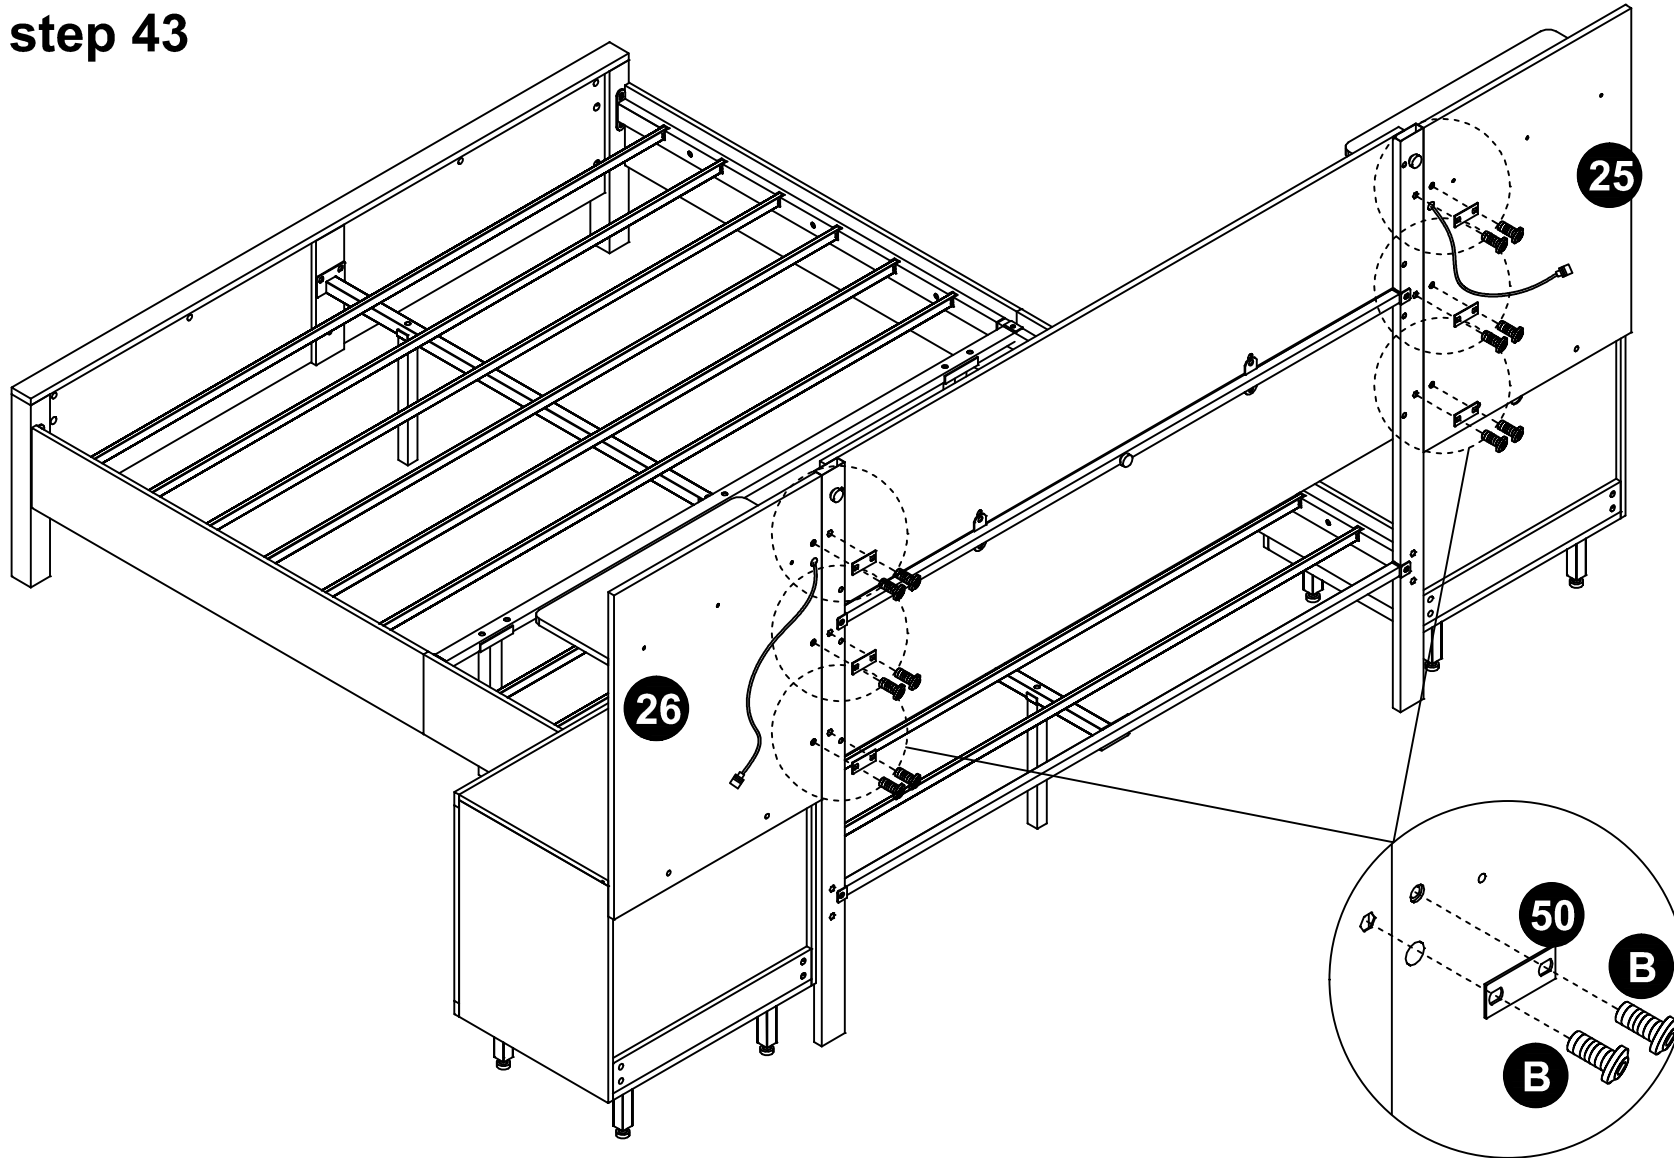


 **B** X 12
M8*10




Assembly Instruction

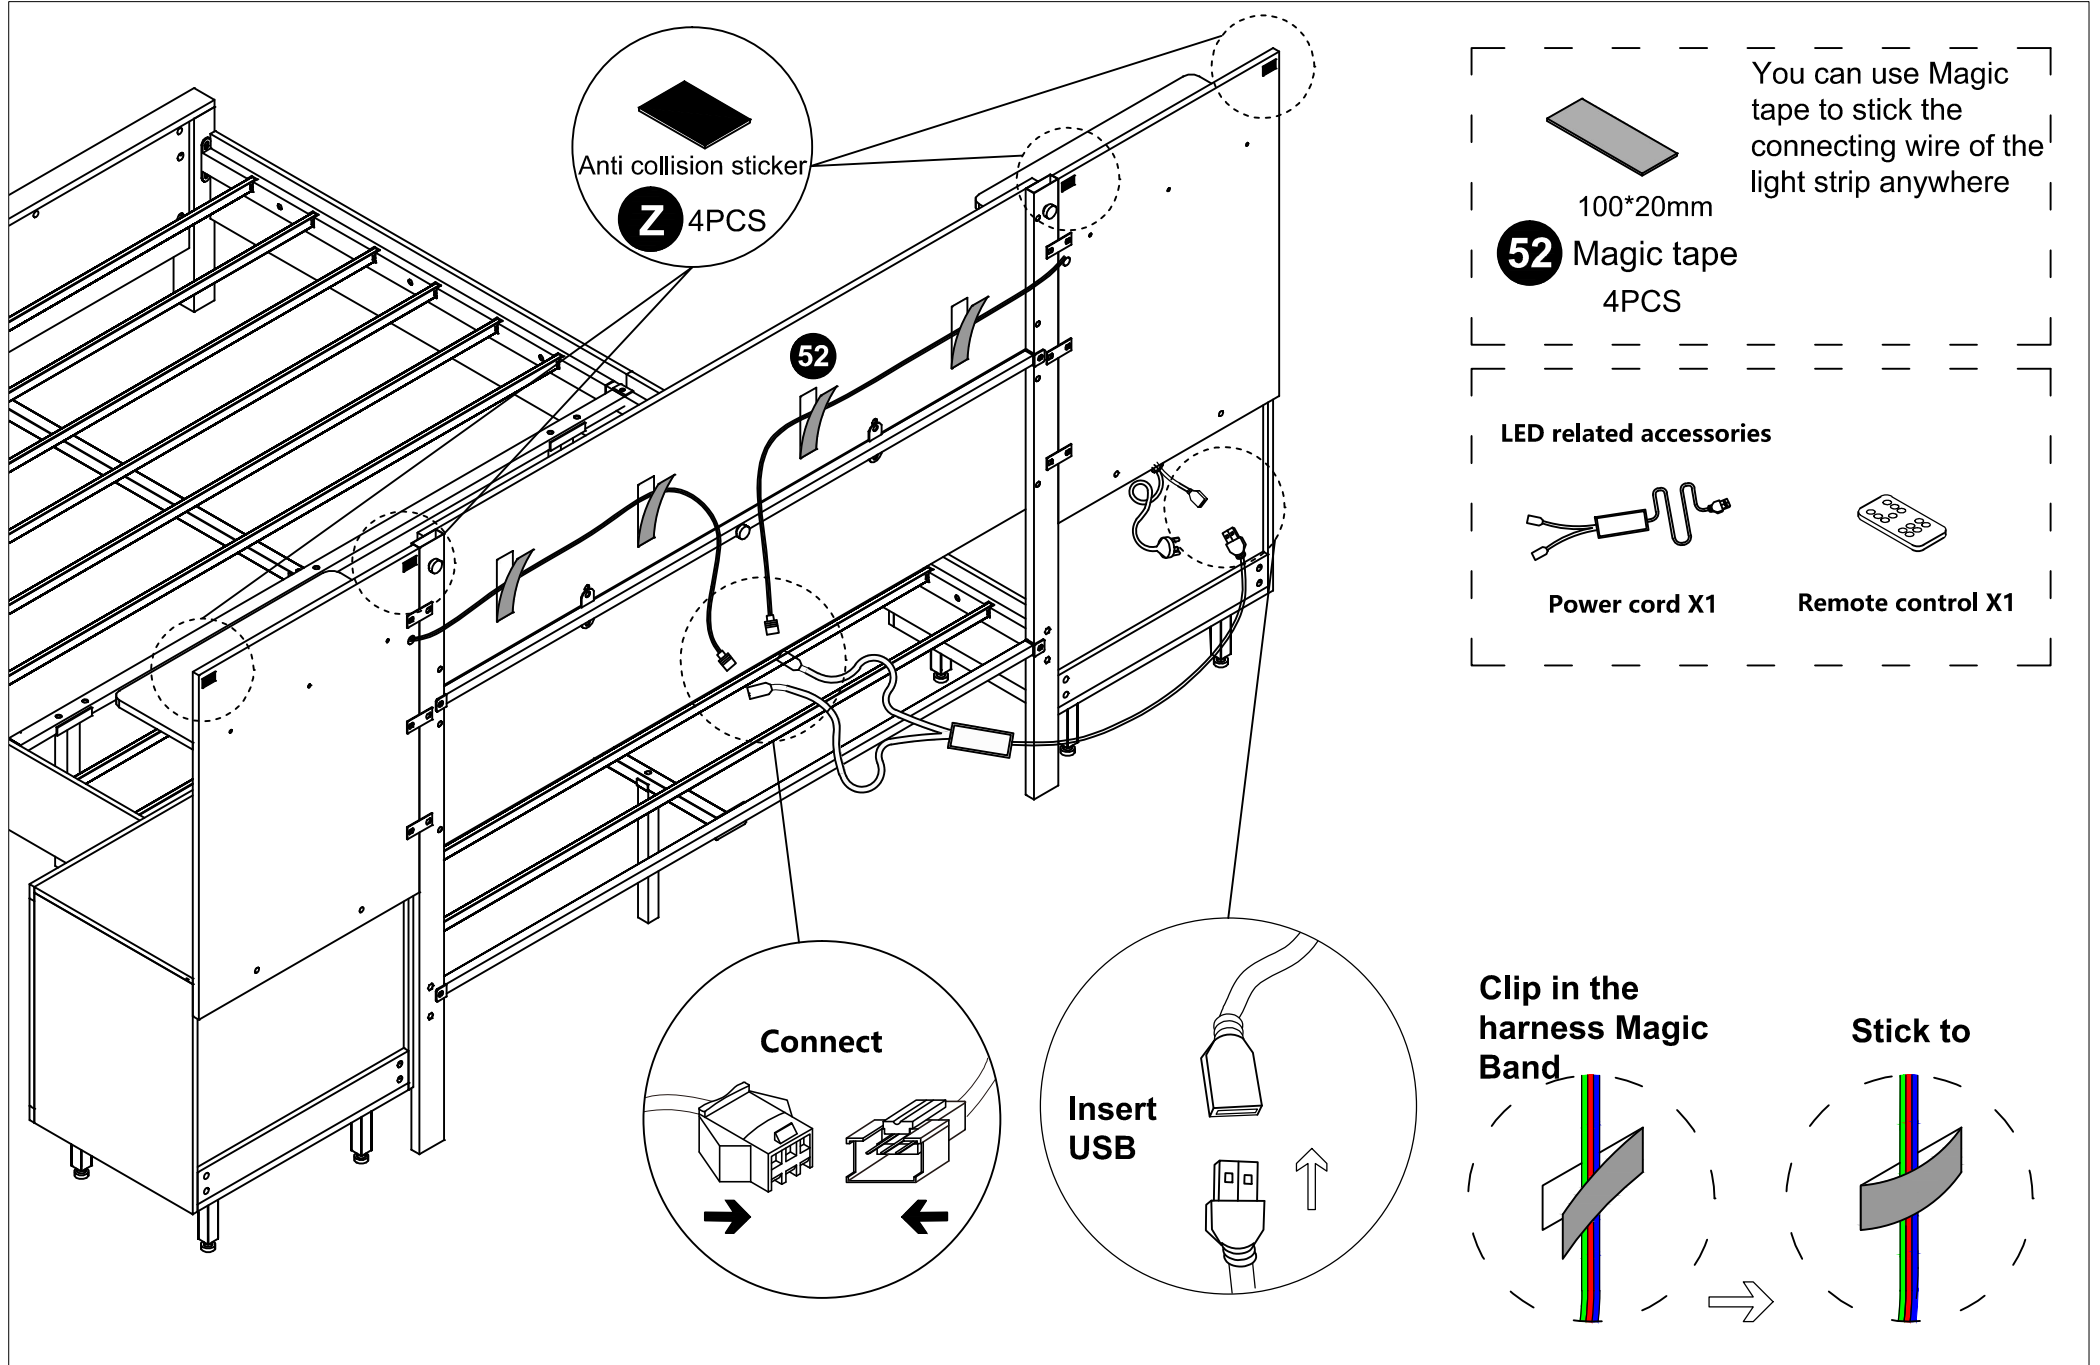

Assembly Instruction

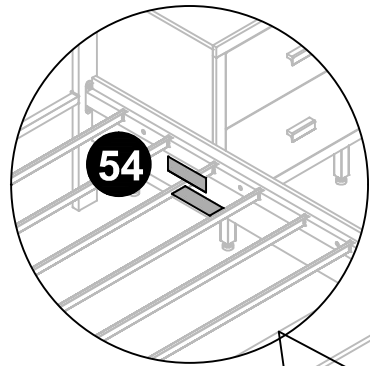


Stick part 54 onto the inside of part 4 and the bottom of the cabinet, and use part 53 to tightly stick the cabinet and part 4 together

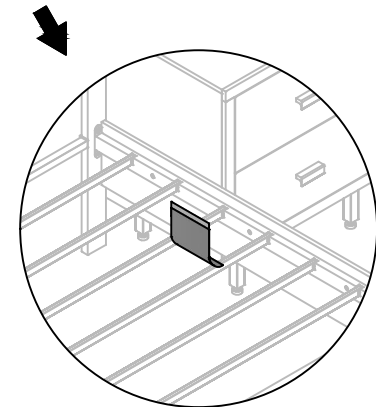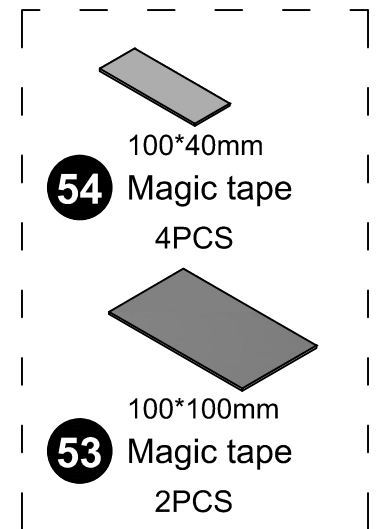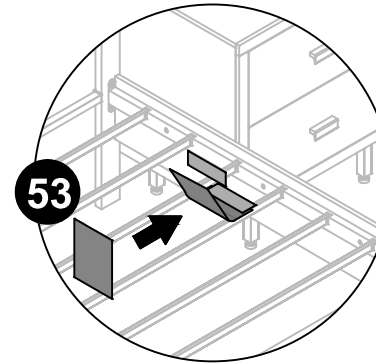


First, stick part 54 onto the Magic tape at the bottom of the cabinet, then firmly pull and stick it onto the Magic tape of part 4


Assembly Instruction

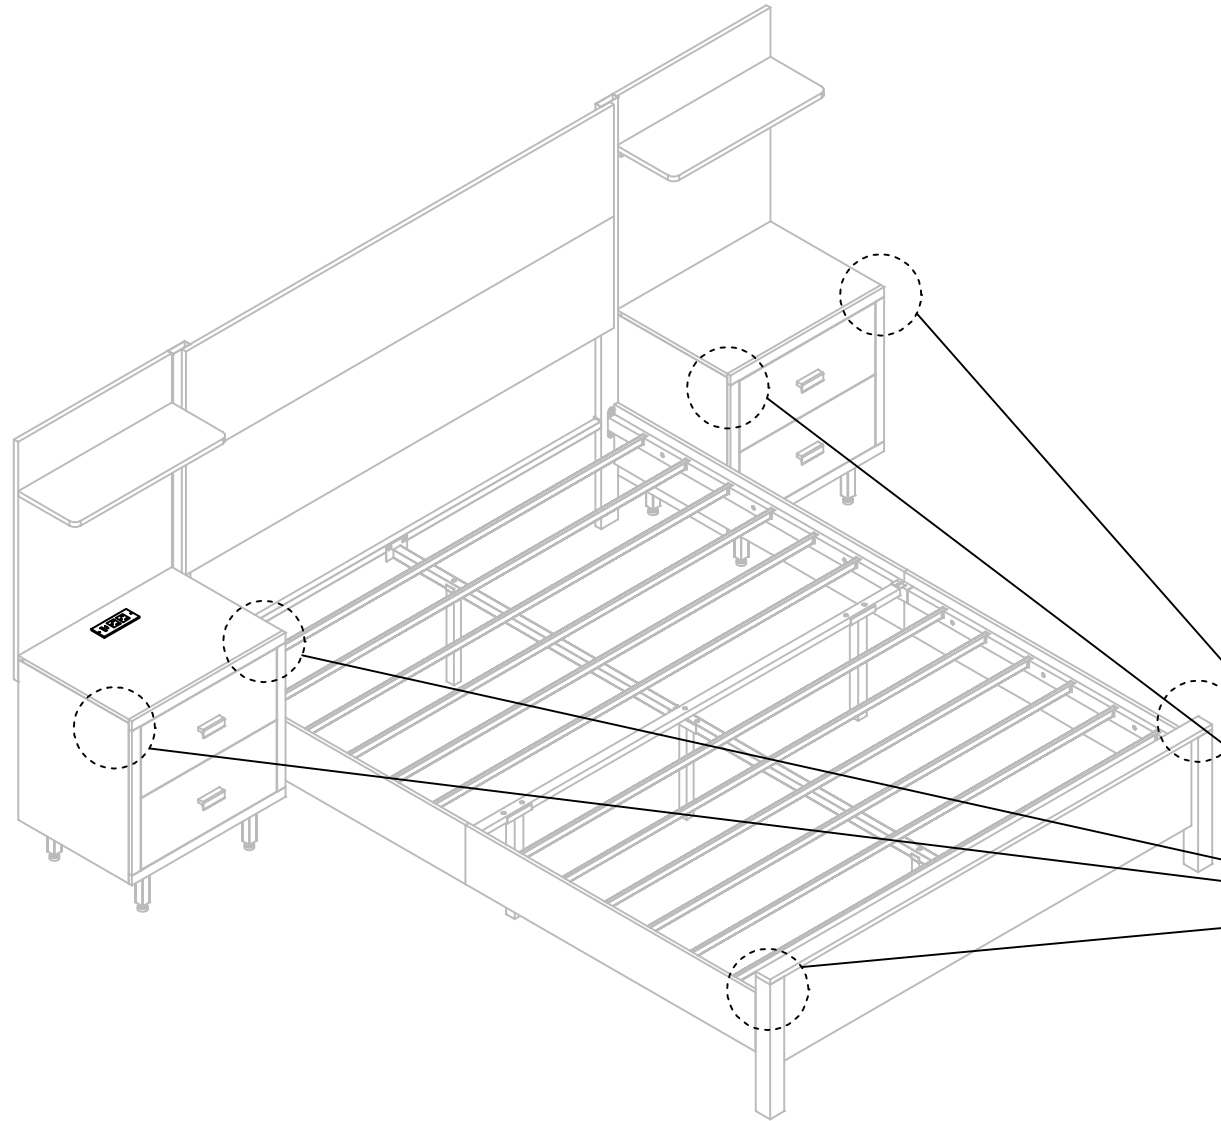


Crash pads

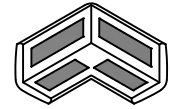


49 6PCS

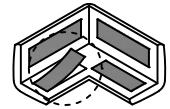

Tear up the double-sided tape on 49 before installation

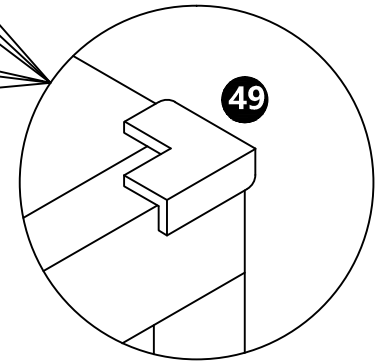

Assembly Instruction

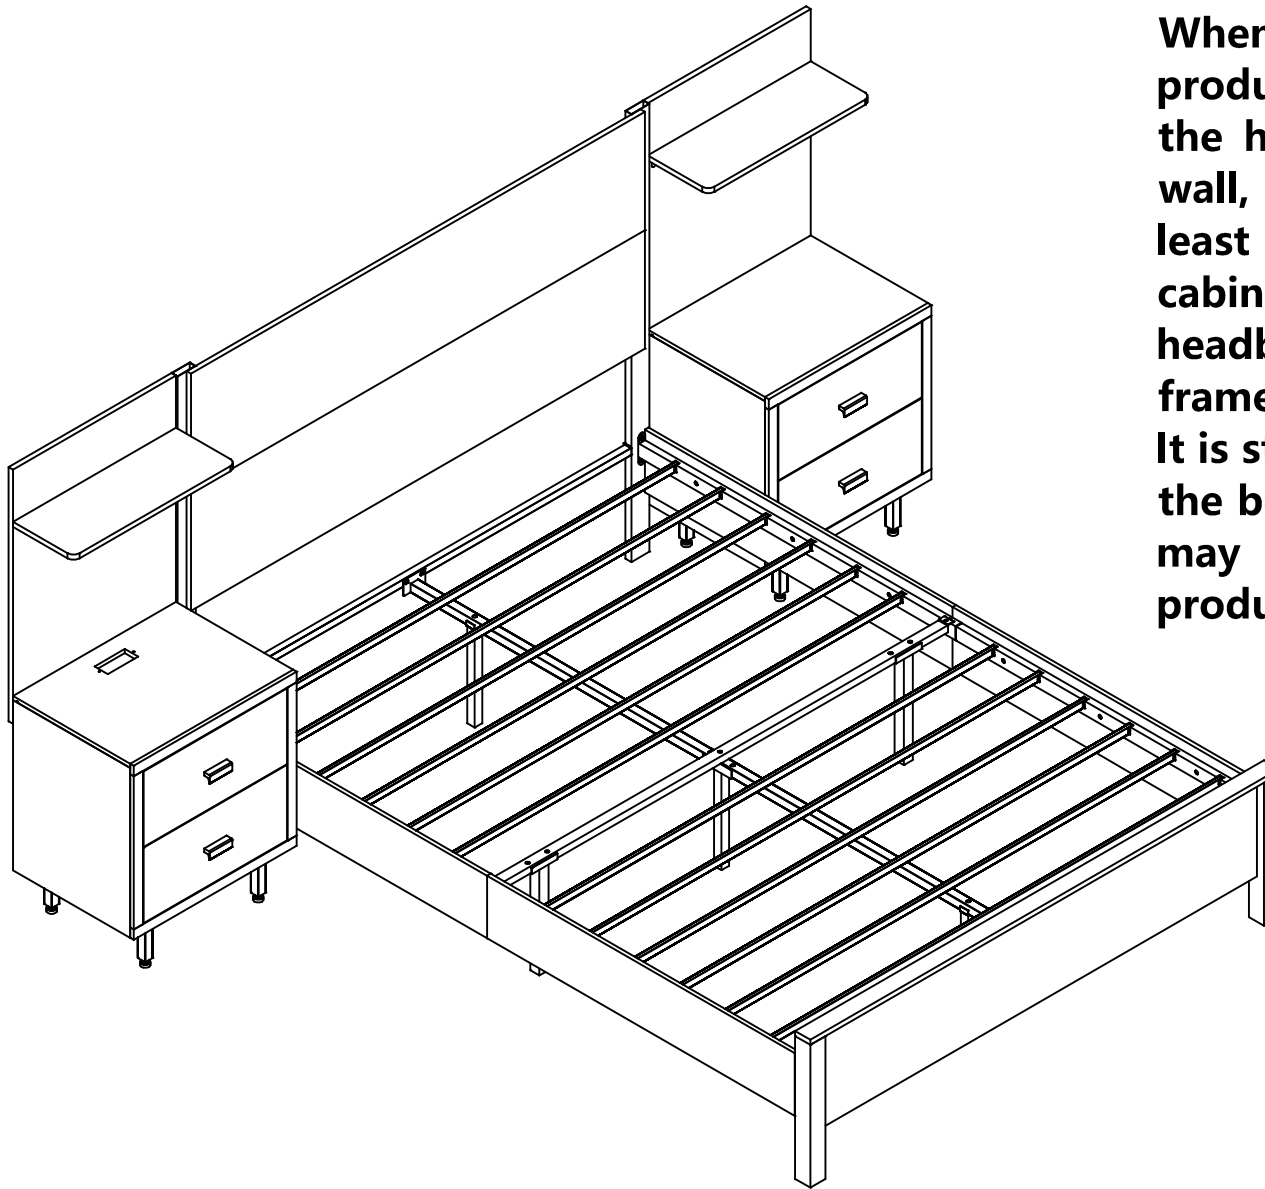

When moving the assembled product to a position where the headboard is against the wall, please ensure that at least three people lift both cabinets on either side of the headboard along with the bed frame.

It is strictly prohibited to push the bed frame directly, as this may cause damage to the product!

Installation Complete