


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS


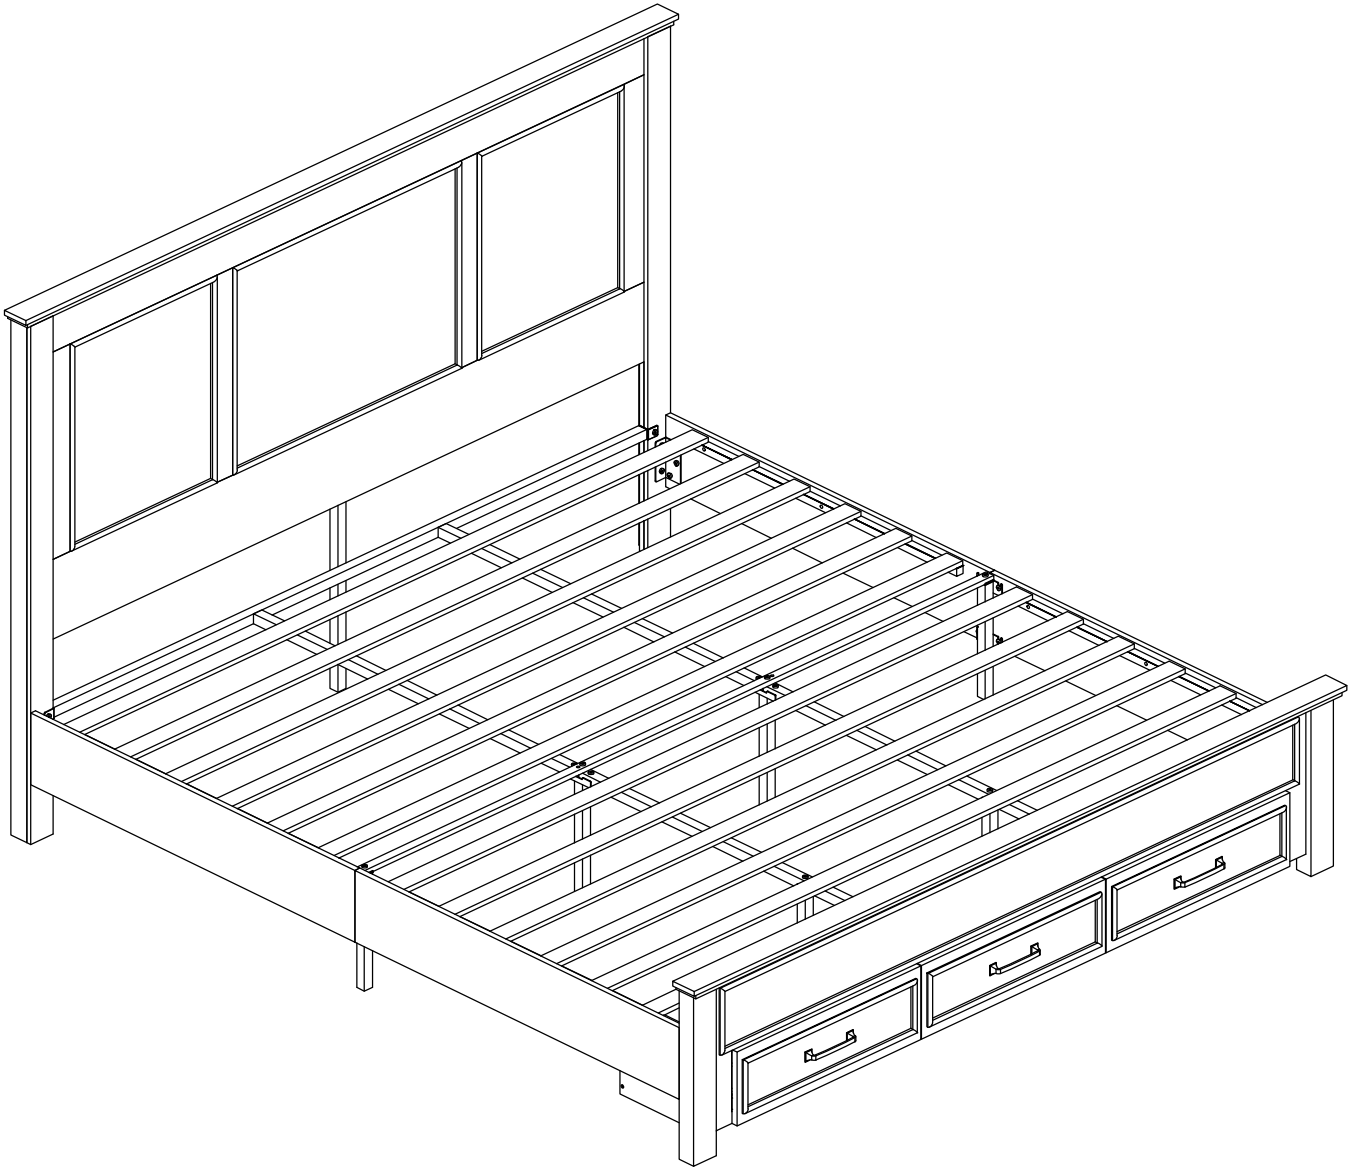


Dear Customers,
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.
MADE IN CHINA

ASSEMBLY INSTRUCTIONS



Please follow the instruction manuals and use a pad to protect the product during your assembly.

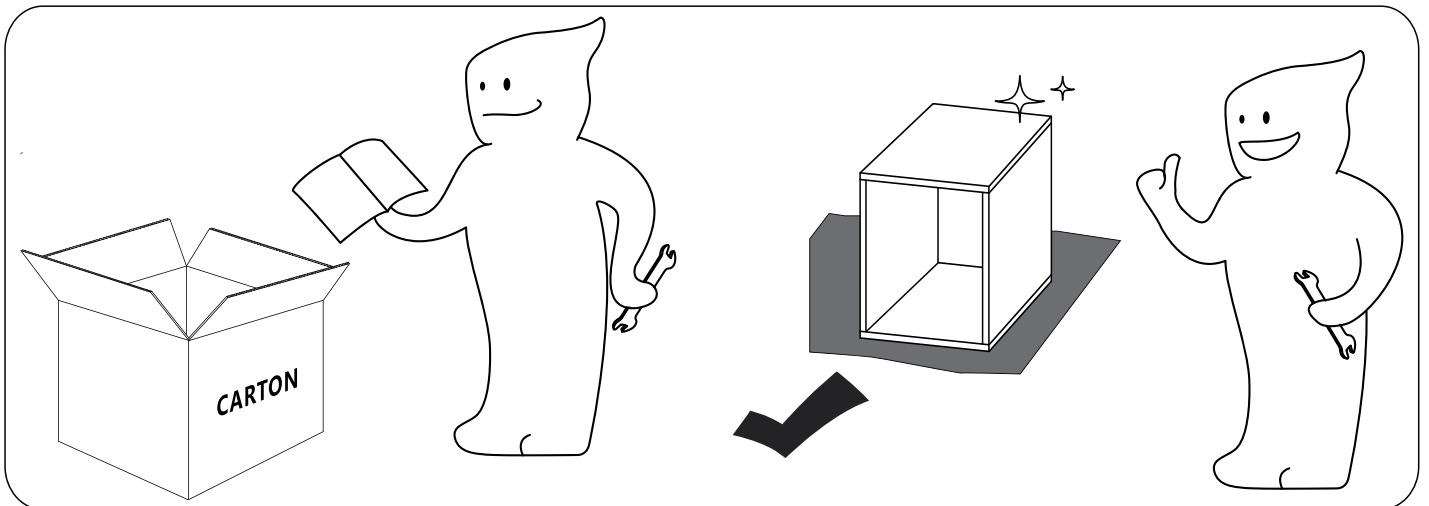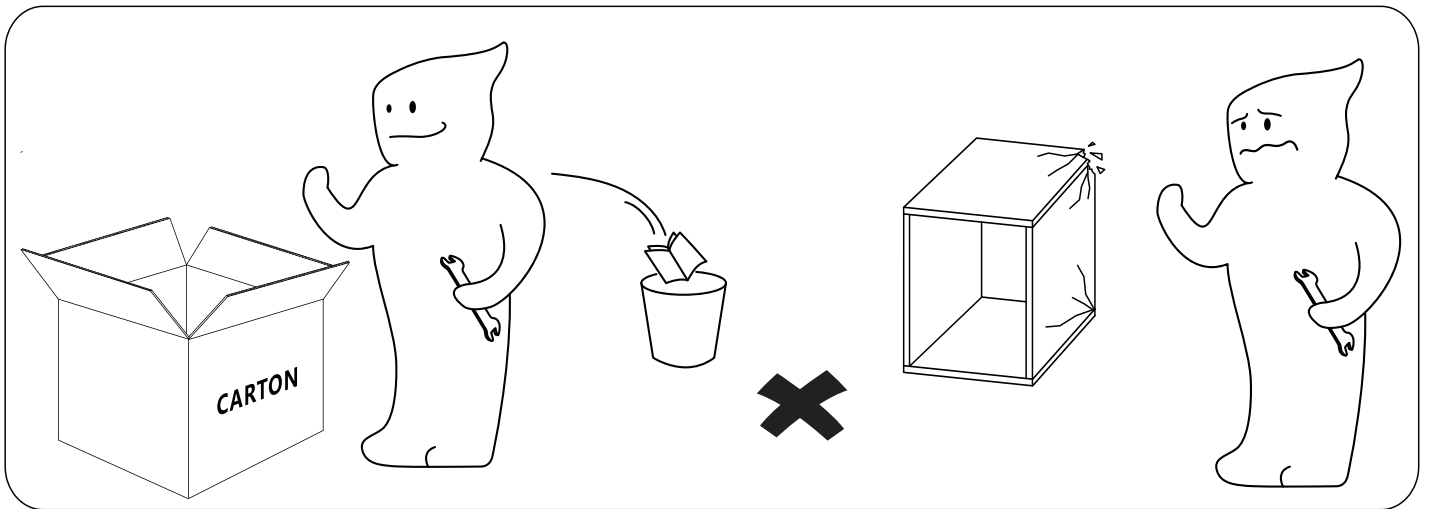


Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.























For easier and better assembly, **2** or more adults are required.














ASSEMBLY INSTRUCTIONS

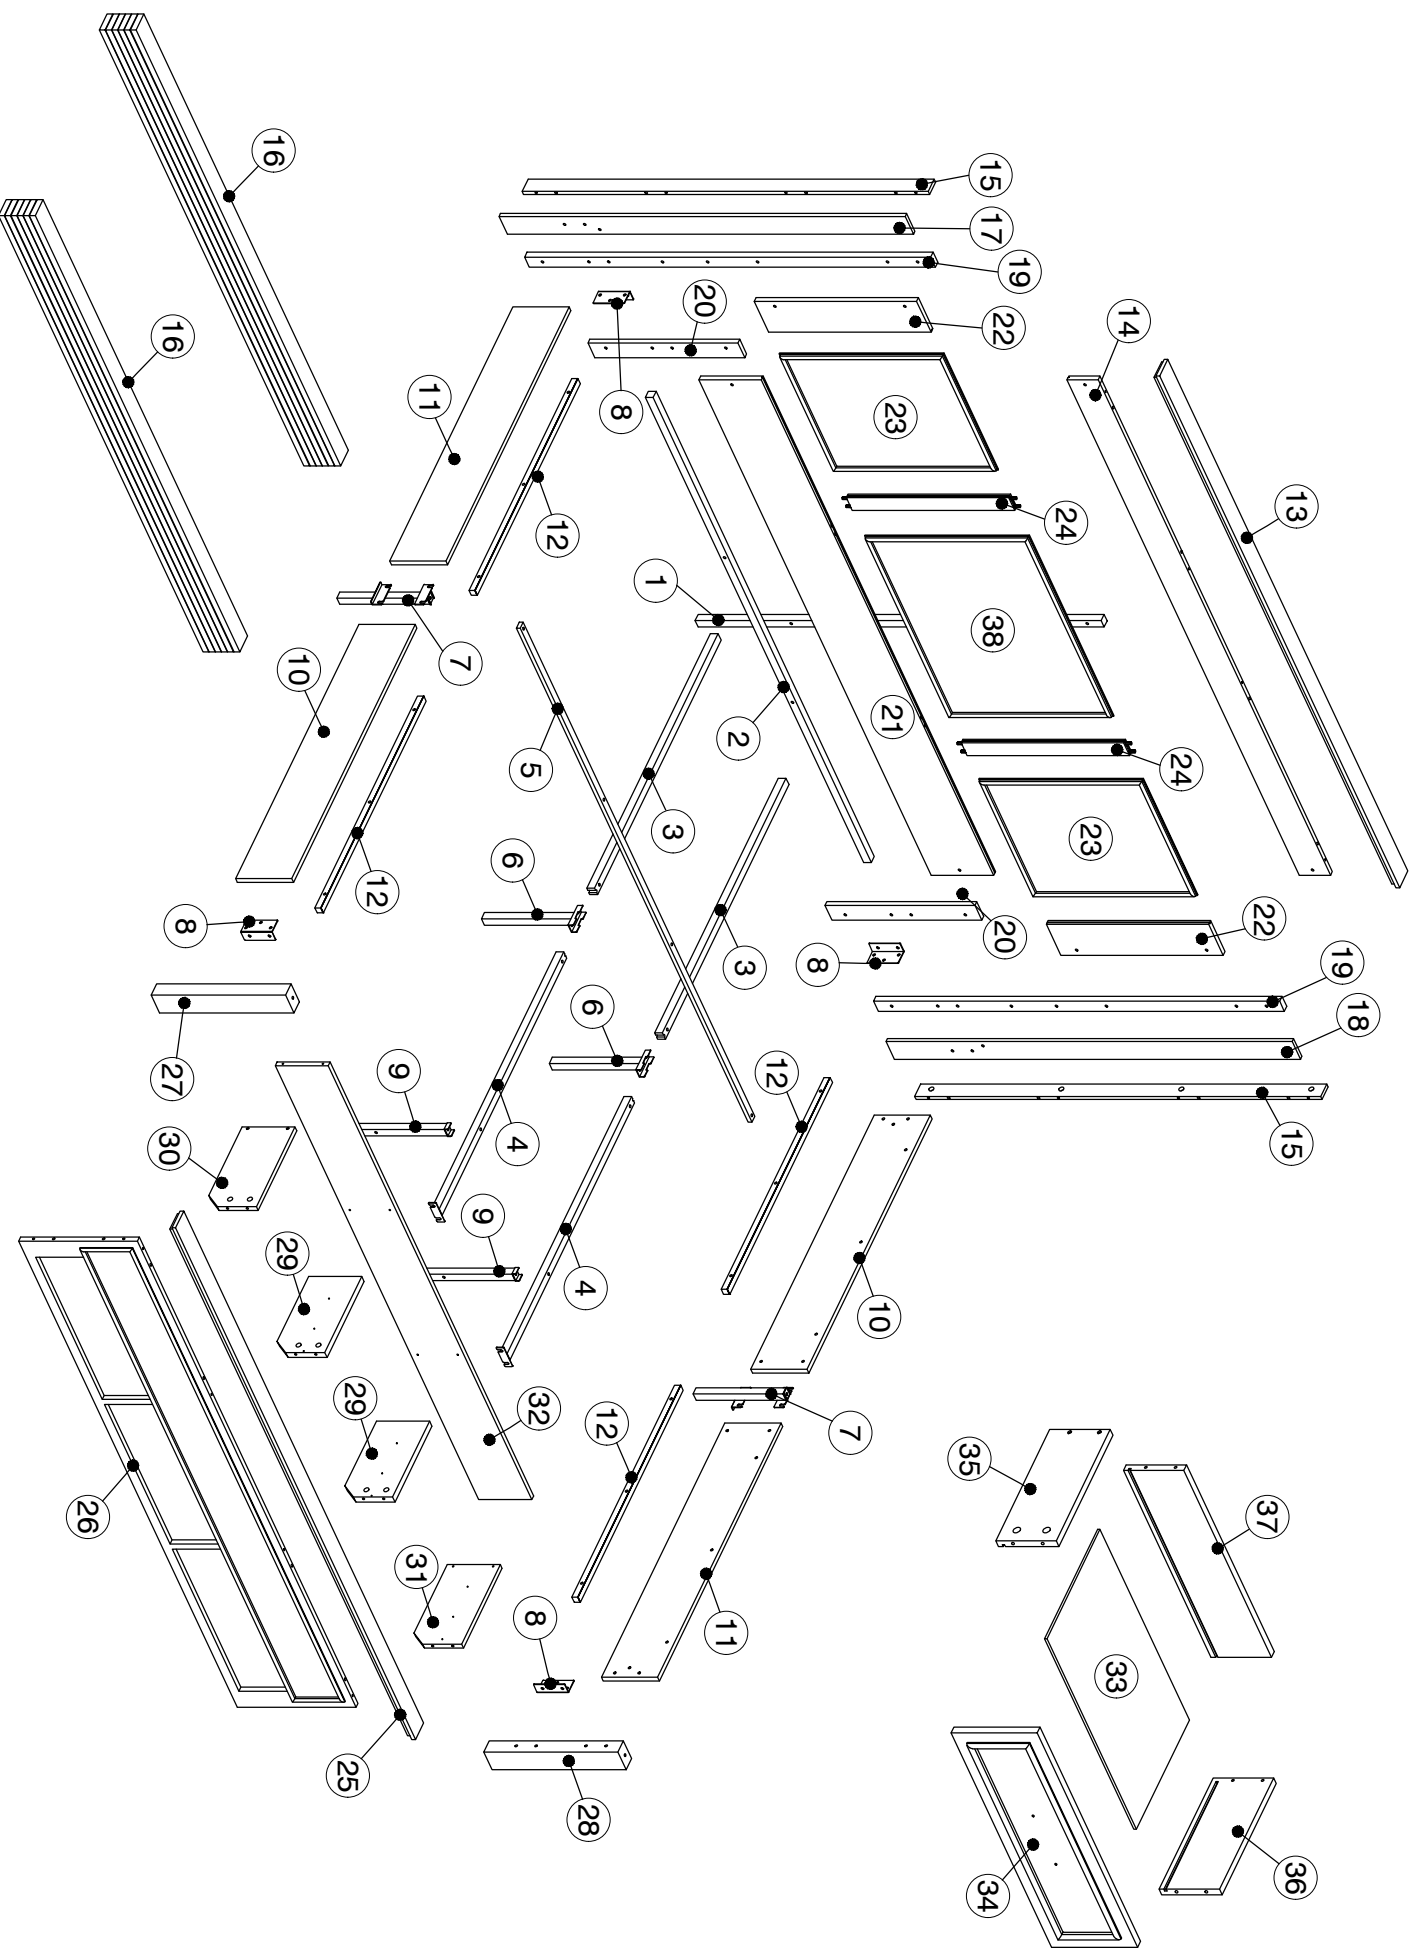










ASSEMBLY INSTRUCTIONS

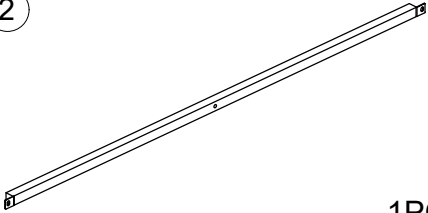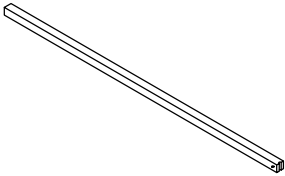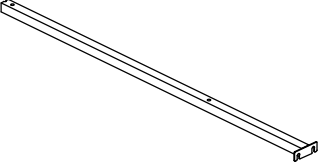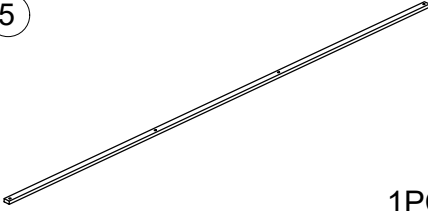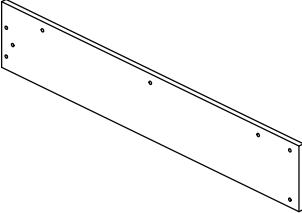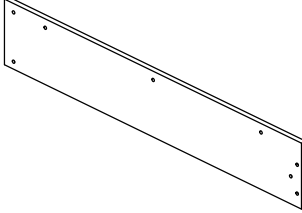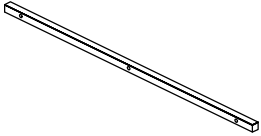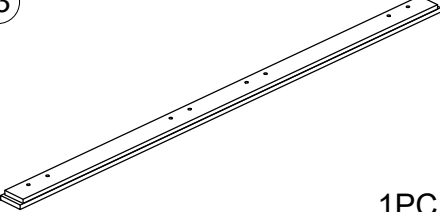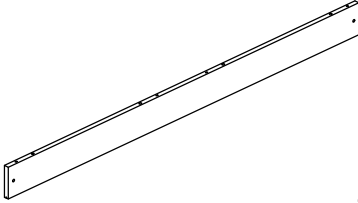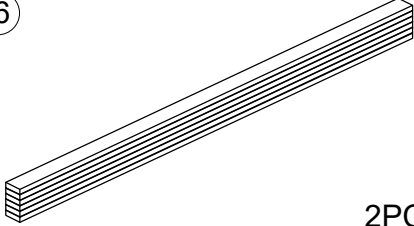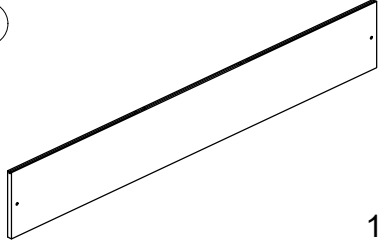1  1PC	2  1PC	3  2PCS
4  2PCS	5  1PC	6  2PCS
7  2PCS	8  4PCS	9  2PCS
10  2PCS	11  2PCS	12  4PCS
13  1PC	14  1PC	15  2PCS
16  2PCS	17  1PC	18  1PC
19  2PCS	20  2PCS	21  1PC
22  2PCS	23  2PCS	24  2PCS

ASSEMBLY INSTRUCTIONS

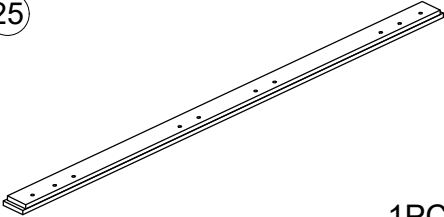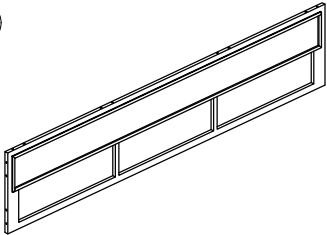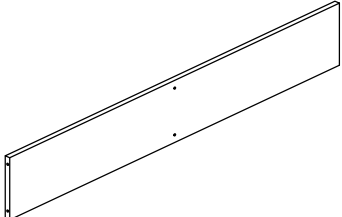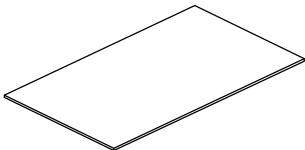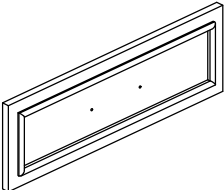
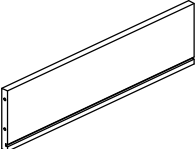
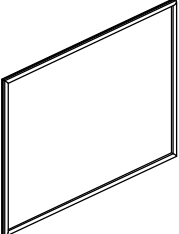
25  1PC	26  1PC	27  1PC
28  1PC	29  2PCS	30  1PC
31  1PC	32  1PC	33  3PCS
34  3PCS	35  3PCS	36  3PCS
37  3PCS	38  1PC	

ASSEMBLY INSTRUCTIONS

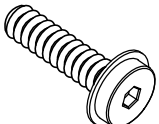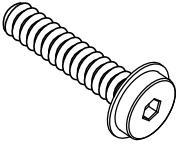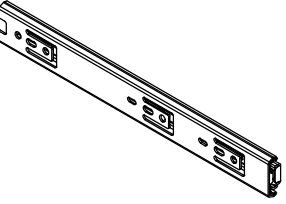A  40PCS+1PC	B  40PCS+1PC	C  M8*12mm 30PCS+1PC
D  M8*35mm 4PCS	E  M8*30mm 14PCS+1PC	F  M8*45mm 27PCS+1PC
G  6PCS	H  M5 1PC	I  Ø6*30mm 22PCS+1PC
J  6PCS	K  3PCS	L  Ø3.5*15mm 36PCS+1PC
M  Ø4*30mm 20PCS+1PC		



ASSEMBLY INSTRUCTIONS

1

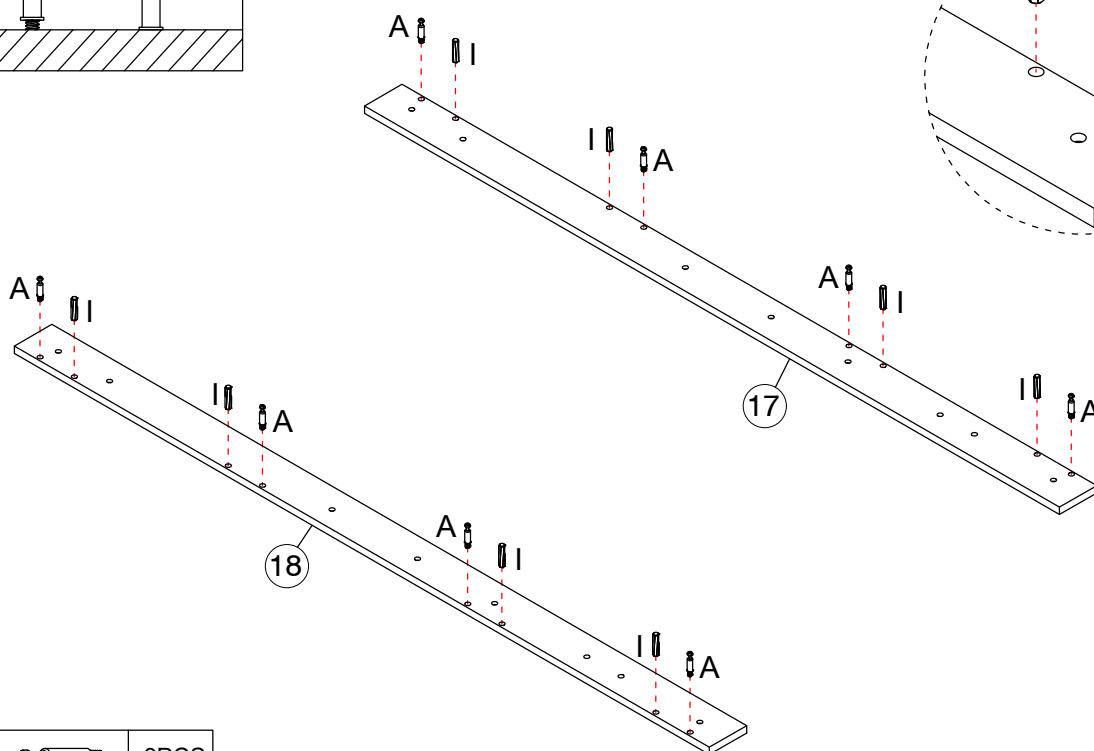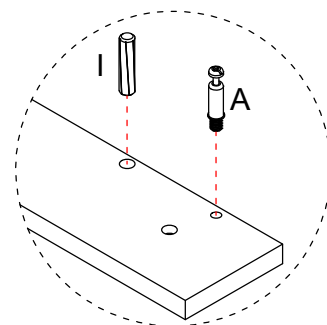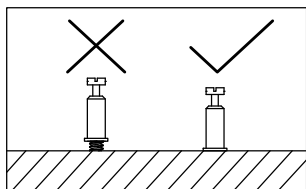

A		8PCS
I		8PCS


2

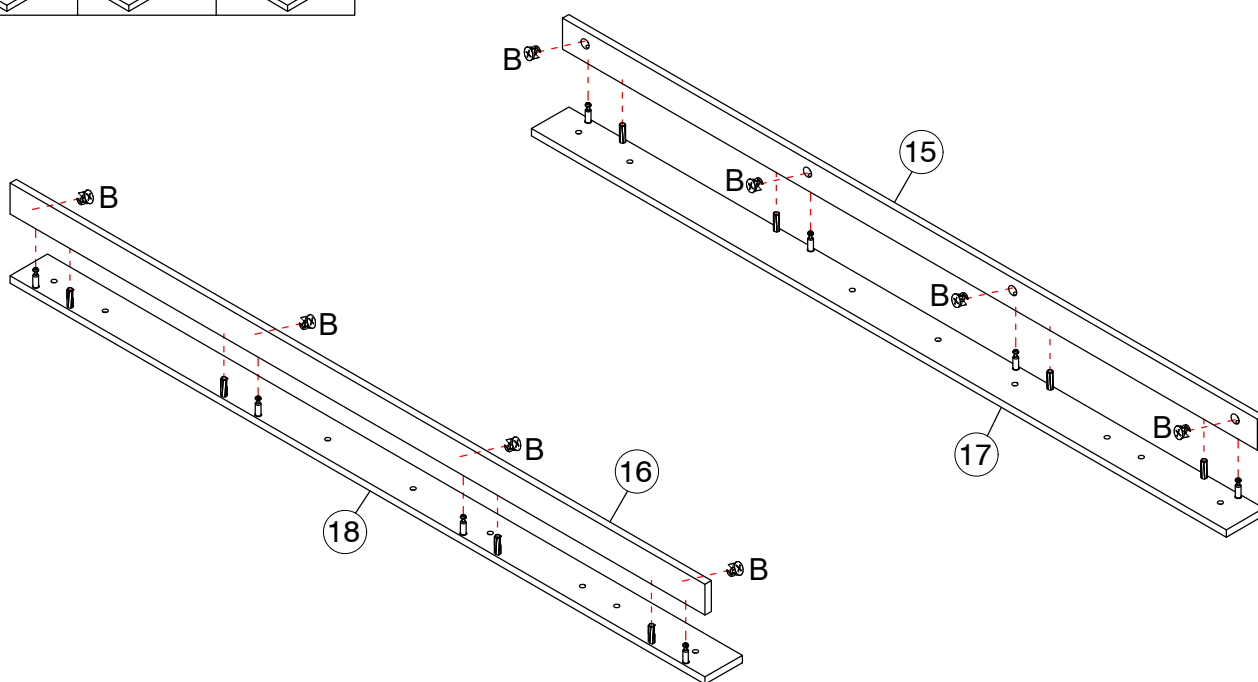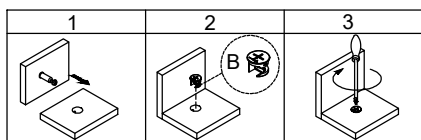


B		8PCS
---	---	------

ASSEMBLY INSTRUCTIONS

3

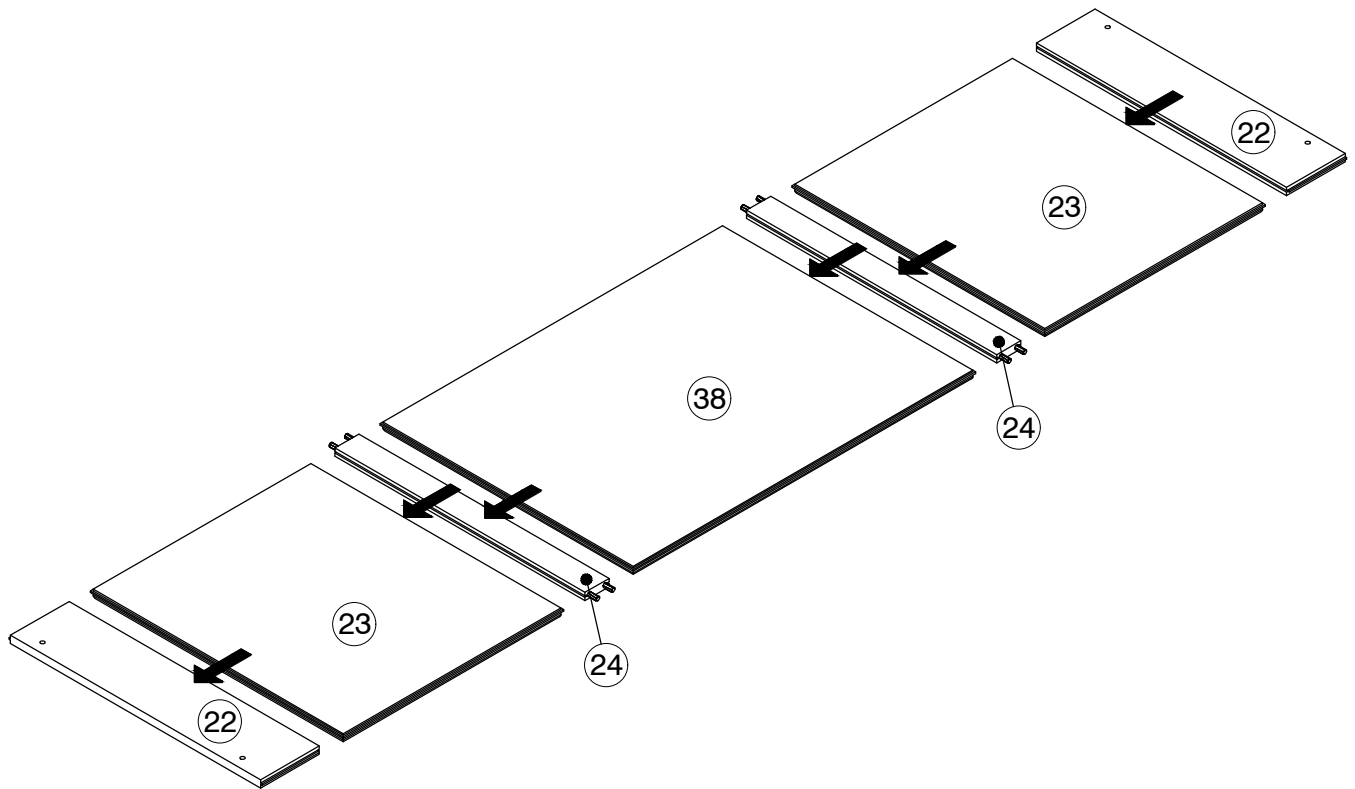


4

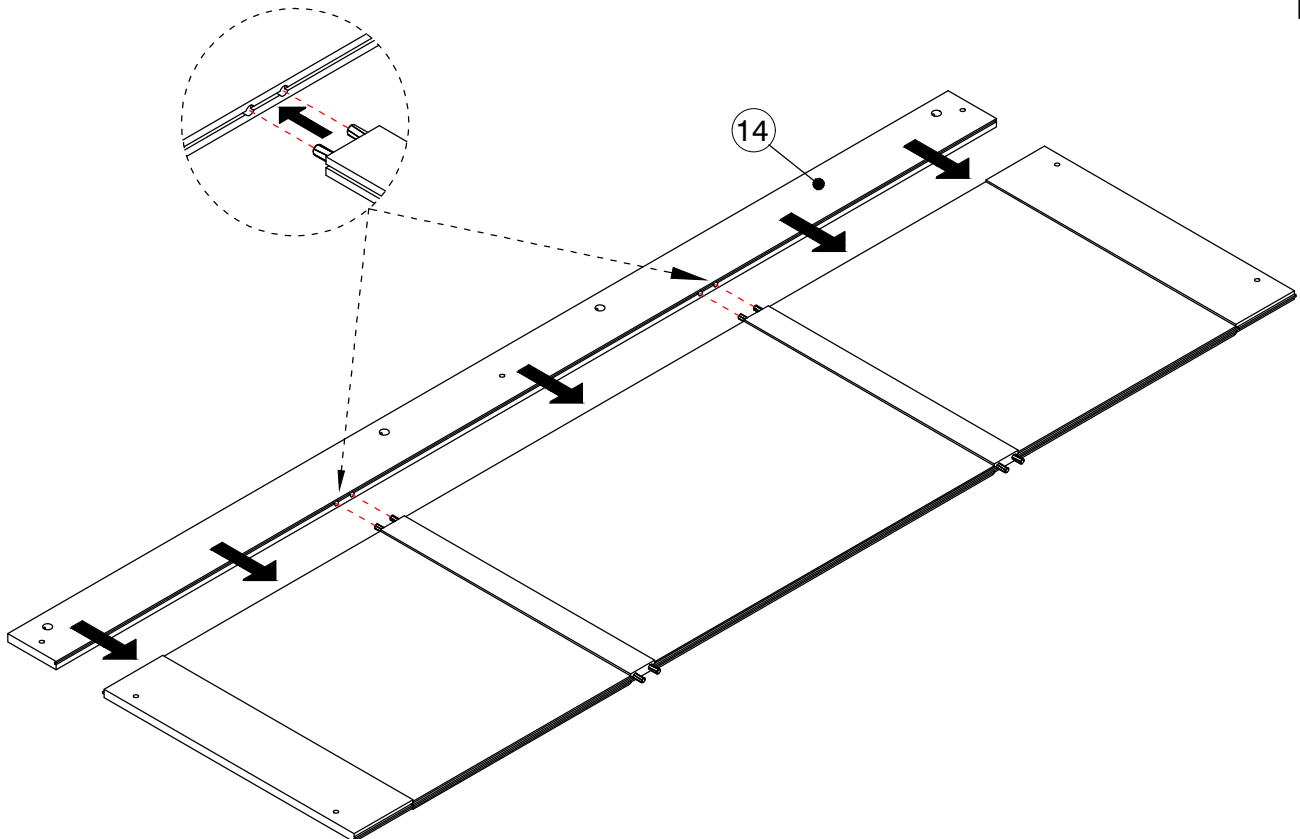


ASSEMBLY INSTRUCTIONS

5

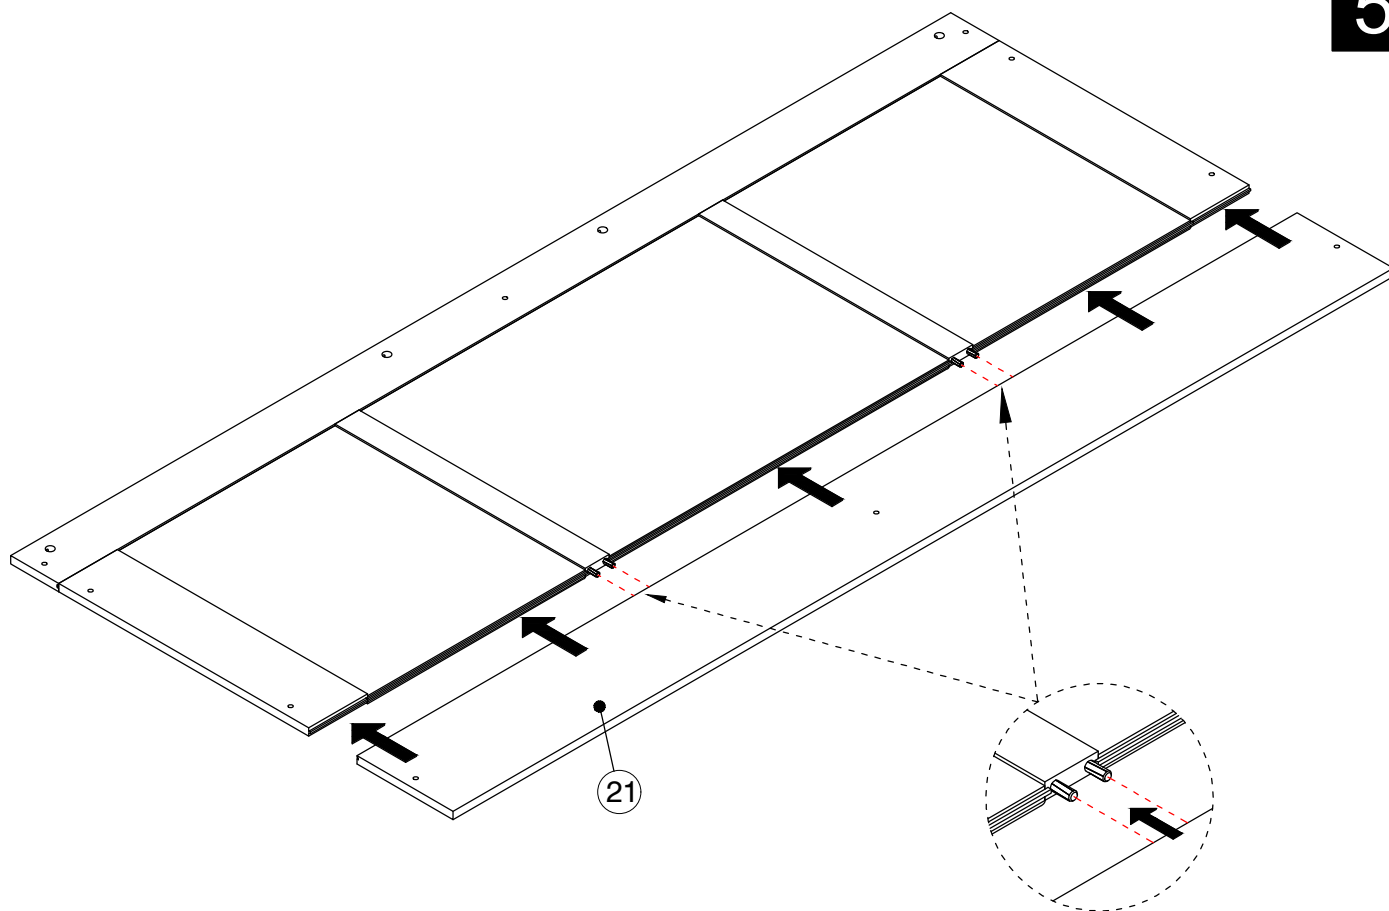


6


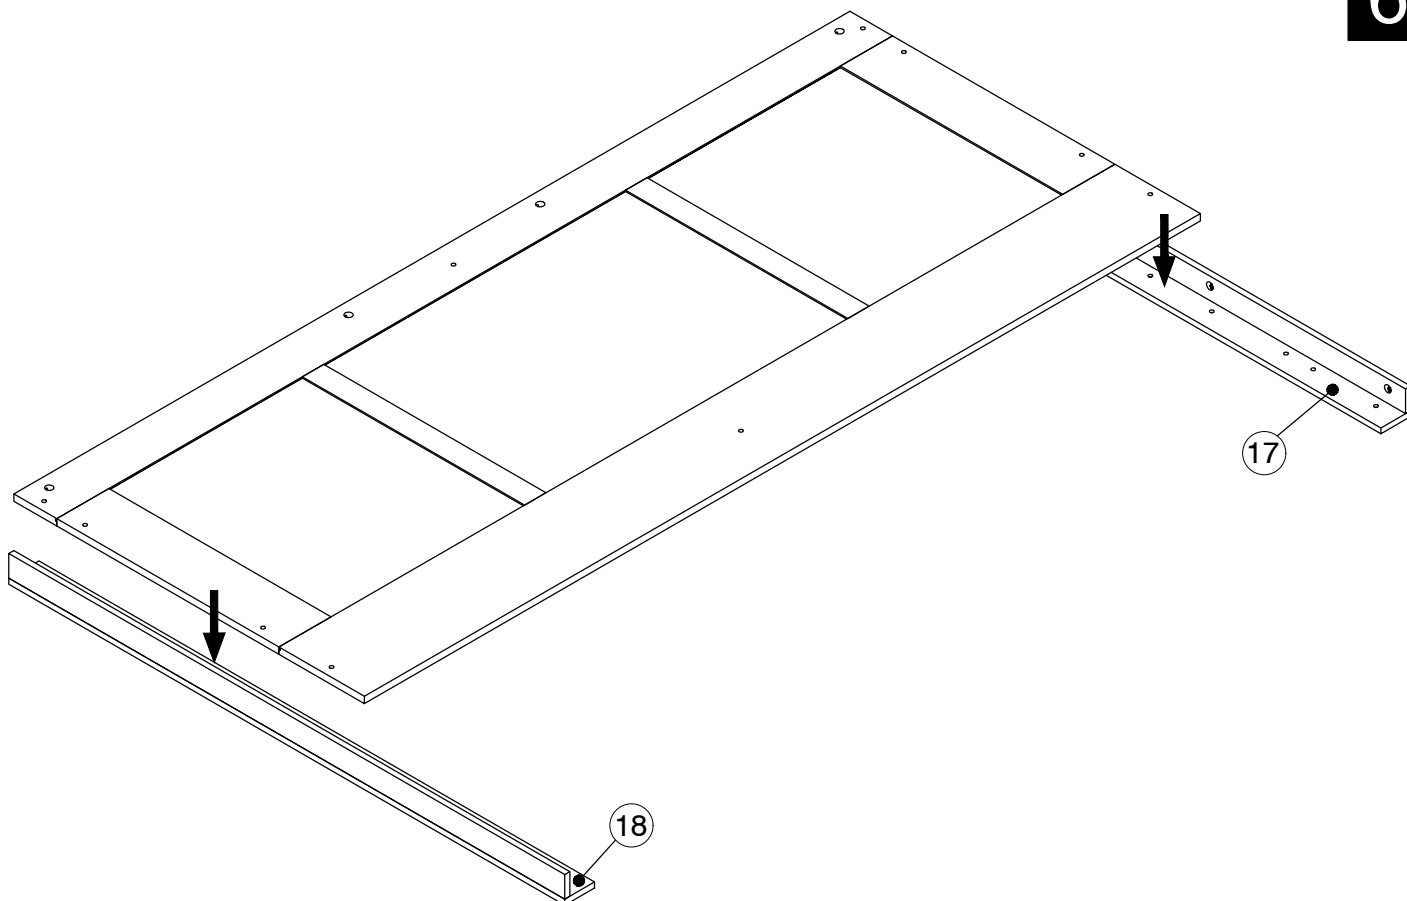


ASSEMBLY INSTRUCTIONS

7

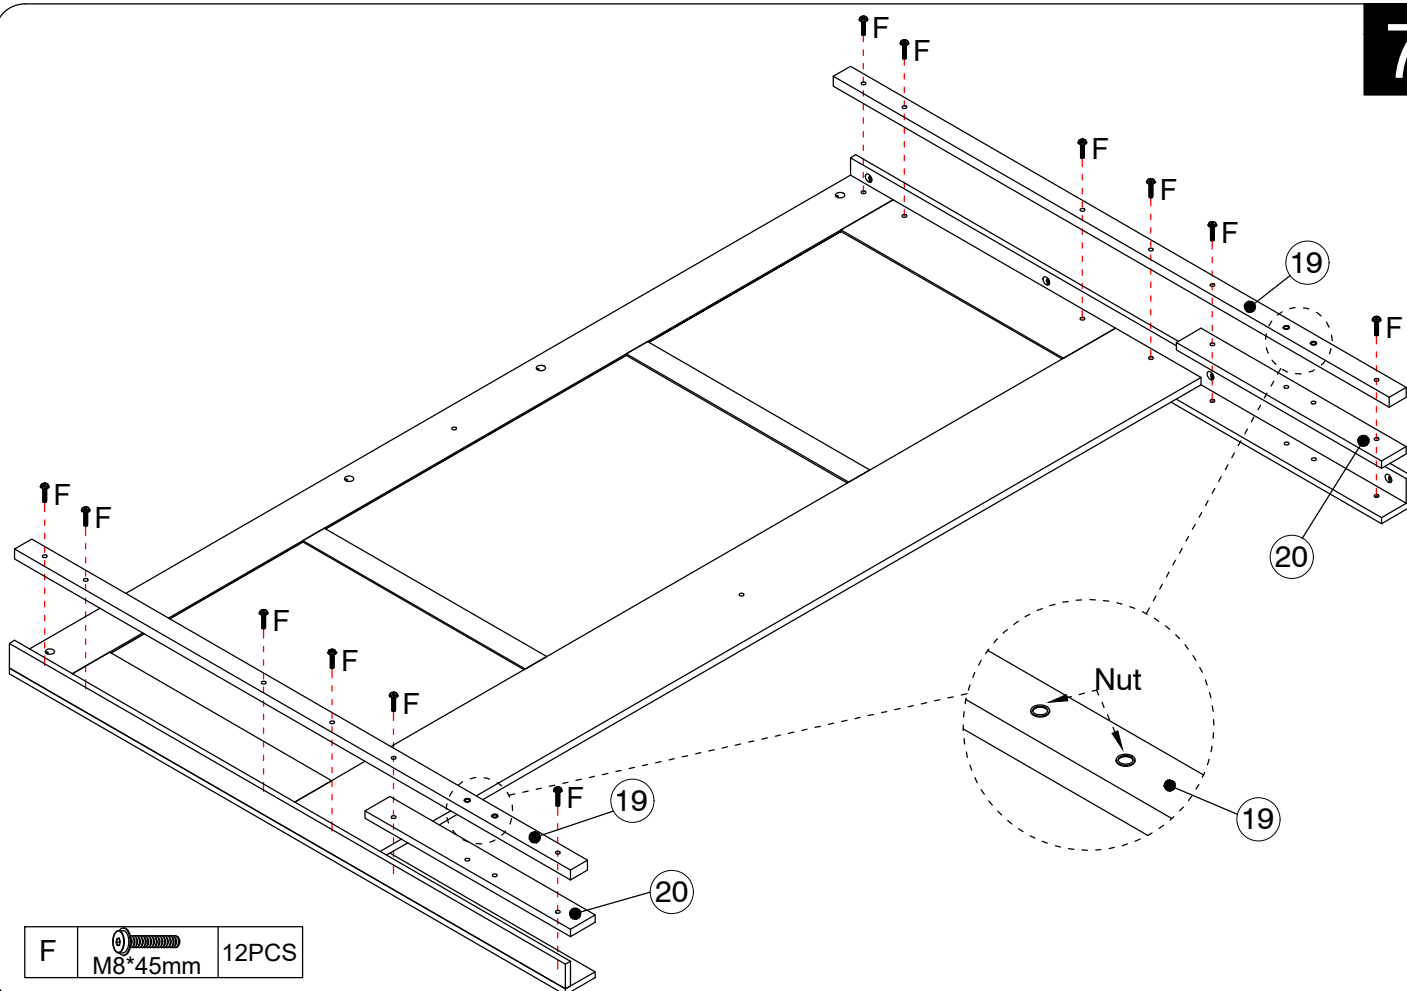




8

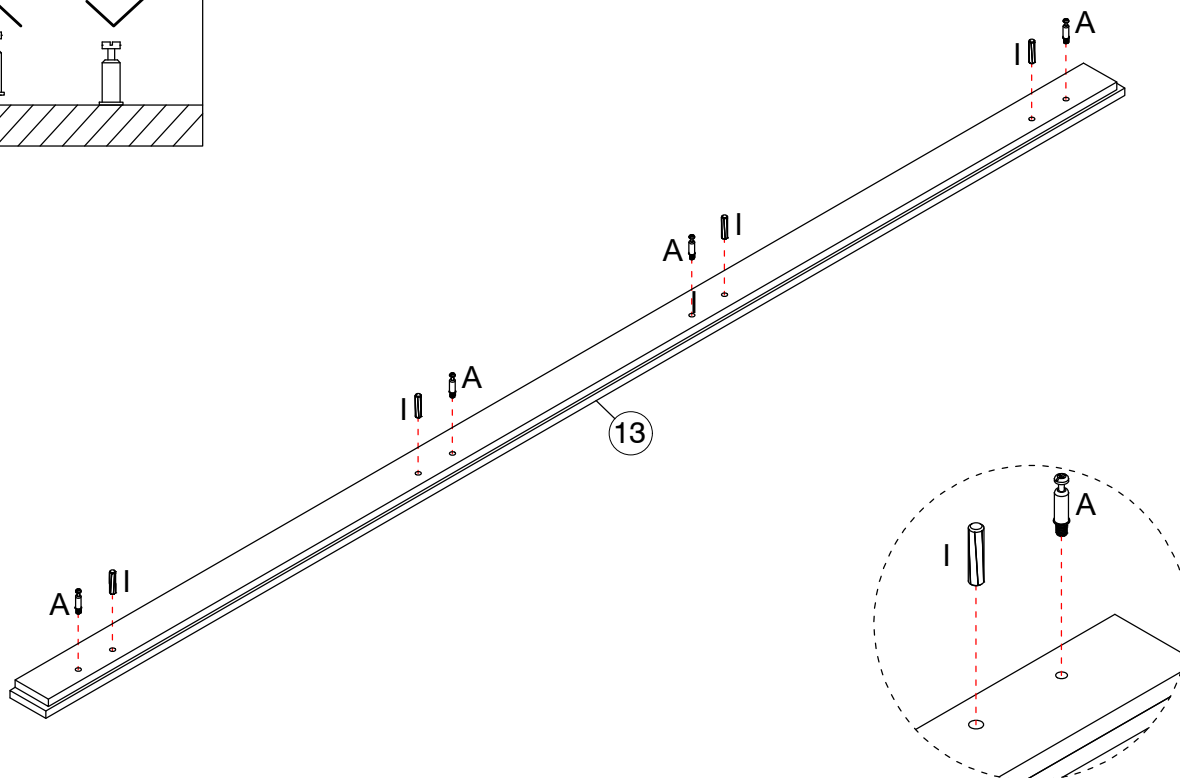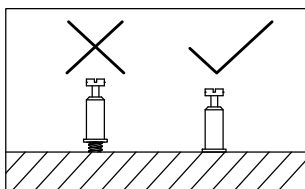



A		4PCS
I		4PCS

ASSEMBLY INSTRUCTIONS

9

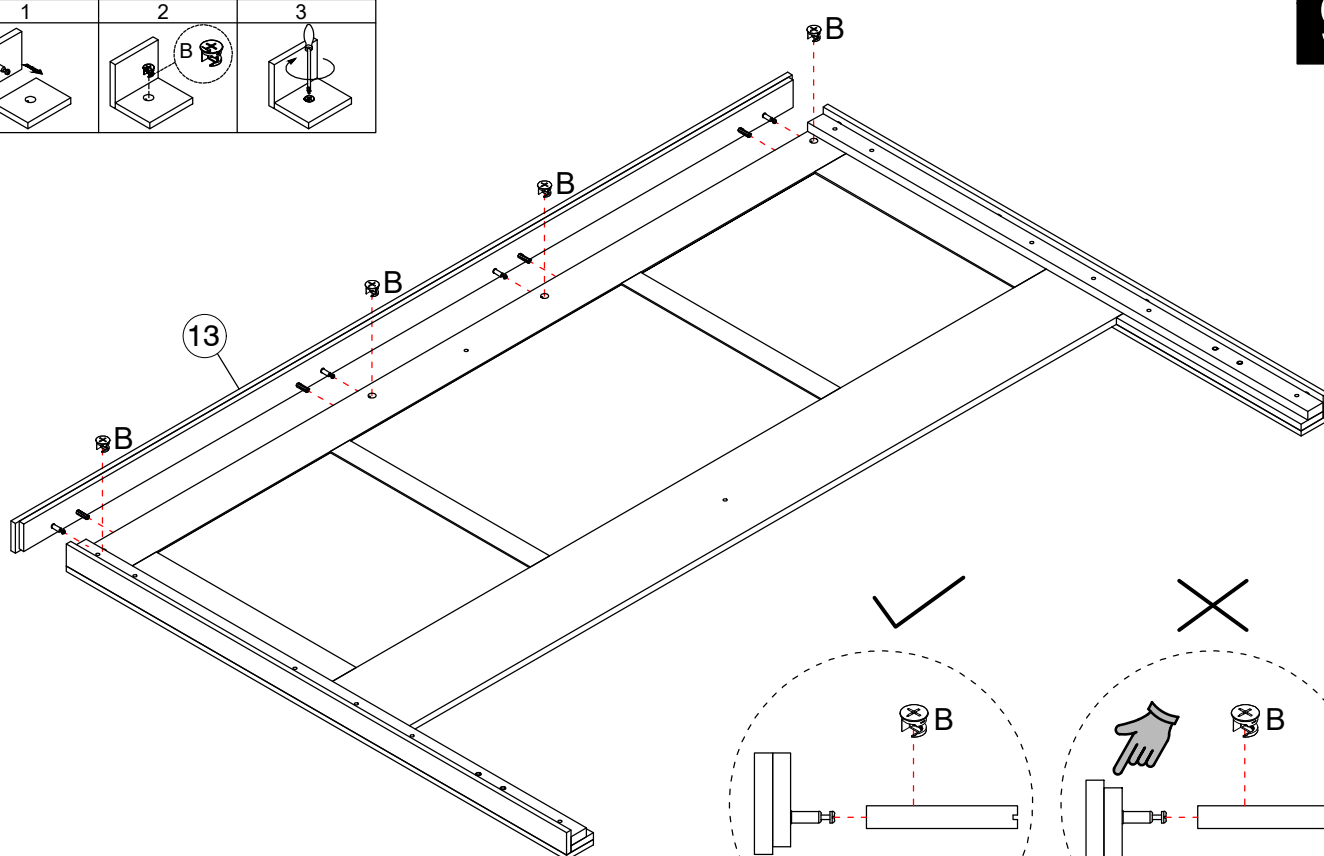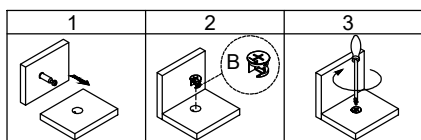


10

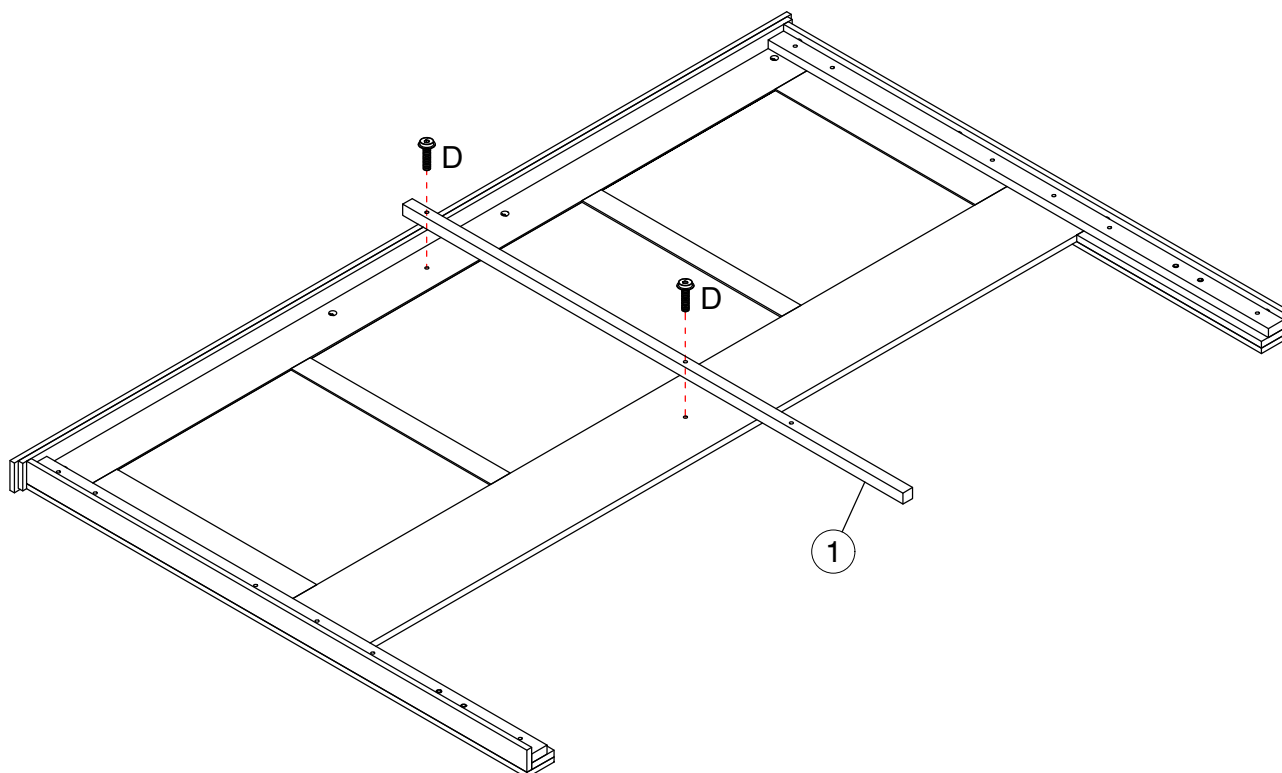


ASSEMBLY INSTRUCTIONS

11

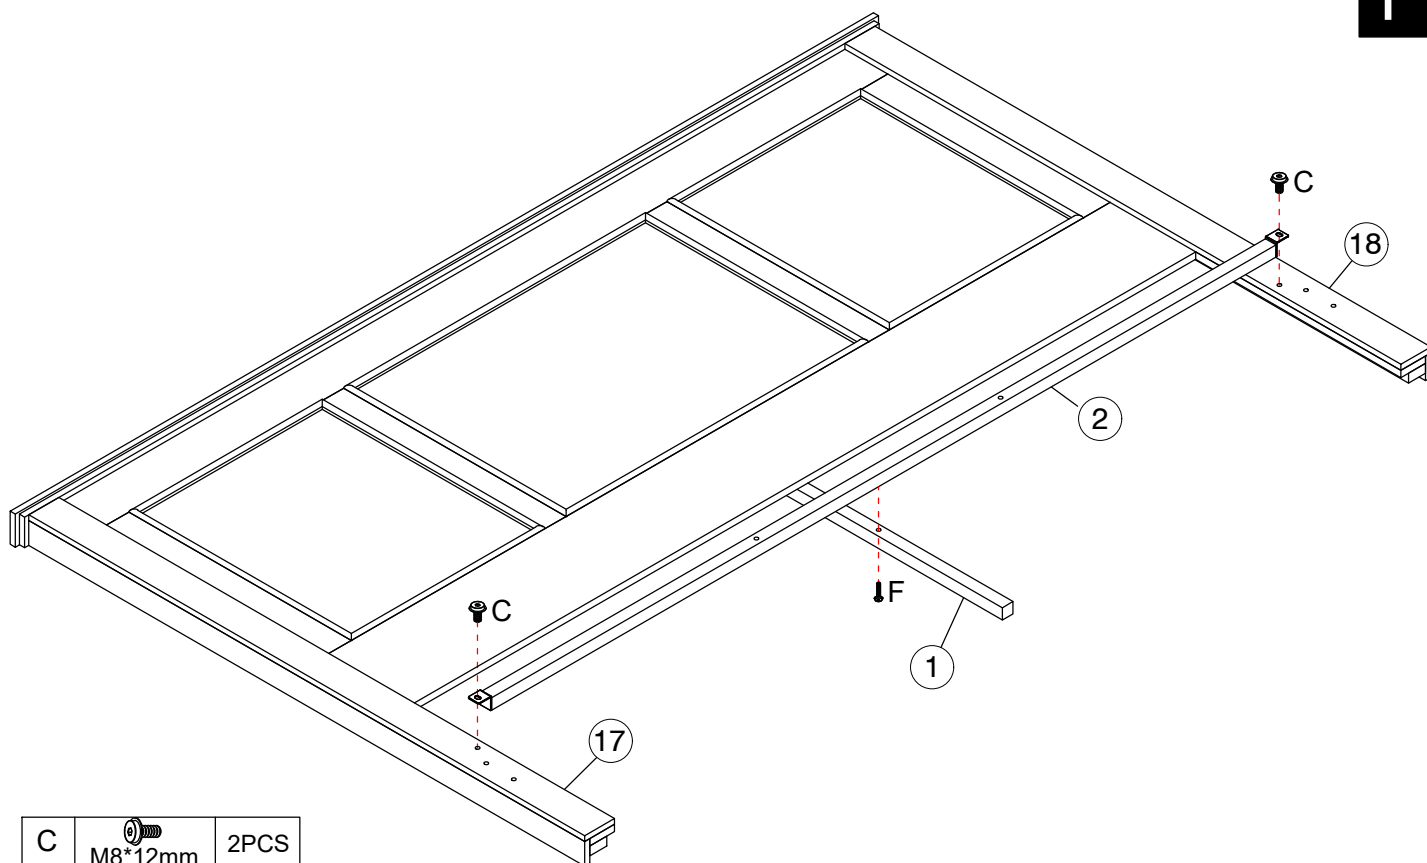

C	 M8*12mm	2PCS
F	 M8*45mm	1PC

12

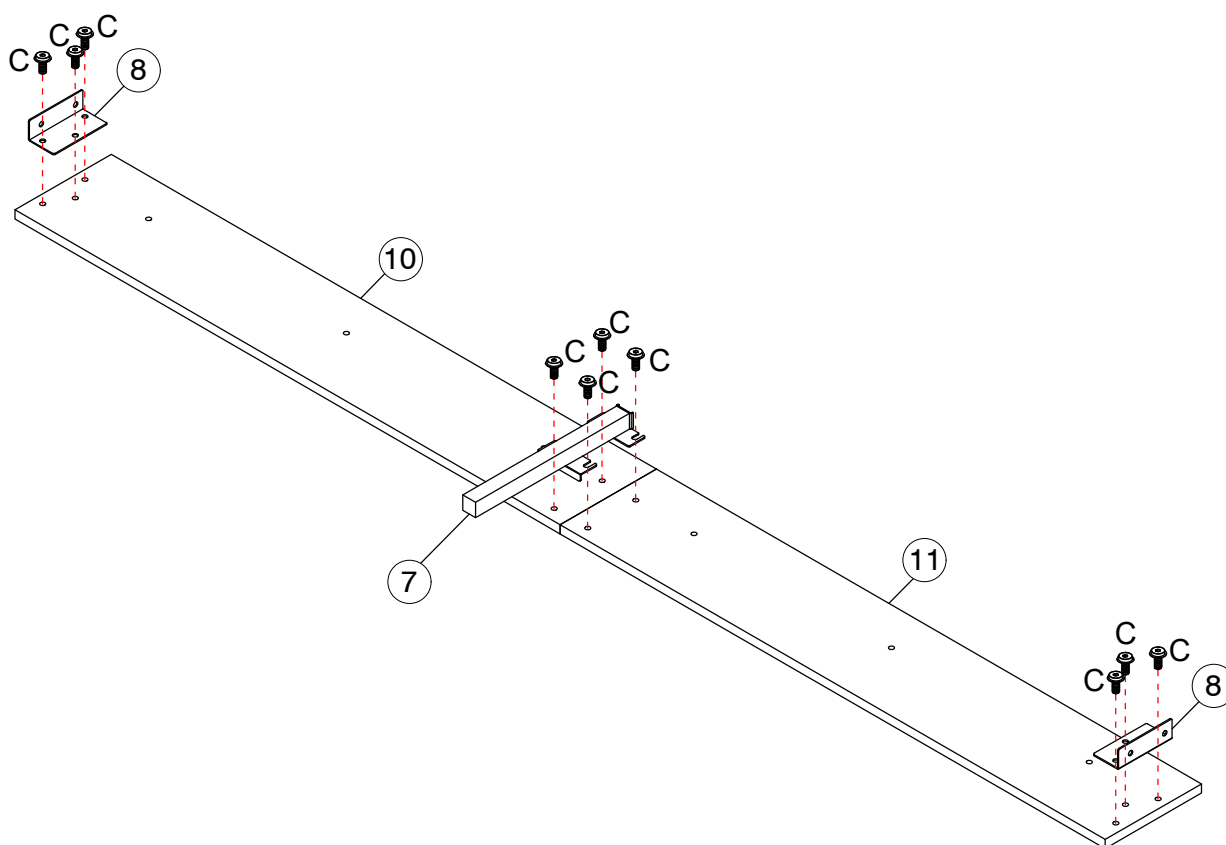


C	 M8*12mm	20PCS
---	---	-------

x2


ASSEMBLY INSTRUCTIONS

13

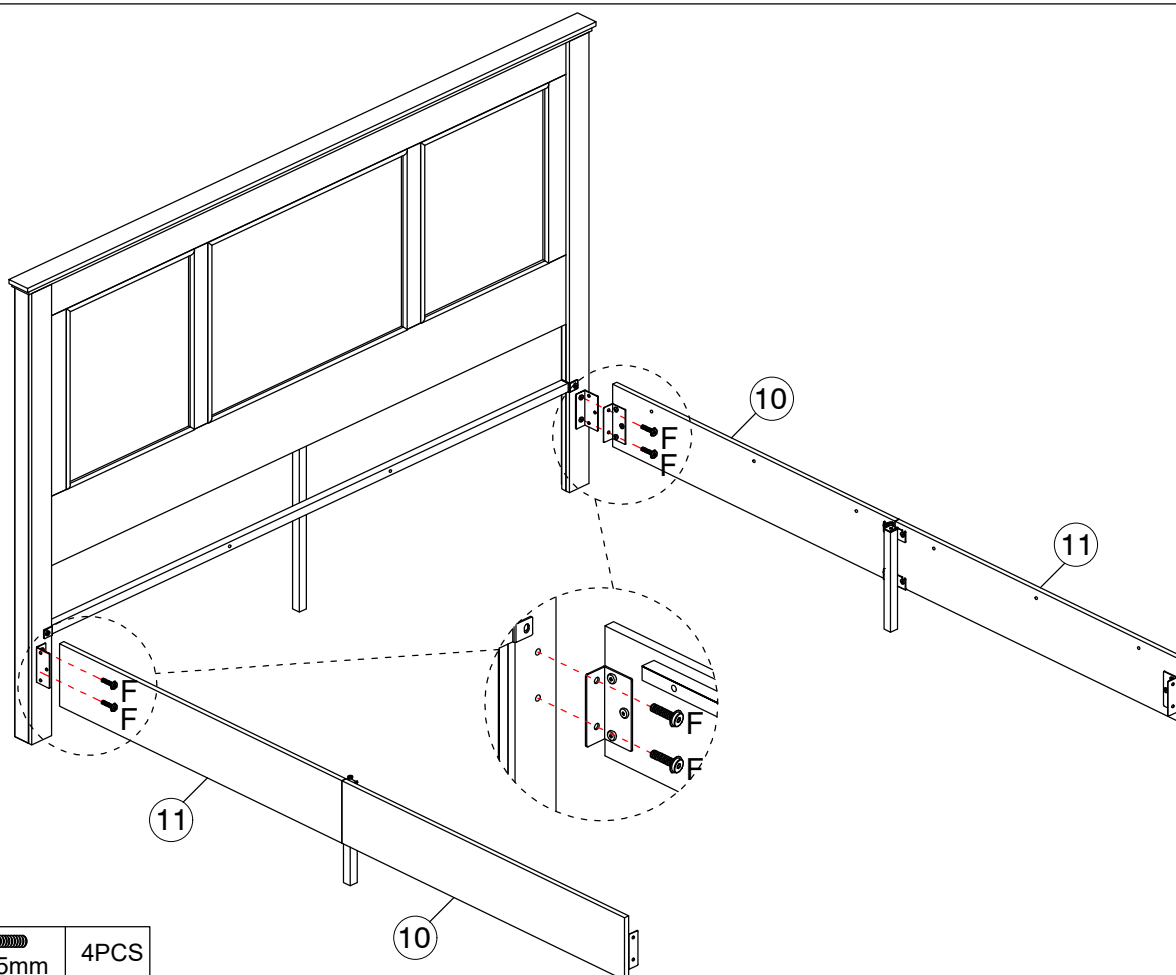

F		4PCS
M8*45mm		

14

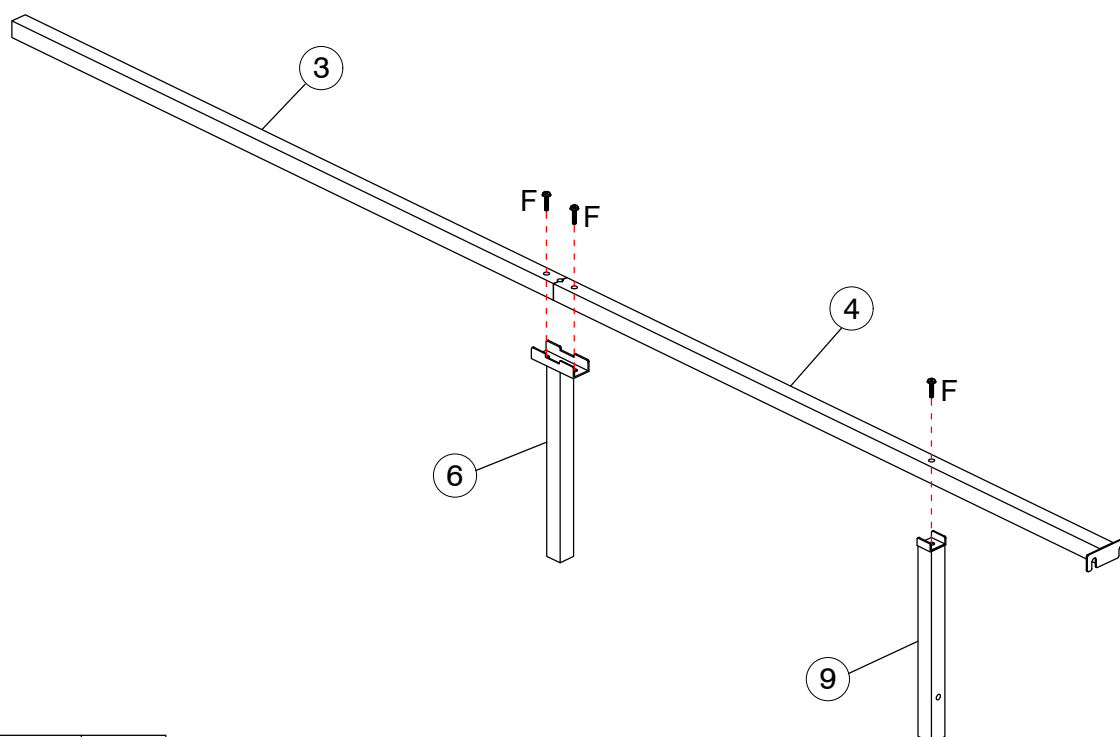


F		6PCS
M8*45mm		

x2


ASSEMBLY INSTRUCTIONS

15

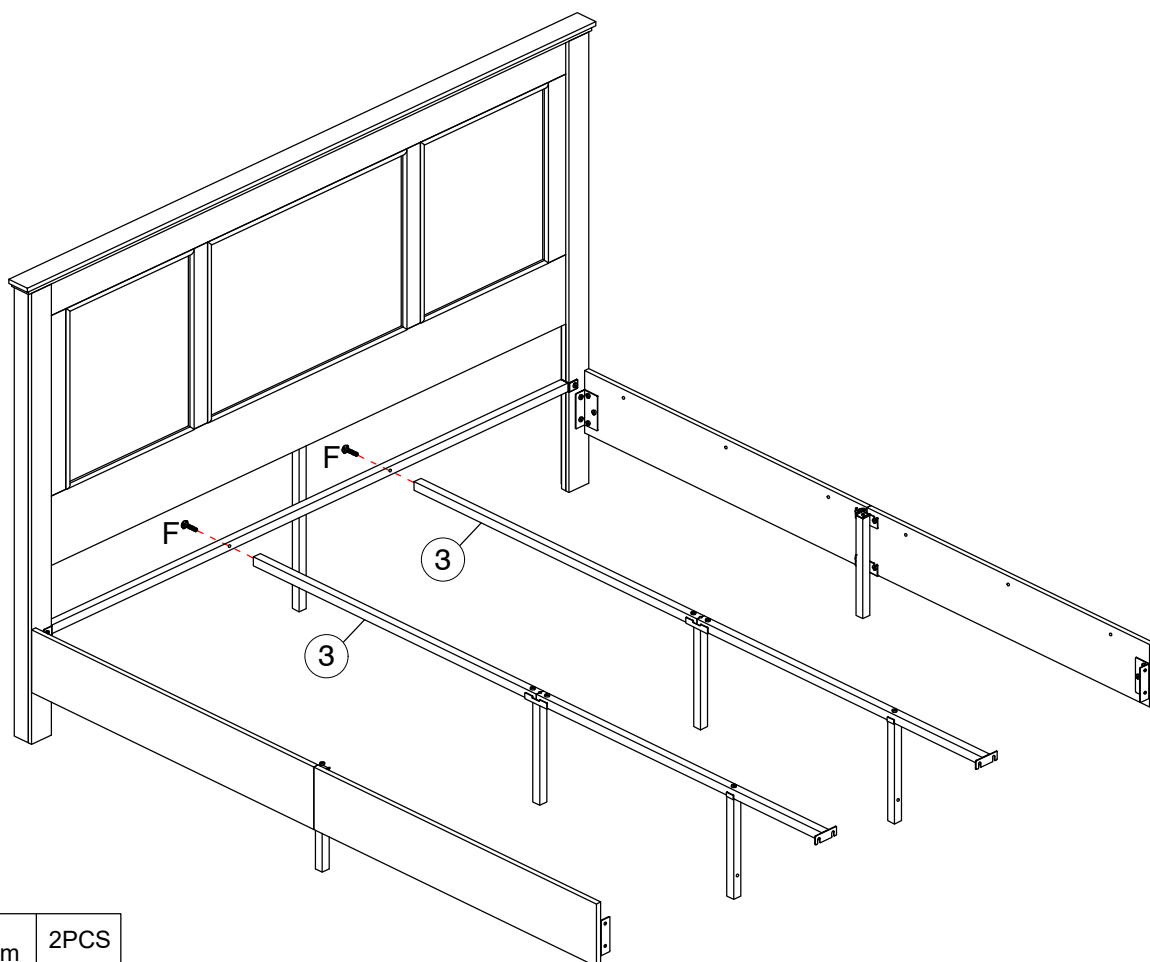

F		2PCS
M8*45mm		



16

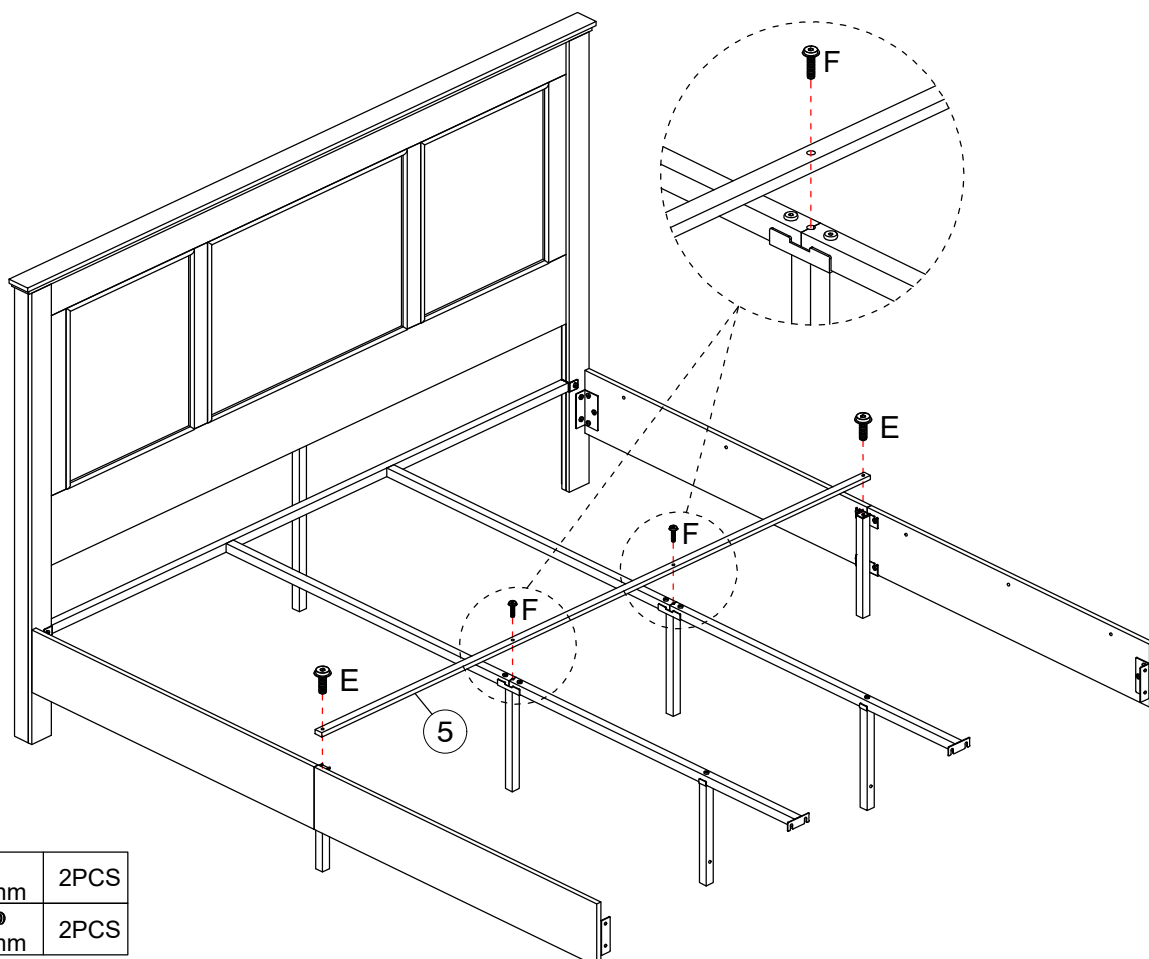

E		2PCS
M8*30mm		
F		2PCS
M8*45mm		



ASSEMBLY INSTRUCTIONS

17

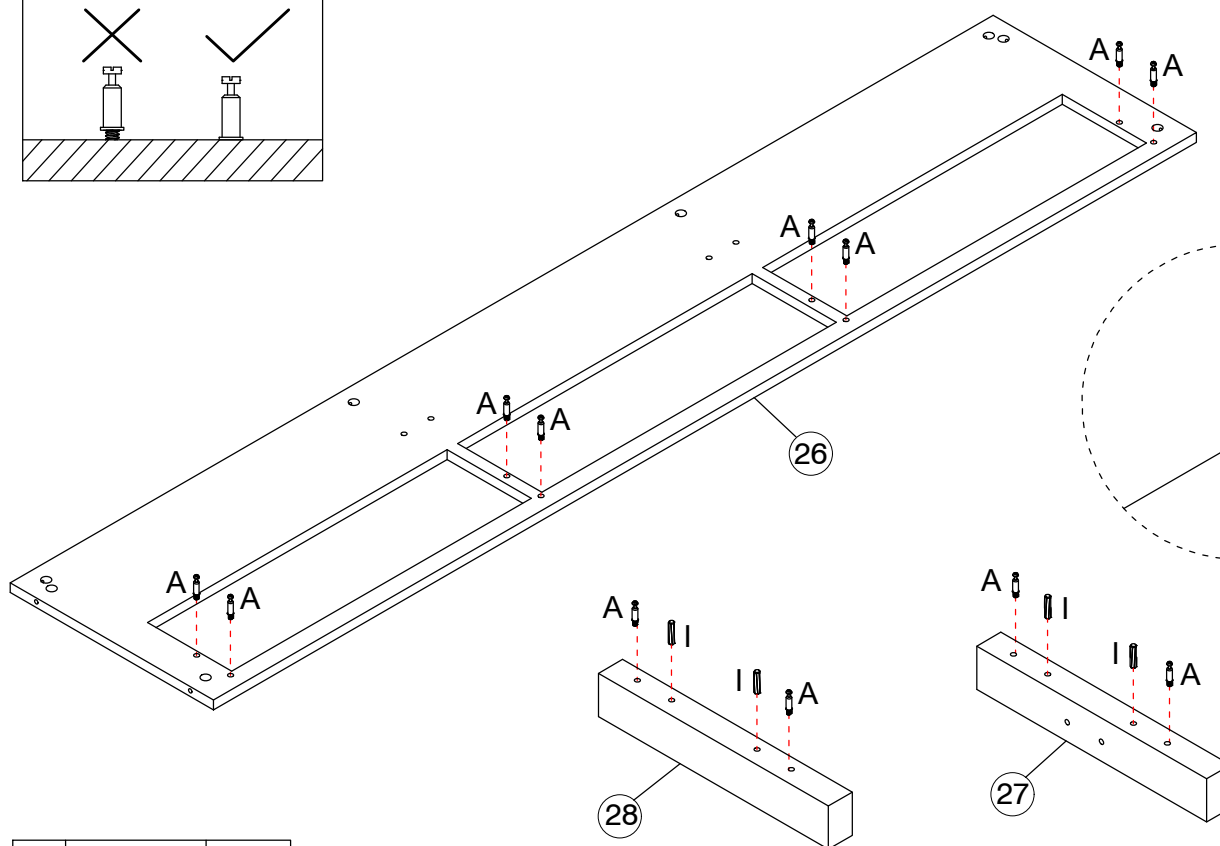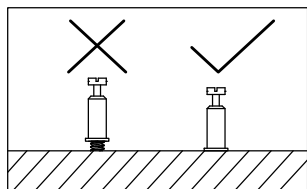

A		10PCS
I	 Ø6*30mm	4PCS



18

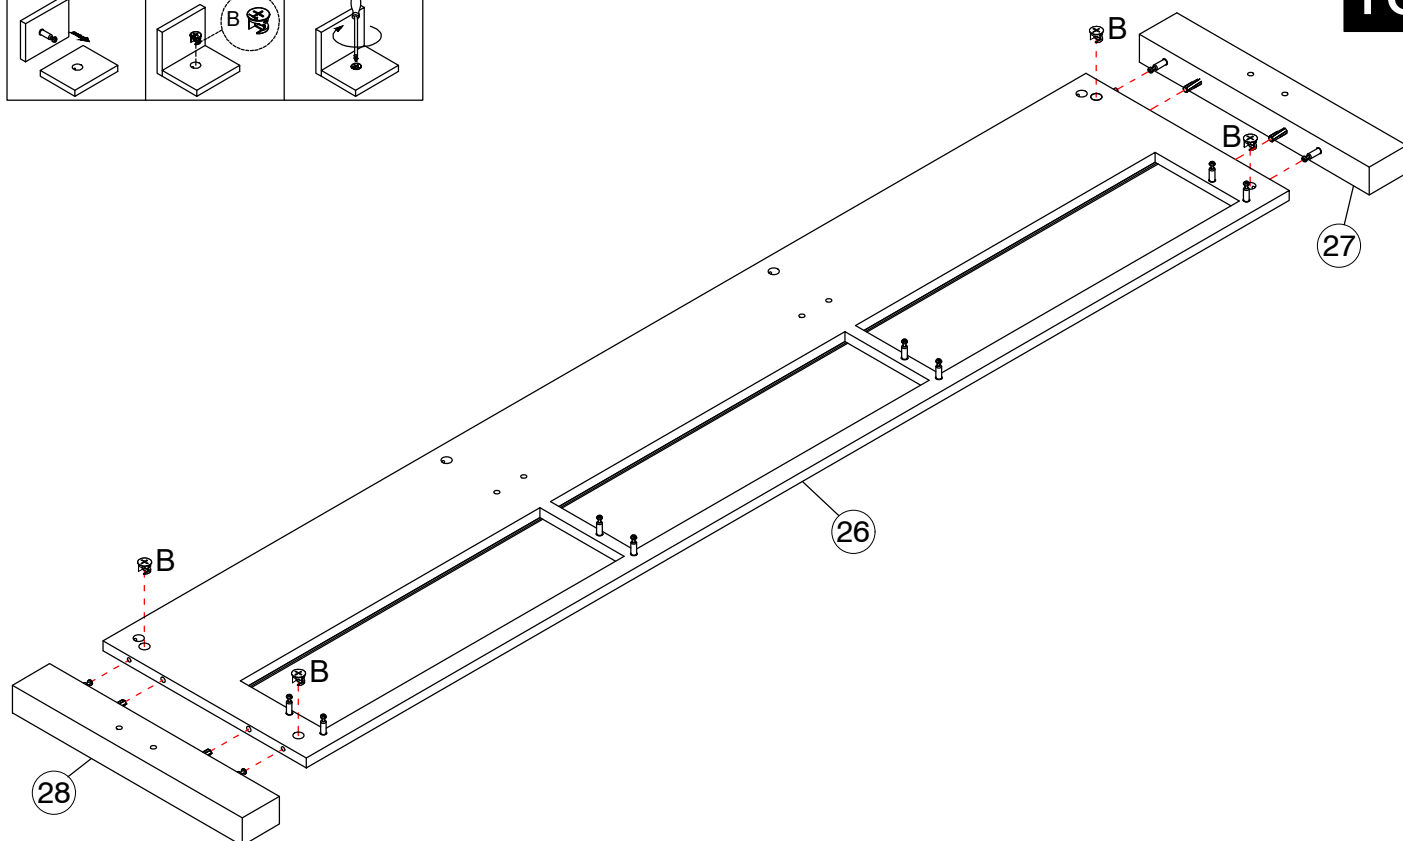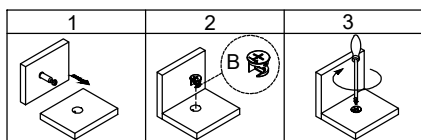

B		4PCS
---	---	------



ASSEMBLY INSTRUCTIONS

19

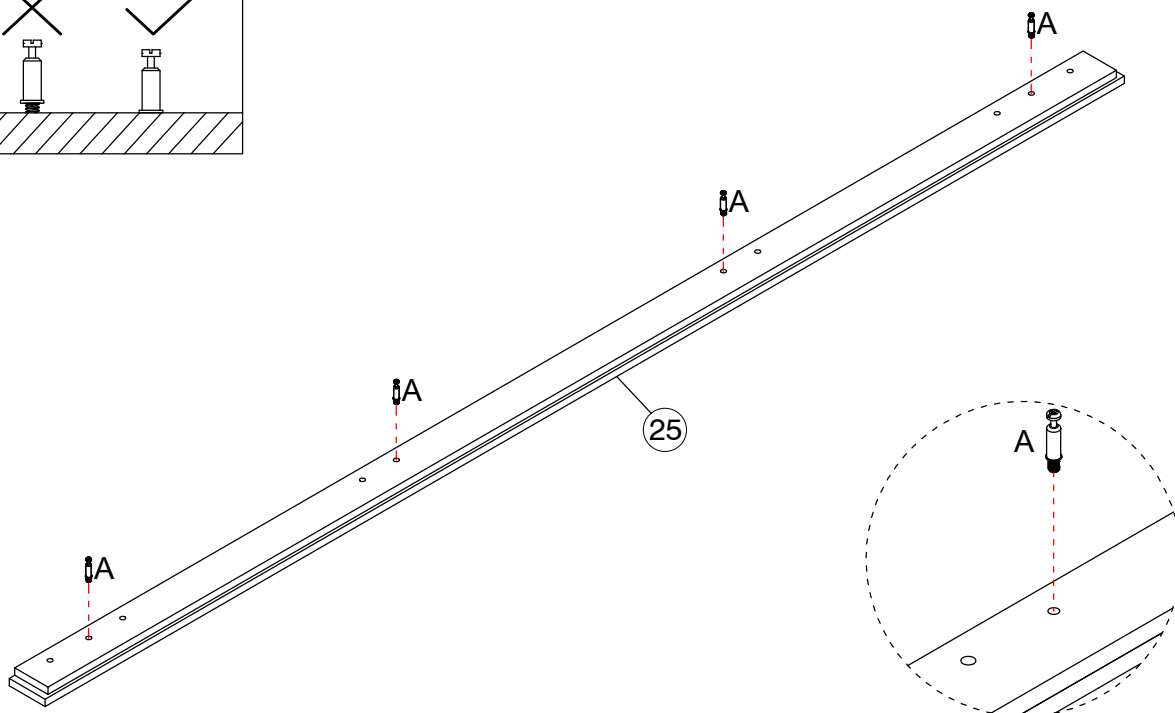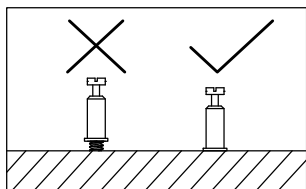


A		4PCS
---	---	------

20

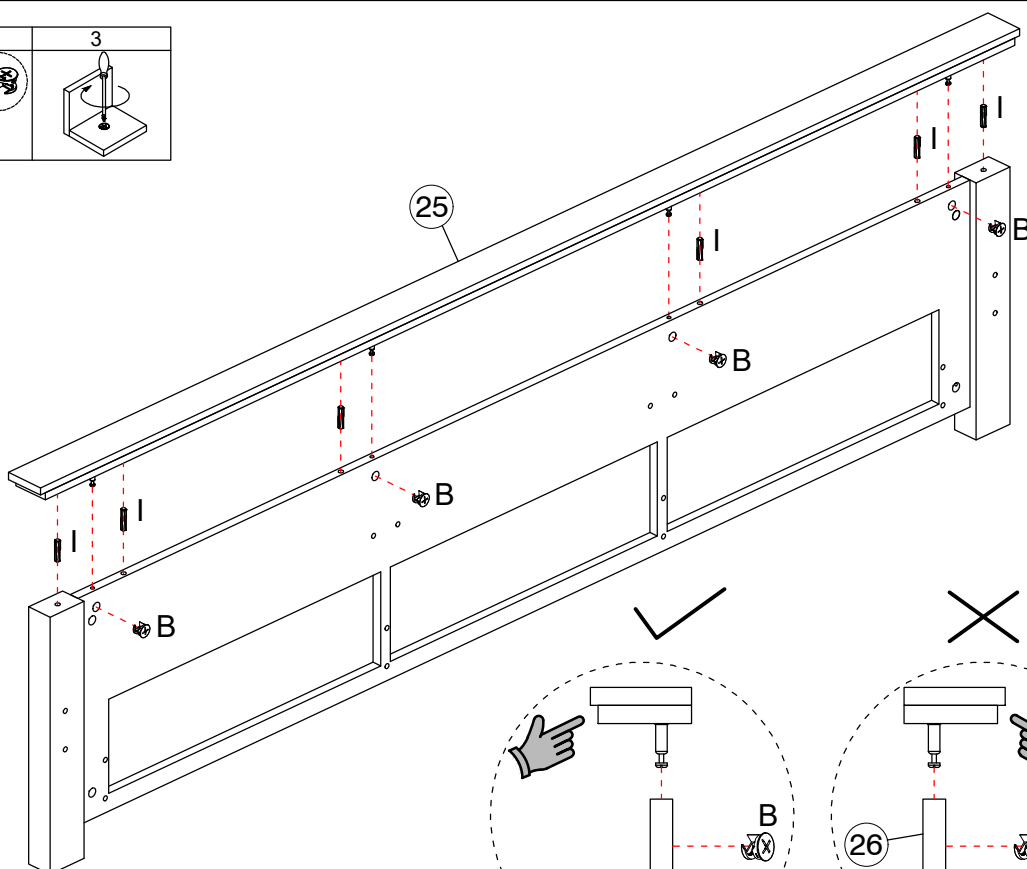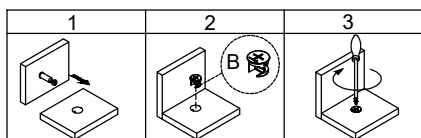


B		4PCS
I		6PCS

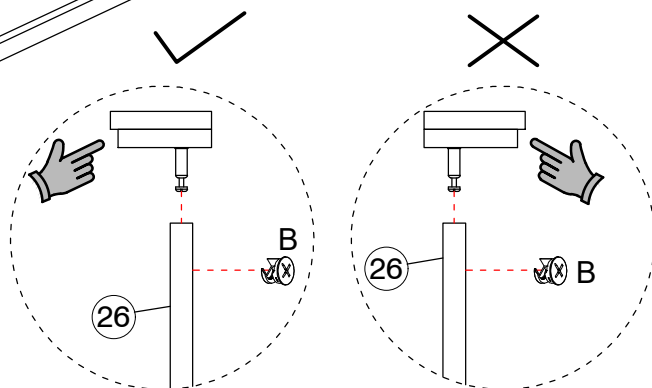


ASSEMBLY INSTRUCTIONS

21

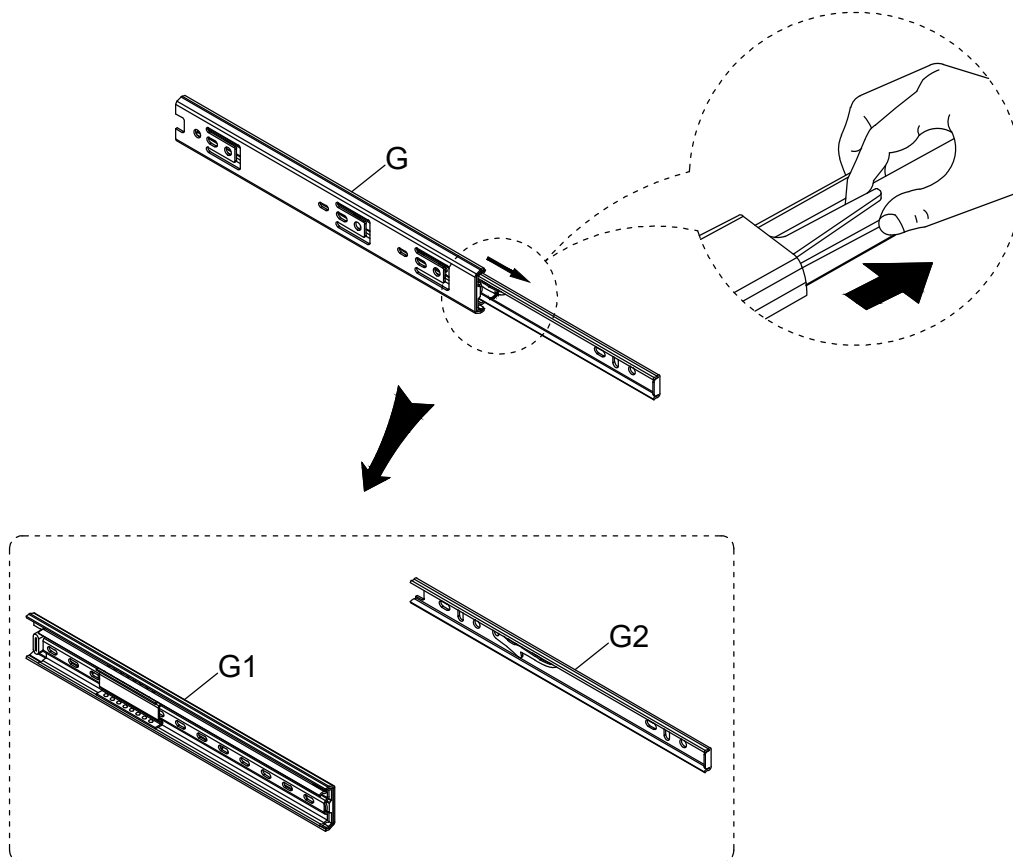





x6

22

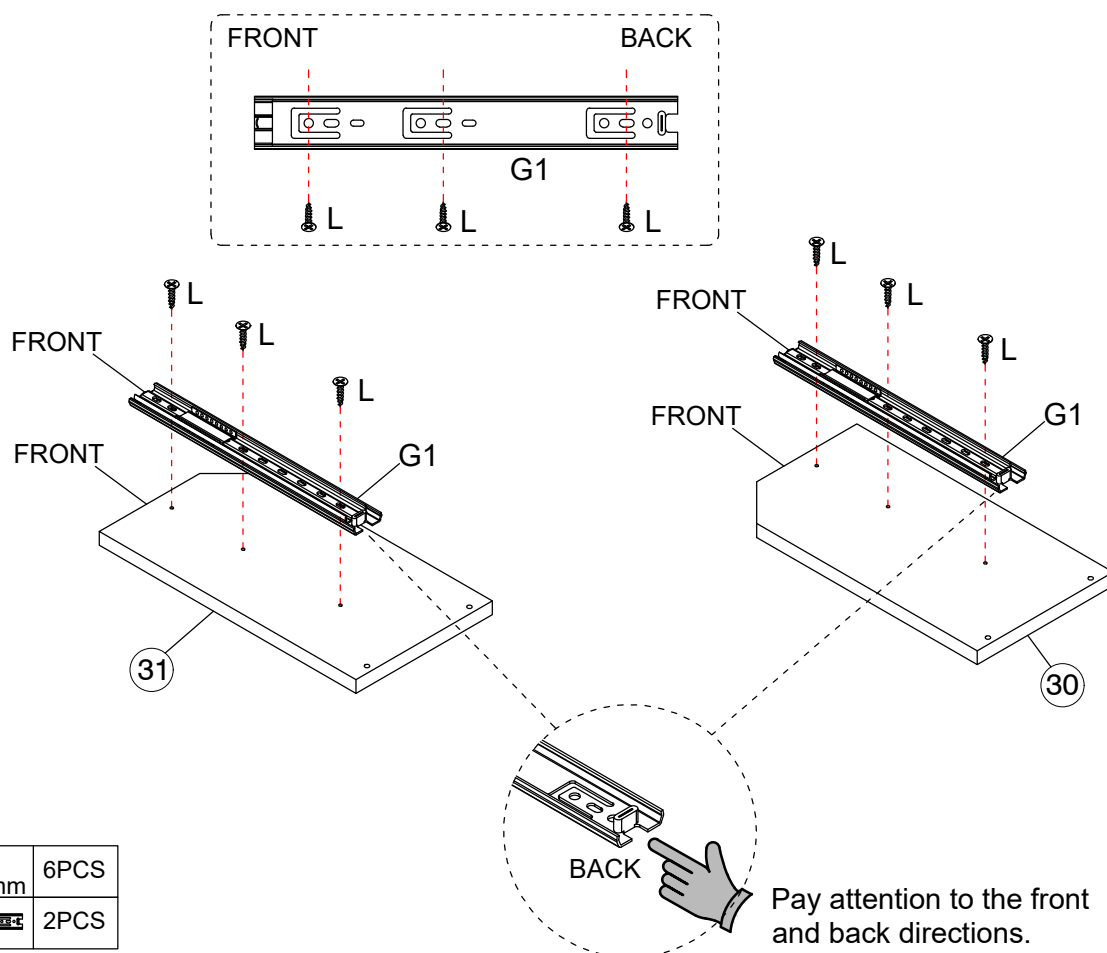

L	 Ø3.5*15mm	6PCS
G1		2PCS

Pay attention to the front and back directions.

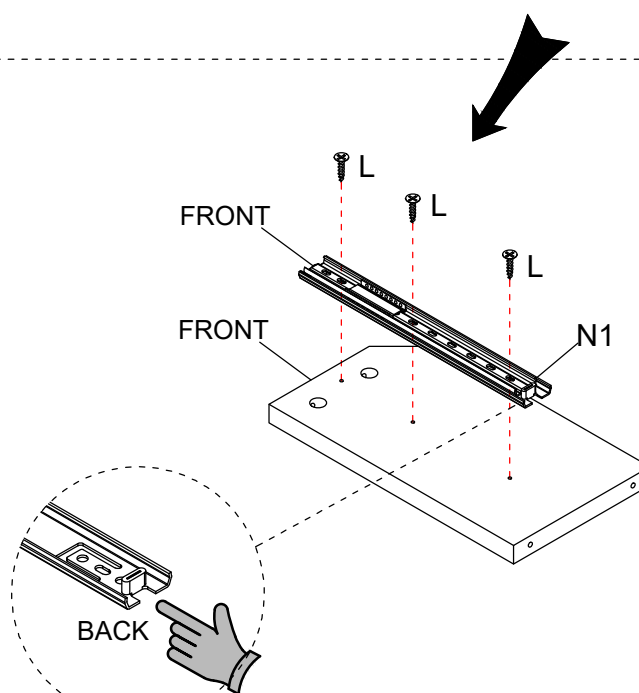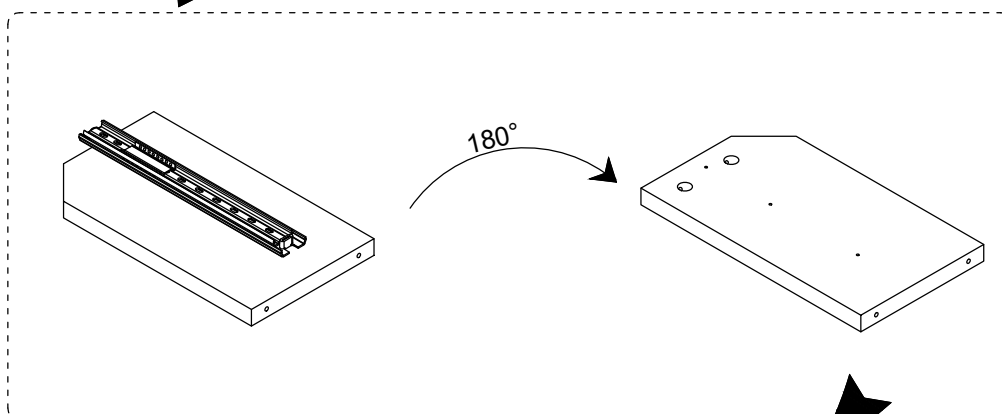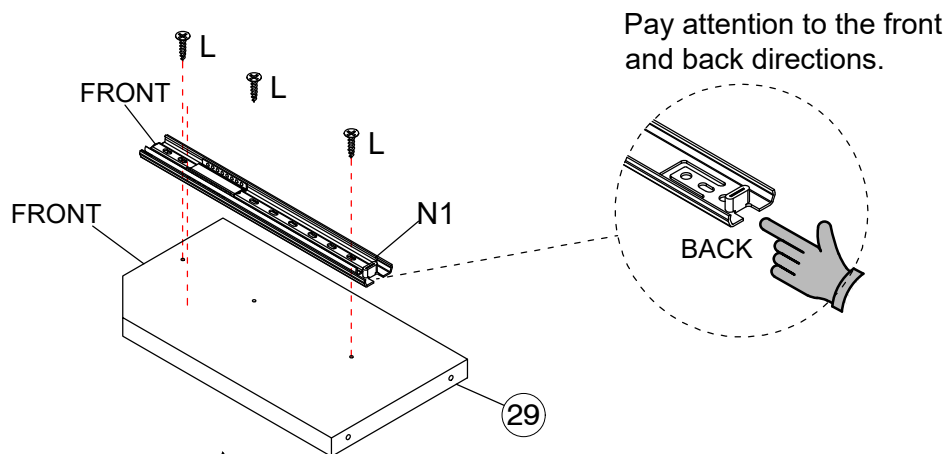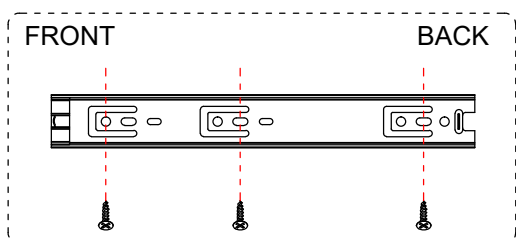


L	 Ø3.5*15mm	6PCS
N1		2PCS


x2

ASSEMBLY INSTRUCTIONS

24

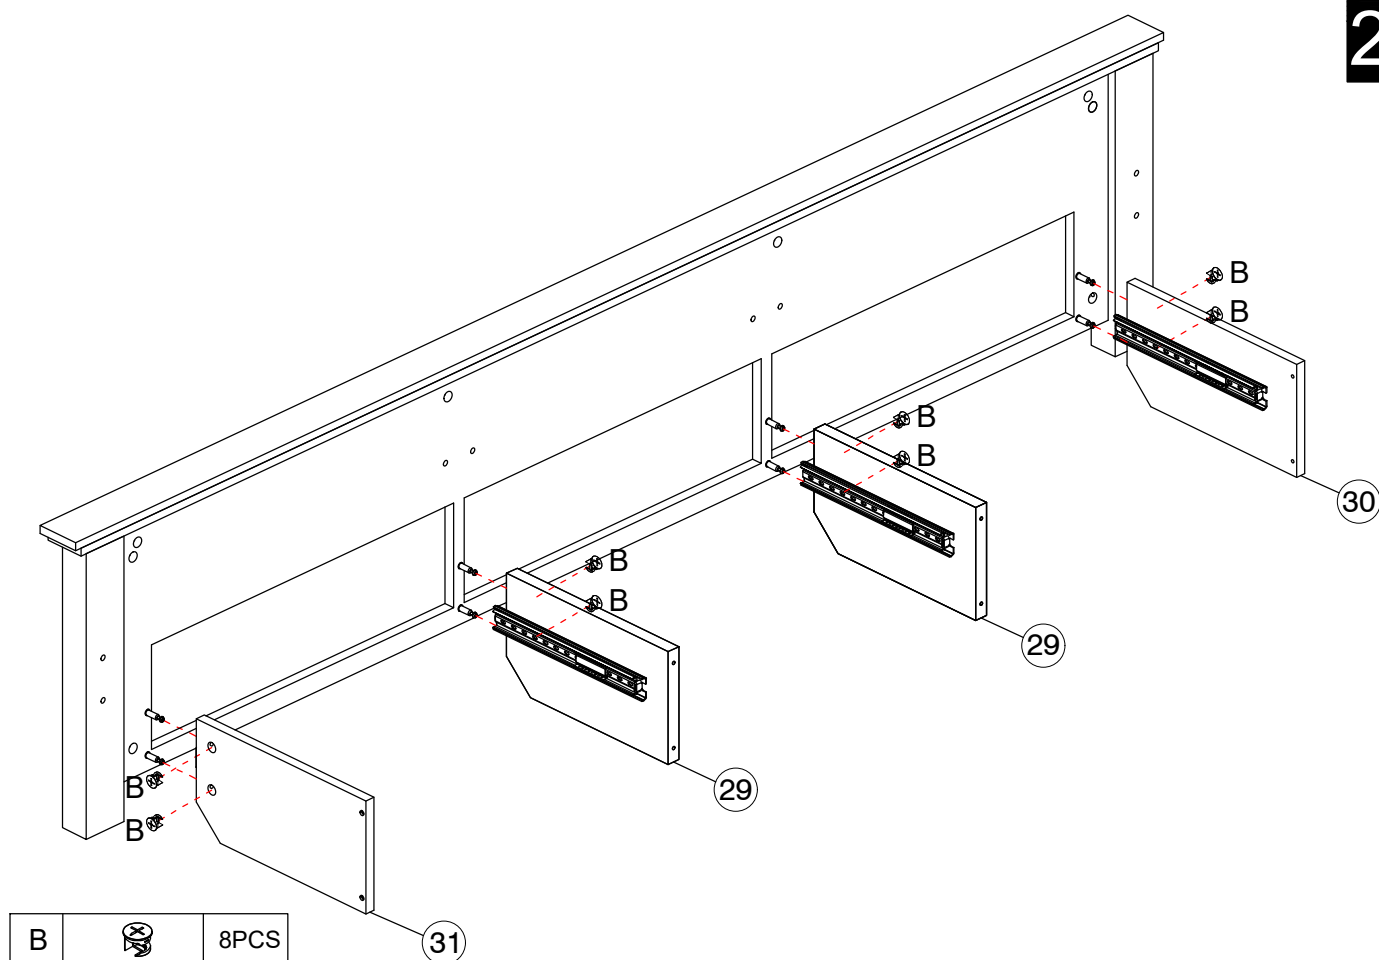


25

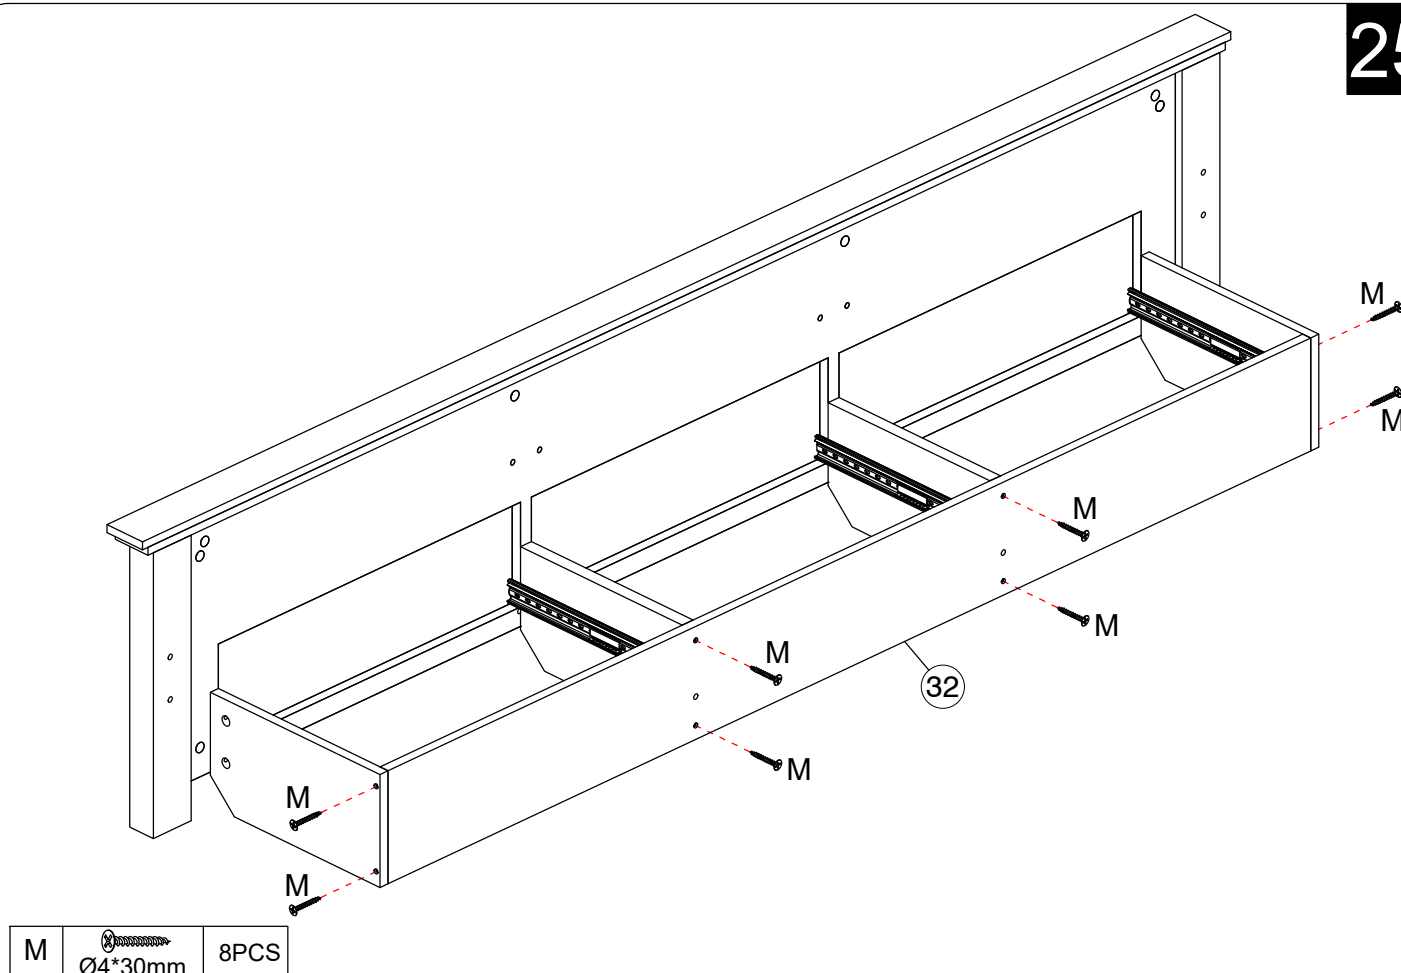


ASSEMBLY INSTRUCTIONS


26

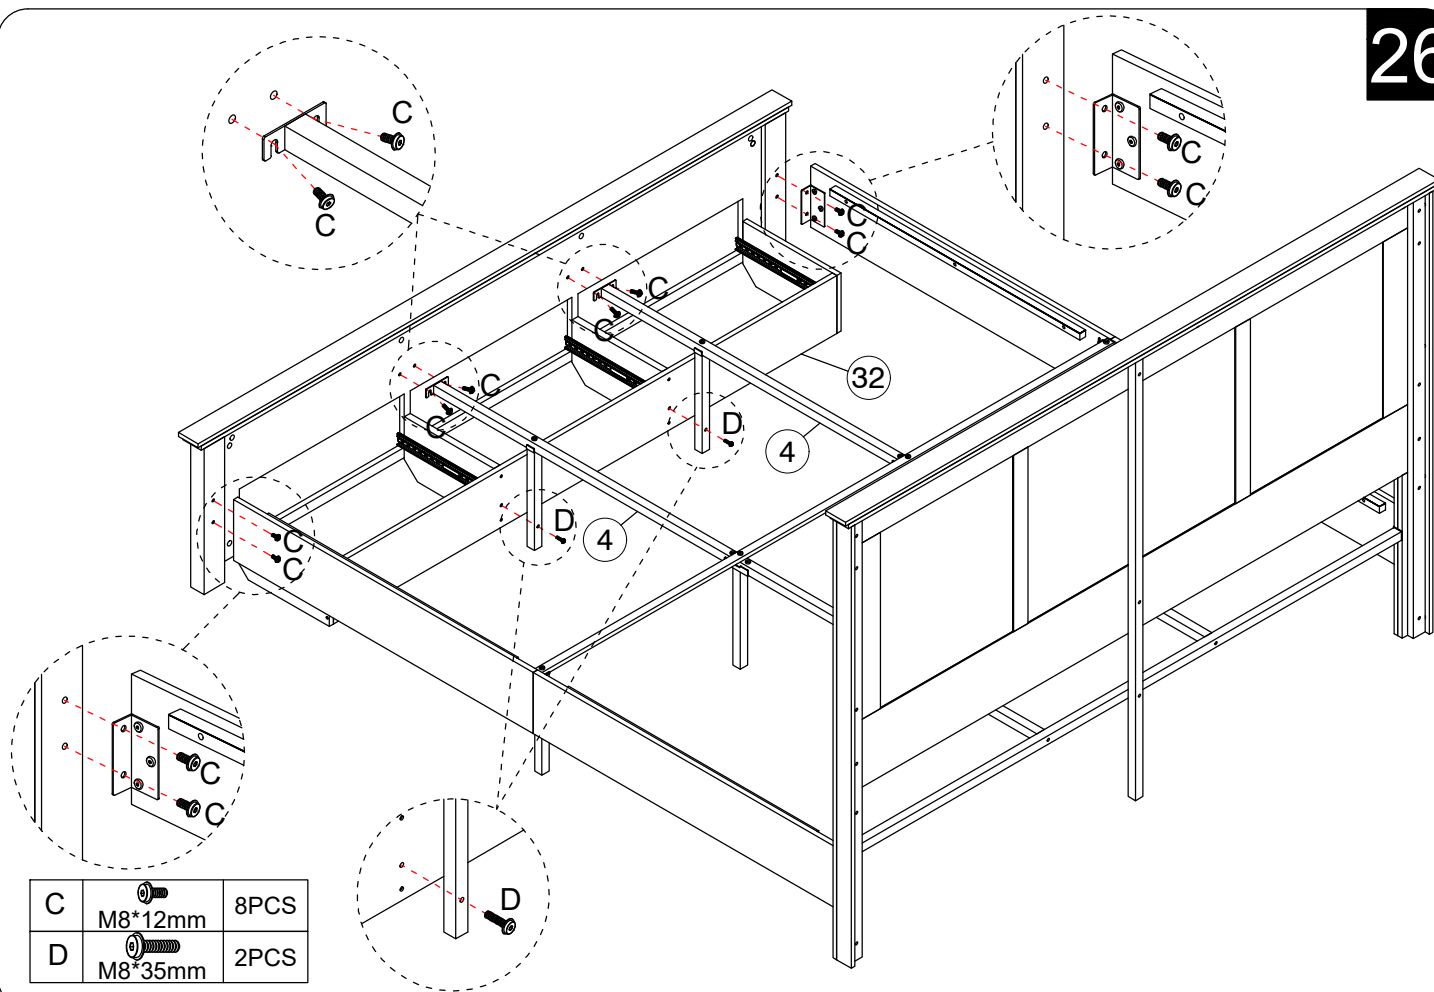




27

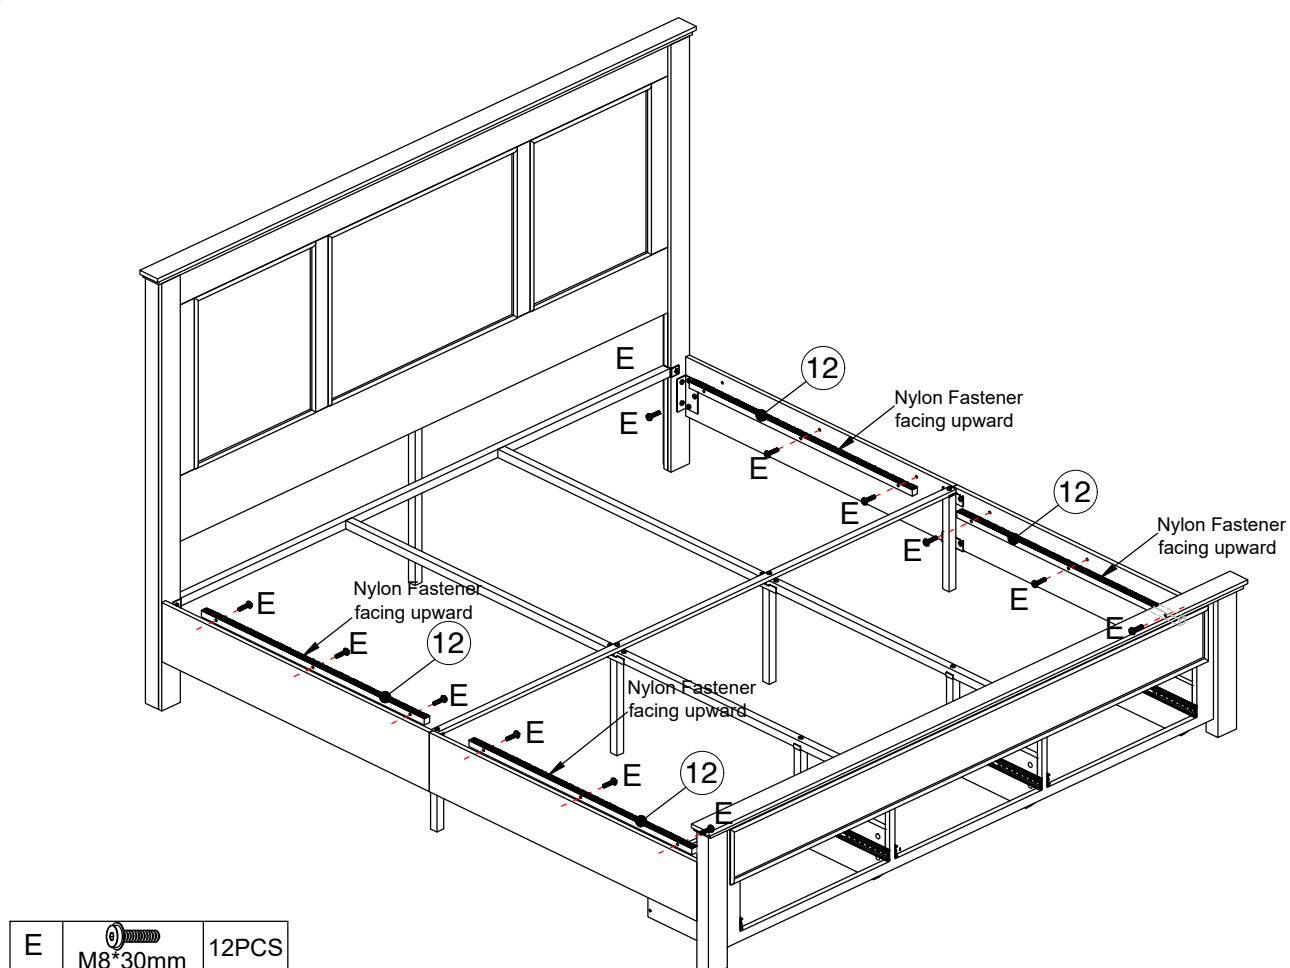

28

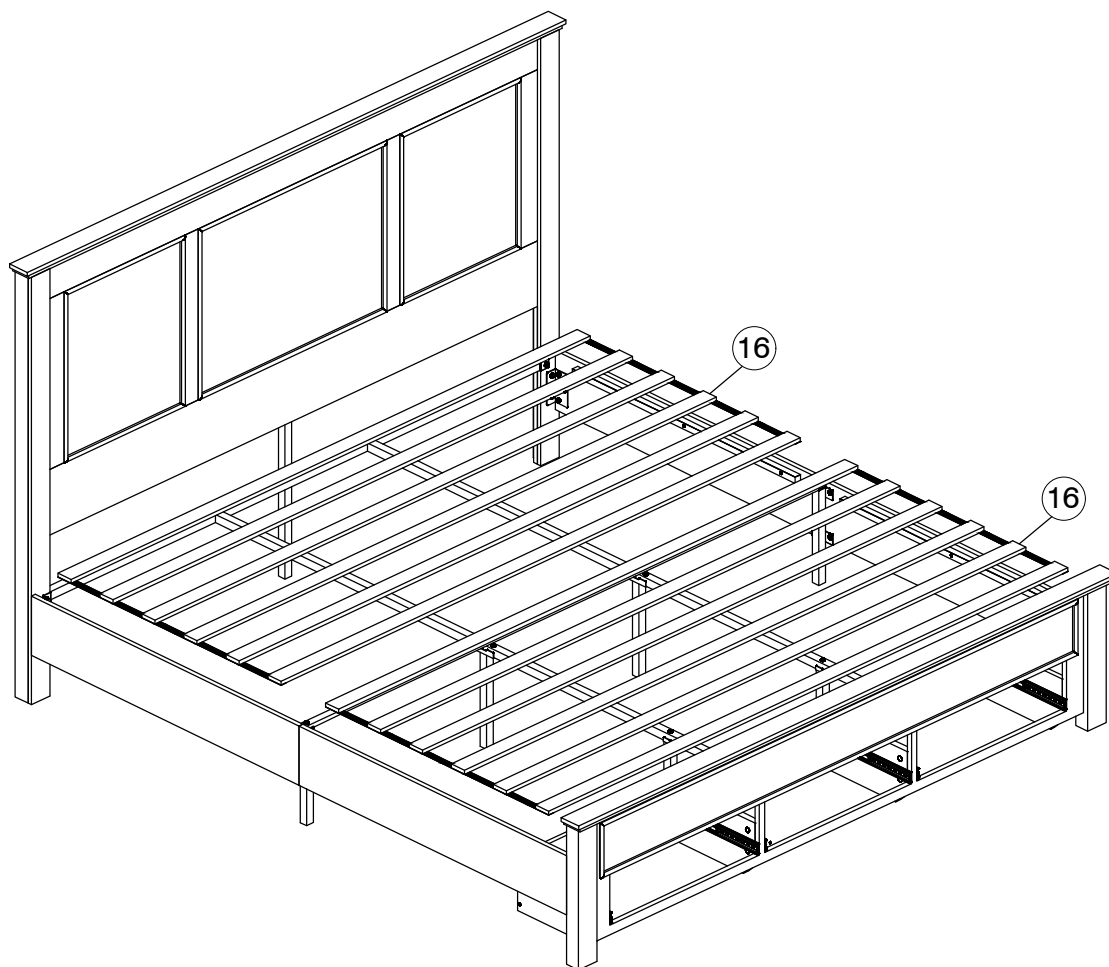





29

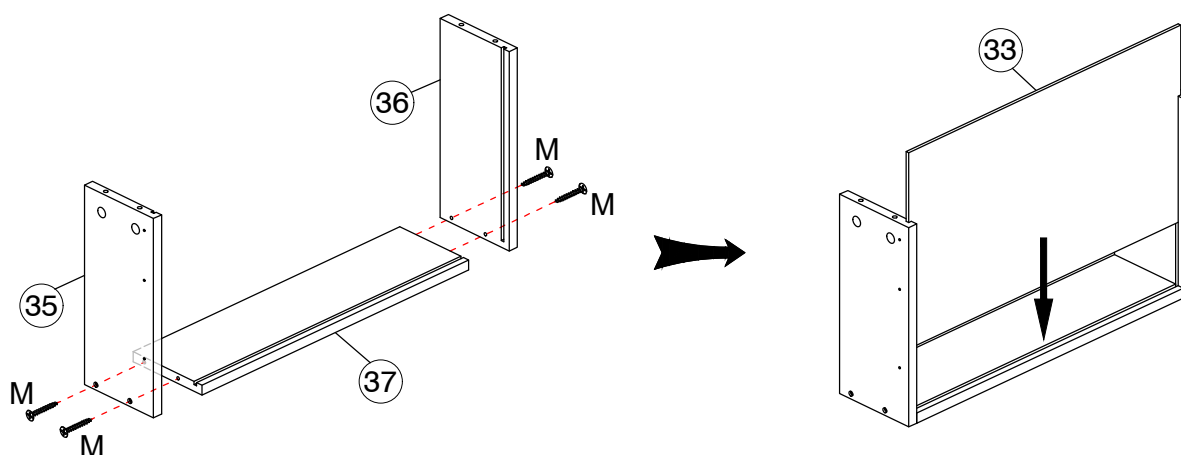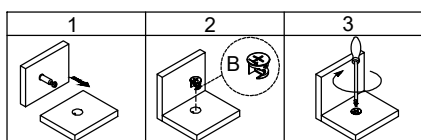


x3

ASSEMBLY INSTRUCTIONS

30

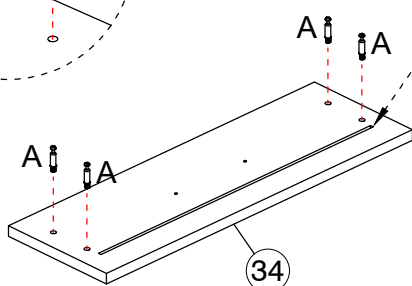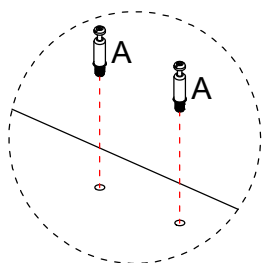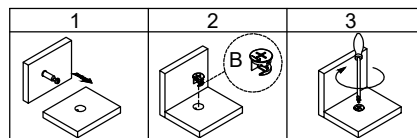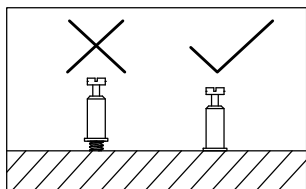




When installing, make sure the groove on part 34 aligns with part 33.

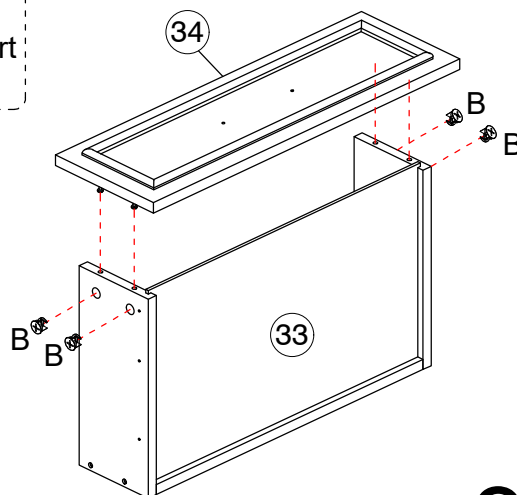

A		12PCS
B		12PCS

x3

31

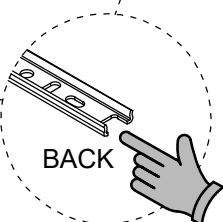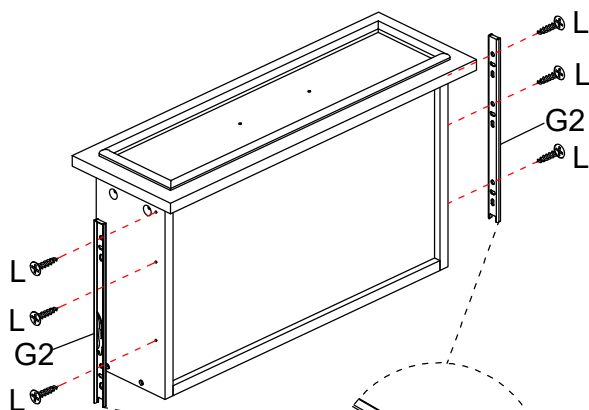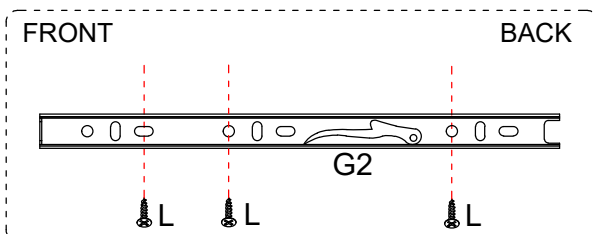


L		18PCS
G2		6PCS

J		6PCS
K		3PCS




x3

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

Please make sure that the balls in the tracks on both sides are pulled to the top, and then insert the tracks to ensure smooth entry.

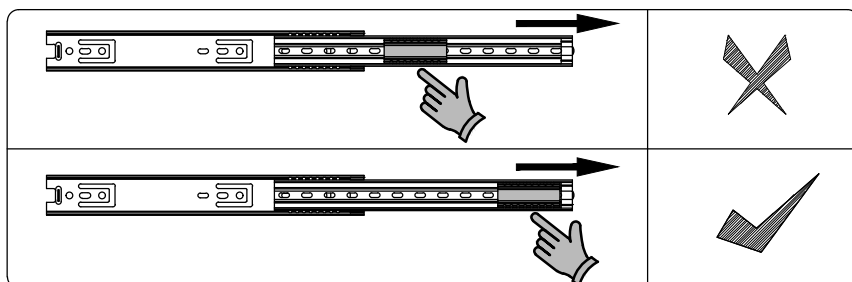


1. Drawers must be horizontally put into the cabinets.
2. Make sure both sides sliders match well to avoid damage.

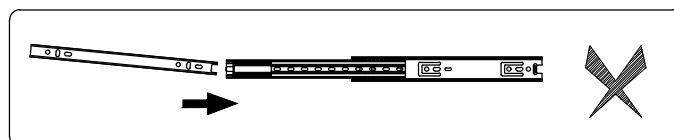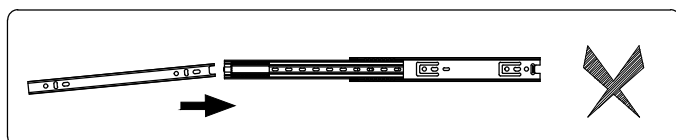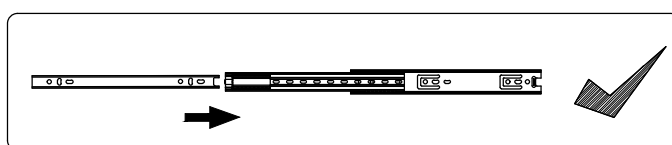

Attention:

1. Pull out the rail installed on the cabinet.
 2. Align the slide runners on the drawer with the unit and push it carefully inside until it stops.
- * If the drawer does not go in smoothly, please take it out and repeat the steps.

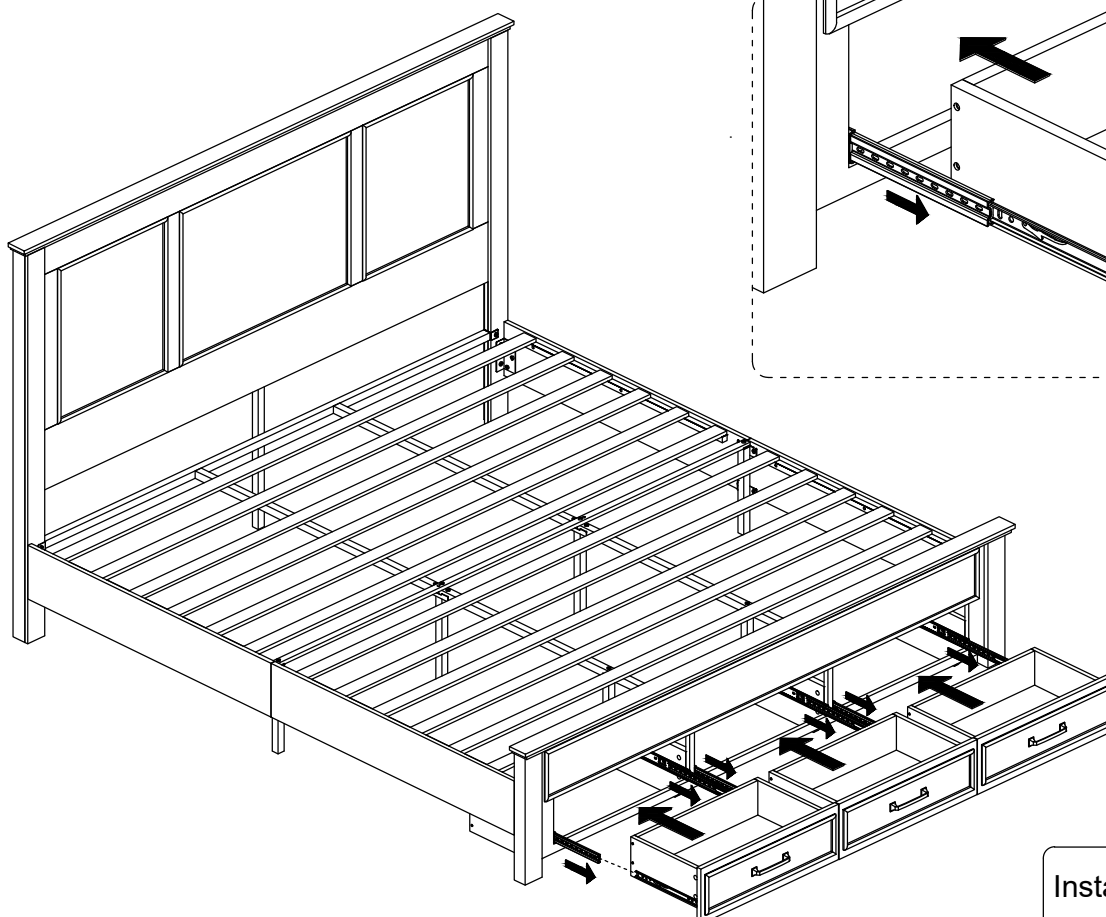

Installation Complete