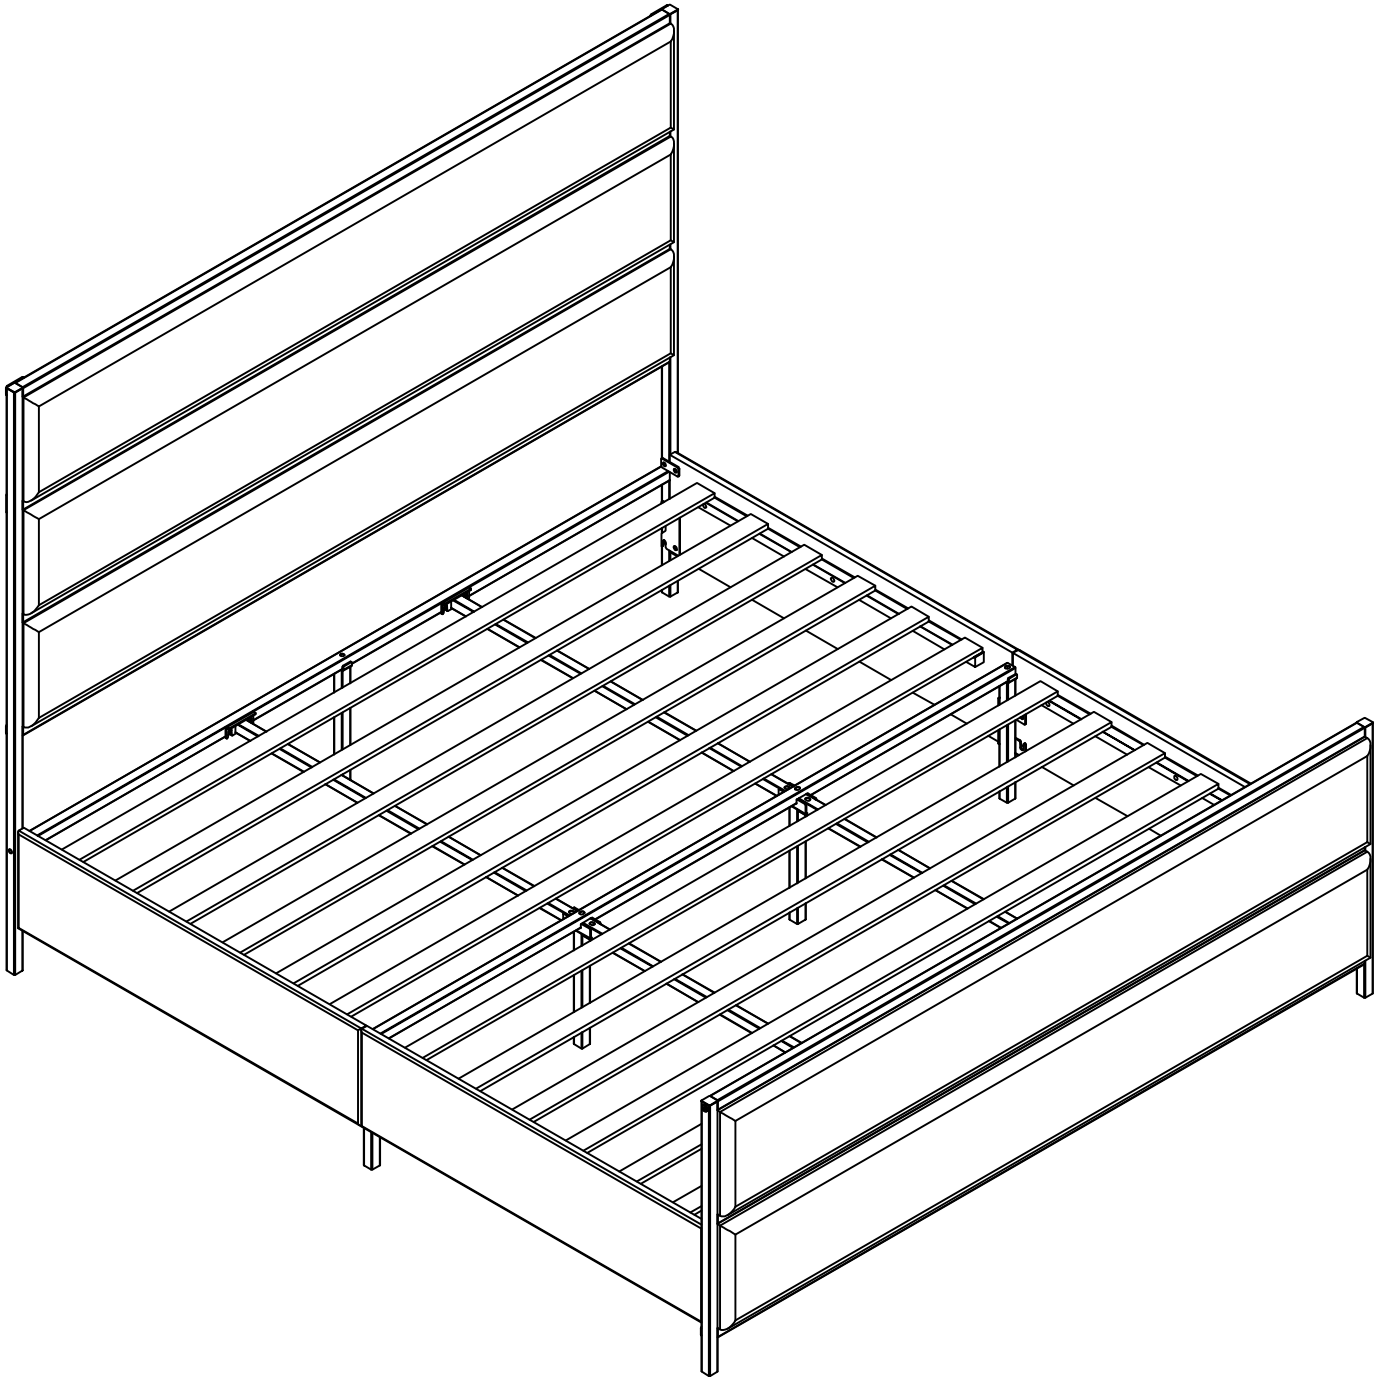


Velvet Upholstered Bed with Metal Trim



Friendly Customer Service

Satisfaction Guarantees: Any problems with assembly, quality, or return, please free to contact us directly,

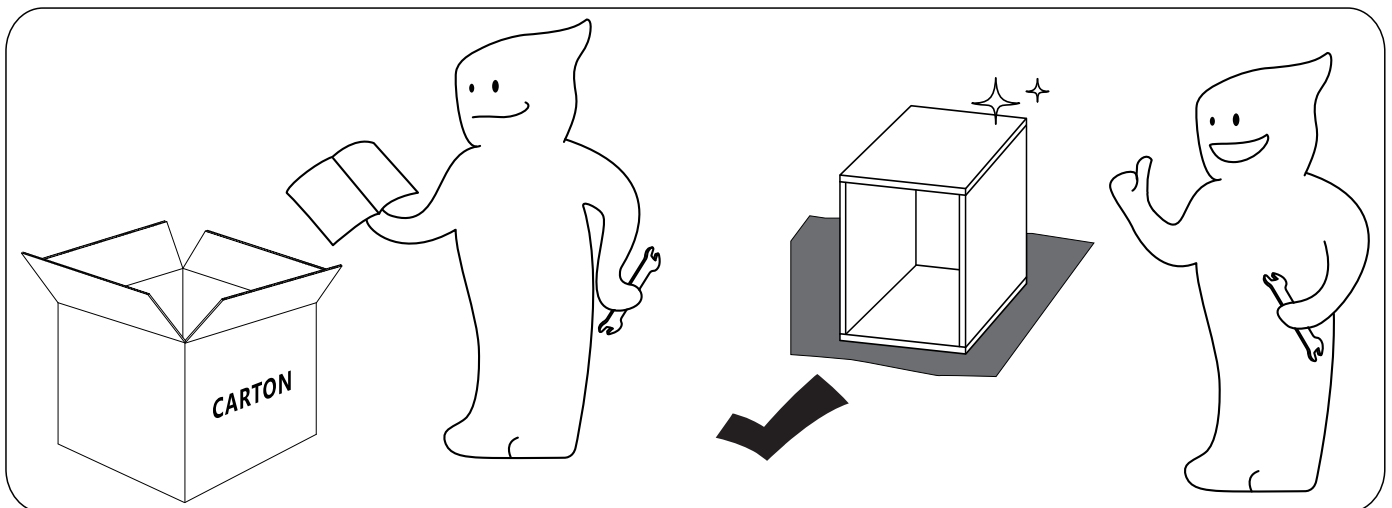
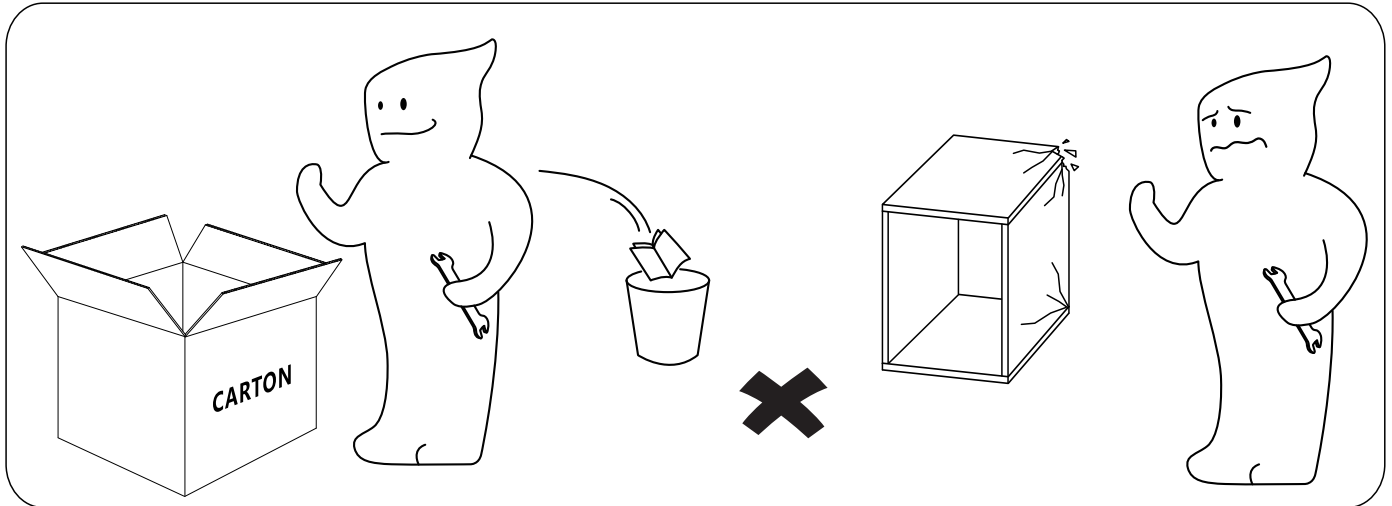
Contact us

Phone: +1(901)347-2181 (US) Mon-Fri 9am-5pm (PST)

E-Mail: cs@howedirect.com (Get efficient feedback within 12 hours)




Please follow the instruction manuals and use a pad to protect the product during your assembly.




Note:

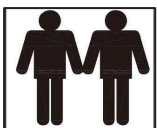1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.


































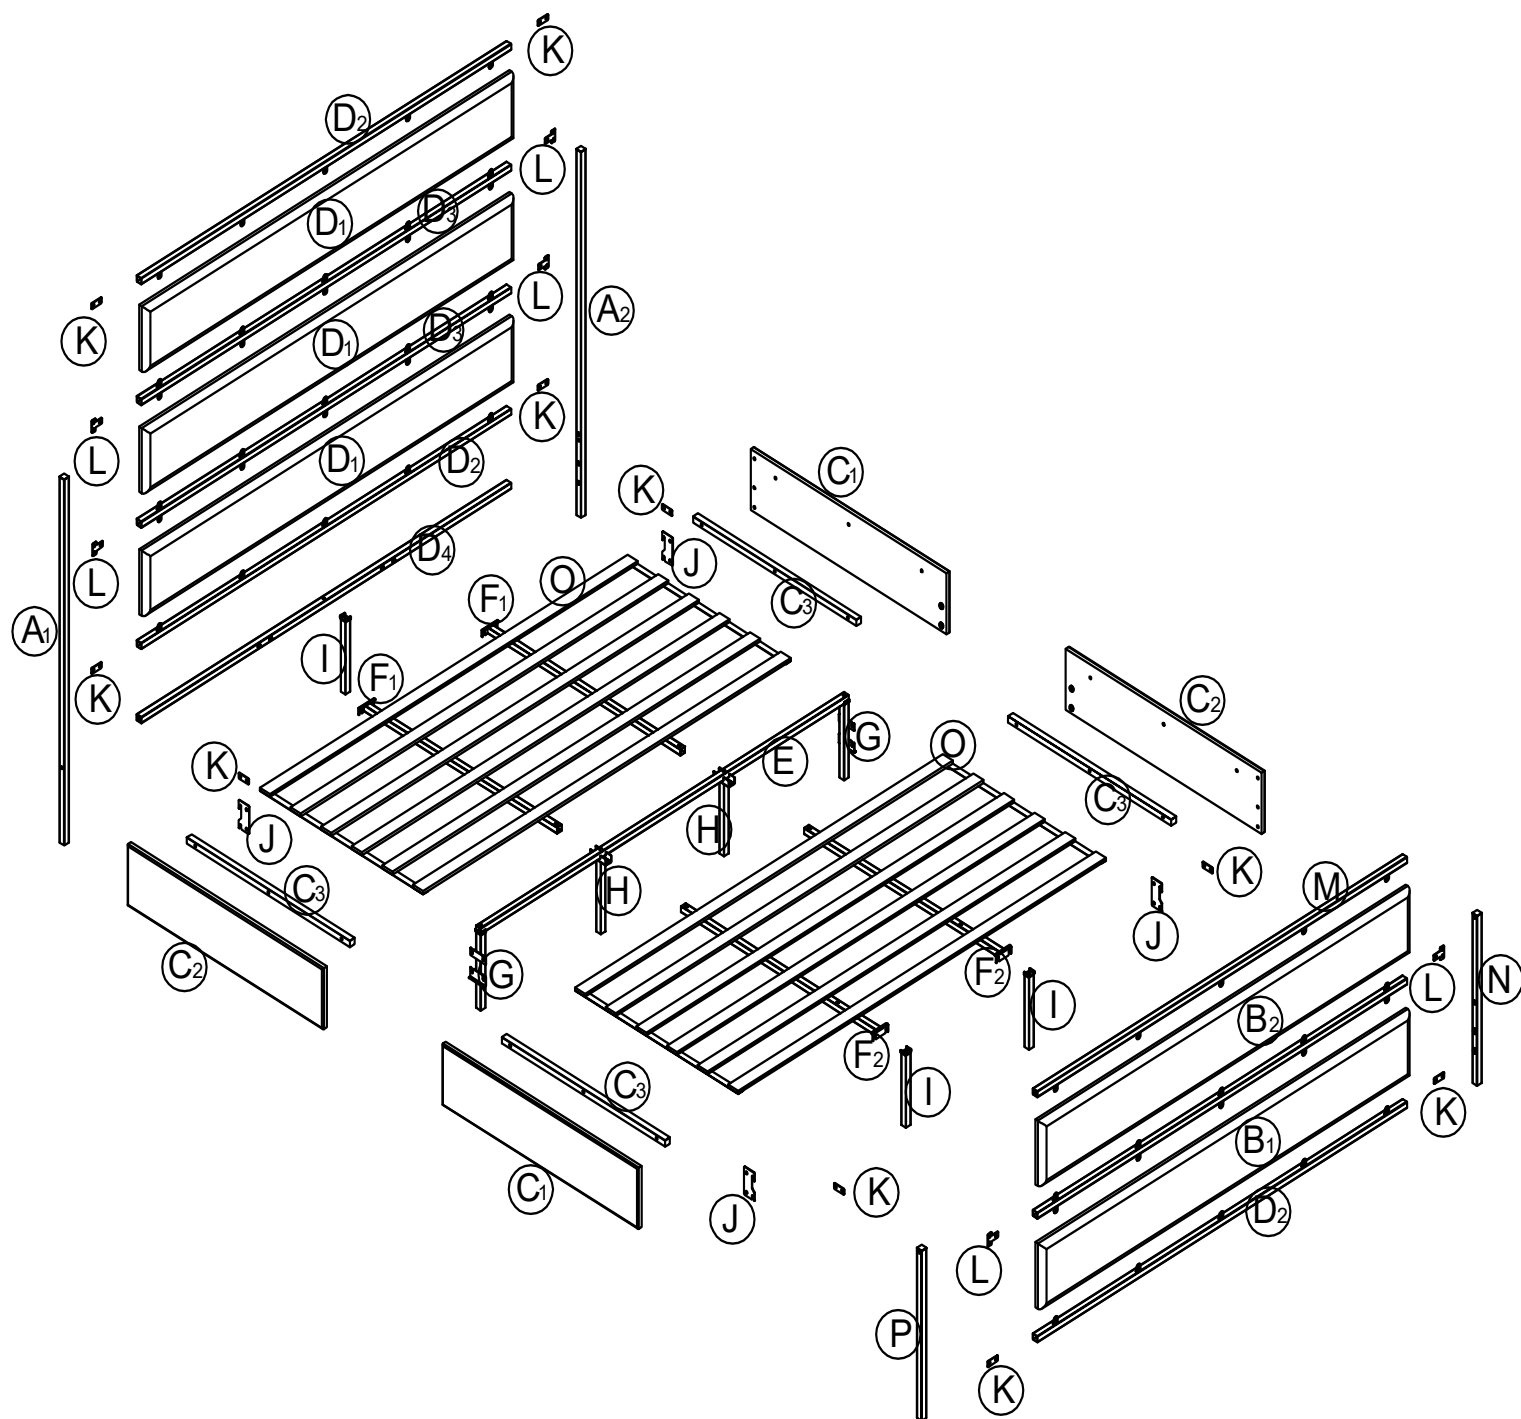For easier and better assembly, **2** or more adults are required.




ASSEMBLY INSTRUCTIONS

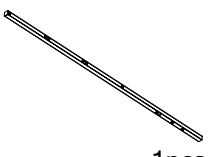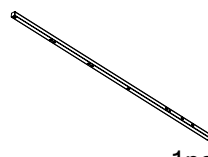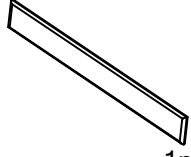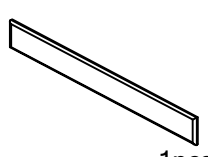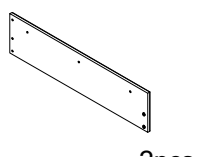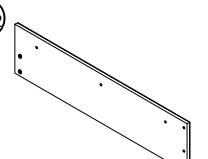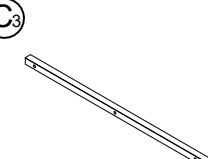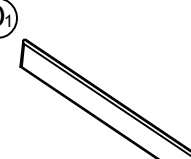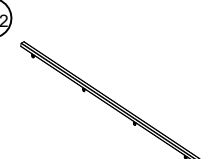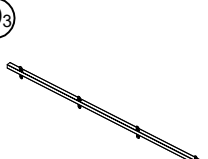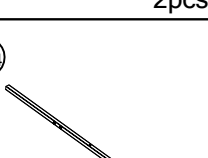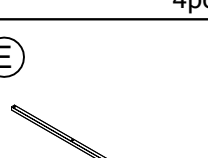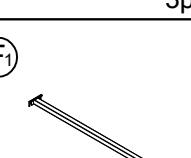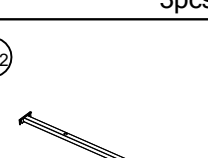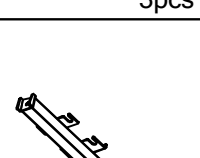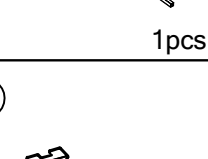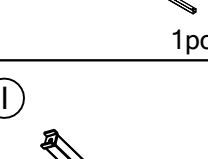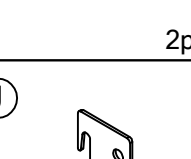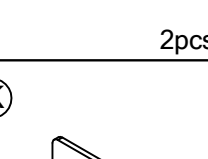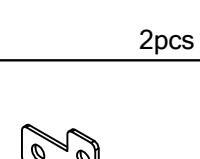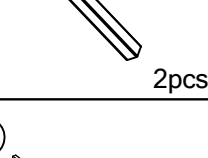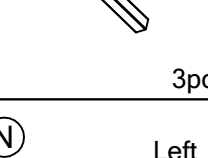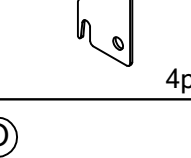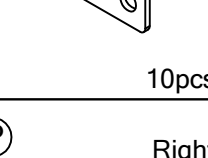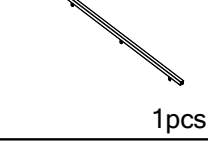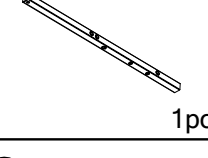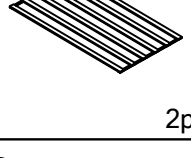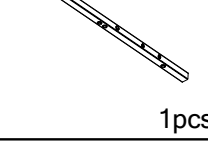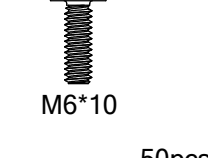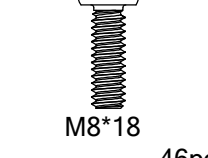PARTS LIST

 1pcs	 1pcs	 1pcs	 1pcs	 2pcs
 2pcs	 4pcs	 3pcs	 3pcs	 3pcs
 1pcs	 1pcs	 2pcs	 2pcs	 2pcs
 2pcs	 3pcs	 4pcs	 10pcs	 6pcs
 1pcs	 Left 1pcs	 2pcs	 Right 1pcs	
 M6*10 50pcs	 M8*18 46pcs	 M8*40 Color zinc 4pcs	 M8*40 9pcs	 M8*43 12pcs
 M8*50 2pcs	 4mm 1pcs			

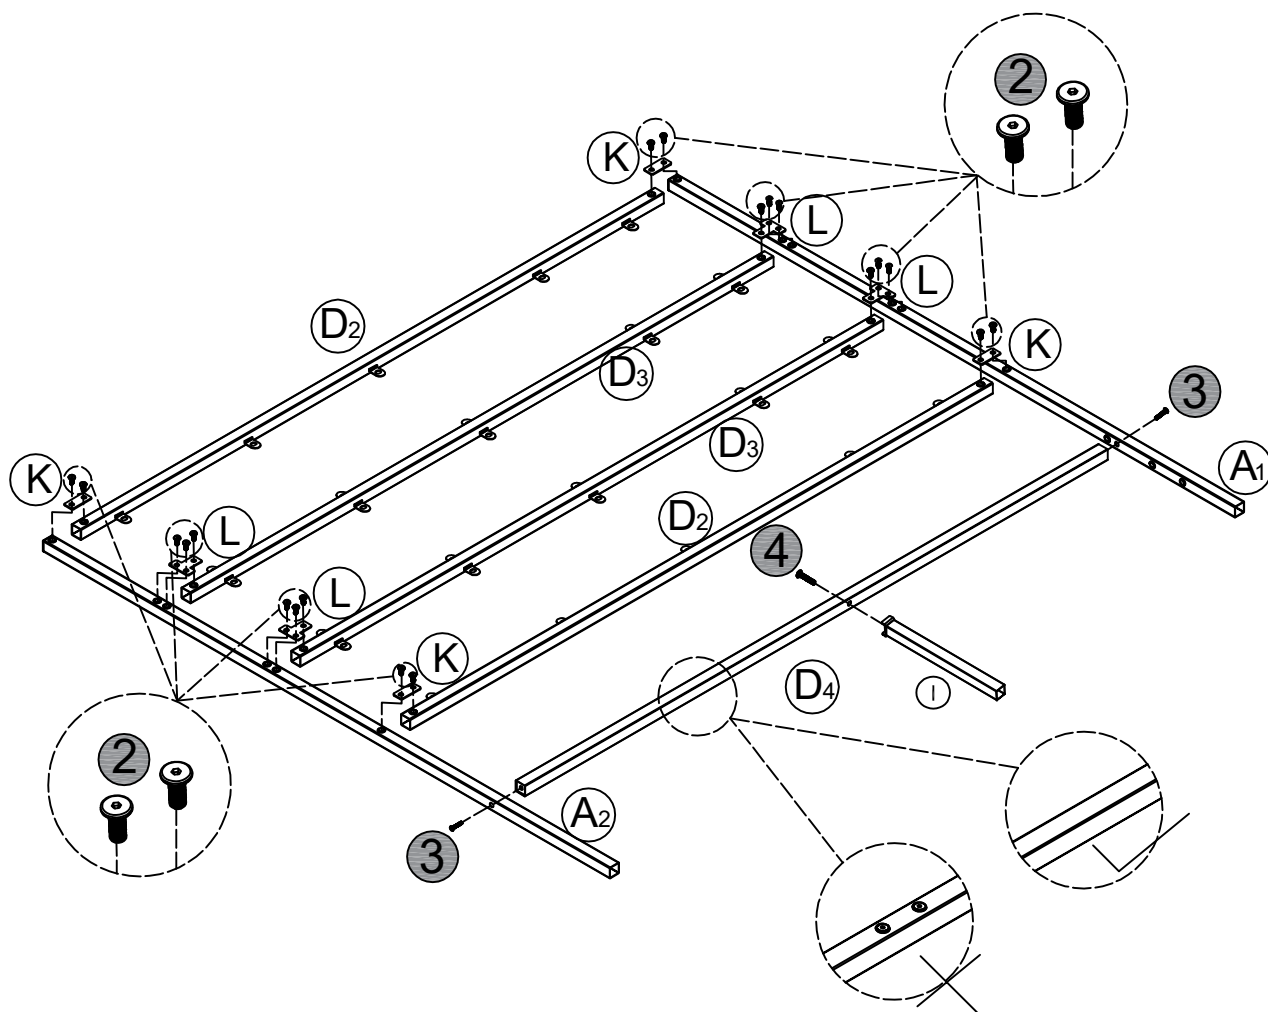
1



②	 M8*18	20pcs
③	 M8*40	2pcs
④	 M8*40	1pcs

Color zinc

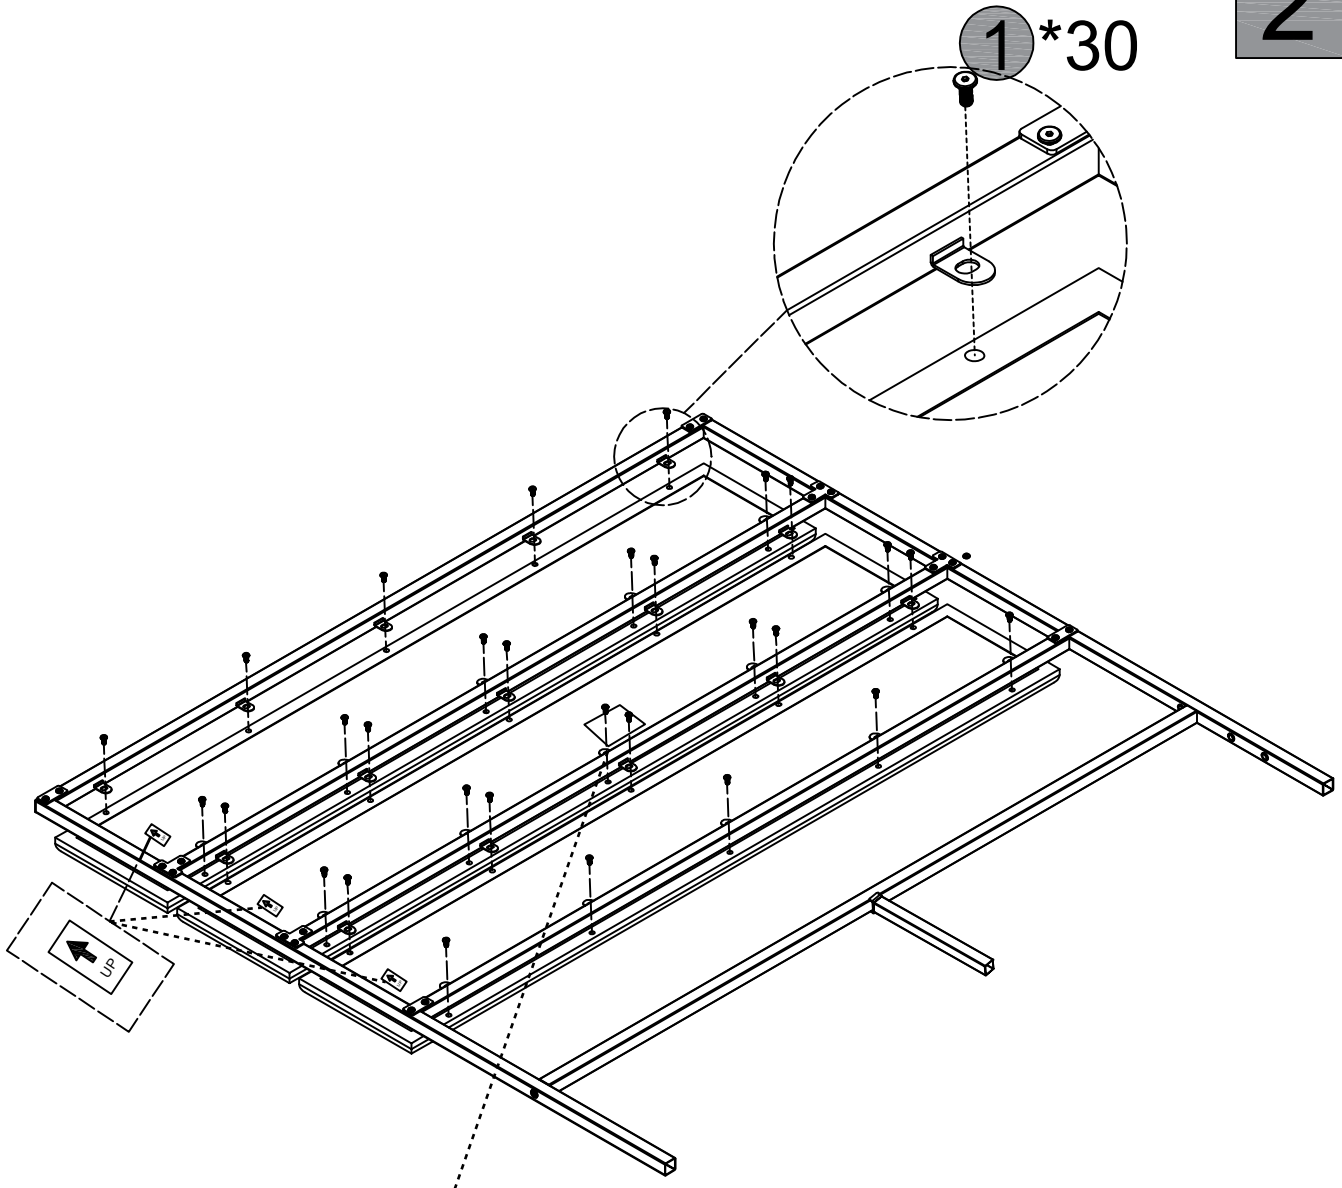
2



NOTICE THIS ARTICLE MEETS THE FLAMMABILITY REQUIREMENTS OF CALIFORNIA BUREAU OF ELECTRONIC AND APPLIANCE REPAIR, HOME FURNISHINGS AND THERMAL INSULATION TECHNICAL BULLETIN 117-2013. CARE SHOULD BE EXERCISED NEAR OPEN FLAME OR WITH BURNING CIGARETTES THE UPHOLSTERY MATERIALS IN THIS PRODUCT: ___ CONTAIN ADDED FLAME RETARDANT CHEMICALS ☒ CONTAIN NO ADDED FLAME RETARDANT CHEMICALS THE STATE OF CALIFORNIA HAS UPDATED THE FLAMMABILITY STANDARD AND DETERMINED THAT THE FIRE SAFETY REQUIREMENTS FOR THIS PRODUCT CAN BE MET WITHOUT ADDING FLAME RETARDANT CHEMICALS. THE STATE HAS IDENTIFIED MANY FLAME RETARDANT CHEMICALS AS BEING KNOWN TO, OR STRONGLY SUSPECTED OF, ADVERSELY IMPACTING HUMAN HEALTH OR DEVELOPMENT.	UNDER PENALTY OF LAW THIS TAG NOT TO BE REMOVED EXCEPT BY THE CONSUMER ALL NEW MATERIAL CONSISTING OF POLYURETHANE FOAM PAD 90% POLYESTER FIBER..... 10% REG.NO. UT 6172(CN) CERTIFICATION IS MADE BY THE MANUFACTURER THAT THE MATERIAL IN THIS ARTICLE ARE DESCRIBED IN ACCORDANCE WITH LAW California 93120 Phase 2 and TSCA Title VI Compliant for Formaldehyde MADE IN CHINA  WARNING: This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to WWW.P68Warnings.ca.gov/furniture.
--	---

1	 M6*10	30pcs
---	---	-------

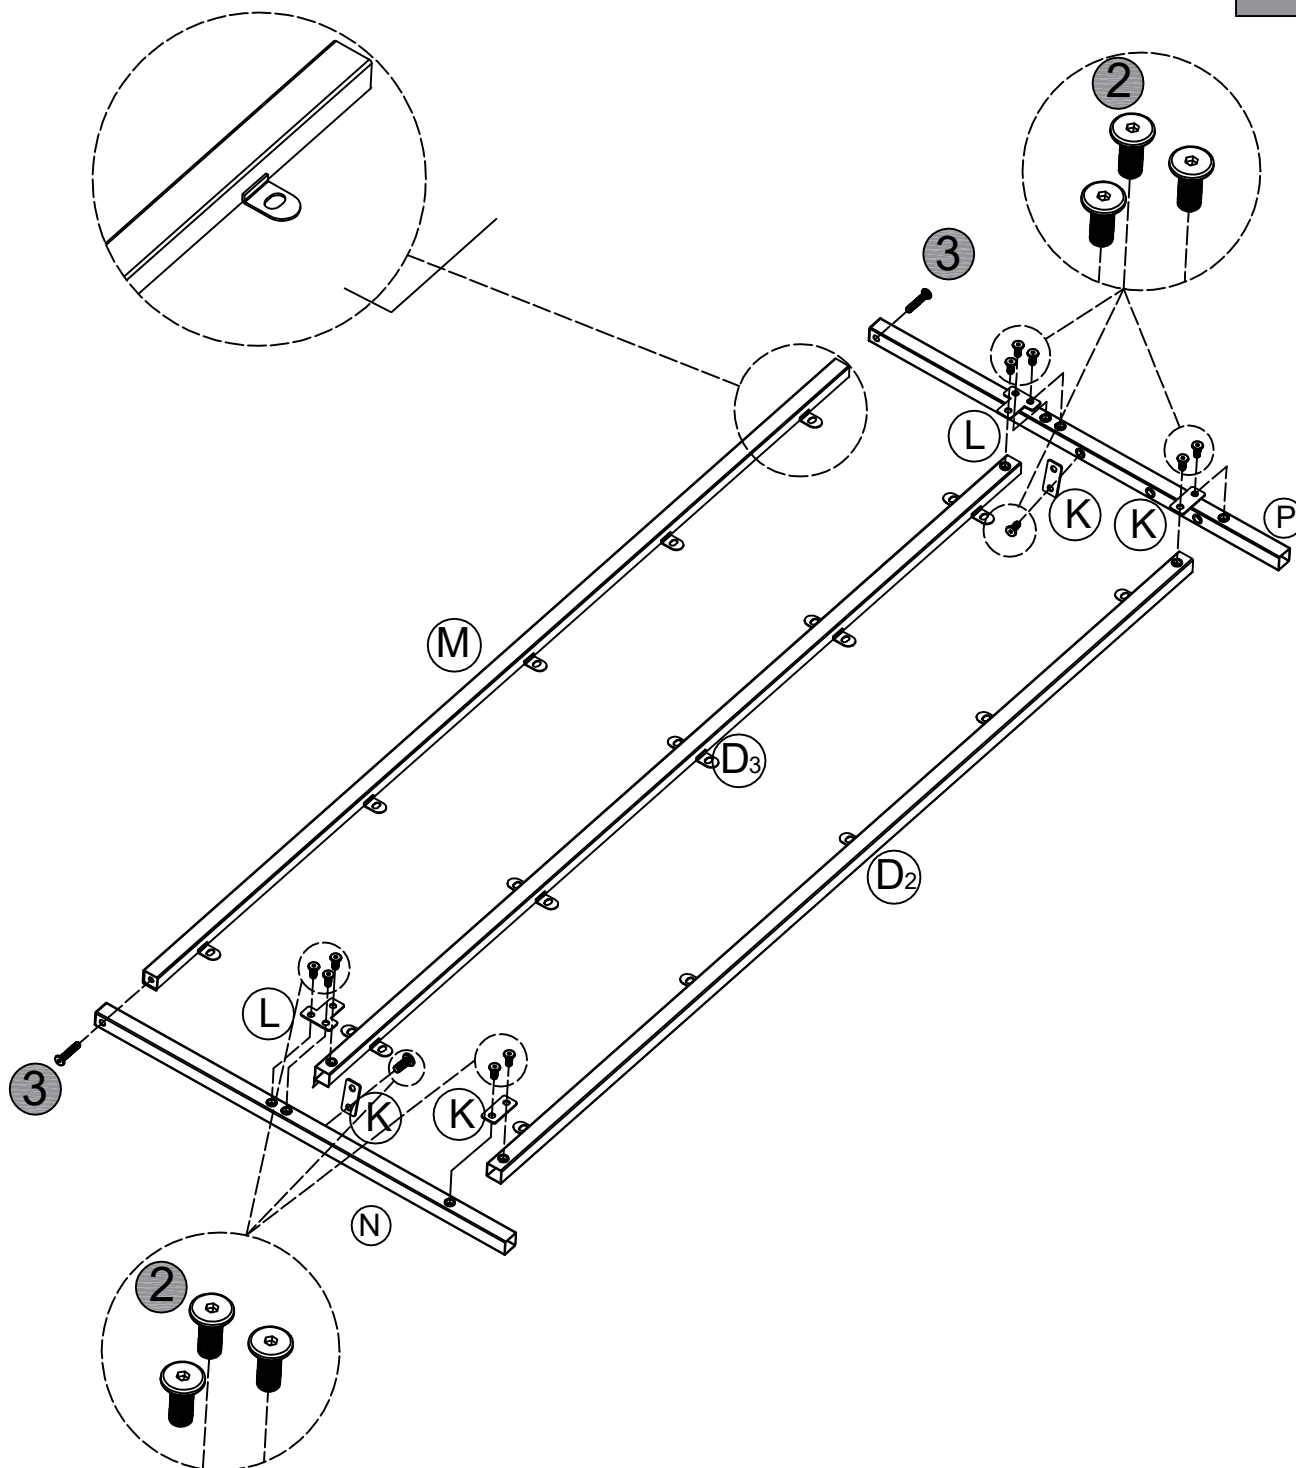3






2		12pcs
3		2pcs

Color zinc


4

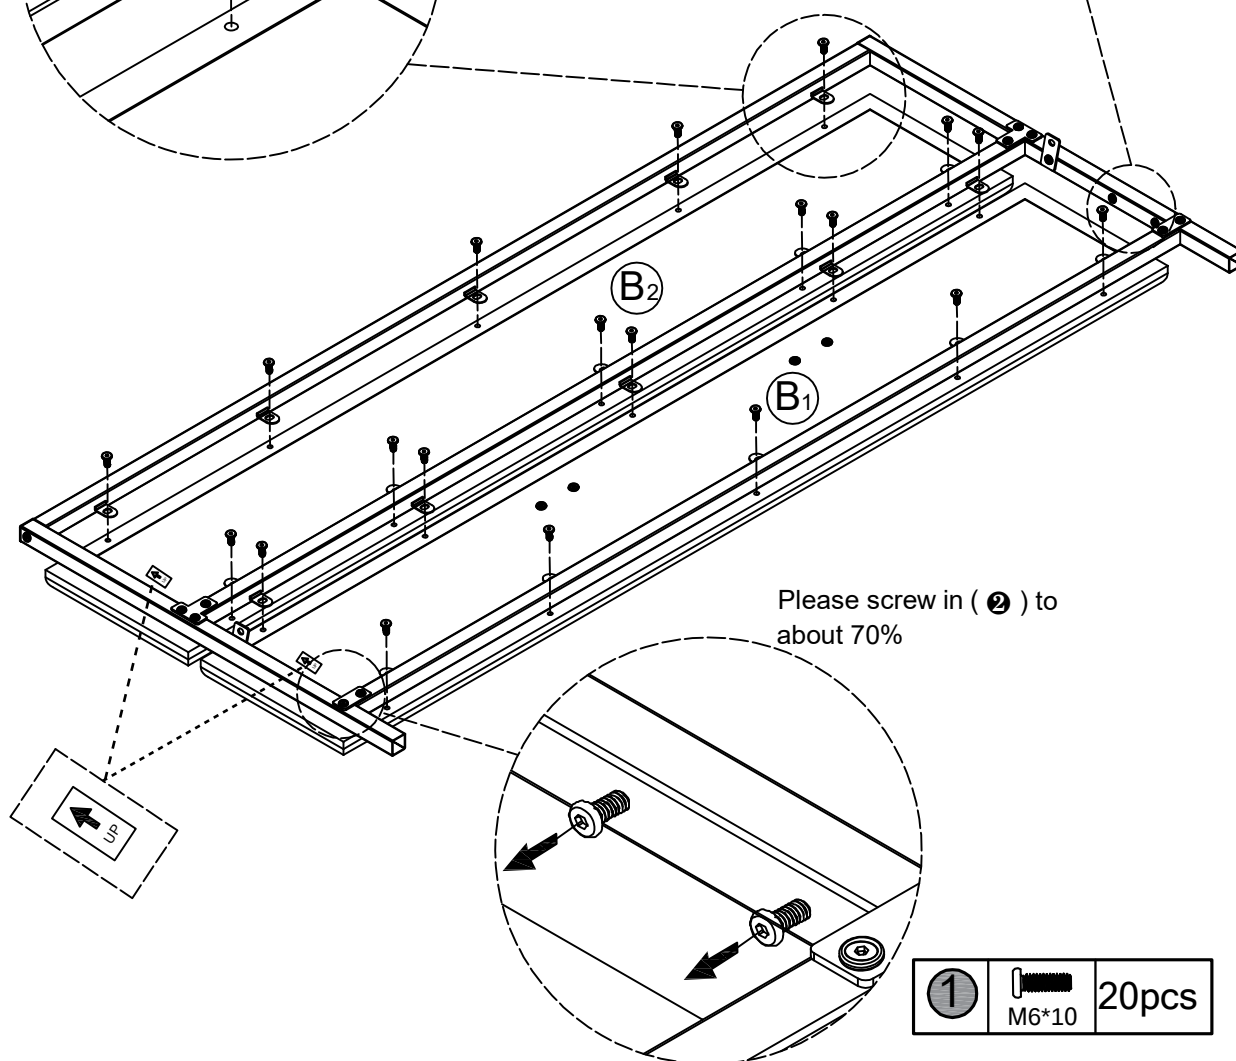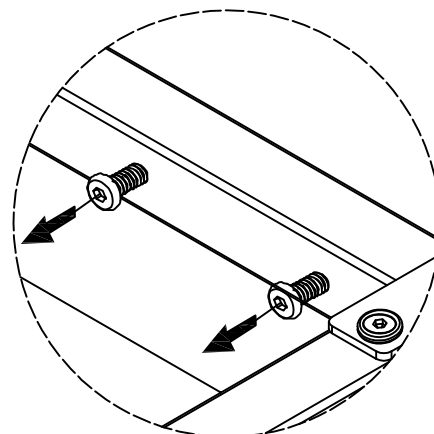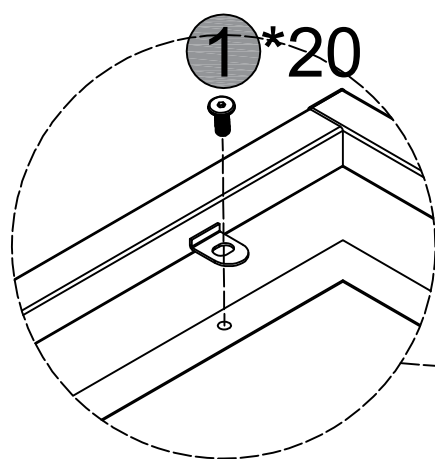Please screw in (2) to about 70%



1		20pcs
	M6*10	

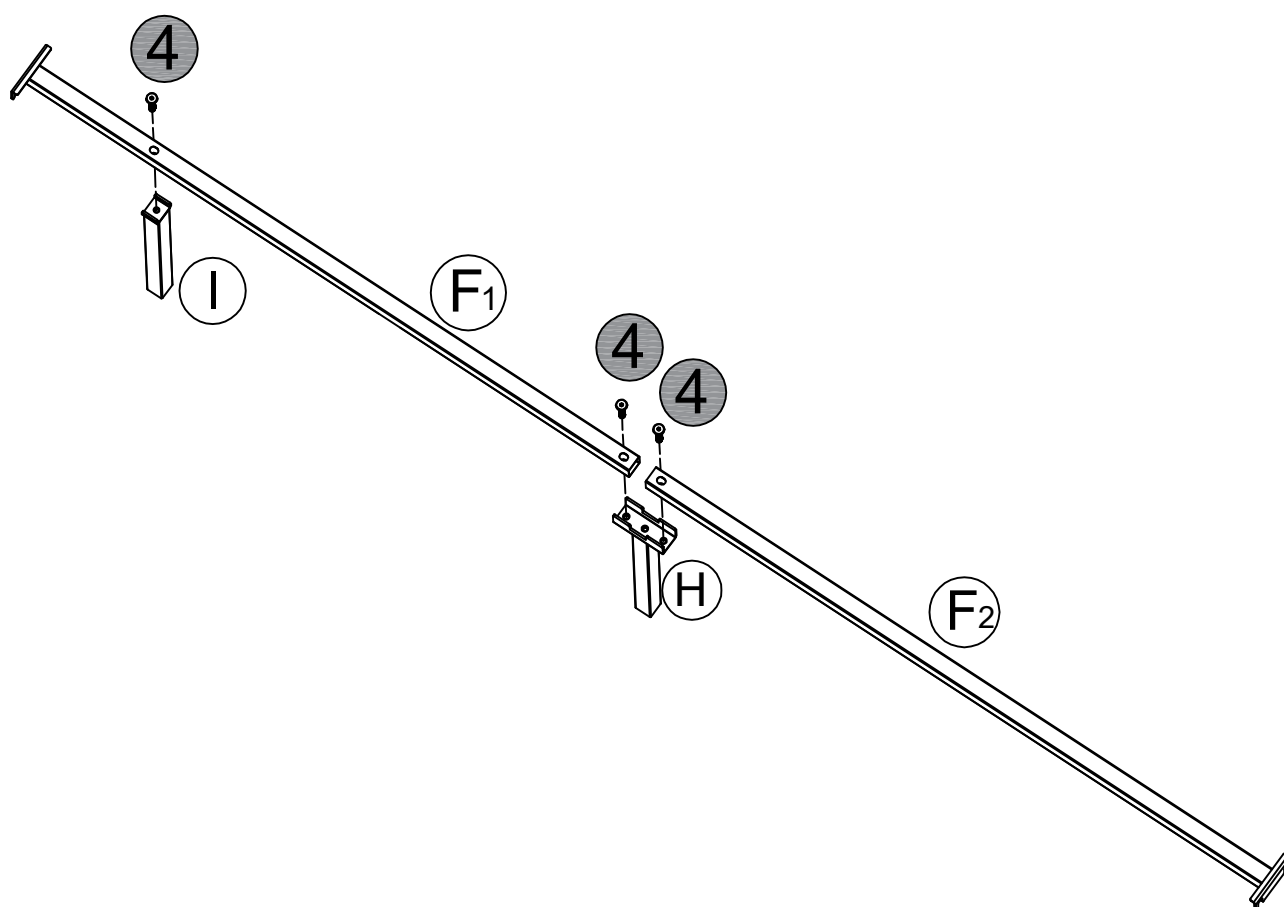5




$*2$


4	M8*40	6pcs
---	-------	------


ASSEMBLY INSTRUCTIONS

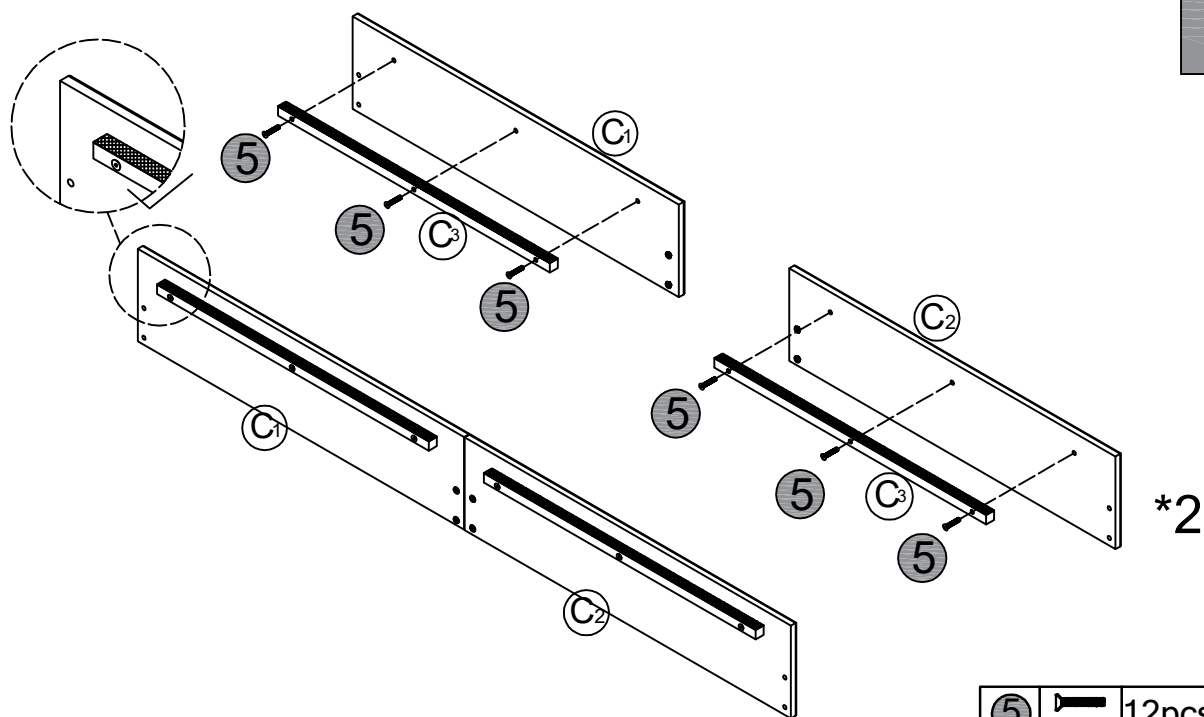6





7

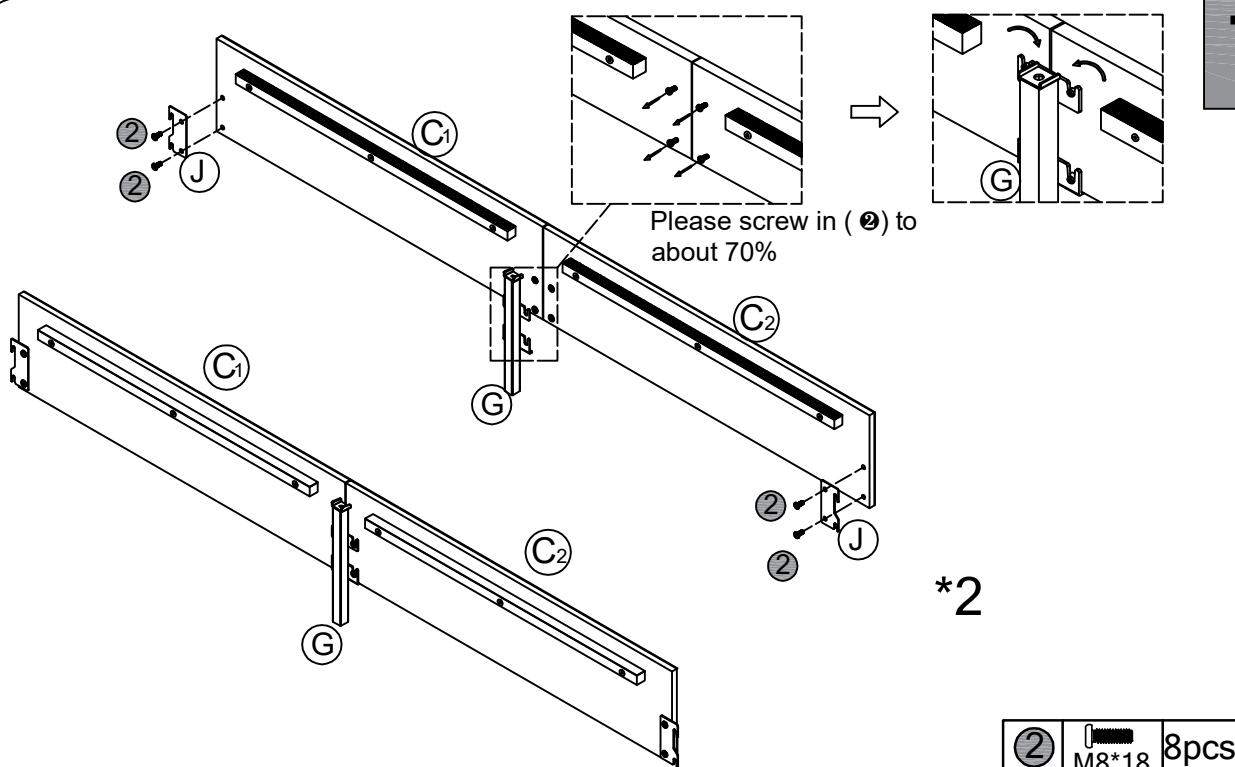

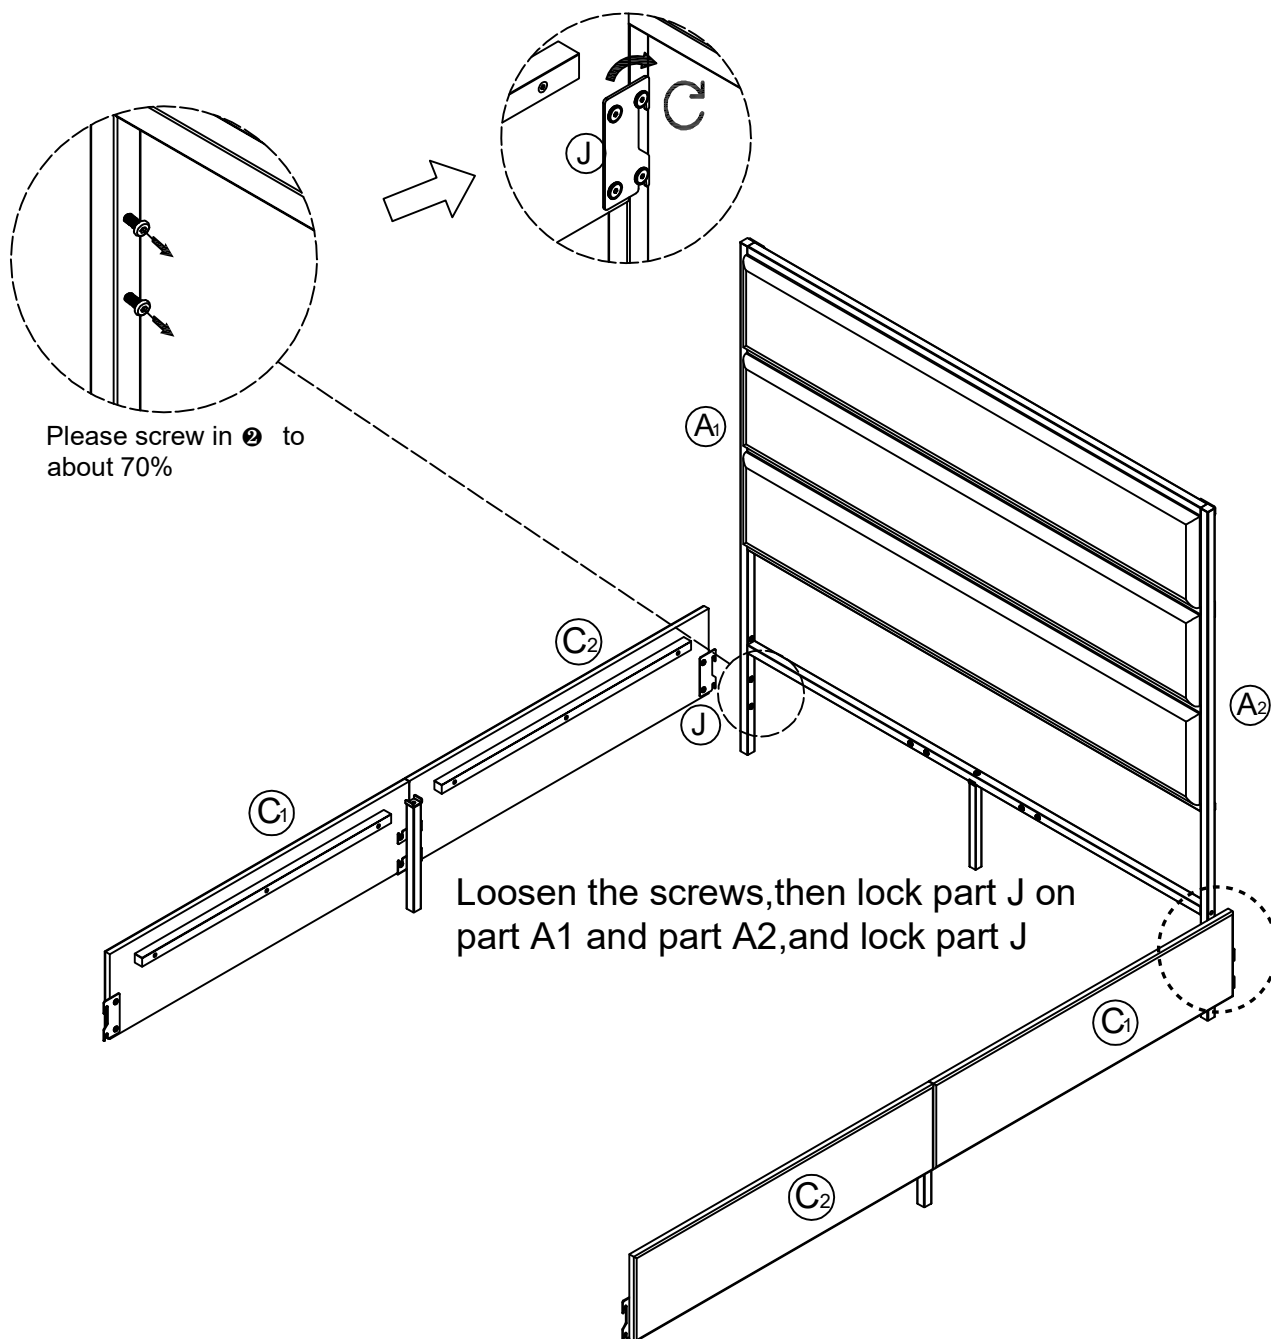


9

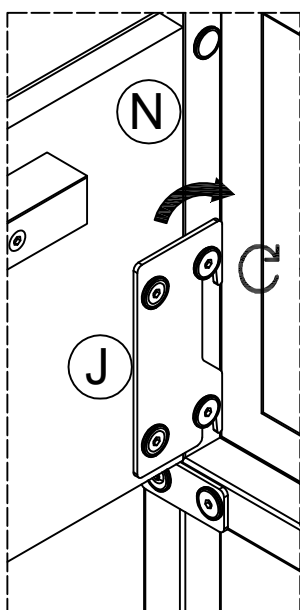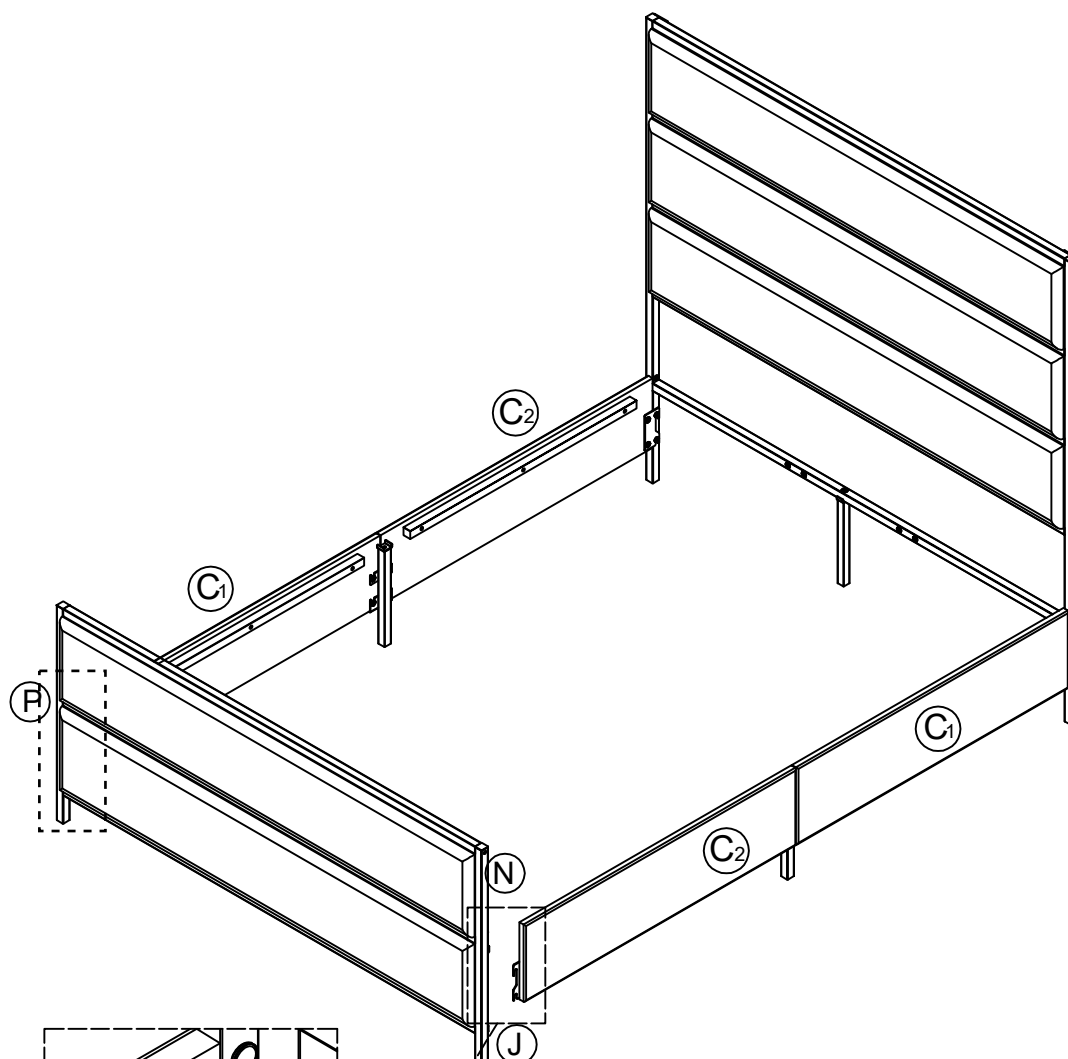


Loosen the screws, then lock part J on part N and part P

Loosen the screws, then
lock part F1 on part D4
and part F2 on part
B1, respectfully

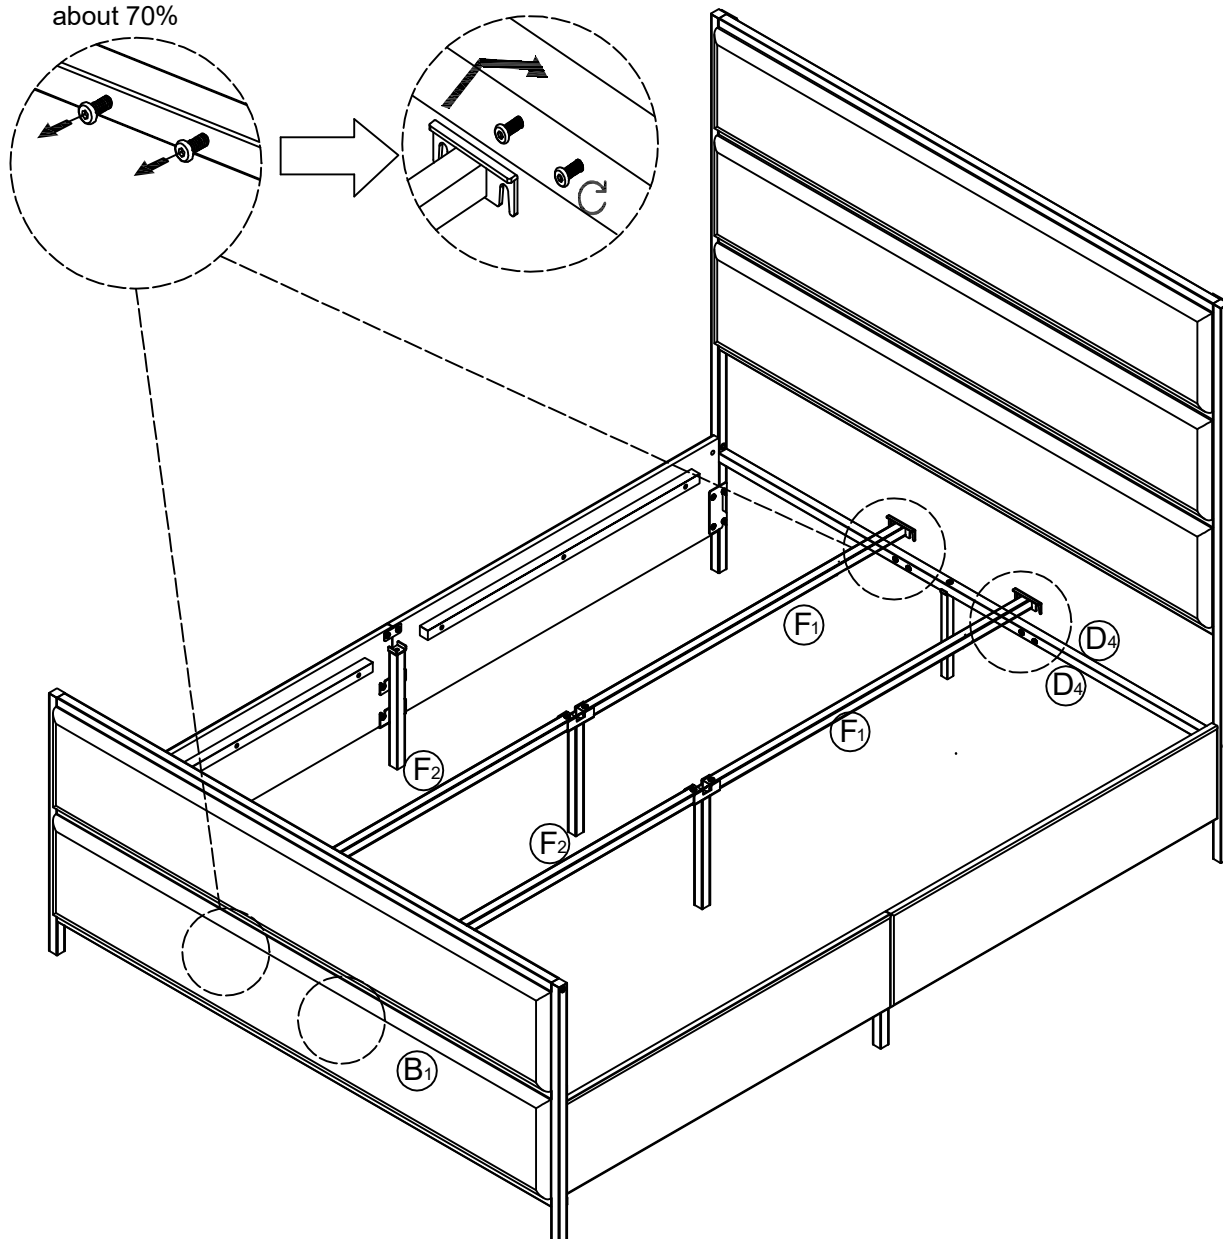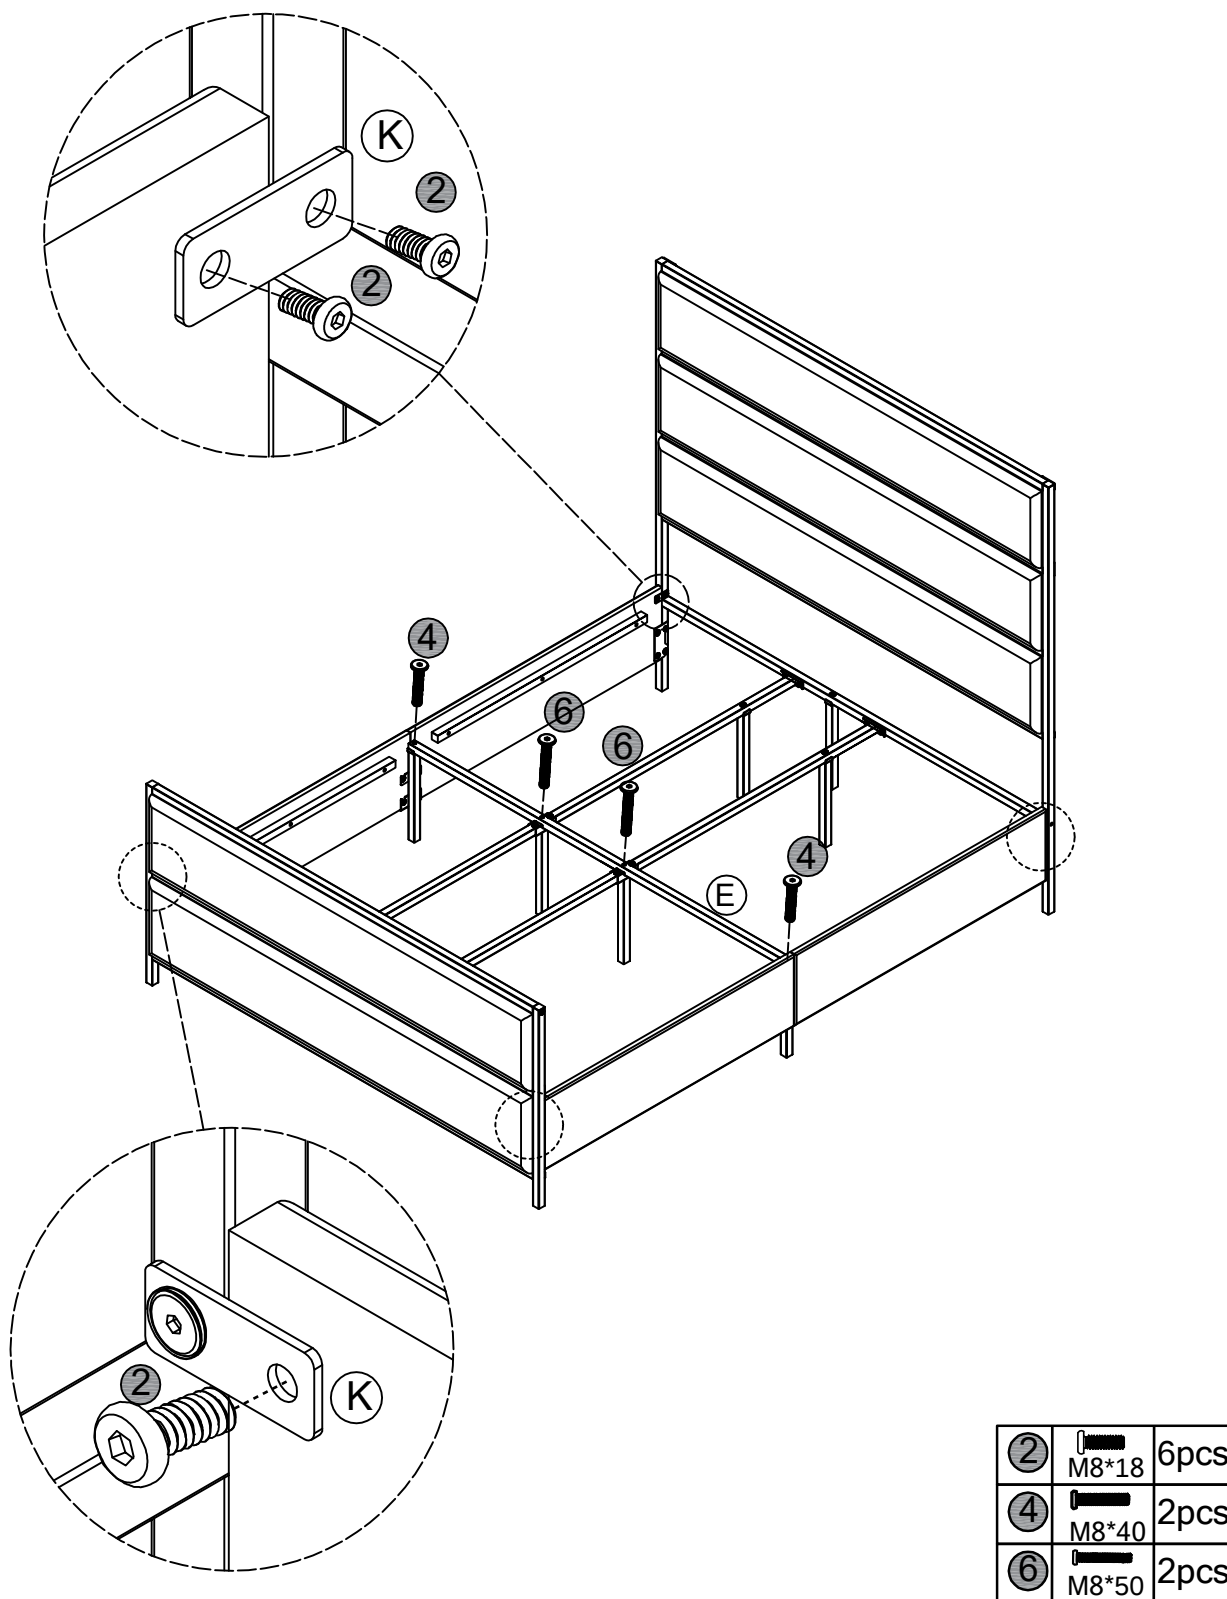
Please screw in ② to
about 70%






12

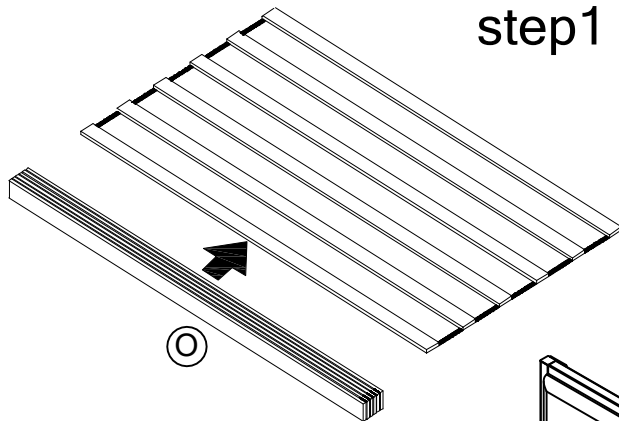
step1



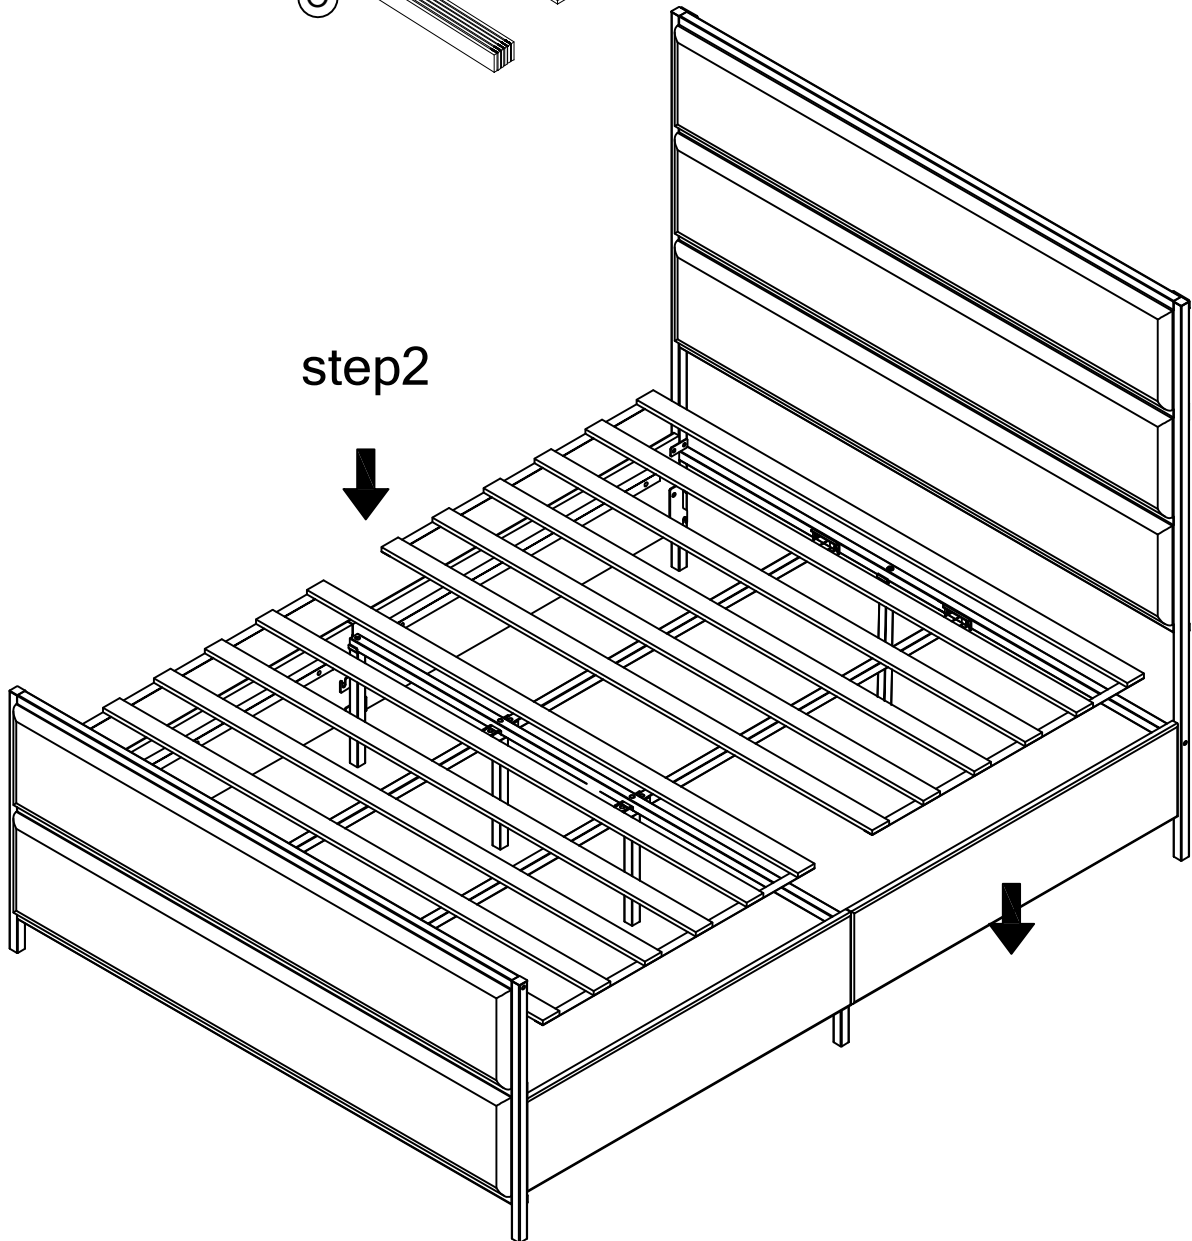step2



13

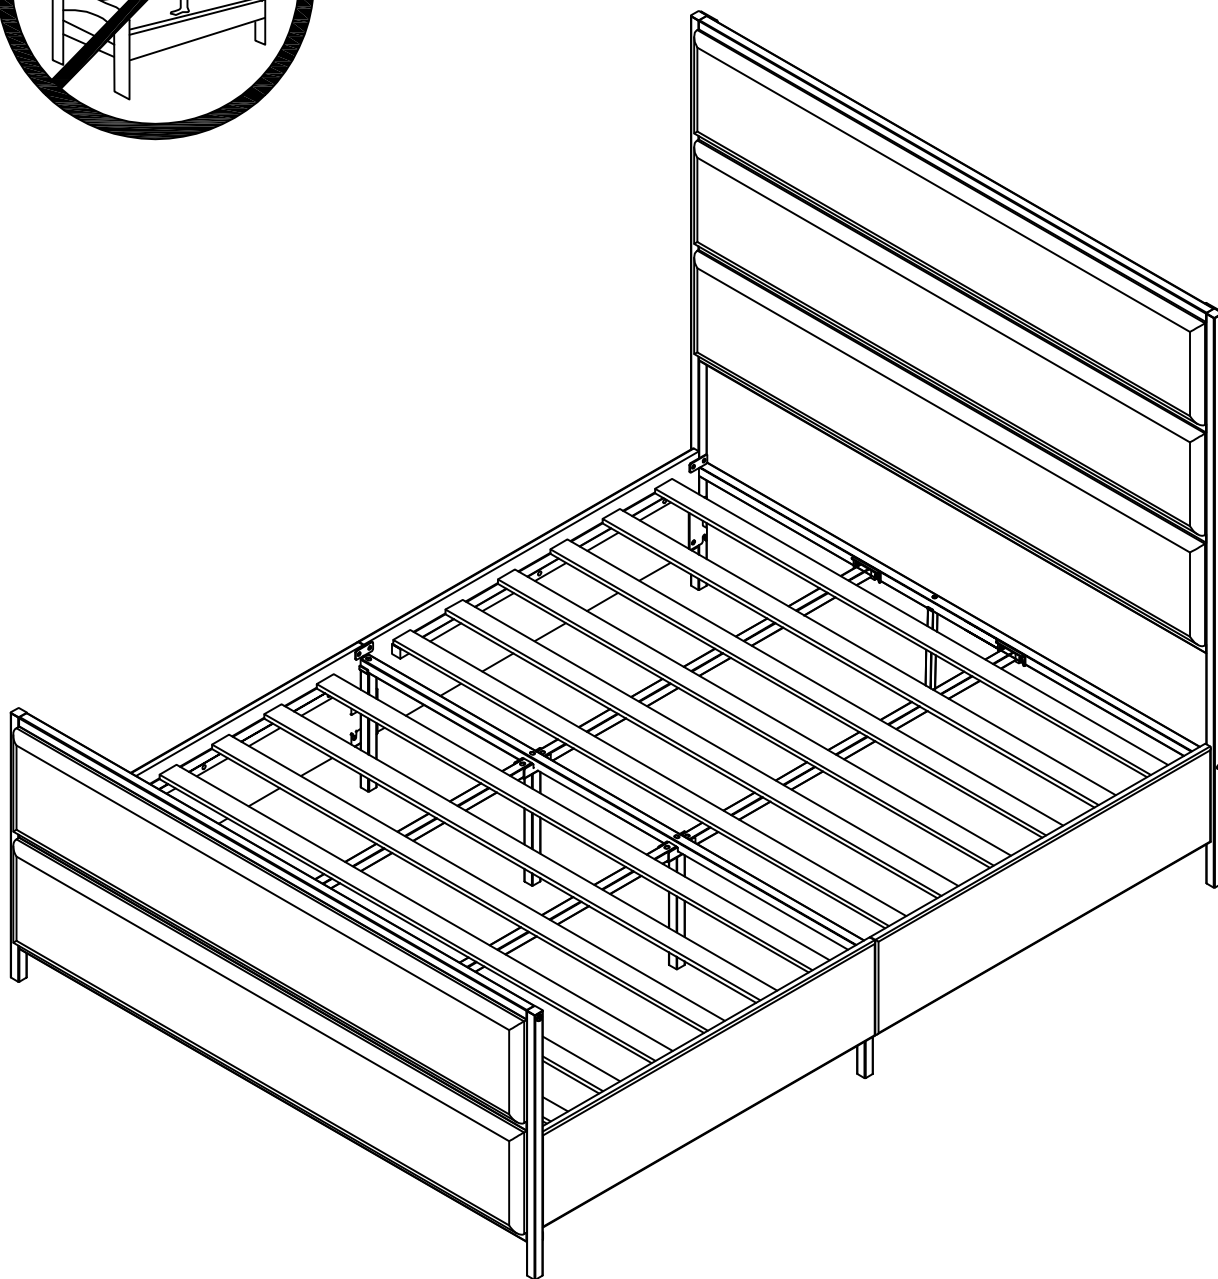

Installation Complete