


Metal Storage Bed Frame Assembly Instructions


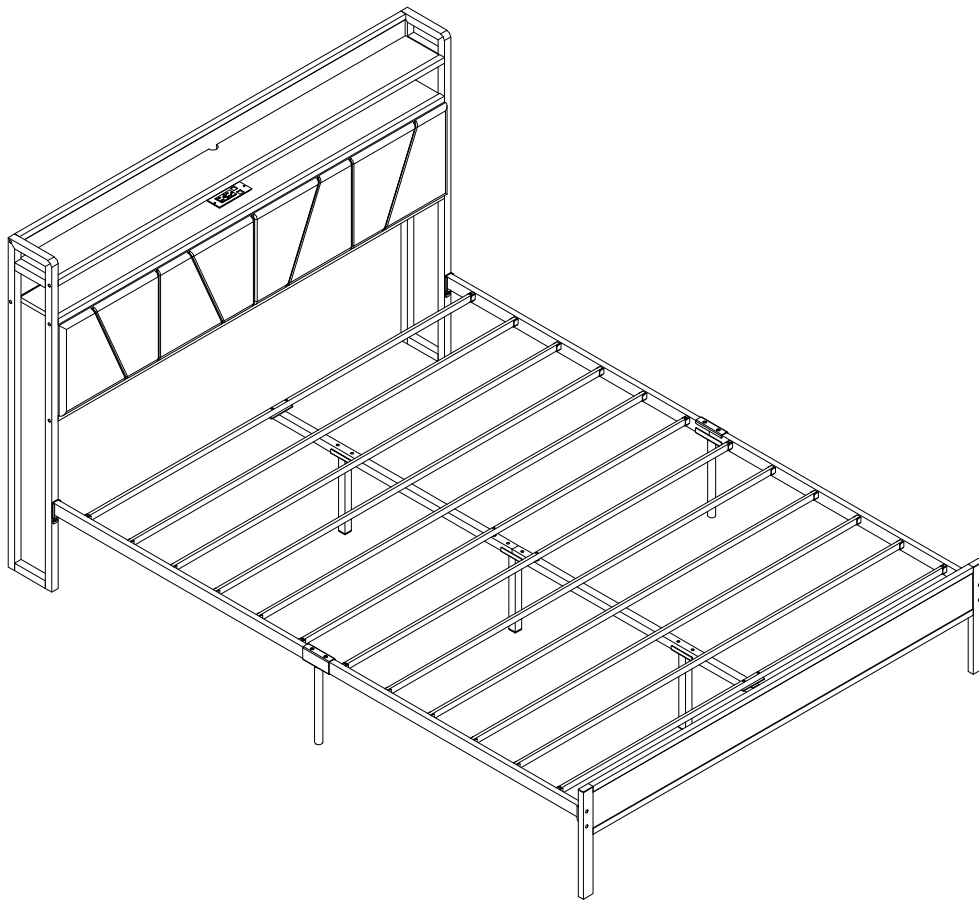


Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.
MADE IN CHINA




Please follow the instruction manuals and use a pad to protect the product during your assembly.

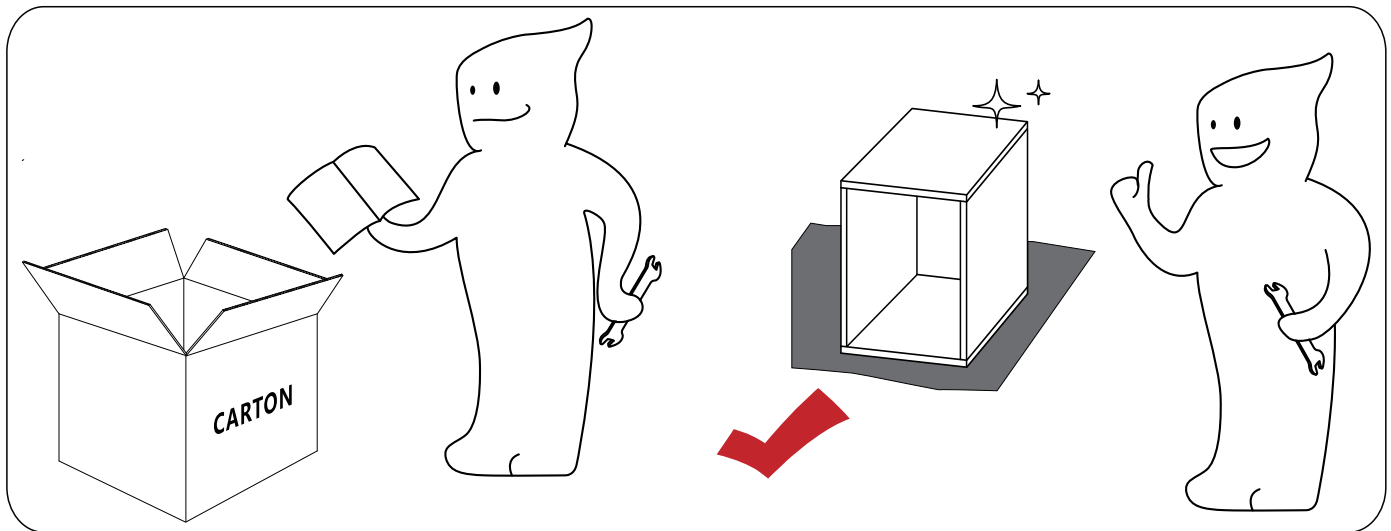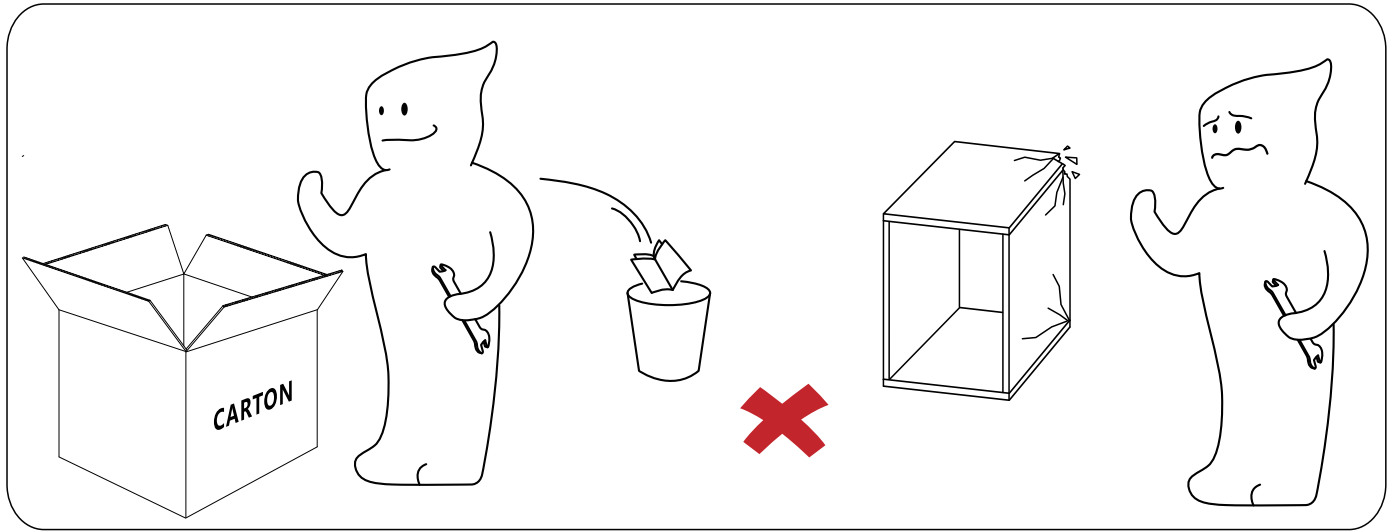

Note:


- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**

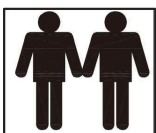

For easier and better assembly, **2** or more adults are required.


ASSEMBLY INSTRUCTIONS

DIY LED

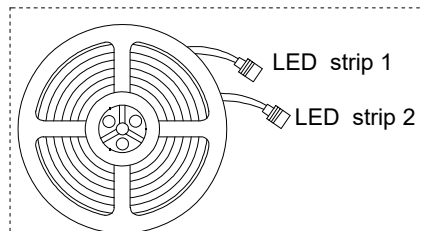


light bar

18

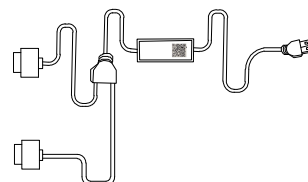


Controller wire

19

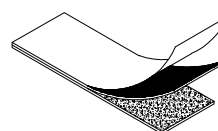




















Thread embedding buckle

20

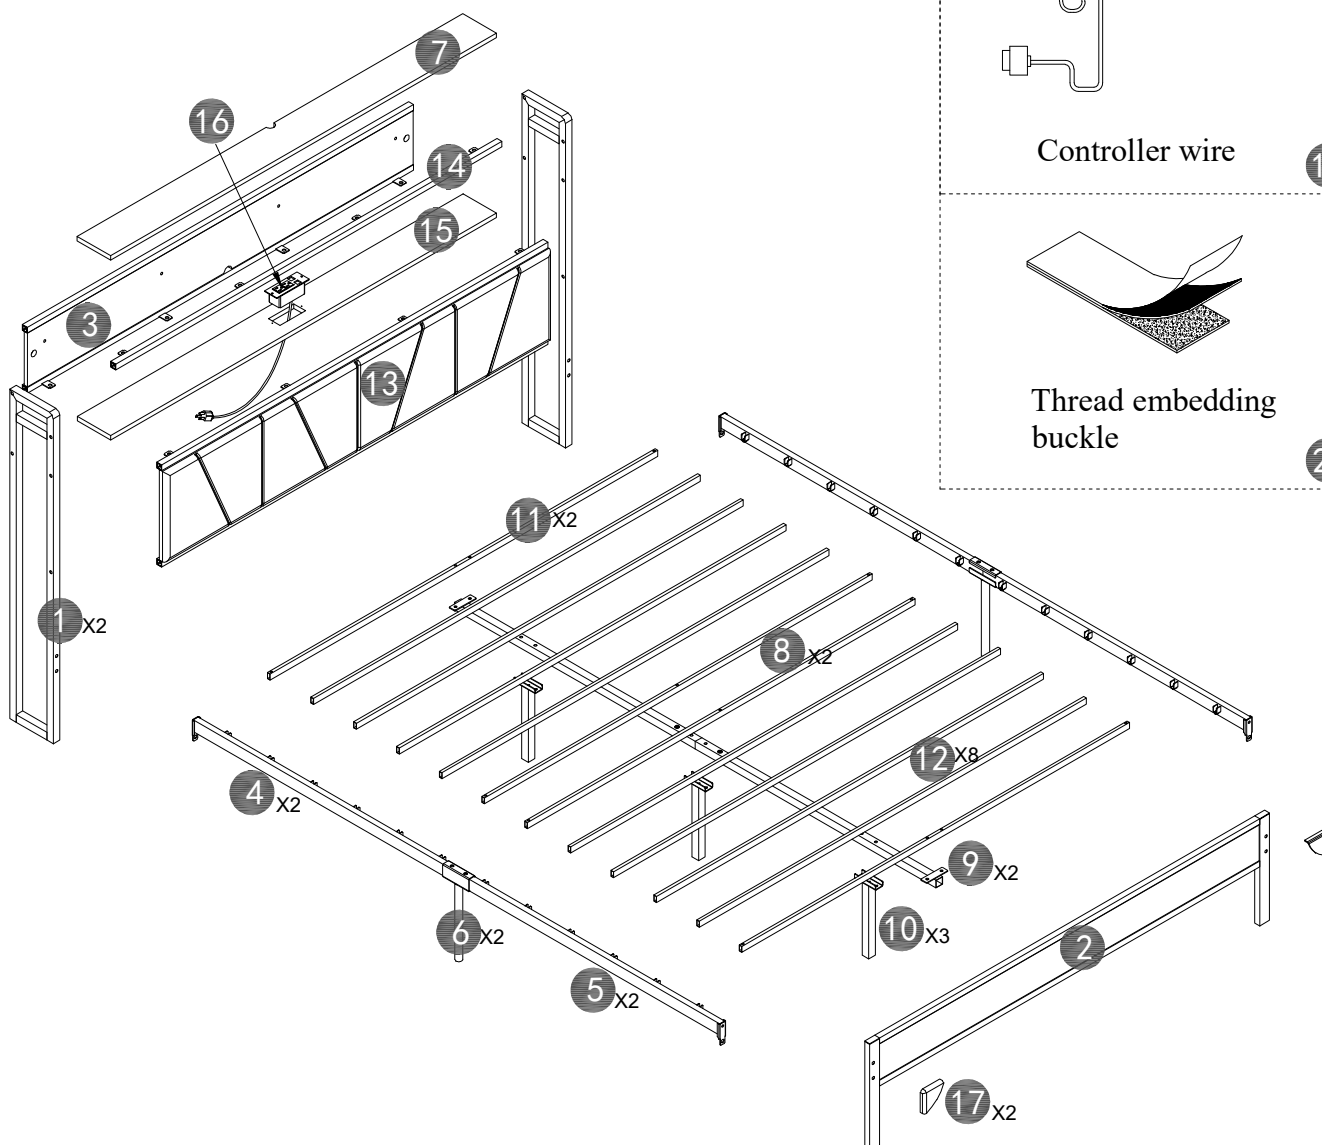









ASSEMBLY INSTRUCTIONS

PARTS LIST

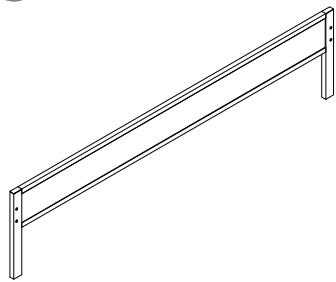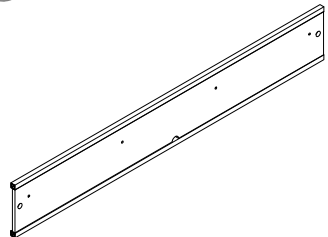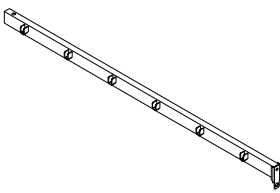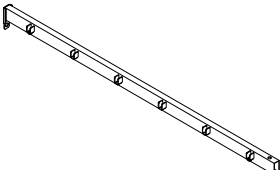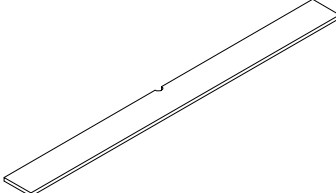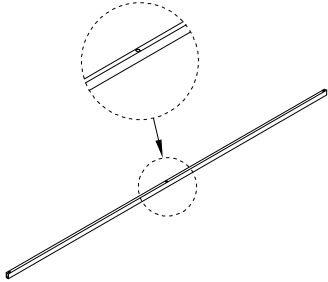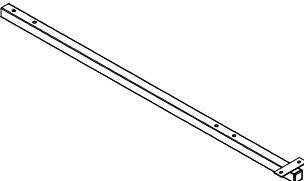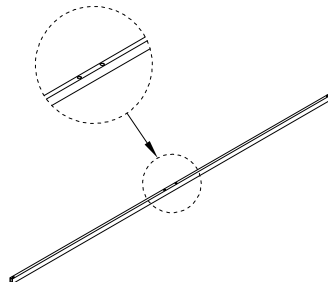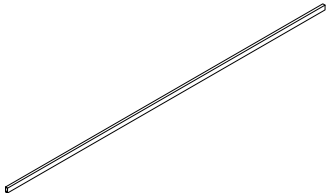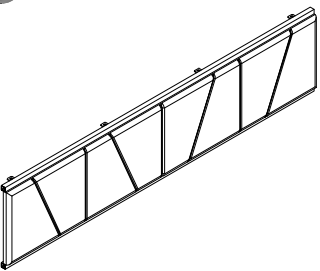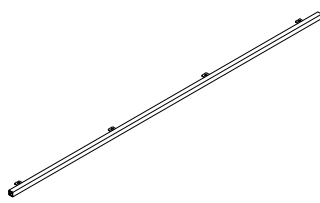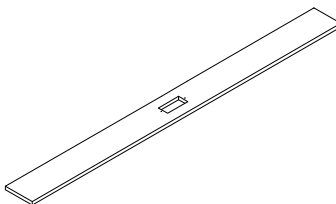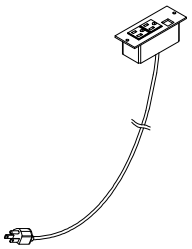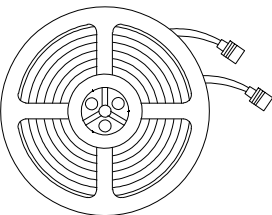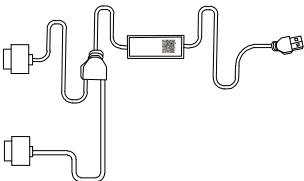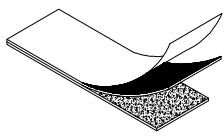 2PCS	 1PC	 1PC	 2PCS
 2PCS	 2PCS	 1PC	 2PCS
 2PCS	 3PCS	 2PCS	 8PCS
 1PC	 1PC	 1PC	 1PC
 2PCS	 light bar 1PC	 Controller wire 1PC	 Thread embedding buckle 4PCS

ASSEMBLY INSTRUCTIONS


HARDWARE LIST

A  M8 8PCS	B  1PC	C  M5*25 8PCS	D  M6*35 12PCS
E  M8*40 8PCS	F  ø8 8PCS	G  M6*12 12PCS	H  ø6 10PCS
I  S4 1PC	J  S10, S13 1PC	K  ø7*40 4PCS	L  M6*45 10PCS
M  M3*12 2PCS	N  M8*55 4PCS		

ASSEMBLY INSTRUCTIONS


1

Do not fully tighten the screws just yet.

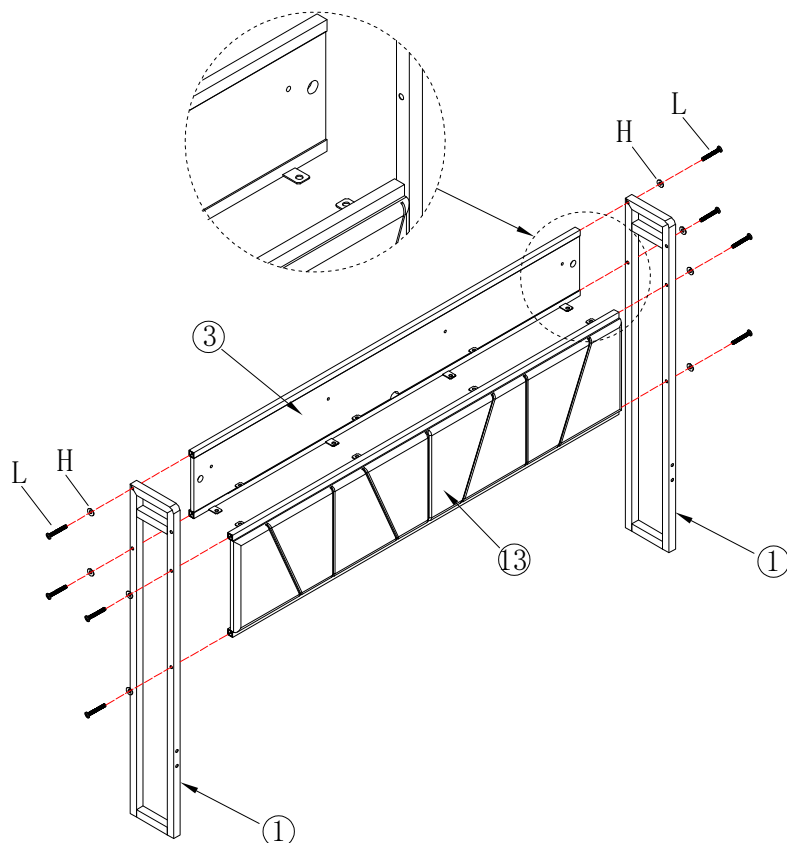

L		8PCS
H		8PCS
I		


2

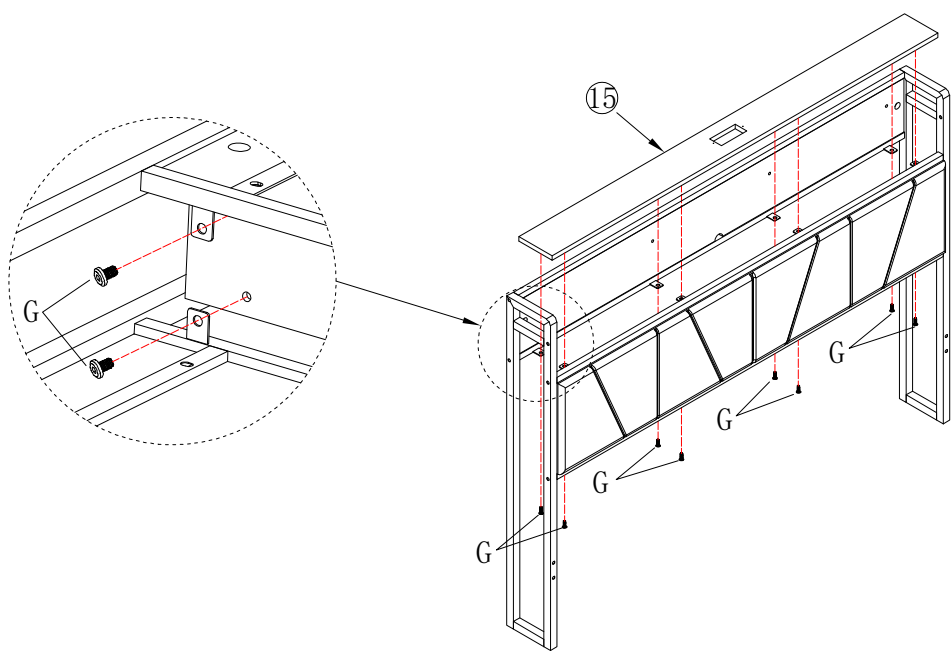

G		8PCS
I		

ASSEMBLY INSTRUCTIONS


3

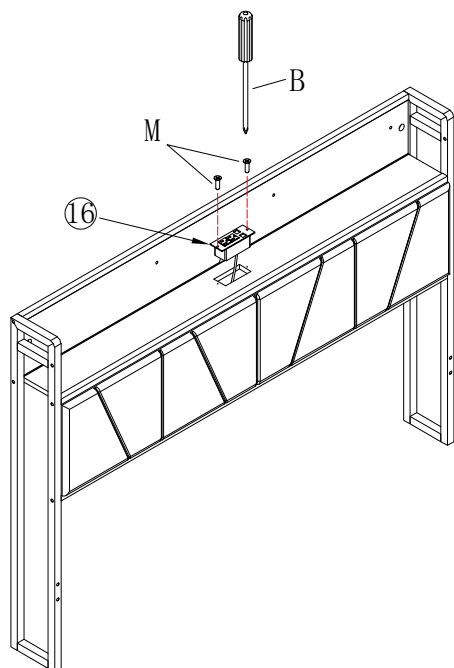

M		2PCS
B		

4


Now that the headboard frame is mostly complete, please tighten all the screws on it.

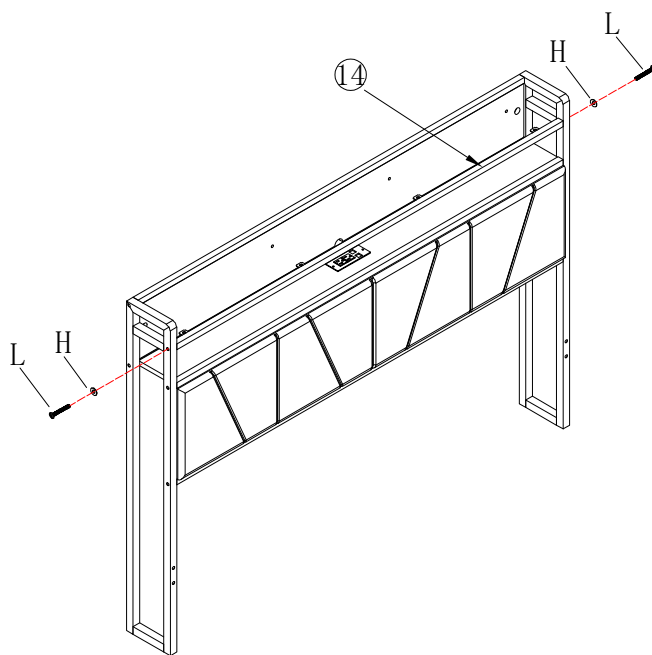


L		2PCS
H		2PCS
I		

ASSEMBLY INSTRUCTIONS

5

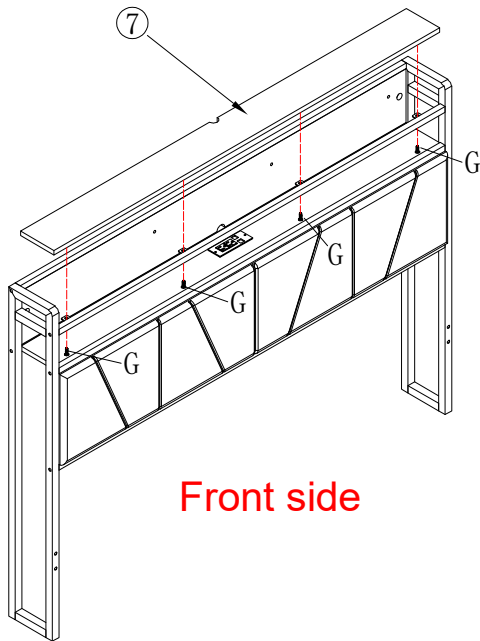


Front side

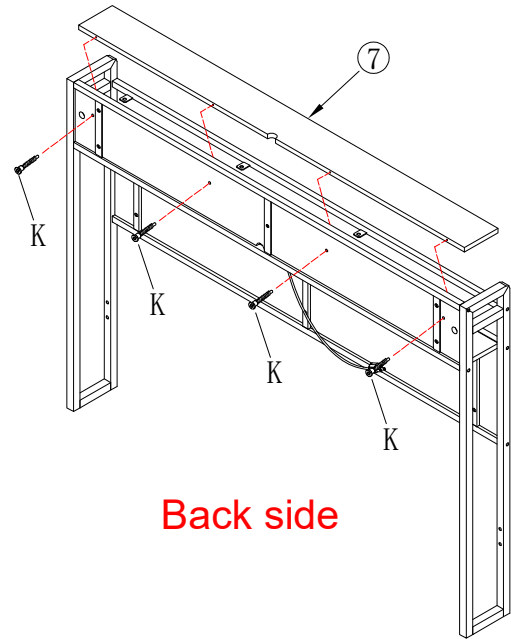

Back side

G		4PCS
K		4PCS
I		

6

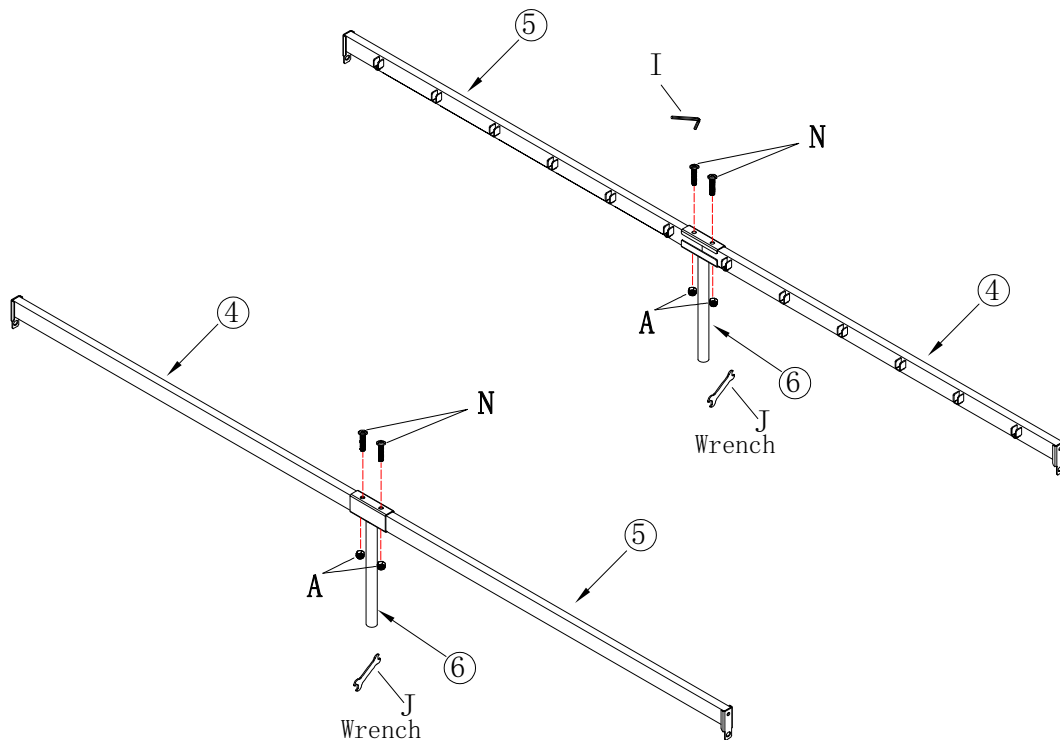


Hold and fix the Nut (A) in place using the Wrench (J),
then tighten the Screw (N) with the Allen key (I).

N		4PCS
A		4PCS
I		2PCS
J		

ASSEMBLY INSTRUCTIONS


7

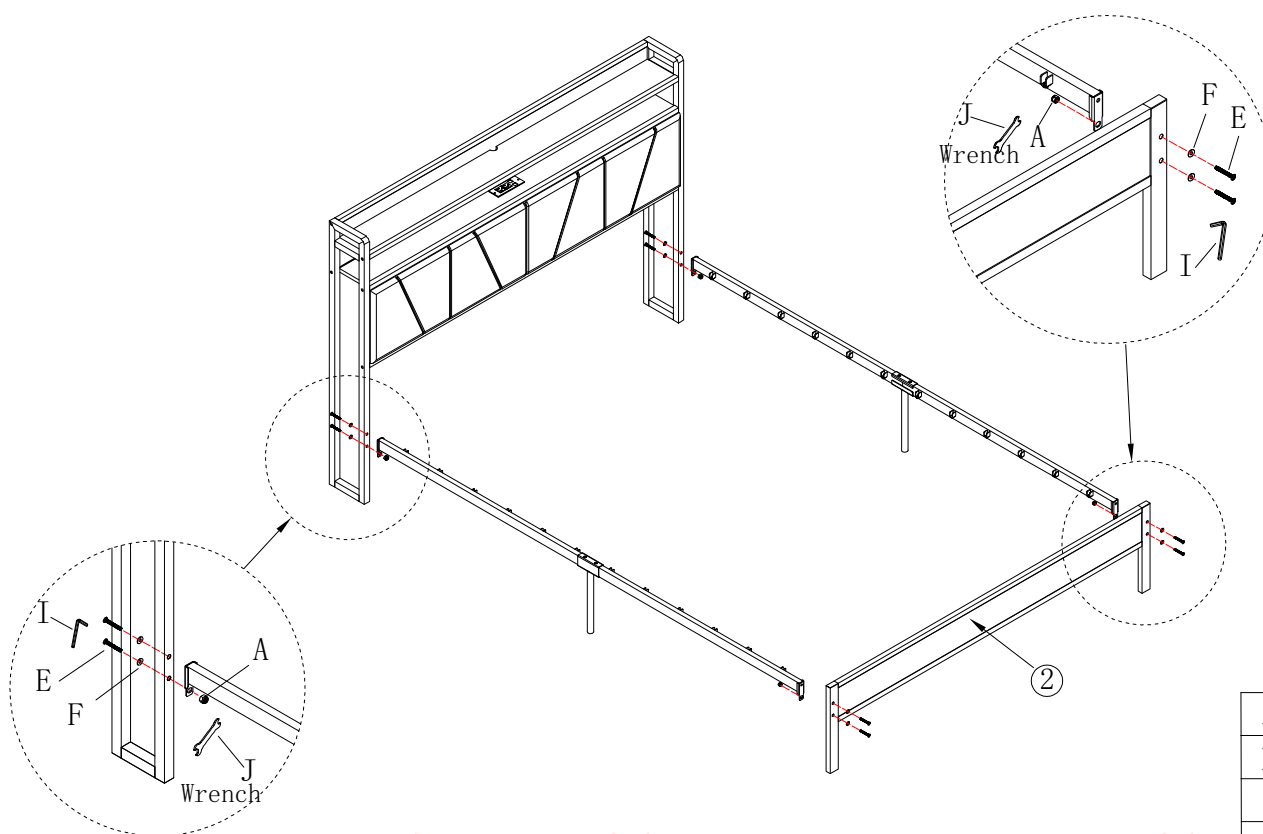

Hold and fix the Nut (A) in place using the Wrench (J), then tighten the Screw (E) with the Allen key (I).

A		4PCS
E		8PCS
F		8PCS
I		
J		


8

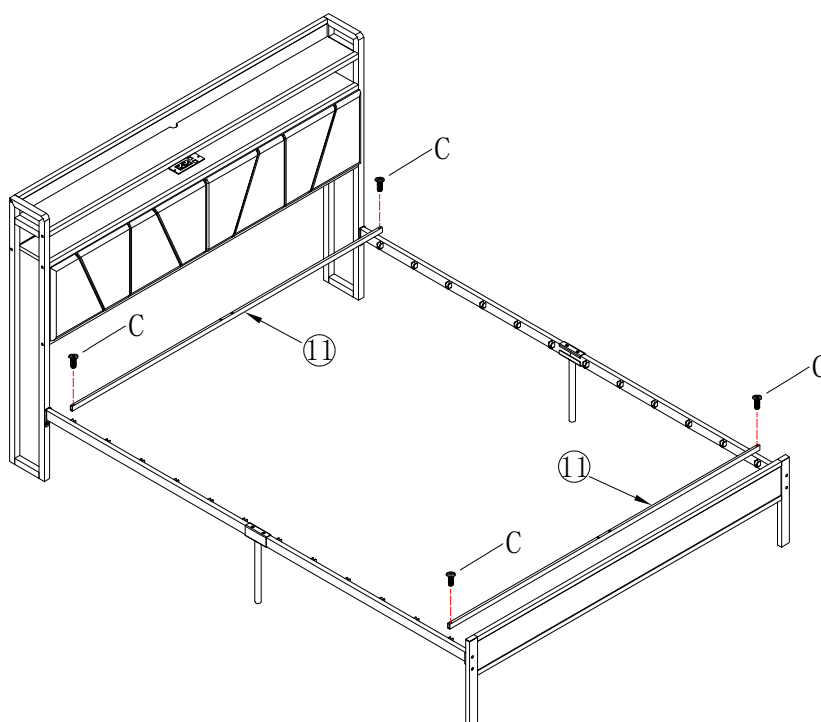

C		4PCS
I		


ASSEMBLY INSTRUCTIONS

9

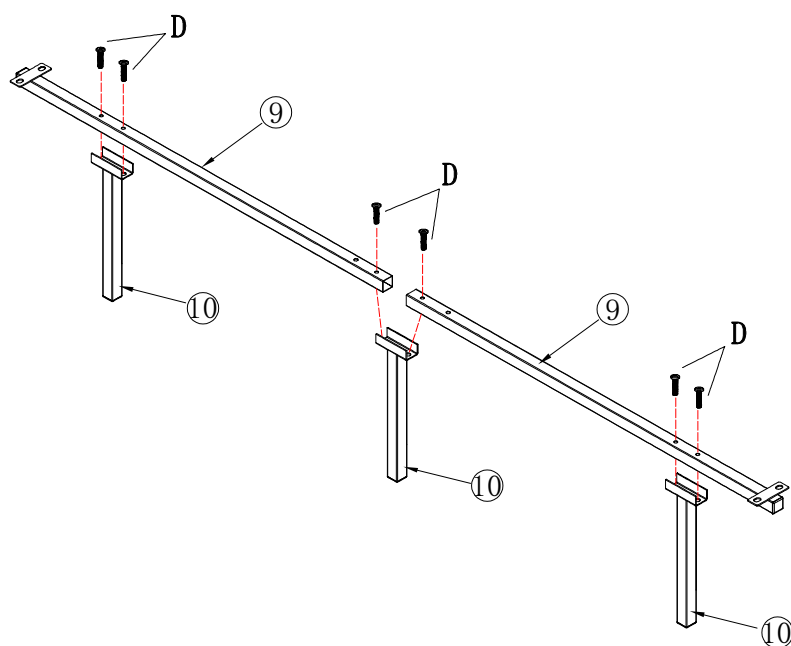


D		6PCS
I		


10

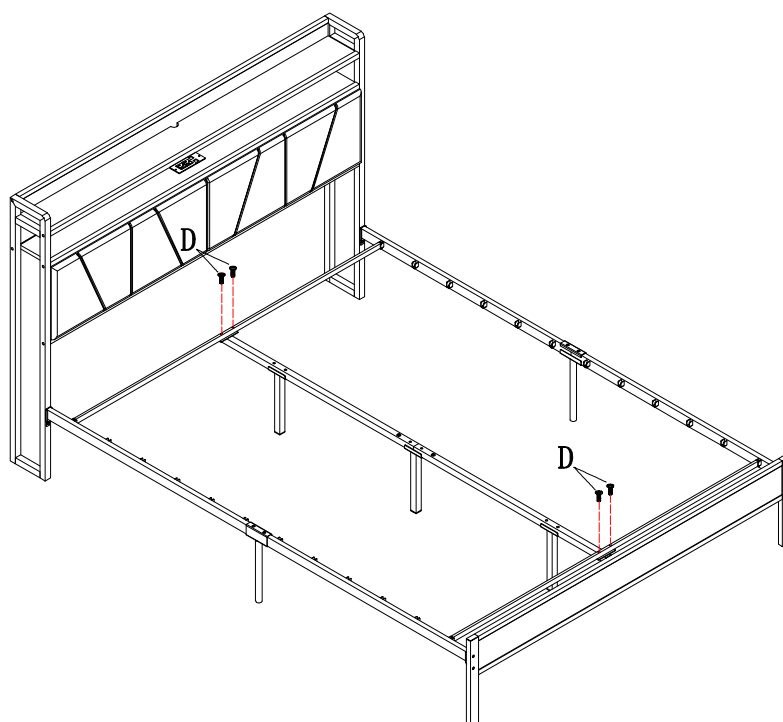







D		4PCS
I		

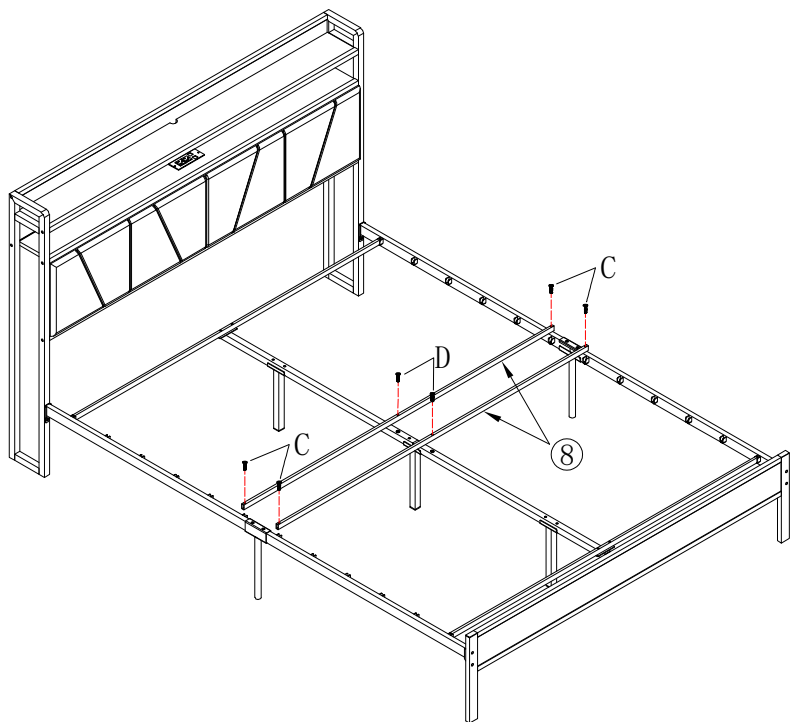

C		4PCS
D		2PCS
I		

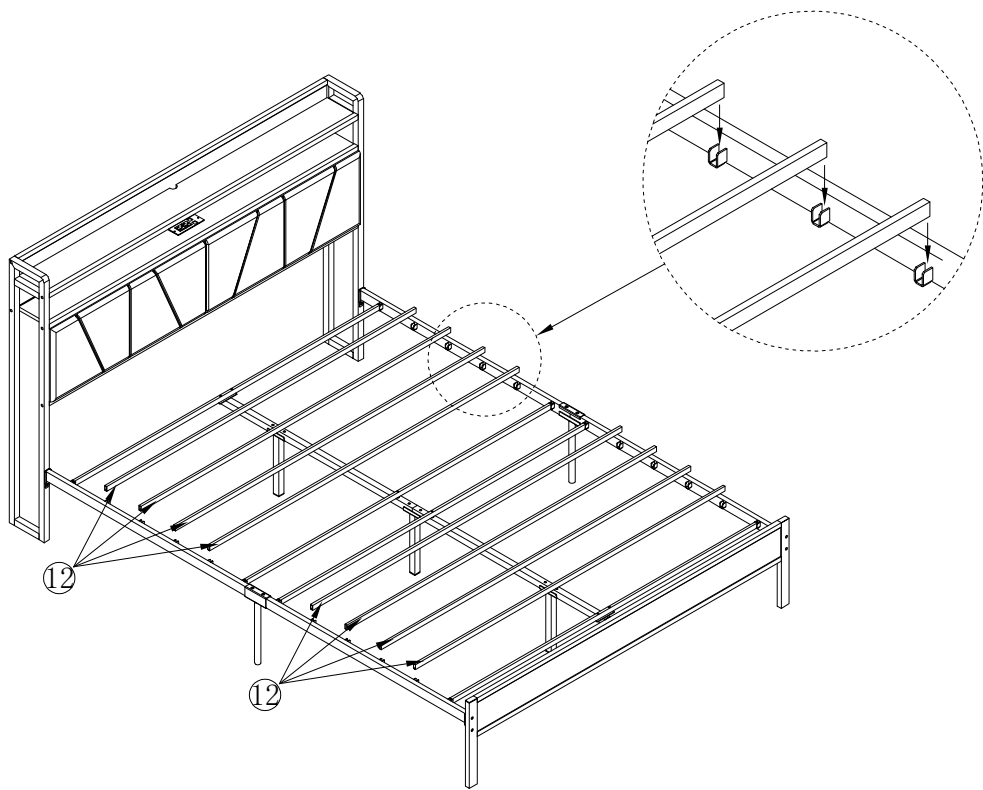




DIY LED

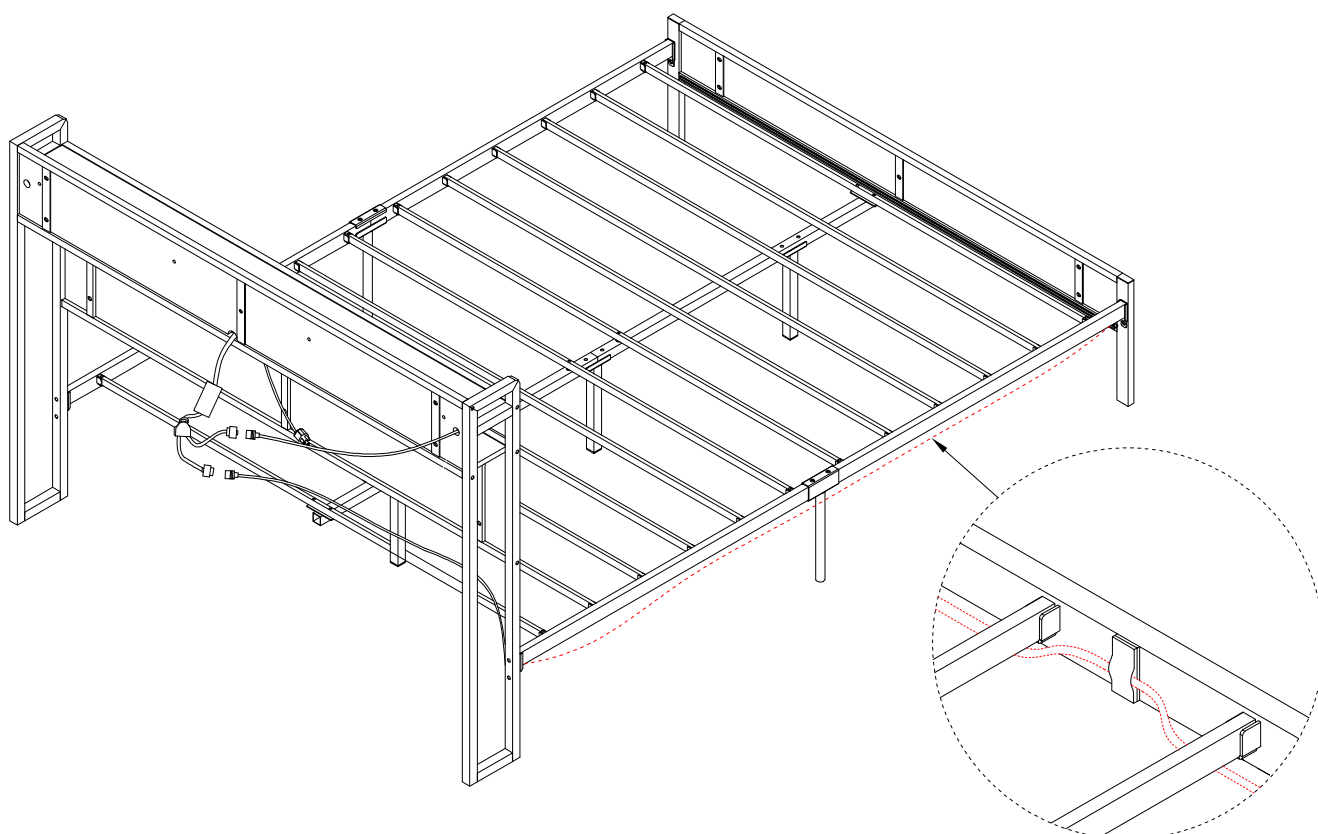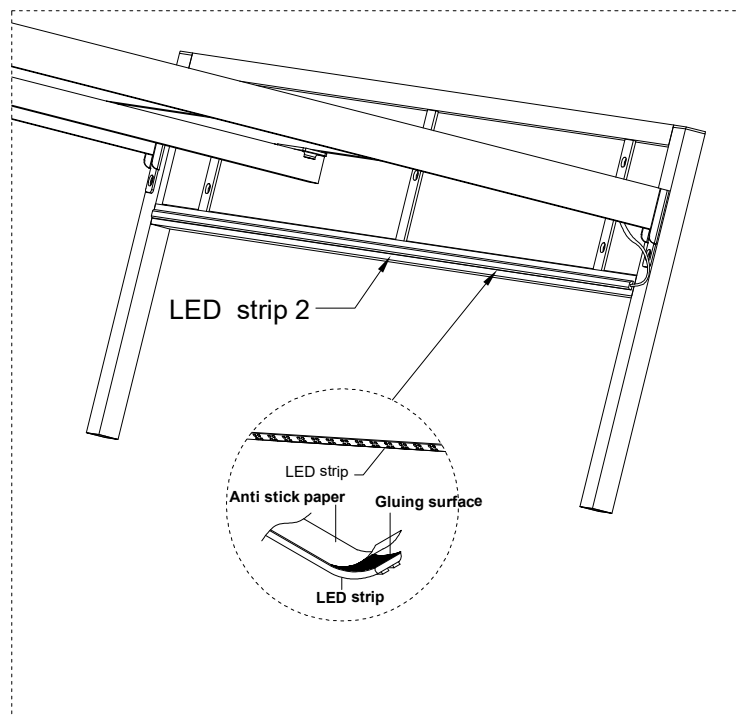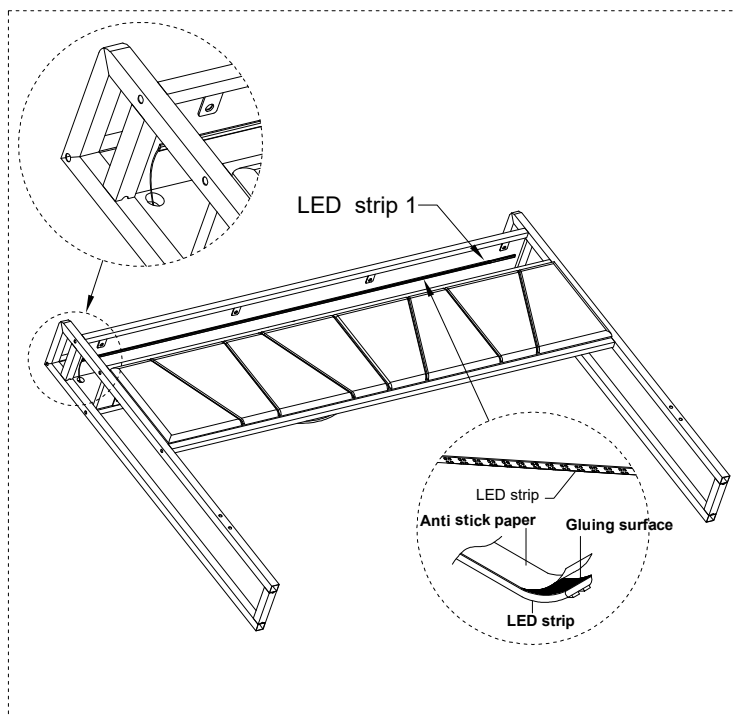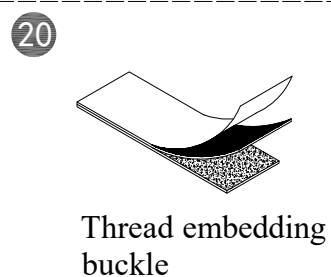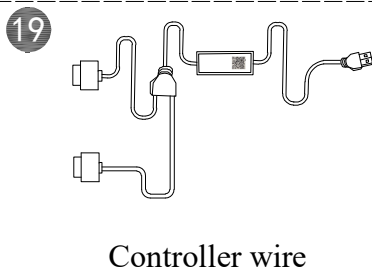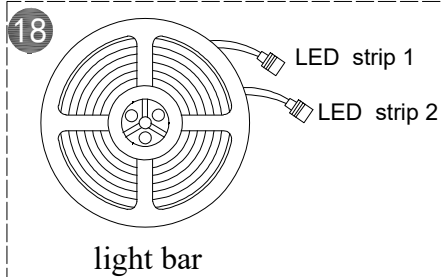

DIY LED

14

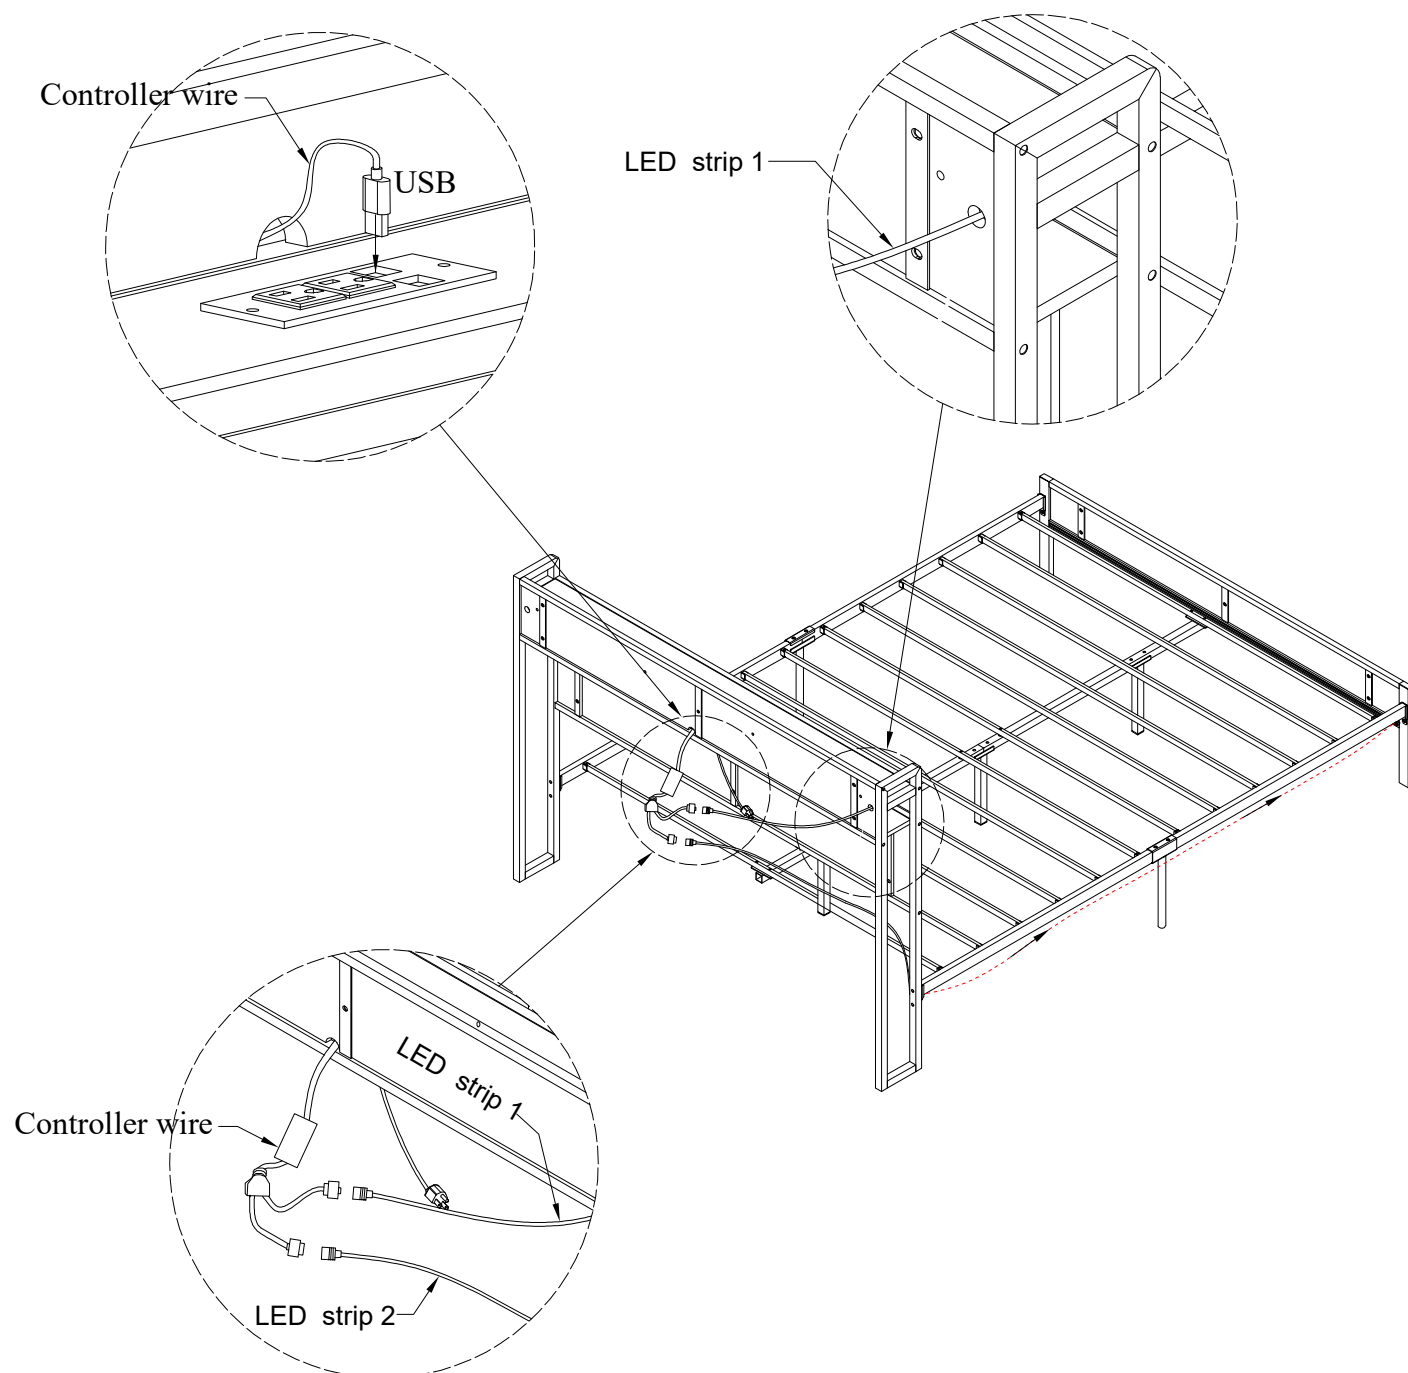

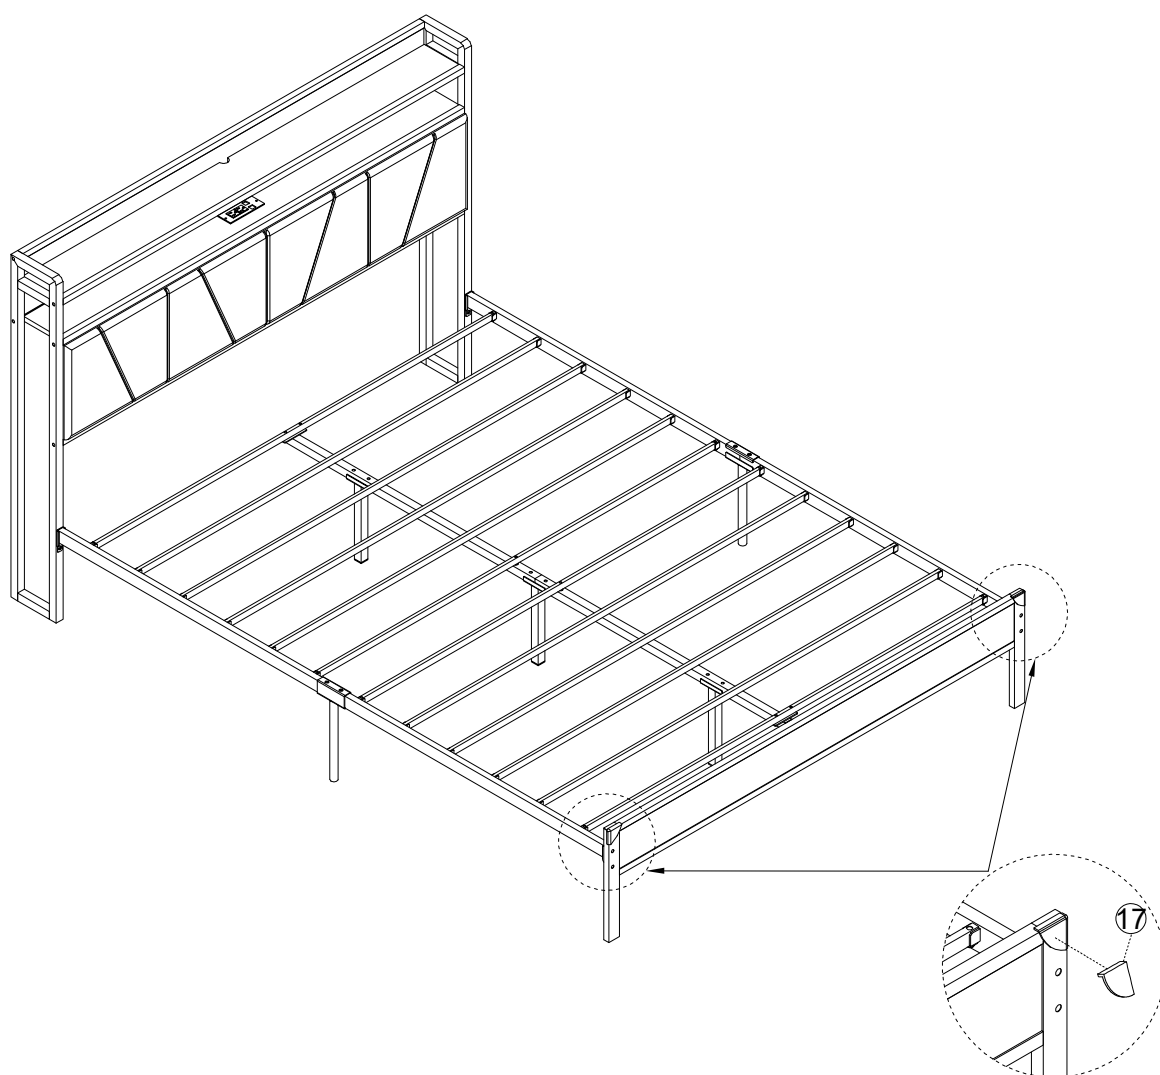

Turn over the rubber anti-collision block, tear off the paper, and stick 3M glue on the foot of the bed.