


Cabinet

Assembly Instruction - Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

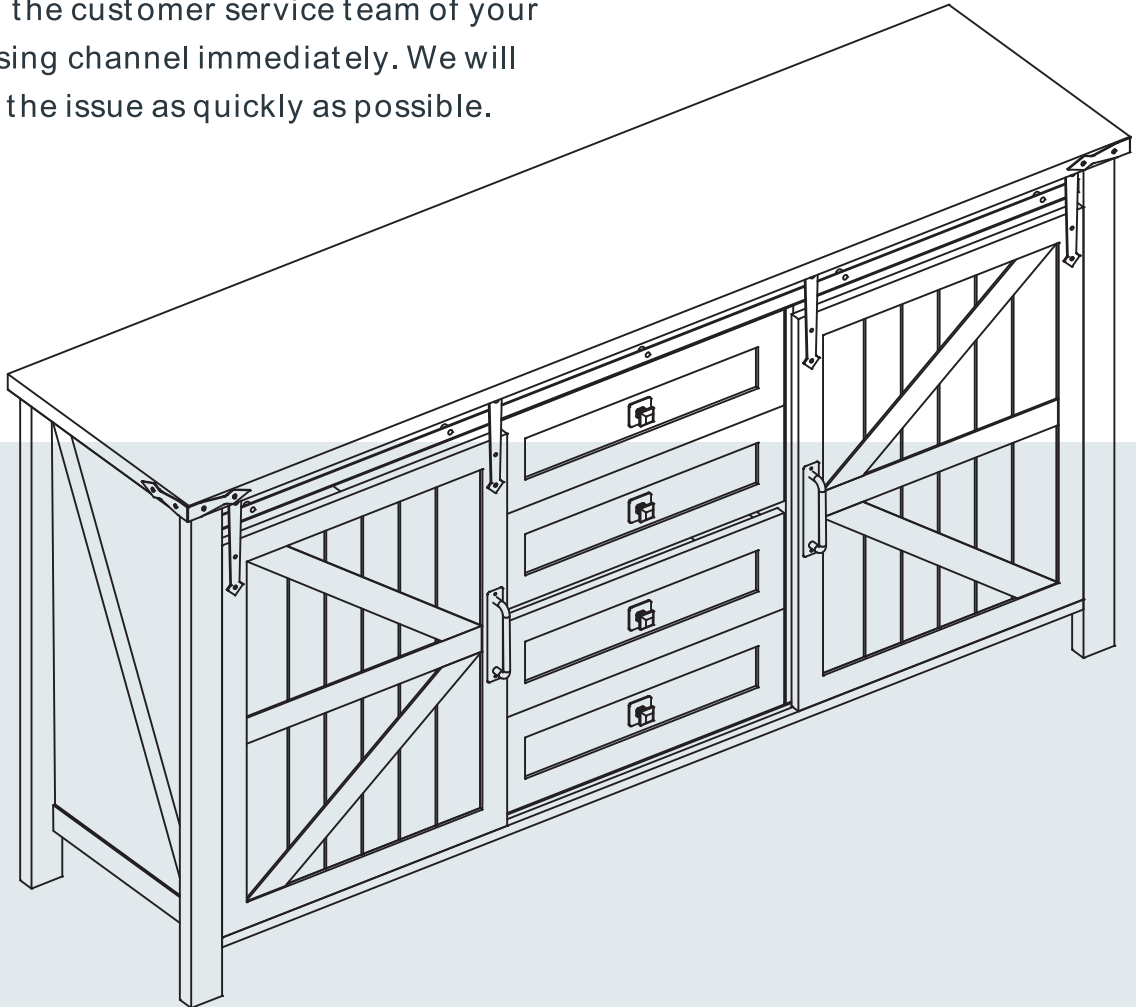

Dimensions

Width - 60.04 inch
Depth - 15.87 inch
Height - 31.1 inch

EN

CONTACT US

- **Email: service@grandtunnel.com**

In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

Important – Please read these instructions carefully before starting the installation.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6x30mm screws.”

Contact Us:

- By Email:

Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multi-angle shots are recommended).
2. Email the photos/videos along with other details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:


- Customer Service Email: service@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:



- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

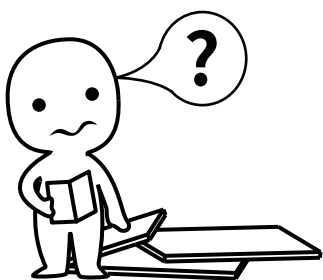


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

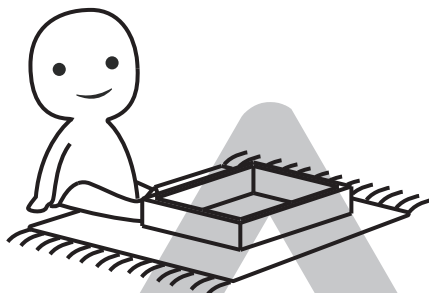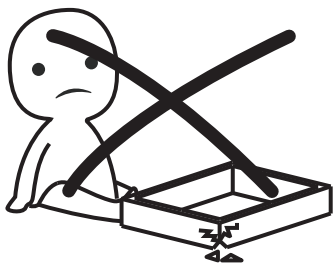



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

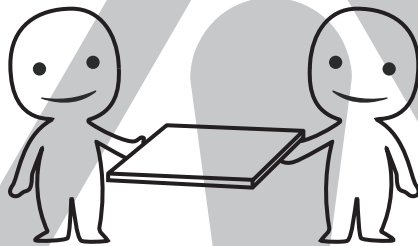

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

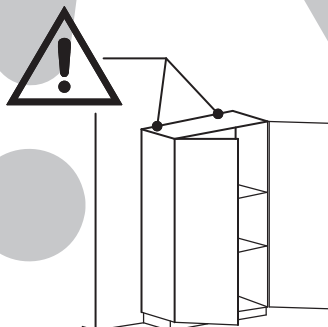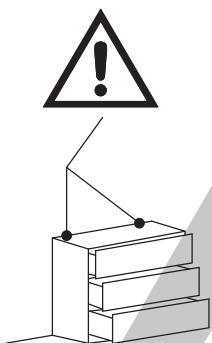

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING In order to help prevent overturning – please follow these instructions


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Parts List – Panels


Please check you have all the panels listed below

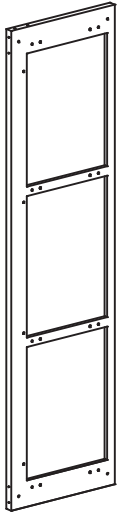


1 (1525*400*24mm X1)

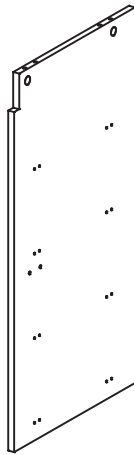


2 (675*360*12mm X1)

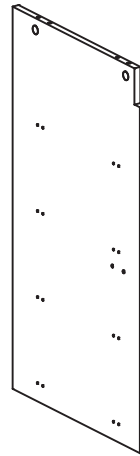


3 (675*360*12mm X1)

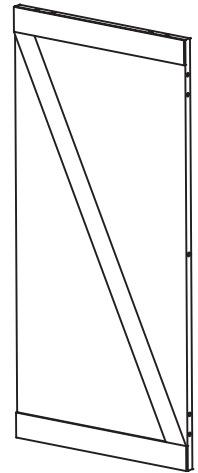


4 (690*335*15mm X1)

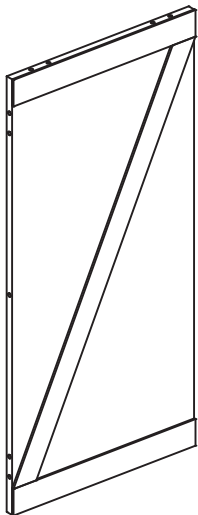


5 (690*335*15mm X1)

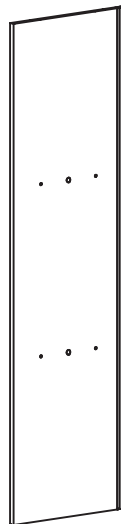

6 (1396*385*15mm X1)

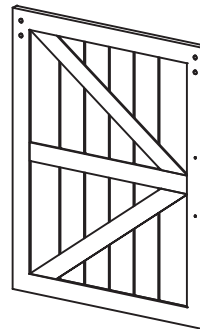

7 (462*612*15mm X1)

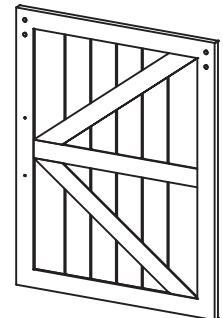

8 (462*612*15mm X1)



9 (468*56*15mm X1)



10 (765*50*25mm X1)




11 (765*50*25mm X1)



12 (765*50*25mm X1)



13 (765*50*25mm X1)

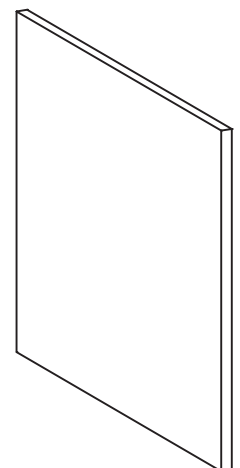


14 (450*359*12mm X2)

Parts List - Panels


Please check you have all the panels listed below




15 (1396*64*15mm) X1




16 (462*147*15mm) X4

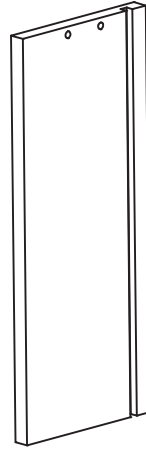


17 (300*118*12mm) X4

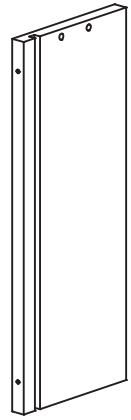


18 (300*118*12mm) X4

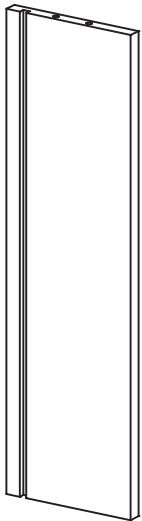


19 (419*118*12mm) X4

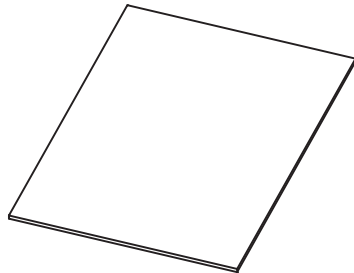

20 (428*298*3mm) X4

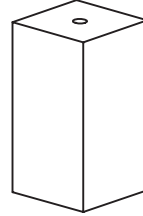

21 (73*36*36mm) X2








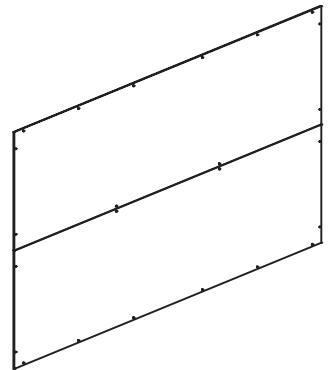


22 (1428*704*3mm) X1


Parts List – Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

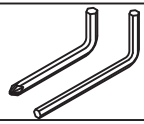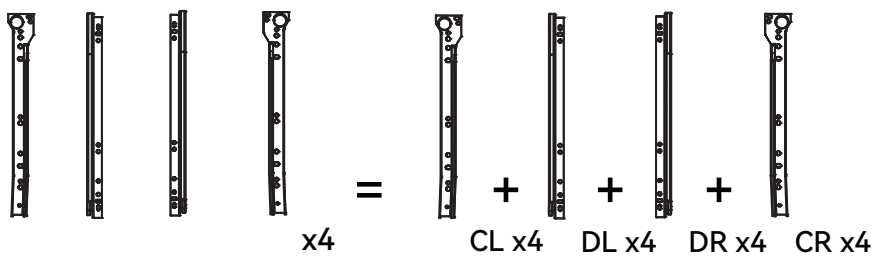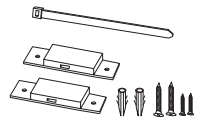A 6*28mm Cam Bolt x52+5 	B Cam Lock x52+5 	C 6*30mm Wooden Dowel x30+3 
D M6*12mm Screw x8 	E M6*23mm Screw x2 	G 6*15mm Screw x8 
H x2 	J x8 	K D5*40mm Screw x16+1 
L D3*12mm Screw x36+3 	M M4*10mm Screw x4 	P x2 
R x4 	S x4 	T x4 
U x4 	X #3 x1 	Y #4 x2 
V  x4 CL x4 DL x4 DR x4 CR x4		Z x2 
		N M3.5*12mm Screw x40+4 


Tools required



Phillips screwdriver
(medium & large)

Ruler – Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170




The screws length is measured from the head to the point (30mm screw shown).

Using Camlocks


Stop 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

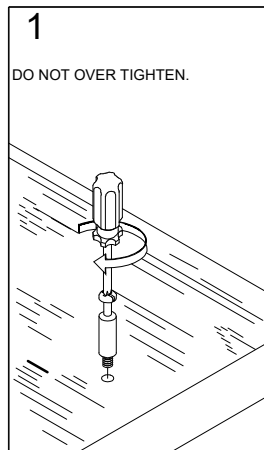

Stop 2


Push the male camlock into the entry hole.

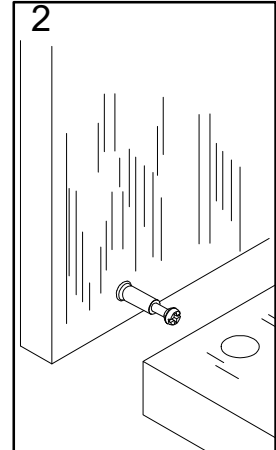

Stop 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

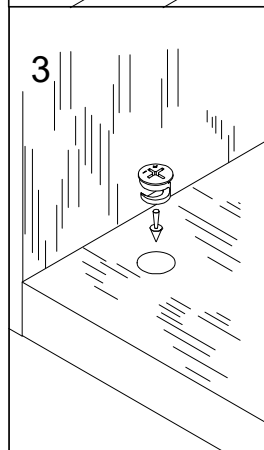


Stop 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

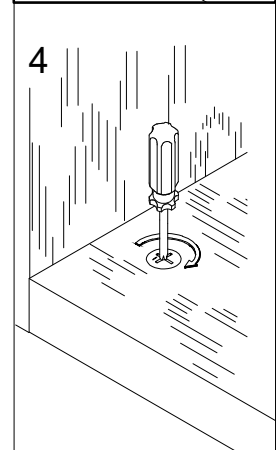

Assembly Instructions








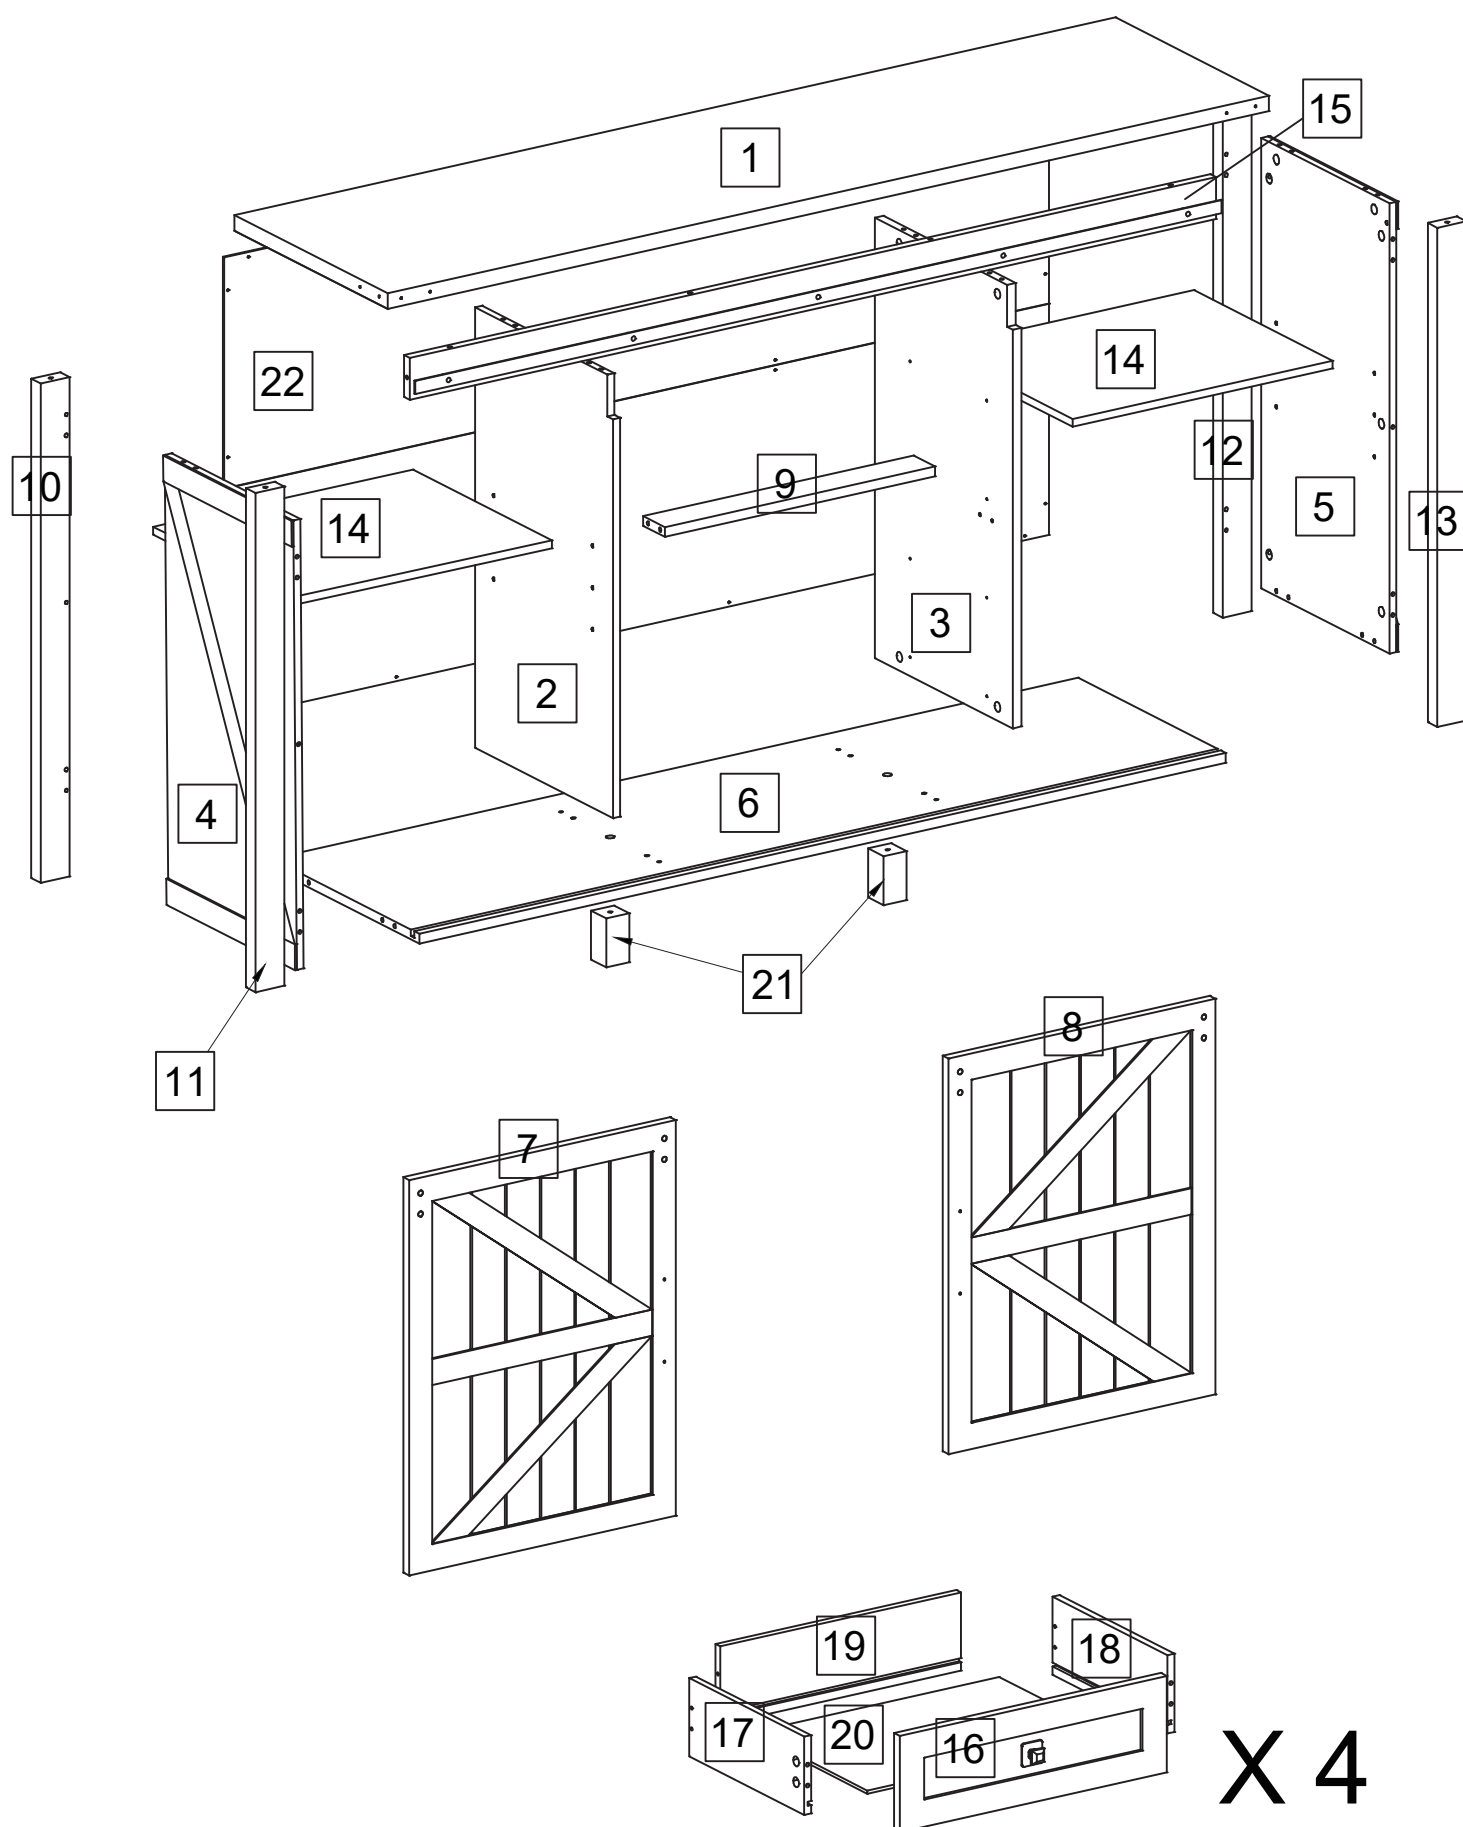


Assembly Instructions

Step 1

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

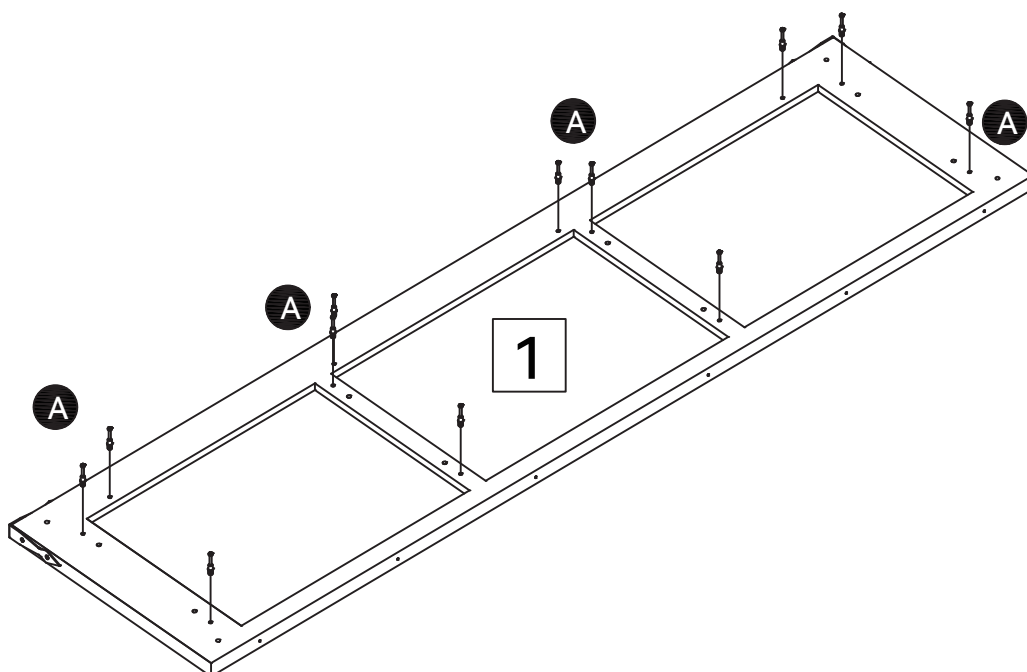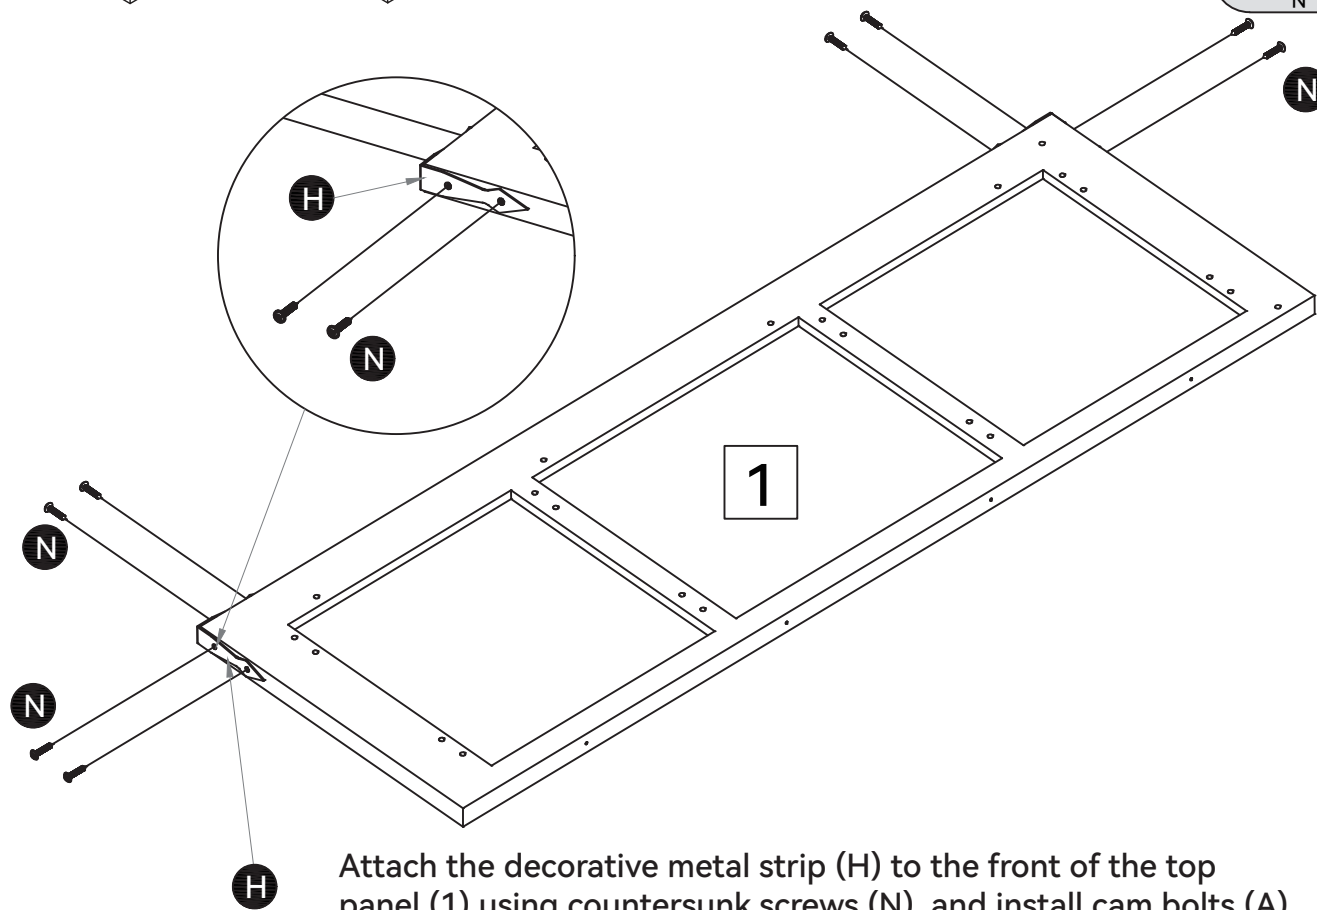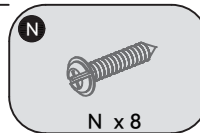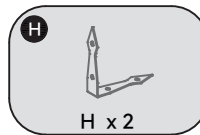
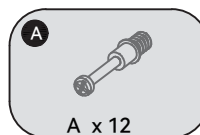
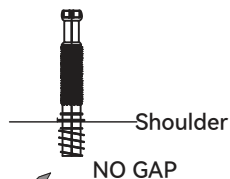
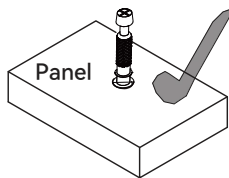
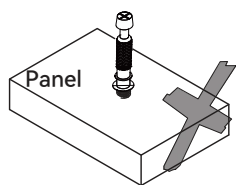


Assembly Instructions

Step 2



CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

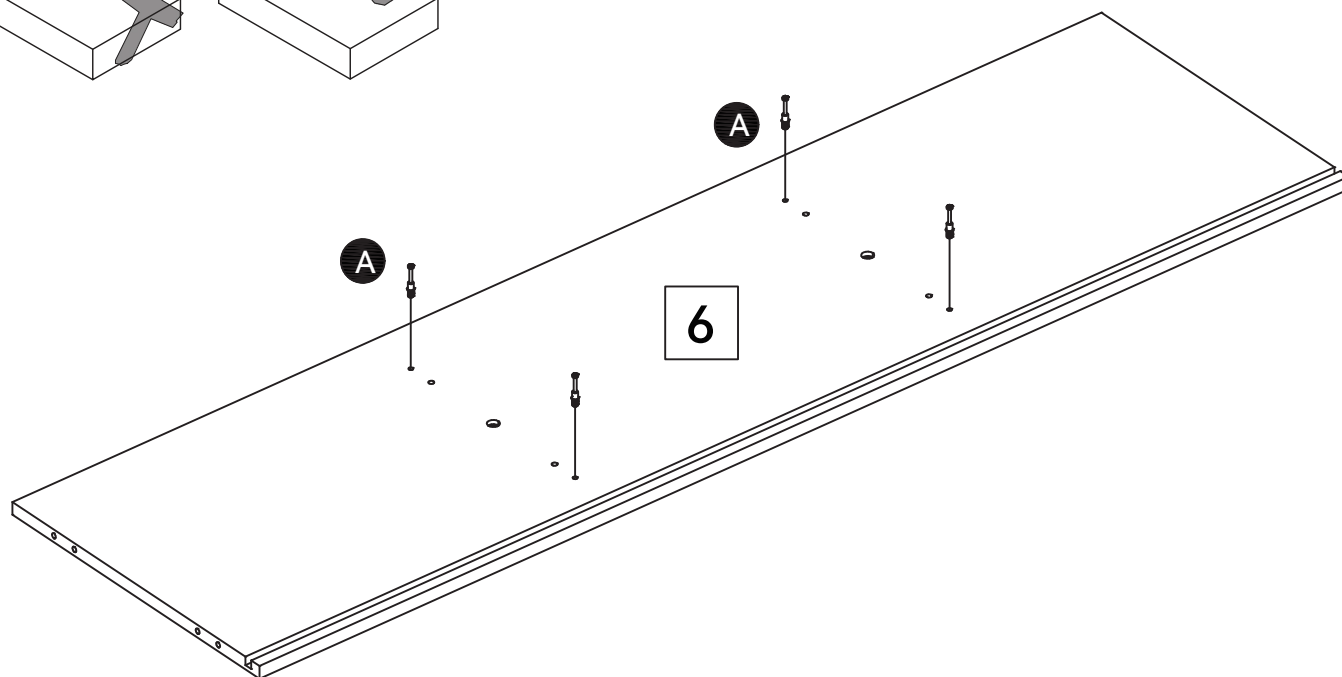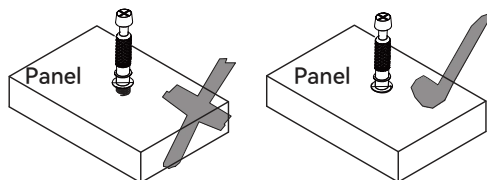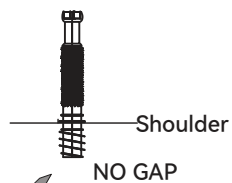

Install cam bolts (A) onto the bottom panel (6). Turn it on its side and secure the legs (21) to the bottom panel using screws (E).

Turn the panel over

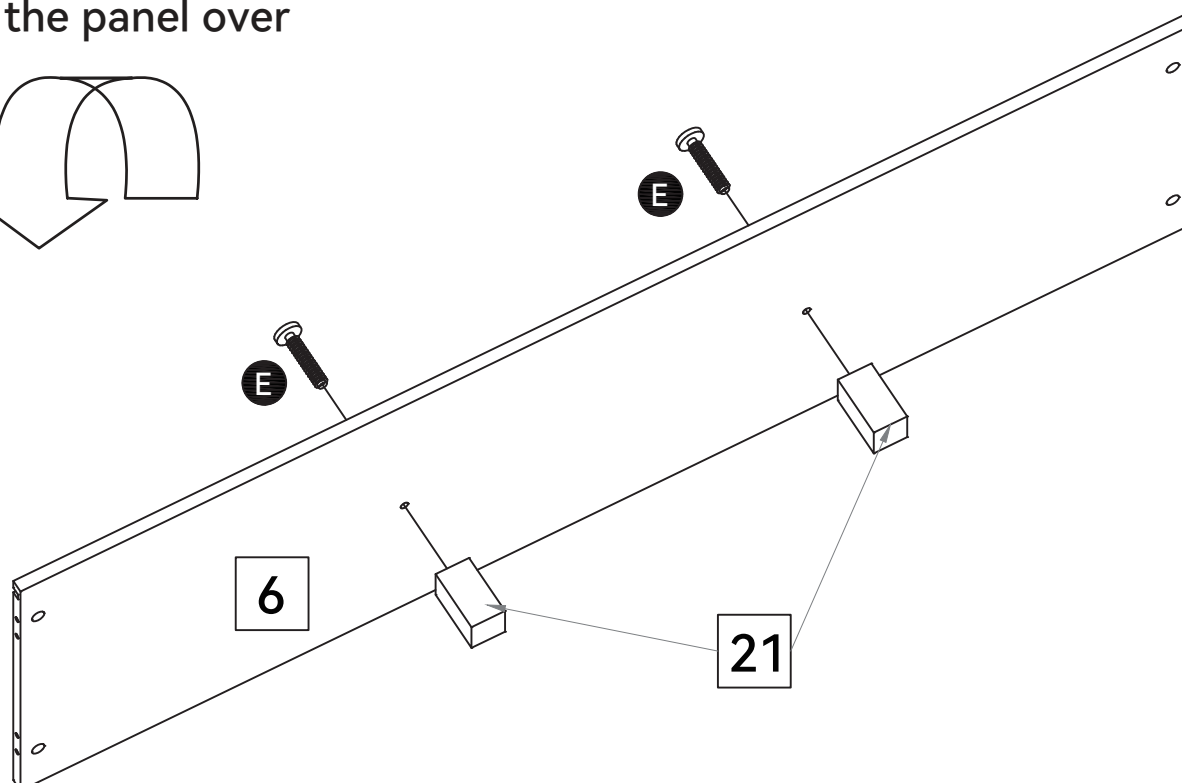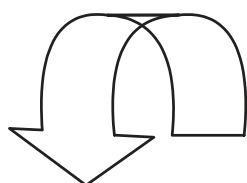





Assembly Instructions

Step 3

CAM-LOCK


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

The installation methods for part 13 and part 10 are the same, while the installation methods for part 11 and part 12 are the same.

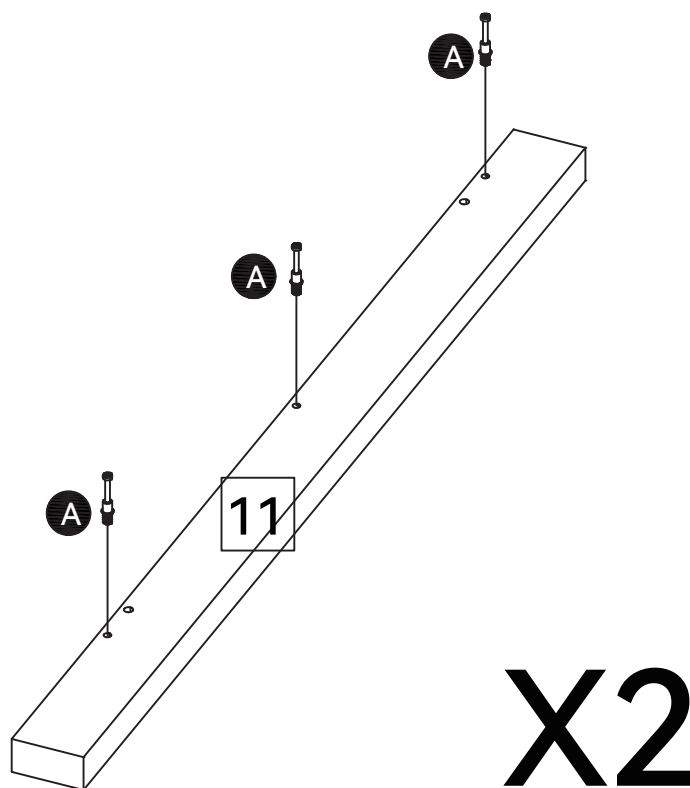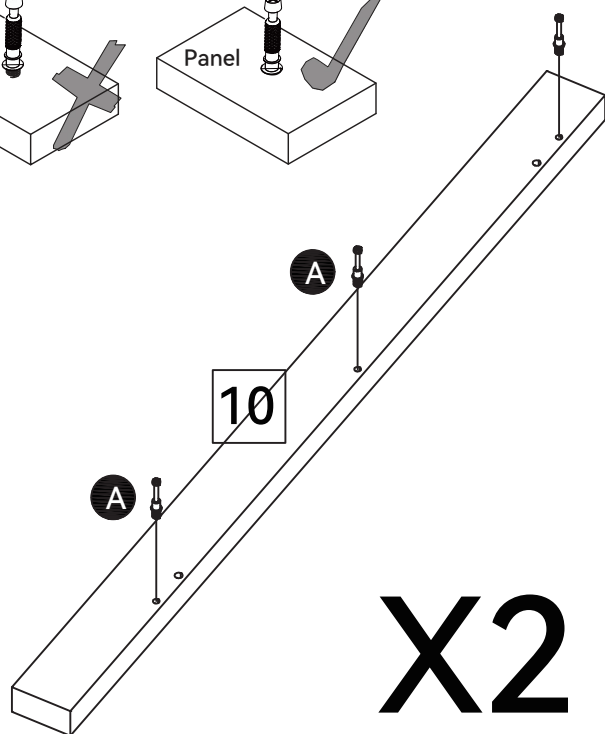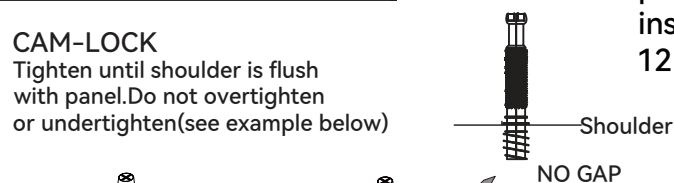

The installation methods for part 4 and part 5 are the same.

Install cam bolts (A) on the left side panel (4), front post (11) and rear post (10). Using the same method, install cam bolts (A) on the right side panel (5), front post (13) and rear post (12).





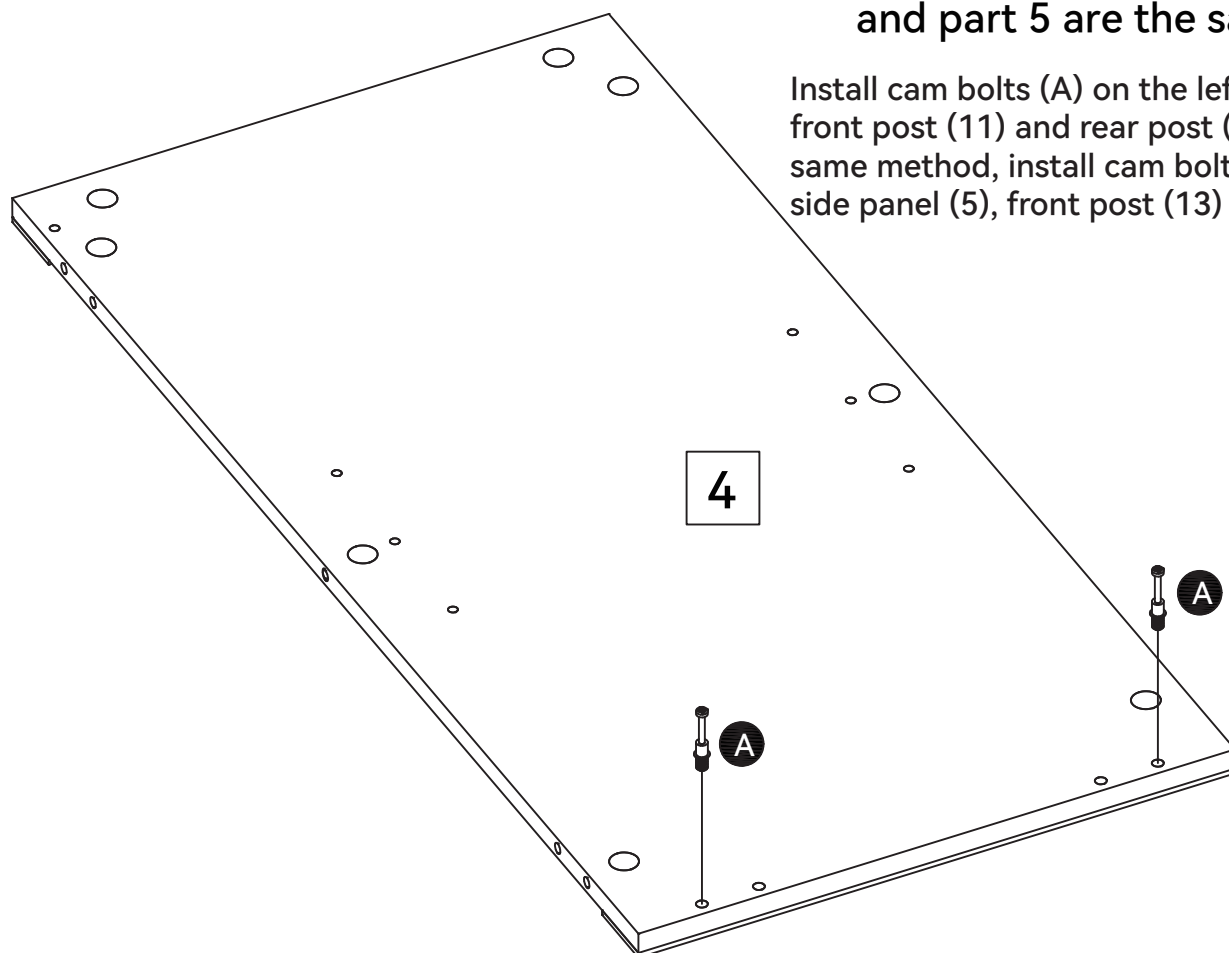


Assembly Instructions


Step 4

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

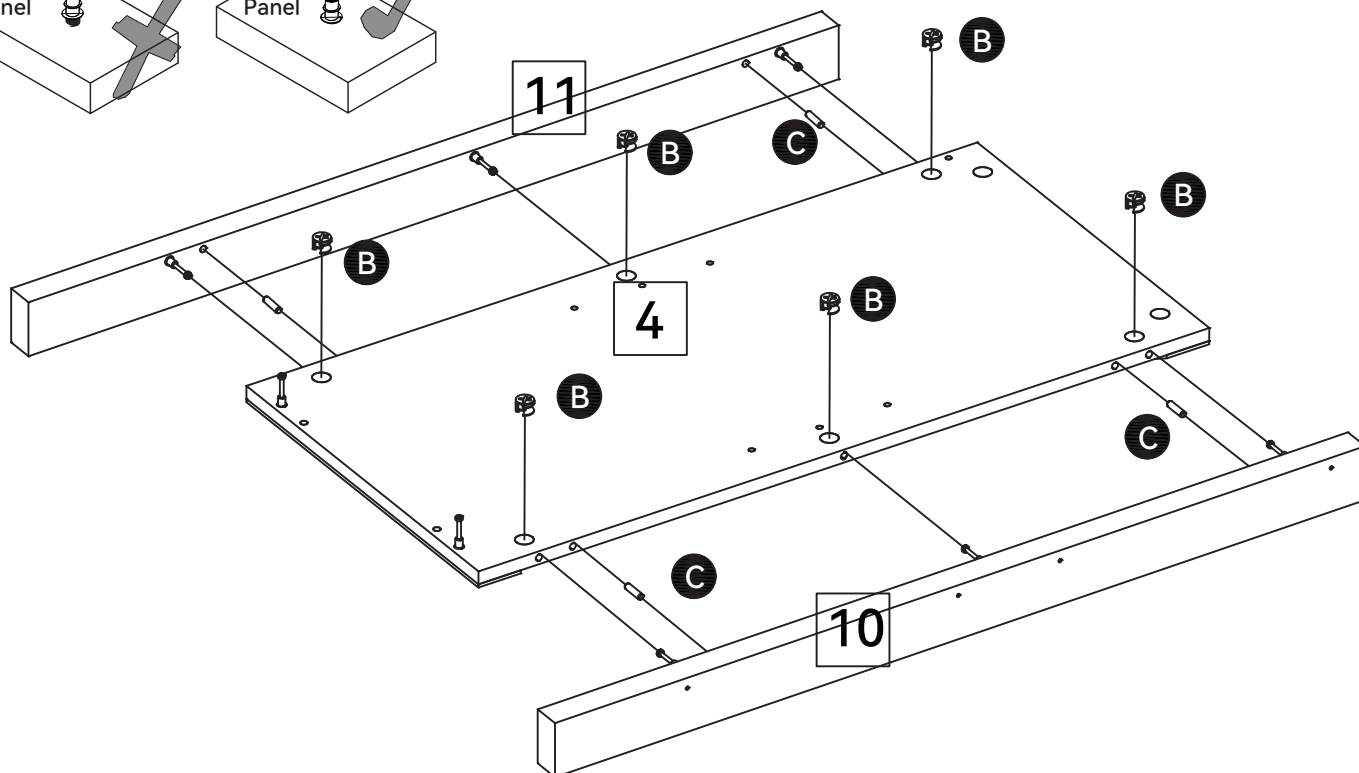
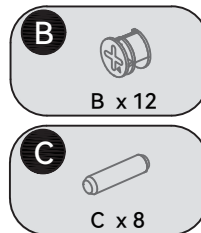
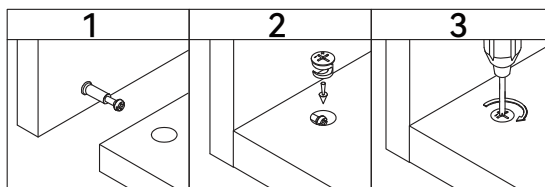
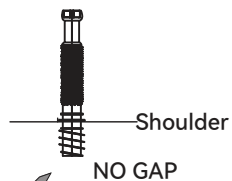
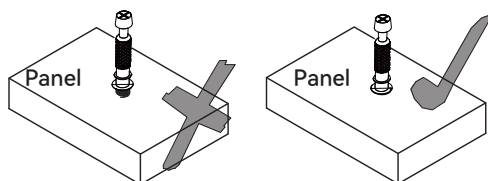


Connect and secure the left side panel (4) with front/rear posts (11, 10), and the right side panel (5) with front/rear posts (13, 12) using cam locks (B) and wooden dowels (C).

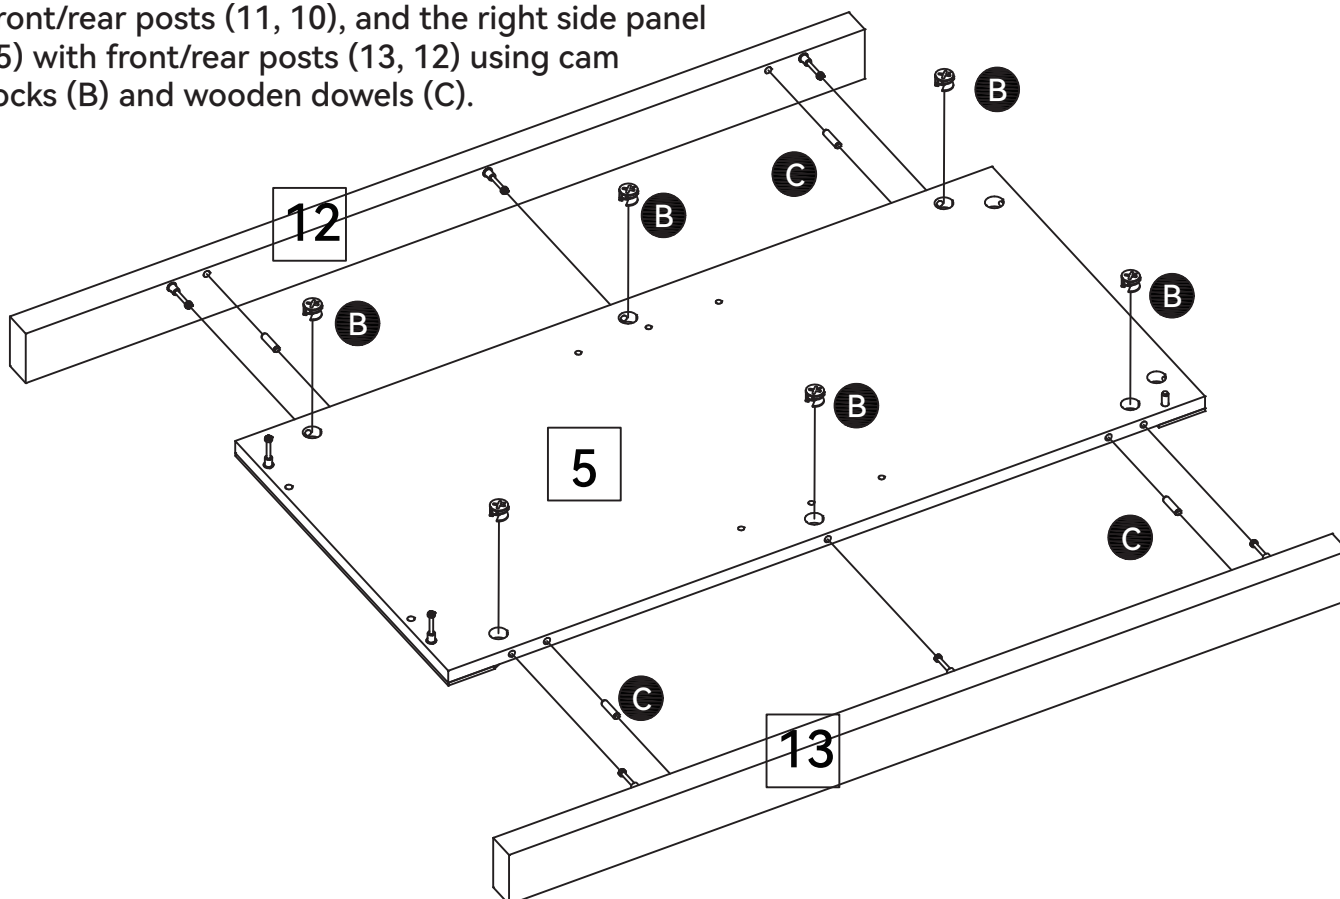


Assembly Instructions

Step 5

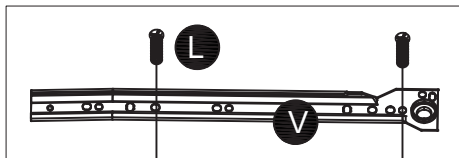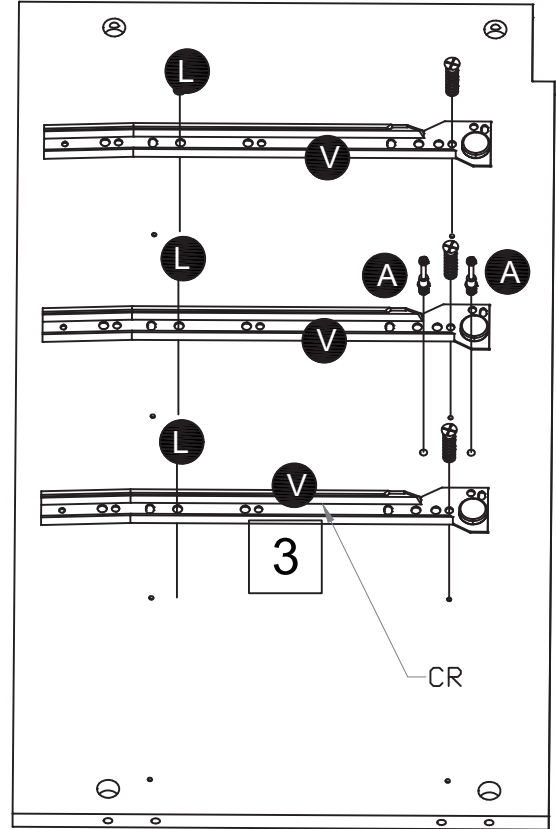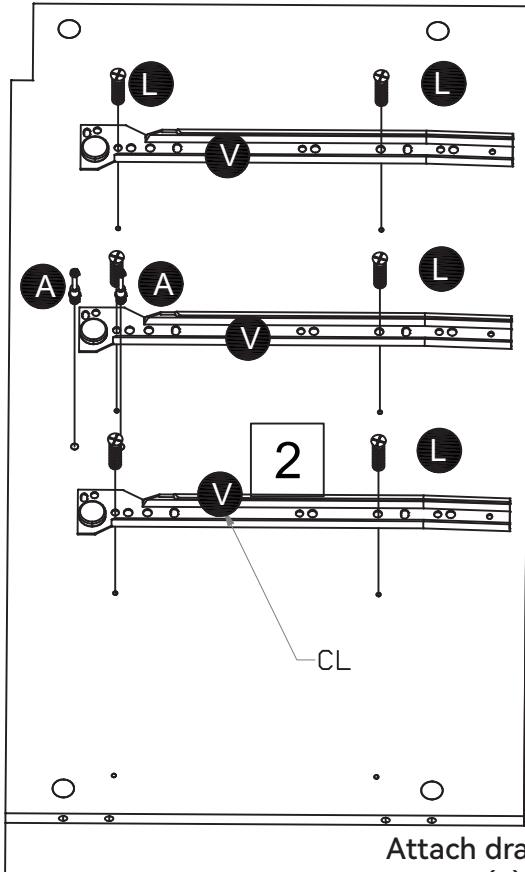
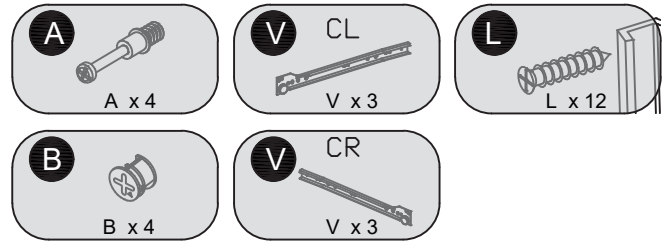
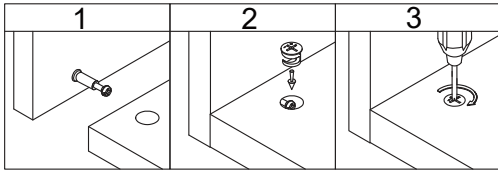


Attach drawer slide CL (V) to the left middle panel (2) using self-tapping screws (L), and install cam bolts (A). Attach drawer slide CR (V) to the right middle panel (3) using self-tapping screws (L), and install cam bolts (A). Then connect and secure the left middle panel (2), right middle panel (3) and middle rail (9) together using cam locks (B).

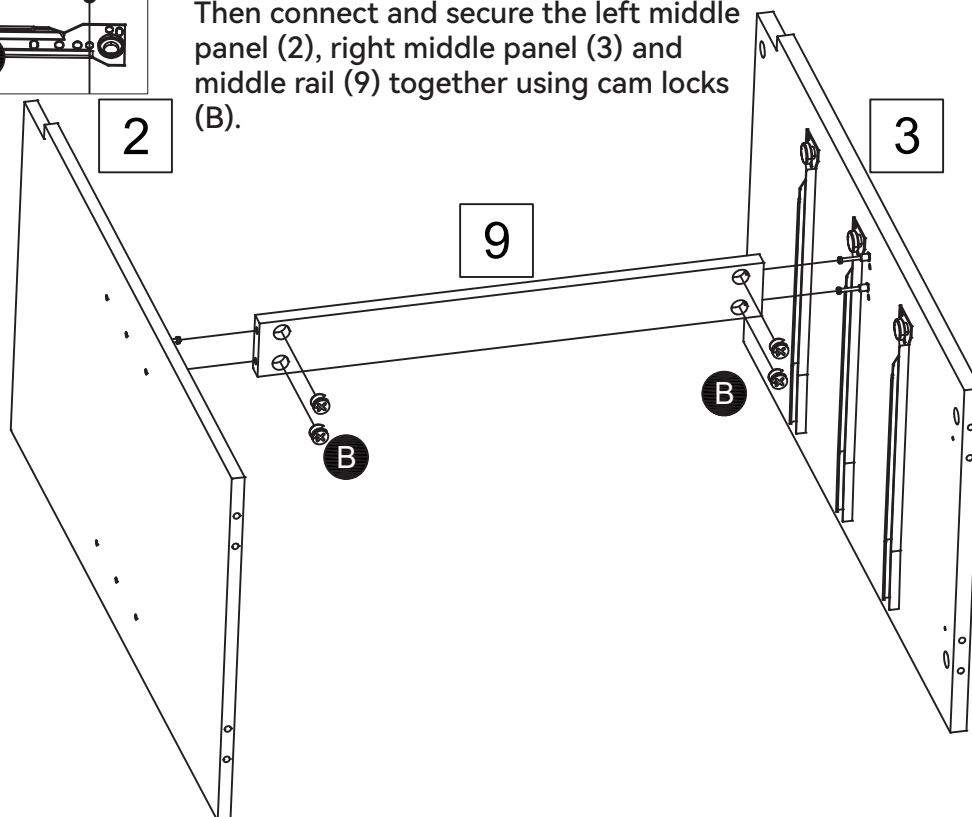





Assembly Instructions

Step 6

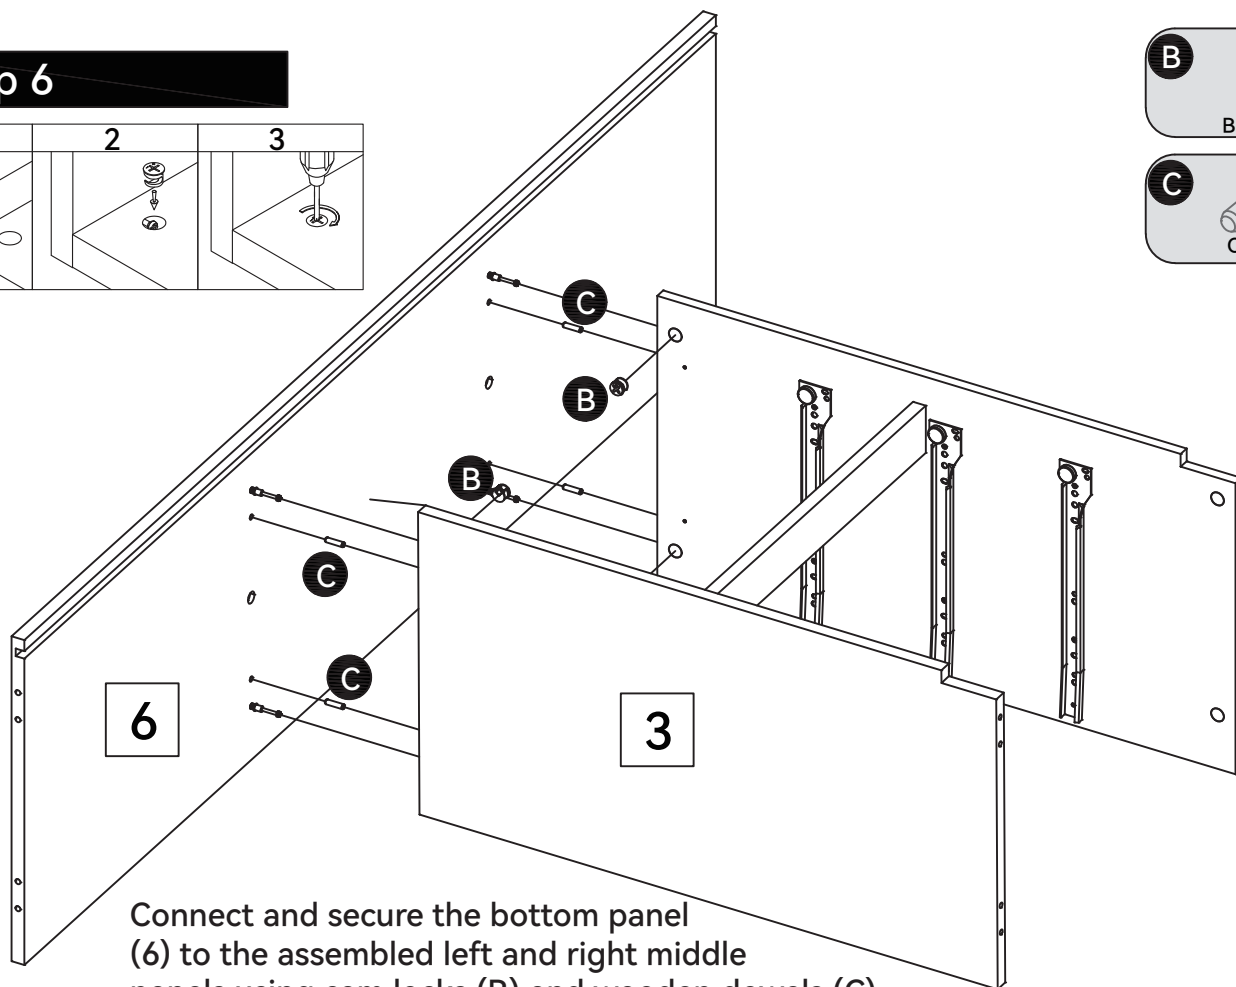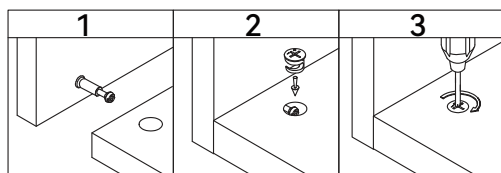

Connect and secure the bottom panel (6) to the assembled left and right middle panels using cam locks (B) and wooden dowels (C).



Step 7

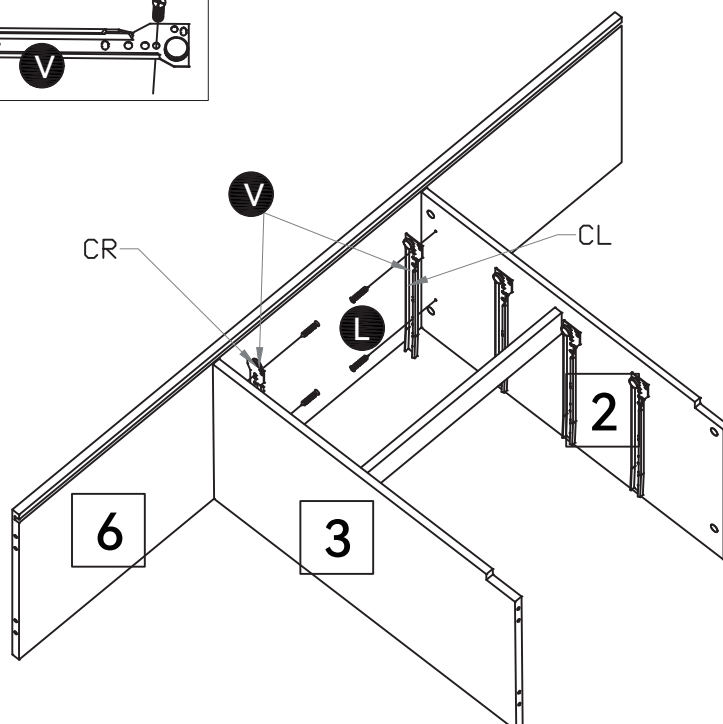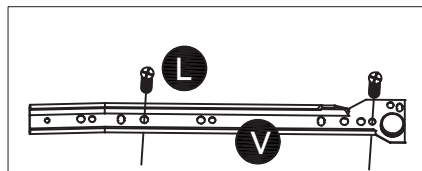


Attach drawer slides CL/CR (V) to the assembled left middle panel (2) and right middle panel (3) using self-tapping screws (L).

Assembly Instructions

Step 8


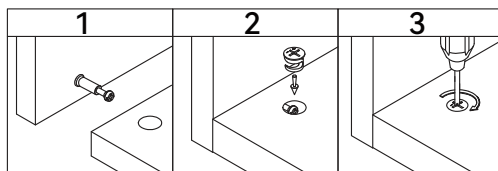


Connect and secure the assembled left side panel (4), right side panel (5), bottom panel (6), middle panels (2, 3) and the front upper rail (15) with pre-installed metal strip, using cam locks (B) and wooden dowels (C).

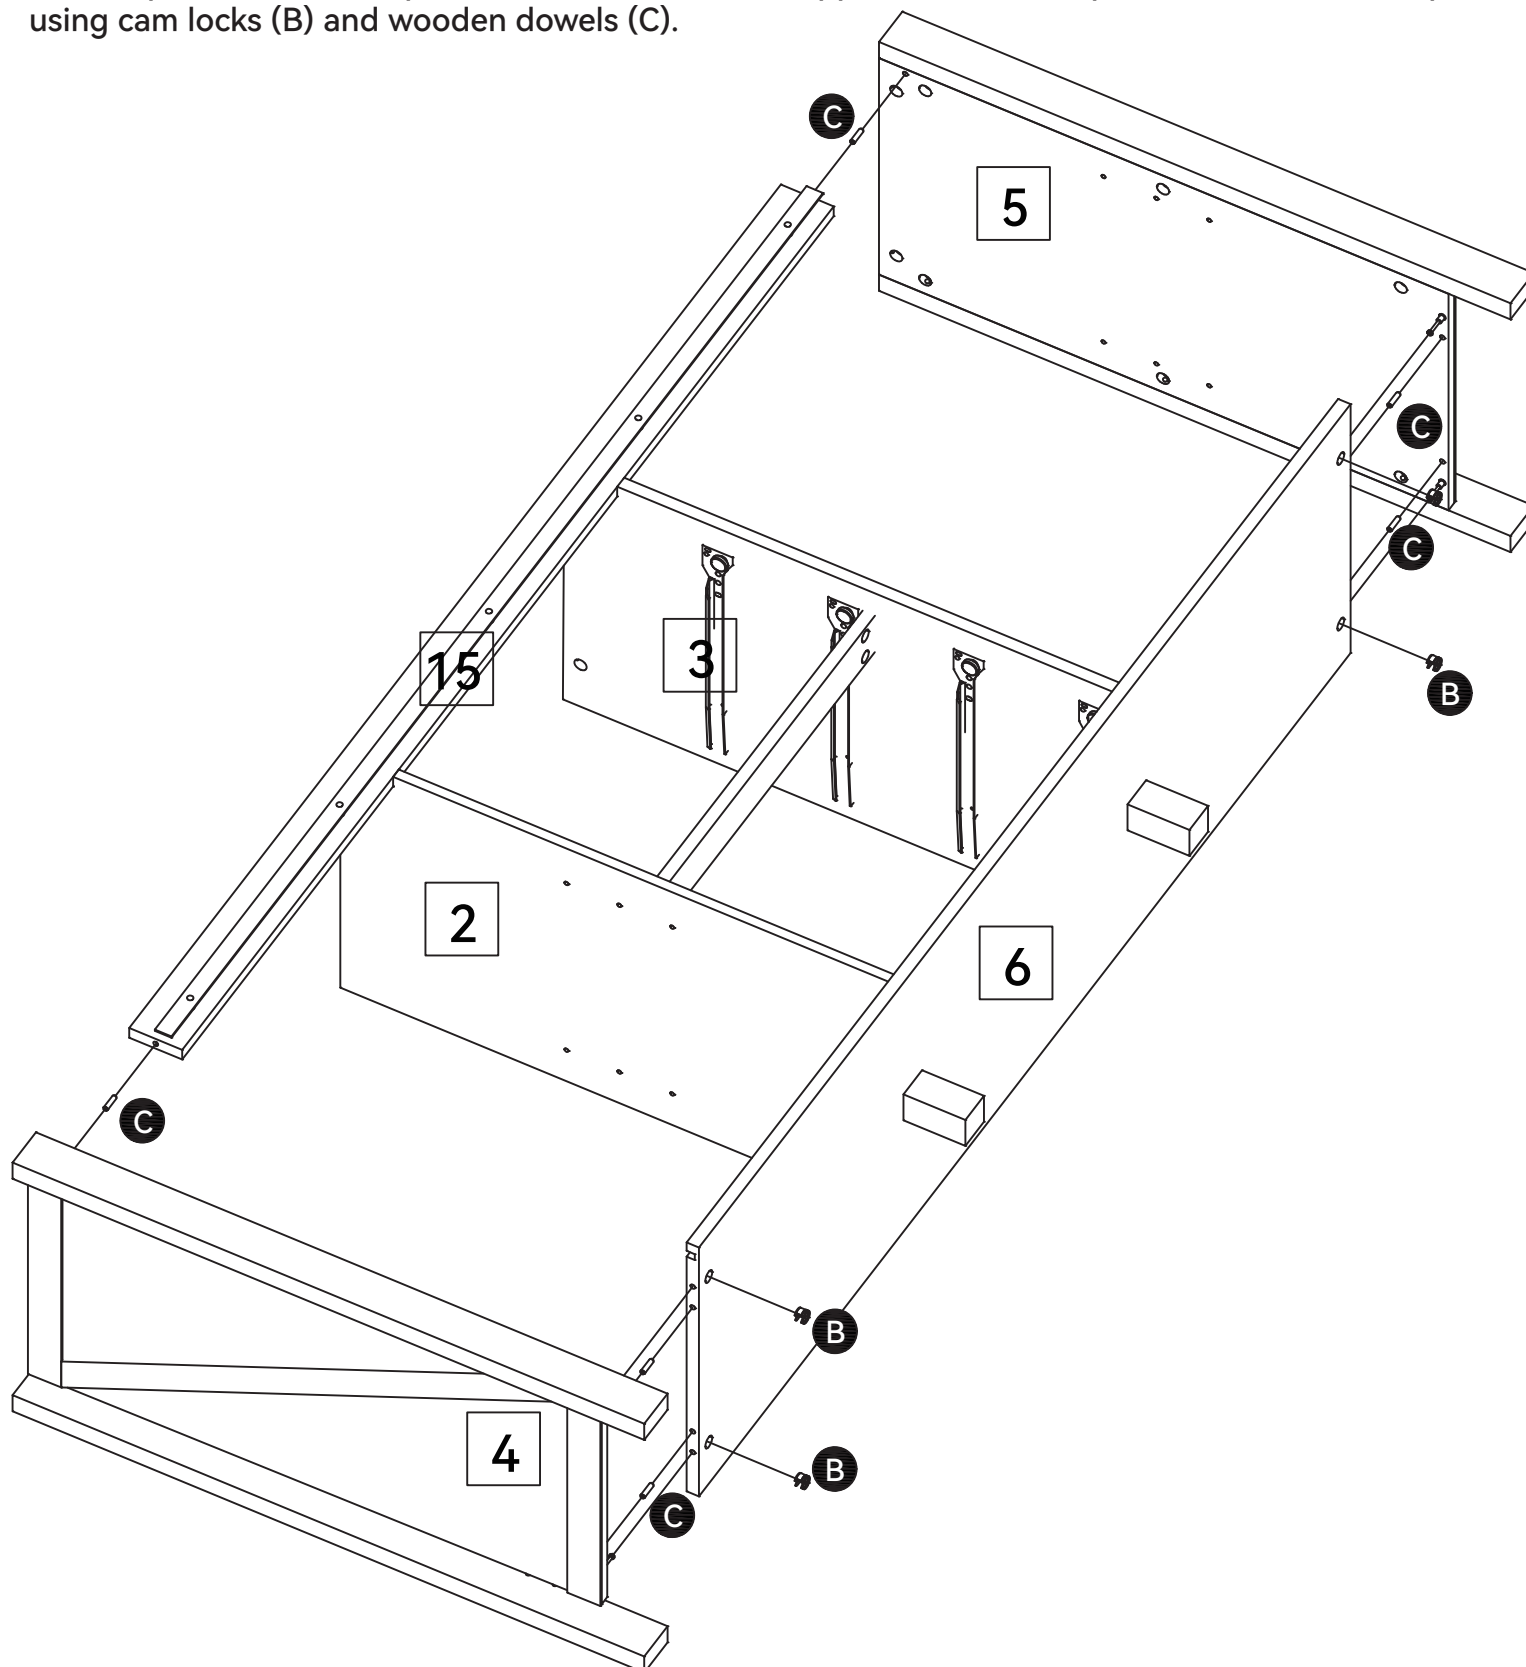


Assembly Instructions

Step 9

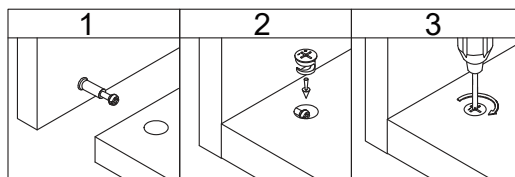


Install the top panel (1) with pre-assembled fittings onto the assembled cabinet using cam locks (B) and wooden dowels (C).

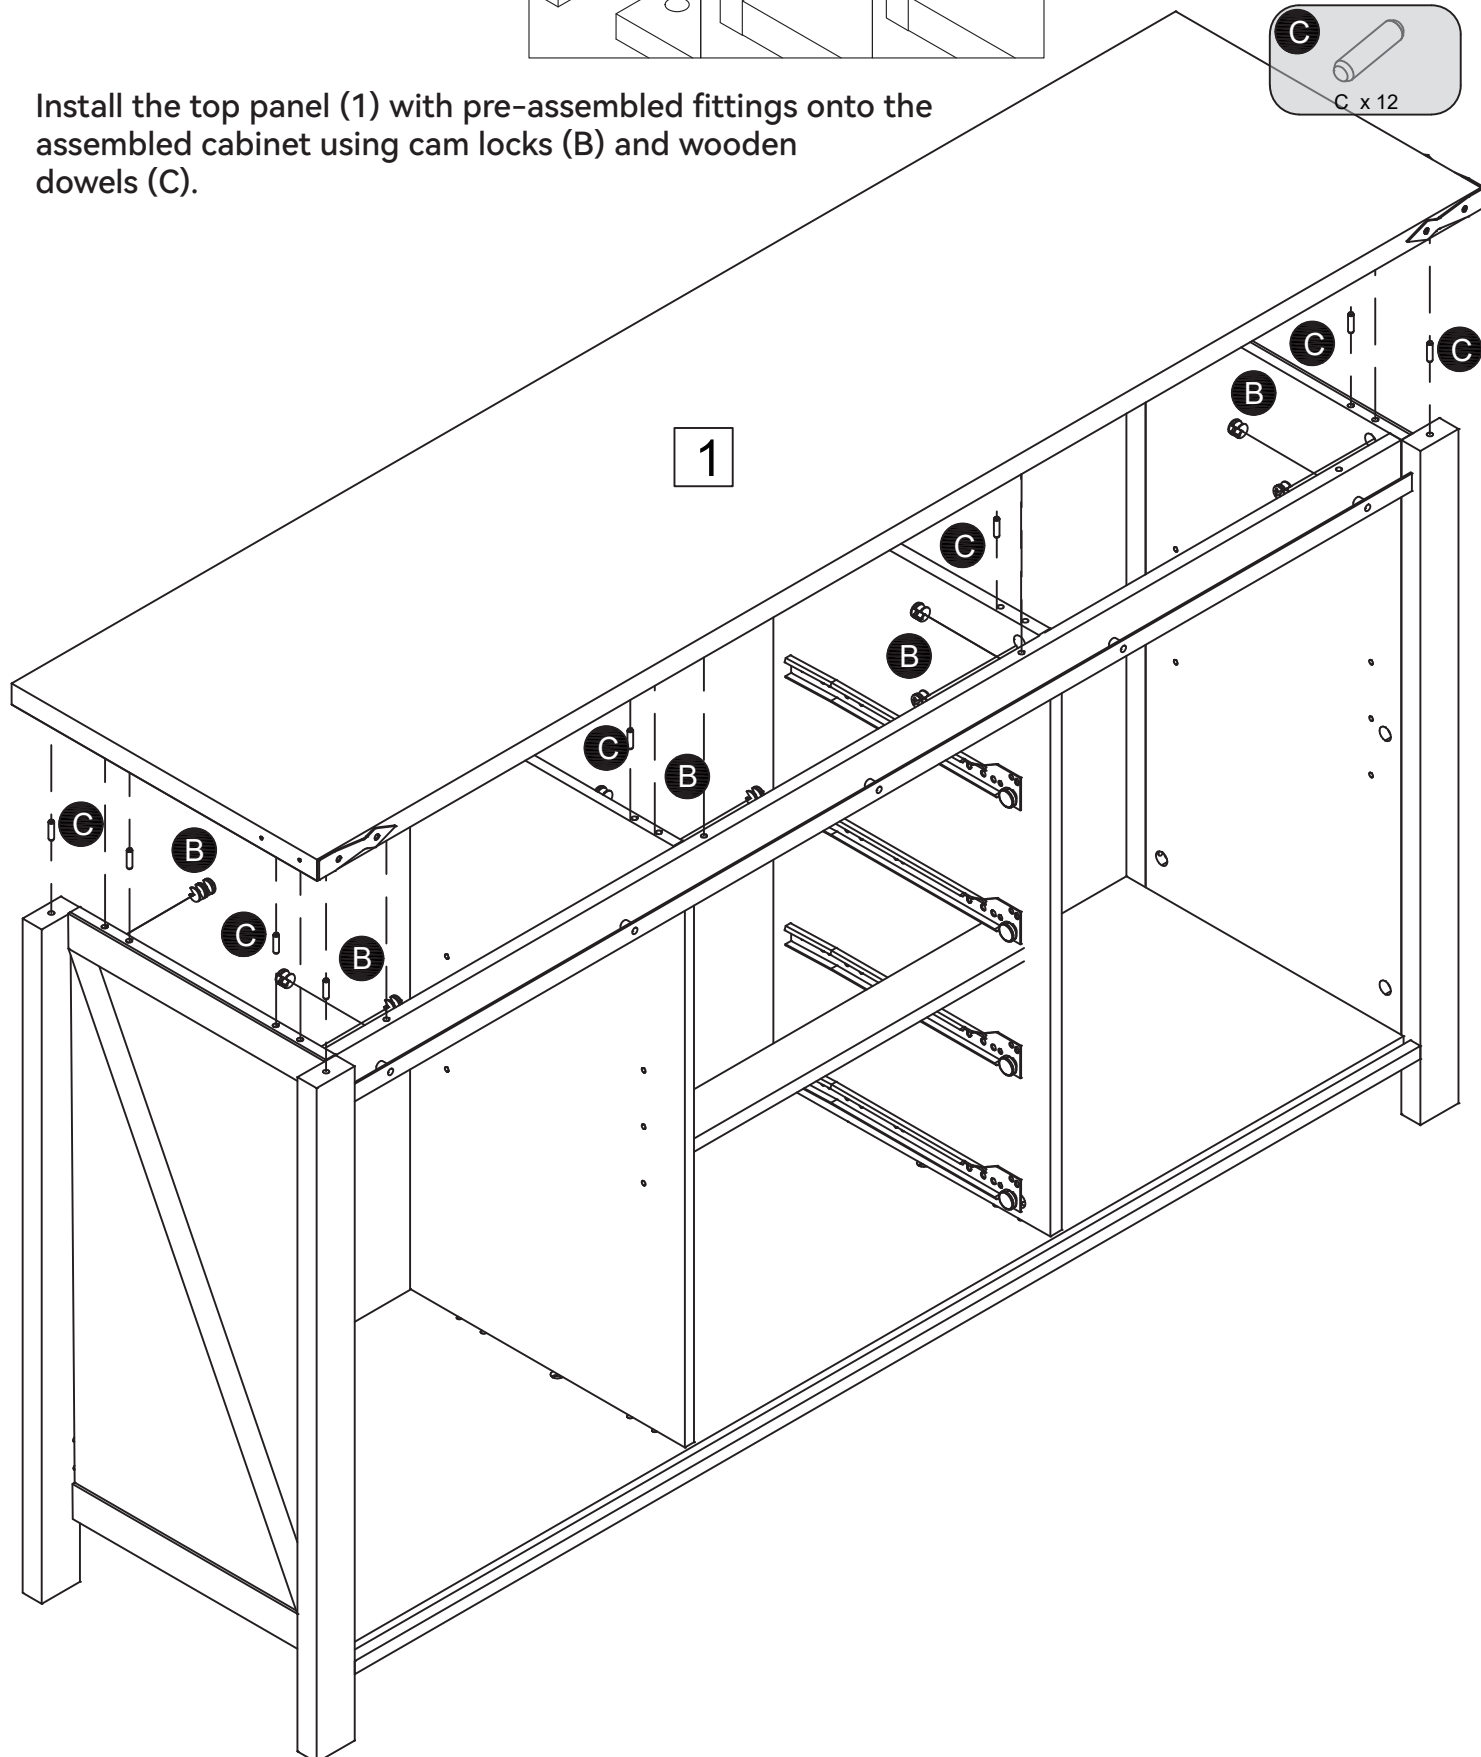


Assembly Instructions

Step 10

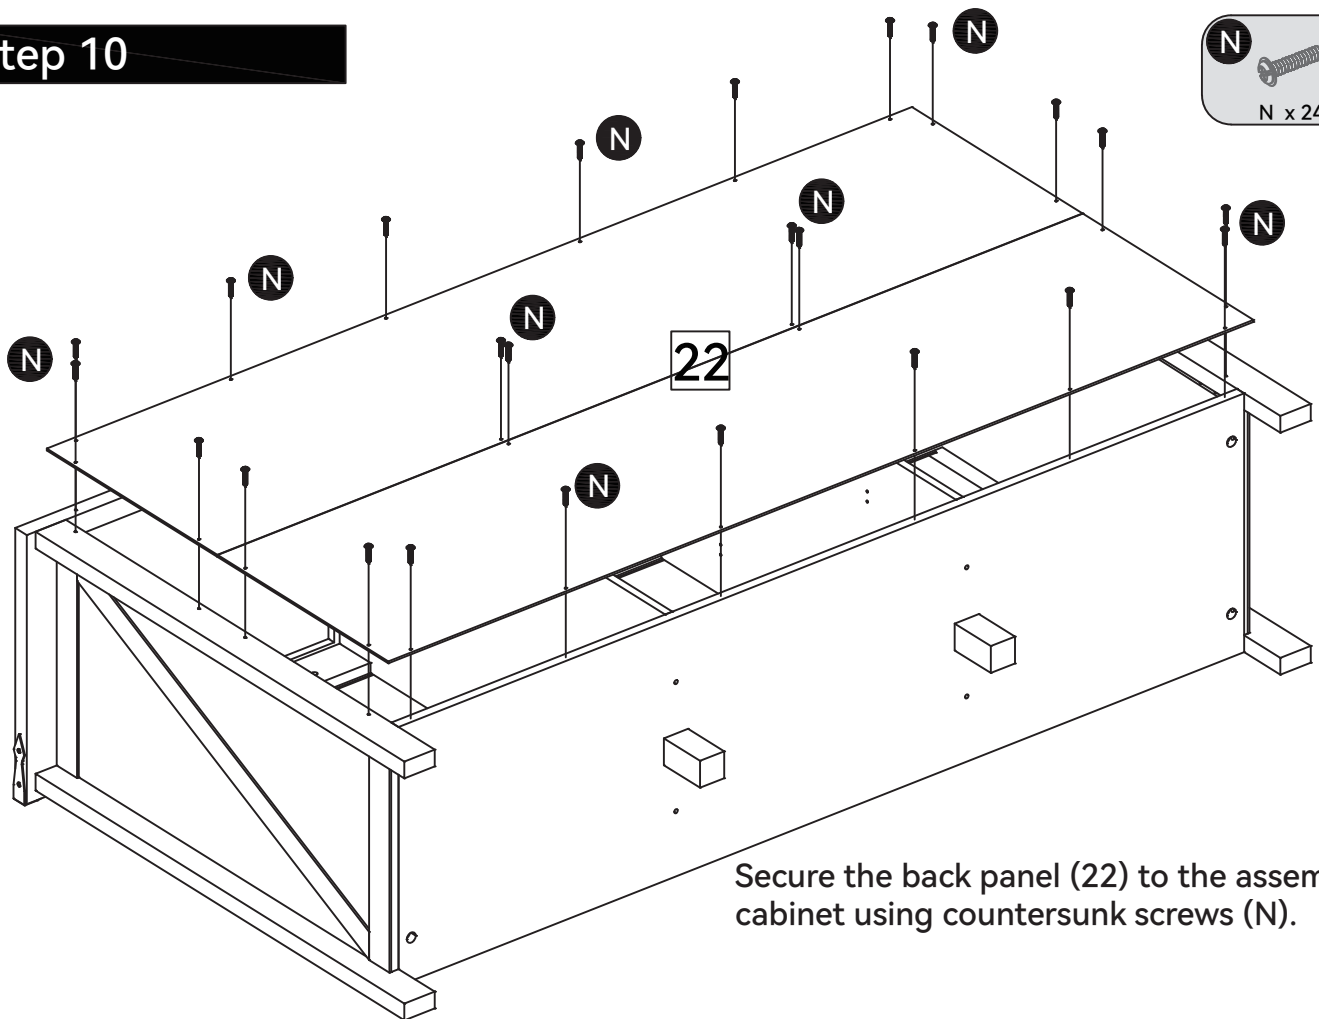


Secure the back panel (22) to the assembled cabinet using countersunk screws (N).

Step 11

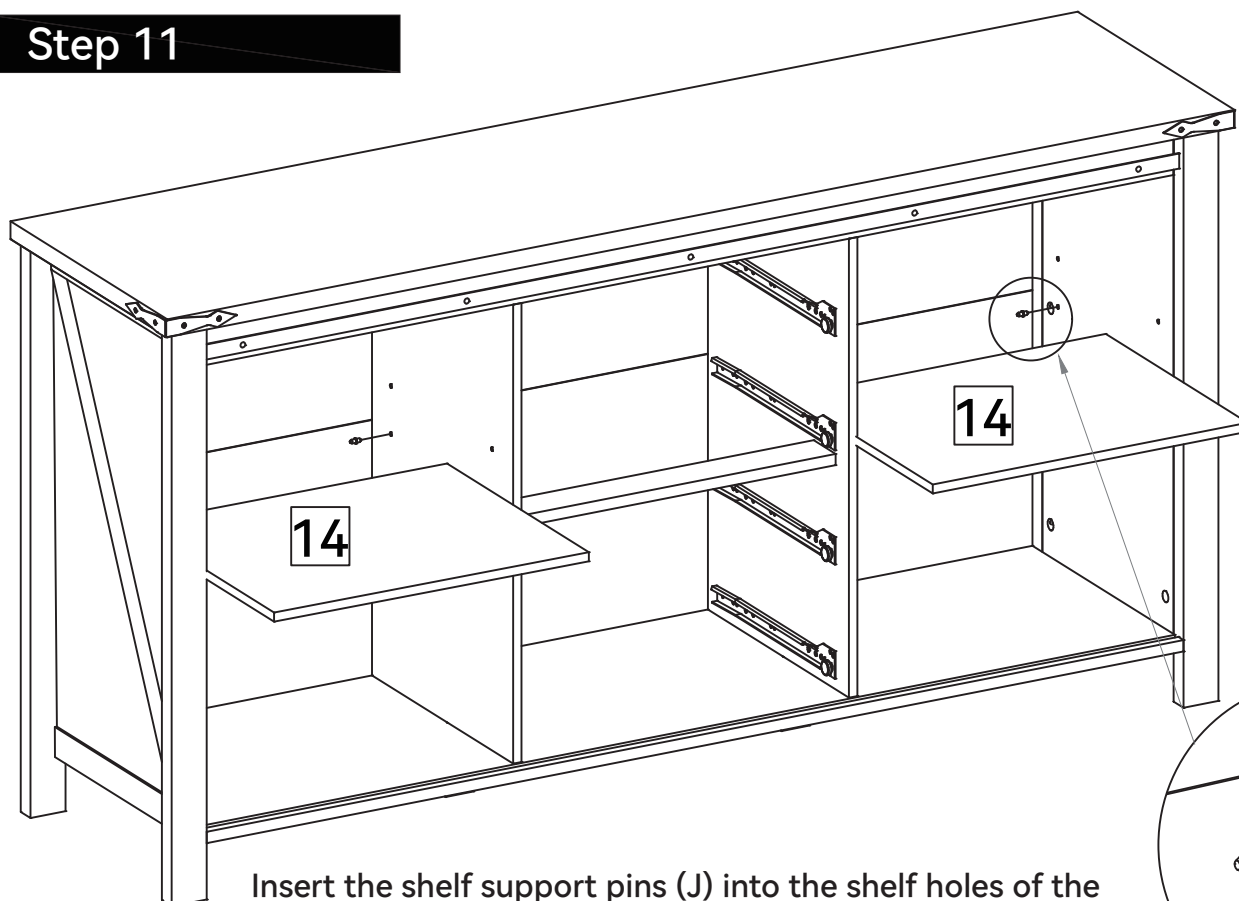


Insert the shelf support pins (J) into the shelf holes of the cabinet, then place the two adjustable shelves (14) into the cabinet.

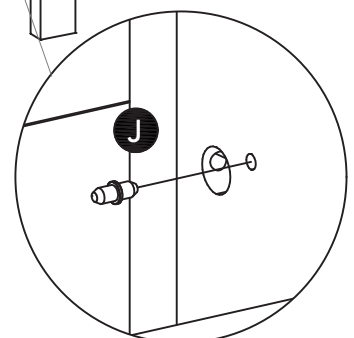

Assembly Instructions


Step 12

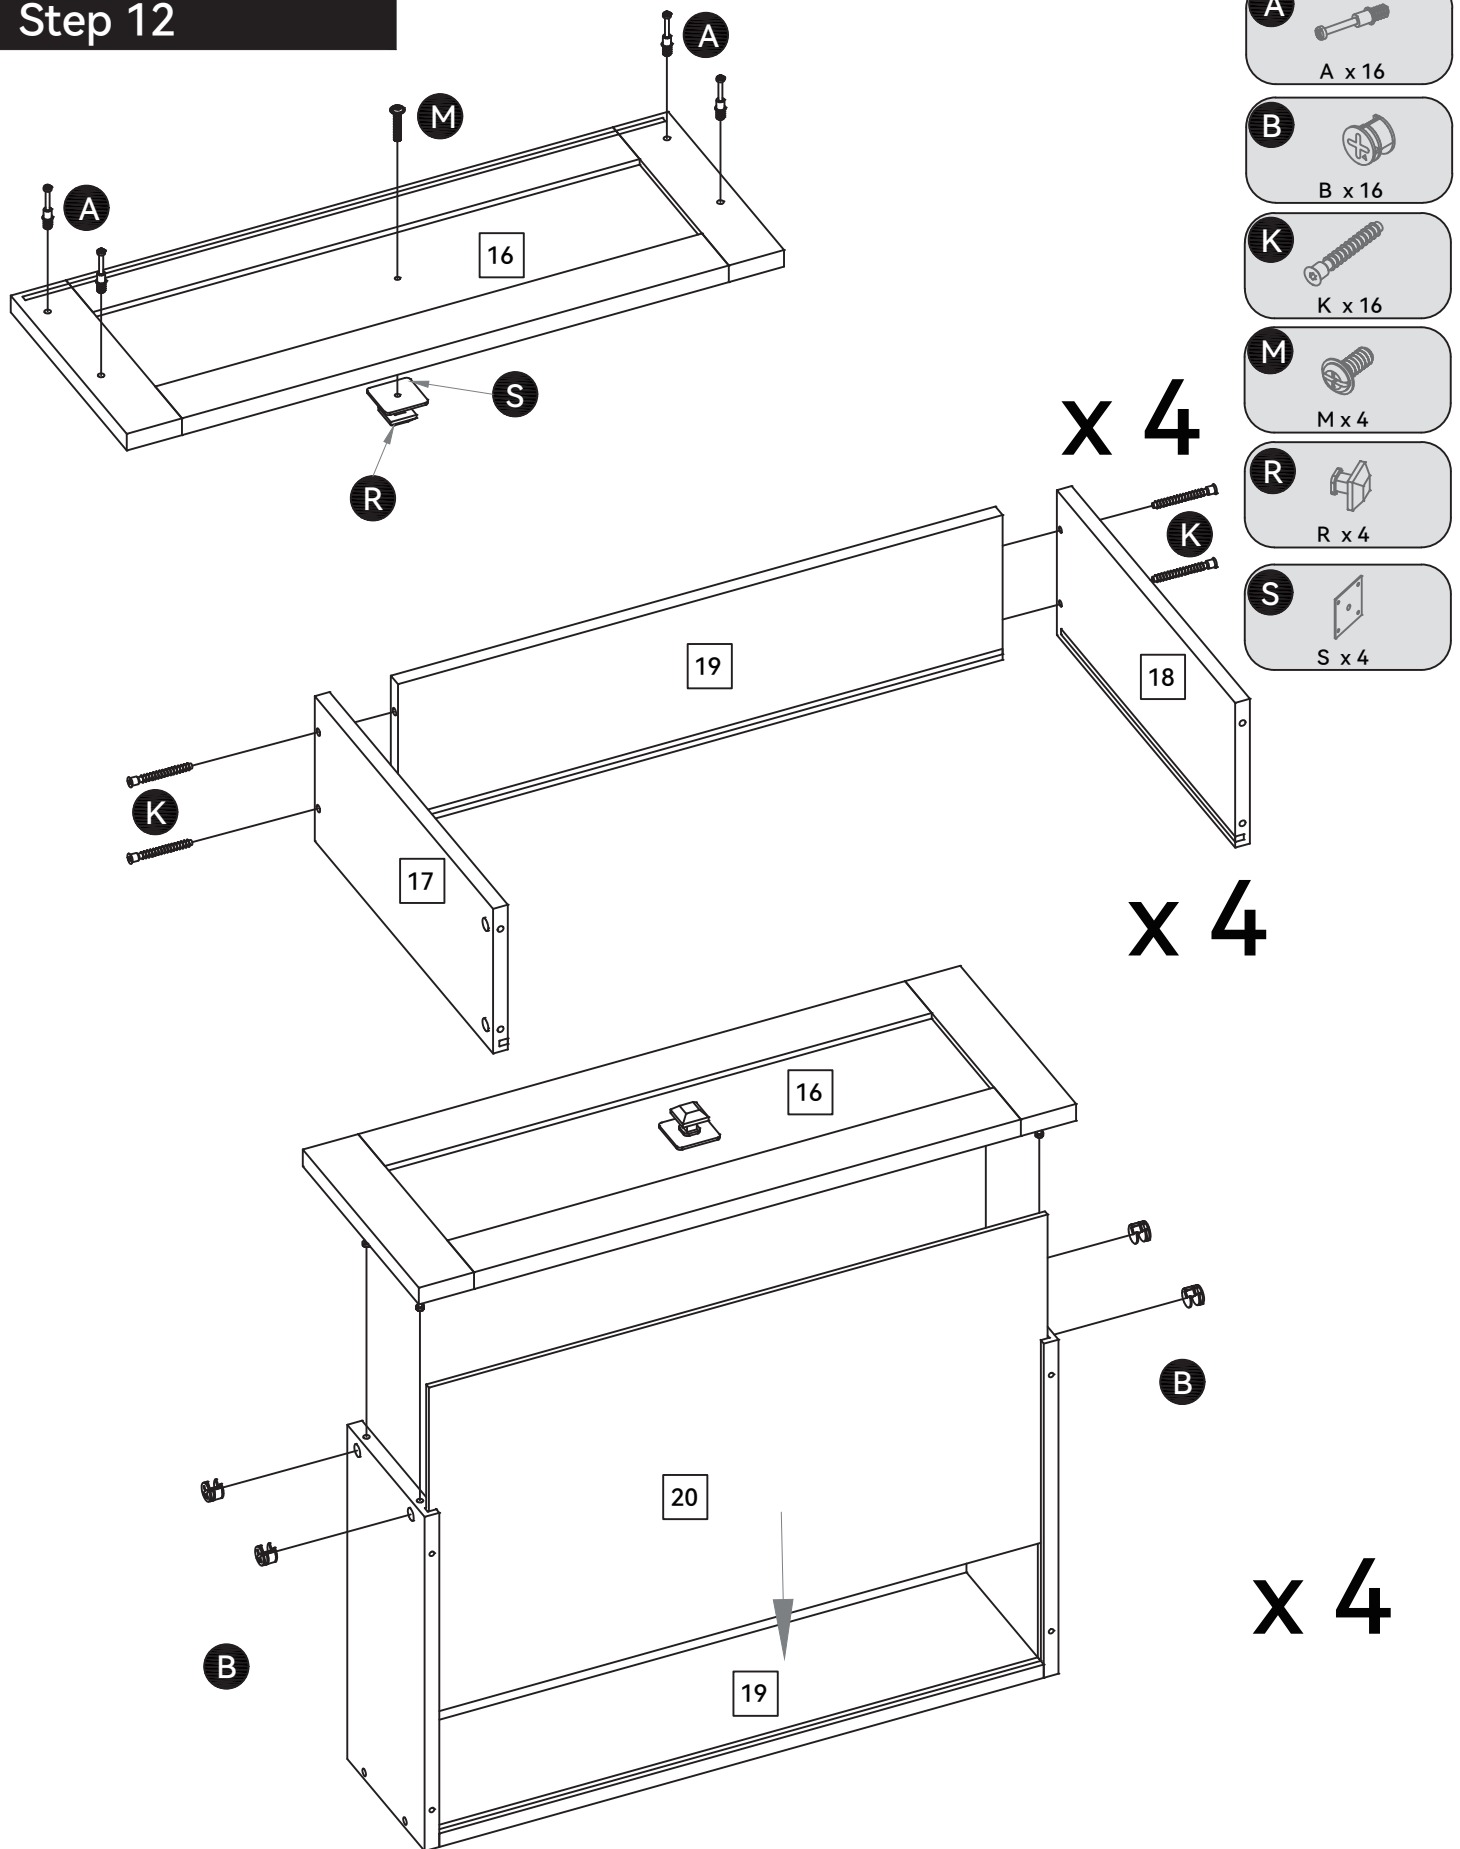

First, install cam bolts (A) onto the drawer front panel (16). Then attach the handle (R) and matching metal plate (S) to the drawer front panel (16) using screws (M). Next, secure the left drawer side (17), right drawer side (18) and drawer back (19) together using screws (F). Finally, insert the drawer bottom (20) and connect the drawer front panel (16) with pre-assembled fittings using cam locks (B).


Assembly Instructions

Step 13

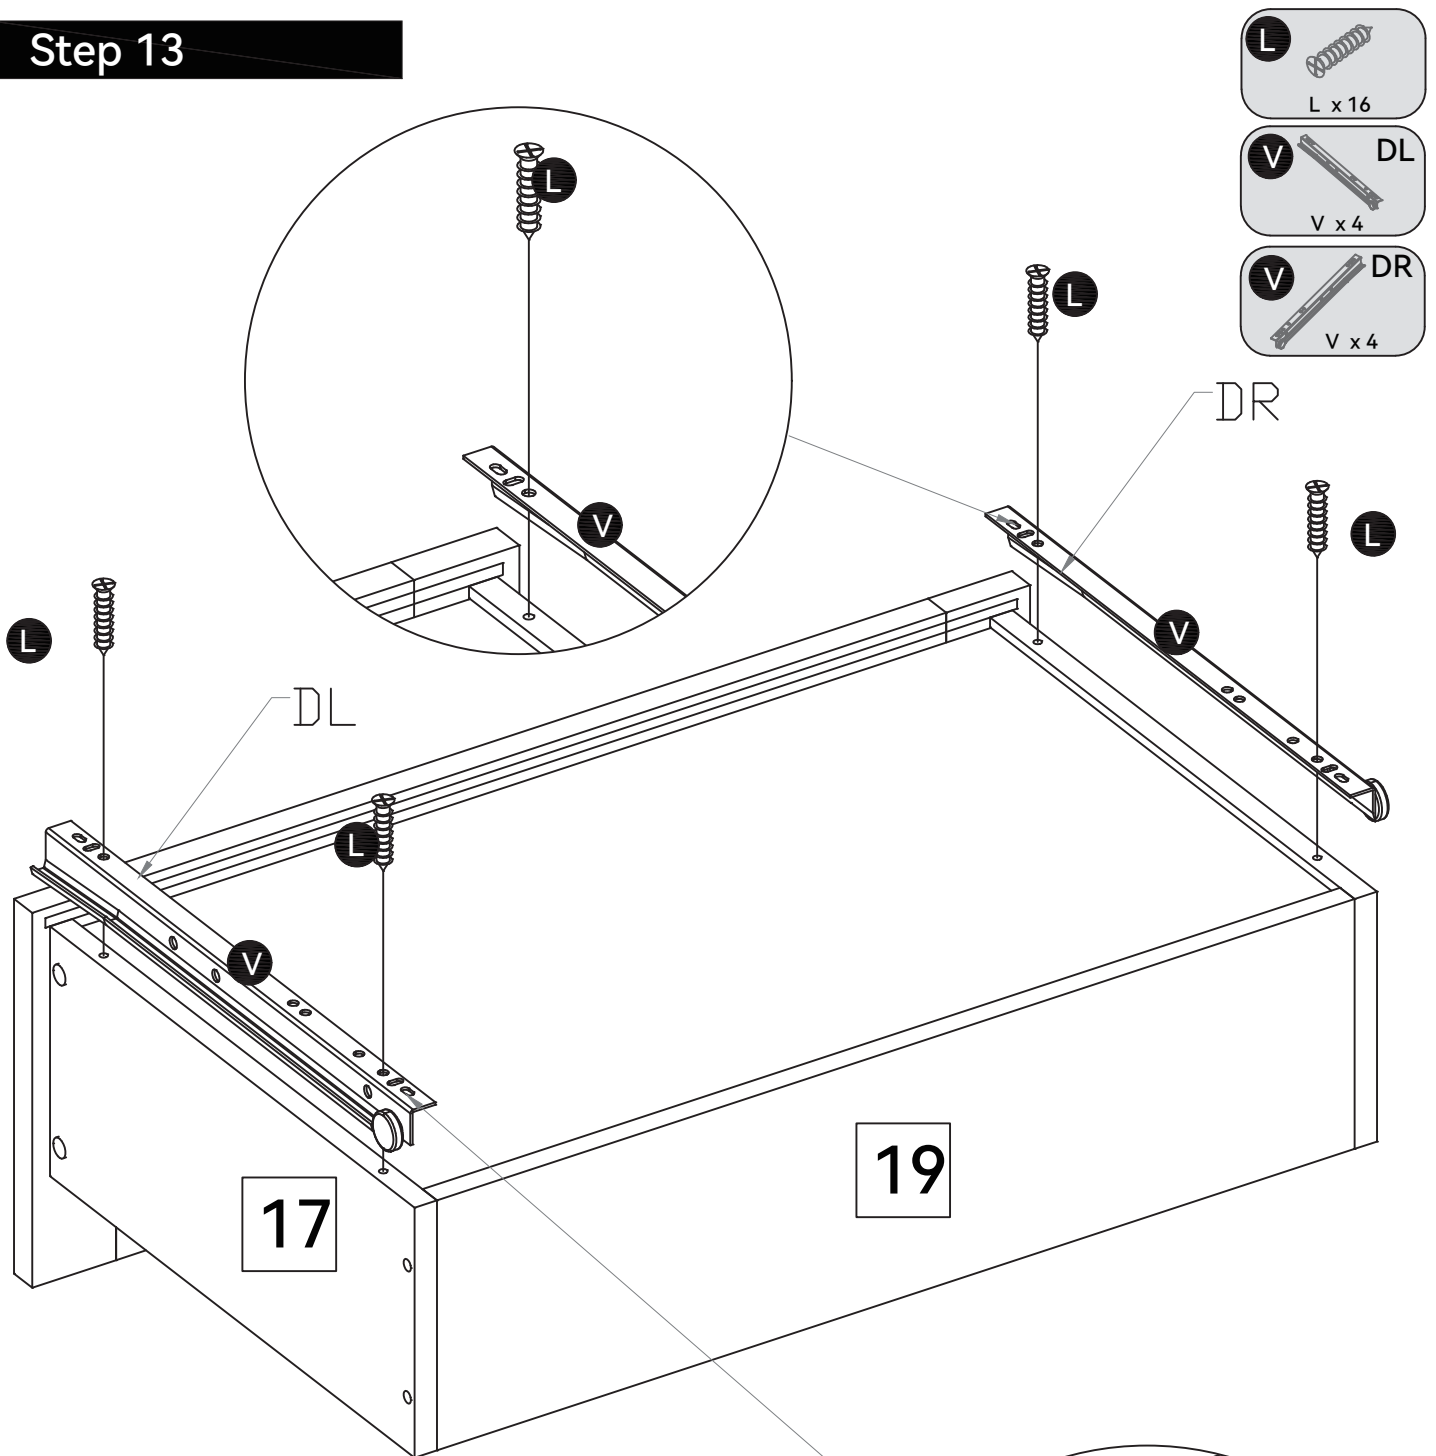

Secure drawer slides DL/DR (V) to the bottom of the 4 drawers using self-tapping screws (L).
(Note: The wheels of the DL/DR slides should face part (19)).



X4

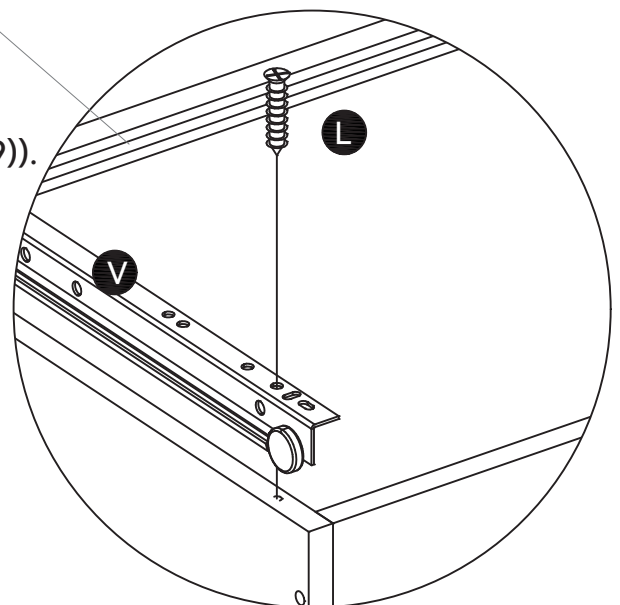

Assembly Instructions

Step 14


The installation methods for part 7 and part 8 are the same.

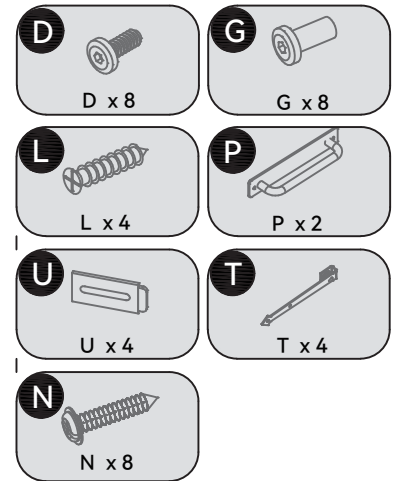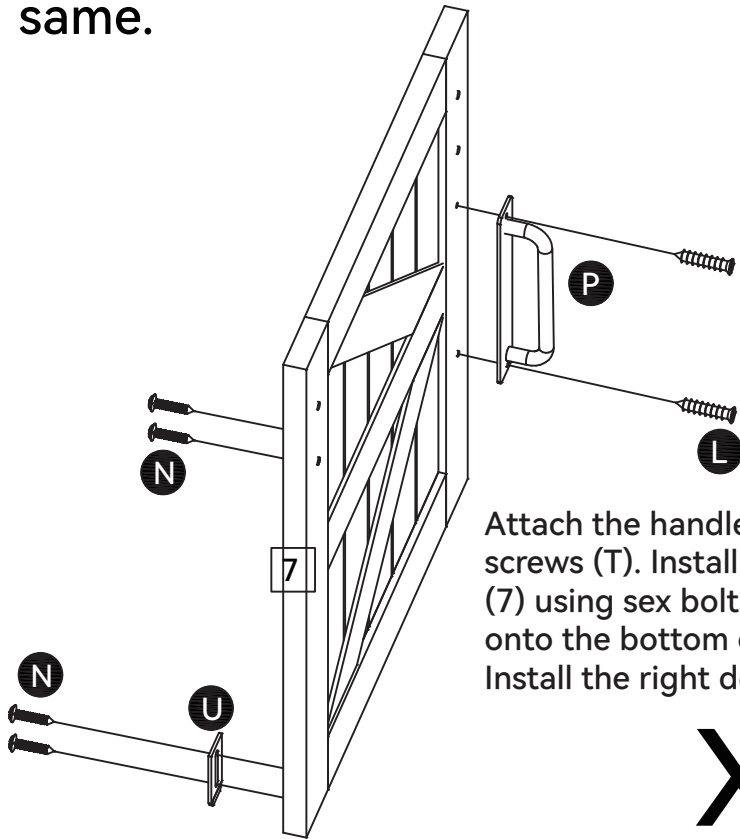

Attach the handle (P) to the door panel (7) using self-tapping screws (T). Install two door rollers onto the top of the door panel (7) using sex bolts (D, G). Then install two door slide catches (U) onto the bottom of the door panel (7) using countersunk screws (N). Install the right door panel (8) using the same method.

X 2


The installation methods for part 7 and part 8 are the same.

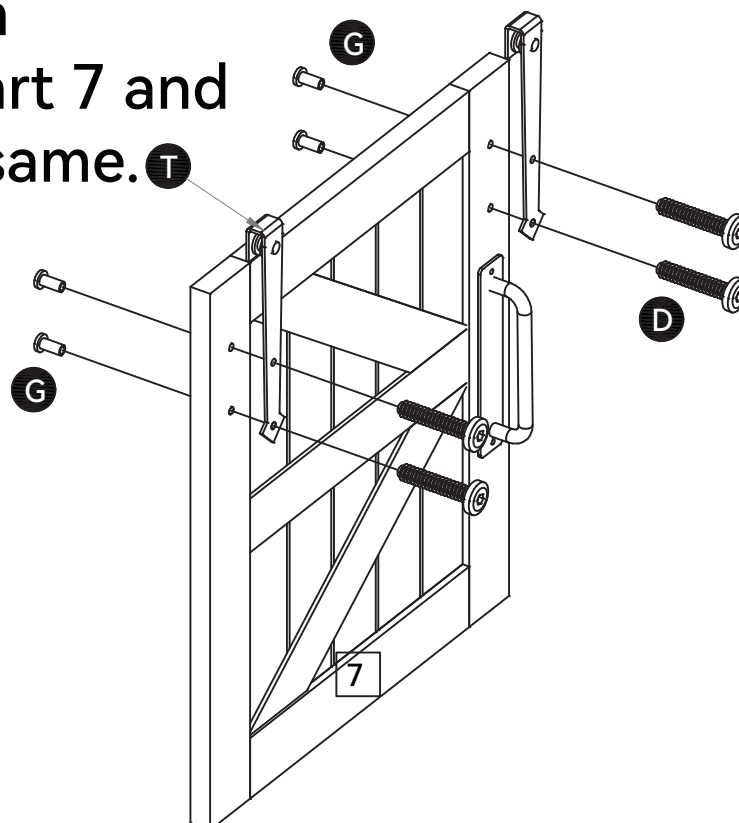


X 2

Assembly Instructions

Step 15

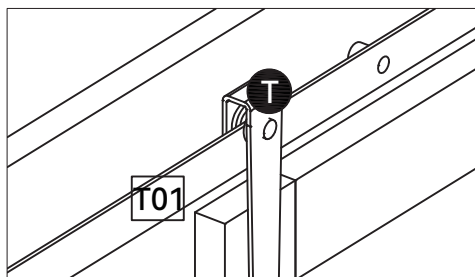


1. Please place the pulley of part T on top of part T01 so that the door panel can slide left and right

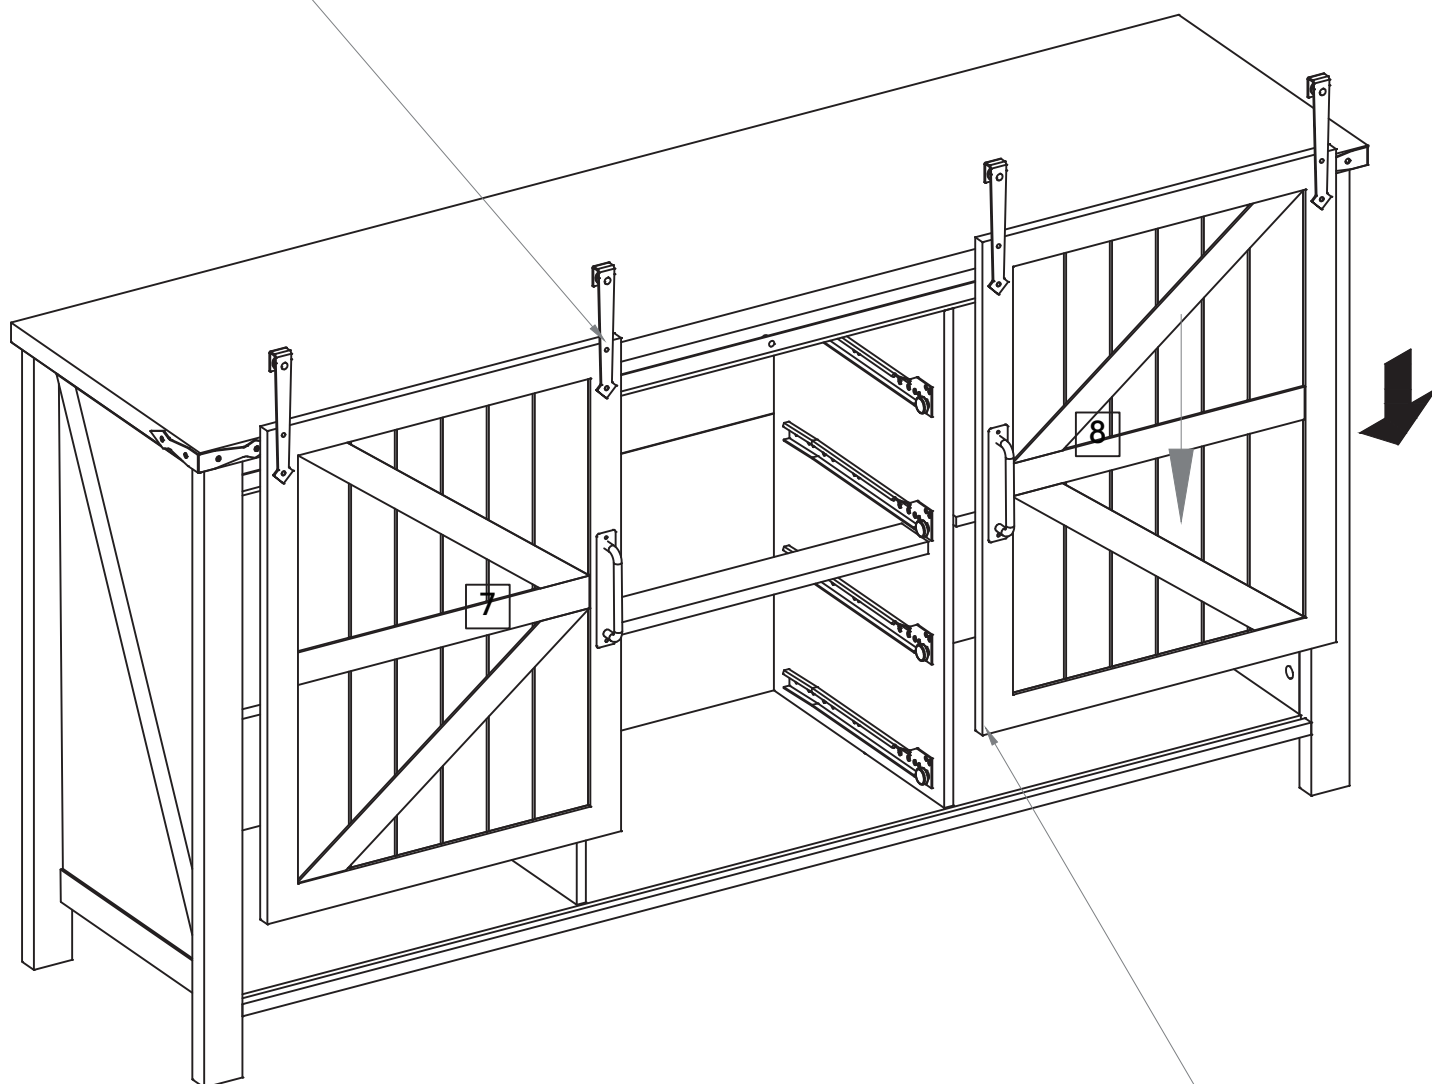

Install the left and right door panels (7, 8) onto the front upper rail (15) of the cabinet, making sure fitting (T) clips onto the metal strip. Clip the bottom door catch (U) into the bottom panel slide groove.


2. Place part U in the aluminum slot of Part 2 so that the door can slide left and right

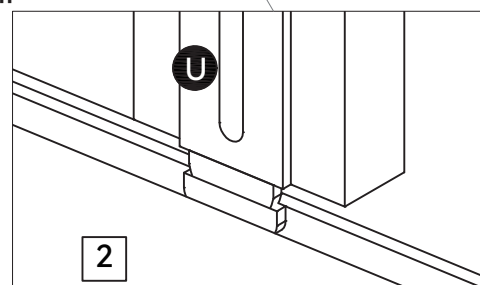

Assembly Instructions


Step 16

Congratulation! You've made to the last step! But don't be too thrilled yet, put on the drawer can be frustrating if you do it wrong. So, take your time and follow the steps below.

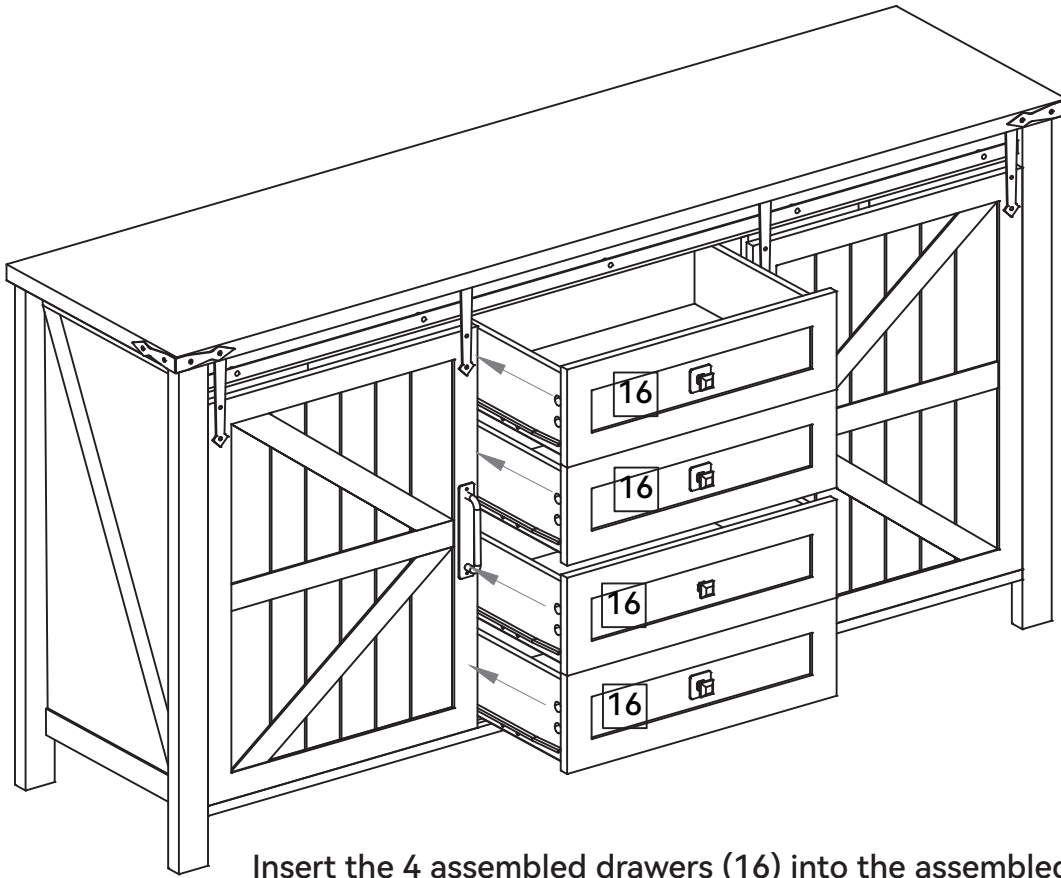


Insert the 4 assembled drawers (16) into the assembled cabinet.
Pay attention to the orientation when inserting.


1. Please ensure that you have matched the wheels on BOTH sides of the drawer with the wheels on rails installed BEFORE push in the drawer.

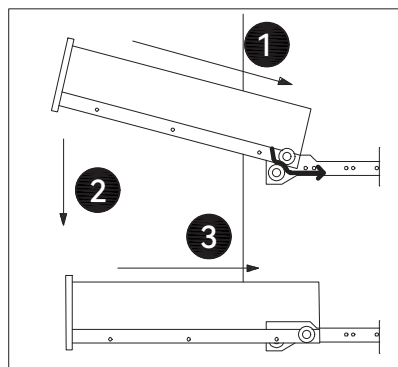


2. If the following occurs, redo the first step.

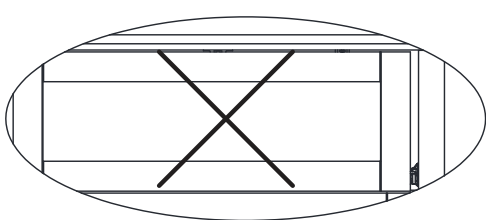

(drawer is on the wrong side)

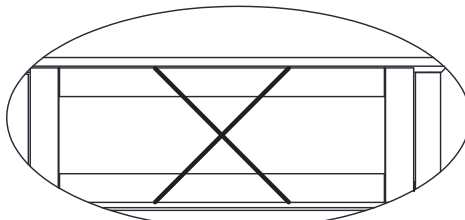

(both wheel are off the rails)

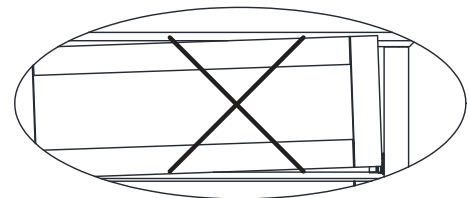


(one wheel is off the rail)



Assembly Instructions

Step 17

WALL



BOARD

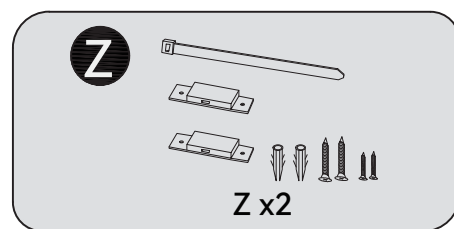



Install the anti-tip bracket (Z) onto the cabinet.

1. Drive the expansion screw into the appropriate position on the wall

2. Use long screws to install one of the plastic buckle seats in the appropriate position on the wall.

3. Use short screws to install the other plastic buckle in the appropriate position on the cabinet.


4. Push the cable tie through the two plastic buckle seats and pull tight. As shown in the figure.

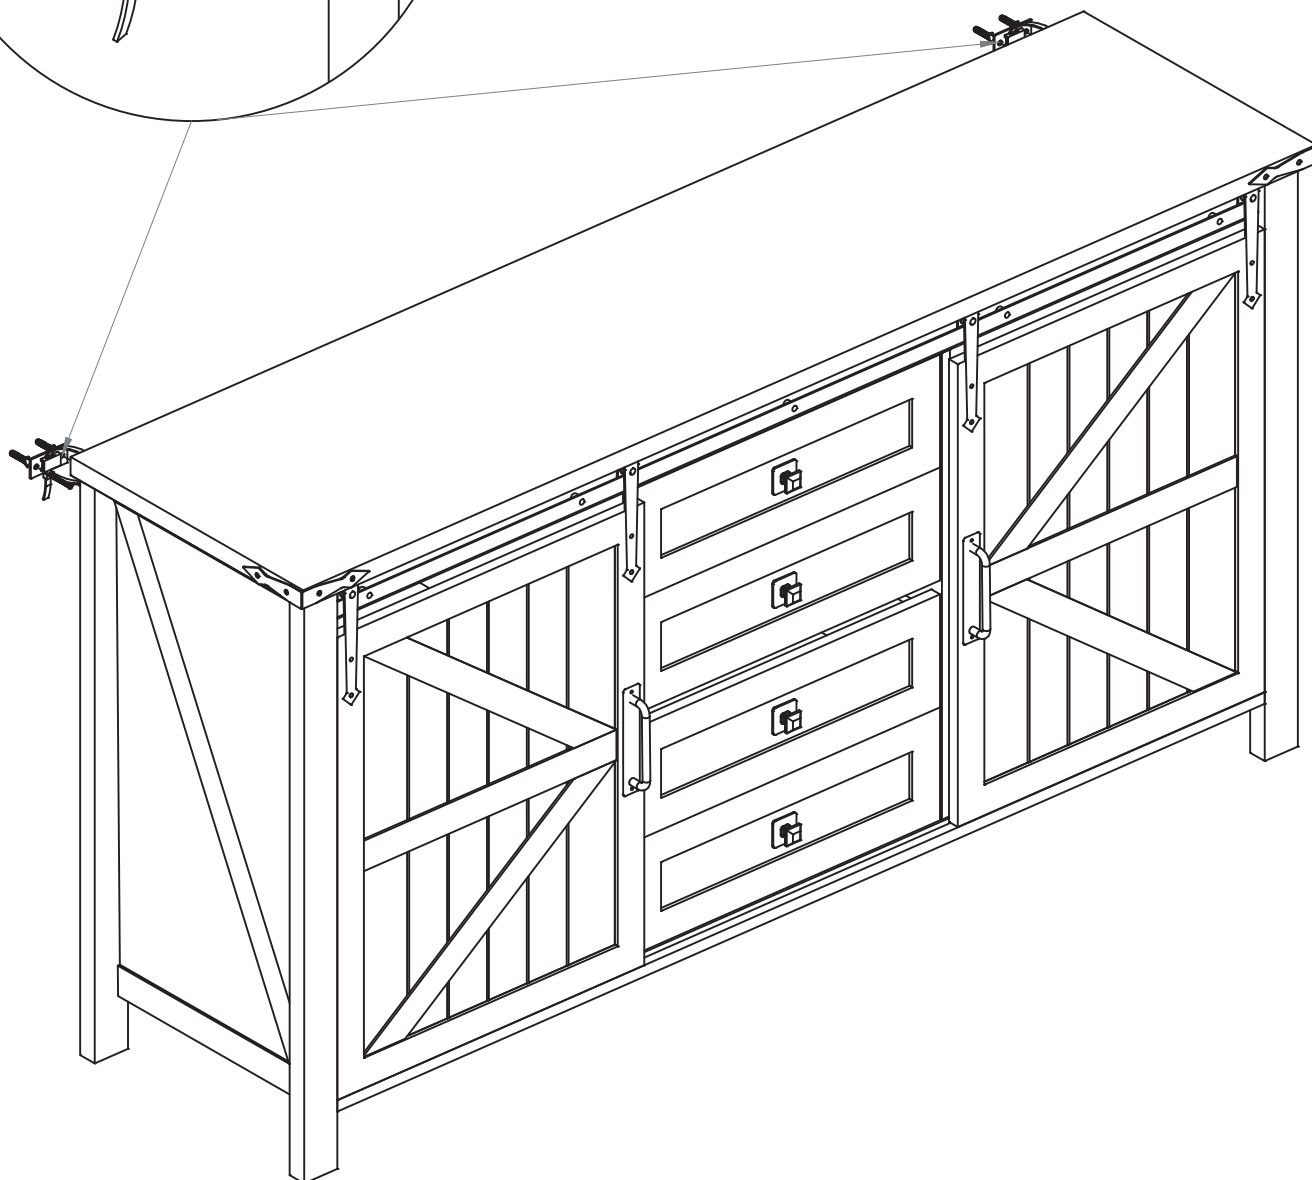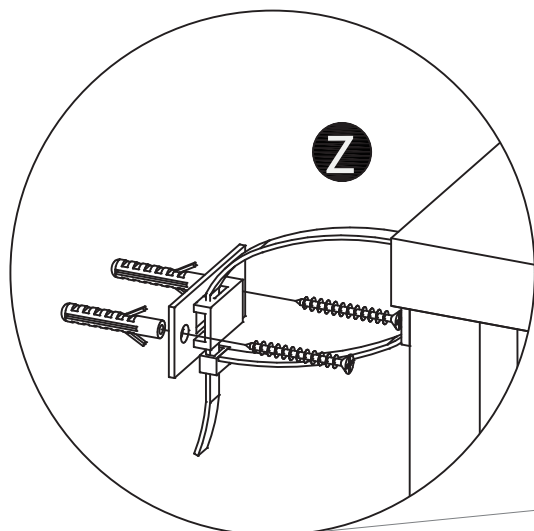

Assembly Instructions

Step 18

Finished assembly

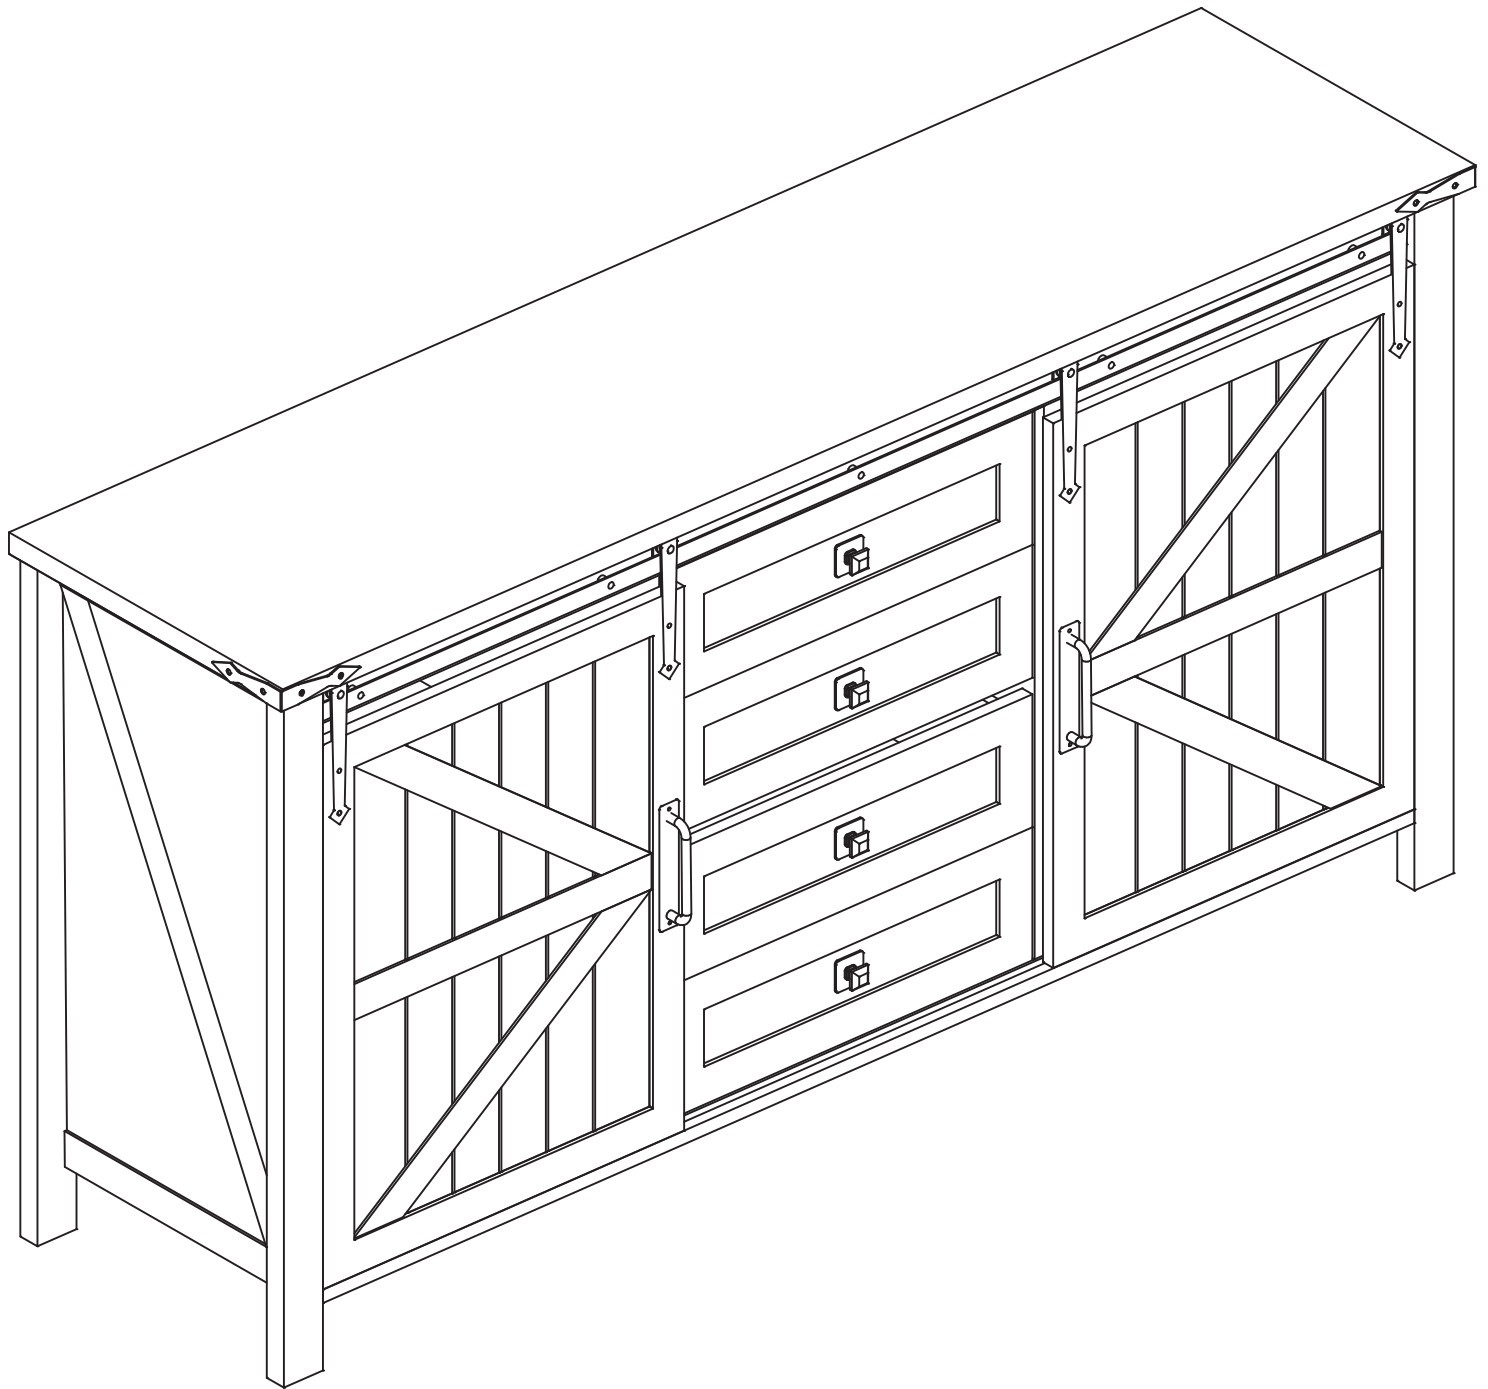

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs (rawl plugs) are supplied with your product, e.g.:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using the incorrect fixings is the responsibility of the installer.



Important: when drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for **supporting your unit**. **Consult a qualified tradesperson if you are unsure.**


Hints:

- 1: General rule:  always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally; do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

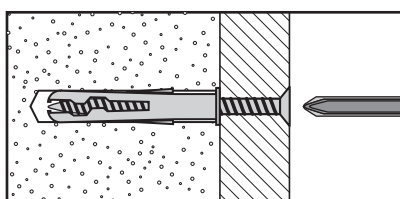


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.3 "Cavity Fixing" wall plug

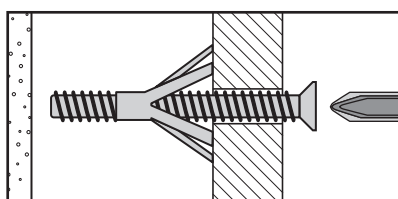


For use with plasterboard partitions or hollow wooden doors.

No.5 "Hammer Fixing" wall plug

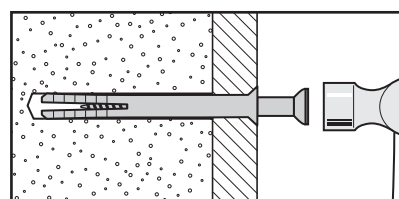


For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.2 "Plasterboard" wall plug

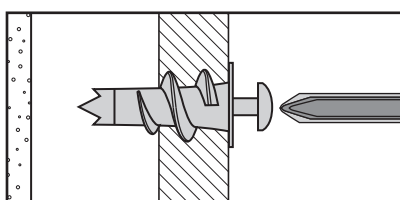


For use when attaching light loads onto plasterboard partitions.

No.4 "Cavity Fixing – Heavy Duty" wall plug

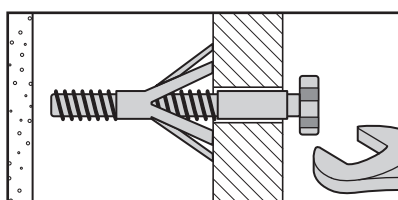

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.6 "Shield Anchor" wall plug – heavy loads

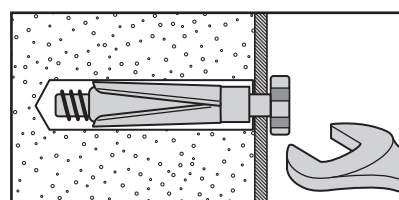

For use with heavier loads such as TV and HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: always check the fitting and location to ensure your safety in and around the home.

Fitting: from time to time check the fitting to ensure the wall plugs or screws do not become loose.

| Cabinet

SKU:

C001985010

C001985020

C001985030

V1.0