


# **Accent chair**

## **Assembly Instruction**

**Email:**  
**support@jocisland.com**  
**Service TEL:**  
**901-347-2181**

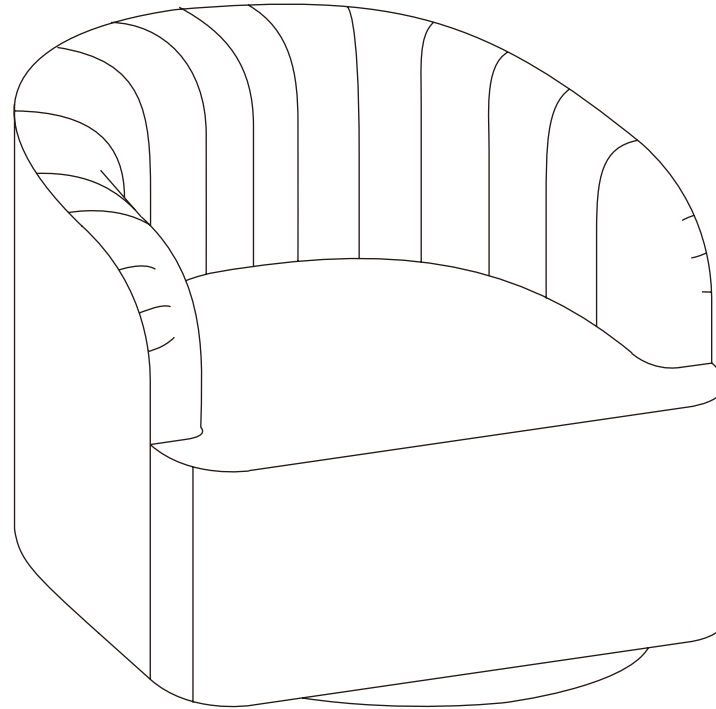

**Any question please feel free to contact us:  
We will provide further assistance within 24 hours.**

### **Dear Customers,**

**Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.**




# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**


Thanks for your purchase. Before assembling, please follow the instructions to check if all the spare parts and screws are intact.

- Considering the size and weight of the sofa, we recommend two adults to assemble the sofa, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
- Keep all components and packaging out of reach of children or animals to avoid the risk of choking or suffocation.
- Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed in a safe and environmentally friendly way.
- Please do not take off the cover, and do not wash.


Your cushions come vacuum packed and sealed for shipping. To restore the cushion's original shape, follow the steps below.

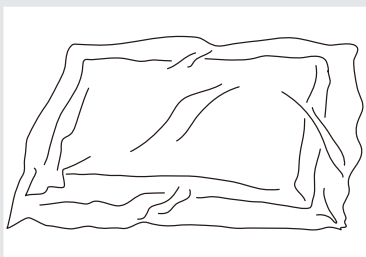


Open the vacuum bag carefully.

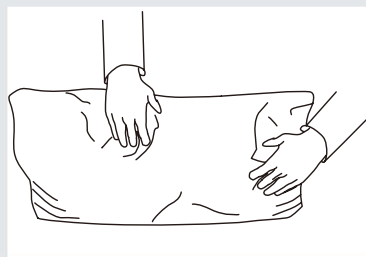

Press and tap with both hands from the side to fully inhale air.

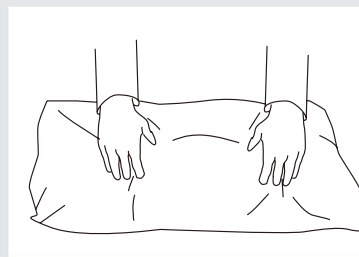


Press and tap with both hands from the front to fully inflate.

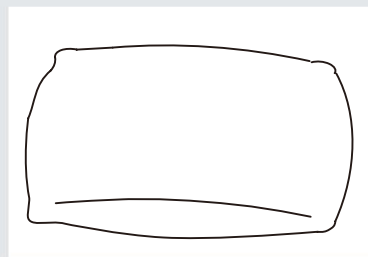


Carefully smooth out each section until the surface is even.

After packing up, place them somewhere dry and ventilated. After about 72-96 hours, it can be restored to the best-use condition.








# Accent chair

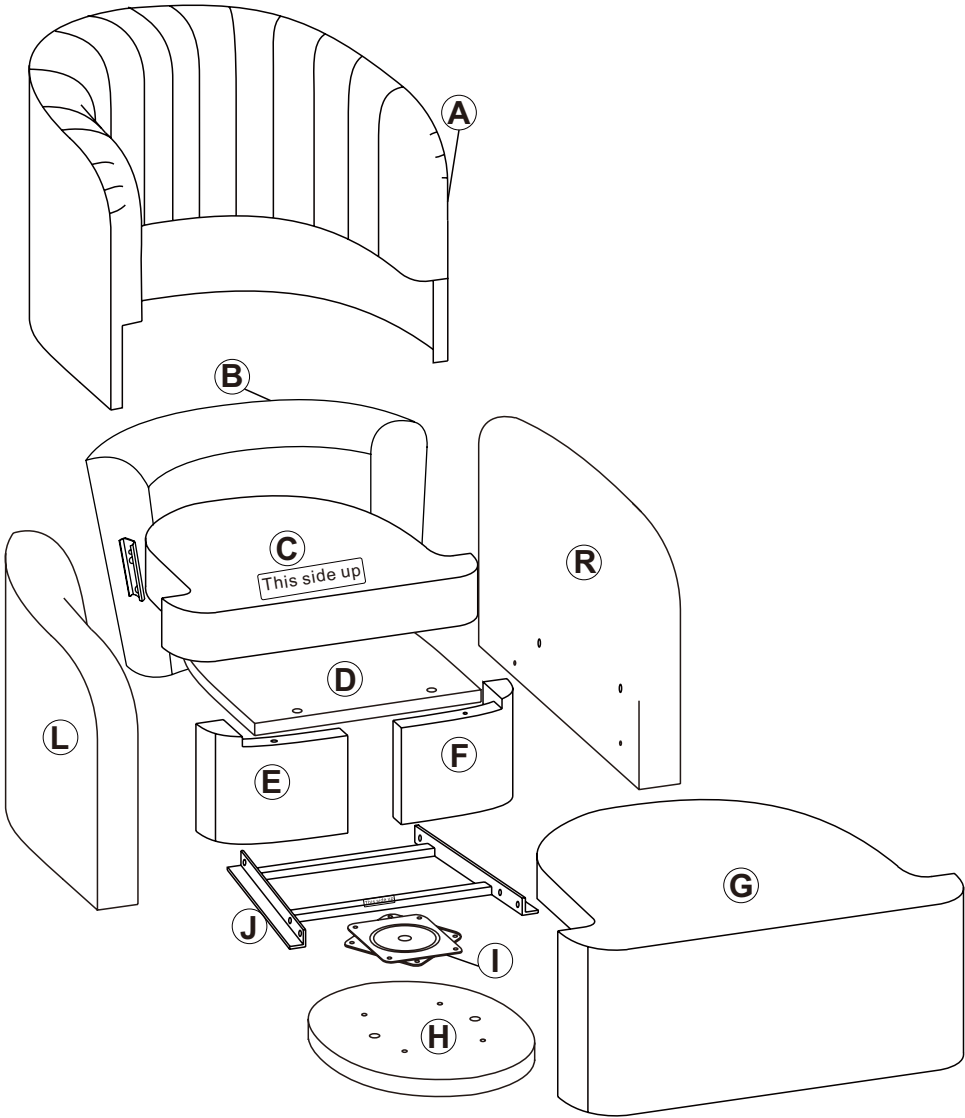


# Hardware Parts

|                                                                                                                   |                                                                                                                   |                                                                                                                  |                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| <b>a</b> Bolt<br><br>M6*20 x12 | <b>b</b> Bolt<br><br>M6*25 x14 | <b>c</b> Bolt<br><br>M6*50 x2 | <b>d</b> Washer<br><br>x2 |
| <b>e</b> Allen Key<br><br>x1   | <b>f</b> Connector<br><br>x1   | <b>g</b> Connector<br><br>x4  |                                                                                                              |


# Main Structure Accessories
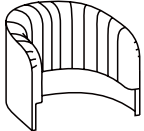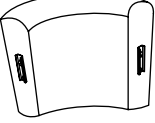
|                                                                                                                            |                                                                                                                             |                                                                                                                    |                                                                                                                    |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| <b>A</b> Backrest Cover<br><br>x1       | <b>B</b> Backrest<br><br>x1              | <b>C</b> Cushion<br><br>x1      | <b>D</b> Seat Frame<br><br>x1   |
| <b>E</b> Front Bezel (Left)<br><br>x1 | <b>F</b> Front Bezel (Right)<br><br>x1 | <b>G</b> Seat Cover<br><br>x1 | <b>H</b> Base<br><br>x1       |
| <b>I</b> Connector<br><br>x1          | <b>J</b> Iron Frame<br><br>x1          | <b>L</b> Armrest(L)<br><br>x1 | <b>R</b> Armrest(R)<br><br>x1 |


## STEP 1

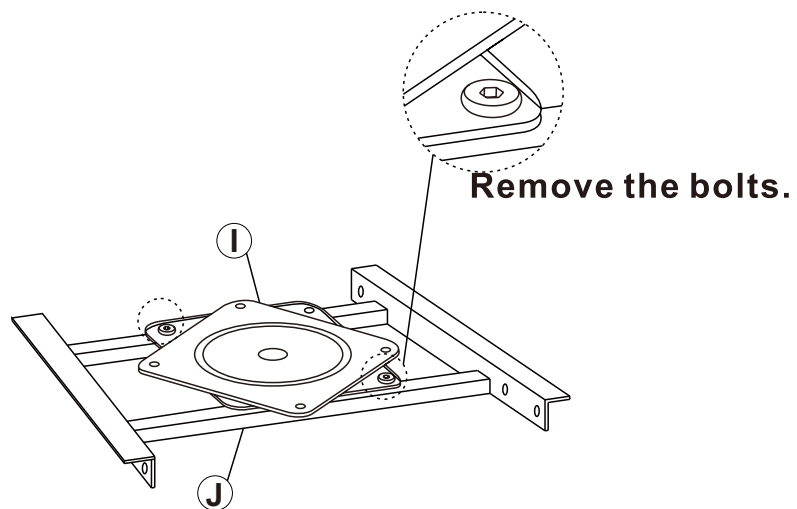



## STEP 2

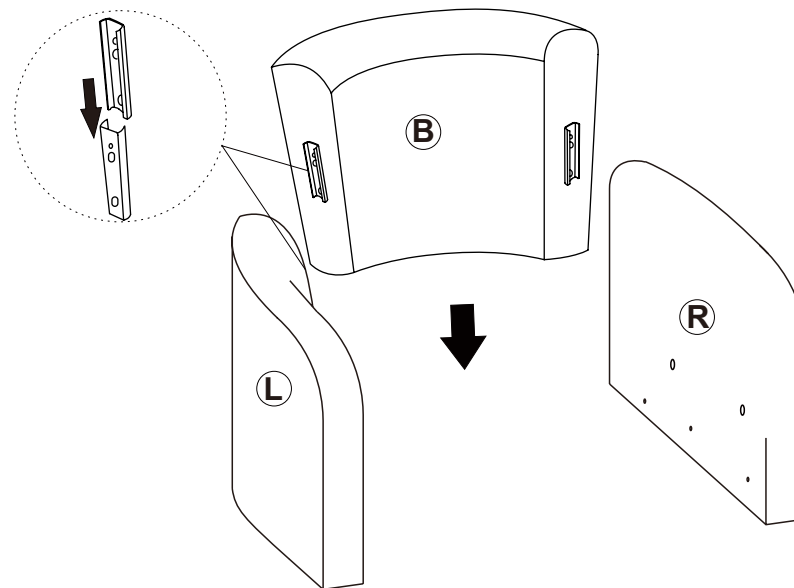


## STEP 3

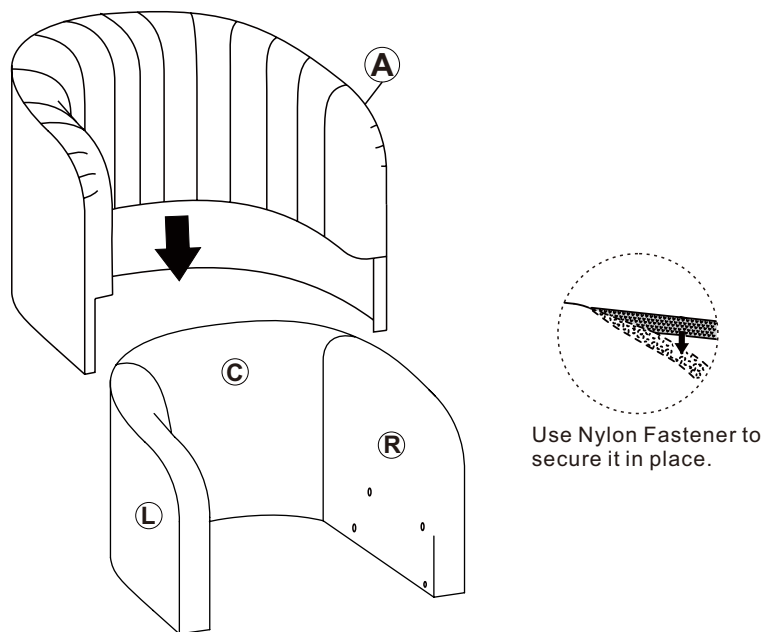

## STEP 4

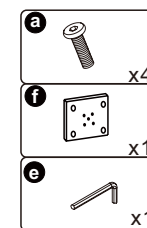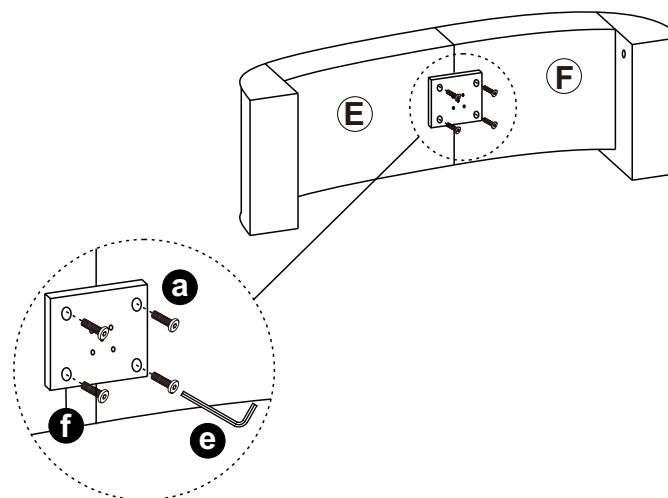


## STEP 5

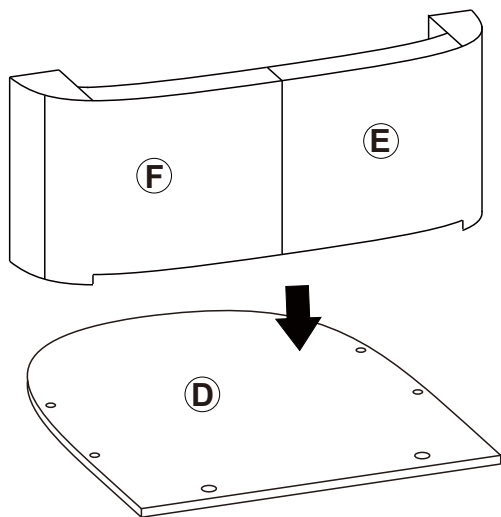


## STEP 6


In order to facilitate the installation, please put it on a suitable height table, as shown in the figure display.

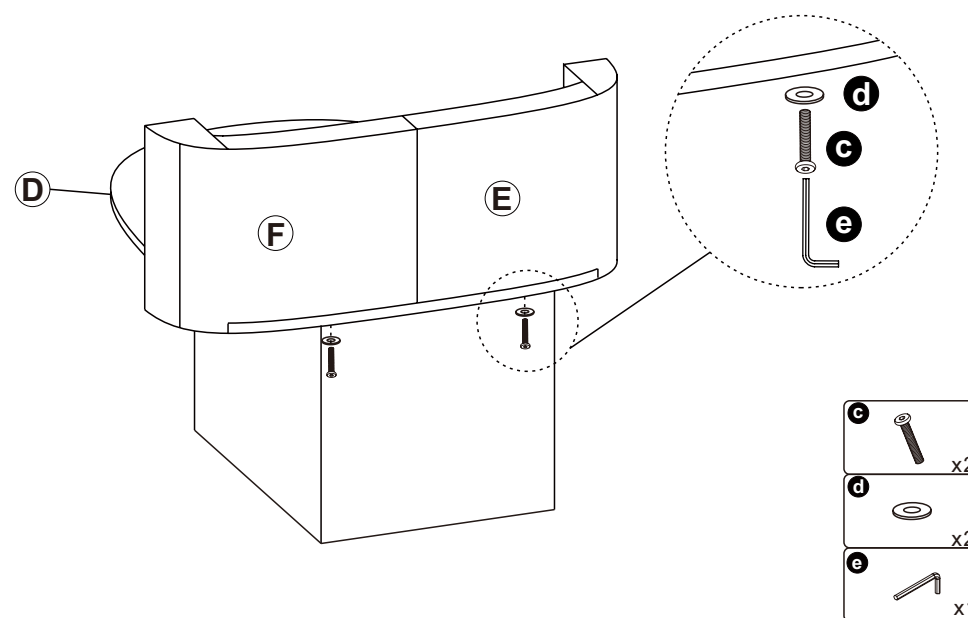


## STEP 7

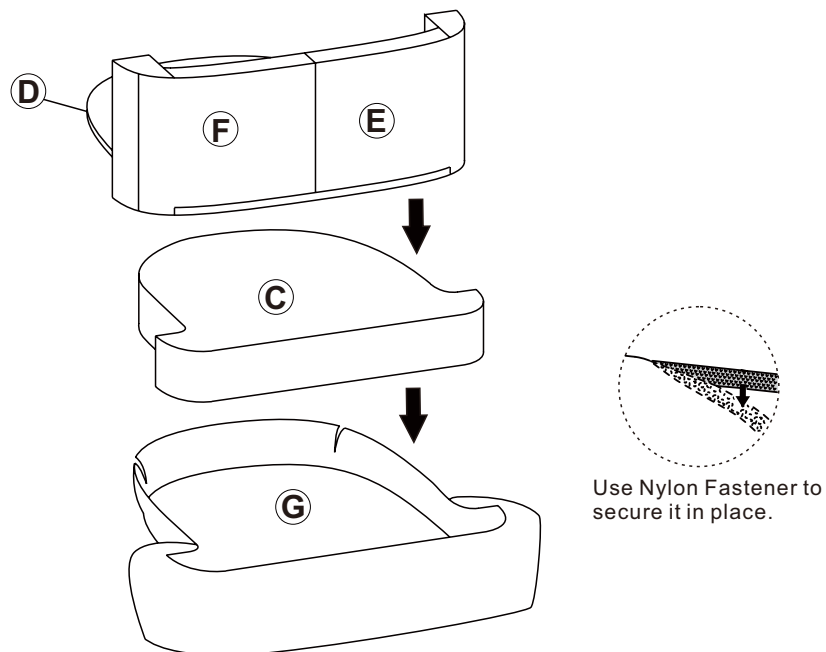


## STEP 8

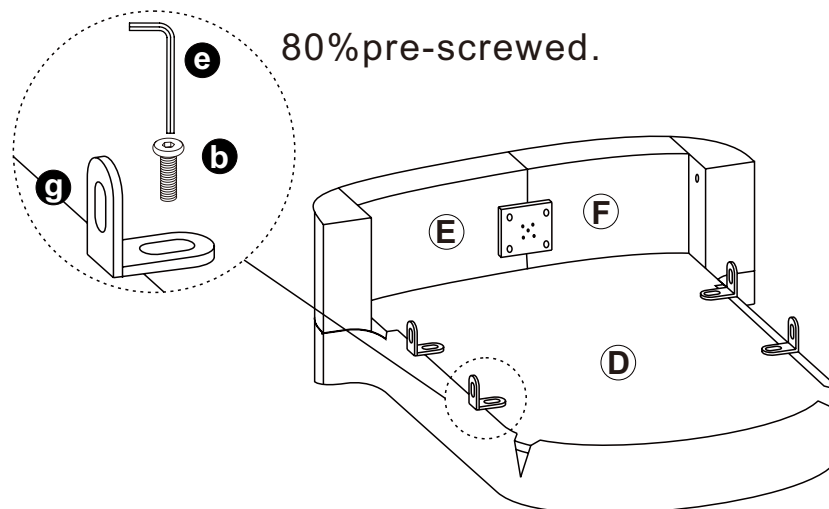


STEP 9

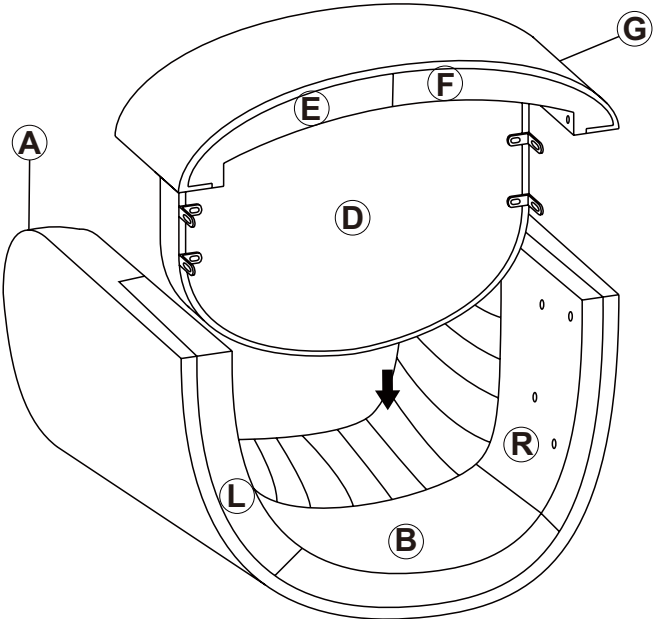


STEP 10

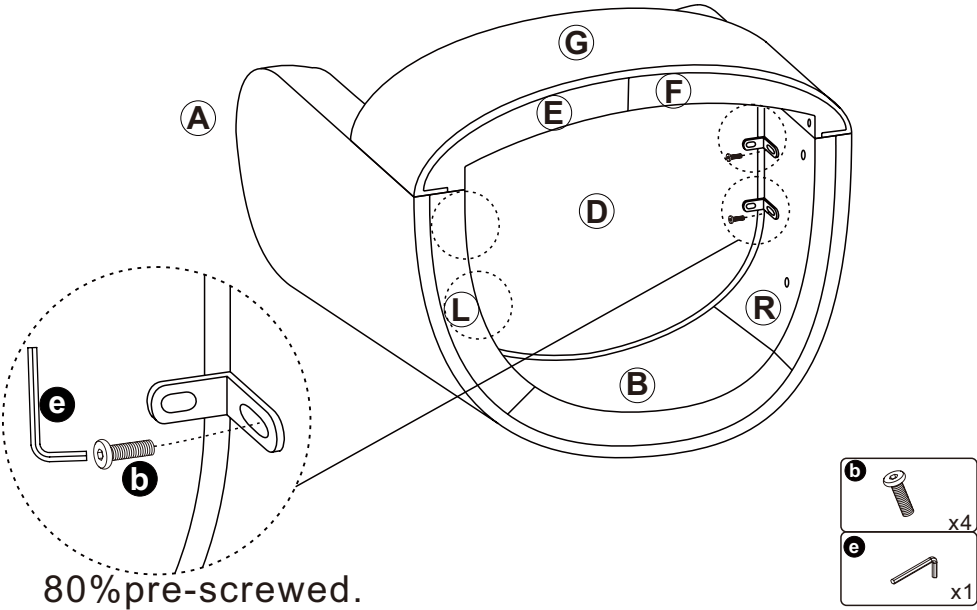


STEP 11

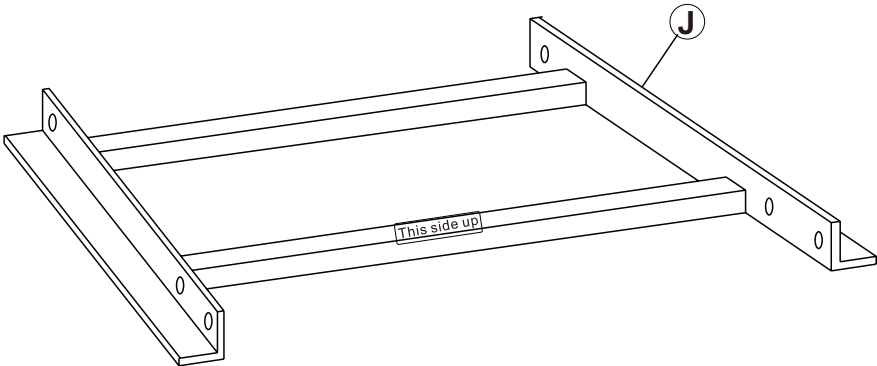


STEP 12

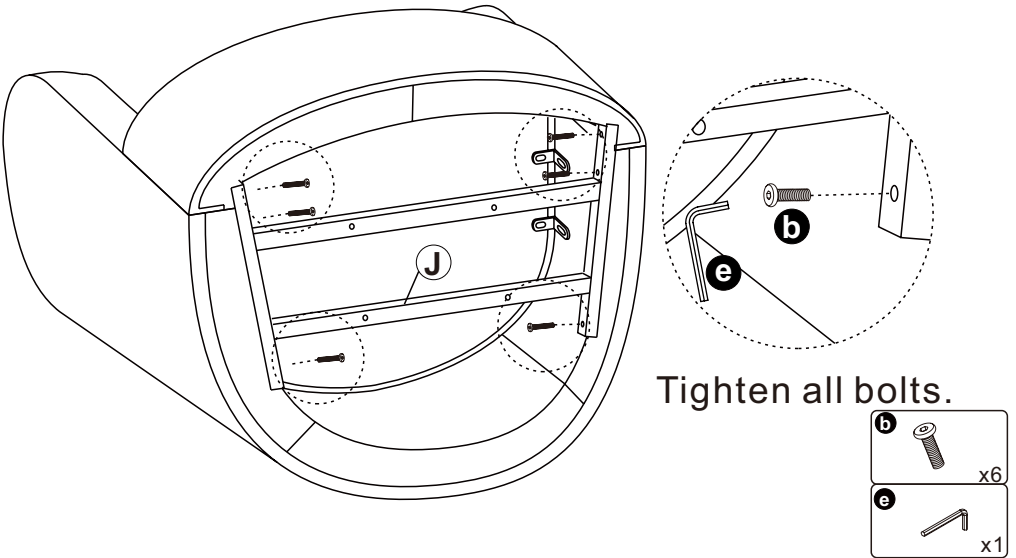


STEP 13

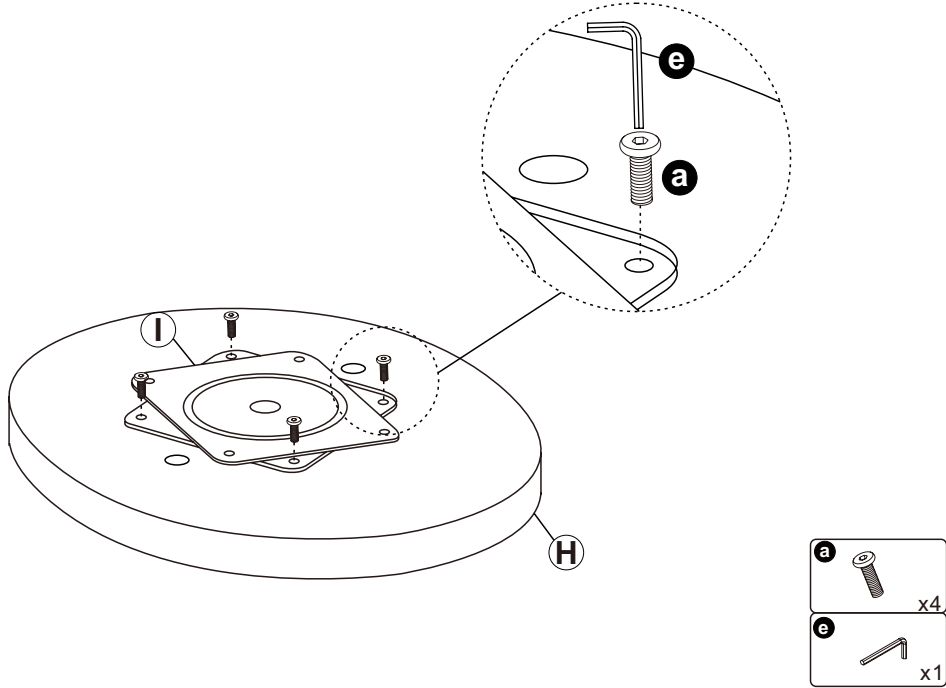

STEP 14

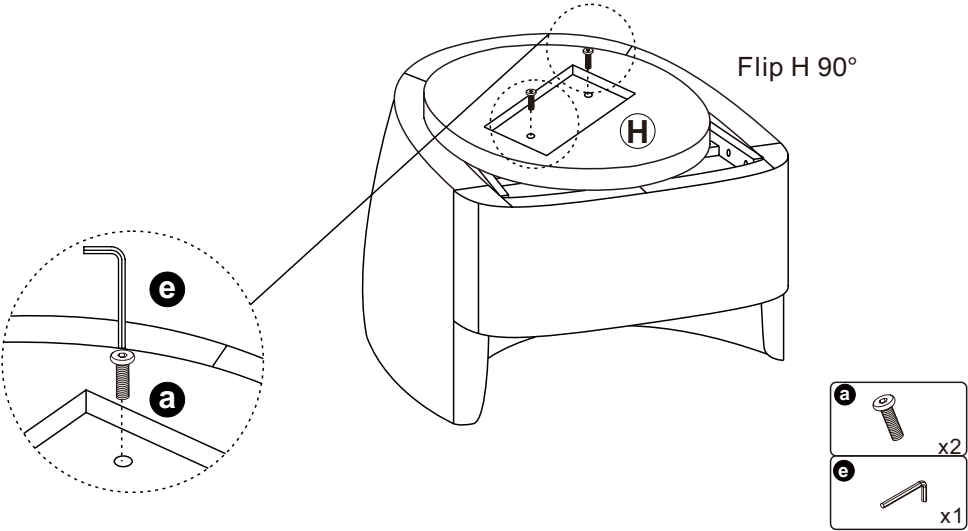

STEP 15

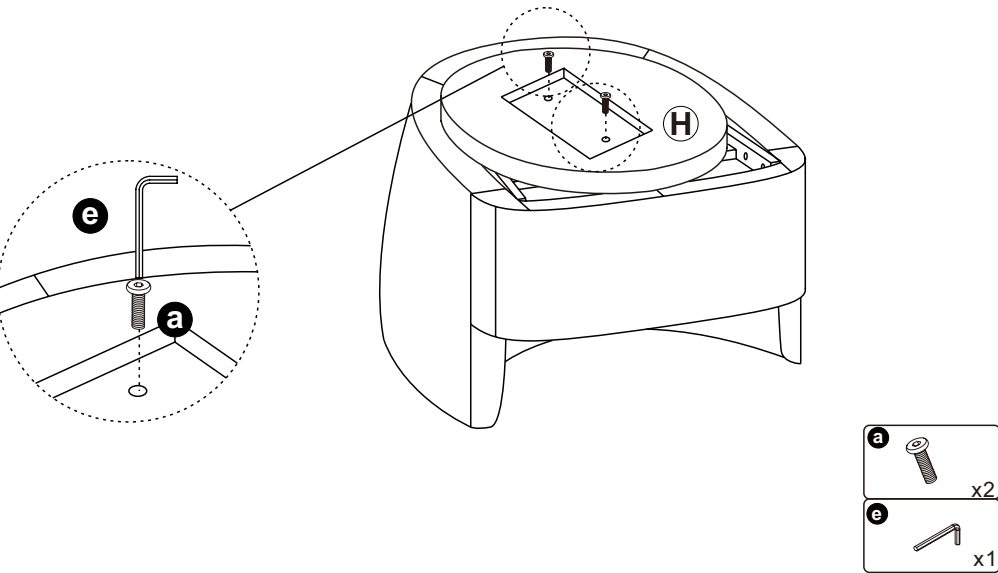

STEP 16

