


ASSEMBLY INSTRUCTION

Hexagonal PC Greenhouse

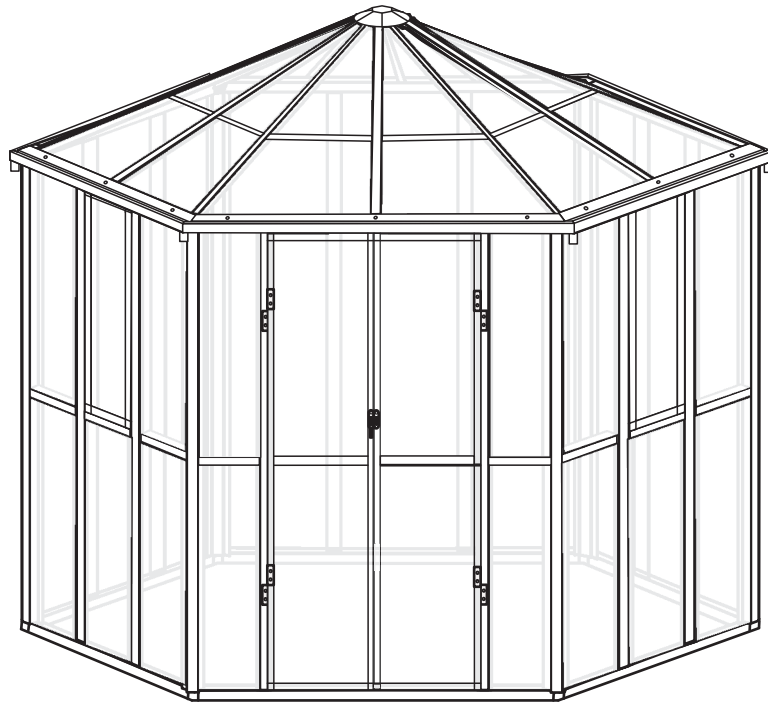

PRODUCT CONTAINS 2 BOXES:

BOX 1/2 (1007040225C)

BOX 2/2 (1007040226C)

Arrive in 2 separate boxes and may not be part of the same shipment;
please install the product after receiving all the packages.

Quick & Easy Assembly

Requires two people and take 7-10 hours for installation.

Ridge Reinforced Walls

Available in Various Sizes

**WARNING: READ INSTRUCTION MANUAL BEFORE ATTEMPTING
TO ASSEMBLE OR OPERATE THIS PRODUCT.**

Phone customer service: 901-347-2181

After-sale mail: support@wepatio.com

Any problems, please contact us.

We will help you within 24 hours.

27-09-2024

CONTENTS

1.Contents.....	2
2.Precautions for installation.....	3-4
3.Part list.....	5-8
4.Base installation step.....	9
5.Frame installation steps.....	10-18
6.Door installation steps.....	19-20

BEFORE YOU START

Owner's Manual

Prior to installation, it is important that you contact your local government authority to determine if building approval is required. Study and understand this owner's manual.

Important information and helpful tips will make your construction easier and more enjoyable.

Assembly instructions

Instructions are supplied in this manual and contain all appropriate information for your building model.

Review all instructions before you begin. During assembly, follow the step sequence carefully for correct results. Please be aware: **this unit takes two people about one full day to complete.**


Parts

Check to be sure that you have all the necessary parts for the building.


Separate contents of the carton by the part number while reviewing parts list.

Familiarize yourself with the hardware and fasteners for easier use during construction. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.


TOOLS MY REQUIRED

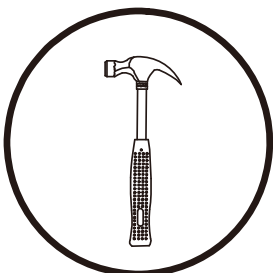


Hammer

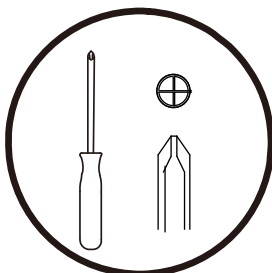


Screwdriver

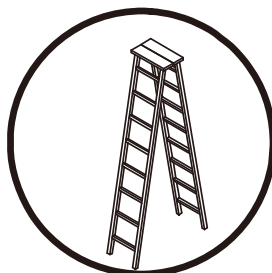

Ladder

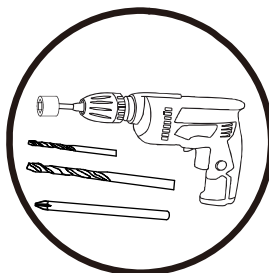


Electric screw driver

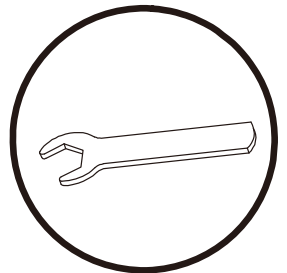

Wrench




This identifies information that requires special attention. Improper assembly could lead to an unsafe or dangerous condition.

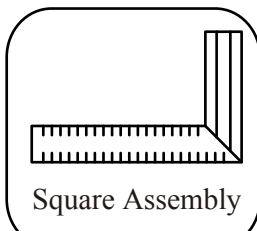


Square Assembly

Check that assembly is square before tightening bolts.

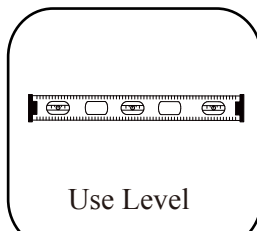


Use Level

Check that set or assembly is properly level before proceeding.

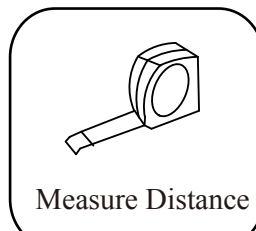

Measure Distance

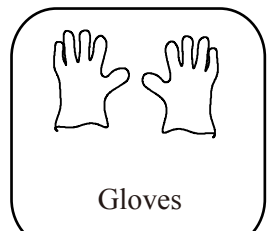


Gloves

IMPORTANT

How many people needed for the installation work

Requires two people and take 7-10 hours for installation.

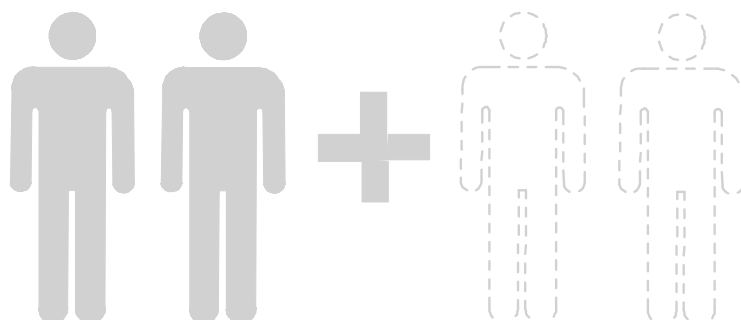

PLAN AHEAD

Site Selection

I Avoid overhanging trees as much as possible as leaves will make regular cleaning necessary and broken branches are a potential hazard.

I Small trees, bushes or fences nearby can be helpful, acting as a wind break.

Site Preparation

The site must be prepared so that the base of the shed is level all round and checking with a spirit level is required.

The base can be constructed by treated timber or concrete, in order to stop the moisture getting into the shed.

The shed is not designed to be built onto lawn directly. Also the ground will get muddy during rainy days.

If a concrete pad is made, it is important that this slopes towards the edges to prevent water ingress.

Time must be allowed for any concrete or cement to dry before building the shed on top.

Bases can also be constructed from bricks, blocks, or mounted on a concrete pad.

The bricks or blocks should be cemented onto firm and level concrete footings and the greenhouse frame drilled and screwed to the base.

IMPORTANT NOTES:

Find someone to help you: it is much easier with someone to hold parts, pass tool sect. Also some steps require two people to lift structures together. This is not very heavy work so would suit most able-bodied people.

Allow plenty of time: rushing often causes errors and the re-doing of incorrect assemblies. If you have never built a shed before, it can take most of a day to carefully complete the construction.

Have the right tools to hand.

Safety clothing as recommended in the 'Tools' section.

Ideally let out the parts and check that all are present before commencing construction. Lay on cloths or plastic sheets if there is any risk of scratching the parts.

Tighten all nuts carefully, being sure not to miss any. Check the frame is square and using a spirit level to check that it is upright.

For your safety concern, please do not stand under the metal shed in heavy wind or snow days.

For safety, please use expansion screws to reinforce the posts to the ground.

Please clear the snow off the roof in time for the heavy snowfall.

Make sure all screws are tightened before use.

Repeat to confirm all screws, buckles and straps every 90 days.

Please keep all screws loose during the assembly process and tighten them after completing the installation.








Do not use or store objects in the Metal Shed with open flames or flammable chemicals.

Please note that some parts have sharp edges and should be handled with gloves.


If any parts are missing, broken, damaged or worn, discontinue use of the product until repairs are made or factory replacement parts are installed.

Installation of the product in a manner that does not conform to the manufacturer's instructions may result in the loss of the warranty policy for this product.

BOX 1





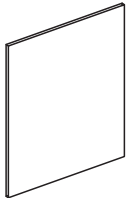

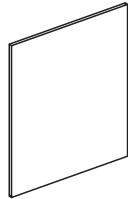




No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
A		15	86.4*57.7	C		12	103.2*1 56.9*3
A1		13	87.4*57.7	D		12	58*1 57.8*88
B		2	86.4*35.7	E		4	83.3*45.1
B1		2	87.4*35.7	F		2	76.4*51.2

Pull off film on both sides
before installation.

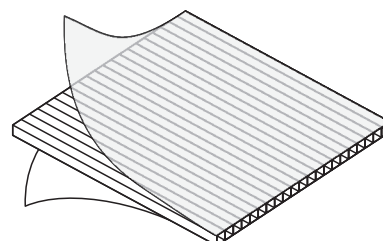


The white film faces outward.

BOX1

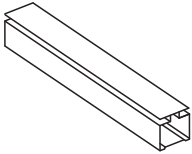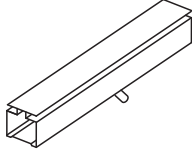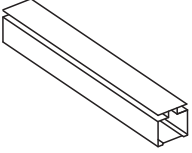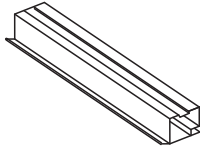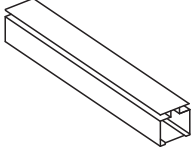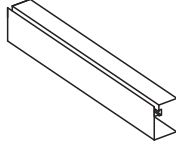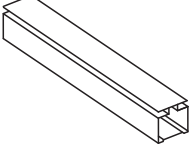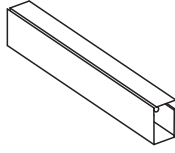
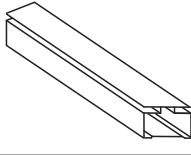
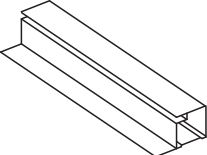
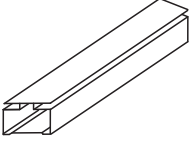
No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
12		4	44	14D		2	56.5
13		2	44	15A		2	49.1
14		13	56.5	15B		2	49.1
14A		2	34.6	15C		2	56.5
14B		6	56.5	16		4	74.2
14C		6	56.5				

BOX1


















Plastic Parts:

No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
32		6		35		1	
33		6		36		6	
34		1		36A		6	

Hardware:


No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
37	 	16	M6*7	51		12	18
42	 	132	M6*12	51A		12	
44	 	18	M6*26	56	  	2	M4*10
48A		12		57		1	
							

BOX2

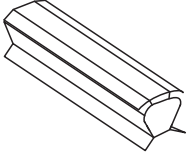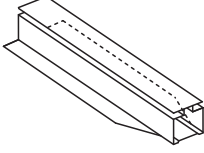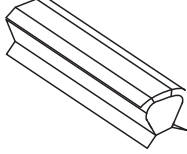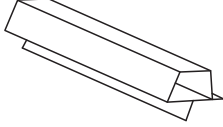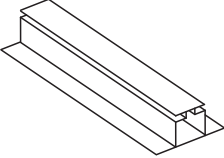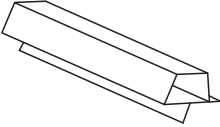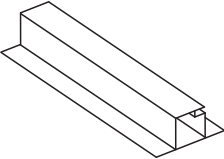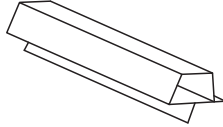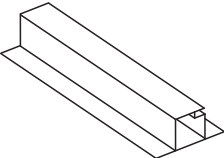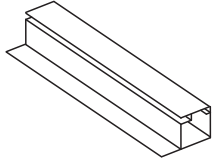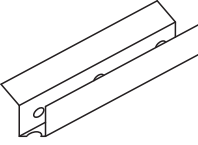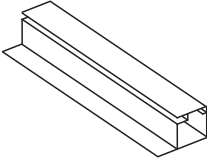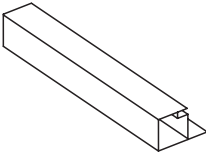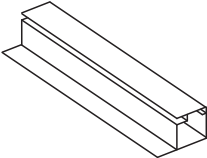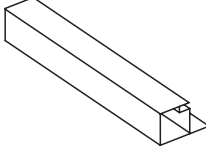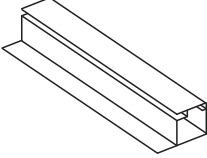
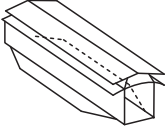
No.	Picture	Qty.	Size	No.	Picture	Qty.	Size
1		4	173	8		6	161.5
1A		2	173	9		3	175
2		10	173	9A		1	175
3		1	173	9B		2	175
4		1	173	10A		1	166.8
5		6	183.8	10B		1	166.8
6		5	175	11A		1	166.8
6A		1	175	11B		1	166.8
7		6	183				

Warning:

If the aluminum part curved as below pic, pls use the wrench to restore it.


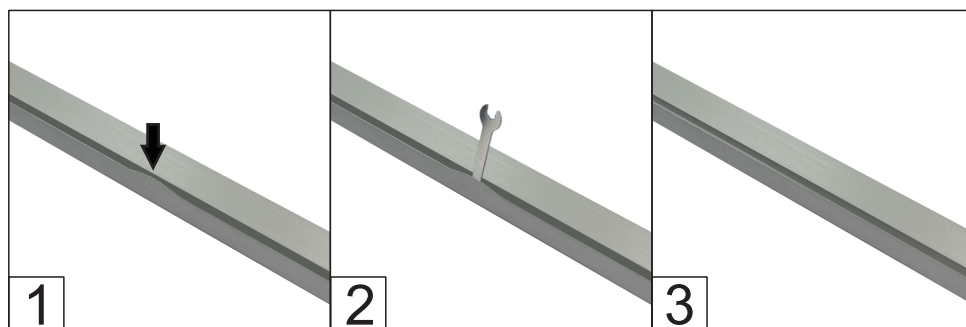


Step 1

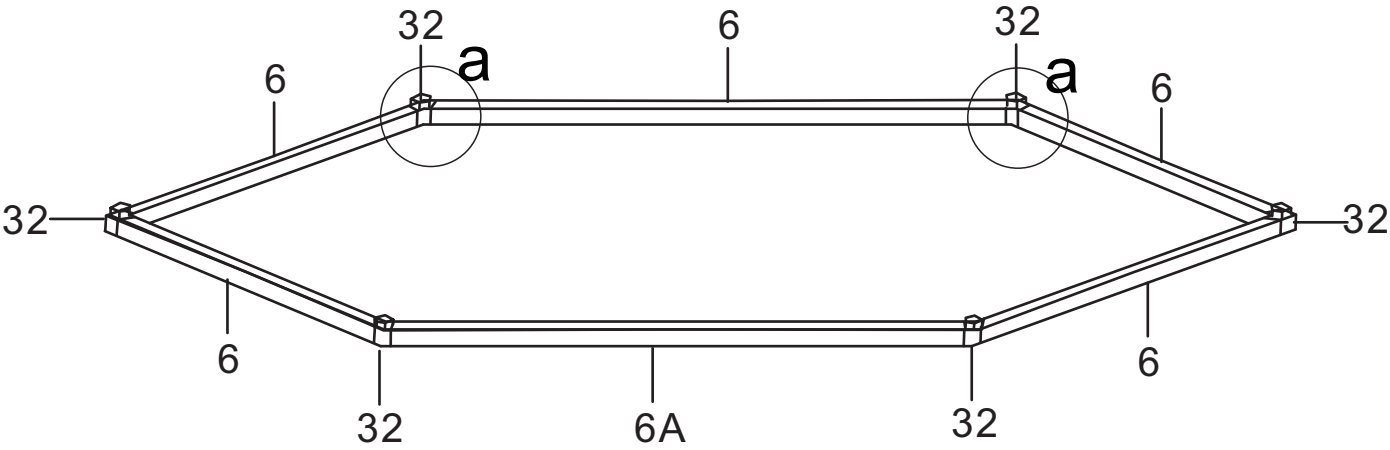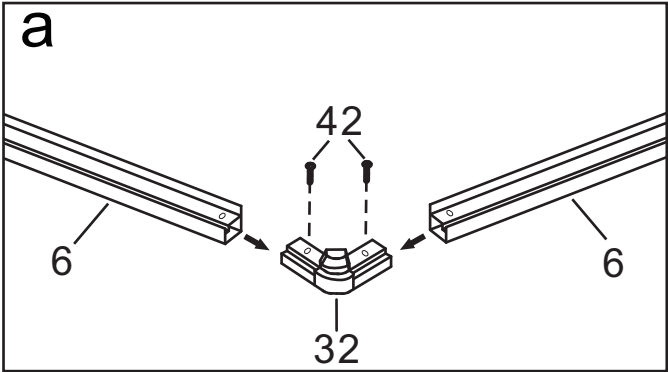


Picture	NO.	Qty.
	6	5
	6A	1
	32	6
	42	12

Step 2

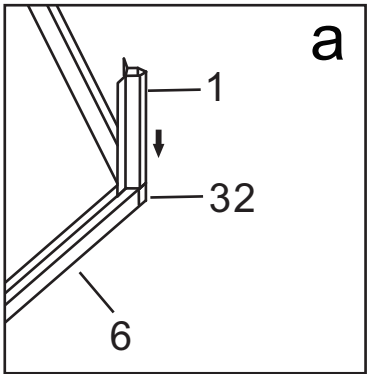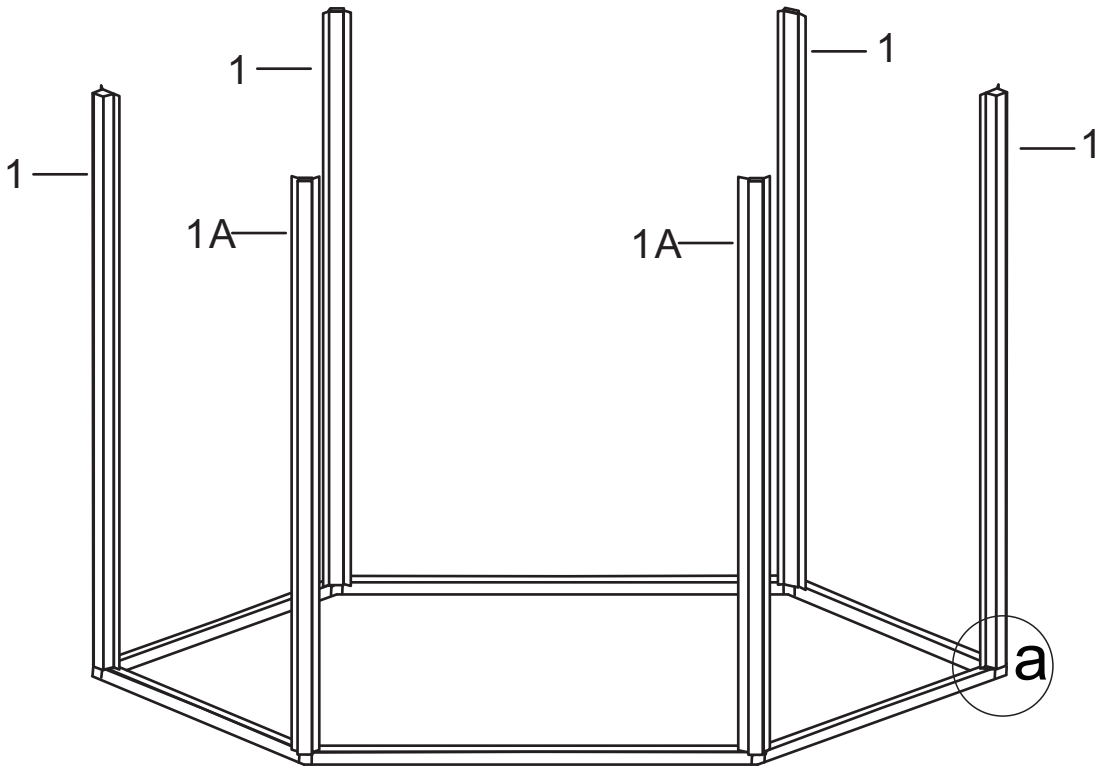


Picture	NO.	Qty.
	1	4
	1A	2



Step 3

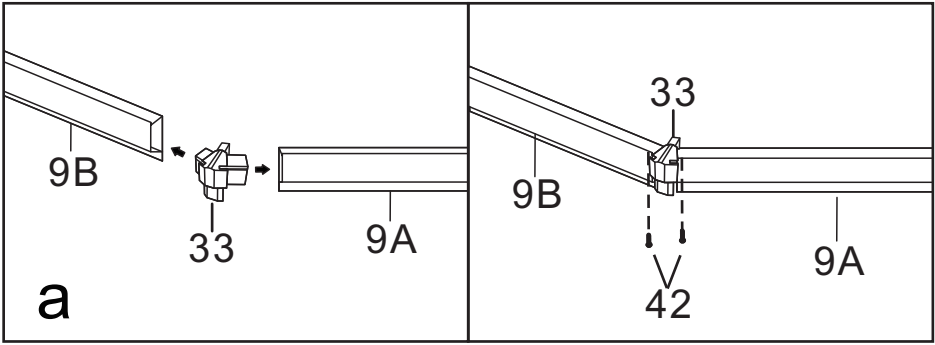

Picture	NO.	Qty.
	9	3
	9A	1
	9B	2
	33	6
	42	12


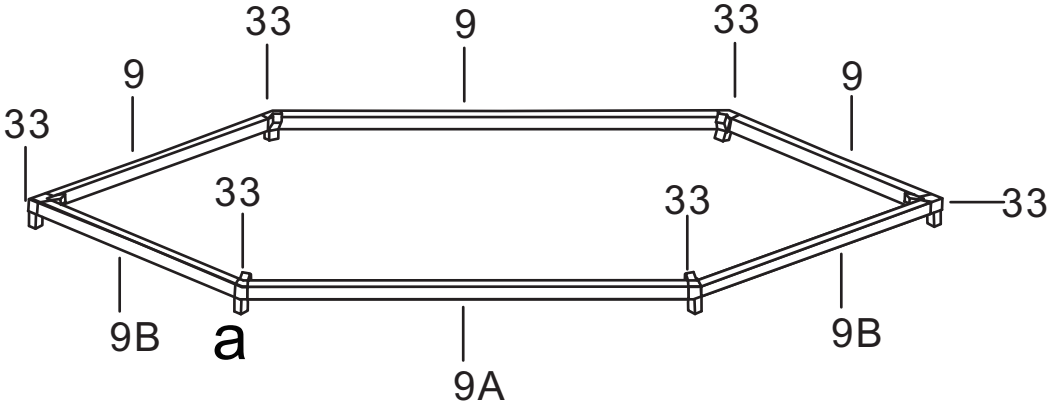


Step 4

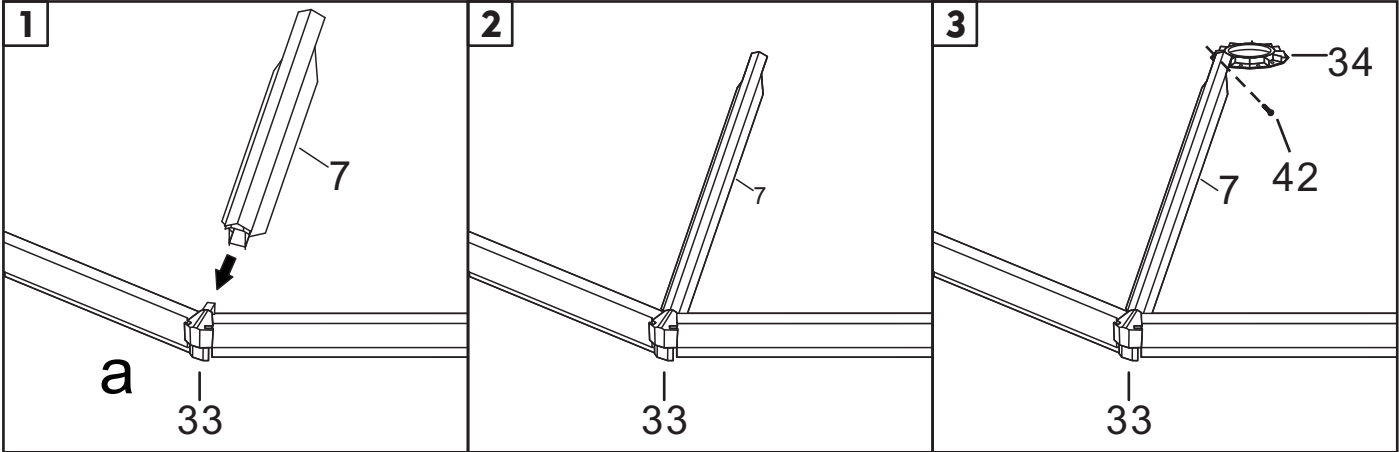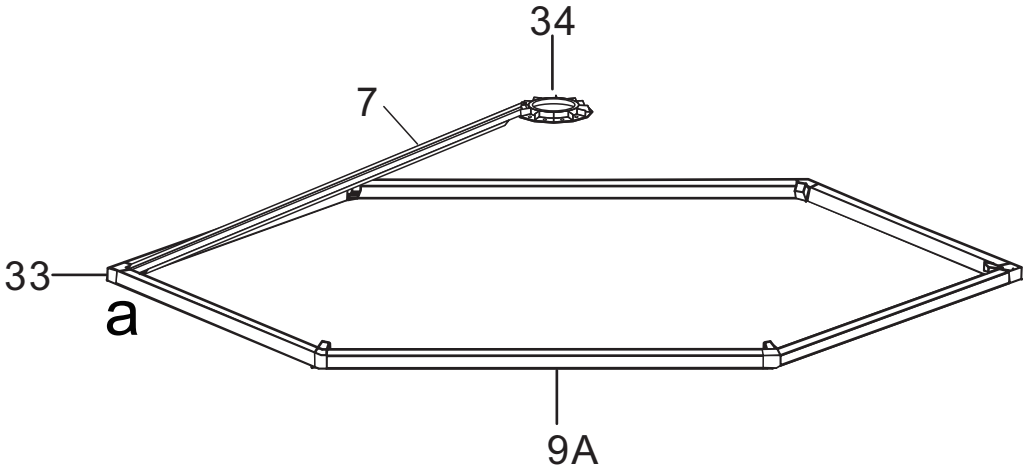


Picture	NO.	Qty.
	7	1
	34	1
	42	1

Step 5

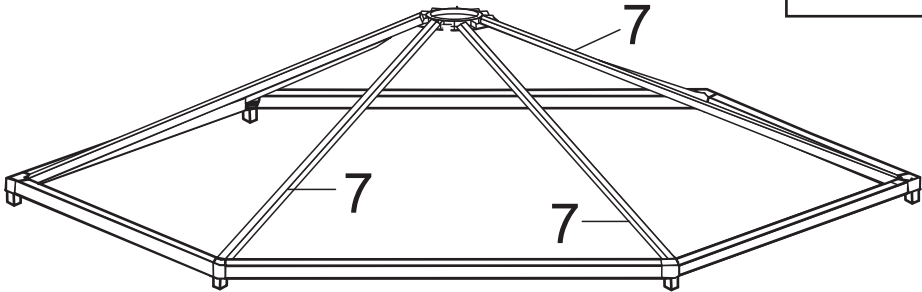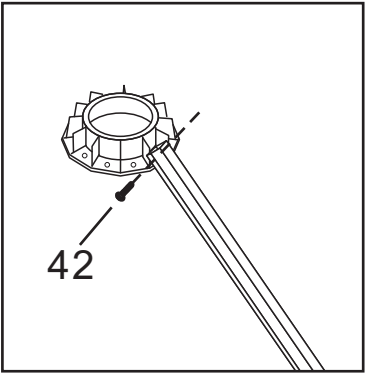



Picture	NO.	Qty.
	7	5
	42	5

Step 6

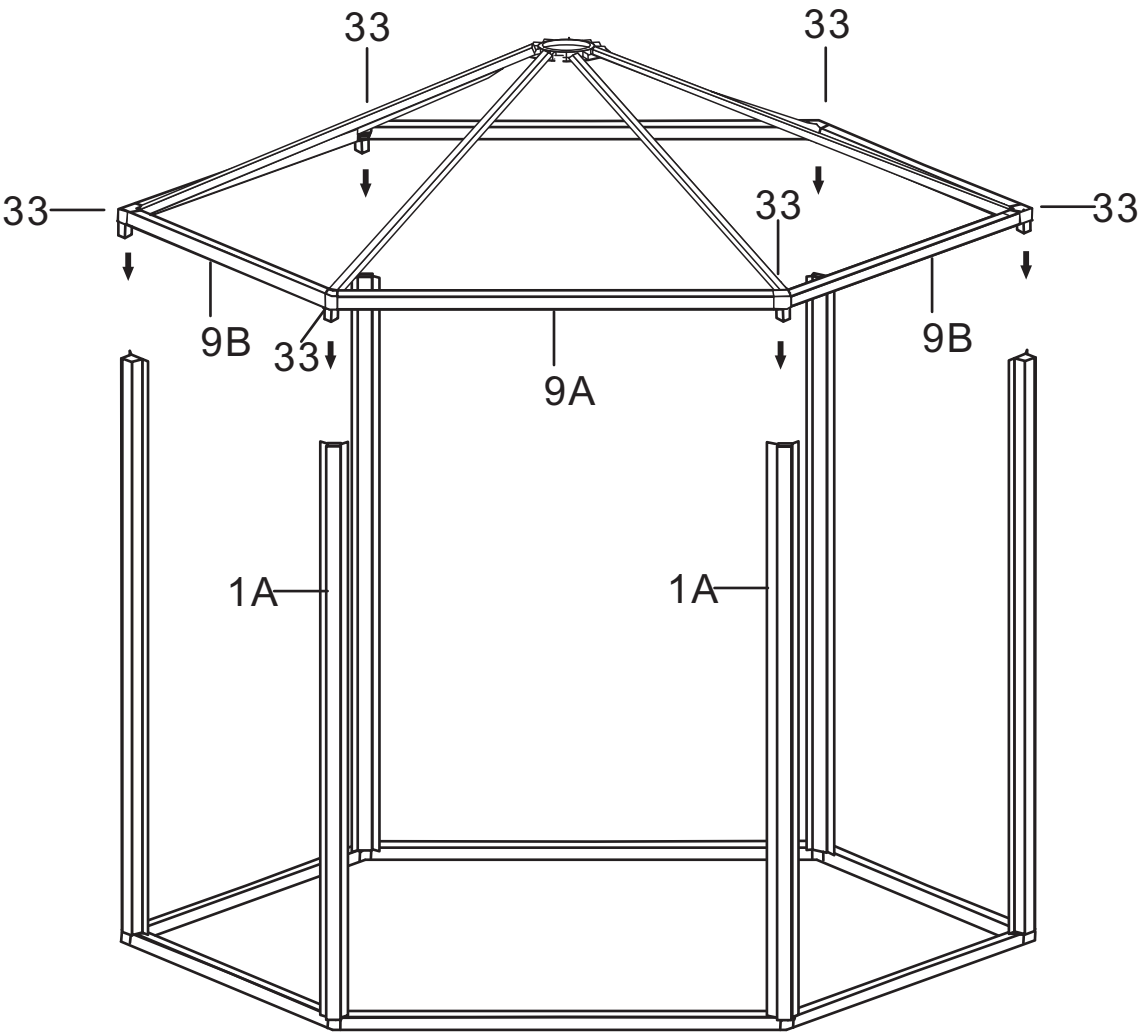


Picture	NO.	Qty.
	9	3
	9A	1
	9B	2
	33	6
	42	12

Step 7

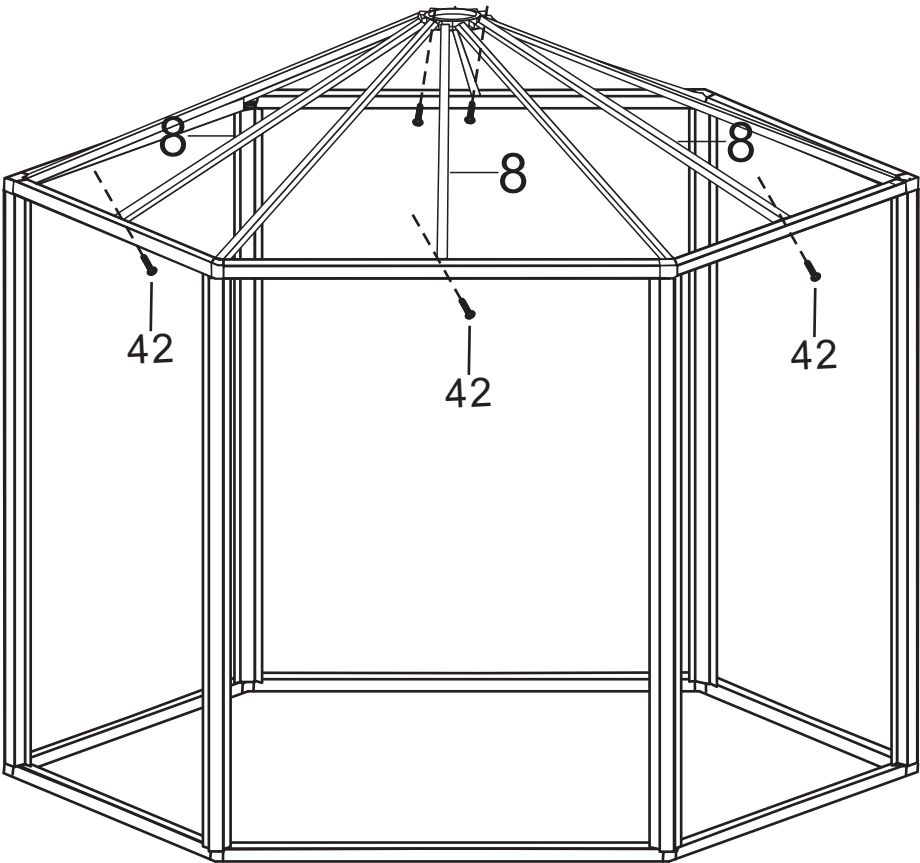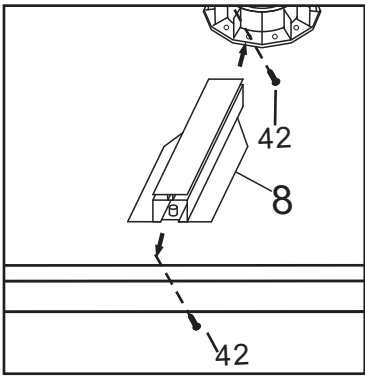


Picture	NO.	Qty.
	8	6
	42	12

Step 8


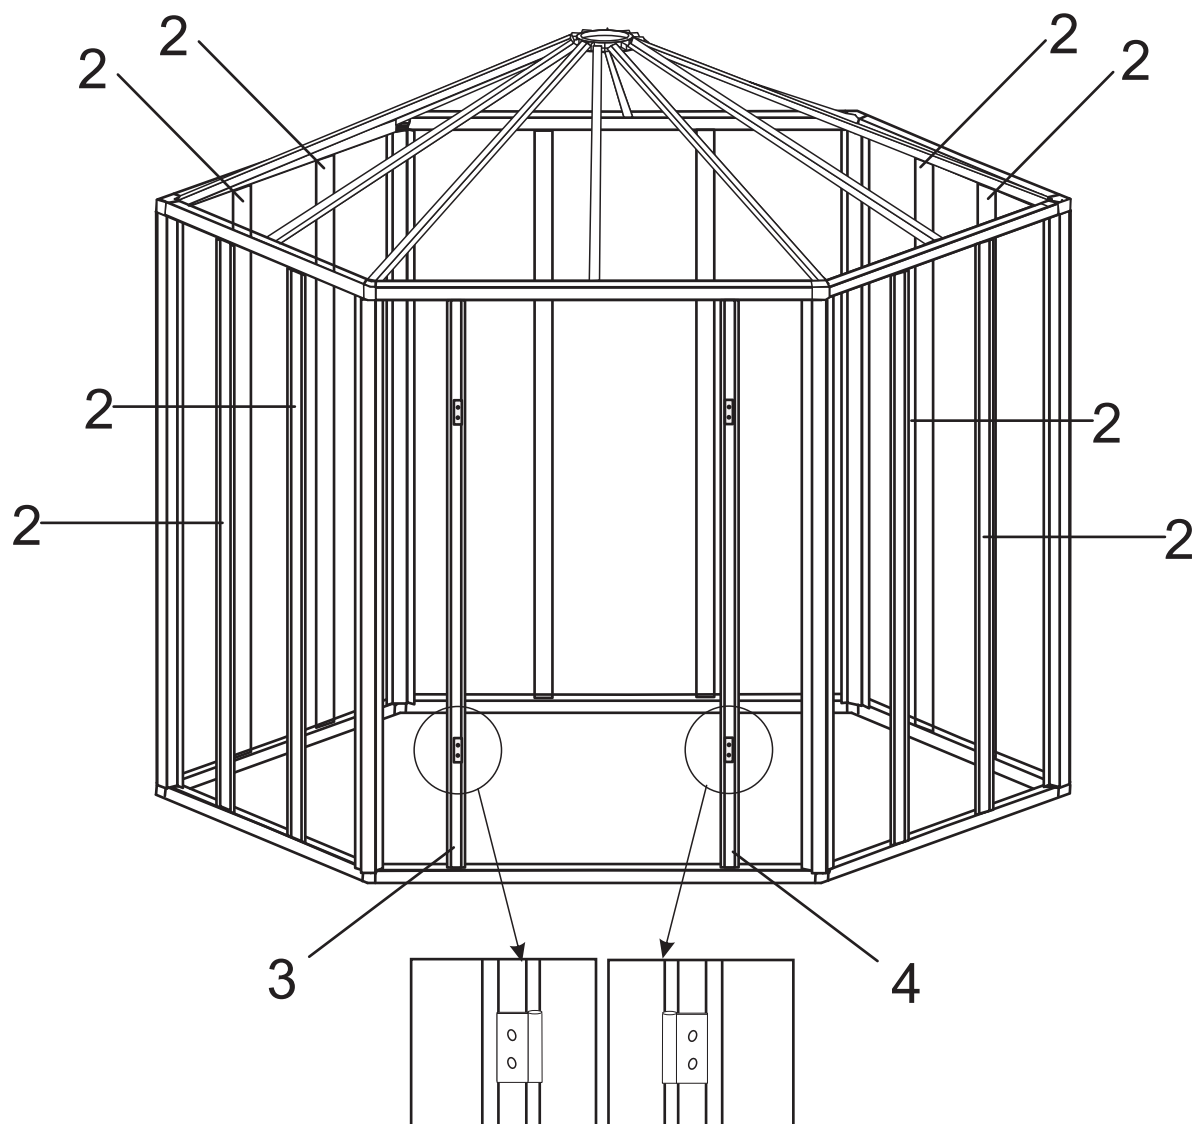


Do not tighten the screws when mounting the aluminum profile.
Tighten the screws when the installation of the sheet is complete.

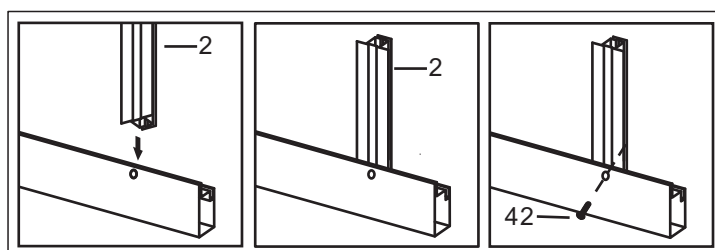




Picture	NO.	Qty.
	2	10
	3	1
	4	1
	42	24

Step 9

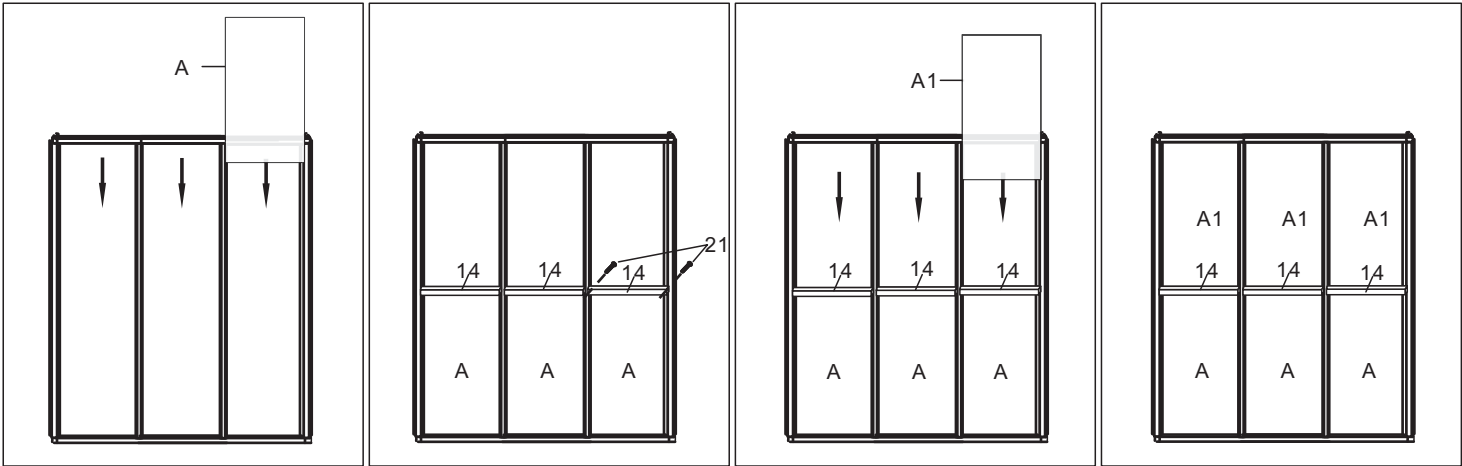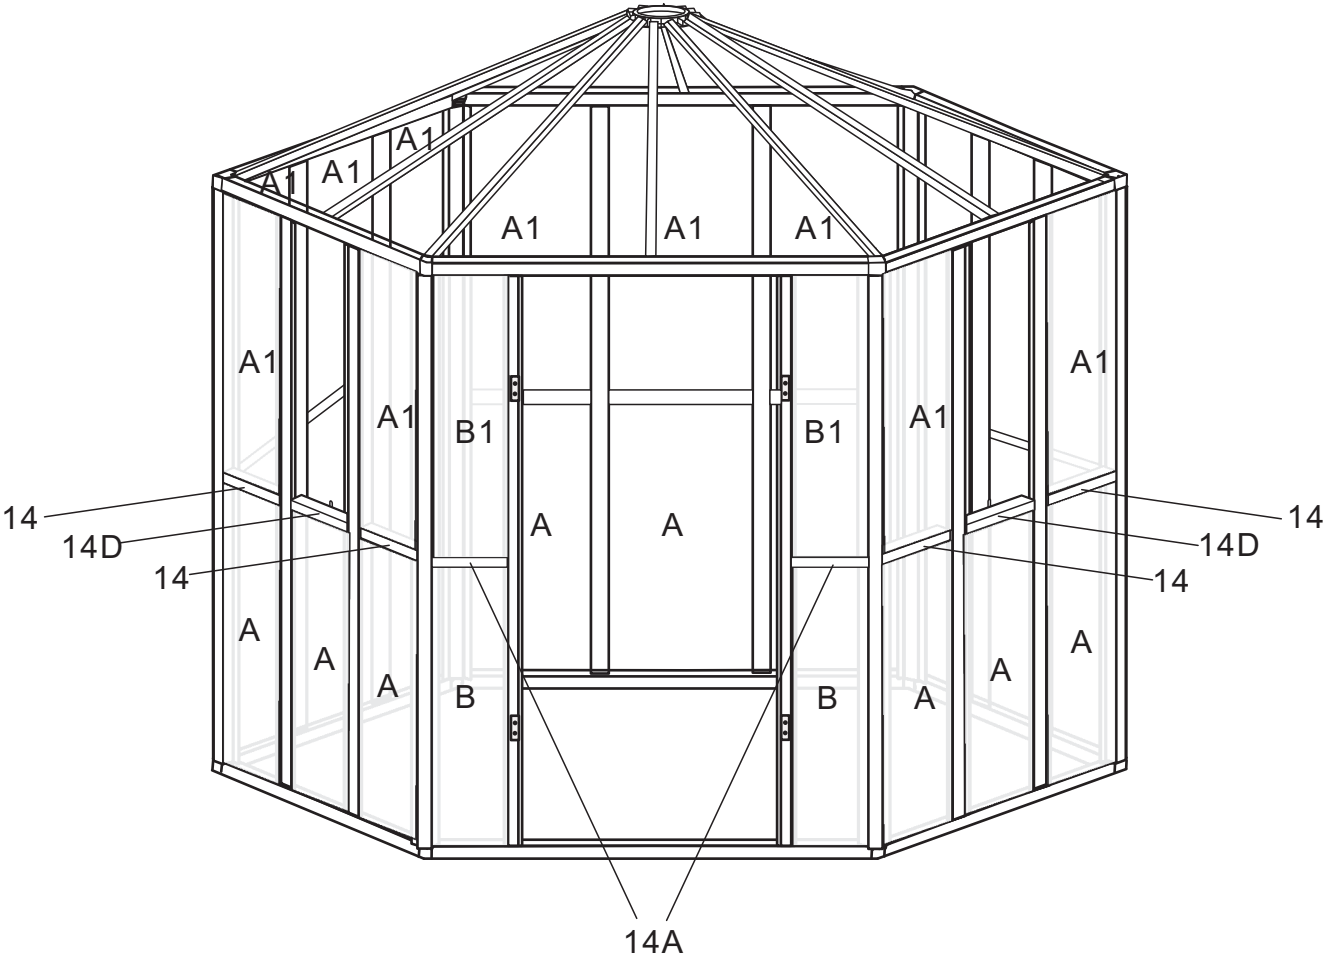

Picture	NO.	Qty.			
	14	13			
	14A	2			
	14D	2			
	42	34			
	A	15		A1	13
	B	2		B1	2


Step 10

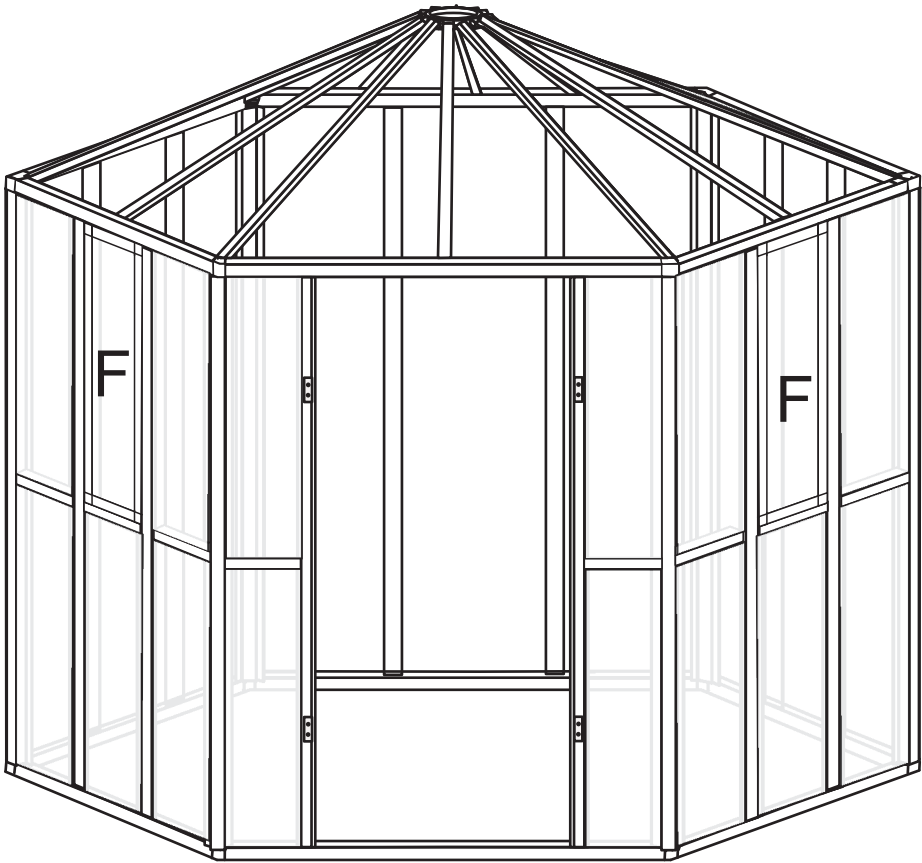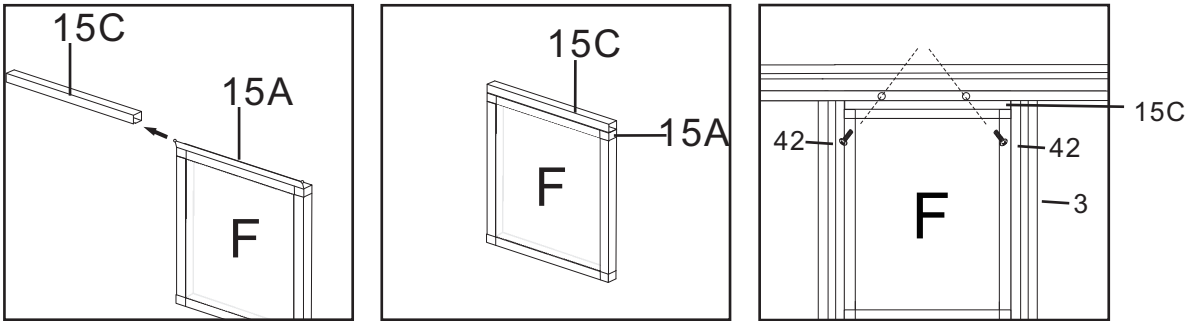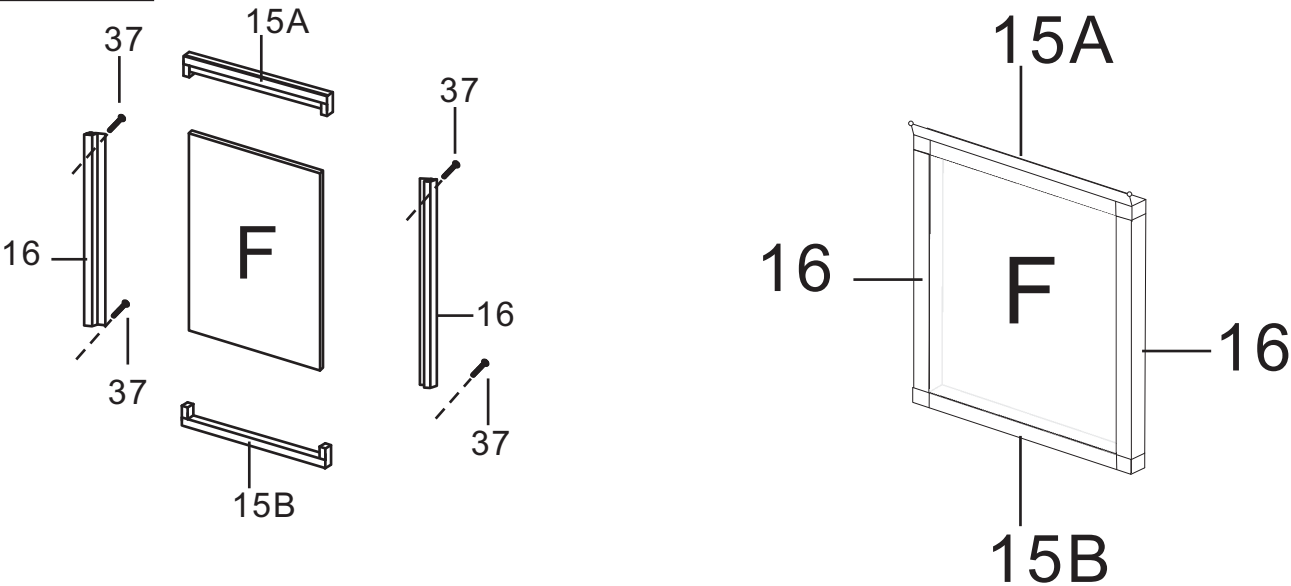


Picture	NO.	Qty.
	15A	2
	15B	2
	15C	2
	16	4
	F	2
	37	8
	42	4

Step 11


1

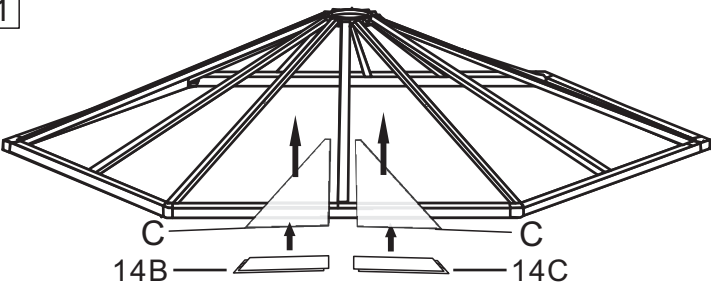


2

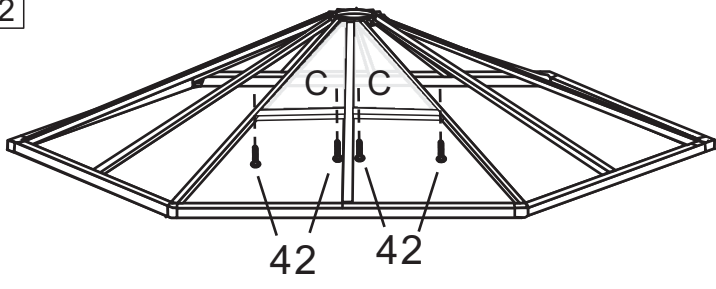


3

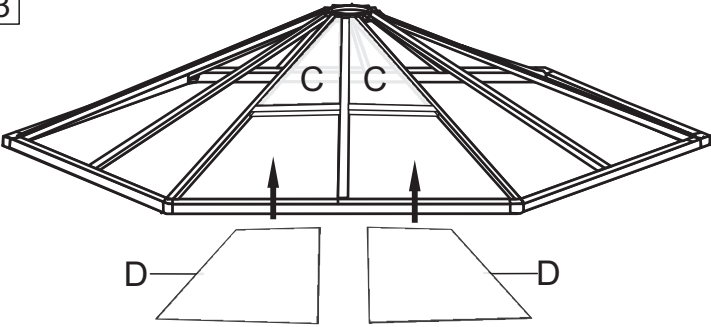

4


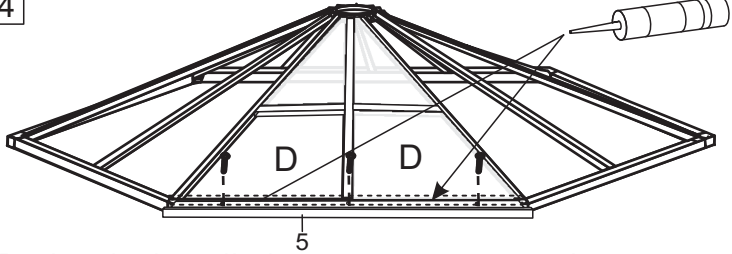


During the installation process, you need to use silicone to achieve better waterproof effect in the gap in the aluminum alloy sink.

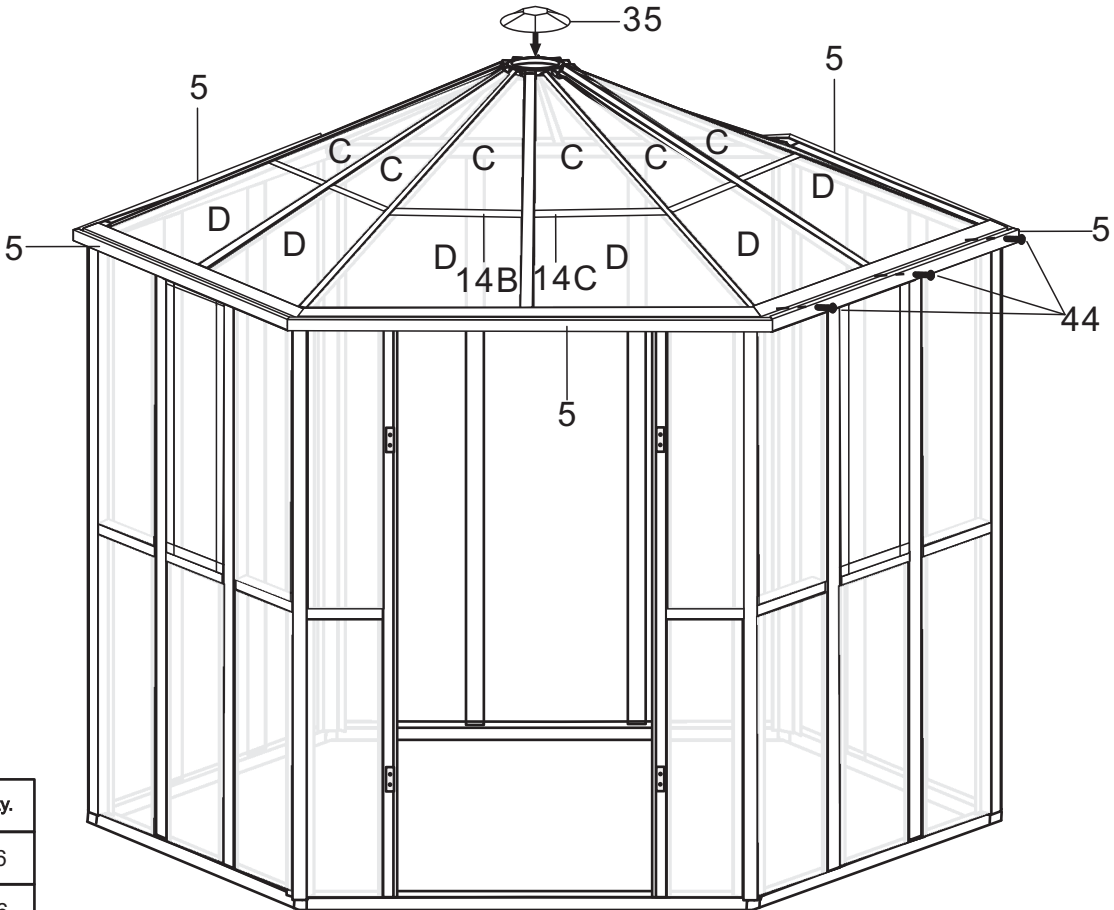


Picture	NO.	Qty.
	5	6
	14B	6
	14C	6
	C	12
	D	12
	35	1
	42	24
	44	18

Step 12

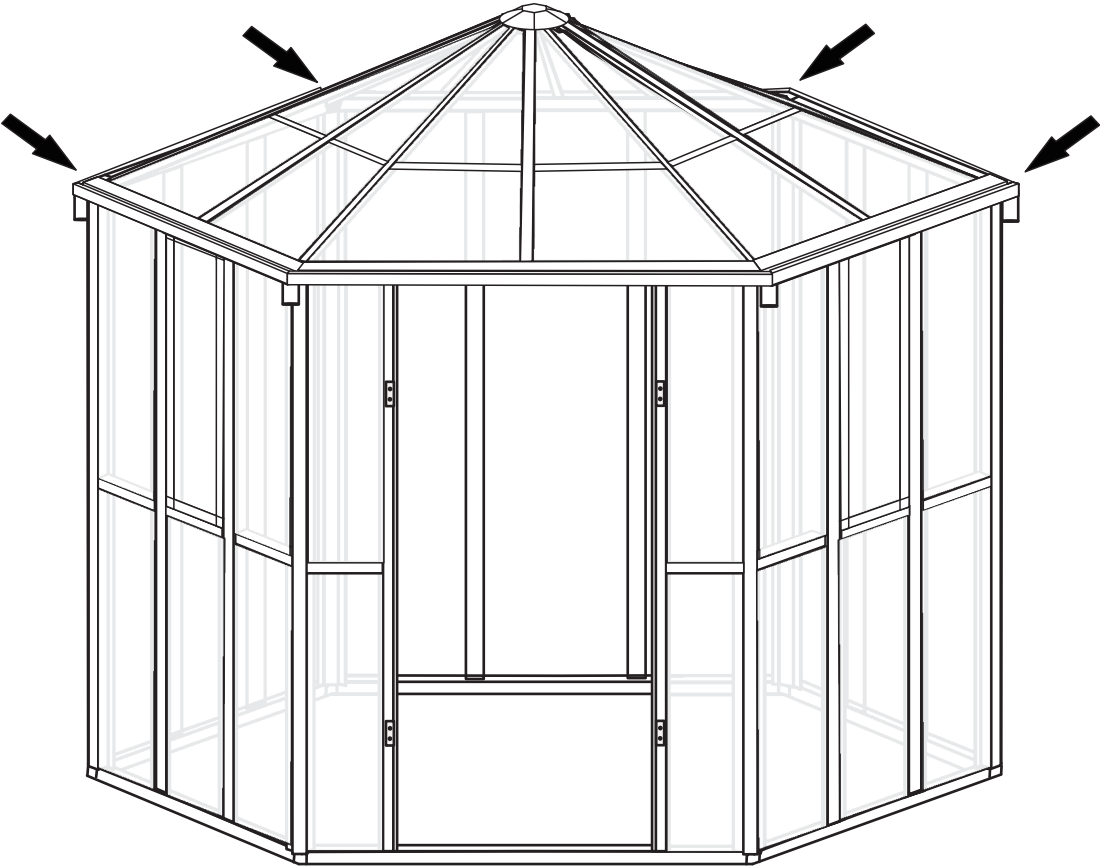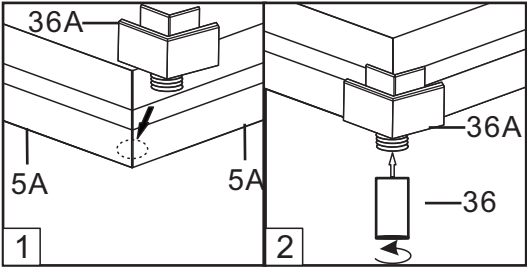


Picture	NO.	Qty.
	36	6
	36A	6

Step 13

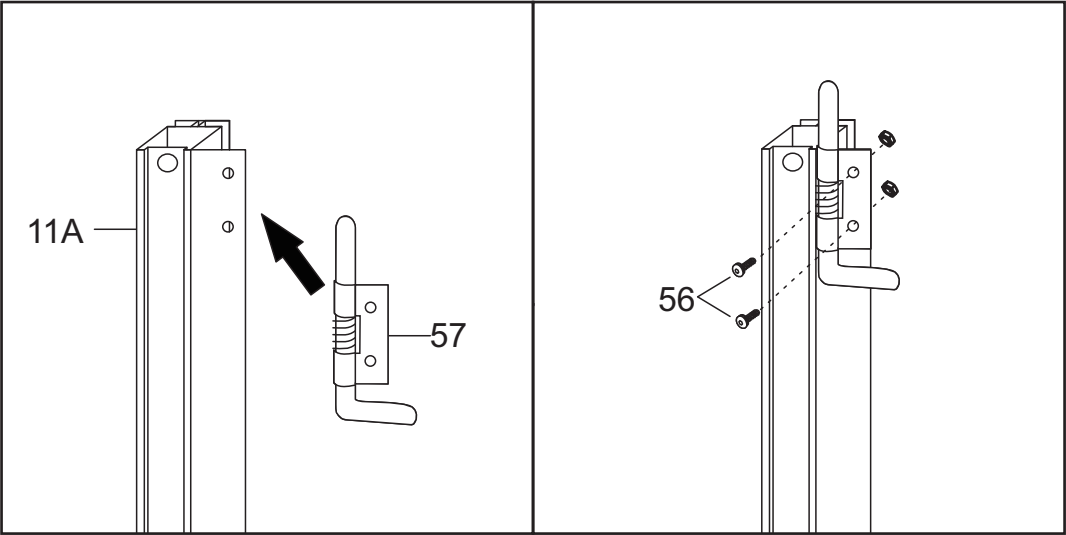




Picture	NO.	Qty.
	23A	1
	56	2
	57	1

Step 14

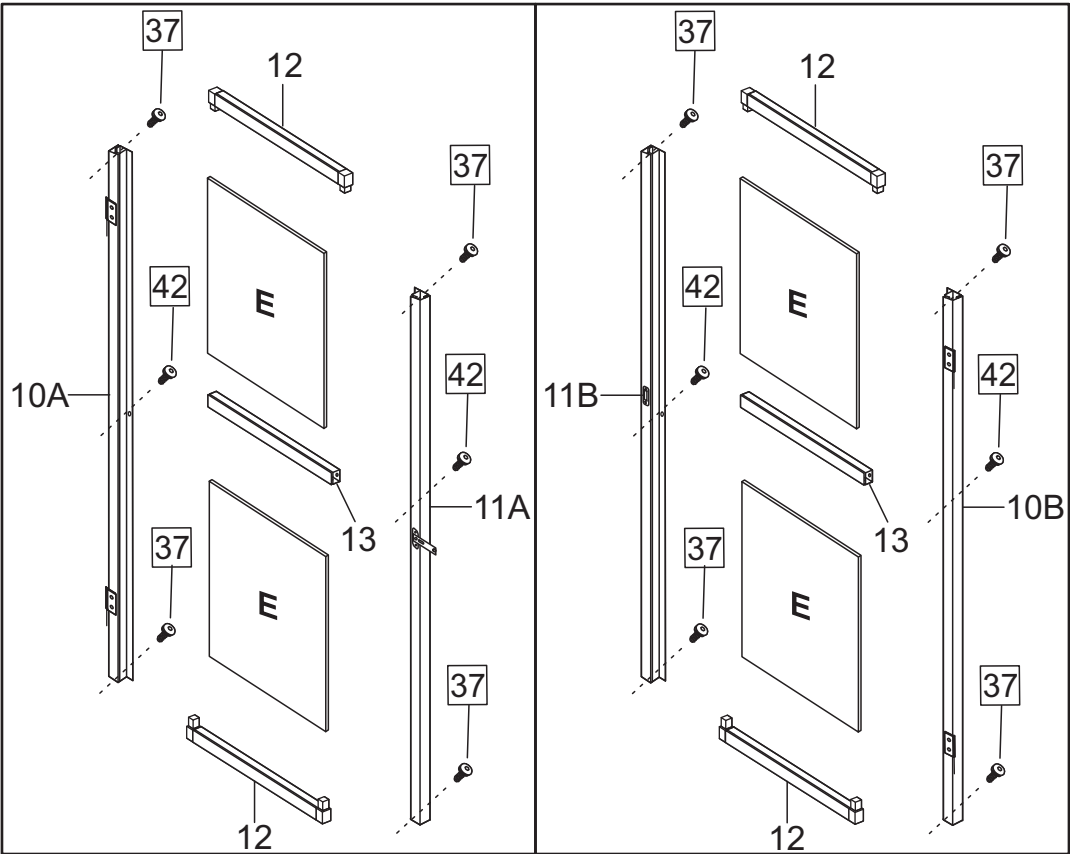

Picture	NO.	Qty.
	10A	1
	10B	1
	11A	1
	11B	1
	12	4
	13	2
	E	4
	42	4
	37	8

Step 15

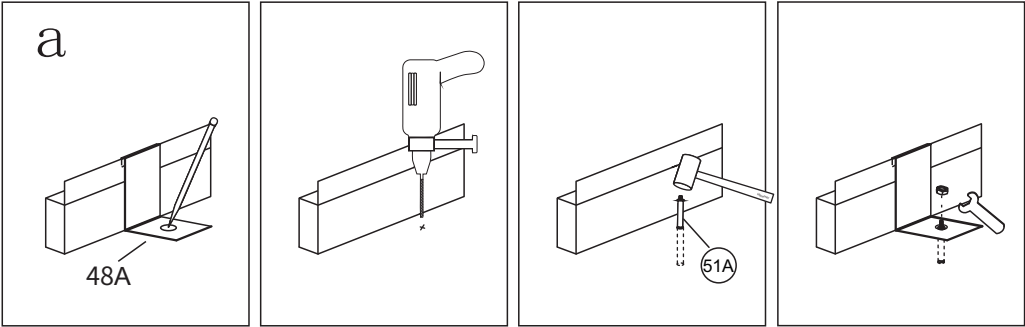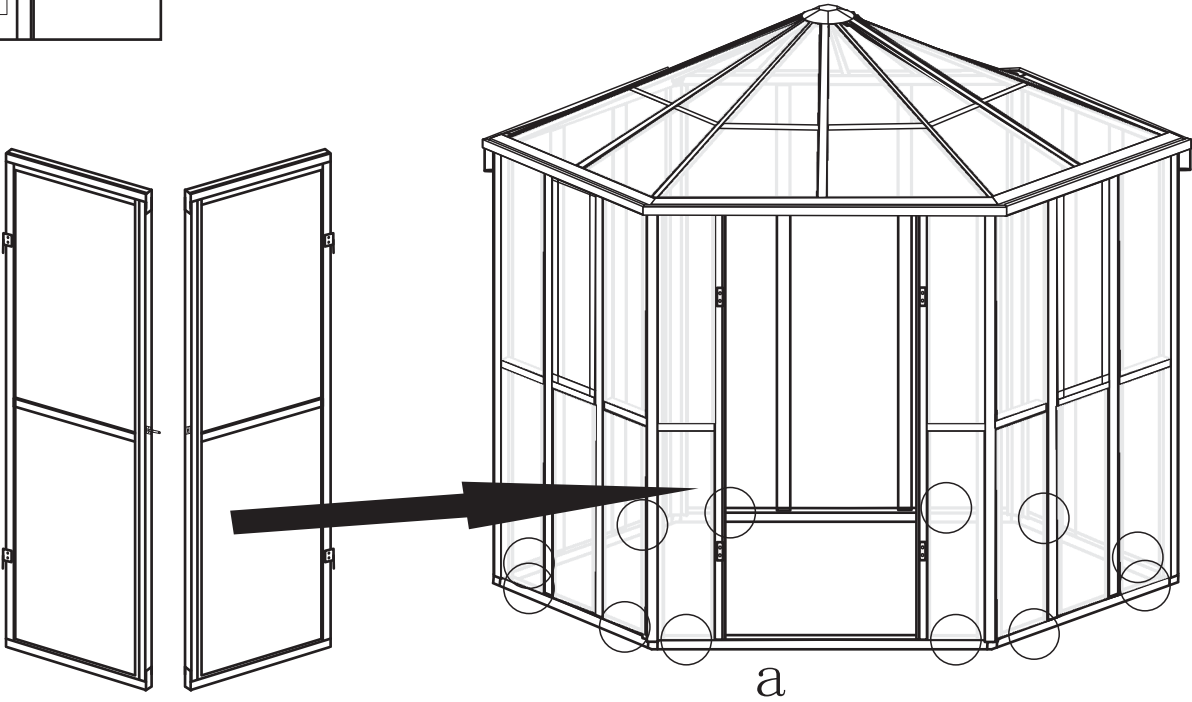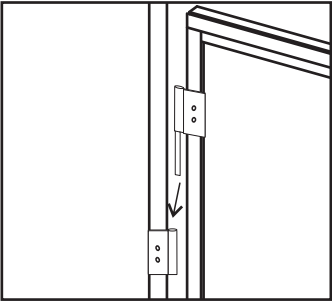

Use 51# ground spikes on lawns.
Use 51A# Expansion Screws on Hard Surfaces.

Picture	NO.	Qty.
	48A	12
	51A	12