


WOODEN RAISED GARDEN BED

Assembly Instruction – Please keep properly for future reference.

If you find any missing boxes, damaged parts, or accessory shortages, please contact the customer service team of your purchasing channel immediately. We will resolve the issue as quickly as possible.

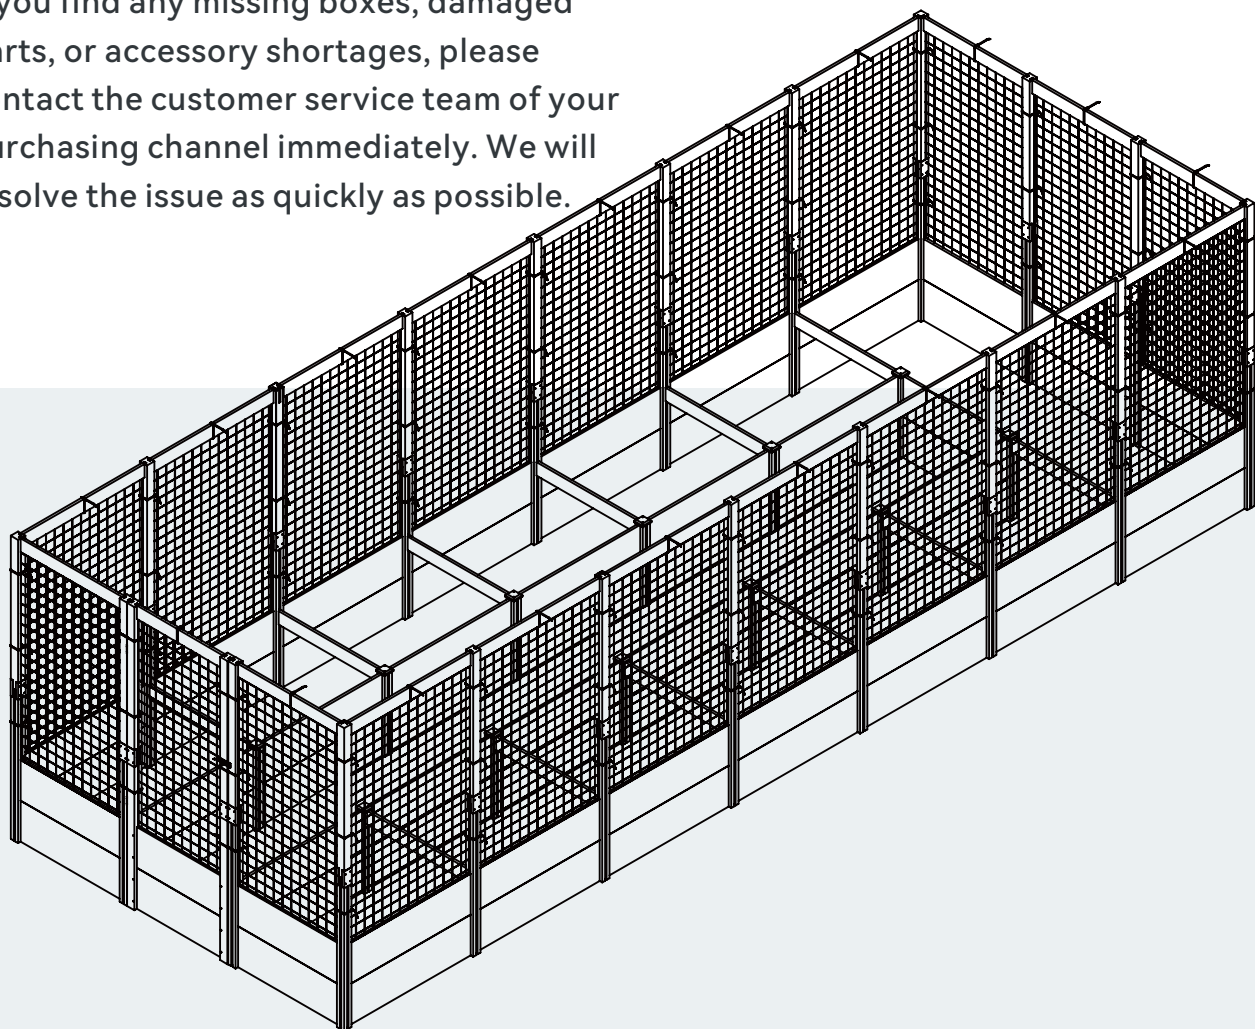

CONTACT US

- **Email: service@grandtunnel.com**
In order to receive assistance more quickly, please provide

THE FOLLOWING INFORMATION:

- Order number
- Purchase platform
- Purchase date
- Detailed description of the issue along with photos (if applicable)

EN

Important – Please read these instructions carefully before starting the installation.

CUSTOMER SERVICE GUIDE

Thank you for choosing our product! We are committed to providing you with excellent service. If you find any missing parts, damaged packaging, or product damage after receiving all packages, please follow the steps below to quickly contact our customer service team. We will do our best to resolve your issue.

1. Missing Parts

Verify Parts:

1. Refer to the “Parts List” in the manual to verify the name, specifications, and quantity of the missing parts.
2. Take a clear photo of the parts list and mark the missing parts with detailed information, e.g., “Missing 5 pieces of M6X30mm screws.”

Contact Us:

· By Email:

Send an email to service@grandtunnel.com, with the subject line “Missing Parts Issue.” Include the following in the email:

- A description of the missing parts and a photo of the parts list.
- Order details (order number, purchase platform, purchase date).

2. Product or Packaging Damage

If it affects normal use:

Steps:

1. Take clear photos or videos showing the damaged parts and the extent of the damage (multiangle shots are recommended).
2. Email the photos/videos along with order details to service@grandtunnel.com, with the subject line “Product Damage Issue.”

Resolution:

After verification, we will arrange for a replacement part, product exchange, or refund as quickly as possible.

If it does not affect normal use:

Steps:

1. Contact our customer service team (by email: service@grandtunnel.com).
2. Provide a description of the damage and include relevant photos or videos.

Resolution:

We will provide repair guidance or an appropriate compensation plan based on the specific situation.

Contact Us:

· Customer Service Email: service@grandtunnel.com

Helpful Tips

To process your issue efficiently, please prepare the following information:

- Order details (order number, purchase platform, purchase date).
- Clear photos or videos.
- We are committed to providing quick and professional solutions, no matter the size of the issue, to ensure your satisfaction.

Thank you for your trust and support! We hope you enjoy using our product!

! NOTICE

Please retain instructions for future needs.

- Do not stand on or use any parts of this item as a step ladder.
- Fasten screws loosely during assembly. Do not firmly tighten the screws until the item is completely assembled.
- Double-check all the bolts, screws, and knobs have been firmly tightened before use.
- To prevent items fall apart, please regularly check if all bolts, screws, and knobs are secure.
- Do not use or store this item in the proximity of open flame or flammable/combustible
- Be aware that some parts are heavy and have sharp edges when assembling and using.
- If any parts are missing, broken, damaged, or worn in 90 days, stop using or assembling this product, please do not hesitate to contact us, we will send the factory replacement parts for free.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the
- This item is made of wood and may expand due to moisture.
- It is recommended that two people work together for the installation.
- A plastic mallet can be used to gently and evenly tap the wooden board into the groove.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



2 PERSON
ASSEMBLY



APPROXIMATELY
90 MIN.
ASSEMBLY

HARDWARE

A



M3x18mm
x200

B



M4x35mm
x32

C






M3x20mm
x18

Special Reminder




Tip: Before installing the product, please read the installation instructions carefully. Some components look very similar, so please observe them closely before proceeding with the installation.

Special Note: All slotted components must be positioned at a 90-degree perpendicular angle to the board, as shown in the diagram. If the angle is correct but installation remains difficult, you may use a hammer to gently tap the component for assistance. Forcing insertion at an incorrect angle may cause damage to the components.




Tip 1

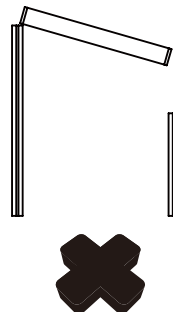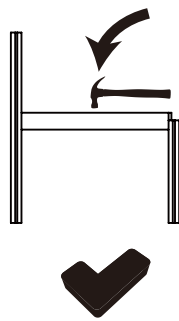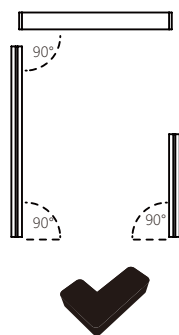




Tip 2

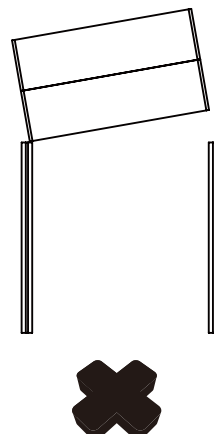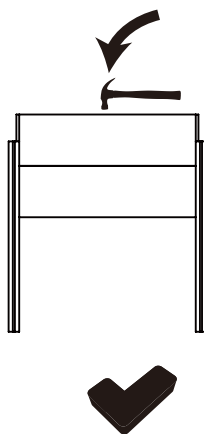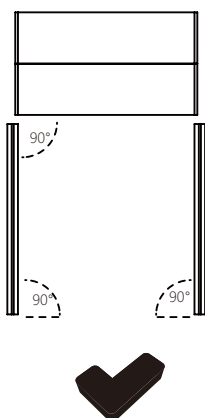

Tip 3

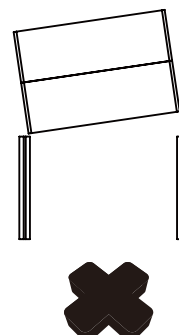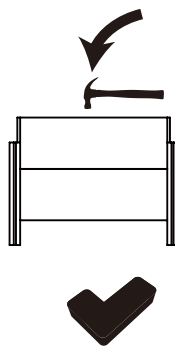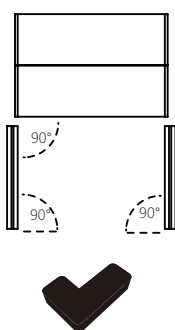


Tip 4

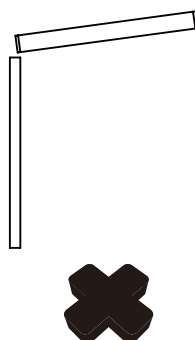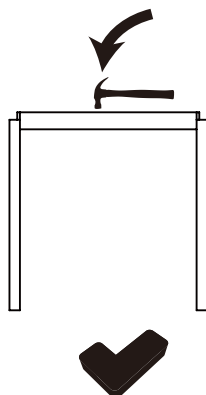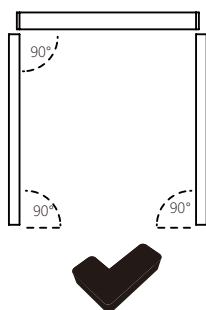


Special Reminder












When installing the hinge, please note that it has two sides. Make sure to confirm the correct direction before installation.

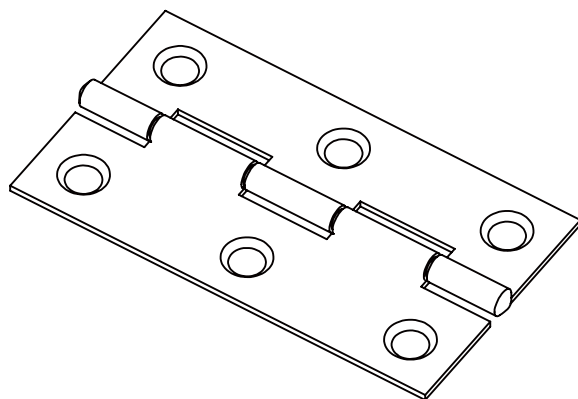

Place it as shown in the picture, with the countersunk hole facing up as the side for installing screws

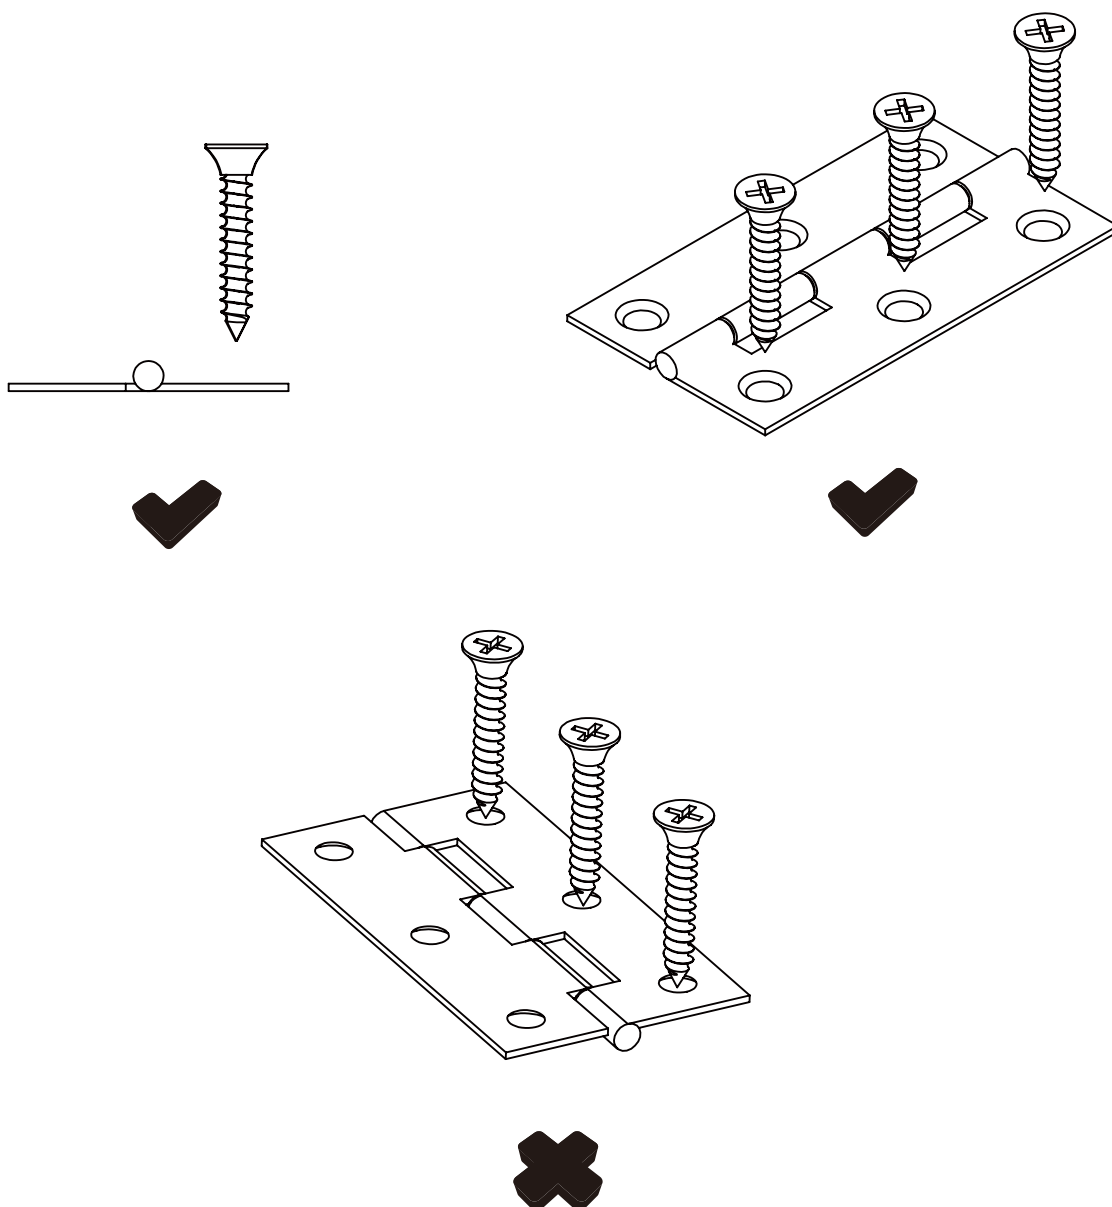


Parts List

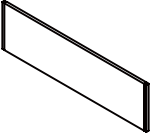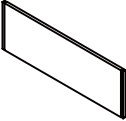
1  x52	2  x12	3  x2	4  x1	5  x14
6  x17	7  x20	8  x12	9  x18	10  x4
11  x1	12  x1	13  x5	14  x14	15  x1
16  x44	17  x2	18  x1	19  x12	20  x90

PRODUCT ASSEMBLY

1


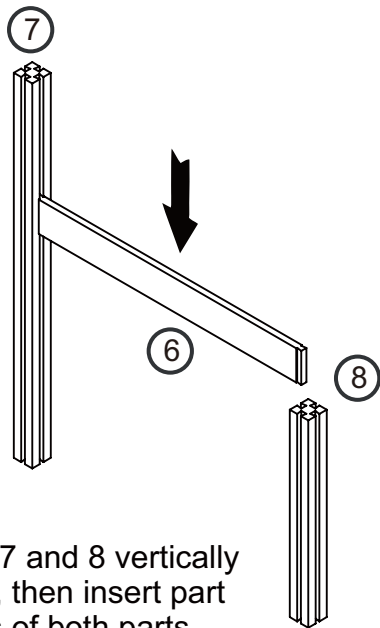


Position parts 7 and 8 vertically on the ground, then insert part 6 into the slots of both parts. Secure the position using screws.

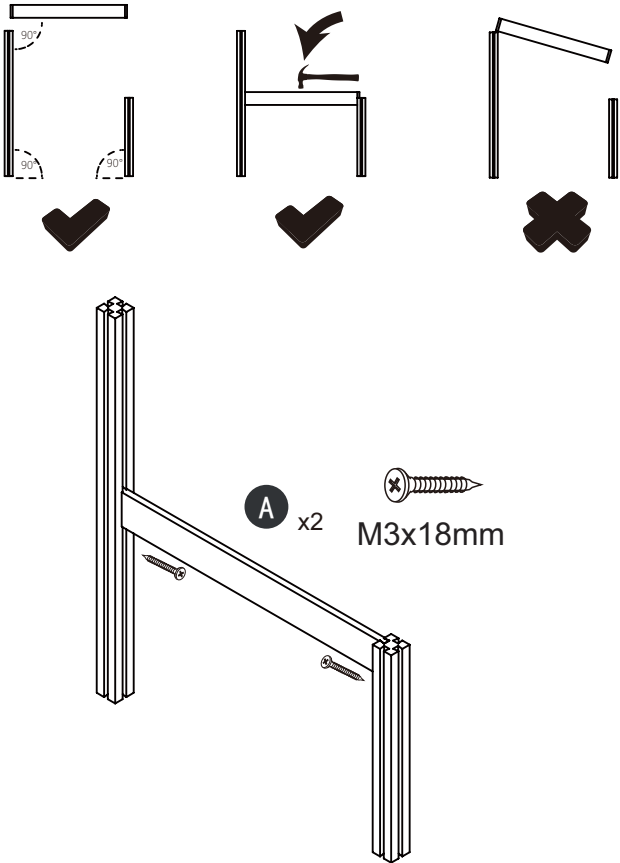

Repeat this assembly step*12

2

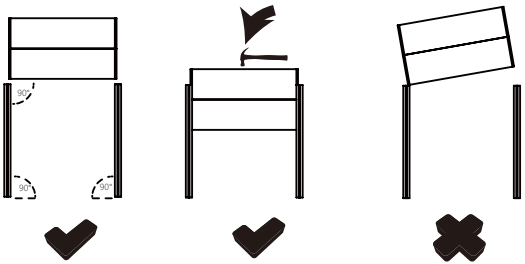
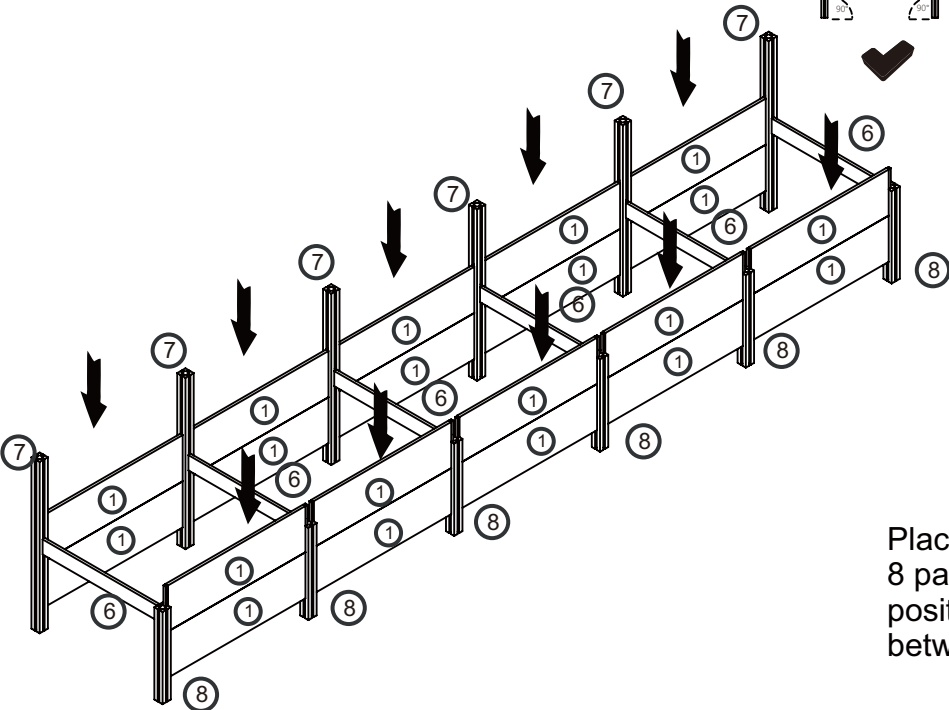


Place the assembled 6, 7, and 8 parts side by side in position, then insert part 1 between two connected parts.

Repeat this assembly step*2

PRODUCT ASSEMBLY



3

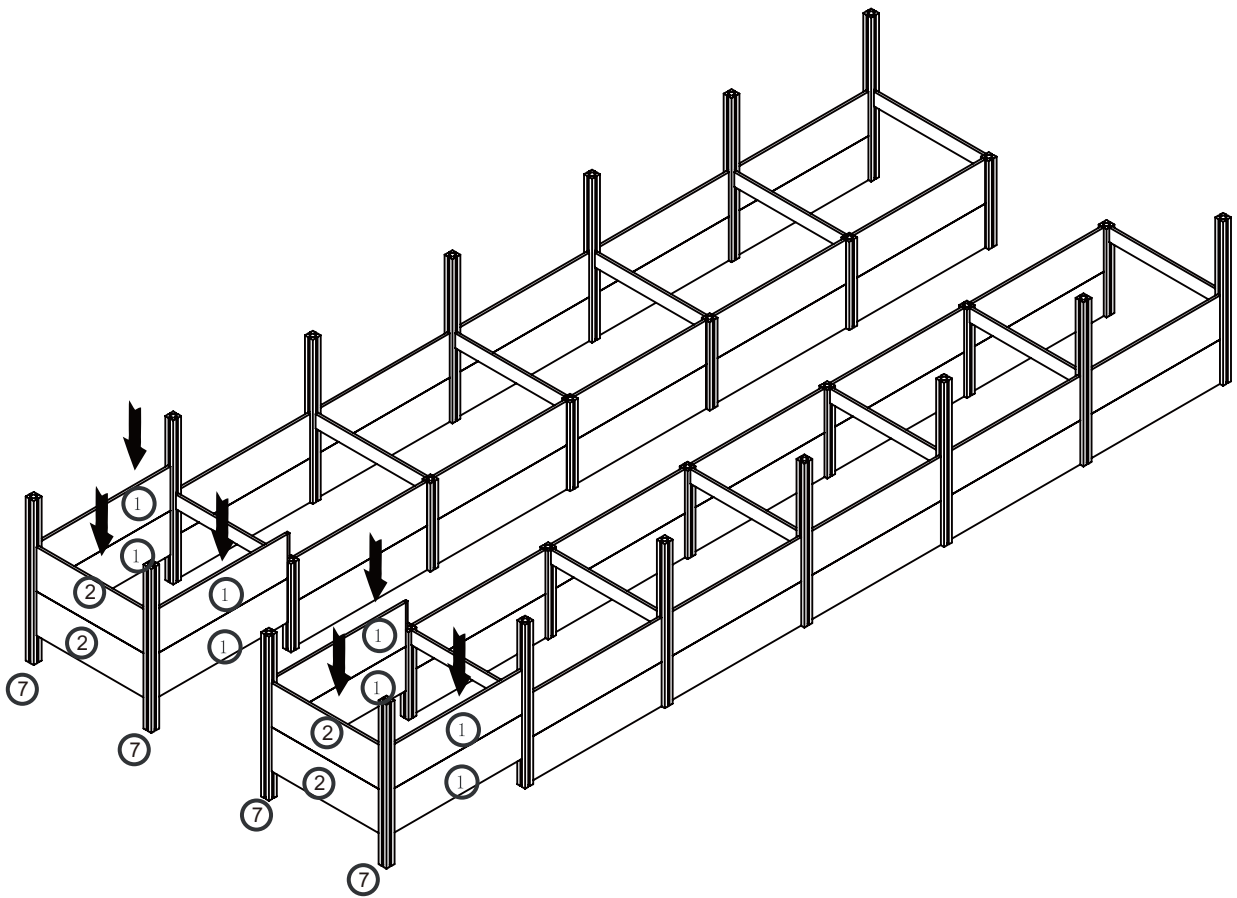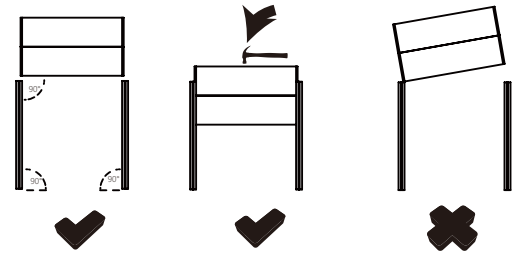

1. Continue installing part1 and part2 (side panels) onto the already assembled frame.
2. First, insert part1 into the designated slots and ensure it is securely in place.
3. Install part2 at both ends of the frame to make the structure more complete and stable.
4. Make sure all side panels are properly aligned and not tilted.
5. Refer to the correct installation diagram at the top to ensure the side panels are fully attached to the vertical posts and positioned at the correct angle.
6. Avoid incorrect installation, such as tilted or misaligned connections.



PRODUCT ASSEMBLY

4

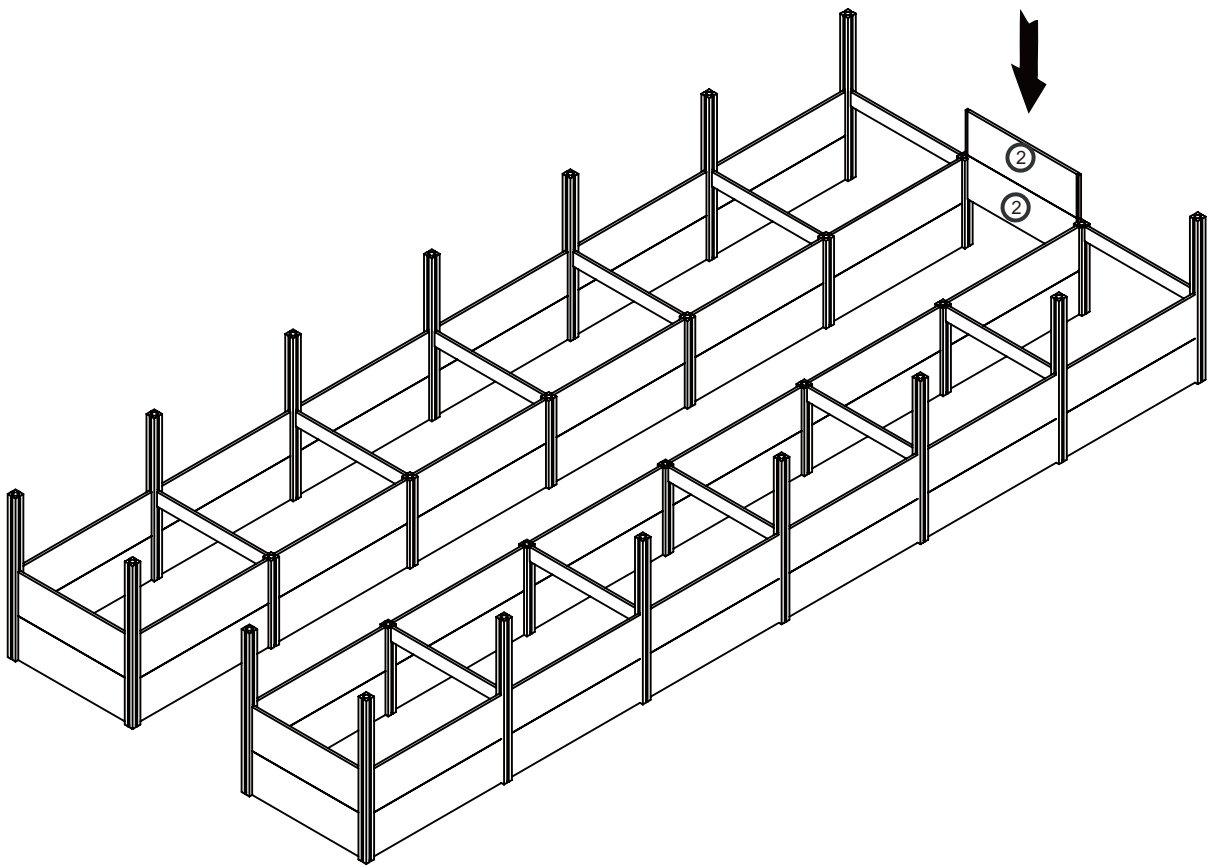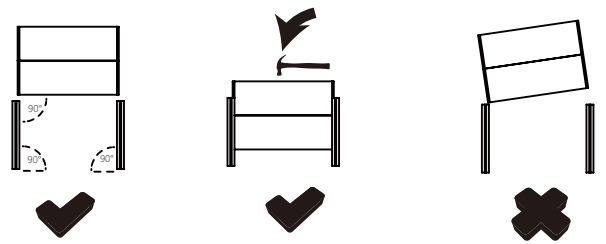

Use part 2 to connect the two frames at one end of the structure.

5

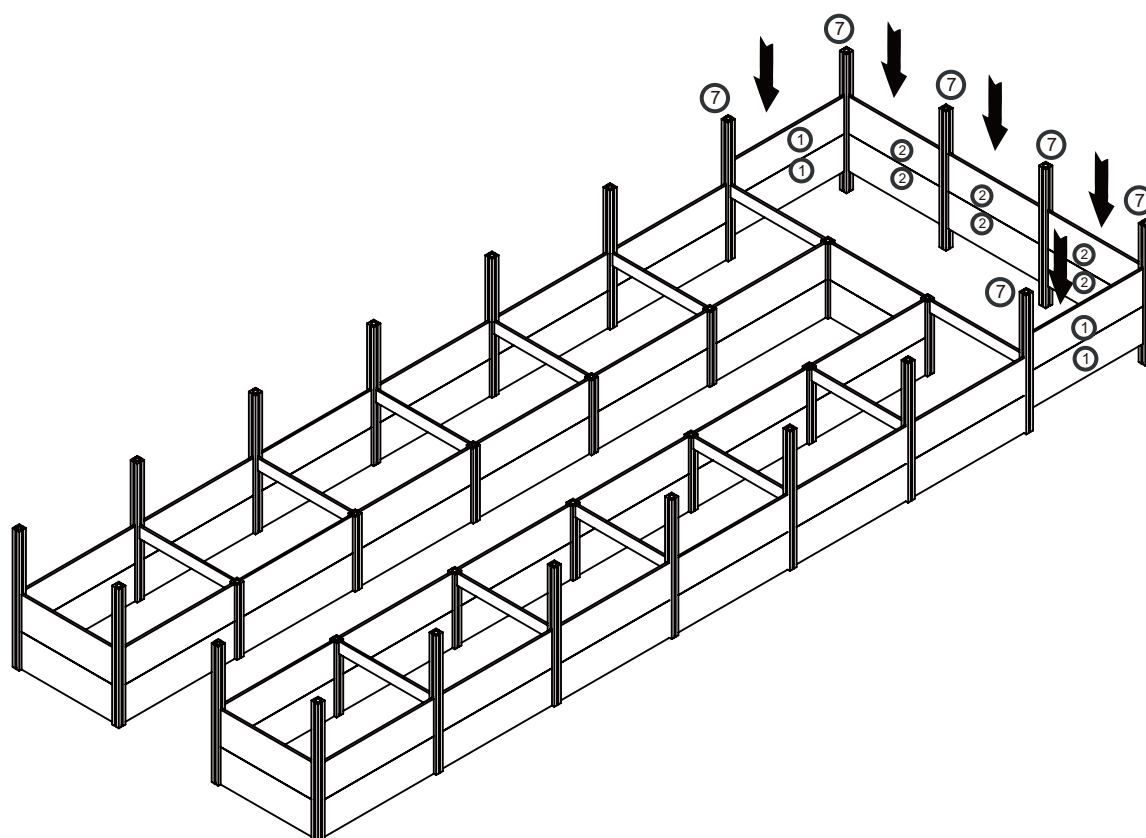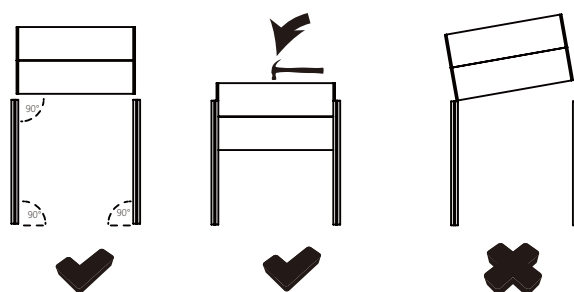


1. At one end of the frame, install part 7 in the designated positions as shown in the diagram, ensuring that it is inserted vertically into the structure.
2. Insert part 1 and part 2 sequentially into the slots of the vertical posts, making sure they are securely fixed.
3. Refer to the correct installation diagram at the top to ensure that the vertical posts and side panels are properly installed, not tilted, and fit tightly together.

PRODUCT ASSEMBLY

6

Note:

1. The end of Post No. 9 with the slot should face upward.
2. The slot should be oriented as shown in the picture, positioned on the adjacent sides of the two posts.

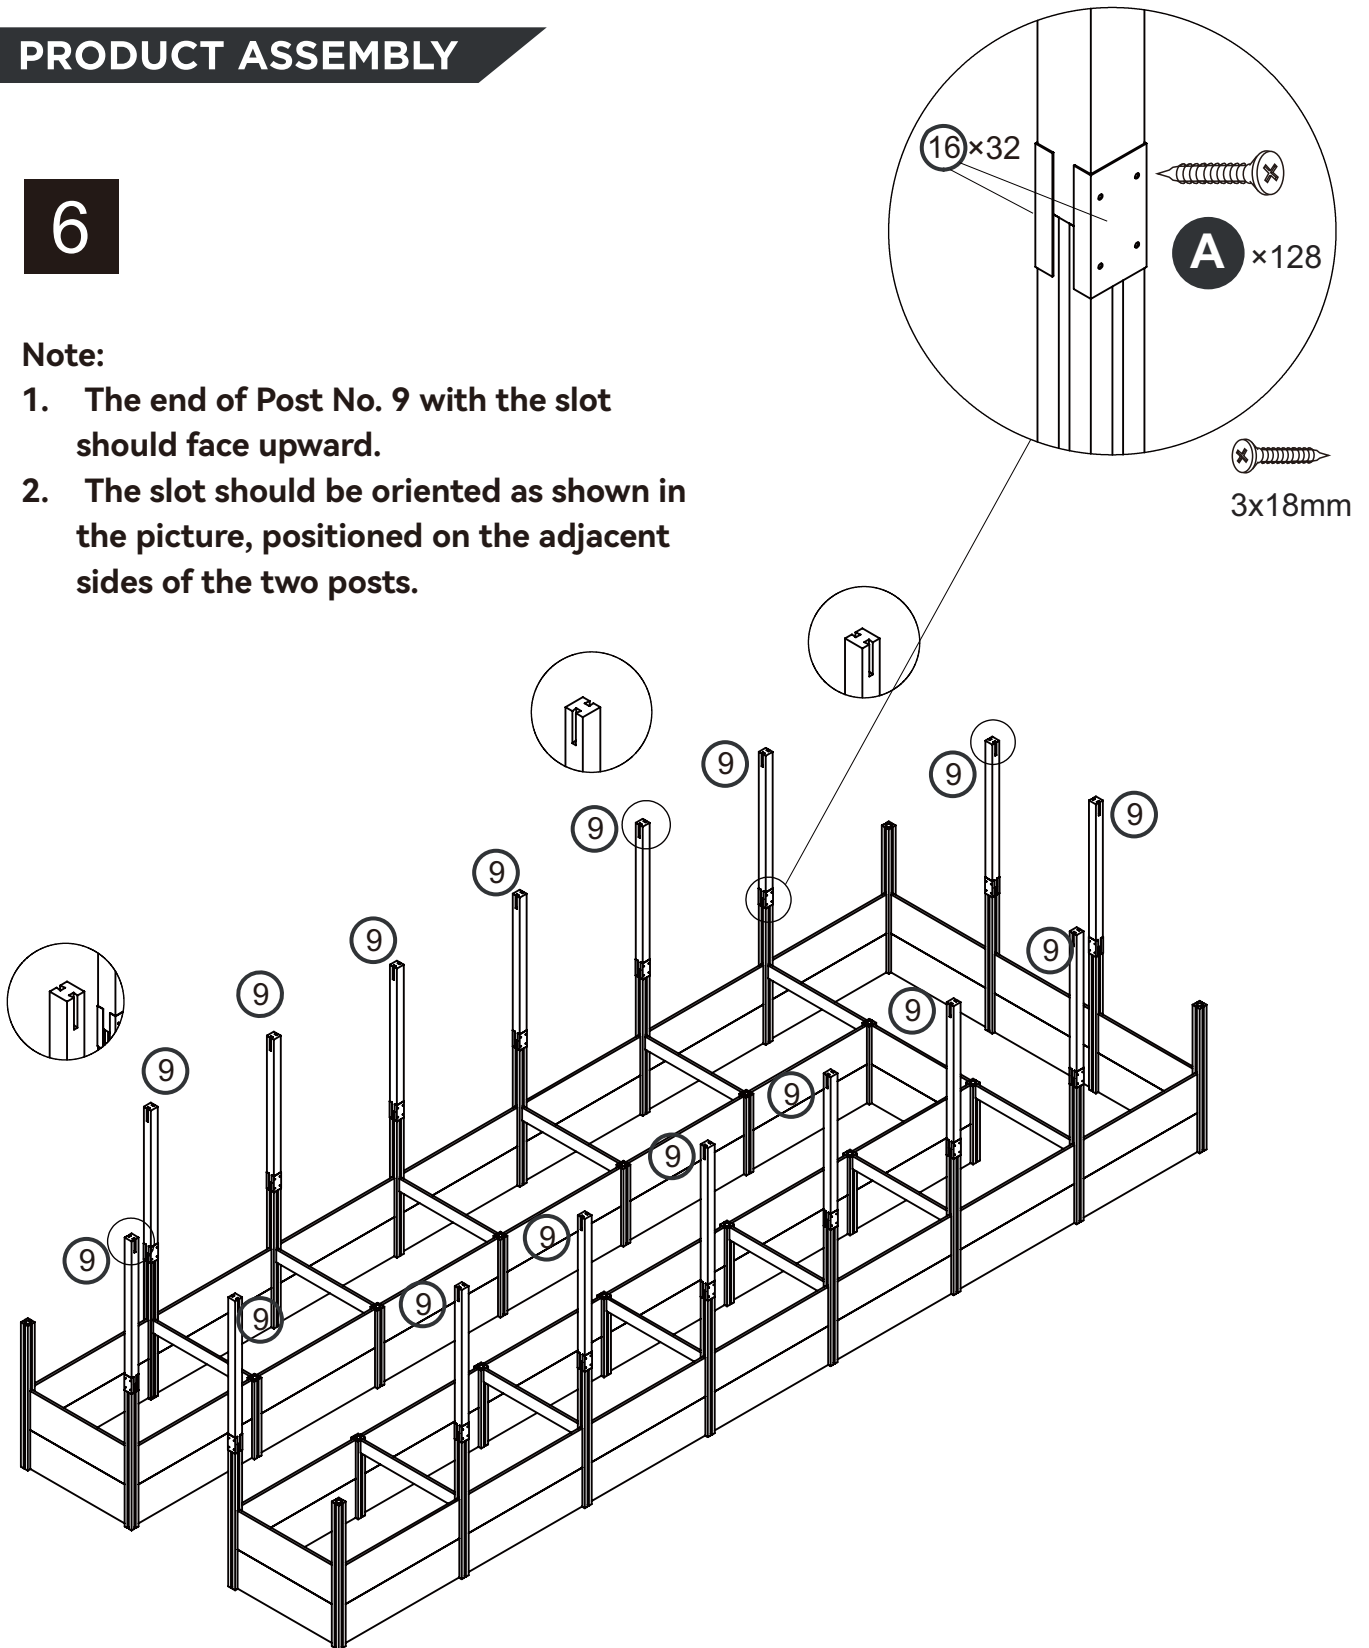


1. Install part 9 on top of each vertical post in the frame, ensuring that the slotted end of part 9 faces upward for the next installation step.
2. The slot orientation of part 9 should match the positioning shown in the diagram, ensuring that the slots are located on the adjacent sides of the two posts.
3. Use part 16 to connect part 9 to the existing vertical posts and secure them with A screws.

PRODUCT ASSEMBLY

7



Note:

1. The end of Post No.10 with the slot should face upward.
2. The two slotted sides should face inward, aligning with the slots of the adjacent posts.

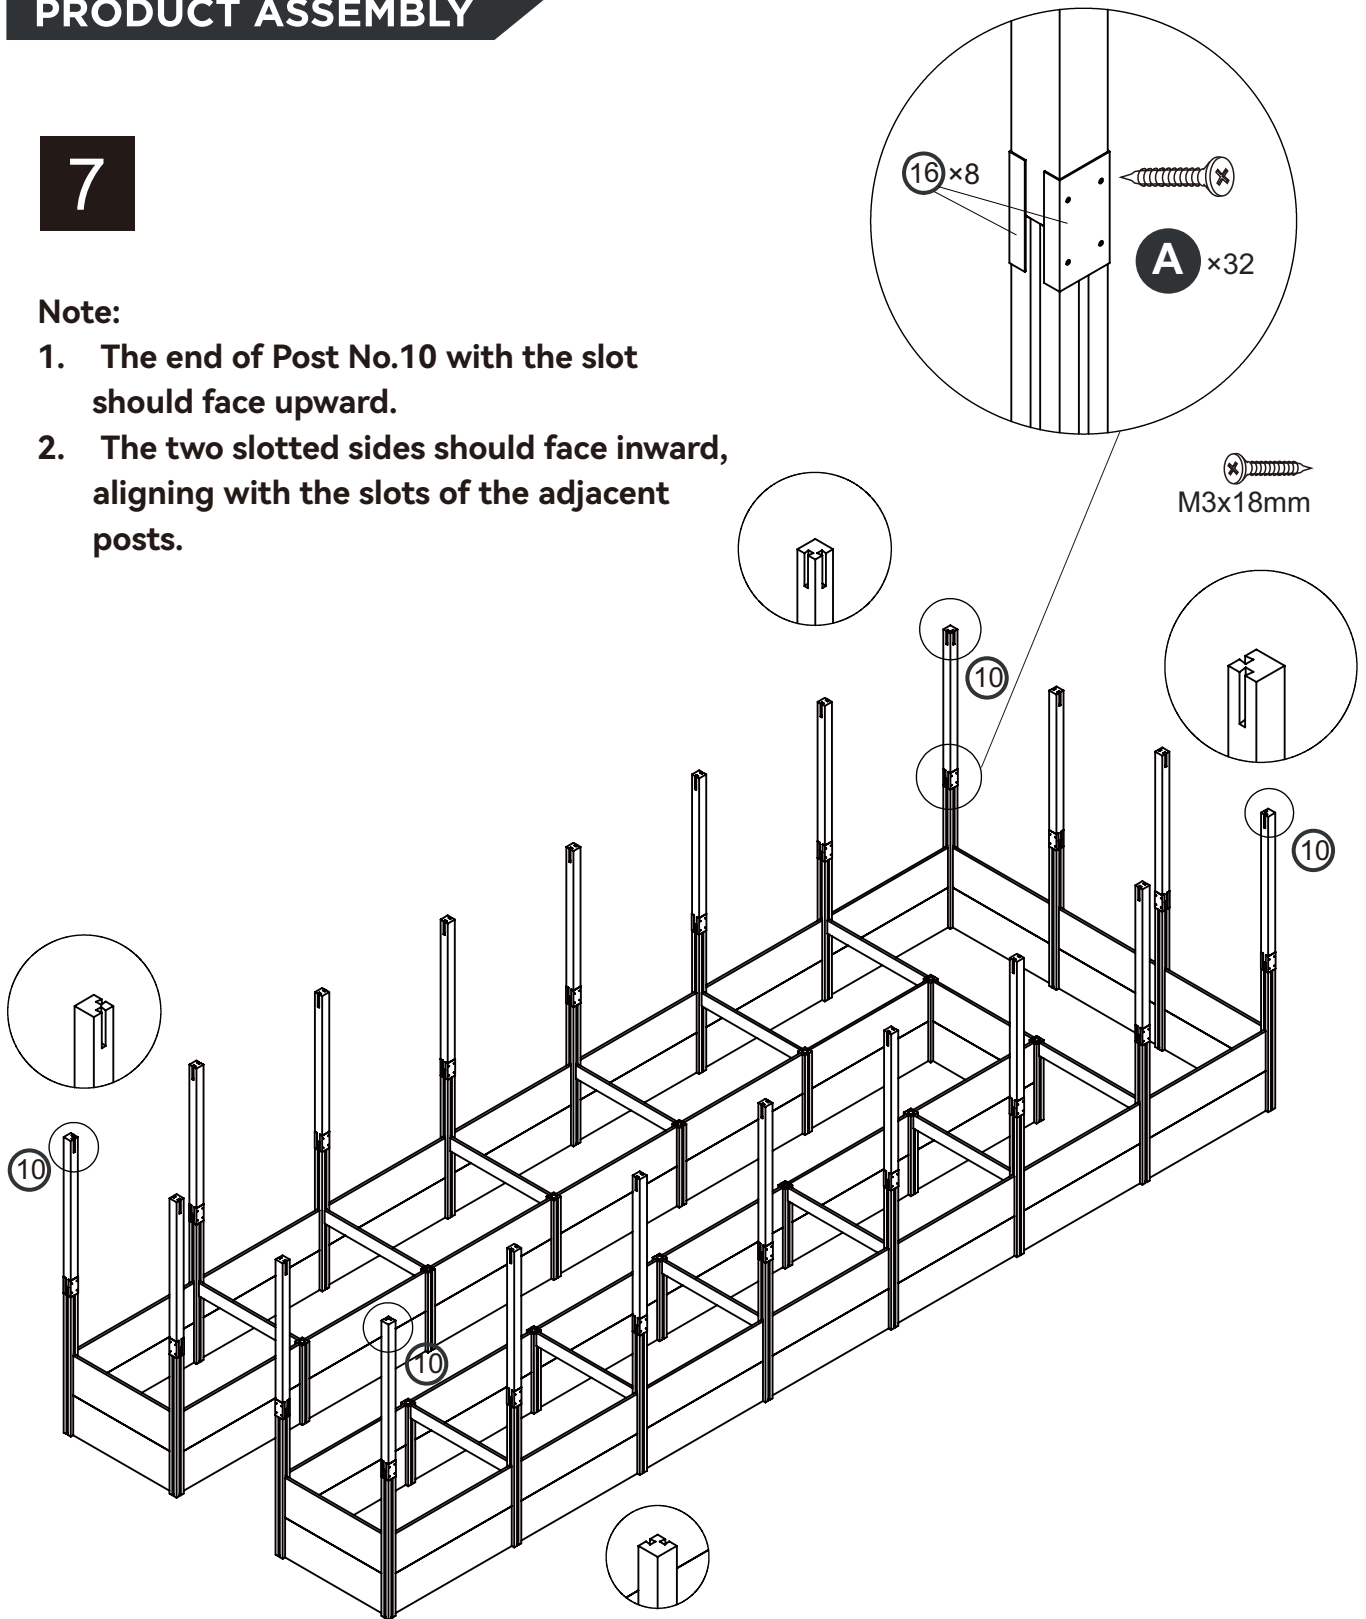


1. Install part 10 on top of part 9, ensuring that the slotted end of part 10 faces upward to prepare for the next installation step.
2. The two slotted sides of part 10 should face inward and align with the slots of the adjacent parts to ensure proper structural connection.
3. Use part 16 to connect part 10 to part 9 and secure them with A screws.

8

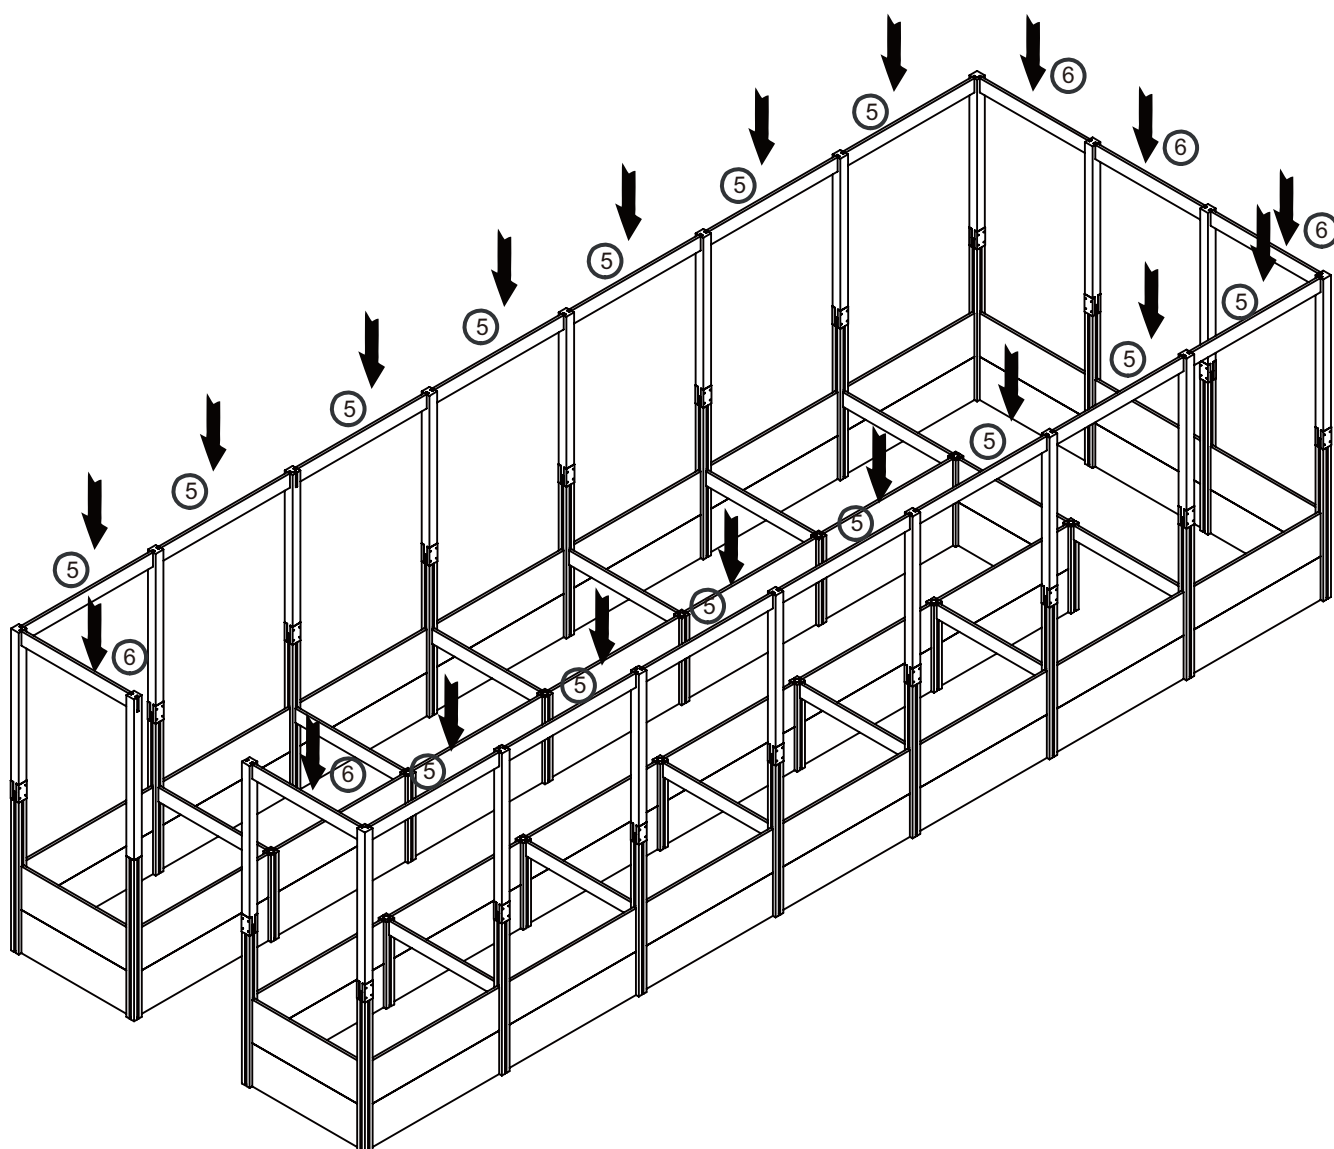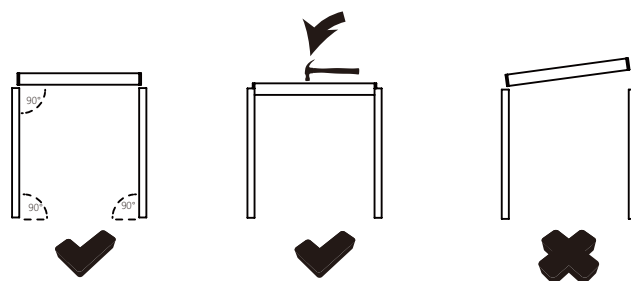


1. Insert part 5 into the slots of part 10 and the adjacent vertical posts, ensuring that all part 5 components are installed in the correct direction as shown in the diagram and fully embedded in the post slots.
2. Install part 6 at the top of the frame by inserting it into the corresponding slots of the vertical posts.
3. Refer to the correct installation diagram at the top to ensure that part 5 and part 6 are fully attached to the vertical posts and positioned at the correct angle.

9

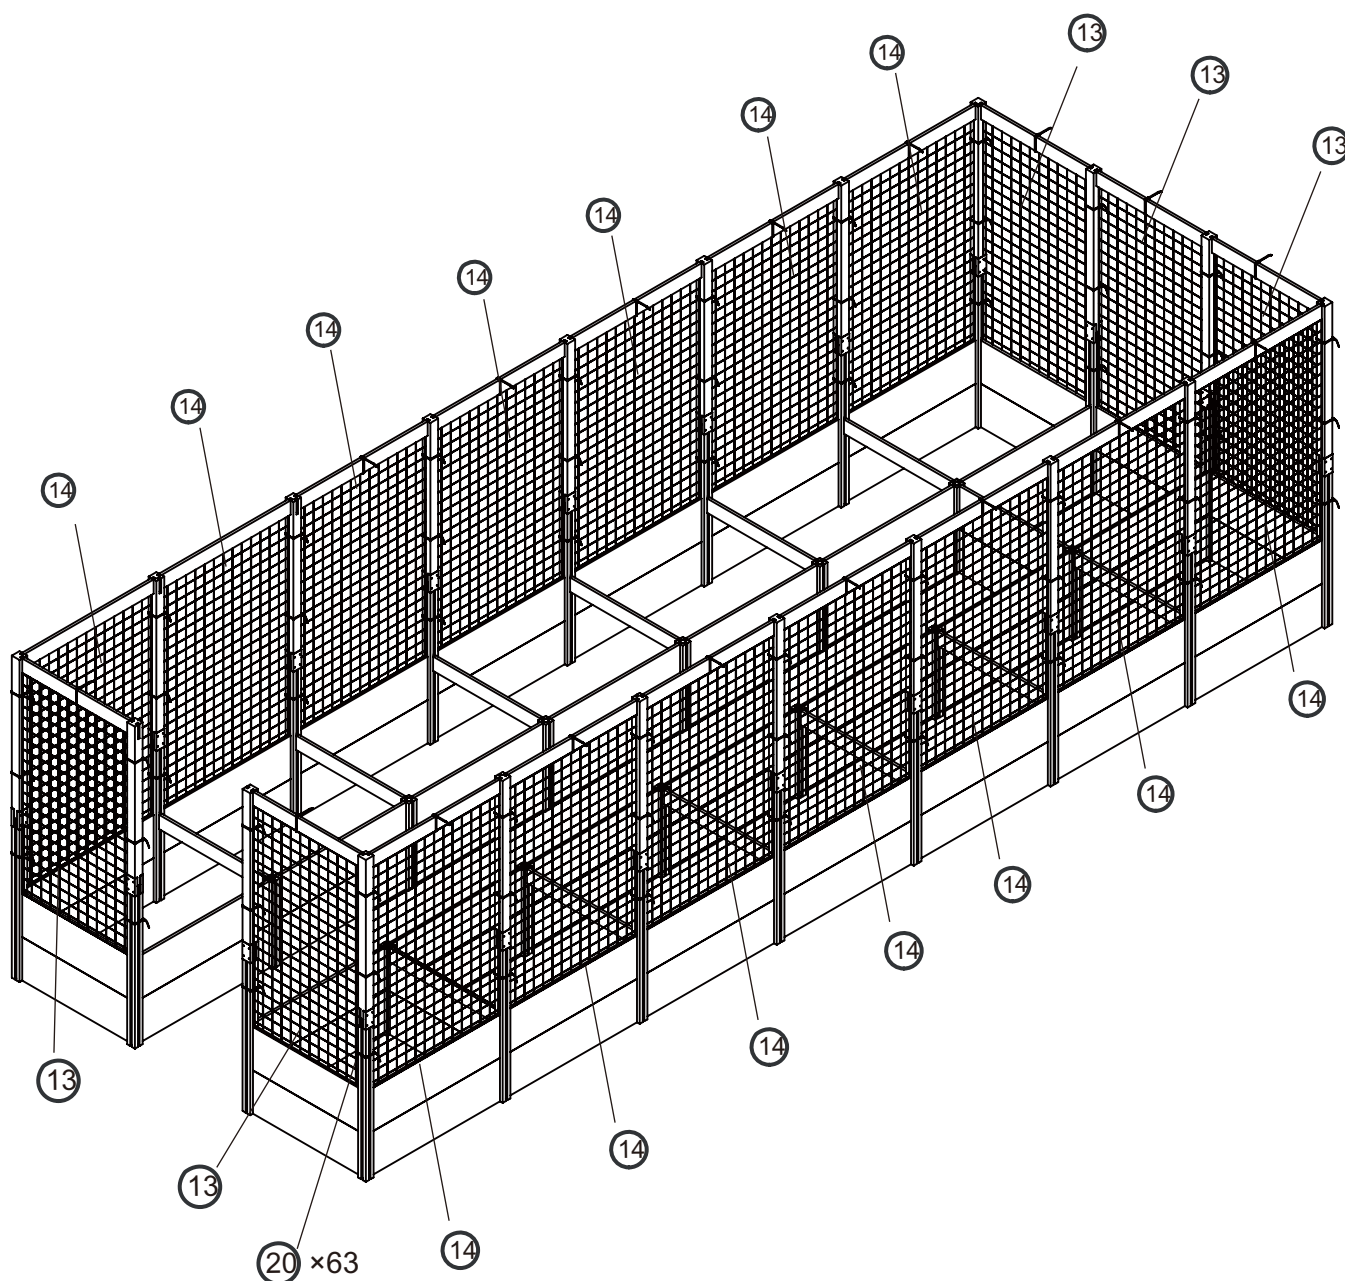

1. Install part 13 at both ends of the frame, ensuring that it is properly aligned and securely fixed between the vertical posts.
2. Install part 14 on the sides of the frame, making sure it fits tightly against the adjacent vertical posts. Ensure the mesh panel is oriented correctly and that all edges align with the frame structure. Secure the installation using part 20.


10

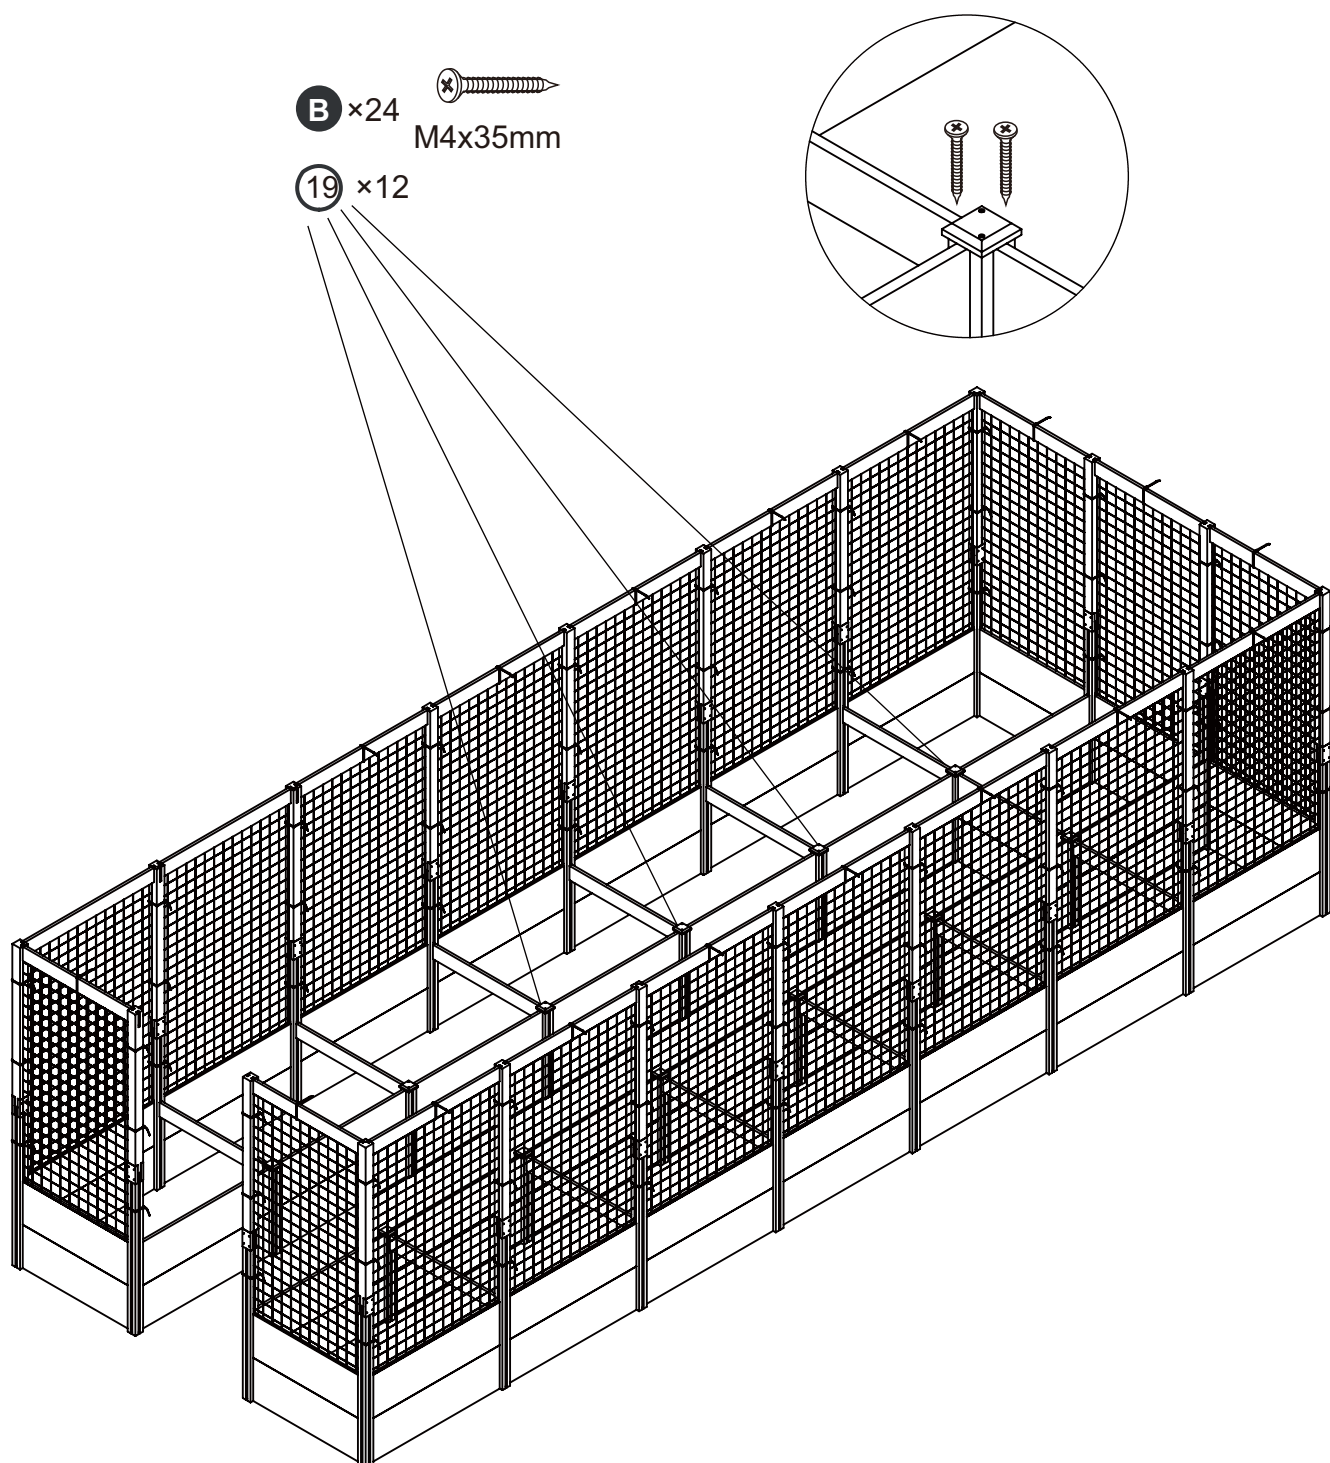

Install part 19 at the intersection points on the top of the frame, ensuring that it is properly aligned and securely attached to the vertical posts. Secure it using B screws.

PRODUCT ASSEMBLY


11

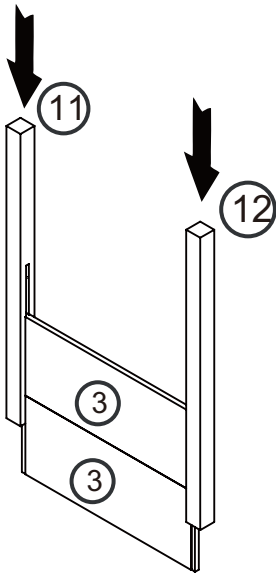

Place part 11 in a vertical position, then insert part 3 between the two vertical posts, ensuring it is properly aligned and fully embedded into the slots.

12


Secure part 3 using B screws, with a total of 8 screws, ensuring a firm connection. Check the door frame structure to make sure there are no loose parts.

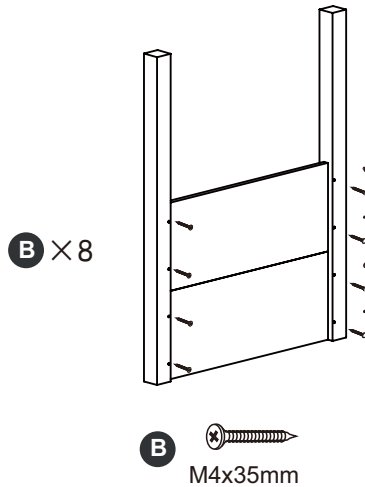

B  M4x35mm

Note:
Pay attention to the slot orientation

13

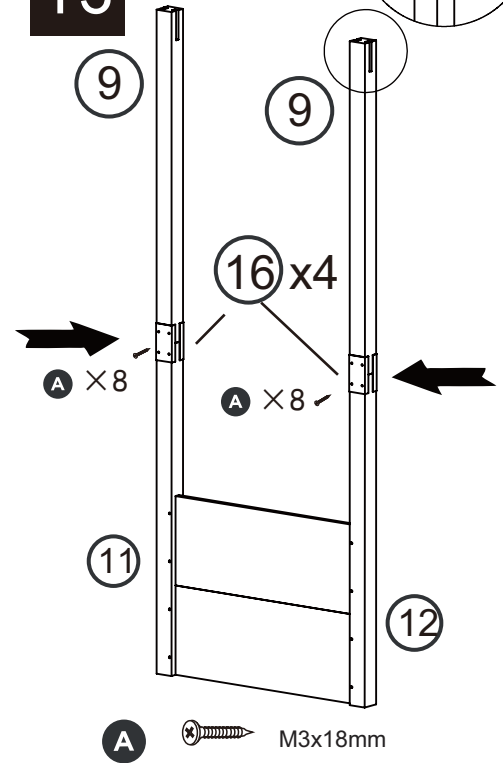


Place part 9 in a vertical position and connect it at the bottom to the already assembled parts 11 and 12. Secure it using part 16 connectors, with a total of 4 connectors.


Pay attention to the slot orientation and ensure proper alignment for the next installation steps.

14

Insert part 4 into the top of the door frame, ensuring it is properly aligned and fully embedded into the slots.

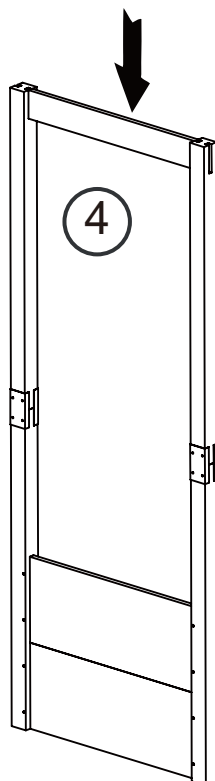

15

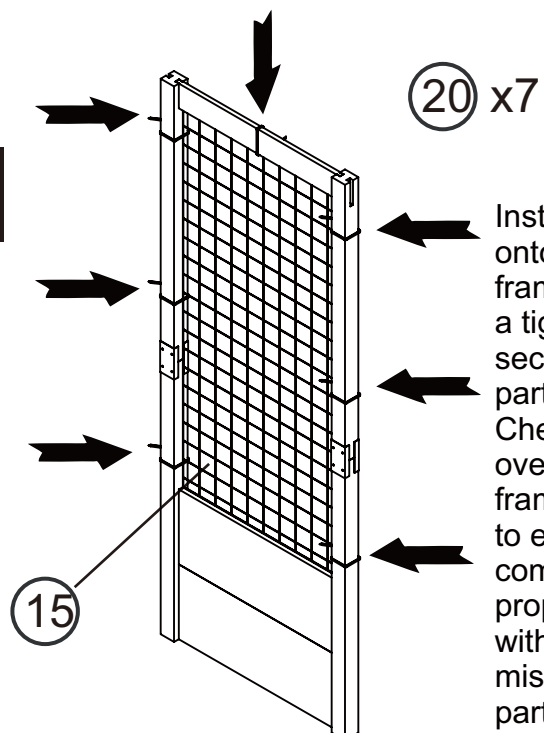

Install part 15 onto the door frame, ensuring a tight fit, and secure it using part 20. Check the overall door frame structure to ensure all components are properly fitted, with no loose or misaligned parts.

PRODUCT ASSEMBLY

16

Note:



Distinguish the front and back of the hinge before installation. The hinge should be installed on the inner side of the column structure.

C ×12




M3x20mm


17 ×2

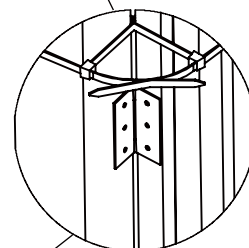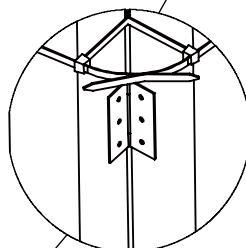

Install part 17 onto the inner structure of the vertical posts, ensuring that the slots of part 17 align with the posts. Secure it using C screws.

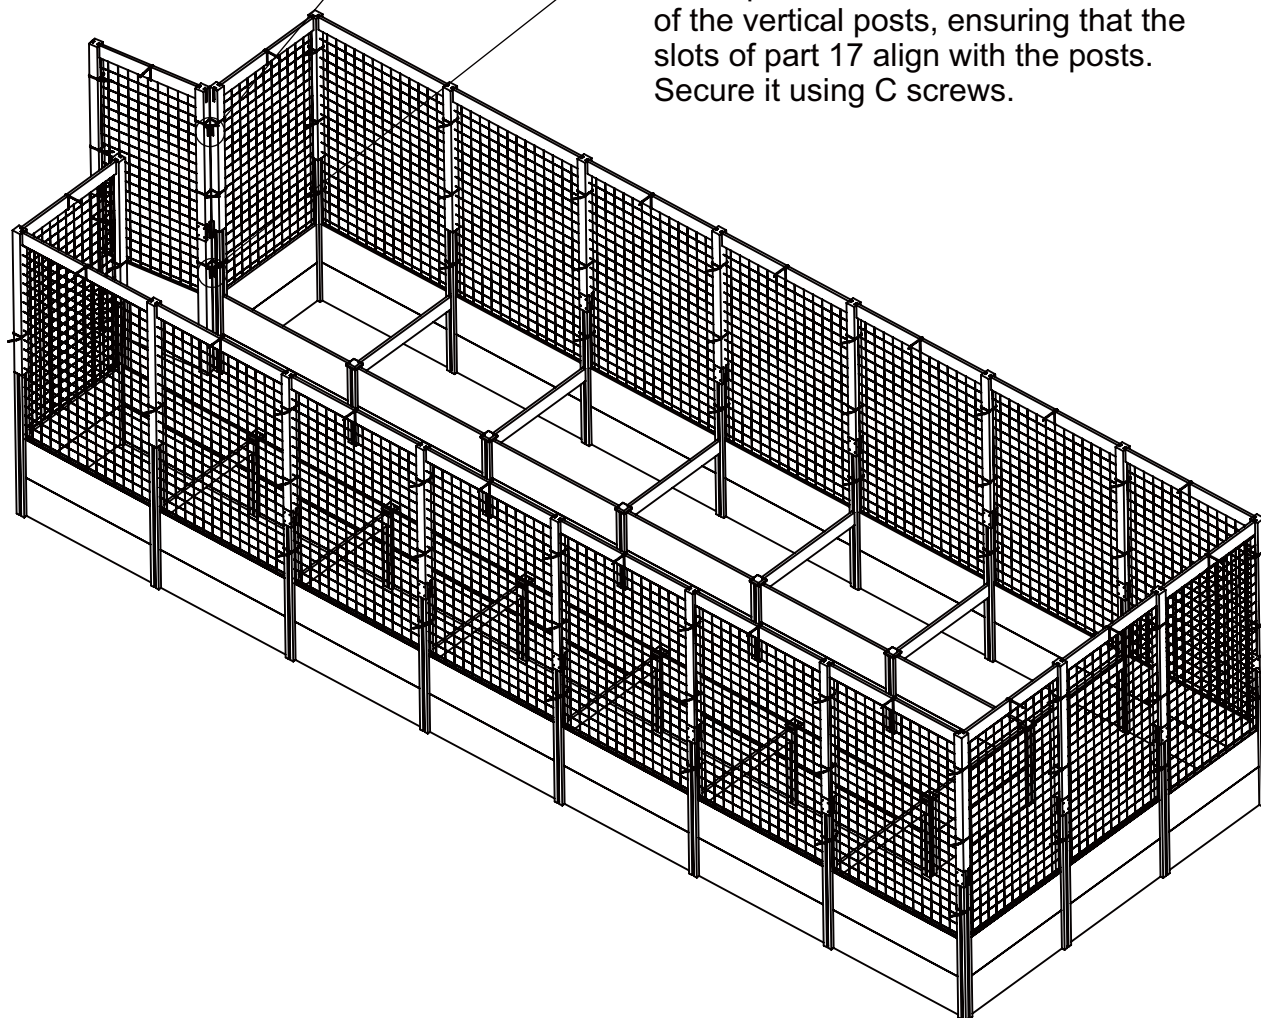

17

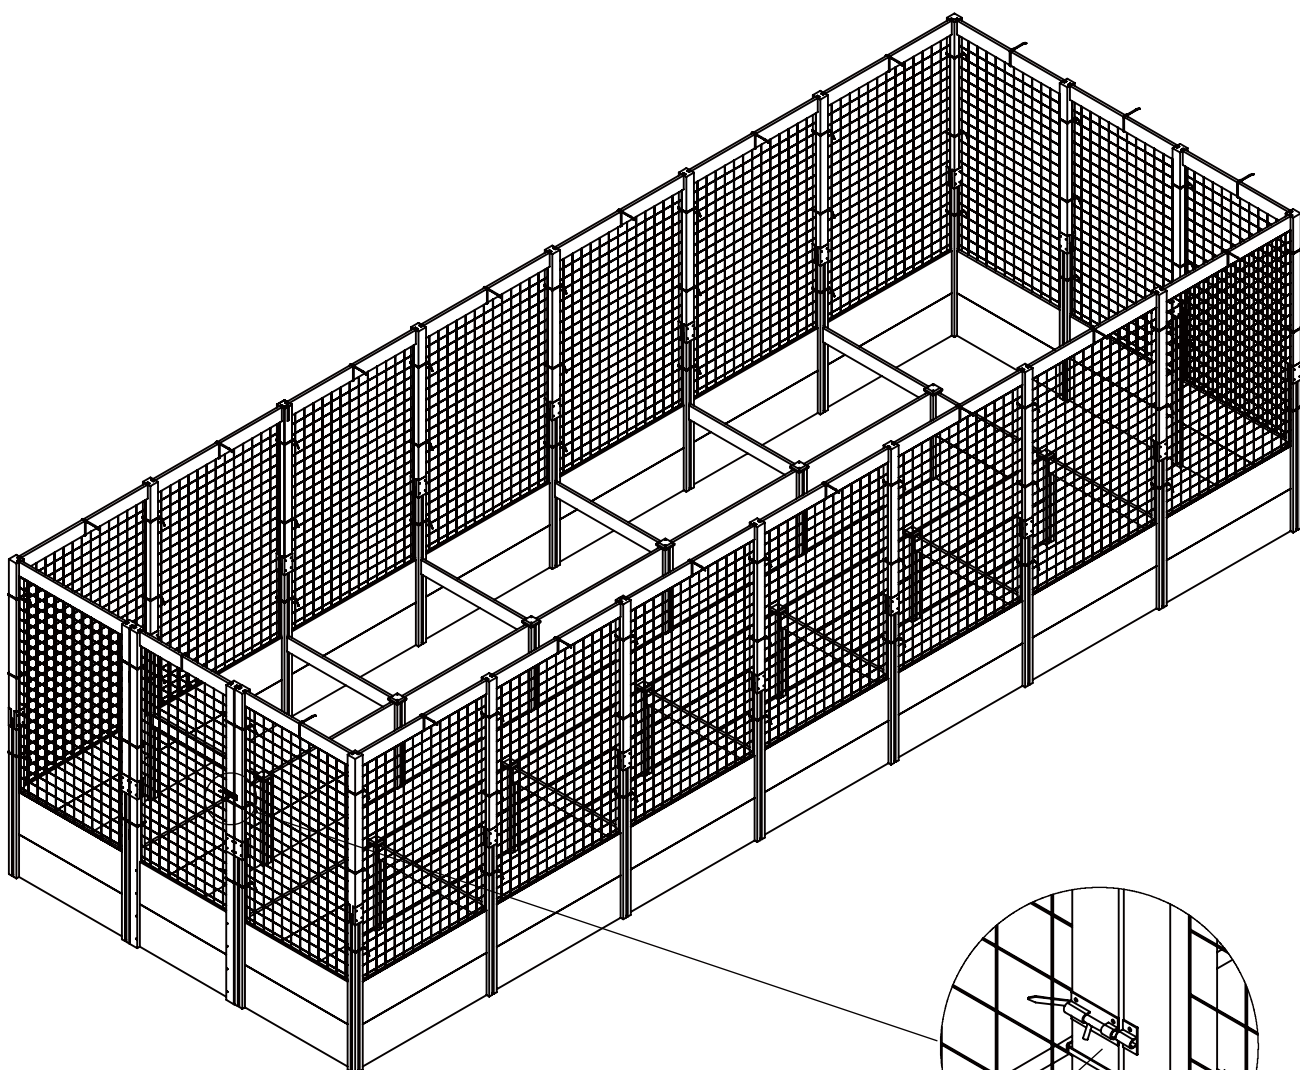

Install part 18 at the appropriate location on the door frame and secure it using C screws.


M3x20mm

 ×6

18

Wooden Raised Garden Bed

SKU

BF21N8-1A5A1

BF21N8-1A5A3

BF21N8-1A5A3

V1.0